

ALPHABETICAL INDEX

SECTION

IDX

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL

A

AAC/V - Wiring diagram.....	EC-420
ABS - Wiring diagram	BR-37
ABS sensor rotor	AX-6, 20
Absolute pressure sensor	EC-156
A/C air flow (auto A/C)	HA-27
A/C air flow (manual A/C)	HA-146
A/C component layout (auto A/C)	HA-21
A/C component layout (manual A/C)	HA-144
A/C compressor clutch removal and installation (auto A/C).....	HA-116
A/C compressor clutch removal and installation (manual A/C).....	HA-197
A/C compressor description (manual A/C).....	HA-137
A/C compressor precaution (auto A/C)	HA-7
A/C compressor precaution (manual A/C).....	HA-130
A/C compressor special service tool (auto A/C).....	HA-10
A/C compressor special service tool (manual A/C).....	HA-133
A/C control linkage adjustment (manual A/C)	HA-164, 181, 183
A/C control operation (auto A/C)	HA-25
A/C control operation (manual A/C)	HA-145
A/C diagnostic work flow (auto A/C)	HA-48
A/C diagnostic work flow (manual A/C).....	HA-155
A/C HFC134a (R134a) system precau- tion (auto A/C).....	HA-3
A/C HFC134a (R134a) system precau- tion (manual A/C).....	HA-126
A/C HFC134a (R134a) system service procedure (auto A/C).....	HA-111
A/C HFC134a (R134a) system service procedure (manual A/C)	HA-192
A/C HFC134a (R134a) system service tools (auto A/C)	HA-11
A/C HFC134a (R134a) system service tools (manual A/C)	HA-134
A/C HFC134a system service equip- ment precaution (auto A/C)	HA-7
A/C HFC134a system service equip- ment precaution (manual A/C).....	HA-130
A/C lubricant (R134a) (auto A/C)	HA-113
A/C lubricant (R134a) (manual A/C)	HA-194
A/C operational check (auto A/C)	HA-49
A/C operational check (manual A/C).....	HA-156
A/C performance chart (auto A/C)	HA-88
A/C performance chart (manual A/C).....	HA-175
A/C performance test diagnoses (auto A/C).....	HA-86
A/C performance test diagnoses (manual A/C).....	HA-173
A/C relay (auto A/C)	HA-84
A/C relay (manual A/C)	HA-190
A/C self-diagnoses (auto A/C).....	HA-38
A/C service data specification (auto A/C).....	HA-125
A/C service data specification (manual A/C).....	HA-206
A/C switch (manual A/C)	HA-190
A/C system description (auto A/C)	HA-25
A/C trouble diagnoses (auto A/C)	HA-29
A/C trouble diagnoses (manual A/C)	HA-148
A/C, A - Wiring diagram	HA-32
A/C, M - Wiring diagram	HA-152
Accelerator control system	FE-3
Accelerator wire adjustment	FE-3
Actuator lever (Transfer).....	TF-10
Air bag	RS-11
Air bag disposal.....	RS-24
Air bag precautions	GI-3
Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake system	BR-8
Air cleaner filter replacement.....	MA-19
Air conditioner cut control	EC-29
Air flow meter - See Mass air flow sensor	EC-146
Air mix door control linkage adjustment (auto A/C).....	HA-62
Air mix. door motor (auto A/C)	HA-60, 110
Air spoiler, rear.....	BT-31
Alternator	SC-14
Ambient sensor (auto A/C).....	HA-97
Angular tightening application.....	EM-3
Antenna - See Power antenna	EL-159
Anti-lock brake system - Wiring diagram	BR-37
AP/SEN - Wiring diagram	EC-159
ASCD (automatic speed control device)	EL-170
ASCD - Wiring diagram	EL-175
A/T - Wiring diagram - AT - FTS.....	AT-107
A/T - Wiring diagram - AT - MAIN.....	AT-96
A/T - Wiring diagram - AT - PNP/SW.....	AT-101
A/T - Wiring diagram - AT - VSS A/T	AT-112
A/T control	EC-431
A/T diagnosis communication line.....	EC-540
A/T fluid temperature sensor.....	AT-109
A/T self-diagnoses.....	AT-46
A/T shift lock system	AT-255
A/T shift lock system - Wiring diagram	AT-256
A/T trouble diagnoses	AT-53
A/T Wiring diagram - AT - ENG SS.....	AT-117
A/T Wiring diagram AT - 1ST	AT-123
A/T Wiring diagram AT - 2ND	AT-129
A/T Wiring diagram AT - 3RD	AT-135
A/T Wiring diagram AT - 4TH.....	AT-142
A/T Wiring diagram AT - BA/FTS	AT-195
A/T Wiring diagram AT - LPSV	AT-164
A/T Wiring diagram AT - NONDTC	AT-207
A/T Wiring diagram AT - OVRCSV	AT-190
A/T Wiring diagram AT - SSV/A	AT-171
A/T Wiring diagram AT - SSV/B	AT-176
A/T Wiring diagram AT - TCCSIG	AT-156
A/T Wiring diagram AT - TCV	AT-150
A/T Wiring diagram AT - TPS.....	AT-182
A/T Wiring diagram AT - VSSMTR.....	AT-201

ALPHABETICAL INDEX

AT/C - Wiring diagram.....EC-433
 ATDIAG - Wiring diagram.....EC-542
 AudioEL-149
 AUDIO - Wiring diagram.....EL-150, 153
 Audio and A/C control removal and
 installation - See Instrument panelBT-20
 Auto air conditioner - Wiring diagramHA-32
 Automatic amplifierHA-36
 Automatic amplifier (auto A/C)HA-52
 Automatic speed control system - See
 ASCDEL-170
 Automatic transmission fluid
 replacement.....MA-24
 Automatic transmission numberGI-43
 Auxiliary air control (AAC) valveEC-416
 Axle housing (rear)AX-20

B

Back doorBT-15
 Back door opener - See Back doorBT-15
 Back door trim.....BT-30
 Back-up lampEL-55
 Back-up lamp switch (M/T)MT-6
 BACK/L - Wiring diagram.....EL-55
 Ball joint (front)SU-14
 Basic inspectionEC-99
 BatterySC-3
 Baulk ring (M/T).....MT-13
 Block heaterEM-46
 Blower motor (auto A/C).....HA-71
 Blower motor (manual A/C).....HA-166
 Blower resistor (manual A/C)HA-166
 Body alignmentBT-55
 BPT valveEC-358, 362
 Brake boosterBR-19
 Brake control valve (Proportioning
 valve).....BR-11
 Brake fluid changeBR-7
 Brake fluid levelMA-28
 Brake fluid level and line checkBR-7
 Brake hydraulic lineBR-9
 Brake inspectionMA-28
 Brake lines and cables inspectionMA-28
 Brake lining wear temporary checkingMA-29
 Brake master cylinderBR-16
 Brake pedalBR-14
 Bulb specificationsEL-322
 Bumper, frontBT-12
 Bumper, rearBT-15
 BYPS/V - Wiring diagramEC-527, 535

C

Camshaft inspectionEM-31
 Camshaft position sensor (CMPS).....EC-339
 Canister-See EVAP canisterEC-30
 Center bearing assembly (propeller

shaft)PD-11
 Center bearing disassembly (propeller
 shaft)PD-9
 Center case (Transfer)TF-11
 CHARGE - Wiring diagramSC-12
 Charging system.....SC-11
 Chassis and body maintenanceMA-23
 CHIME - Wiring diagramEL-112
 CIGAR - Wiring diagramEL-139
 Cigarette lighterEL-139
 Circuit breakerEL-16
 CKPS - Wiring diagram.....EC-335, 463
 Closed loop control (Left bank)EC-452
 Closed loop control (Right bank)EC-452
 Closed throttle position switchEC-424
 Clutch coverCL-13
 Clutch damperCL-10
 Clutch discCL-13
 Clutch fluid level.....MA-23
 Clutch master cylinderCL-8
 Clutch operating cylinderCL-9
 Clutch pedalCL-5
 Clutch release bearingCL-11
 Clutch withdrawal leverCL-11
 CMPS - Wiring diagramEC-342
 Coil spring (front).....SU-9
 Coil spring (rear)SU-21
 Collision diagnosis.....RS-64
 Combination lamp, front, removal and
 installationBT-12
 Combination lamp, rear, removal and
 installationBT-31
 Combination meter.....EL-81
 Combination meter removal and instal-
 lation - See Instrument panel.....BT-20
 Combination switchEL-22
 COMPAS - Wiring diagramEL-97
 CompassEL-96
 Component Location (auto A/C).....HA-29
 Component Location (manual A/C).....HA-148
 Compression pressureEM-13
 Compressor clutch removal and instal-
 lation (auto A/C)HA-116
 Compressor clutch removal and instal-
 lation (manual A/C)HA-197
 Compressor description (manual A/C)HA-137
 Compressor precaution (auto A/C)HA-7
 Compressor precaution (manual A/C).....HA-130
 Compressor special service tool (auto
 A/C).....HA-10
 Compressor special service tool
 (manual A/C).....HA-133
 Connecting rod.....EM-48
 Connecting rod bearing clearance.....EM-53
 Connecting rod bushing clearanceEM-54
 Connector inspectionGI-20
 Console box - See Instrument panelBT-20
 CONSULT for ABSBR-43
 CONSULT for engineEC-80
 CONSULT-II general information.....GI-37
 Control valve (A/T)AT-290

ALPHABETICAL INDEX

Converter housing installation.....	AT-267
Coolant mixture ratio.....	MA-14
Coolant replacement.....	MA-16
Cooling circuit (engine).....	LC-8
Counter gear (M/T).....	MT-13
Counter gear (Transfer).....	TF-12
Coupling sleeve (M/T).....	MT-13
Crank angle sensor built into distributor	
- See Camshaft position sensor.....	EC-339
“Crankcase emission control system -	
See positive crankcase ventilation”.....	EC-36
Crankshaft.....	EM-51
Crankshaft position sensor (OBD).....	EC-333
Crankshaft position sensor (OBD) cog	
chipping.....	EC-461
Cruise control - See ASCD.....	EL-170
Cylinder block.....	EM-45
Cylinder block boring.....	EM-50
Cylinder head.....	EM-27
Cylinder head bolt tightening.....	EM-39

D

Data link connector for Consult.....	EC-80
Daytime light system.....	EL-36
Daytime running light - See Daytime	
light system.....	EL-36
DEF - Wiring diagram.....	EL-142
Detonation sensor - See Knock sensor.....	EC-327
Diagnostic trouble code (DTC) for OBD	
system.....	EC-8, 55
Diagnostic trouble code (DTC) inspec-	
tion priority chart.....	EC-116
Differential carrier assembly.....	PD-31, 59
Differential carrier disassembly.....	PD-46
Differential gear oil replacement.....	MA-27
Dimensions.....	GI-43
Distributor.....	EC-28
Distributor ignition (DI) system.....	EC-28
D/LOCK - Wiring diagram.....	EL-205
Dome light - See Interior lamp.....	EL-74
Door glass.....	BT-18
Door lock.....	BT-18
Door mirror.....	BT-54
Door trim.....	BT-26
Door, front.....	BT-18
Door, rear.....	BT-19
Drive belt inspection.....	MA-15
Drive chain (Transfer).....	TF-12
Drive pinion diff. inspection.....	PD-24, 49
Drive pinion height.....	PD-26, 55
Drive plate runout.....	EM-54
Drive shaft (front).....	AX-12
Dropping resistor (A/T).....	AT-168
DTC work support.....	EC-89
DTRL - Wiring diagram.....	EL-40
Dual pressure switch (auto A/C).....	HA-84
Dual pressure switch (manual A/C).....	HA-190

E

ECM input/output signal.....	EC-127
ECTS - Wiring diagram.....	EC-177, 196
EGR control (EGRC) - BPT valve.....	EC-358
EGR control (EGRC) - solenoid valve.....	EC-467
EGR control valve.....	EC-347, 357, 478, 485
EGR temperature sensor.....	EC-472
EGR/TS - Wiring diagram.....	EC-475
EGRC/V - Wiring diagram.....	EC-469
EGRC1 - Wiring diagram.....	EC-351, 481
Electric sun roof.....	EL-163
Electrical diagnoses.....	GI-23
Electrical ignition system.....	EC-28
Electrical unit.....	Foldout
Electrical units location.....	EL-302
Engine compartment.....	BT-56
Engine control circuit diagram.....	EC-22
Engine control component parts	
location.....	EC-20
Engine control module (ECM).....	EC-436
Engine control system diagram and	
chart.....	EC-23
Engine coolant temperature sensor	
(ECTS).....	EC-175, 194
Engine fail-safe system.....	EC-117
Engine oil filter replacement.....	MA-20
Engine oil precautions.....	GI-7
Engine oil replacement.....	MA-19
Engine outer component parts.....	EM-10
Engine removal.....	EM-42
Engine room - See Engine	
compartment.....	BT-56
Engine serial number.....	GI-43
EVAP canister.....	EC-31
EVAP canister purge volume control	
solenoid valve.....	EC-30, 377, 496
EVAP canister vent control	
valve.....	EC-384, 504, 518
EVAP control system (small leak)	
diagnosis.....	EC-367, 401, 486
EVAP control system pressure sensor.....	EC-391
EVAP control system purge flow moni-	
toring diagnosis.....	EC-510
EVAP vapor lines inspection.....	MA-22
Evaporative emission (EVAP) system.....	EC-30
Exhaust gas recirculation (EGR) valve.....	EC-347,
	478
Exhaust system.....	FE-8
Exhaust system inspection.....	MA-23
Exterior.....	BT-31

F

Fan control amp. (auto A/C).....	HA-73
Fan switch (manual A/C).....	HA-166
Fast idle cam (FIC) inspection and	
adjustment.....	EC-39

ALPHABETICAL INDEX

F/FOG - Wiring diagramEL-58
 FICD - Wiring diagramEC-582
 Final drive disassemblyPD-45
 Final drive pre-inspectionPD-45
 Final drive removal and installationPD-45
 Finisher, interior - See TrimBT-24
 Fluid temperature sensor (A/T)AT-109
 Fluids.....MA-13
 Flywheel (clutch).....CL-14
 Flywheel runout.....EM-54
 FO2H-L - Wiring diagramEC-247
 FO2H-R - Wiring diagramEC-246
 Fog lamp, front.....EL-56
 Fog lamp, front, removal and
 installationBT-12
 Fork rod (M/T)MT-15
 Forward clutch.....AT-309
 F/PUMP - Wiring diagramEC-570
 Freeze frame data.....EC-56
 FRO2LH - Wiring diagramEC-204, 228, 239
 FRO2RH - Wiring diagram.....EC-203, 227, 238
 Front axle.....AX-2
 Front bumperBT-12
 Front case (Transfer)TF-11
 Front combination lamp removal and
 installationBT-12
 Front disc brakeBR-22
 Front doorBT-18
 Front drive shaft (Transfer).....TF-12
 Front final drive disassembly (4WD).....PD-19
 Front final drive pre-inspection (4WD).....PD-19
 Front final drive removal and installa-
 tion (4WD).....PD-19
 Front fog lamp.....EL-56
 Front fog lamp removal and installationBT-12
 Front heated oxygen sensor (HO2S)
 (Left bank).....EC-200, 209, 216, 224, 235
 Front heated oxygen sensor (HO2S)
 (Right bank)EC-200, 209, 216, 224, 235
 Front heated oxygen sensor heater
 (Left bank).....EC-244
 Front heated oxygen sensor heater
 (Right bank)EC-244
 Front oxygen sensor (O2S) monitorEC-71
 Front seatBT-38
 Front seat beltRS-5
 Front suspension.....SU-2
 Front washerEL-120
 Front wiperEL-120
 Fuel cut control (at no load & high
 engine speed).....EC-30
 Fuel filler lid.....BT-15
 Fuel filter replacementMA-18
 Fuel gaugeEL-81
 Fuel injection system (Left bank).....EC-297, 306
 Fuel injection system (Right bank)EC-297, 306
 Fuel line inspectionMA-18
 Fuel precautionsGI-8
 Fuel pressure check.....EC-37
 Fuel pressure regulatorEC-38
 Fuel pressure releaseEC-37

Fuel pumpEC-568
 Fuel systemFE-4
 Fuel tank temperature sensorEC-314
 Fuel tank vacuum relief valveEC-31
 FUELLH - Wiring diagram.....EC-300, 309
 FUEL RH - Wiring diagramEC-299, 308
 FuseEL-16
 Fuse blockFoldout
 Fusible linkEL-16

G

Garage jack and safety standGI-46
 Gauges.....EL-81
 Gear components (M/T)MT-13
 Generator - See AlternatorSC-14
 Generic scan tool (GST)EC-93
 GlassBT-18
 GreaseMA-13
 Ground distribution.....EL-17

H

Harness connectorEL-5
 Harness connector inspectionGI-20
 Harness layoutEL-306
 Hazard warning lampEL-61
 HeadlampEL-25
 Headlining - See Roof trimBT-29
 Heated seat.....BT-41, EL-169
 Height (Dimensions).....GI-43
 HFC134a (R134a) system precaution
 (auto A/C).....HA-3
 HFC134a (R134a) system precaution
 (manual A/C).....HA-126
 HFC134a (R134a) system service pro-
 cedure (auto A/C).....HA-111
 HFC134a (R134a) system service pro-
 cedure (manual A/C).....HA-192
 HFC134a (R134a) system service tools
 (auto A/C).....HA-11
 HFC134a (R134a) system service tools
 (manual A/C).....HA-134
 HFC134a system service equipment
 precaution (auto A/C).....HA-7
 HFC134a system service equipment
 precaution (manual A/C).....HA-130
 High clutch.....AT-307
 H/LAMP - Wiring diagramEL-29
 Hood.....BT-12
 HornEL-138
 HORN - Wiring diagram.....EL-138
 How to erase DTC for OBD system.....EC-68
 HSEAT - Wiring diagram.....EL-169
 Hydraulic lash adjuster inspectionEM-36

ALPHABETICAL INDEX

I

IACV-AAC valve	EC-416
IACV-FICD solenoid valve	EC-581
IATS - Wiring diagram	EC-171
Identification plate	GI-42
Idle air control valve (IACV)	EC-416
Idle mixture ratio	EC-41
Idle speed	EC-41
IGN/SG - Wiring diagram	EC-456
Ignition timing	EC-41
Ignition wire inspection	EC-326
ILL - Wiring diagram	EL-69
Illumination	EL-66
In vehicle sensor (auto A/C)	HA-101
INJECT - Wiring diagram	EC-555
Injector	EC-561
Injector removal and installation	EC-38
Instrument panel	BT-20
INT/L - Wiring diagram	EL-77
Intake air temperature sensor	EC-168
Intake door control linkage adjustment (auto A/C)	HA-70
Intake door control linkage adjustment (manual A/C)	HA-164
Intake door motor (auto A/C)	HA-64
Intake door motor (manual A/C)	HA-159
Intake sensor (auto A/C)	HA-108
Integrated homelink transmitter	EL-279
Interior	BT-24
Interior lamp	EL-74
Interior lamp on-off control	EL-75

J

Jacking points	GI-45
Journal bearing assembly (propeller shaft)	PD-11
Journal bearing disassembly (propeller shaft)	PD-10
Junction box (J/B)	Foldout

K

Keyless entry system - See Multi-re- mote control system	EL-222
Knock sensor (KS)	EC-327
Knuckle spindle	AX-10
KS - Wiring diagram	EC-329

L

Length (Dimensions)	GI-43
License lamp	EL-47
Lifting points	GI-47

Limited slip diff. adjustment	PD-52
Limited slip diff. assembly	PD-53
Limited slip diff. disassembly	PD-50
Limited slip diff. inspection	PD-51
Line pressure solenoid valve	AT-147, 161, 167
Line pressure test (A/T)	AT-62
Liquid gasket application	EM-3
Location of electrical units	EL-302
Lock, door	BT-18
Low and reverse brake	AT-313
LSV (Load sensing valve)	BR-12
Lubricant (R134a) A/C (auto A/C)	HA-113
Lubricant (R134a) A/C (manual A/C)	HA-194
Lubricants	MA-13
Lubrication circuit (engine)	LC-3
Lubrication-locks, hinges and hood latches	MA-30
Luggage room lamp	EL-74

M

MAFS - Wiring diagram	EC-151
Magnet clutch (auto A/C)	HA-79, 116
Magnet clutch (manual A/C)	HA-197
MAIN - Wiring diagram	EC-137
Main drive gear (M/T)	MT-13
Main gear (Transfer)	TF-12
Mainshaft (M/T)	MT-13
Mainshaft (Transfer)	TF-12
Maintenance (engine)	MA-15
MAJOR OVERHALL	AT-270
Major overhaul (Transfer)	TF-10
Malfunction indicator lamp (MIL)	EC-70
Manual air conditioner - Wiring diagram	HA-152
Manual transmission number	GI-43
Manual transmission oil replacement	MA-23
MAP/BARO switch solenoid valve	EC-438
Mass air flow sensor (MAFS)	EC-146
Master cylinder (brake)	BR-16
Master cylinder (clutch)	CL-8
Meter	EL-81
METER - Wiring diagram	EL-85
MIL & Data link connectors circuit	EC-587
MIL/DL - Wiring diagram	EC-587
MIRROR - Wiring diagram	EL-166
Mirror defogger	EL-140
Mirror, door	BT-54
Mirror, out side	BT-54
Misfire	EC-320
Mode door control linkage adjustment (auto A/C)	HA-59
Mode door control linkage adjustment (manual A/C)	HA-183
Mode door motor (auto A/C)	HA-54
Model variation	GI-40
Molding - See Exterior	BT-31
M/T major overhaul	MT-12
M/T removal and installation	MT-9
MULTI - Wiring diagram	EL-226
Multi-remote control system	EL-222

ALPHABETICAL INDEX

Multiport fuel injection (MFI) systemEC-26
Multiport fuel injection precautions.....GI-6

N

NATS - Wiring diagramEL-284
NVH troubleshooting (AX)AX-3, 19
NVH troubleshooting (BR)BR-6
NVH troubleshooting (CL)CL-4
NVH troubleshooting (M/T)MT-5
NVH troubleshooting (PD)PD-4
NVH troubleshooting (ST)ST-5
NVH troubleshooting (SU)SU-3, 17
NVH troubleshooting (Transfer)TF-5
NVIS (Nissan vehicle immobilizer system)EL-282

O

Oil change (capacity)MA-13
Oil pan (engine)EM-15
Oil pressure (engine)LC-3
Oil pump (A/T)AT-286
Oil pump (engine)LC-4
Oil pump regulator valve (engine)LC-5
Oil seal replacement (engine)EM-25
Oil seal replacement (front final drive 4WD)PD-16
Oil seal replacement (front of final drive)PD-42
On board diagnostic systemEC-54
Operating cylinder (clutch)CL-9
Out side mirrorBT-54
Overdrive control switchAT-253
Overrun clutchAT-309
Overrun clutch solenoid valveAT-192
Oversize pistonEM-50

P

P/ANT - Wiring diagramEL-160
Park/Neutral position switchEC-545
Park/neutral position switch (A/T)AT-104, 253
Park/neutral position switch (M/T)MT-6
Parking brake controlBR-30
Parking lampEL-47
PCV (positive crankcase ventilation)EC-36
PGC/V - Wiring diagramEC-380, 499
Pilot bushing replacementEM-57
Pinion bearing preload diff.PD-26
Pinion gear height diff.PD-26, 55
Piston assemblyEM-55
Piston pin inspectionEM-47
Piston ring inspectionEM-48
Piston to bore clearanceEM-49
PNP/SW - Wiring diagramEC-548
POWER - Wiring diagramEL-10

Power antennaEL-159
Power door lockEL-203
Power door mirrorEL-166
Power seatEL-167
Power steering fluid levelMA-30, ST-7
Power steering gearST-16
Power steering hydraulic pressureST-9
Power steering oil pressure switchEC-575
Power steering oil pumpST-26
Power steering system bleedingST-8
Power supply routingEL-9
Power transistor & ignition coilEC-454
Power windowEL-195
PRE/SE - Wiring diagramEC-394
Precautions (General)GI-4
Pressure plate - See Clutch coverCL-13
Pressure test (A/T)AT-62
Propeller shaftPD-3
Propeller shaft greasingMA-26
Propeller shaft inspectionMA-26
Propeller shaft on vehicle servicePD-8
Propeller shaft vibrationPD-8
PST/SW - Wiring diagramEC-576

R

Rack retainer adjustmentST-7
RadiatorLC-12
Radio - See AudioEL-149
Rear air spoilerBT-31
Rear axleAX-18
Rear bumperBT-15
Rear case (Transfer)TF-11
Rear combination lamp removal and installationBT-31
Rear cover packing replacement diff.PD-17
Rear doorBT-19
Rear drum brakeBR-26
Rear heated oxygen sensor (HO2S)EC-251, 261, 271, 281
Rear heated oxygen sensor (HO2S) heaterEC-290
Rear seatBT-42
Rear seat beltRS-6
Rear side windowBT-53
Rear suspensionSU-17
Rear washerEL-130
Rear window defoggerEL-140
Rear wiperEL-130
Refrigerant connection precaution (auto A/C)HA-4
Refrigerant connection precaution (manual A/C)HA-127
Refrigerant discharging evacuating charging (auto A/C)HA-111
Refrigerant general precaution (auto A/C)HA-4
Refrigerant general precaution (manual A/C)HA-127
Refrigerant lines (auto A/C)HA-120

ALPHABETICAL INDEX

Refrigerant lines (manual A/C).....	HA-201
Refrigeration cycle (auto A/C).....	HA-14
Refrigeration cycle (manual A/C).....	HA-137
Release bearing (clutch).....	CL-11
Removal and installation (A/T).....	AT-266
Removal and installation (Transfer).....	TF-9
Reverse clutch.....	AT-303
Reverse idler shaft (M/T).....	MT-13
Reverse lamp switch (M/T) - See	
Back-up lamp switch (M/T).....	MT-6
Reverse main gear (M/T).....	MT-13
Revolution sensor (A/T).....	AT-114
Ring gear diff. inspection.....	PD-24, 49
RO2H-L - Wiring diagram.....	EC-293
RO2H-R - Wiring diagram.....	EC-292
Road wheel size.....	GI-44
Roof trim.....	BT-29
Room lamp - See Interior lamp.....	EL-74
RRO2LH - Wiring diagram..	EC-256, 266, 276, 285
RRO2RH - Wiring diagram..	EC-255, 265, 275, 284

S

SAE J1930 terminology list.....	GI-51
Screw jack.....	GI-45
Seal - See Exterior.....	BT-31
SEAT - Wiring diagram.....	EL-167
Seat belt inspection.....	MA-31, RS-8
Seat belt pre-tensioner.....	RS-3
Seat belt pre-tensioner disposal.....	RS-24
Seat belt, front.....	RS-5
Seat belt, rear.....	RS-6
Seat, front.....	BT-38
Seat, rear.....	BT-42
Self-diagnostic results.....	EC-71
SHIFT - Wiring diagram.....	AT-256
Shift control (Transfer).....	TF-13, 25
Shift control components (M/T).....	MT-15
Shift fork (M/T).....	MT-15
Shift lever.....	MT-15
Shift lock system.....	AT-255
Shift schedule.....	AT-345
Shift solenoid valve A (A/T) ..	AT-125, 137, 147, 173
Shift solenoid valve B (A/T) ..	AT-125, 131, 147, 178
Shock absorber (rear).....	SU-21
Side air bag.....	RS-22
Side bearing preload (front final drive	
4WD).....	PD-25
Side trim.....	BT-24
Side window - See Rear side window.....	BT-53
Smart entrance control unit.....	EL-273
SMJ (super multiple junction).....	Foldout
Spare tire size.....	GI-44
Spark plug replacement.....	MA-21
Speedometer.....	EL-81
Spiral cable.....	RS-18
Spot lamp.....	EL-74
Spring (Wheelarch) height.....	SU-6
SROOF - Wiring diagram.....	EL-164

SRS - See Supplemental Restraint	
System.....	RS-11
SRS - Wiring diagram.....	RS-36
S/SIG - Wiring diagram.....	EC-563
Stabilizer bar (front).....	SU-12
Stabilizer bar (rear).....	SU-23
Stall test (A/T).....	AT-59
Standardized relay.....	EL-7
START - Wiring diagram.....	SC-8
Starter.....	SC-10
Starting system.....	SC-6
Steering gear, linkage and transfer	
gear inspection.....	MA-29
Steering linkage.....	ST-16
Steering switch.....	EL-24
Steering transfer gear.....	ST-14
Steering wheel and column.....	ST-10
Steering wheel play.....	ST-6
Steering wheel turning force.....	ST-8
Stop lamp.....	EL-53
STOP/L - Wiring diagram.....	EL-53
Striking rod (M/T).....	MT-15
Strut (front).....	SU-9
Sub-gear (M/T).....	MT-13
Sun roof, electric.....	EL-163
Sunload sensor (auto A/C).....	HA-104
Sunroof.....	BT-43
Supplemental Restraint System.....	RS-11
Supplemental restraint system - Wiring	
diagram.....	RS-36
SW/V - Wiring diagram.....	EC-442
Symbols and abbreviations.....	GI-10
Symptom matrix chart.....	EC-118
Synchronizer (M/T).....	MT-13
System readiness test (SRT) code.....	EC-56

T

Tachometer.....	EL-81
Tail lamp.....	EL-47
TAIL/L - Wiring diagram.....	EL-49
TCM circuit diagram.....	AT-13
TCM inspection table.....	AT-92
Temperature control cable and linkage	
adjustment (manual A/C).....	HA-181
TFTS - Wiring diagram.....	EC-317
THEFT - Wiring diagram.....	EL-250
Theft warning system.....	EL-244
Thermometer.....	EL-96
Thermostat.....	LC-10
Three way catalyst function (Left bank).....	EC-363
Three way catalyst function (Right	
bank).....	EC-363
Three way catalyst precautions.....	GI-6
Throttle position sensor (TPS).....	EC-181
Throttle position sensor adjustment.....	EC-99
Throttle position switch.....	EC-424, AT-187, 254
Throwout bearing - See Clutch release	
bearing.....	CL-11
Tie-rod.....	ST-20

ALPHABETICAL INDEX

Tie-rod ball joints.....ST-20
 Tightening torque of standard bolts.....GI-50
 Timing belt.....EM-18
 Tire rotationMA-27
 Tire sizeGI-44
 Tooth contact (front final drive 4WD)PD-30
 Tooth contact diff.PD-58
 Torque converter installationAT-267
 Torque convertor clutch solenoid
 valveAT-152, 161
 Tow truck towingGI-47
 Towing point.....GI-49
 TP/SW - Wiring diagramEC-426
 TPS - Wiring diagram.....EC-187
 Transfer caseTF-11
 Transfer fluid replacement (Part time
 4WD model)MA-25
 Transfer serial numberGI-43
 Transmission case (M/T).....MT-12
 TRANSMT - Wiring diagramEL-279
 Tread-FR&RR (Dimensions).....GI-43
 TrimBT-24
 Trouble diagnosesGI-33
 TURN - Wiring diagramEL-63
 Turn signal lampEL-61
 Two trip detection logicEC-54
 Two-pole liftGI-47

U

Under bodyBT-58

V

Vacuum cut valveEC-30, 539
 Vacuum cut valve bypass valve.....EC-30, 525, 532
 Vacuum hose (brake system).....BR-21
 Vacuum hose drawing (Engine control)EC-24
 Valve clearance.....EM-59
 Valve guide.....EM-33
 Valve seat.....EM-34
 Valve spring.....EM-36
 Vehicle identification number.....GI-42

Vehicle recovery (freeing a stuck
 vehicle).....GI-49
 Vehicle speed sensor (VSS).....EC-411
 VENT/V - Wiring diagramEC-386, 506, 521
 Viscosity number (SAE)MA-14
 VSS - Wiring diagramEC-414

W

WARN - Wiring diagramEL-102
 Warning chimeEL-110
 Warning lampsEL-101
 Washer, front.....EL-120
 Washer, rear.....EL-130
 Water cock control rod adjustment
 (manual A/C).....HA-181
 Water pumpLC-9
 Water temperature gaugeEL-81
 Weatherstrip - See ExteriorBT-31
 Wheel balanceMA-27
 Wheel bearing (front).....AX-4
 Wheel bearing (rear)AX-19
 Wheel hub (front).....AX-6
 Wheel sensors (ABS).....BR-55, 77
 Wheel sizeGI-44
 Wheelarch heightSU-6
 Wheelbase (Dimensions)GI-44
 Wide open & closed throttle position
 switchEC-181
 Width (Dimensions)GI-43
 WINDOW - Wiring diagramEL-198
 Window, doorBT-18
 Window, rear sideBT-53
 Window, side - See Rear side windowBT-53
 Windshield.....BT-51
 WIP/R - Wiring diagramEL-133
 WIPER - Wiring diagramEL-122
 Wiper, front.....EL-120
 Wiper, rearEL-130
 Wiring Diagram (Cell code) list.....EL-323
 Wiring diagramsGI-11
 Withdrawal lever (clutch).....CL-11
 Wrist pin - See Piston pin inspection.....EM-47

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

NOTES