
ALPHABETICAL INDEX

Numerics

4WD BRANCH LINE CIRCUIT ..LAN-99, LAN-243,
LAN-262, LAN-281, LAN-306, LAN-339
4WD CONTROL UNIT DLN-20, DLN-72
4WD ERROR IS DISPLAYED ON INFORMATION
DISPLAYDLN-64
4WD HIGH TEMP IS DISPLAYED ON
INFORMATION DISPLAYDLN-67
4WD SHIFT SWITCH.....DLN-73
4WD SYSTEMDLN-24
4WD WARNING ICON/DISPLAYDLN-63

A

A-BAG BRANCH LINE CIRCUITLAN-89, LAN-139,
LAN-154, LAN-176, LAN-207, LAN-238,
LAN-255, LAN-274, LAN-298, LAN-330
A/B WARNING LAMP IS OFF, PASS A/B INDCTR
LAMP TURNS ON INTERMITSRC-116
A/C AND AV SWITCH ASSEMBLYAV-188, AV-430,
HAC-154
A/C AUTO AMP.....HAC-42, HAC-156
A/C DISPLAY HAC-125
A/C SWITCH ASSEMBLY HAC-153
A/C SWITCH ASSEMBLY SIGNAL CIRCUIT
HAC-123
ABBREVIATIONS GI-14
ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT)BRC-42, BRC-160, BRC-201,
BRC-322
ABS BRANCH LINE CIRCUIT ...LAN-87, LAN-137,
LAN-152, LAN-174, LAN-205, LAN-236,
LAN-253, LAN-272, LAN-296, LAN-328
ABS FUNCTION DOES NOT OPERATE BRC-151,
BRC-313
ABS WARNING LAMPBRC-142, BRC-303
AC 120 V OUTLET PWO-34
AC 120 V OUTLET MAIN SWITCH INDICATOR
CIRCUIT PWO-28
AC 120 V OUTLET MAIN SWITCH INDICATOR
DOES NOT TURN ON..... PWO-30
AC 120 V OUTLET MAIN SWITCH INPUT SIGNAL
CIRCUIT PWO-24
AC 120 V OUTLET MAIN SWITCH POWER
SUPPLY CIRCUIT..... PWO-23
AC 120 V POWER OUTPUT CIRCUIT PWO-26
AC 120V OUTLET MAIN SW..... PWO-33
ACCELERATOR PEDAL ASSEMBLY..... ACC-3
ACCELERATOR PEDAL RELEASED POSITION
LEARNING.....EC-156, EC-641
ACTION TESTDAS-51, DAS-136
ADAS CONTROL UNITDAS-26, DAS-88, DAS-111,
DAS-174

ADDITIONAL SERVICE WHEN REMOVING
BATTERY NEGATIVE TERMINAL..... DLK-111,
PWC-90
ADDITIONAL SERVICE WHEN REPLACING 4WD
CONTROL UNITDLN-43
ADDITIONAL SERVICE WHEN REPLACING ABS
ACTUATOR AND ELECTRIC UNIT (CONTROL
UNIT)..... BRC-61, BRC-220
ADDITIONAL SERVICE WHEN REPLACING
AUTOMATIC BACK DOOR CONTROL UNIT...
DLK-113
ADDITIONAL SERVICE WHEN REPLACING BCM
DLK-112
ADDITIONAL SERVICE WHEN REPLACING CAN
GATEWAYLAN-125
ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNITPWC-91, SEC-76
ADDITIONAL SERVICE WHEN REPLACING
CONTROL VALVE.....TM-90
ADDITIONAL SERVICE WHEN REPLACING ECM
EC-154, EC-639
ADDITIONAL SERVICE WHEN REPLACING
ELECTRIC CONTROLLED COUPLINGDLN-112
ADDITIONAL SERVICE WHEN REPLACING REAR
FINAL DRIVE ASSEMBLY DLN-111
ADDITIONAL SERVICE WHEN REPLACING TCM
TM-85, TM-306
ADDITIONAL SERVICE WHEN REPLACING TCM
AND TRANSAXLE ASSEMBLYTM-88, TM-309
ADDITIONAL SERVICE WHEN REPLACING
TRANSAXLE ASSEMBLY..... TM-86, TM-307
ADJUSTMENT OF STEERING ANGLE SENSOR
NEUTRAL POSITION BRC-62, BRC-221
ADP BRANCH LINE CIRCUIT ...LAN-98, LAN-183,
LAN-215, LAN-305, LAN-338
ADP STEERING SWITCH ADP-167
ADP SYSTEM SYMPTOMS..... ADP-161
AIR BAG DIAGNOSIS SENSOR UNITSR-27
AIR BREATHER HOSE TM-205, TM-423
AIR CLEANER AND AIR DUCT EM-24
AIR CLEANER FILTER EM-15
ALL DOORS DO NOT LOCK/UNLOCK OR TRUNK/
BACK DOOR DO NOT OPEN WITH REQUEST
SWITCHDLK-229
AMBIENT SENSOR HAC-157
ANTI-PINCH FUNCTION DOES NOT OPERATE ..
RF-41
ANTI-PINCH SYSTEM DOES NOT OPERATE
NORMALLY (DRIVER SIDE) PWC-127
ANTI-PINCH SYSTEM DOES NOT OPERATE
NORMALLY (PASSENGER SIDE).... PWC-128
APPLICATION NOTICEBRC-10, BRC-41, BRC-57,
BRC-66, BRC-146, BRC-168, BRC-200,
BRC-216, BRC-225, BRC-308

AROUND VIEW MONITOR CONTROL UNIT
[AV-255, AV-448](#)
 ASCD INDICATOR [EC-461, EC-838](#)
 AUDIO ANTENNA [AV-50, AV-202, AV-454](#)
 AUDIO SYSTEM [AV-40](#)
 AUDIO UNIT [AV-15, AV-43](#)
 AUTO LIGHT SYSTEM [EXL-41](#)
 AUTO OPERATION DOES NOT OPERATE .[RF-40](#)
 AUTO OPERATION DOES NOT OPERATE BUT
 MANUAL OPERATE NORMALLY [PWC-56](#)
 AUTO OPERATION DOES NOT OPERATE BUT
 MANUAL OPERATES NORMALLY (DRIVER
 SIDE)..... [PWC-129](#)
 AUTO OPERATION DOES NOT OPERATE BUT
 MANUAL OPERATES NORMALLY
 (PASSENGER SIDE)..... [PWC-130](#)
 AUTOMATIC AIR CONDITIONING SYSTEM
[HAC-49](#)
 AUTOMATIC BACK DOOR CLOSE SWITCH.....
[DLK-205, DLK-295](#)
 AUTOMATIC BACK DOOR CONTROL MODULE ..
[DLK-292](#)
 AUTOMATIC BACK DOOR CONTROL UNIT [DLK-54](#)
 AUTOMATIC BACK DOOR MAIN SWITCH
[DLK-207, DLK-293](#)
 AUTOMATIC BACK DOOR SWITCH [DLK-209,](#)
[DLK-294](#)
 AUTOMATIC BACK DOOR SYSTEM [DLK-94](#)
 AUTOMATIC BACK DOOR WARNING BUZZER....
[DLK-221](#)
 AUTOMATIC DRIVE POSITIONER CONTROL UNIT
[ADP-36, ADP-164, ST-9](#)
 AUTOMATIC DRIVE POSITIONER SYSTEM.....
[ADP-40](#)
 AUTOMATIC SPEED CONTROL DEVICE (ASCD)
[CCS-3](#)
 AUX IMAGE SIGNAL CIRCUIT [AV-169](#)
 AUX IMAGE SIGNAL CIRCUIT (FRONT AUXILIARY
 INPUT JACKS TO AV CONTROL UNIT) [AV-398](#)
 AV BRANCH LINE CIRCUIT [LAN-90, LAN-155,](#)
[LAN-177, LAN-208, LAN-256, LAN-275,](#)
[LAN-299, LAN-331](#)
 AV CONTROL UNIT [AV-71, AV-186, AV-233, AV-428](#)
 AVM BRANCH LINE CIRCUIT [LAN-107, LAN-223,](#)
[LAN-347](#)

B

B TERMINAL CIRCUIT [CHG-17, STR-16](#)
 B0001, B0002 DRIVER AIRBAG MODULE [SRC-47](#)
 B0010, B0011 PASSENGER AIRBAG MODULE
[SRC-50](#)
 B0020 SIDE AIRBAG MODULE LH [SRC-53](#)
 B0021 SIDE CURTAIN AIR BAG MODULE LH.....
[SRC-57](#)
 B0028 SIDE AIRBAG MODULE RH..... [SRC-55](#)

B0029 SIDE CURTAIN AIR BAG MODULE RH
[SRC-59](#)
 B0091 FRONT SIDE AIR BAG SATELLITE
 SENSOR LH [SRC-64](#)
 B0092 REAR SIDE AIR BAG SATELLITE SENSOR
 LH [SRC-70](#)
 B0093 FRONT DOOR SATELLITE SENSOR LH....
[SRC-76](#)
 B0094 CRASH ZONE SENSOR..... [SRC-61](#)
 B0096 FRONT SIDE AIR BAG SATELLITE
 SENSOR RH [SRC-67](#)
 B0097 REAR SIDE AIR BAG SATELLITE SENSOR
 RH [SRC-73](#)
 B0098 FRONT DOOR SATELLITE SENSOR RH...
[SRC-79](#)
 B00A0 OCCUPANT CLASSIFICATION SYSTEM
 CONTROL UNIT [SRC-82](#)
 B00D2 FRONT PASSENGER AIR BAG ON
 INDICATOR [SRC-88](#)
 B00D5 PASSENGER AIR BAG OFF INDICATOR ..
[SRC-90](#)
 B1428 SEAT BELT BUCKLE SWITCH LH . [SRC-92](#)
 B1429 SEAT BELT BUCKLE SWITCH RH. [SRC-94](#)
 B142A IGNITION VOLTAGE..... [SRC-106](#)
 B142X COLLISION DETECTION [SRC-108](#)
 B1430 SEAT BELT PRE-TENSIONER [SRC-96](#)
 B1431 SEAT BELT PRE-TENSIONER [SRC-98](#)
 B1432 LAP PRE-TENSIONER [SRC-100](#)
 B1433 LAP PRE-TENSIONER [SRC-102](#)
 B1436 ACTIVE VENT [SRC-104](#)
 B14XX AIR BAG DIAGNOSIS SENSOR UNIT
[SRC-109](#)
 B1500 DOOR SATELLITE SENSOR..... [SRC-111](#)
 B2098 IGNITION RELAY ON STUCK [PCS-29](#)
 B2099 IGNITION RELAY OFF STUCK [PCS-30](#)
 B210B STARTER CONTROL RELAY [SEC-83](#)
 B210C STARTER CONTROL RELAY [SEC-84](#)
 B210D STARTER RELAY [SEC-86](#)
 B210E STARTER RELAY [SEC-88](#)
 B210F TRANSMISSION RANGE SWITCH [SEC-90](#)
 B2110 TRANSMISSION RANGE SWITCH [SEC-93](#)
 B2112 SLIDING MOTOR [ADP-81](#)
 B2113 RECLINING MOTOR..... [ADP-83](#)
 B2116 TILT MOTOR [ADP-85](#)
 B2128 UART COMMUNICATION LINE..... [ADP-87](#)
 B2130 EEPROM..... [ADP-89](#)
 B2190 NATS ANTENNA AMP..... [SEC-96](#)
 B2191, P1615 DIFFERENCE OF KEY [SEC-98](#)
 B2192 ID DISCORD, IMMU-ECM [SEC-99](#)
 B2193 CHAIN OF ECM-IMMU [SEC-100](#)
 B2195 ANTI-SCANNING [SEC-101](#)
 B2196 DONGLE UNIT [SEC-102](#)
 B2198 NATS ANTENNA AMP..... [SEC-104](#)
 B2205 VEHICLE SPEED [MWI-58](#)
 B2267 ENGINE SPEED [MWI-59](#)
 B2268 WATER TEMP [MWI-60](#)

B2401 IGNITION POWER SUPPLY CIRCUIT	DLK-117	B26F6 BCM	PCS-76
B2409 HALF LATCH SWITCH	DLK-118	B26F7 BCM	SEC-136
B2416 TOUCH SENSOR RH	DLK-121	B26F8 BCM	SEC-137
B2417 TOUCH SENSOR LH	DLK-124	B26FD SHIFT LOCK SOLENOID	DLK-153
B2419 OPEN SWITCH	DLK-127	B26FE HOOD SWITCH	DLK-156
B2420 CLOSE SWITCH	DLK-130	B26FF REMOTE KEYLESS ENTRY RECEIVER ...	DLK-158
B2422 BACK DOOR STATE	DLK-133	B2720 CORNER SENSOR [RL]	SN-25
B2423 AUTOMATIC BACK DOOR MOTOR		B2721 CENTER SENSOR [RL]	SN-26
OPERATION TIME	DLK-136	B2722 CENTER SENSOR [RR]	SN-27
B2426 ENCODER	DLK-138	B2723 CORNER SENSOR [RR]	SN-28
B2427 ENCODER	DLK-141	B2724 SONAR CONTROL UNIT	SN-29
B2428 AUTOMATIC BACK DOOR CONTROL UNIT		B2725 REAR BUZZER	SN-30
DLK-144		B2796, B2797, B2798 COMMUNICATION ERROR	
B242A CLOSURE CONDITION	DLK-145	HAC-109	
B2555 STOP LAMP	SEC-106	B2799, B279A AIR MIX DOOR MOTOR (REAR) ...	
B2556 PUSH-BUTTON IGNITION SWITCH	SEC-108	HAC-103	
B2557 VEHICLE SPEED	SEC-110	B279B, B279C MODE DOOR MOTOR (REAR)	HAC-105
B2560 STARTER CONTROL RELAY	SEC-111	B279D, B279E REAR SHUT-OFF DOOR MOTOR	
B2562 LOW VOLTAGE	BCS-71	HAC-107	
B2578, B2579 IN-VEHICLE SENSOR	HAC-83	B27B0 A/C AUTO AMP.	HAC-111
B257B, B257C AMBIENT SENSOR	HAC-86	BACK DOOR	DLK-262
B2581, B2582 INTAKE SENSOR	HAC-89	BACK DOOR CLOSURE MOTOR	DLK-220
B259A ROOM LAMP FUSE	BCS-72	BACK DOOR LOCK	DLK-279
B2600 CONFIG ERROR	LAN-129	BACK DOOR OPENER SWITCH	DLK-197
B2601 SHIFT POSITION	SEC-112	BACK DOOR OUTER FINISHER	EXT-43
B2602 SHIFT POSITION	SEC-115	BACK DOOR REQUEST SWITCH	DLK-195
B2603 SHIFT POSITION	SEC-118	BACK DOOR SWITCH	DLK-170
B2604 SHIFT POSITION	SEC-122	BACK DOOR TRIM	INT-34
B2605 SHIFT POSITION	SEC-125	BACK DOOR WARNING CHIME	DLK-289
B2608 STARTER RELAY	SEC-128	BACK DOOR WINDOW GLASS	GW-28
B260A IGNITION RELAY	PCS-60	BACK-UP LAMP	EXL-84, EXL-156
B2614 ACC RELAY CIRCUIT	PCS-62	BASE AUDIO	AV-18
B2615 BLOWER RELAY CIRCUIT	PCS-64	BASIC INSPECTION	EC-162, EC-647
B2616 IGNITION RELAY CIRCUIT	PCS-66	BATTERY	PG-84, PG-93
B2617 STARTER RELAY CIRCUIT	SEC-130	BATTERY SAVER OUTPUT/POWER SUPPLY	
B2618 BCM	PCS-68	CIRCUIT	INL-50
B261A PUSH-BUTTON IGNITION SWITCH	PCS-70	BATTERY TERMINAL WITH FUSIBLE LINK	PG-96
B261B REMOTE ENGINE START	DLK-148	BATTERY TRAY	PG-95
B261E VEHICLE TYPE	SEC-132	BCM	BCS-31, BCS-55, DEF-9, DLK-60, INL-11, WT-13
B2622 INSIDE ANTENNA	DLK-149	BCM (BODY CONTROL MODULE)	ADP-39, BCS-81, MWI-30, PCS-84, PWC-14, PWC-73, RF-13
B2623 INSIDE ANTENNA	DLK-151	BCM BRANCH LINE CIRCUIT	LAN-103, LAN-144, LAN-161, LAN-185, LAN-219, LAN-244, LAN-263, LAN-283, LAN-308, LAN-343
B2630, B2631 SUNLOAD SENSOR	HAC-92	BCM, COMBINATION METER	WCS-16
B2632, B2633 AIR MIX DOOR MOTOR (DRIVER		BCM, IPDM E/R	EXL-21, PCS-43, WW-20
SIDE)	HAC-95	BLIND SPOT WARNING	DAS-34
B2634, B2635 AIR MIX DOOR MOTOR		BLIND SPOT WARNING/BLIND SPOT	
(PASSENGER SIDE)	HAC-97	INTERVENTION INDICATOR	DAS-90, DAS-176
B2636, B2637, B2638, B2639, B2654 MODE DOOR		BLOWER MOTOR RESISTOR	HAC-166
MOTOR (FRONT)	HAC-99	BLOWER UNIT	VTL-19
B263D, B263E, B263F INTAKE DOOR MOTOR	HAC-101	BLUETOOTH® ANTENNA	AV-204
B26F1 IGNITION RELAY	PCS-72		
B26F2 IGNITION RELAY	PCS-74		
B26F3 STARTER CONTROL RELAY	SEC-134		
B26F4 STARTER CONTROL RELAY	SEC-135		

BLUETOOTH® CONTROL SIGNAL CIRCUIT
 AV-176
 BLUETOOTH® CONTROL UNIT AV-84, AV-198
 BLUETOOTH® VOICE SIGNAL CIRCUIT .. AV-158
 BODY ALIGNMENTBRM-43
 BODY COMPONENT PARTSBRM-12
 BODY CONSTRUCTIONBRM-22
 BODY EXTERIOR PAINT COLOR.....BRM-2
 BODY SEALING.....BRM-19
 BODY SIDE TRIMINT-19
 BOSE AMP.AV-244
 BOSE SPEAKER AMP.....AV-437
 BOTH DOORS MIRROR DEFOGGER DON'T
 OPERATE BUT REAR WINDOW DEFOGGER
 OPERATES DEF-46
 BOTH SIDE FRONT FOG LAMPS ARE NOT
 TURNED ONEXL-139
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED
 ONEXL-137
 BOTH SIDE HEADLAMPS DO NOT SWITCH TO
 HIGH BEAMEXL-136
 BRAKE BOOSTER.....BR-10, BR-31
 BRAKE CONTROL SYSTEM BRC-49, BRC-208
 BRAKE FLUID BR-8, BR-14
 BRAKE MASTER CYLINDER BR-9, BR-28
 BRAKE PEDAL.....BR-7, BR-13, BR-20
 BRAKE PEDAL POSITION SWITCHEC-462,
 EC-839
 BRAKE PEDAL VIBRATION OR OPERATION
 SOUND OCCURS BRC-152, BRC-314
 BRAKE PIPINGBR-22
 BRAKE WARNING LAMP BRC-143, BRC-304
 BSW ON INDICATOR CIRCUIT .DAS-84, DAS-169
 BSW SYSTEM SYMPTOMS DAS-86
 BSW/BUZZER BRANCH LINE CIRCUIT .LAN-104,
 LAN-186, LAN-220, LAN-309, LAN-344
 BUZZERSN-36

C

C1101, C1102, C1103, C1104 WHEEL SENSOR ...
 BRC-67, BRC-226
 C1105, C1106, C1107, C1108 WHEEL SENSOR ...
 BRC-72, BRC-231
 C1109 POWER AND GROUND SYSTEM BRC-79,
 BRC-238
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM.....
 BRC-81, BRC-240
 C1115 WHEEL SENSOR..... BRC-84, BRC-243
 C1116 STOP LAMP SWITCH.... BRC-91, BRC-250
 C1120, C1122, C1124, C1126 ABS IN VALVE
 SYSTEM..... BRC-95, BRC-254
 C1121, C1123, C1125, C1127 ABS OUT VALVE
 SYSTEM..... BRC-97, BRC-256
 C1130 ENGINE SIGNAL BRC-99, BRC-258
 C1140 ACTUATOR RELAY SYSTEM..... BRC-101,
 BRC-260

C1142 PRESS SENSOR BRC-103, BRC-262
 C1143 STEERING ANGLE SENSOR..... BRC-106,
 BRC-265, STC-21
 C1144 INCOMPLETE STEERING ANGLE SENSOR
 ADJUSTMENT BRC-110, BRC-269
 C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR
 BRC-112, BRC-271
 C1155 BRAKE FLUID LEVEL SWITCH .. BRC-115,
 BRC-274
 C1160 INCOMPLETE DECEL G SENSOR
 CALIBRATION BRC-119, BRC-278
 C1164, C1165 CV SYSTEM BRC-121, BRC-280
 C1170 VARIANT CODING BRC-123, BRC-282
 C1197 VACUUM SENSOR BRC-124, BRC-283
 C1198 VACUUM SENSOR BRC-127, BRC-286
 C1199 BRAKE BOOSTER..... BRC-129, BRC-288
 C119A VACUUM SENSOR..... BRC-132, BRC-291
 C1201 4WD CONTROL UNIT DLN-45
 C1203 ABS ACTUATOR AND ELECTRIC UNIT
 (CONTROL UNIT) DLN-46
 C1204 4WD SOLENOID..... DLN-47
 C1205 4WD ACTUATOR RELAY DLN-50
 C1209 MODE SW..... DLN-52
 C1210 ECM DLN-55
 C1601 BATTERY POWER SUPPLY STC-22
 C1602 NO TUNING SET STC-25
 C1606 EPS MOTOR..... STC-26
 C1607, C1608 POWER STEERING CONTROL
 MODULE STC-27
 C160A HEAT PROTECTION..... STC-28
 C1704, C1705, C1706, C1707 LOW TIRE
 PRESSURE WT-33
 C1708, C1709, C1710, C1711 TRANSMITTER (NO
 DATA) WT-35
 C1712, C1713, C1714, C1715 TRANSMITTER
 (CHECKSUM)..... WT-38
 C1716, C1717, C1718, C1719 TRANSMITTER
 (PRESSURE DATA) WT-40
 C1720, C1721, C1722, C1723 TRANSMITTER.....
 WT-42
 C1724, C1725, C1726, C1727 TRANSMITTER
 (BATT VOLT) WT-44
 C1729 VEHICLE SPEED SIGNAL WT-46
 C1730, C1731, C1732, C1733 FLAT TIRE... WT-47
 C1734 BCM WT-49
 C1735 IGNITION SIGNAL WT-51
 C1A00 CONTROL UNIT DAS-53, DAS-138
 C1A01 POWER SUPPLY CIRCUIT 1, C1A02
 POWER SUPPLY CIRCUIT 2DAS-54, DAS-139
 C1A03 VEHICLE SPEED SENSOR DAS-55,
 DAS-140
 C1B50 SIDE RADAR MALFUNCTION..... DAS-56,
 DAS-141
 C1B51 BSW/BSI INDICATOR SHORT CIRCUIT
 DAS-57, DAS-142

C1B52 BSW/BSI INDICATOR OPEN CIRCUIT	DAS-58, DAS-143	CLUTCH POINT LEARNING	TM-91
C1B53 SIDE RADAR RIGHT MALFUNCTION	DAS-60, DAS-145	COLLISION DIAGNOSIS	SR-5
C1B54 SIDE RADAR LEFT MALFUNCTION	DAS-61, DAS-146	COMBINATION METER.....	MWI-23, MWI-85
C1B55 RADAR BLOCKAGE.....	DAS-62, DAS-147	COMBINATION SWITCH	BCS-82
CALIBRATION OF AUTOMATIC BACK DOOR POSITION INFORMATION	DLK-114	COMBINATION SWITCH INPUT CIRCUIT	BCS-75
CALIBRATION OF DECEL G SENSOR ...	BRC-64, BRC-223	COMBINATION SWITCH OUTPUT CIRCUIT.....	BCS-77
CAMERA IMAGE SIGNAL CIRCUIT	AV-171	COMBINATION SWITCH SYSTEM SYMPTOMS...	BCS-79
CAMSHAFT	EM-80	COMPASS.....	MWI-52
CAMSHAFT VALVE CLEARANCE	EM-18	COMPOSITE IMAGE SIGNAL CIRCUIT	AV-167
CAN COMMUNICATION CIRCUIT	LAN-108, LAN-145, LAN-162, LAN-189, LAN-245, LAN-264, LAN-284, LAN-312	COMPOSITE IMAGE SIGNAL CIRCUIT (AV CONTROL UNIT TO FRONT DISPLAY UNIT) .	AV-395
CAN COMMUNICATION CIRCUIT 1	LAN-110, LAN-224, LAN-348	COMPOSITE IMAGE SIGNAL CIRCUIT (AV CONTROL UNIT TO VIDEO DISTRIBUTOR)...	AV-396
CAN COMMUNICATION CIRCUIT 2	LAN-112, LAN-226, LAN-350	COMPOSITE IMAGE SIGNAL CIRCUIT (VIDEO DISTRIBUTOR TO HEADREST DISPLAY UNIT)	AV-397
CAN GATEWAY	LAN-121, LAN-131	COMPRESSION PRESSURE.....	EM-22
CAN GATEWAY SYSTEM	LAN-123	COMPRESSOR	HA-30
CAN SYSTEM (WITH AROUND VIEW MONITOR SYSTEM).....	LAN-56	COMPRESSOR DOES NOT OPERATE..	HAC-151
CAN SYSTEM (WITHOUT AROUND VIEW MONITOR SYSTEM).....	LAN-43	CONDENSER	DEF-53, HA-38
CARGO LAMP	INL-67	CONFIGURATION (CAN GATEWAY).....	LAN-126
CENTER CONSOLE ASSEMBLY.....	IP-18, IP-27	CONTROL CABLE	TM-200, TM-418
CENTER CONSOLE REAR FINISHER	IP-29	CONTROL VALVE.....	TM-208, TM-426
CENTER SPEAKER	AV-373, AV-441	COOLER PIPE AND HOSE	HA-34
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1)	LAN-101, LAN-217, LAN-341	COOLING FAN.....	CO-17, EC-464, EC-841
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2)	LAN-102, LAN-218, LAN-342	COOLING SYSTEM.....	CO-8
CHARGING SYSTEM.....	CHG-5, CHG-6, CHG-22	CORROSION PROTECTION.....	BRM-16
CHARGING SYSTEM PRELIMINARY INSPECTION	CHG-16	COWL TOP	EXT-25
CHASSIS AND BODY MAINTENANCE	MA-32	CRASH ZONE SENSOR.....	SR-23
CHECK ANTI-PINCH FUNCTION	PWC-93	CVT CONTROL SYSTEM	TM-67, TM-189, TM-288, TM-407
CLIMATE CONTROLLED SEAT BLOWER FILTER	SE-69	CVT FLUID.....	TM-194, TM-412
CLIMATE CONTROLLED SEAT BLOWER MOTOR	SE-64	CVT FLUID COOLER SYSTEM....	TM-92, TM-222, TM-311, TM-439
CLIMATE CONTROLLED SEAT CONTROL UNIT .	SE-13	CVT OIL WARMER	TM-224, TM-441
CLIMATE CONTROLLED SEAT SWITCH	SE-53	CVT POSITION	TM-96, TM-315
CLIMATE CONTROLLED SEAT SWITCH INDICATOR.....	SE-67	CVT SHIFT LOCK SYSTEM	TM-79, TM-300
CLIMATE CONTROLLED SEAT SYSTEM ..	SE-38, SE-70	CVT SHIFT SELECTOR	TM-198, TM-416
CLUSTER LID A	IP-21	CYLINDER BLOCK.....	EM-116
CLUSTER LID C	IP-22	CYLINDER HEAD	EM-94
CLUSTER LID D	IP-24		
		D	
		DAYTIME LIGHT SYSTEM INOPERATIVE	EXL-140
		DAYTIME RUNNING LIGHT RELAY CIRCUIT	EXL-116
		DAYTIME RUNNING LIGHT SYSTEM	EXL-30
		DEFOGGER SYSTEM SYMPTOMS.....	DEF-43
		DIAGNOSIS AND REPAIR WORK FLOW	ADP-71, BRC-58, BRC-217, DAS-47, DAS-132, DEF-23, DLK-108, DLN-40, HAC-71, MWI-54, PCS-54, PWO-20, SE-47, SEC-73, SRC-41, ST-16, STC-18, TM-82, TM-303, WT-29

DIAGNOSIS SENSOR UNIT	SRC-18
DIAGNOSIS SYSTEM (4WD CONTROL UNIT)	DLN-18
DIAGNOSIS SYSTEM (ADAS CONTROL UNIT)....	DAS-20, DAS-105
DIAGNOSIS SYSTEM (AIR BAG).....	SRC-14
DIAGNOSIS SYSTEM (AROUND VIEW MONITOR CONTROL UNIT)	AV-231
DIAGNOSIS SYSTEM (AUTOMATIC BACK DOOR CONTROL UNIT)	DLK-52
DIAGNOSIS SYSTEM (AV CONTROL UNIT).....	AV-61, AV-219
DIAGNOSIS SYSTEM (BCM)	BCS-15, DEF-7, DLK-46, EXL-13, INL-8, PCS-38, PWC-12, PWC-71, RF-11, SEC-18, WCS-14, WT-10, WW-14
DIAGNOSIS SYSTEM (BLUETOOTH® CONTROL UNIT).....	AV-70
DIAGNOSIS SYSTEM (CAN GATEWAY).....	LAN-119
DIAGNOSIS SYSTEM (COMBINATION METER)...	MWI-18, WCS-9
DIAGNOSIS SYSTEM (DRIVER SEAT CONTROL UNIT).....	ADP-26
DIAGNOSIS SYSTEM (ECM)	EC-61, EC-553
DIAGNOSIS SYSTEM (HVAC).....	HAC-39
DIAGNOSIS SYSTEM (IPDM E/R).....	EXL-17, PCS-8, SEC-24, WW-16
DIAGNOSIS SYSTEM (POWER STEERING CONTROL MODULE)	STC-10
DIAGNOSIS SYSTEM (SIDE RADAR LH).....	DAS-22, DAS-107
DIAGNOSIS SYSTEM (SIDE RADAR RH).....	DAS-24, DAS-109
DIAGNOSIS SYSTEM (SONAR CONTROL UNIT).....	SN-8
DIAGNOSIS SYSTEM (TCM).....	TM-47, TM-268
DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]	BRC-36, BRC-195
DIFFERENTIAL SIDE OIL SEAL	TM-218, TM-435
DISK EJECT SIGNAL CIRCUIT	AV-173, AV-400
DISPLAY UNIT	AV-17, AV-46, AV-79, AV-192, AV-242, AV-434
DLC BRANCH LINE CIRCUIT ...	LAN-91, LAN-140, LAN-156, LAN-178, LAN-239, LAN-257, LAN-276, LAN-300
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1).....	LAN-92, LAN-209, LAN-332
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2).....	LAN-93, LAN-210, LAN-333
DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (ALL I-KEY/REQ SW/PUSH SW)	DLK-233
DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (ONE I-KEY/REQ SW/ PUSH SW).....	DLK-241
DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (REQ SW/PUSH SW) (ALL KEYS).....	DLK-231
DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (REQ SW/PUSH SW) (ONE KEY)	SEC-150
DOOR DOES NOT LOCK/UNLOCK WITH DOOR REQUEST SWITCH AND INTELLIGENT KEY .	DLK-237
DOOR DOES NOT LOCK/UNLOCK WITH INTELLIGENT KEY	DLK-236
DOOR DOES NOT LOCK/UNLOCK WITH INTELLIGENT KEY (ONE KEY).....	DLK-240
DOOR KEY CYLINDER SWITCH	DLK-189
DOOR KEY CYLINDER SWITCH DOES NOT OPERATE POWER WINDOWS	PWC-132
DOOR LOCK ACTUATOR.....	DLK-180
DOOR LOCK AND UNLOCK SWITCH	DLK-174
DOOR MIRROR	MIR-18
DOOR MIRROR (WITHOUT ADP).....	MIR-4
DOOR MIRROR ACTUATOR.....	MIR-21
DOOR MIRROR DEFOGGER LH (WITH AROUND VIEW MONITOR)	DEF-37
DOOR MIRROR DEFOGGER LH (WITHOUT AROUND VIEW MONITOR).....	DEF-35
DOOR MIRROR DEFOGGER RH (WITH AROUND VIEW MONITOR)	DEF-41
DOOR MIRROR DEFOGGER RH (WITHOUT AROUND VIEW MONITOR).....	DEF-39
DOOR MIRROR GLASS	MIR-19
DOOR MIRROR MOTOR	ADP-154
DOOR MIRROR REAR FINISHER.....	MIR-20
DOOR MIRROR REMOTE CONTROL SWITCH	ADP-112, MIR-23
DOOR MOTOR.....	HAC-126, HAC-162
DOOR MOTOR COMMUNICATION CIRCUIT	HAC-128
DOOR OUTSIDE LOWER MOLDING	EXT-38
DOOR OUTSIDE MOLDING	EXT-33
DOOR REQUEST SWITCH	DLK-193, DLK-285
DOOR SWITCH.....	DLK-168, DLK-284, PWC-48, PWC-115, RF-36
DRIVE BELT	EM-12
DRIVE PINION	DLN-85
DRIVER AIR BAG MODULE	SR-12
DRIVER SEAT CONTROL UNIT.....	ADP-29, ADP-163
DRIVER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE.	DEF-48
DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE	PWC-52, PWC-123
DUCTS AND GRILLES.....	VTL-10

E

EASY FILL TIRE ALERT DOES NOT ACTIVATE...
[WT-56](#)

ECM BRANCH LINE CIRCUIT ..[LAN-84](#), [LAN-134](#),
[LAN-149](#), [LAN-171](#), [LAN-202](#), [LAN-233](#),
[LAN-250](#), [LAN-269](#), [LAN-293](#), [LAN-325](#)

ECM, IPDM E/R, BCM[HAC-48](#), [SEC-26](#)

ELECTRIC CONTROLLED COUPLING ...[DLN-120](#)

ELECTRICAL LOAD SIGNAL[EC-467](#), [EC-844](#)

ELECTRICAL UNITS LOCATION[PG-4](#)

ELECTRONIC CONTROLLED ENGINE MOUNT ..
[EC-469](#), [EC-846](#)

ENCODER [PWC-45](#), [PWC-110](#)

ENGINE ASSEMBLY[EM-107](#)

ENGINE CAN NOT START[SEC-146](#)

ENGINE CONTROL SYSTEM [EC-117](#), [EC-604](#)

ENGINE CONTROL SYSTEM SYMPTOM [SEC-498](#),
[EC-875](#)

ENGINE COOLANT[CO-10](#)

ENGINE DOES NOT START WHEN INTELLIGENT
KEY IS INSIDE OF VEHICLE[SEC-147](#)

ENGINE DOES NOT START WHEN INTELLIGENT
KEY IS INSIDE OF VEHICLE (ONE KEY).....
[SEC-149](#)

ENGINE MAINTENANCE (VQ35DE).....[MA-21](#)

ENGINE MOUNT[EM-104](#)

ENGINE OIL [LU-8](#)

ENGINE ROOM COVER[EM-23](#)

ENGINE START FUNCTION[SEC-27](#)

EPS BRANCH LINE CIRCUIT ...[LAN-88](#), [LAN-138](#),
[LAN-153](#), [LAN-175](#), [LAN-206](#), [LAN-237](#),
[LAN-254](#), [LAN-273](#), [LAN-297](#), [LAN-329](#)

EVAP CANISTER.....[FL-18](#)

EVAP CANISTER FILTER.....[FL-20](#)

EVAP CANISTER VENT CONTROL VALVE .[FL-21](#)

EVAP CONTROL SYSTEM PRESSURE SENSOR
[FL-22](#)

EVAP LEAK CHECK[EC-505](#), [EC-882](#)

EXCESSIVE OPERATION FREQUENCY [BRC-148](#),
[BRC-310](#)

EXHAUST MANIFOLD AND THREE WAY
CATALYST[EM-31](#)

EXHAUST SYSTEM [EX-4](#), [EX-5](#)

EXTERIOR LIGHTING SYSTEM SYMPTOMS.....
[EXL-133](#)

F

FENDER PROTECTOR[EXT-28](#)

FILAMENT[DEF-51](#)

FLOOR TRIM [INT-24](#)

FOOT LAMP [INL-63](#)

FRONT AUTOMATIC AIR CONDITIONING
SYSTEM [HAC-144](#)

FRONT AUXILIARY INPUT JACK AUDIO SIGNAL
CIRCUIT[AV-154](#), [AV-393](#)

FRONT AUXILIARY INPUT JACKS [AV-197](#), [AV-446](#)

FRONT BLOWER MOTOR [HAC-130](#)

FRONT BUMPER.....[EXT-16](#)

FRONT CAMERA..... [AV-449](#)

FRONT CAMERA IMAGE SIGNAL CIRCUIT [AV-406](#)

FRONT COIL SPRING AND STRUT [FSU-8](#), [FSU-17](#)

FRONT COMBINATION LAMP .[EXL-145](#), [EXL-159](#)

FRONT DISC BRAKE [BR-11](#), [BR-16](#), [BR-35](#), [BR-44](#)

FRONT DOOR [DLK-254](#)

FRONT DOOR FINISHER [INT-15](#)

FRONT DOOR GLASS AND REGULATOR. [GW-14](#)

FRONT DOOR LOCK [DLK-272](#)

FRONT DOOR SPEAKER .. [AV-32](#), [AV-47](#), [AV-148](#),
[AV-193](#), [AV-381](#), [AV-438](#)

FRONT DRIVE SHAFT [FAX-7](#), [FAX-15](#), [FAX-20](#)

FRONT DRIVE SHAFT BOOT [FAX-10](#)

FRONT FENDER [DLK-252](#)

FRONT FOG LAMP [EXL-148](#)

FRONT FOG LAMP AIMING ADJUSTMENT
[EXL-144](#)

FRONT FOG LAMP CIRCUIT [EXL-119](#)

FRONT FOG LAMP SYSTEM..... [EXL-51](#)

FRONT GRILLE [EXT-23](#)

FRONT LOWER LINK..... [RSU-13](#)

FRONT OIL SEAL [DLN-123](#)

FRONT PASSENGER AIR BAG MODULE... [SR-18](#)

FRONT PASSENGER AIR BAG OFF INDICATOR.
[SR-42](#)

FRONT PASSENGER SIDE POWER WINDOW
ALONE DOES NOT OPERATE [PWC-124](#)

FRONT PASSENGER SIDE POWER WINDOW
DOES NOT OPERATE [PWC-53](#)

FRONT POWER WINDOW MOTOR [GW-18](#)

FRONT POWER WINDOW SWITCH [PWC-77](#)

FRONT ROOM/MAP LAMP ASSEMBLY [INL-59](#)

FRONT SEAT [SE-77](#), [SE-114](#)

FRONT SEAT BELT [SB-8](#)

FRONT SEAT BELT BUCKLE SWITCH..... [SR-30](#)

FRONT SIDE AIR BAG MODULE..... [SR-22](#)

FRONT STABILIZER..... [FSU-13](#)

FRONT STEP LAMP..... [INL-65](#)

FRONT SUSPENSION ASSEMBLY [FSU-5](#)

FRONT SUSPENSION MEMBER..... [FSU-16](#)

FRONT TIMING CHAIN CASE [EM-57](#)

FRONT TWEETER [AV-378](#), [AV-439](#)

FRONT UNDER COVER [EXT-30](#)

FRONT WASHER NOZZLE AND TUBE [WW-58](#)

FRONT WHEEL HUB..... [FAX-6](#), [FAX-8](#)

FRONT WIPER AND WASHER SYSTEM .. [WW-21](#)

FRONT WIPER ARM [WW-62](#)

FRONT WIPER BLADE [WW-64](#)

FRONT WIPER DOES NOT OPERATE [WW-52](#)

FRONT WIPER DRIVE ASSEMBLY [WW-65](#)

FRONT WIPER MOTOR GROUND CIRCUIT
[WW-41](#)

FRONT WIPER MOTOR HI CIRCUIT [WW-39](#)

FRONT WIPER MOTOR LO CIRCUIT	WW-38
FRONT WIPER STOP POSITION SIGNAL CIRCUIT WW-40	
FUEL FILLER LID OPENER	DLK-281
FUEL INJECTOR.....	EC-472, EC-849
FUEL INJECTOR AND FUEL TUBE	EM-49
FUEL LEVEL SENSOR SIGNAL CIRCUIT	MWI-67
FUEL LEVEL SENSOR UNIT	FL-23
FUEL LEVEL SENSOR UNIT, FUEL FILTER AND FUEL PUMP ASSEMBLY	FL-6
FUEL LID LOCK ACTUATOR.....	DLK-185
FUEL PRESSURE.....	EC-166, EC-651
FUEL PUMP	EC-475, EC-852
FUEL SYSTEM.....	FL-5
FUEL TANK	FL-13
FUSE BLOCK - JUNCTION BOX (J/B)	PG-78
FUSE INSPECTION	PG-88
FUSE, FUSIBLE LINK AND RELAY BOX	PG-79
FUSIBLE LINK INSPECTION.....	PG-92

G

GENERAL MAINTENANCE	MA-6
GENERATOR	CHG-23
GLASS LID	RF-49
GLOVE BOX ASSEMBLY	IP-26
GLOVE BOX LAMP	INL-62
GPS ANTENNA.....	AV-456
GROUND.....	PG-39
GROUND CIRCUIT	DLK-223

H

HALF LATCH SWITCH.....	DLK-211
HANDLING PRECAUTION	DAS-19, DAS-104
HANDLING PRECAUTIONS FOR PLASTICS	BRM-4
HARNESS	PG-54
HAZARD FUNCTION	DLK-204
HAZARD SWITCH.....	EXL-131, EXL-152
HEADLAMP	EXL-22, EXL-141
HEADLAMP (HI) CIRCUIT	EXL-112
HEADLAMP (LO) CIRCUIT	EXL-114
HEADLAMP FUNCTION	SEC-138
HEADLINING.....	INT-26
HEADREST DISPLAY UNIT.....	AV-251, AV-435
HEATED SEAT SYSTEM	SE-29
HEATED STEERING WHEEL	ST-13
HEATED STEERING WHEEL SWITCH INDICATOR LAMP	ST-38
HEATED STEERING WHEEL SYSTEM	ST-34
HEATER AND AIR CONDITIONING SYSTEM SYMPTOMS	HA-17
HEATING AND COOLING UNIT ASSEMBLY	HA-41
HEAVY TIGHT-CORNER BRAKING SYMPTOM OCCURS	DLN-65
HIGH-MOUNTED STOP LAMP.....	EXL-155

HILL DESCENT CONTROL SWITCH	BRC-327
HOMELINK UNIVERSAL TRANSCEIVER	DLK-106
HOOD	DLK-246
HOOD LOCK	DLK-269
HOOD SWITCH.....	DLK-224, SEC-139
HORIZONTAL SYNCHRONIZING (HP) SIGNAL CIRCUIT	AV-165
HORN	HRN-3, HRN-7
HORN FUNCTION.....	SEC-141
HOW TO ERASE PERMANENT DTC	EC-174, TM-316
HOW TO FOLLOW TROUBLE DIAGNOSES ..	GI-6
HOW TO READ WIRING DIAGRAMS	GI-9
HOW TO SET SRT CODE.....	EC-168, EC-653
HOW TO USE THIS MANUAL	GI-3
HOW TO USE THIS SECTION	LAN-10, LAN-26
HVAC BRANCH LINE CIRCUIT	LAN-94, LAN-141, LAN-157, LAN-179, LAN-211, LAN-240, LAN-258, LAN-277, LAN-301, LAN-334
HYDRAULIC LINE	ST-55
HYDRAULIC PUMP ELECTRIC POWER STEERING SYSTEM	STC-14
HYDRAULIC PUMP ELECTRIC POWER STEERING WARNING LAMP	STC-30
HYDRAULIC PUMP ELECTRIC POWER STEERING WARNING LAMP DOES NOT TURN OFF	STC-32
HYDRAULIC PUMP ELECTRIC POWER STEERING WARNING LAMP DOES NOT TURN ON	STC-31
Hill descent control INDICATOR LAMP	BRC-305
Hill descent control SWITCH	BRC-298

I

ID REGISTRATION PROCEDURE	WT-30
IDENTIFICATION INFORMATION.....	GI-23
IDLE AIR VOLUME LEARNING ...	EC-158, EC-643
IDLE SPEED.....	EC-503, EC-880
IGNITION COIL	EM-42
IGNITION SIGNAL.....	EC-479, EC-856
IGNITION TIMING	EC-504, EC-881
ILLUMINATION	INL-27
ILLUMINATION CONTROL SWITCH	INL-68
ILLUMINATION CONTROL SWITCH SIGNAL CIRCUIT	MWI-63
IMAGE SWITCH SIGNAL CIRCUIT	AV-399
IMMOBILIZER CONTROL MODULE	SEC-154
IN-CABIN MICROFILTER.....	VTL-6
IN-VEHICLE SENSOR	HAC-158
INFORMATION DISPLAY (ASCD)	EC-484, EC-861
INPUT SPEED SENSOR.....	TM-215, TM-432
INSIDE KEY ANTENNA	DLK-286
INSIDE MIRROR	MIR-8, MIR-16
INSTRUMENT LOWER PANEL LH.....	IP-25
INSTRUMENT PANEL ASSEMBLY.....	IP-14

INSTRUMENT PANEL SPEAKER/TWEETER	AV-34, AV-48, AV-150, AV-194, AV-375, AV-440
INSUFFICIENT COOLING	HAC-147
INSUFFICIENT HEATING	HAC-149
INTAKE MANIFOLD	EM-29
INTAKE MANIFOLD COLLECTOR	EM-26
INTAKE SENSOR	HAC-160
INTEGRATED HOMELINK TRANSMITTER	DLK-226
INTELLIGENT KEY	DLK-201
INTELLIGENT KEY BATTERY	DLK-291
INTELLIGENT KEY BUTTON OPERATION HAS POOR RANGE (ALL KEYS)	DLK-238
INTELLIGENT KEY BUTTON OPERATION HAS POOR RANGE (ONE KEY)	DLK-245
INTELLIGENT KEY SYSTEM	DLK-74
INTELLIGENT KEY SYSTEM ALL FUNCTIONS CANNOT OPERATE (ALL KEYS)	DLK-234
INTELLIGENT KEY SYSTEM ALL FUNCTIONS CANNOT OPERATE (ONE KEY)	DLK-243
INTELLIGENT KEY SYSTEM SYMPTOMS	DLK-228, SEC-145
INTELLIGENT KEY WARNING BUZZER	DLK-199, DLK-288
INTERIOR LIGHTING SYSTEM SYMPTOMS	INL-58
INTERIOR ROOM LAMP CONTROL CIRCUIT	INL-52
INTERIOR ROOM LAMP CONTROL SYSTEM	INL-12
INTERMITTENT INCIDENT	SRC-44
INVERTER UNIT	PWO-14, PWO-16, PWO-32
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	PCS-12, PCS-21, PCS-32, PG-83
IPDM-E BRANCH LINE CIRCUIT	LAN-85, LAN-135, LAN-150, LAN-172, LAN-203, LAN-234, LAN-251, LAN-270, LAN-294, LAN-326
ITS COMMUNICATION CIRCUIT	LAN-114, LAN-191, LAN-228, LAN-314, LAN-352

K

KEY CYLINDER	DLK-283
KEY WARNING LAMP	DLK-203
KEYLESS POWER WINDOW DOWN DOES NOT OPERATE	PWC-58, PWC-133

L

L TERMINAL CIRCUIT (OPEN)	CHG-18
L TERMINAL CIRCUIT (SHORT)	CHG-20
LATCH (LOWER ANCHORS AND TETHER FOR CHILDREN) SYSTEM	SB-19
LICENSE PLATE LAMP	EXL-157
LIFTING MOTOR (FRONT)	ADP-146
LIFTING MOTOR (REAR)	ADP-148
LIFTING POINT	GI-33
LIFTING SENSOR (FRONT)	ADP-125

LIFTING SENSOR (REAR)	ADP-128
LIFTING SWITCH (FRONT)	ADP-99
LIFTING SWITCH (REAR)	ADP-102
LIGHTING & TURN SIGNAL SWITCH	EXL-151
LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON	WT-54
LOW TIRE PRESSURE WARNING LAMP STAYS ON	WT-55
LUBRICATION SYSTEM	LU-6
LUGGAGE FLOOR TRIM	INT-30
LUMBAR SUPPORT SYSTEM	SE-25

M

M&A BRANCH LINE CIRCUIT	LAN-95, LAN-142, LAN-158, LAN-180, LAN-212, LAN-241, LAN-259, LAN-278, LAN-302, LAN-335
MAGNET CLUTCH	HAC-133
MAIN LINE BETWEEN ABS AND DLC CIRCUIT	LAN-74, LAN-133, LAN-148, LAN-165, LAN-194, LAN-231, LAN-248, LAN-267, LAN-287, LAN-317
MAIN LINE BETWEEN ADP AND PWBD CIRCUIT	LAN-78, LAN-167, LAN-197, LAN-289, LAN-320
MAIN LINE BETWEEN AVM AND SONAR CIRCUIT	LAN-83, LAN-201, LAN-324
MAIN LINE BETWEEN DLC AND 4WD CIRCUIT	LAN-75, LAN-232, LAN-249, LAN-268
MAIN LINE BETWEEN DLC AND ADP CIRCUIT	LAN-76, LAN-166, LAN-196, LAN-288, LAN-318
MAIN LINE BETWEEN DLC AND CGW CIRCUIT	LAN-77, LAN-195, LAN-319
MAIN LINE BETWEEN IPDM-E AND ABS CIRCUIT	LAN-73, LAN-132, LAN-147, LAN-164, LAN-193, LAN-230, LAN-247, LAN-266, LAN-286, LAN-316
MAIN LINE BETWEEN PWBD AND BSW/BUZZER CIRCUIT	LAN-79, LAN-168, LAN-198, LAN-290, LAN-321
MAIN LINE BETWEEN RDR-L AND AVM CIRCUIT	LAN-82, LAN-200, LAN-323
MAIN LINE BETWEEN RDR-L AND SONAR CIRCUIT	LAN-81, LAN-170, LAN-292
MAIN LINE BETWEEN RDR-R AND RDR-L CIRCUIT	LAN-80, LAN-169, LAN-199, LAN-291, LAN-322
MAIN POWER SUPPLY AND GROUND CIRCUIT	TM-176, TM-394
MAIN POWER WINDOW AND DOOR LOCK/ UNLOCK SWITCH	PWC-61, PWC-136
MALFUNCTION AREA CHART	LAN-71
MALFUNCTION INDICATOR LAMP	EC-485, EC-862
METER BUZZER CIRCUIT	DLK-202, WCS-30
METER SYSTEM	MWI-31
MICROPHONE	AV-199, AV-447
MICROPHONE SIGNAL CIRCUIT	AV-174, AV-401
MID AUDIO SYSTEM	AV-86

MIRROR SENSOR ADP-137
 MIXTURE RATIO SELF-LEARNING VALUE CLEAR
 EC-160, EC-645
 MOONROOF DOES NOT OPERATE PROPERLY .
 RF-38
 MOONROOF MOTOR ASSEMBLY...RF-14, RF-50
 MOONROOF SWITCH.....RF-32, RF-61
 MOONROOF SYSTEMRF-16
 MOONROOF UNIT ASSEMBLY.....RF-51
 MULTI AV SYSTEM.....AV-180, AV-412
 MULTIFUNCTION SWITCH AV-189, AV-431

N

NATS ANTENNA AMP..... SEC-152
 NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS
 SEC-44
 NO OUTPUT FROM AC 120 V OUTLET ..PWO-29
 NOISEHA-20
 NOISE, VIBRATION AND HARSHNESS (NVH)
 TROUBLESHOOTINGBR-6, DLN-69, DLN-100,
 DLN-113, FAX-5, FSU-3, RAX-4, RSU-4, ST-42,
 WT-57
 NORMAL OPERATING CONDITION ADP-162,
 AV-42, AV-184, AV-419, BCS-80, BRC-154,
 BRC-316, DAS-87, DAS-172, EC-502, EC-879,
 EXL-135, MWI-84, PWO-31, WW-51

O

OCCUPANT CLASSIFICATION SYSTEM.....SR-31
 OD OFF INDICATOR LAMP TM-182, TM-400
 OILHA-25
 OIL COOLER.....LU-15
 OIL FILTER.....LU-10
 OIL PAN.....TM-206, TM-424
 OIL PAN AND OIL STRAINER EM-36
 OIL PUMPLU-12
 OIL SEAL.....EM-90
 ON BOARD DIAGNOSTIC (OBD) SYSTEM EC-60,
 EC-552, TM-46, TM-267
 ON BOARD REFUELING VAPOR RECOVERY
 (ORVR)..... EC-486, EC-863
 OPERATION... DAS-17, DAS-102, EC-58, EC-550,
 HAC-31
 OPERATION INSPECTION..... HAC-74
 OPTICAL SENSOREXL-128, EXL-150
 OUTPUT SPEED SENSOR TM-217, TM-434
 OUTSIDE KEY ANTENNADLK-287
 OUTSIDE KEY ANTENNA (DRIVER SIDE)DLK-164
 OUTSIDE KEY ANTENNA (PASSENGER SIDE) ...
 DLK-162
 OUTSIDE KEY ANTENNA (REAR BUMPER)
 DLK-166
 OVERDRIVE CONTROL SWITCHTM-179, TM-397
 OVERHEATING CAUSE ANALYSIS CO-6

P

P0011, P0021 IVT CONTROL EC-194, EC-672
 P0014, P0024 EVT CONTROL EC-198
 P0030, P0031, P0032, P0036, P0051, P0052 A/F
 SENSOR 1 HEATER EC-204
 P0031, P0032, P0051, P0052 A/F SENSOR 1
 HEATER EC-676
 P0037, P0038, P0057, P0058 HO2S2 HEATER
 EC-207, EC-679
 P0075, P0081 IVT CONTROL SOLENOID VALVE .
 EC-210, EC-682
 P0078, P0084 EVT CONTROL SOLENOID VALVE
 EC-214
 P0101 MAF SENSOR..... EC-217
 P0102, P0103 MAF SENSOR EC-222, EC-684
 P0111 IAT SENSOR EC-227
 P0112, P0113 IAT SENSOR EC-229, EC-688
 P0116 ECT SENSOR EC-231
 P0117, P0118 ECT SENSOR EC-233, EC-690
 P0122, P0123 TP SENSOR EC-235, EC-692
 P0125 ECT SENSOR EC-238
 P0127 IAT SENSOR..... EC-240
 P0128 THERMOSTAT FUNCTION..... EC-242
 P0130, P0150 A/F SENSOR 1 EC-245, EC-694
 P0131, P0151 A/F SENSOR 1 EC-249, EC-698
 P0132, P0152 A/F SENSOR 1 EC-252, EC-701
 P0137, P0157 HO2S2 EC-255, EC-704
 P0138, P0158 HO2S2 EC-261, EC-710
 P0139, P0159 HO2S2 EC-268, EC-717
 P0141, P0161 HEATED OXYGEN SENSOR 2
 HEATER EC-274
 P014C, P014D, P014E, P014F A/F SENSOR 1.....
 EC-723
 P014C, P014D, P014E, P014F, P015A, P015B,
 P015C, P015D A/F SENSOR 1 EC-277
 P0171, P0174 FUEL INJECTION SYSTEM
 FUNCTION EC-283, EC-728
 P0172, P0175 FUEL INJECTION SYSTEM
 FUNCTION EC-287, EC-732
 P0181 FTT SENSOR..... EC-291
 P0182, P0183 FTT SENSOR EC-295
 P0196 EOT SENSOR..... EC-297
 P0197, P0198 EOT SENSOR EC-301, EC-736
 P0222, P0223 TP SENSOR EC-303, EC-738
 P0300, P0301, P0302, P0303, P0304, P0305,
 P0306 MISFIRE..... EC-306, EC-740
 P0327, P0328, P0332, P0333 KS EC-312, EC-746
 P0335 CKP SENSOR (POS)..... EC-314, EC-748
 P0340, P0345 CMP SENSOR (PHASE) ... EC-317,
 EC-751
 P0420, P0430 THREE WAY CATALYST FUNCTION
 EC-321, EC-754
 P0441 EVAP CONTROL SYSTEM..... EC-326
 P0443 EVAP CANISTER PURGE VOLUME
 CONTROL SOLENOID VALVE EC-331
 P0444 EVAP PURGE CONTROL VALVE... EC-759

P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE.....	EC-336
P0447 EVAP CANISTER VENT CONTROL VALVE	EC-339 , EC-762
P0448 EVAP CANISTER VENT CONTROL VALVE	EC-342
P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR.....	EC-346
P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR.....	EC-349 , EC-765
P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR.....	EC-352 , EC-768
P0456 EVAP CONTROL SYSTEM.....	EC-356
P0460 FUEL LEVEL SENSOR.....	EC-362
P0461 FUEL LEVEL SENSOR.....	EC-363
P0462, P0463 FUEL LEVEL SENSOR.....	EC-365
P0500 VSS.....	EC-366 , EC-772
P0506 ISC SYSTEM.....	EC-368 , EC-774
P0507 ISC SYSTEM.....	EC-370 , EC-776
P050A, P050E COLD START CONTROL...	EC-372
P0520 EOP SENSOR.....	EC-374 , EC-778
P0524 ENGINE OIL PRESSURE	EC-377 , EC-781
P052A, P052B, P052C, P052D INTAKE VALVE TIMING CONTROL.....	EC-380
P0603 ECM POWER SUPPLY.....	EC-784
P0603, P062F ECM.....	EC-386
P0604 ECM.....	EC-388
P0605 ECM.....	EC-389 , EC-786
P0606 ECM.....	EC-390
P0607 ECM.....	EC-391 , EC-788
P060A ECM.....	EC-392
P060B ECM.....	EC-393
P062F EEPROM.....	TM-106 , TM-326
P0643 SENSOR POWER SUPPLY	EC-394 , EC-789
P0705 TRANSMISSION RANGE SENSOR A.....	TM-107 , TM-327
P0706 TRANSMISSION RANGE SENSOR A.....	TM-113 , TM-333
P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A.....	TM-116 , TM-336
P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A.....	TM-118 , TM-339
P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A.....	TM-120 , TM-341
P0715 INPUT SPEED SENSOR	ATM-122 , TM-343
P0717 INPUT SPEED SENSOR	ATM-125 , TM-346
P0740 TORQUE CONVERTER...	TM-128 , TM-349
P0743 TORQUE CONVERTER...	TM-130 , TM-351
P0744 TORQUE CONVERTER...	TM-132 , TM-353
P0746 PRESSURE CONTROL SOLENOID A.....	TM-134 , TM-355
P0776 PRESSURE CONTROL SOLENOID B.....	TM-136 , TM-357
P0778 PRESSURE CONTROL SOLENOID B.....	TM-138 , TM-359
P0779 PRESSURE CONTROL SOLENOID B.....	TM-140 , TM-361
P0841 TRANSMISSION FLUID PRESSURE SEN/ SW A.....	TM-142 , TM-363
P0847 TRANSMISSION FLUID PRESSURE SEN/ SW B.....	TM-143 , TM-364
P0848 TRANSMISSION FLUID PRESSURE SEN/ SW B.....	TM-145 , TM-366
P084C TRANSMISSION FLUID PRESSURE SEN/ SW H.....	TM-147 , TM-368
P084D TRANSMISSION FLUID PRESSURE SEN/ SW H.....	TM-149 , TM-370
P0850 PNP SWITCH.....	EC-396 , EC-791
P0863 TCM COMMUNICATION ..	TM-151 , TM-372
P0890 TCM.....	TM-152 , TM-373
P0962 PRESSURE CONTROL SOLENOID A.....	TM-154 , TM-375
P0963 PRESSURE CONTROL SOLENOID A.....	TM-156 , TM-377
P0965 PRESSURE CONTROL SOLENOID B.....	TM-158 , TM-379
P0966 PRESSURE CONTROL SOLENOID B.....	TM-160 , TM-381
P0967 PRESSURE CONTROL SOLENOID B.....	TM-162 , TM-383
P1078, P1084 EVT CONTROL POSITION SENSOR	EC-399
P1148, P1168 CLOSED LOOP CONTROL	EC-403
P1212 TCS COMMUNICATION LINE.....	EC-404 , EC-794
P1217 ENGINE OVER TEMPERATURE ...	EC-405 , EC-795
P1225 TP SENSOR.....	EC-408 , EC-798
P1226 TP SENSOR.....	EC-409 , EC-799
P1564 ASCD STEERING SWITCH	EC-410 , EC-800
P1572 ASCD BRAKE SWITCH.....	EC-413 , EC-803
P1574 ASCD VEHICLE SPEED SENSOR	EC-419 , EC-809
P1610 LOCK MODE.....	SEC-78
P1611 ID DISCORD, IMMU-ECM.....	SEC-79
P1612 CHAIN OF ECM-IMMU.....	SEC-80
P1614 CHAIN OF IMMU-KEY.....	SEC-81
P1700 CVT CONTROL SYSTEM	EC-421 , EC-811
P1715 INPUT SPEED SENSOR (PRIMARY SPEED SENSOR).....	EC-422 , EC-812
P17F0 CVT JUDDER (T/M INSPECTION)	TM-164
P17F1 CVT JUDDER (C/V INSPECTION)...	TM-165
P17F2 CVT JUDDER (T/C INSPECTION)...	TM-166
P1800 VIAS CONTROL SOLENOID VALVE 1.....	EC-423 , EC-813
P1801 VIAS CONTROL SOLENOID VALVE 2.....	EC-425 , EC-815
P1804 4WD CONTROL UNIT.....	DLN-56
P1805 BRAKE SWITCH.....	EC-427 , EC-817
P181F INCOMPLETE CALIBRATION.....	DLN-57

P2096, P2097, P2098, P2099 A/F SENSOR 1 EC-429	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH PWC-62, PWC-137
P2100, P2103 THROTTLE CONTROL MOTOR RELAY EC-433, EC-819	POWER WINDOW LOCK SWITCH PWC-50, PWC-117
P2101 ELECTRIC THROTTLE CONTROL FUNCTION EC-435, EC-821	POWER WINDOW LOCK SWITCH DOES NOT FUNCTION PWC-59, PWC-134
P2118 THROTTLE CONTROL MOTOR.....EC-438, EC-824	POWER WINDOW MAIN SWITCH PWC-15, PWC-74
P2119 ELECTRIC THROTTLE CONTROL ACTUATOR EC-440, EC-826	POWER WINDOW MOTOR PWC-38, PWC-103
P2122, P2123 APP SENSOR EC-442, EC-828	POWER WINDOW RETAINED POWER FUNCTION DOES NOT OPERATE NORMALLY ... PWC-57
P2127, P2128 APP SENSOR EC-445, EC-830	POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY PWC-131
P2135 TP SENSOR EC-448, EC-833	POWER WINDOW SERIAL LINK..... PWC-118
P2138 APP SENSOR EC-451, EC-835	POWER WINDOW SWITCH DOES NOT ILLUMINATE PWC-60, PWC-135
P219A, P219B AIR FUEL RATIO EC-454	POWER WINDOW SYSTEM..... PWC-17, PWC-79
P2610 ECM INTERNAL TIMER EC-459	POWER WINDOWS DO NOT OPERATE WITH POWER WINDOW MAIN SWITCH PWC-51, PWC-122
P2765 INPUT SPEED SENSOR B TM-167, TM-385	PRE-INSPECTION FOR DIAGNOSIS..... DAS-50, DAS-135
P2813 SELECT SOLENOID TM-170, TM-388	PRECAUTION SN-3
P2814 SELECT SOLENOID TM-172, TM-390	PRECAUTIONS ACC-2, ADP-5, AV-9, AV-52, AV-206, BCS-3, BR-3, BRC-7, BRC-165, BRM-3, CCS-2, CHG-2, CO-2, DAS-6, DAS-92, DEF-3, DLK-8, DLN-5, DLN-98, DLN-107, EC-14, EC-510, EM-3, EX-2, EXL-4, EXT-3, FAX-2, FL-2, FSU-2, GI-28, GW-2, HA-3, HAC-5, HRN-2, INL-3, INT-3, IP-2, LAN-11, LAN-27, LAN-116, LU-2, MA-3, MIR-2, MWI-4, PB-2, PCS-3, PCS-33, PG-2, PWC-6, PWC-64, PWO-3, PWO-10, RAX-2, RF-3, RSU-2, SB-2, SE-3, SEC-4, SR-2, SRC-4, ST-3, STC-3, STR-2, TM-10, TM-233, VTL-3, WCS-3, WT-3, WW-3
P2815 SELECT SOLENOID TM-174, TM-392	PREMIUM AUDIO SYSTEM AV-258
PANORAMIC ROOF GLASS GW-26	PRIMARY SPEED SENSOR TM-216, TM-433
PARKING BRAKE CONTROL PB-7	PROCEDURE FOR TEMPORARILY DISABLING THE IGNITION BATTERY SAVER SYSTEM PCS-57
PARKING BRAKE SHOE PB-6, PB-9	PROPELLER SHAFT ASSEMBLY DLN-101
PARKING BRAKE SWITCH BRC-139, BRC-300	PTC HEATER HA-49, HAC-136
PARKING BRAKE SWITCH SIGNAL CIRCUIT MWI-71	PTC HEATER RELAY HAC-134
PARKING BRAKE SYSTEM PB-4	PUSH BUTTON IGNITION SWITCH PCS-85
PARKING LAMP CIRCUIT EXL-121	PUSH-BUTTON IGNITION SWITCH PCS-78, SEC-153
PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM EXL-68	PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE PCS-83
PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON. EXL-138	PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT INL-56
PASSENGER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE DEF-49	PWBD BRANCH LINE CIRCUIT LAN-100, LAN-184, LAN-216, LAN-282, LAN-307, LAN-340
PERFORMANCE TEST HA-28	
PERIODIC MAINTENANCE MA-10	
PERSONAL LAMP INL-66	
PLUG TM-225, TM-442	
POSITIVE CRANKCASE VENTILATION ... EC-507, EC-884	
POWER DISTRIBUTION SYSTEM PCS-44	
POWER DOOR LOCK SYSTEM DLK-61	
POWER SEAT FOR DRIVER SIDE WITHOUT AUTOMATIC DRIVE POSITIONER SE-17	
POWER SEAT FOR PASSENGER SIDE SE-21	
POWER SEAT SWITCH ADP-166	
POWER SEAT SWITCH GROUND CIRCUIT ADP-117	
POWER SOCKET PWO-6, PWO-9	
POWER STEERING CONTROL MODULE STC-11, STC-38	
POWER STEERING FLUID ST-18, ST-43	
POWER STEERING OIL PUMP ST-22, ST-53, ST-65	
POWER SUPPLY ROUTING CIRCUIT PG-15	

Q

QUARTER WINDOW GLASS [GW-24](#)

R

RADIATOR [CO-15](#)
RADIATOR CORE SUPPORT [DLK-250](#)
RADIUS ROD [RSU-12](#)
RCTA SYSTEM SYMPTOMS [DAS-171](#)
RDR-L BRANCH LINE CIRCUIT [LAN-106](#), [LAN-188](#),
[LAN-222](#), [LAN-311](#), [LAN-346](#)
RDR-R BRANCH LINE CIRCUIT [LAN-105](#), [LAN-187](#),
[LAN-221](#), [LAN-310](#), [LAN-345](#)
REAR AIR CONTROL [HAC-155](#)
REAR AUTOMATIC AIR CONDITIONING SYSTEM
[HAC-146](#)
REAR AUXILIARY INPUT JACKS [AV-453](#)
REAR BLOWER MOTOR [HAC-138](#)
REAR BUMPER [EXT-20](#)
REAR CAMERA IMAGE SIGNAL CIRCUIT [AV-407](#)
REAR COMBINATION LAMP ... [EXL-153](#), [EXL-160](#)
REAR CROSS TRAFFIC AREA [DAS-119](#)
REAR DIFFERENTIAL GEAR OIL [DLN-114](#)
REAR DISC BRAKE [BR-12](#), [BR-18](#), [BR-40](#), [BR-47](#)
REAR DOOR [DLK-258](#)
REAR DOOR FINISHER [INT-17](#)
REAR DOOR GLASS AND REGULATOR... [GW-19](#)
REAR DOOR LOCK [DLK-276](#)
REAR DOOR SPEAKER [AV-36](#), [AV-49](#), [AV-152](#),
[AV-195](#), [AV-384](#), [AV-442](#)
REAR DRIVE SHAFT [RAX-6](#), [RAX-9](#), [RAX-11](#)
REAR FINAL DRIVE ASSEMBLY [DLN-127](#),
[DLN-130](#)
REAR LH SIDE POWER WINDOW ALONE DOES
NOT OPERATE [PWC-54](#), [PWC-125](#)
REAR LOWER LINK & COIL SPRING [RSU-8](#)
REAR POWER WINDOW MOTOR [GW-23](#)
REAR POWER WINDOW SWITCH [PWC-63](#),
[PWC-138](#)
REAR PROPELLER SHAFT [DLN-102](#)
REAR RH SIDE POWER WINDOW ALONE DOES
NOT OPERATE [PWC-55](#), [PWC-126](#)
REAR SHOCK ABSORBER [RSU-10](#), [RSU-22](#)
REAR SPEAKER [AV-387](#)
REAR SPEAKERS [AV-443](#)
REAR SPOILER [EXT-41](#)
REAR STABILIZER [RSU-15](#)
REAR SUSPENSION ARM [RSU-17](#)
REAR SUSPENSION ASSEMBLY [RSU-5](#)
REAR SUSPENSION MEMBER [RSU-19](#)
REAR TIMING CHAIN CASE [EM-75](#)
REAR VIEW CAMERA [AV-201](#), [AV-450](#)
REAR WASHER NOZZLE AND TUBE [WW-70](#)
REAR WHEEL HUB [RAX-7](#)

REAR WINDOW DEFOGGER AND DOOR
MIRROR DEFOGGER DO NOT OPERATE.
[DEF-44](#)
REAR WINDOW DEFOGGER DOES NOT
OPERATE BUT BOTH OF DOOR MIRROR
DEFOGGER OPERATE [DEF-45](#)
REAR WINDOW DEFOGGER POWER SUPPLY
AND GROUND CIRCUIT [DEF-33](#)
REAR WINDOW DEFOGGER RELAY [DEF-31](#)
REAR WINDOW DEFOGGER SWITCH [DEF-26](#)
REAR WINDOW DEFOGGER SWITCH DOES NOT
LIGHT, BUT REAR WINDOW DEFOGGER
OPERATES [DEF-50](#)
REAR WINDOW DEFOGGER SYSTEM [DEF-10](#)
REAR WIPER AND WASHER SYSTEM [WW-29](#)
REAR WIPER ARM [WW-67](#)
REAR WIPER MOTOR [WW-69](#)
REAR WIPER MOTOR CIRCUIT [WW-45](#)
REAR WIPER STOP POSITION SIGNAL CIRCUIT
[WW-47](#)
RECLINING MOTOR [ADP-144](#)
RECLINING SENSOR [ADP-122](#)
RECLINING SWITCH [ADP-96](#)
RECOMMENDED CHEMICAL PRODUCTS AND
SEALANTS [GI-22](#)
RECOMMENDED FLUIDS AND LUBRICANTS
[MA-17](#)
REFRIGERANT [HA-21](#)
REFRIGERANT PRESSURE SENSOR [EC-490](#),
[EC-867](#), [HAC-161](#)
REFRIGERATION SYSTEM SYMPTOMS [HA-18](#)
REMOTE KEYLESS ENTRY RECEIVER [DLK-191](#),
[DLK-290](#)
REPAIRING HIGH STRENGTH STEEL [BRM-8](#)
REPAIRING MATERIAL [BRM-11](#)
REPLACEMENT OPERATIONS [BRM-24](#)
RETAINED POWER OPERATION DOES NOT
OPERATE PROPERLY [RF-42](#)
RGB (B: BLUE) SIGNAL CIRCUIT [AV-162](#)
RGB (G: GREEN) SIGNAL CIRCUIT [AV-161](#)
RGB (R: RED) SIGNAL CIRCUIT [AV-160](#)
RGB AREA (YS) SIGNAL CIRCUIT [AV-164](#)
RGB SYNCHRONIZING SIGNAL CIRCUIT [AV-163](#)
RING GEAR SHAFT [DLN-81](#)
ROCKER COVER [EM-43](#)
ROOF RACK [EXT-37](#)
ROOF SIDE MOLDING [EXT-31](#)

S

S CONNECTOR CIRCUIT [STR-18](#)
S TERMINAL CIRCUIT [CHG-21](#)
SATELLITE AUDIO SIGNAL CIRCUIT [AV-156](#)
SATELLITE RADIO ANTENNA [AV-205](#), [AV-457](#)
SATELLITE RADIO TUNER [AV-82](#), [AV-200](#)
SATELLITE SENSOR [SR-24](#)

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT . WCS-31	SONAR BRANCH LINE CIRCUIT LAN-96, LAN-159, LAN-181, LAN-213, LAN-260, LAN-279, LAN-303, LAN-336
SEAT BELT INDCTR LAMP IS ON, PASS AIR BAG INDCTR IS ON OR OFF SRC-117	SONAR CONTROL UNIT SN-10, SN-34
SEAT BELT PRE-TENSIONER SR-29	SONAR SENSOR SN-35
SEAT BELT WARNING SYSTEM SRC-115	SONAR SYSTEM SN-13, SN-33
SEAT CUSHION THERMAL ELECTRIC DEVICE... SE-60	SPARK PLUG EM-16
SEAT CUSHION THERMAL ELECTRIC DEVICE SENSOR SE-62	SPINDLE MOTOR DLK-218
SEAT MEMORY INDICATOR ADP-159	SPIRAL CABLE SR-15
SEAT MEMORY SWITCH ADP-109, ADP-165	SQUEAK AND RATTLE TROUBLE DIAGNOSES .. EXT-10, GW-5, INT-9, IP-8, MIR-10, RF-43, SE-71
SEATBACK THERMAL ELECTRIC DEVICE SE-56	SRS AIR BAG SYSTEM SRC-26
SEATBACK THERMAL ELECTRIC DEVICE SENSOR SE-58	SRS AIR BAG WARNING LAMP DOES NOT TURN OFF SRC-114
SECOND ROW SEAT SE-128	SRS AIR BAG WARNING LAMP DOES NOT TURN ON SRC-113
SECOND ROW SEAT BELT SB-13	STALL TEST TM-95, TM-314
SECOND ROW SEATS SE-95	STARTER MOTOR STR-20, STR-21
SECURITY INDICATOR LAMP SEC-143	STARTING SYSTEM STR-5, STR-6, STR-19
SENSOR POWER SUPPLY2 CIRCUIT EC-492, EC-869	STEERING ANGLE SENSOR . BRC-164, BRC-325
SENSOR ROTOR BRC-159, BRC-321	STEERING COLUMN ST-10, ST-21, ST-41, ST-47
SERVICE AFTER REPLACING OR REMOVING ENGINE PARTS EC-153, EC-638	STEERING COLUMN COVERS IP-17
SERVICE DATA AND SPECIFICATIONS (SDS)..... ACC-5, BR-50, CHG-25, CO-28, DLN-97, DLN-106, DLN-135, EC-509, EC-886, EM-138, EXL-161, FAX-31, FL-25, FSU-21, HA-50, INL-69, LU-17, PB-12, PG-97, PWO-35, RAX-17, RSU-23, ST-66, TM-232, TM-449, WT-67, WW-72	STEERING GEAR AND LINKAGE ... ST-23, ST-49, ST-58, ST-62
SERVICE INFORMATION FOR ELECTRICAL INCIDENT GI-43	STEERING KNUCKLE FSU-15
SHIFT LOCK SYSTEM TM-186, TM-404	STEERING SWITCH AV-38, AV-45, AV-177, AV-191, AV-403, AV-433, MWI-72
SHIFT POSITION INDICATOR CIRCUIT .. TM-178, TM-396	STEERING WHEEL ST-19, ST-45
SHIPPING MODE CANCEL OPERATION . BCS-67	STEERING WHEEL TURNING FORCE IS HEAVY OR LIGHT STC-33
SIDE AIR BAG MODULE SE-92	STEP LAMP CIRCUIT INL-54
SIDE CAMERA AV-451	STOP LAMP EXL-80
SIDE CAMERA FINISHER MIR-22	STRG BRANCH LINE CIRCUIT LAN-97, LAN-143, LAN-160, LAN-182, LAN-214, LAN-242, LAN-261, LAN-280, LAN-304, LAN-337
SIDE CAMERA LH IMAGE SIGNAL CIRCUIT AV-410	STRUCTURE AND OPERATION DLN-13, DLN-110, EC-35, EC-530, TM-26, TM-248
SIDE CAMERA RH IMAGE SIGNAL CIRCUIT AV-411	SUBWOOFER AV-390, AV-444
SIDE CURTAIN AIR BAG MODULE SR-20	SUNLOAD SENSOR HAC-159
SIDE GUARD MOLDING EXT-35	SUNSHADE RF-57
SIDE OIL SEAL DLN-118	SUNSHADE MOTOR ASSEMBLY RF-15, RF-59
SIDE RADAR DAS-89, DAS-175	SUNSHADE SWITCH RF-34, RF-62
SIDE RADAR LH DAS-29, DAS-114	SUNSHADE SYSTEM DOES NOT OPERATE PROPERLY RF-39
SIDE RADAR RH DAS-31, DAS-116	SYSTEM (AUTOMATIC BACK DOOR SYSTEM) ... DLK-38
SILL MOLDING EXT-40	SYSTEM (INTEGRATED HOMELINK TRANSMITTER) DLK-45
SLIDING MOTOR ADP-142	SYSTEM (INTELLIGENT KEY SYSTEM) .. DLK-21
SLIDING SENSOR ADP-119	SYSTEM INITIALIZATION PWC-92
SLIDING SWITCH ADP-93	SYSTEM SETTING HAC-78
SLIP INDICATOR LAMP BRC-145, BRC-307	
	T
	TCM TM-54, TM-204, TM-275, TM-422

TCM BRANCH LINE CIRCUIT...LAN-86, LAN-136,
 LAN-151, LAN-173, LAN-204, LAN-235,
 LAN-252, LAN-271, LAN-295, LAN-327

TELESCOPIC MOTORADP-152, ST-32

TELESCOPIC SENSORADP-134

TELESCOPIC SWITCHADP-107, ST-27

THE AMBIENT TEMPERATURE DISPLAY IS
 INCORRECTMWI-83

THE BACK DOOR OPEN WARNING CONTINUES
 DISPLAYING, OR DOES NOT DISPLAYMWI-81

THE BRAKING DISTANCE IS LONG BRC-150,
 BRC-312

THE DOOR OPEN WARNING CONTINUES
 DISPLAYING, OR DOES NOT DISPLAYMWI-80

THE FUEL GAUGE INDICATOR DOES NOT
 OPERATEMWI-74

THE ILLUMINATION CONTROL SWITCH IS
 INOPERATIVEMWI-75

THE LIGHT REMINDER WARNING DOES NOT
 SOUNDWCS-34

THE LOW WASHER FLUID WARNING
 CONTINUES DISPLAYING, or DOES NOT
 DISPLAYMWI-79

THE OIL PRESSURE WARNING CONTINUES
 DISPLAYING, OR DOES NOT DISPLAYMWI-77

THE PARKING BRAKE RELEASE WARNING
 CONTINUES DISPLAYING, OR DOES NOT
 DISPLAYMWI-78

THE PARKING BRAKE RELEASE WARNING
 CONTINUES SOUNDING, OR DOES NOT
 SOUNDWCS-36

THE SEAT BELT WARNING CONTINUES
 SOUNDING, OR DOES NOT SOUND.WCS-35

THE STEERING SWITCHES ARE INOPERATIVE
 MWI-82

THE TRIP RESET SWITCH IS INOPERATIVE
 MWI-76

THERMOSTAT AND THERMOSTAT HOUSING
 CO-24

THIRD ROW SEAT SE-138

THIRD ROW SEAT BELT SB-17

THIRD ROW SEATS SE-112

THROTTLE VALVE CLOSED POSITION
 LEARNINGEC-157, EC-642

TIGHTENING TORQUE OF STANDARD BOLTS...
 GI-19

TILT & TELESCOPIC SWITCH GROUND CIRCUIT
 ADP-118, ST-29

TILT MOTORADP-150, ST-30

TILT SENSORADP-131

TILT SWITCHADP-105, ST-25

TIMING CHAINEM-66

TIRE PRESSURE MONITORING SYSTEM WT-14

TIRE PRESSURE RECEIVER WT-66

TIRE PRESSURE SENSOR WT-62

TIRE SIZE INCORRECT IS DISPLAYED ON
 INFORMATION DISPLAYDLN-68

TOP TETHER STRAP CHILD RESTRAINT .SB-20

TORQUE CONVERTER AND CONVERTER
 HOUSING OIL SEAL TM-230, TM-447

TORSIONAL DAMPERDLN-116

TOUCH SENSORDLK-213

TOW MODE SWITCH TM-203, TM-421

TOW MODE SYSTEM TM-183, TM-401

TOW TRUCK TOWING GI-36

TPMS WT-53

TRAILER TOW EXL-94

TRANSFER ASSEMBLYDLN-75

TRANSFER CASEDLN-93

TRANSFER COVER DLN-74, DLN-77

TRANSFER OILDLN-70

TRANSMISSION ASSEMBLY TM-226, TM-443

TRANSVERSE LINKFSU-11

TRIP RESET AND ILLUMINATION CONTROL
 SWITCH MWI-86

TRIP RESET SWITCH SIGNAL CIRCUIT . MWI-65

TROUBLE DIAGNOSISLAN-14

TROUBLE DIAGNOSIS - SPECIFICATION VALUE
 EC-180, EC-658

TURN SIGNAL AND HAZARD WARNING LAMP
 SYSTEM EXL-59

TURN SIGNAL LAMP CIRCUIT EXL-125

U

U0073 COMMUNICATION BUS A OFFTM-97,
 TM-317

U0100 LOST COMMUNICATION (ECM A)..TM-98,
 TM-318

U0101 CAN COMM CIRCUITEC-192, EC-670

U0102 LOST COMMUNICATION (TRANSFER).....
 TM-99, TM-319

U0104 ADAS CAN 1DAS-67, DAS-152

U0121 VDC CAN 2.....DAS-68, DAS-153

U0140 LOST COMMUNICATION (BCM) ...TM-100,
 TM-320

U0141 LOST COMMUNICATION (BCM A)TM-101,
 TM-321

U0155 LOST COMMUNICATION (IPC)TM-102,
 TM-322

U0300 CAN COMMUNICATION DATA TM-103,
 TM-323

U0401 ECM CAN 1DAS-69, DAS-154

U0402 TCM CAN 1DAS-70, DAS-155

U0405 ADAS CAN 2DAS-71, DAS-156

U0415 VDC CAN 1.....DAS-72, DAS-157

U0415 VEHICLE SPEED SIG BCS-70

U1000 CAN COMM CIRCUITADP-79, AV-118,
 AV-316, BCS-68, BRC-135, BRC-294, DAS-63,
 DAS-148, DLK-115, DLN-58, EC-193, HAC-81,
 LAN-127, MWI-56, PCS-27, PCS-58, SN-23,
 SRC-45, STC-29, TM-104, TM-324

U1001 CAN COMM CIRCUITEC-671
 U1010 CONTROL UNIT (CAN)ADP-80, AV-119,
 AV-317, BCS-69, DAS-66, DAS-151, DLK-116,
 DLN-59, HAC-82, LAN-128, MWI-57, PCS-28,
 PCS-59, SN-24, SRC-46
 U1117 LOST COMMUNICATION (ABS).... TM-105,
 TM-325
 U1200 AV CONTROL UNIT..... AV-120, AV-318
 U1201 AV CONTROL UNIT..... AV-319
 U1202 AV CONTROL UNIT..... AV-320
 U1204 AV CONTROL UNIT..... AV-321
 U1205 AV CONTROL UNIT..... AV-322
 U1206 AV CONTROL UNIT..... AV-323
 U1207 AV CONTROL UNIT..... AV-324
 U1216 AV CONTROL UNIT..... AV-121, AV-325
 U1217 AV CONTROL UNIT..... AV-326
 U1218 AV CONTROL UNIT..... AV-122, AV-327
 U1219 AV CONTROL UNIT..... AV-123, AV-328
 U121A AV CONTROL UNIT..... AV-124, AV-329
 U121B AV CONTROL UNIT..... AV-125, AV-330
 U121C AV CONTROL UNIT..... AV-126, AV-331
 U121D AV CONTROL UNIT..... AV-127, AV-332
 U121E AV CONTROL UNIT..... AV-128, AV-333
 U1225 AV CONTROL UNIT..... AV-129, AV-334
 U1227 AV CONTROL UNIT..... AV-130, AV-335
 U1228 AV CONTROL UNIT..... AV-131, AV-336
 U1229 AV CONTROL UNIT..... AV-132, AV-337
 U122A AV CONTROL UNIT..... AV-133, AV-338
 U122E AV CONTROL UNIT..... AV-134, AV-339
 U1231 BOSE AMP..... AV-340
 U1232 STEERING ANGLE SENSOR..... AV-341
 U1243 DISPLAY UNIT..... AV-135, AV-342
 U1244 GPS ANTENNA..... AV-344
 U1255 SATELLITE RADIO TUNER..... AV-137
 U1258 SATELLITE RADIO ANTENNA..... AV-345
 U125A HEADREST DISPLAY UNIT..... AV-346
 U1263 USB..... AV-139, AV-347
 U1264 ANTENNA AMP..... AV-140, AV-348
 U1265 BOSE AMP..... AV-349
 U1300 AV COMM CIRCUIT..... AV-141, AV-350
 U1302 CAMERA POWER VOLT..... AV-351
 U1303 LED POWER SUPPLY VOLT..... AV-355
 U1304 CAMERA IMAGE CALIBRATION AV-357
 U1305 CONFIG UNFINISH..... AV-358
 U1310 AV CONTROL UNIT..... AV-142, AV-359
 U1503 SIDE RDR L CAN 2.....DAS-73, DAS-158
 U1504 SIDE RDR L CAN 1.....DAS-74, DAS-159
 U1505 SIDE RDR R CAN 2.....DAS-75, DAS-160
 U1506 SIDE RDR R CAN 1.....DAS-76, DAS-161
 U1507 LOST COMM(SIDE RDR R)..... DAS-77,
 DAS-162
 U1508 LOST COMM(SIDE RDR L)..... DAS-78,
 DAS-163
 U1601, U1603, U1609, U160B FRONT DOOR
 SPEAKER/TWEETER..... AV-360
 U1627, U162F TWEETER..... AV-361

U162A CENTER SPEAKER.....AV-362
 U1684, U168C REAR DOOR SPEAKER/TWEETER
 AV-363
 U175D WOOFER.....AV-364
 U176A, U1772 ROOF SPEAKER.....AV-365
 UNBALANCE STEERING WHEEL TURNING
 FORCE (TORQUE VARIATION) STC-36
 UNBALANCE STEERING WHEEL TURNING
 FORCE AND RETURN BETWEEN RIGHT AND
 LEFT STC-35
 UNEXPECTED BRAKE PEDAL REACTION.....
 BRC-149, BRC-311
 UNIT CHARACTERISTICS WRITING..... DLN-44
 UNLOCK SENSOR..... DLK-187
 USB CONNECTOR..... AV-179, AV-405
 USB INTERFACE..... AV-196, AV-445

V

VACUUM LINES..... BR-33
 VALVE TIMING CONTROL..... EM-54
 VANITY LAMP..... INL-61
 VARIABLE INDUCTION AIR SYSTEM..... EC-494,
 EC-871
 VDC OFF INDICATOR LAMP.. BRC-144, BRC-306
 VDC OFF SWITCH BRC-140, BRC-163, BRC-301,
 BRC-326
 VDC/TCS/ABS..... BRC-147, BRC-309
 VEHICLE DOES NOT ENTER 4WD MODEDLN-66
 VEHICLE JERKS DURING VDC/TCS/ABS
 CONTROL..... BRC-153, BRC-315
 VEHICLE SECURITY SYSTEM..... SEC-56
 VENTILATION SYSTEM..... VTL-7
 VERTICAL SYNCHRONIZING (VP) SIGNAL
 CIRCUIT..... AV-166
 VIDEO DISTRIBUTOR..... AV-247, AV-452
 VIN REGISTRATION..... EC-161, EC-646

W

WARNING CHIME SYSTEM..... WCS-17
 WARNING CHIME SYSTEM SYMPTOMS WCS-33
 WARNING SYSTEM SWITCH CIRCUIT ... DAS-82,
 DAS-167
 WARNING SYSTEMS SWITCH DAS-91, DAS-177
 WASHER FLUID LEVEL SWITCH CIRCUITMWI-69
 WASHER LEVEL SWITCH..... WW-57
 WASHER MOTOR CIRCUIT..... WW-42
 WASHER PUMP..... WW-56
 WASHER SWITCH..... WW-43
 WASHER TANK..... WW-54
 WATER HOSE..... TM-220, TM-437
 WATER OUTLET AND WATER PIPING..... CO-26
 WATER PUMP..... CO-19
 WHEEL..... WT-58
 WHEEL AND TIRE ASSEMBLY..... WT-59
 WHEEL HUB..... RAX-5

WHEEL SENSOR [BRC-155](#), [BRC-317](#)
WIND DEFLECTOR [RF-60](#)
WINDSHIELD GLASS [GW-11](#)
WIPER AND WASHER FUSE [WW-37](#)
WIPER AND WASHER SWITCH [WW-66](#)
WIPER AND WASHER SYSTEM SYMPTOMS
[WW-48](#)

Y

YAW RATE/SIDE/DECEL G SENSOR.... [BRC-162](#),
[BRC-324](#)

A

B

C

D

E

F

G

H

J

K

L

M

N

O

P