

HEATER & AIR CONDITIONER

EF &
EC

AT

FA

BR

BF

HA

EL

SECTION HA

CONTENTS

TROUBLE DIAGNOSES — Manual Air

Conditioner	2
Circuit Diagram for Quick Pinpoint Check.....	2
Wiring Diagram — Heater	3
Wiring Diagram	4


TROUBLE DIAGNOSES — Auto Air

Conditioner	5
Circuit Diagram for Quick Pinpoint Check.....	5
Wiring Diagram	6

HA

EL

Wiring Diagram — Heater

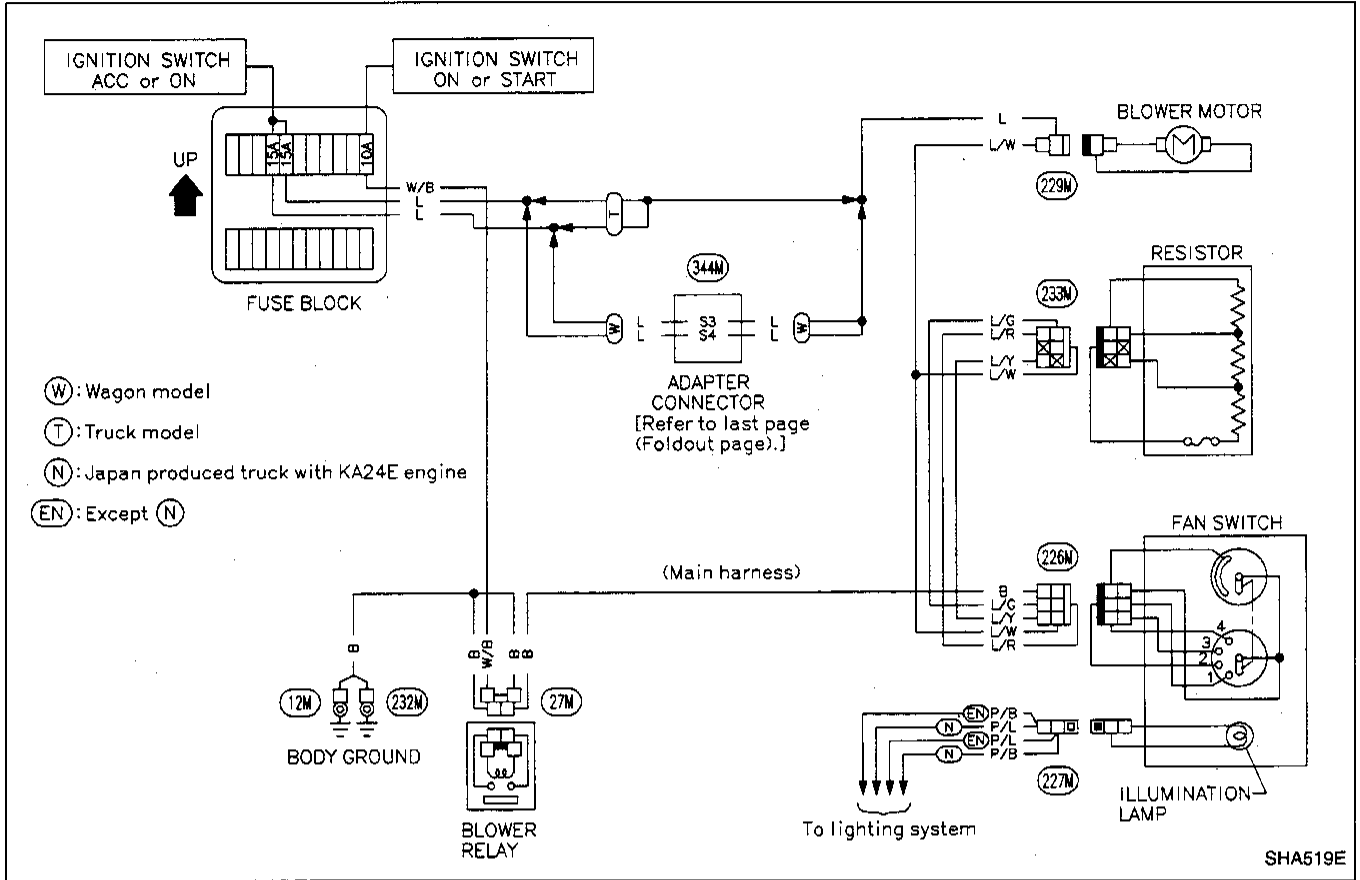

EF &
EC

AT

FA


BR

BF

HA

EL


Circuit Diagram for Quick Pinpoint Check

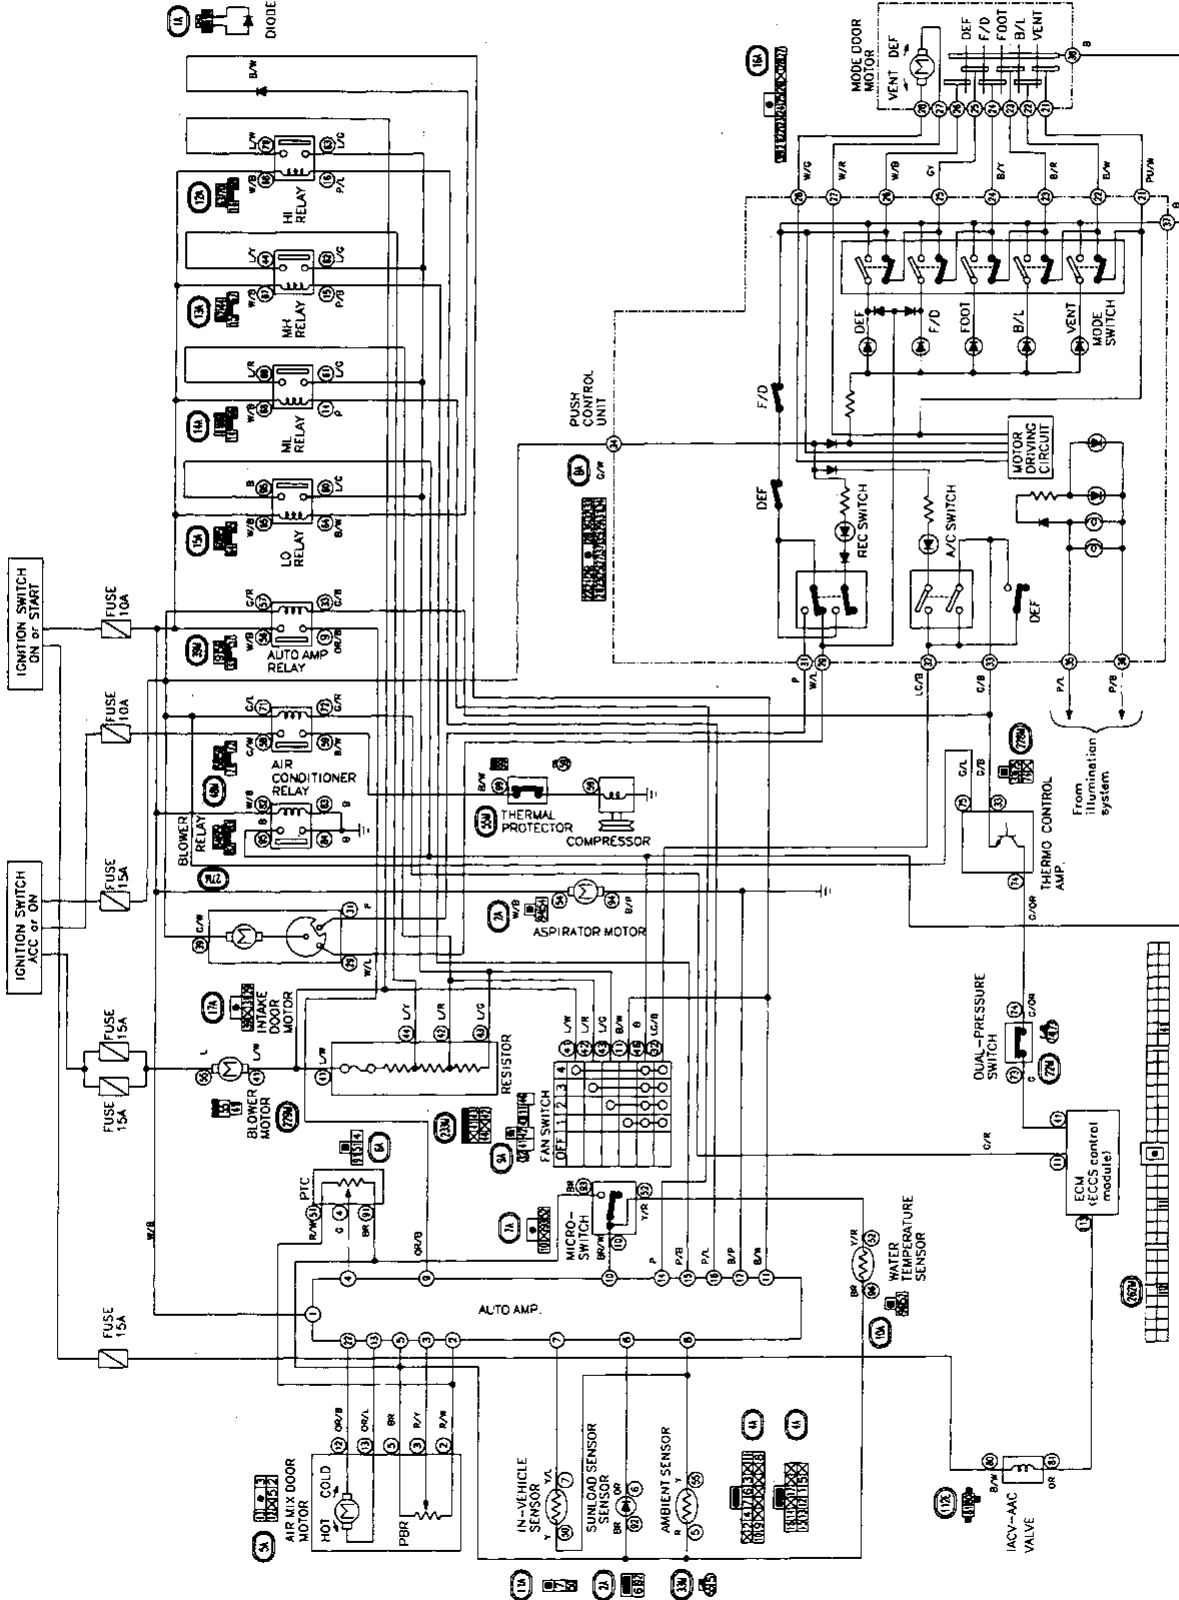

- All connectors shown in this illustration are unit side connectors.
- The unit side connectors with a double circle "⊖" are connected to the harness side connectors shown in the "Harness Layout for A/C System".
- The terminal numbers in the connector coincide with the circuit numbers and mechanically linked to corresponding switches.
- *: These switches are built into push control unit and mechanically linked to corresponding switches.

EF
EC
AT
FA
BR
BF
HA
PL

Wiring Diagram

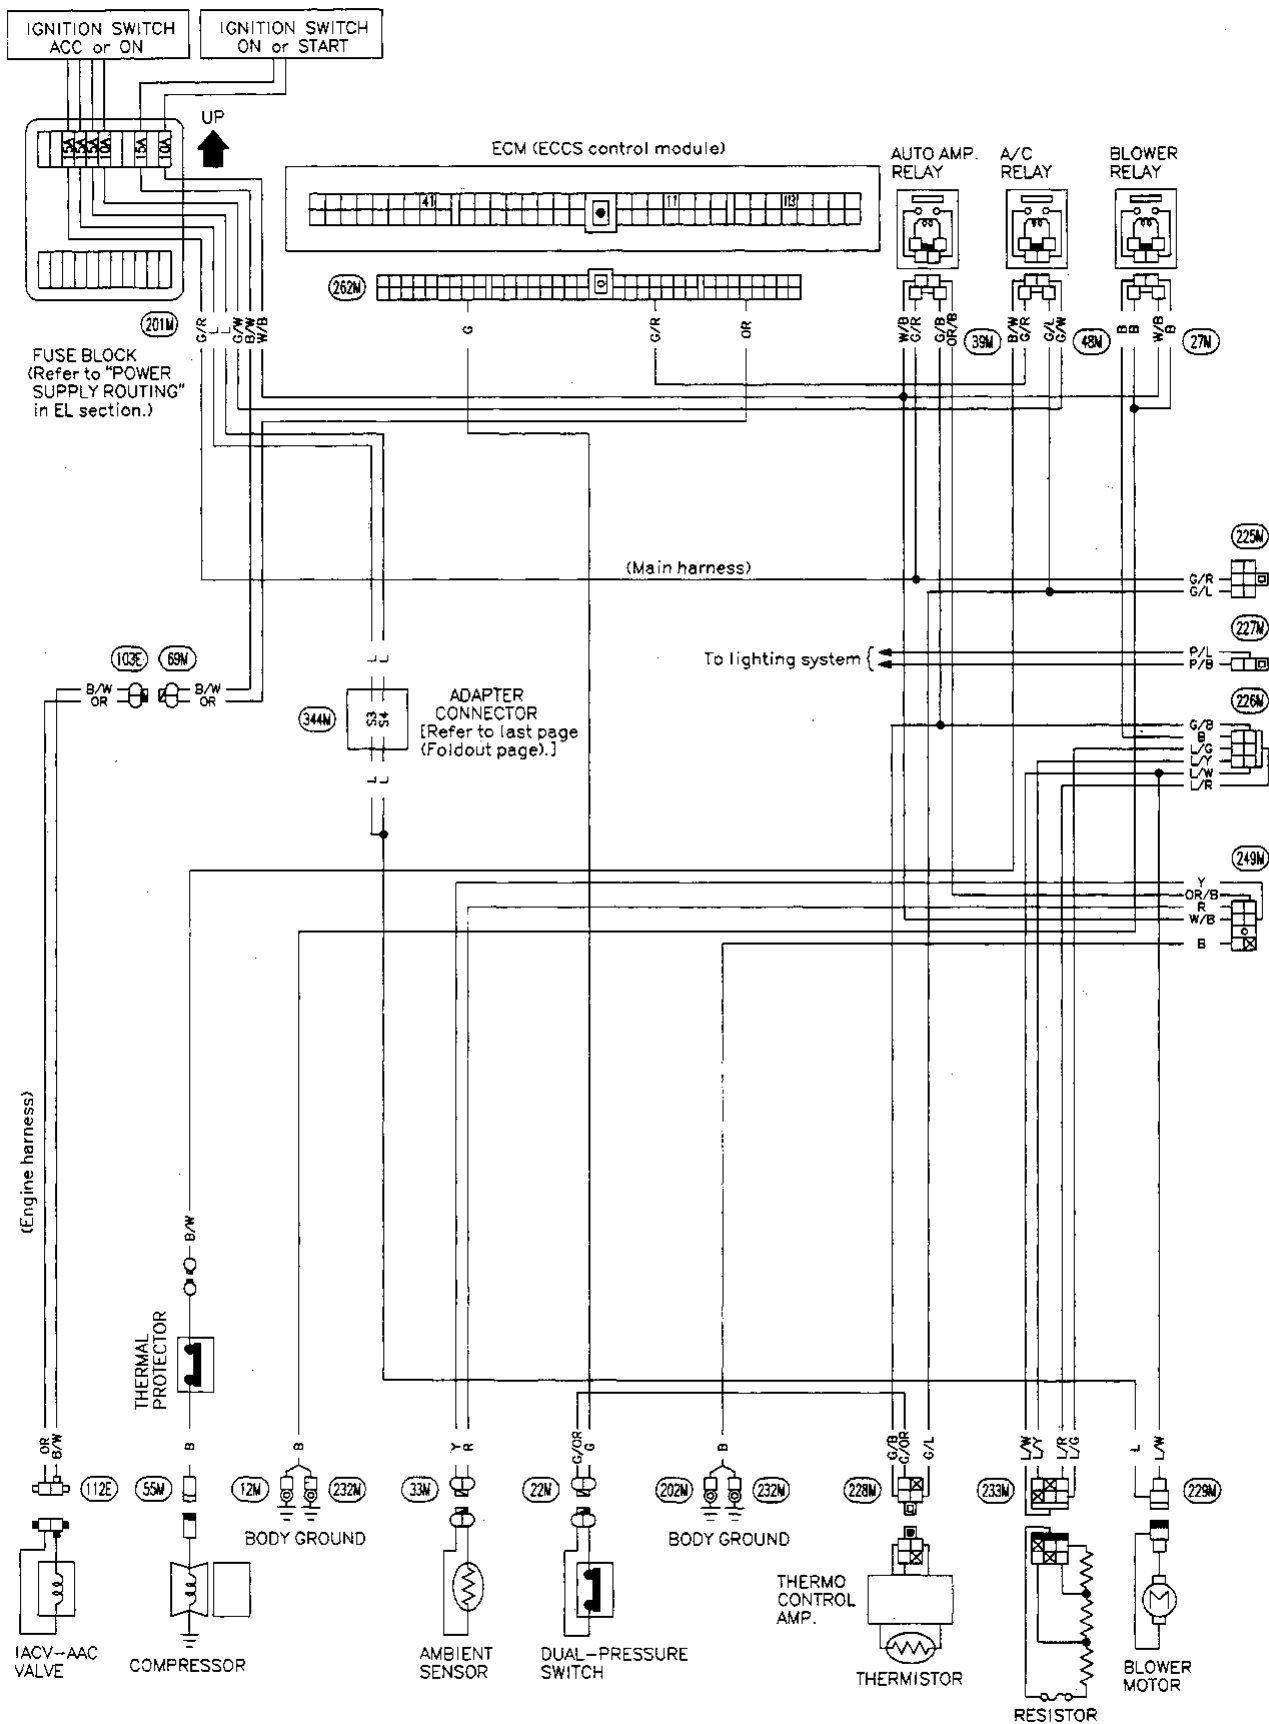

TROUBLE DIAGNOSES — Auto Air Conditioner

Wiring Diagram (Cont'd)

EF &
EC

AT


FA

BR

BF

HA

EL

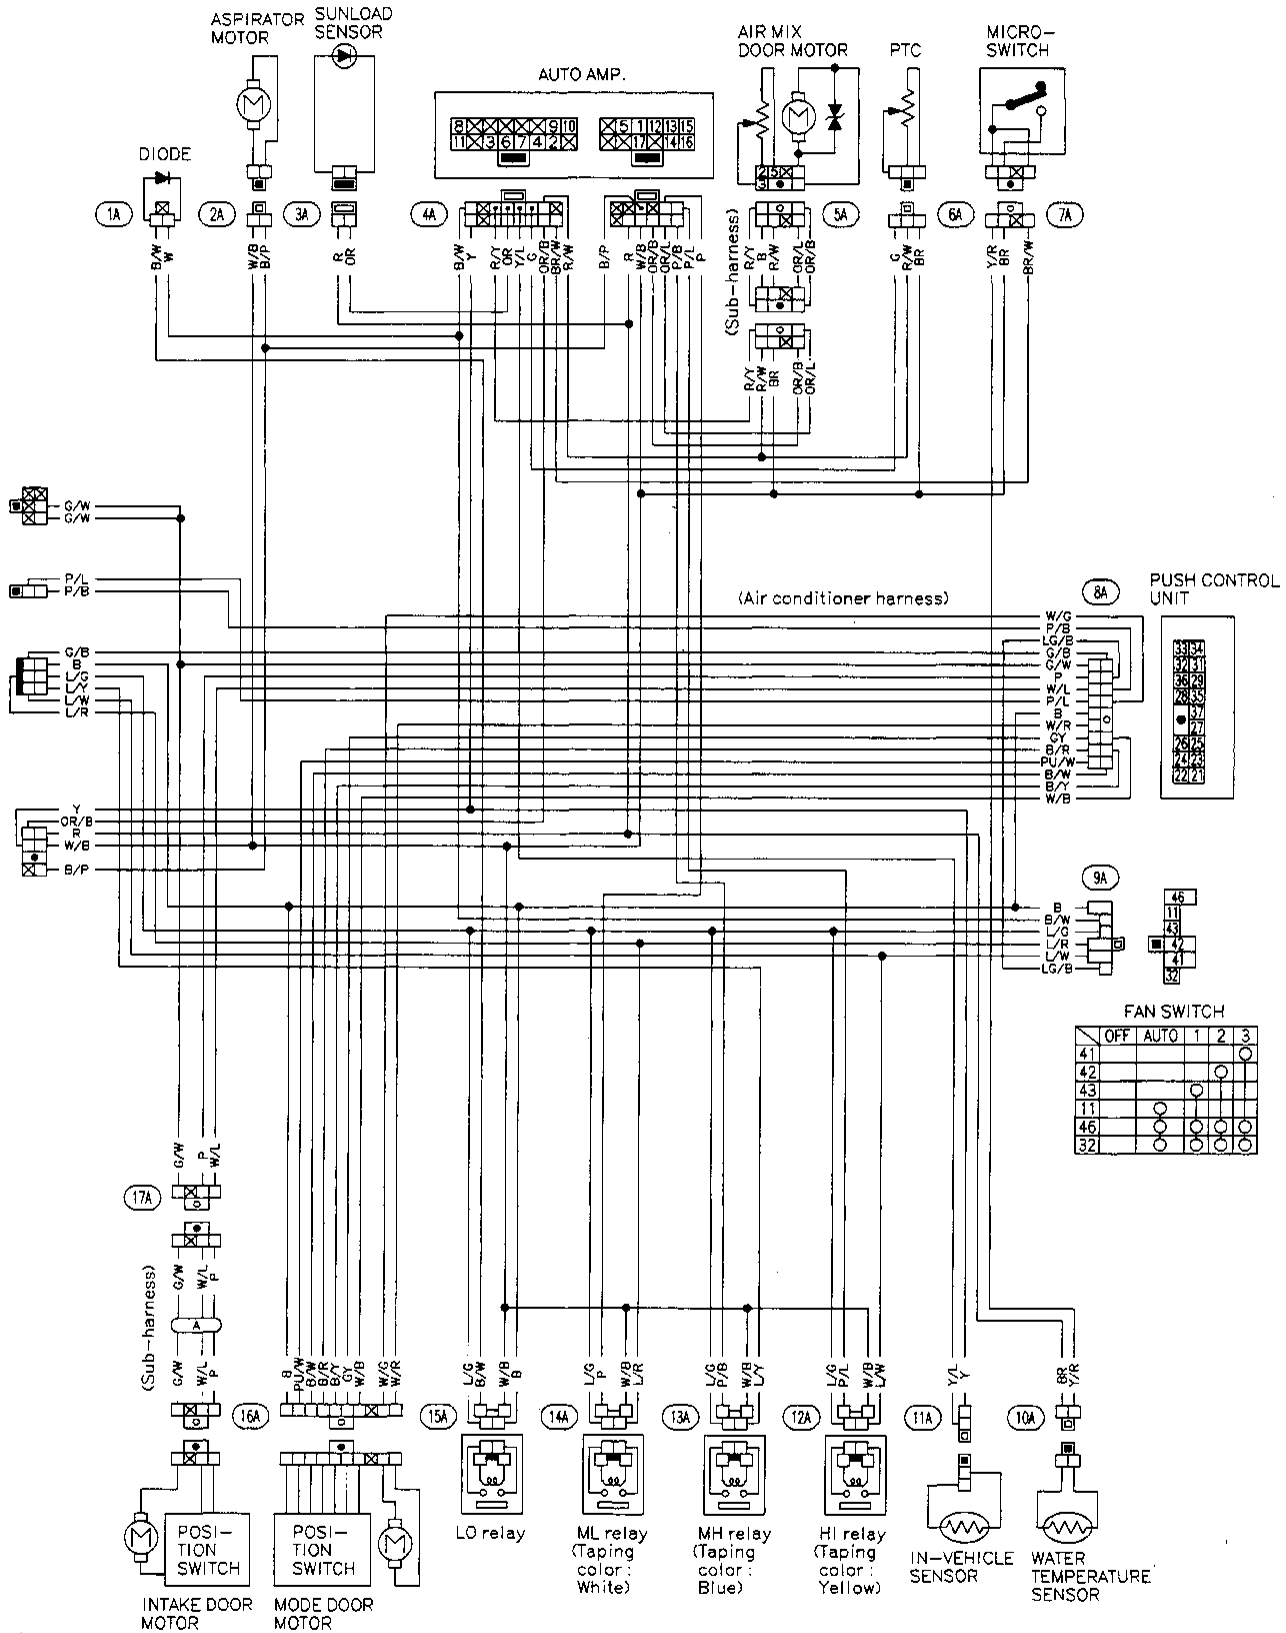

(A) : A/C kit only