

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS circuit diagram.....	BR-7
ABS control unit.....	BR-5
ABS wheel sensors.....	BR-5
ABS wiring diagram.....	BR-4
A/C circuit diagram (auto A/C).....	HA-13
A/C circuit diagram (manual A/C).....	HA-2
A/C trouble diagnoses (auto A/C).....	HA-13
A/C trouble diagnoses (manual A/C).....	HA-2
A/C wiring diagram (auto A/C).....	HA-14
A/C wiring diagram (manual A/C).....	HA-4
Air conditioner cut control.....	EF & EC-56
Alternator.....	EL-8
Anti-freeze coolant.....	MA-2
ASCD (automatic speed control device).....	EL-36
A/T control unit.....	AT-7
A/T indicator lamp.....	EL-24
A/T removal and installation.....	AT-18
A/T self-diagnoses.....	AT-5
Audio.....	EL-33
Automatic transmission fluid.....	MA-2

B

Back window.....	BF-14
Back-up lamp.....	EL-15
Back-up lamp switch (M/T).....	MT-3, MT-14
Baulk ring (M/T).....	MT-4
Brake fluid.....	MA-2

C

Canister.....	EF & EC-109
Canister control.....	EF & EC-56
Canister control solenoid valve.....	EF & EC-106
Canister purge control.....	EF & EC-57
Canister purge control valve.....	EF & EC-106
Canister purge cut valve.....	EF & EC-110
Charging system.....	EL-7
Cigarette lighter.....	EL-31
Clearance lamp.....	EL-13
Clock.....	EL-31
Closed throttle position.....	EF & EC-107
Clutch cover.....	CL-11
Clutch damper.....	CL-8
Clutch disc.....	CL-10
Clutch fluid.....	MA-2
Clutch master cylinder.....	CL-7
Clutch operating cylinder.....	CL-8
Clutch pedal.....	CL-4
Clutch pedal free play.....	CL-5

Clutch pedal height.....	CL-5
Clutch release bearing.....	CL-9
Clutch withdrawal lever.....	CL-9
Combination meter.....	EL-22
Control lever transfer.....	TF-8
Converter housing installation.....	AT-18
Coolant.....	MA-2
Cooling circuit (engine).....	LC-6, LC-13
Cooling fan.....	LC-9, LC-16
Counter gear (M/T).....	MT-4
Counter gear Transfer.....	TF-10
Coupling sleeve (M/T).....	MT-4
Crankshaft assembly.....	EM-17
Crankshaft bearing clearance.....	EM-15
Cylinder block.....	EM-2, EM-13
Cylinder block boring.....	EM-3, EM-15
Cylinder head.....	EM-7
Cylinder head bolt tightening.....	EM-8

D

Differential gear oil.....	MA-2
Drive plate runout.....	EM-16

E

ECCS circuit diagram.....	EF & EC-8, EF & EC-53
ECCS component parts location.....	EF & EC-2, EF & EC-47
ECCS on-board diagnostic system.....	EF & EC-58
ECCS system diagram and chart.....	EF & EC-4, EF & EC-50
ECCS trouble diagnoses.....	EF & EC-14
EGR canister control solenoid valve inspection.....	EF & EC-106
EGR control (EGRC) - solenoid valve.....	EF & EC-54
Engine oil.....	MA-2
Engine oil replacement.....	MA-3
Engine outer component parts.....	EM-6
Engine removal.....	EM-11
Evaporative emission system.....	EF & EC-109, EF & EC-111
Exhaust system.....	FE-4
Exterior lamp.....	EL-13

F

Fluids.....	MA-2
Flywheel runout.....	EM-16
Front drive shaft Transfer.....	TF-10
Fuel check valve inspection.....	EF & EC-112

ALPHABETICAL INDEX

Fuel injector..... EF & EC-54
 Fuel system..... FE-2
 Fuel tank vacuum relief valve inspection.EF & EC-112
 Fuel temperature sensor inspection..... EF & EC-106

G

Gears (M/T) MT-4
 Grease..... MA-2

H

Hazard warning lamp EL-16
 Headlamp EL-11
 Heated oxygen sensor heater inspection . EF & EC-45
 Heated seat BF-13
 Heater wiring diagram HA-3
 High clutch..... AT-43
 Horn..... EL-31
 Hydraulic lash adjuster inspection EM-10

I

Idle mixture ratio inspection EF & EC-9
 Idle speed inspection EF & EC-9
 Ignition timing inspection..... EF & EC-9
 Illumination EL-18
 Injector removal and installation EF & EC-108
 Interior and exterior BF-12
 Interior lamp EL-20

J

Jacking points..... GI-7

L

Low and reverse brake AT-45
 Lubricants..... MA-2
 Lubrication circuit (engine)..... LC-10

M

Main drive gear (M/T)..... MT-4
 Main gear transfer..... TF-10
 Mainshaft (M/T) MT-4
 Mainshaft transfer..... TF-10
 Manual steering gear oil..... MA-2
 Manual transmission oil..... MA-2

Master cylinder (clutch) CL-7
 Meter and gauges EL-22
 Model variation GI-2
 M/T overhaul MT-3, MT-14
 M/T removal and installation MT-2
 Multi purpose grease..... MA-2

N

Neutral position switch (M/T) MT-14

O

Oil pressure (engine)..... LC-3, LC-11
 Oil pressure relief valve (engine) LC-5, LC-12
 Oil pump (engine)..... LC-4, LC-11
 Oil pump regulator valve (engine)..... LC-5, LC-12
 Operating cylinder (clutch) CL-8
 Oversize piston..... EM-2, EM-15

P

Parking brake control BR-3
 Piston assembly EM-17
 Piston to bore clearance EM-2, EM-14
 Power door lock BF-4
 Power steering fluid..... MA-2
 Power steering gear ST-4
 Power supply routing..... EL-2
 Power window BF-10
 Pressure plate - See Clutch cover..... CL-11
 Propeller shaft PD-2

R

Radiator LC-8, LC-16
 Rear axle (disc brake type)..... RA-3
 Rear disc brake BR-2
 Refilling engine coolant..... LC-3
 Release bearing (clutch) CL-9
 Resistor inspection..... EF & EC-108
 Reverse gear (M/T)..... MT-4
 Reverse idler shaft (M/T) MT-4
 Road wheel size..... GI-6

S

Self-diagnostic results EF & EC-14, EF & EC-59
 Shift control (TF) TF-11, TF-23
 Shift lock system AT-12

ALPHABETICAL INDEX

Shock absorber (adjustable, front)..... FA-7
SMJ (super multiple junction)..... Foldout page
Starter..... EL-5
Starting system..... EL-3
Steering wheel and column..... ST-2
Stop lamp..... EL-13
Synchronizer (M/T)..... MT-4

T

Tail lamp..... EL-13
Thermostat..... LC-8, LC-15
Throttle position sensor inspection..... EF & EC-107
Throttle position sensor (TPS)..... EF & EC-54
Throwout bearing - See Clutch release
bearing..... CL-9
Tire size..... GI-6
Torque converter installation..... AT-18
Tow truck towing..... GI-8
Transfer case..... TF-9
Transfer gear oil..... MA-2
Transfer overhaul..... TF-9
Transfer removal and installation..... TF-7

Transmission case (M/T)..... MT-3, MT-14
Turn signal lamp..... EL-16

V

Vacuum Control Valve..... EF & EC-110
Vacuum hose drawing..... EF & EC-5
Vehicle identification number..... GI-5

W

Warning chime..... EL-24, EL-28
Warning lamps..... EL-24, EL-26
Washer, front..... EL-29
Washer, rear..... EL-30
Water pump..... LC-7, LC-14
Wheel sensors (ABS)..... BR-5
Wide open & closed throttle position (CTP)
switch..... EF & EC-54
Wiper and washer..... EL-29
Wiper, rear..... EL-29, EL-30
Withdrawal lever (clutch)..... CL-9