


RESTRAINT SYSTEM

GI

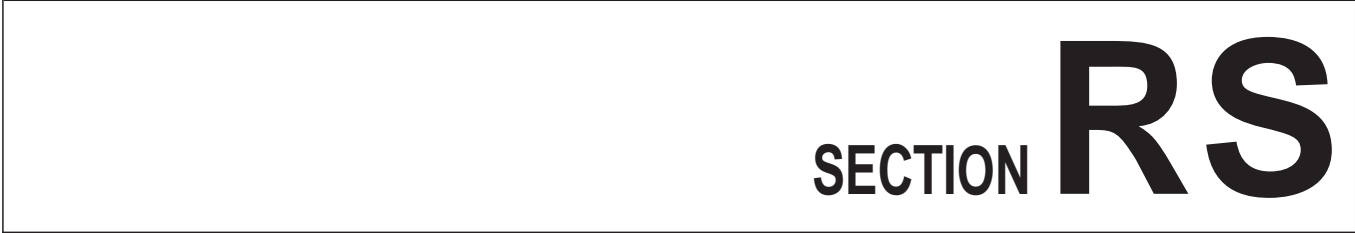

MA

EM

LC

MODIFICATION NOTICE:

Air bag system wiring diagram has been changed.

EC

FE

CONTENTS

CL

TROUBLE DIAGNOSES - Supplemental Restraint System (SRS).....2

Wiring Diagram - SRS2

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

 
 
 
 
 

HA

EL

IDX

Wiring Diagram — SRS —

RS-SRS-01


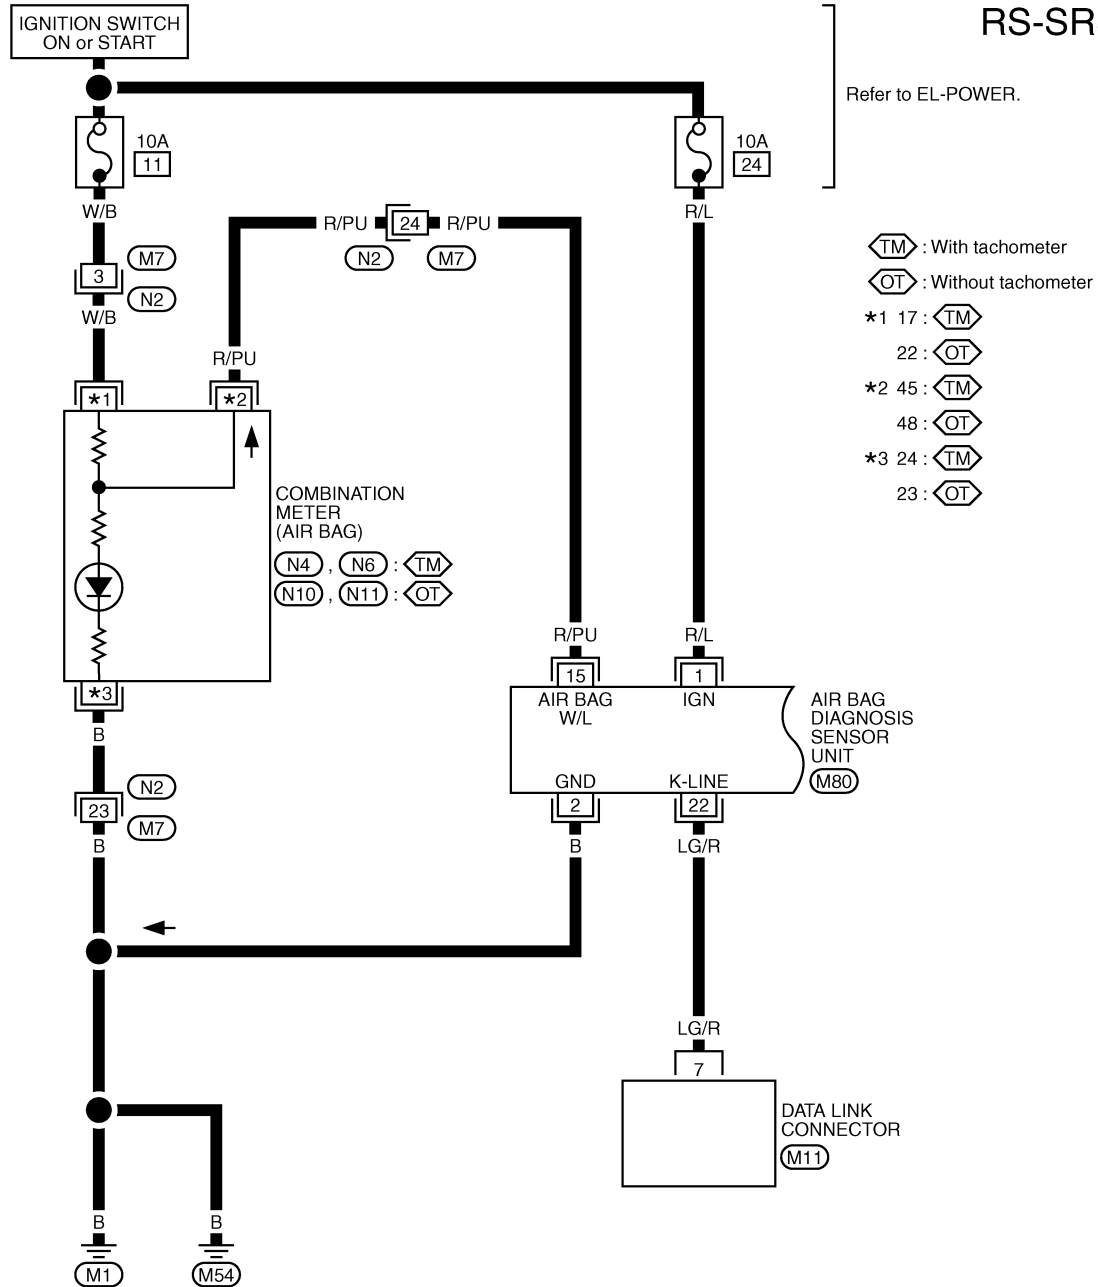


TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS — (Cont'd)

RS-SRS-02

- ⬡(DA) : With dual air bag
- ⬡(PT) : With seat belt pre-tensioner
- ⬡(AP) : With seat belt pre-tensioner (Driver and passenger side)
- ⬡(PM) : With seat belt pre-tensioner for the Middle East
- ⬡(XP) : With seat belt pre-tensioner except for the Middle East
- ⬡(AM) : With seat belt pre-tensioner (Driver and passenger side) for the Middle East
- ⬡(XA) : With seat belt pre-tensioner (Driver and passenger side) except for the Middle East

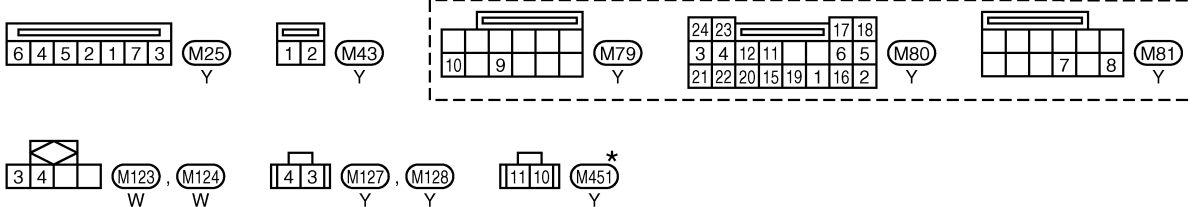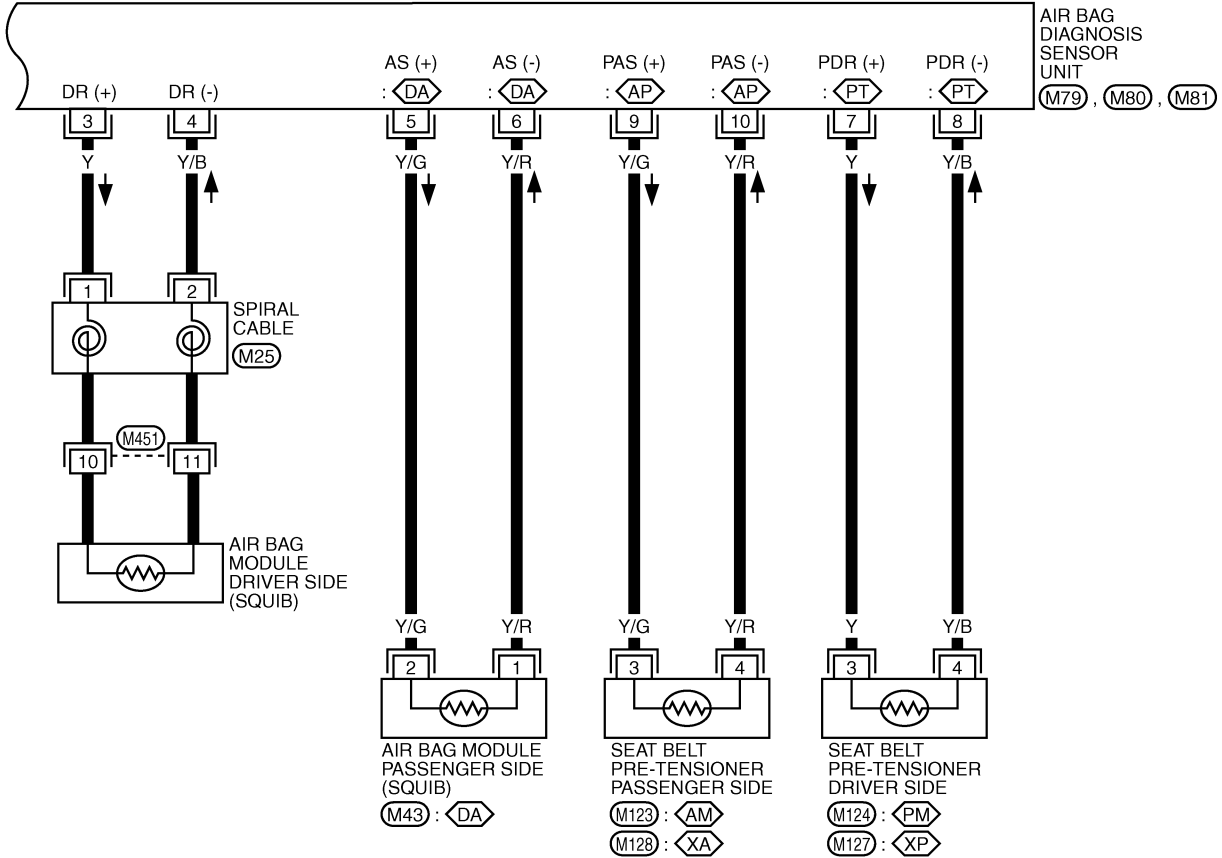

★: This connector is not shown in "HARNESS LAYOUT", EL section.