

ALPHABETICAL INDEX

SECTION IDX

ALPHABETICAL INDEX

A

A/C HFC134a (R134a) system precaution.....	HA-2
A/C HFC134a (R134a) system service procedure	HA-48
A/C HFC134a (R134a) system service tools.....	HA-8
A/C HFC134a system service equipment precaution	HA-10
A/C air flow	HA-14
A/C component layout	HA-13
A/C compressor clutch removal and installation	HA-60
A/C compressor precaution	HA-6
A/C compressor special service tool.....	HA-6
A/C control linkage adjustment (manual A/C)	HA-45
A/C control operation (manual A/C)	HA-16
A/C diagnostic work flow (manual A/C)	HA-17
A/C lubricant (R134a)	HA-50
A/C operational check	HA-18
A/C performance chart	HA-26
A/C performance test diagnoses	HA-24
A/C relay	HA-44
A/C switch.....	HA-16, 43
A/C symptom chart (manual A/C)	HA-20
A/C trouble diagnoses (manual A/C).....	HA-17
AAC/V - Wiring diagram	EC-133
ABS (anti-lock brake system)	BR-32
ABS - Wiring diagram.....	BR-42
Accelerator control system.....	FE-1
Accelerator wire adjustment.....	FE-2
Air bag disposal.....	RS-14
Air bag precautions.....	GI-1
Air bag	RS-6
Air bleeding (hydraulic clutch).....	CL-5
Air bleeding for brake system.....	BR-4
Air cleaner filter replacement (KA24 engine)	MA-19
Air cleaner filter replacement (TD25 engine).....	MA-29
Air conditioner cut control.....	EC-18
Air flow meter - See Mass air flow sensor	EC-89
Alternator	EL-41
Angular tightening application	EM-1
Antenna	EL-146
Anti-lock brake system - Wiring diagram	BR-42
Audio and A/C control removal and installation - See Instrument panel	BT-12
Auto-lock free-running hub.....	FA-15
Auxiliary air control (AAC) valve.....	EC-131
Axle housing (rear)	RA-5

B

Back window	BT-24
-------------------	-------

Back-up lamp switch (M/T).....	MT-9
Ball joint front axle	FA-34
Battery	EL-18
Baulk ring (M/T) (FS5R30A).....	MT-36
Baulk ring (M/T) (FS5W71C).....	MT-15
Blower motor.....	HA-43
Blower resistor	HA-43
Body alignment	BT-43
Body mounting	BT-41
Boring/horning cylinder block	EM-41
Brake booster	BR-15
Brake fluid change	BR-3
Brake fluid level and line check.....	BR-3
Brake fluid level.....	MA-35
Brake hydraulic line	BR-5
Brake inspection.....	MA-36
Brake lines and cables inspection	MA-35
Brake lining wear temporary checking.....	MA-37
Brake master cylinder.....	BR-12
Brake pedal.....	BR-10
Bulb specifications.....	EL-252
Bumper, front	BT-5
Bumper, rear	BT-8

C

CHARGE - Wiring diagram	EL-34
CIGAR - Wiring diagram	EL-133
CLOCK - Wiring diagram	EL-134
CMPS - Wiring diagram.....	EC-85
CONSULT for ECCS	EC-45
CONSULT general information	GI-34
Cab body	BT-40
Camshaft inspection (KA24 engine)	EM-28
Camshaft inspection (TD25 engine)	EM-85
Camshaft position sensor (CMPS)	EC-82
Canister - See EVAP canister.....	EC-19
Center bearing assembly (propeller shaft)	PD-10
Center bearing disassembly (propeller shaft)	PD-9
Center case (Transfer)	TF-8
Charging system	EL-34
Chassis and body maintenance	MA-32
Cigarette lighter	EL-133
Circuit breaker	EL-13
Clock.....	EL-134
Clutch cover	CL-13
Clutch disc.....	CL-12
Clutch fluid level	MA-32
Clutch master cylinder	CL-6
Clutch operating cylinder	CL-8
Clutch pedal	CL-4
Clutch release bearing	CL-9
Clutch release mechanism.....	CL-9
Clutch withdrawal lever	CL-9
Collision diagnosis (2WD models).....	RS-21
Collision diagnosis (4WD models).....	RS-42

ALPHABETICAL INDEX

Combination lamp, front, removal and installation.....	BT-5	Cylinder liner	EM-74
Combination lamp, rear, removal and installation.....	BT-24	D	
Combination meter removal and installation - See Instrument panel.....	BT-12	D/LOCK - Wiring diagram	EL-167
Combination switch	EL-42	DEF - Wiring diagram	EL-135
Combustion chamber replacement	EM-59	DTRL - Wiring diagram	EL-54
Compression pressure (KA24 engine).....	EM-10	Data link connector for Consult	EC-45
Compression pressure (TD25 engine).....	EM-51	Daytime light system	EL-51
Compressor clutch removal and installation	HA-60	Defroster door control rod adjustment.....	HA-45
Compressor precaution	HA-6	Diagnosis sensor unit	RS-10
Compressor special service tool	HA-6	Diagnostic trouble code (DTC) for ECCS OBD system.....	EC-36
Connecting rod (KA24 engine).....	EM-40	Differential carrier assembly (C200).....	PD-51
Connecting rod (TD25 engine).....	EM-77	Differential carrier assembly (H233B)	PD-72
Connecting rod bearing clearance (KA24 engine).....	EM-44	Differential carrier assembly (R180A)	PD-27
Connecting rod bearing clearance (TD25 engine).....	EM-77	Differential carrier disassembly (C200)	PD-34
Connecting rod bushing clearance (KA24 engine).....	EM-45	Differential carrier disassembly (H233B)	PD-57
Connecting rod bushing clearance (TD25 engine).....	EM-78	Differential gear oil replacement	MA-34
Connector inspection	GI-18	Dim-dip lamp system.....	EL-58
Control lever (M/T)	MT-17	Dimensions	GI-44
Control lever (Transfer)	TF-7	Distributor ignition (DI) system	EC-17
Control units (terminal arrangement)	Foldout	Dome light - See Interior lamp	EL-85
Coolant mixture ratio	MA-14	Door glass	BT-10
Coolant replacement (KA24 engine).....	MA-16	Door lock	BT-10
Coolant replacement (TD25 engine).....	MA-25	Door mirror	BT-39
Cooling circuit (engine) (KA24 engine)	LC-6	Door trim	BT-18
Cooling circuit (engine) (TD25 engine)	LC-19	Door, front	BT-10
Cooling fan (KA24 engine).....	LC-10	Door, rear	BT-11
Cooling fan (TD25 engine)	LC-21, 26	Drive belt inspection (KA24 engine)	MA-15
Cooling fan control system	LC-25	Drive belt inspection (TD25 engine)	MA-23
Counter gear (M/T) (FS5R30A).....	MT-36	Drive chain (Transfer)	TF-9
Counter gear (M/T) (FS5W71C).....	MT-15	Drive pinion diff. inspection (C200)	PD-38
Counter gear (Transfer)	TF-9	Drive pinion diff. inspection (H233B)	PD-60
Coupling sleeve (M/T) (FS5R30A)	MT-36	Drive pinion height (C200)	PD-47
Coupling sleeve (M/T) (FS5W71C)	MT-15	Drive pinion height (H233B)	PD-67
Crank angle sensor built into distributor - See Camshaft position sensor	EC-82	Drive pinion height (R180A)	PD-24
Crankcase emission control system - See Positive crankcase ventilation	EC-21	Drive shaft (front)	FA-21
Crankcase ventilation system - See Positive crankcase ventilation.....	EC-21	E	
Crankshaft (KA24 engine).....	EM-42	ECCS basic inspection	EC-58
Crankshaft (TD25 engine).....	EM-79	ECCS circuit diagram	EC-8
Crankshaft position sensor (POS).....	EC-82	ECCS component parts location	EC-10
Crankshaft position sensor (REF)	EC-82	ECCS fail-safe chart	EC-61
Cylinder block (KA24 engine)	EM-38	ECCS on board diagnostic system	EC-36
Cylinder block (TD25 engine)	EM-74	ECCS relay	EC-75
Cylinder block boring.....	EM-41	ECCS symptom matrix chart	EC-62
Cylinder head (KA24 engine).....	EM-24	ECCS system diagram	EC-9
Cylinder head (TD25 engine)	EM-53	ECTS - Wiring diagram	EC-96
Cylinder head bolt tightening	EM-64	EGR control (EGRC) - solenoid valve.....	EC-218
Cylinder head gasket selection	EM-63	EGR control valve.....	EC-218

ALPHABETICAL INDEX

EVAP vapor lines inspection.....	MA-22	Front disc brake.....	BR-21
Electrical diagnoses	GI-21	Front door.....	BT-10
Engine compartment.....	BT-44	Front drive shaft (Transfer)	TF-9
Engine control module (ECM)	EC-5	Front final drive disassembly (4WD)	PD-17
Engine coolant temperature sensor (ECTS) (KA24 engine).....	EC-95	Front final drive pre-inspection (4WD)	PD-17
Engine coolant temperature sensor (ECTS) (TD25 engine).....	EC-209	Front final drive removal and installa- tion (4WD)	PD-14
Engine oil filter replacement (KA24 engine).....	MA-20	Front seat belt.....	RS-3
Engine oil filter replacement (TD25 engine).....	MA-24	Front seat.....	BT-30
Engine oil precautions	GI-4	Front suspension.....	FA-26
Engine oil replacement (KA24 engine).....	MA-19	Front washer	EL-120
Engine oil replacement (TD25 engine).....	MA-24	Front wiper	EL-120
Engine outer component parts (KA24 engine).....	EM-9	Fuel check valve.....	EC-20
Engine outer component parts (TD25 engine).....	EM-49	Fuel cut control (at no load & high engine speed) (KA24 engine)	EC-18
Engine removal (KA24 engine)	EM-36	Fuel cut control (at no load & high engine speed)	EC-225
Engine removal (TD25 engine)	EM-69	Fuel filter replacement (KA24 engine)	MA-18
Engine room - See Engine compartment.....	BT-44	Fuel filter replacement (TD25 engine)	MA-27
Engine speed sensor.....	EC-219	Fuel injector	EC-144
Evaporative emission (EVAP) system.....	EC-19	Fuel line inspection (KA24 engine)	MA-18
Exhaust system inspection.....	MA-32	Fuel line inspection (TD25 engine)	MA-28
Exhaust system.....	FE-5	Fuel precautions	GI-5
Exterior	BT-24	Fuel pressure check	EC-22
		Fuel pressure release	EC-22
		Fuel pump	EC-151
		Fuel pump relay	EC-156
		Fuel system	FE-3
		Fuel tank vacuum relief valve	EC-20
		Fuse block.....	Foldout
		Fuse.....	EL-13
		Fusible link	EL-13

F

F/PUMP - Wiring diagram.....	EC-153
FCUT - Wiring diagram	EC-225
FICD - Wiring diagram (KA24 engine)	EC-168
FICD - Wiring diagram (TD25 engine)	EC-230
Fan switch.....	HA-43
Fast idle cam (FIC) inspection and adjustment.....	EC-24
Final drive disassembly (C200)	PD-34
Final drive disassembly (H233B).....	PD-56
Final drive pre-inspection (C200)	PD-34
Final drive pre-inspection (H233B).....	PD-56
Final drive removal and installation.....	PD-15
Floor trim	BT-15
Flow charts.....	GI-31
Fluids	MA-12
Flywheel (clutch)	CL-12
Flywheel runout (KA24 engine).....	EM-45
Flywheel runout (TD25 engine).....	EM-80
Fog lamp, rear.....	EL-72
Fork rod (M/T) (FS5R30A)	MT-38
Fork rod (M/T) (FS5W71C)	MT-17
Front axle	FA-12
Front bumper.....	BT-5
Front case (Transfer)	TF-8
Front combination lamp removal and installation.....	BT-5

G

GLOW - Wiring diagram	EC-197
Garage jack and safety stand.....	GI-49
Gear components (M/T) (FS5R30A)	MT-36
Gear components (M/T) (FS5W71C)	MT-15
Glass	BT-10
Glow plug	EC-208
Glow relay	EC-208
Grease	MA-12
Ground clearance	GI-44
Ground distribution	EL-14

H

H/AIM - Wiring diagram.....	EL-64
H/LAMP - Wiring diagram	EL-44
H02S - Wiring diagram	EC-124
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure	HA-48
HFC134a (R134a) system service tools	HA-8
HFC134a system service equipment precaution	HA-10

ALPHABETICAL INDEX

HLC - Wiring diagram	EL-130
HORN - Wiring diagram	EL-132
H/SEAT - Wiring diagram.....	EL-152
Harness connector	EL-2
Harness connector inspection	GI-18
Harness layout	EL-220
Hazard warning lamp	EL-74
Headlamp	EL-44
Headlamp aiming control	EL-63
Headlamp leveler - See Headlamp aiming control	EL-63
Headlamp washer	EL-130
Heated oxygen sensor (HO2S)	EC-123
Heated oxygen sensor heater	EC-127
Heated oxygen sensor inspection.....	MA-22
Heated seat.....	BT-32
Heated seat.....	EL-152
Height (Dimensions)	GI-44
Hood.....	BT-5
Horn.....	EL-132
How to erase DTC for ECCS OBD system.....	EC-36

I

IACV-AAC valve	EC-131, 135
IACV-FICD solenoid valve (KA24 engine)	EC-168
IACV-FICD solenoid valve (TD25 engine)	EC-231
IATS - Wiring diagram.....	EC-110
IGN/SG - Wiring diagram	EC-101
ILL - Wiring diagram.....	EL-81
INJECT - Wiring diagram	EC-144
INT/L - Wiring diagram.....	EL-85
Identification plate	GI-42
Idle mixture ratio	EC-25
Idle speed	EC-25
Idle speed inspection	MA-30
Ignition coil	EC-105
Ignition timing.....	EC-25
Ignition wire inspection.....	MA-21
Illumination	EL-81
Injection nozzle inspection	MA-29
Injection nozzle	EC-186
Injector	EC-144, 148
Injector removal and installation.....	EC-23
Instrument panel	BT-12
Intake air temperature sensor	EC-109
Intake door control linkage adjustment.....	HA-47
Intake manifold	EM-9
Interior lamp	EL-85
Interior	BT-15

J

Jacking points	GI-47
----------------------	-------

Journal bearing assembly (propeller shaft)	PD-11
Journal bearing disassembly (propeller shaft)	PD-10
Jump seat.....	BT-34

K

Keyless entry system - See Multi-remote control system	EL-173
Knuckle spindle	FA-18

L

LSV (Load sensing valve).....	BR-7
Leaf spring (rear)	RA-13
Length (Dimensions)	GI-44
License lamp	EL-66
Lifting points	GI-47
Limited slip diff. adjustment (C200)	PD-41
Limited slip diff. adjustment (H233B)	PD-63
Limited slip diff. assembly (C200)	PD-43
Limited slip diff. assembly (H233B).....	PD-64
Limited slip diff. disassembly (C200).....	PD-39
Limited slip diff. disassembly (H233B)	PD-61
Limited slip diff. inspection (C200)	PD-40
Limited slip diff. inspection (H233B).....	PD-62
Liquid gasket application.....	EM-1
Location of electrical units.....	EL-217
Lock, door	BT-10
Lubricant (R134a) A/C	HA-50
Lubricants	MA-12
Lubrication circuit (engine) (KA24 engine)	LC-3
Lubrication circuit (engine) (TD25 engine)	LC-12
Lubrication-locks, hinges and hood latches	MA-39

M

M/T major overhaul (FS5R30A)	MT-35
M/T major overhaul (FS5W71C)	MT-14
M/T removal and installation	MT-11
MAFS - Wiring diagram	EC-91
MAIN - Wiring diagram	EC-76
METER - Wiring diagram	EL-90
MIL & Data link connectors	EC-173
MIRROR - Wiring diagram	EL-150
MULTI - Wiring diagram.....	EL-175
Main drive gear (M/T) (FS5R30A).....	MT-36
Main drive gear (M/T) (FS5W71C).....	MT-15
Main gear (Transfer)	TF-9
Mainshaft (M/T) (FS5R30A)	MT-36
Mainshaft (M/T) (FS5W71C)	MT-15
Mainshaft (Transfer)	TF-9
Maintenance (engine) (KA24 engine)	MA-15

ALPHABETICAL INDEX

Maintenance (engine) (TD25 engine)	MA-23
Major overhaul (Transfer).....	TF-8
Malfunction indicator lamp (MIL)	EC-38
Manifold tightening torque (intake & exhaust)	MA-23
Manual-lock free-running hub	FA-14
Manual steering gear	ST-13
Manual transmission number.....	GI-43
Manual transmission oil replacement.....	MA-32
Mass air flow sensor (MAFS)	EC-89
Master cylinder (brake).....	BR-12
Master cylinder (clutch).....	CL-6
Mirror, door.....	BT-39
Mode door control linkage adjustment	HA-46
Model variation.....	GI-37
Molding - See Exterior	BT-24
Multi-remote control system	EL-173
Multiport fuel injection (MFI) system	EC-14

N

NATS (Nissan Anti-theft System) precautions.....	GI-2
NATS (Nissan Anti-theft System).....	EL-183
NATS - Wiring diagram.....	EL-185
Neutral position switch (M/T).....	MT-14
Neutral position switch.....	EC-136

O

Oil change (capacity).....	MA-12
Oil change (interval)	MA-5
Oil cooler (engine).....	LC-17
Oil jet.....	LC-18
Oil pan (engine) (KA24 engine)	EM-11
Oil pan (engine) (TD25 engine)	EM-52
Oil pressure (engine) (KA24 engine)	LC-4
Oil pressure (engine) (TD25 engine)	LC-13
Oil pressure relief valve (engine) (KA24 engine)	LC-5
Oil pressure relief valve (engine) (TD25 engine)	LC-16
Oil pump (engine) (KA24 engine)	LC-4
Oil pump (engine) (TD25 engine)	LC-14
Oil pump regulator valve (engine) (KA24 engine)	LC-5
Oil pump regulator valve (engine) (TD25 engine)	LC-17
Oil seal replacement (engine) (KA24 engine)	EM-22
Oil seal replacement (engine) (TD25 engine)	EM-67
Oil seal replacement (front of final drive)	PD-12
Operating cylinder (clutch)	CL-8
Outside mirror - See Door mirror.....	BT-39
Oversize piston.....	EM-95

P

P/ANT - Wiring diagram	EL-147
PCV (positive crankcase ventilation).....	EC-193
PCV filter replacement	MA-21
PCV system inspection	MA-21
PGC/V - Wiring diagram.....	EC-141
PLA - Wiring diagram	EC-222
PNP/SW - Wiring diagram.....	EC-137
POWER - Wiring diagram	EL-6
PST/SW - Wiring diagram	EC-157
Pantograph jack	GI-47
Parking brake control.....	BR-30
Parking lamp	EL-66
Periodic maintenance	MA-5
Pilot bushing replacement (KA24 engine).....	EM-48
Pilot bushing replacement (TD25 engine).....	EM-79
Piston assembly (KA24 engine)	EM-45
Piston assembly (TD25 engine)	EM-86
Piston pin inspection (KA24 engine)	EM-39
Piston pin inspection (TD25 engine)	EM-76
Piston ring inspection (KA24 engine).....	EM-40
Piston ring inspection (TD25 engine).....	EM-76
Piston to bore clearance (KA24 engine).....	EM-41
Piston to bore clearance (TD25 engine).....	EM-75
Power door lock	EL-166
Power door mirror	EL-150
Power steering fluid level	MA-37, ST-4
Power steering gear (PB48S)	ST-20
Power steering gear (PB59K)	ST-28
Power steering hydraulic system	ST-7
Power steering oil pressure switch.....	EC-157
Power steering oil pump	ST-34
Power steering system bleeding.....	ST-5
Power supply routing.....	EL-5
Power transistor & ignition coil	EC-105
Power window	EL-154
Pre-delivery inspection	MA-3
Precautions (General).....	GI-2
Pressure plate - See Clutch cover.....	CL-13
Priming pump.....	EC-192
Propeller shaft.....	PD-6
Propeller shaft greasing	MA-33
Propeller shaft inspection	MA-33
Propeller shaft vibration	PD-8
Push rod	EM-60

Q

Quick-glow system check	EC-203
-------------------------------	--------

R

R/FOG - Wiring diagram	EL-72
------------------------------	-------

ALPHABETICAL INDEX

Radiator (KA24 engine)	LC-9
Radiator (TD25 engine)	LC-24
Rear axle	RA-5
Rear body.....	BT-40
Rear case (Transfer)	TF-8
Rear combination lamp removal and installation.....	BT-24
Rear cover gasket replacement diff.	PD-13
Rear door	BT-11
Rear drum brake.....	BR-26
Rear fog lamp.....	EL-72
Rear seat belt	RS-4
Rear seat.....	BT-33
Rear suspension.....	RA-12
Rear window defogger	EL-135
Refrigerant connection precaution.....	HA-2
Refrigerant discharging evacuating charging	HA-49
Refrigerant general precaution	HA-2
Refrigerant lines.....	HA-52
Refrigeration cycle	HA-12
Release bearing (clutch)	CL-9
Removal and installation (Transfer)	TF-6
Resistor.....	EC-105
Reverse idler shaft (M/T) (FS5R30A)	MT-36
Reverse idler shaft (M/T) (FS5W71C)	MT-15
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)	MT-9
Reverse main gear (M/T) (FS5R30A)	MT-36
Reverse main gear (M/T) (FS5W71C)	MT-15
Ring gear diff. inspection (C200).....	PD-38
Ring gear diff. inspection (H233B)	PD-60
Road wheel size	GI-46
Roof trim.....	BT-21
Room lamp - See Interior lamp.....	EL-85
Rotor disc (front)	FA-16

S

S/SIG - Wiring diagram.....	EC-149
SAE J1930 terminology list.....	GI-55
SMJ (super multiple junction)	Foldout
SRS - See Supplemental Restraint System	RS-6
SRS Trouble diagnoses (2WD models)	RS-17
SRS Trouble diagnoses (4WD models)	RS-22
START - Wiring diagram.....	EL-26
SWL/V - Wiring diagram.....	EC-163
Screw jack.....	GI-48
Seal - See Exterior.....	BT-24
Seat belt inspection.....	MA-40
Seat belt, front	RS-3
Seat belt, rear.....	RS-4
Seat, front.....	BT-30
Seat, rear	BT-33
Self-diagnostic results.....	EC-38
Shift control (Transfer)	TF-10

Shift control components (M/T) (FS5R30A)	MT-38
Shift control components (M/T) (FS5W71C)	MT-17
Shift fork (M/T) (FS5R30A)	MT-38
Shift fork (M/T) (FS5W71C)	MT-17
Shift lever (FS5R30A)	MT-38
Shift lever (FS5W71C)	MT-17
Shock absorber (front)	FA-28
Shock absorber (rear).....	RA-13
Side bearing preload (R180A).....	PD-23
Side bearing preload (C200)	PD-45
Side trim	BT-15
Side window	BT-38
Spark plug replacement	MA-20
Spiral cable	RS-11
Spot lamp	EL-85
Stabilizer bar (front)	FA-31
Standardized relay	EL-3
Start signal.....	EC-149
Starter	EL-33
Starting system.....	EL-26
Steering gear and linkage inspection.....	MA-37
Steering gear oil level	MA-38
Steering knuckle.....	FA-18
Steering linkage	ST-37
Steering wheel and column	ST-9
Steering wheel play.....	ST-6
Steering wheel turning force	ST-6
Striking rod (M/T) (FS5R30A)	MT-38
Striking rod (M/T) (FS5W71C)	MT-17
Sub-gear (M/T) (FS5R30A)	MT-36
Sub-gear (M/T) (FS5W71C)	MT-15
Sunroof	BT-35
Supplemental Restraint System	RS-6
Supplemental restraint system - Wiring diagram (2WD models)	RS-18
Supplemental restraint system - Wiring diagram (4WD models)	RS-26
Swirl control valve control solenoid valve	EC-161
Symbols and abbreviations.....	GI-8
Synchronizer (M/T) (FS5R30A)	MT-36
Synchronizer (M/T) (FS5W71C)	MT-15

T

TAIL/L - Wiring diagram	EL-66
TPS - Wiring diagram	EC-115
TURN - Wiring diagram.....	EL-75
Tail lamp	EL-66
Temperature control cable and linkage adjustment	HA-47
Tension rod (front)	FA-33
Thermal protector	HA-45
Thermo control amp	HA-44
Thermostat (KA24 engine)	LC-8
Thermostat (TD25 engine)	LC-23
Three way catalyst precautions	GI-4

ALPHABETICAL INDEX

Throttle body	EM-9
Throttle position sensor (TPS).....	EC-113
Throwout bearing - See Clutch release bearing.....	CL-9
Tie-rod	ST-37
Tie-rod ball joints.....	ST-37
Tightening torque of standard bolts.....	GI-54
Timing chain	EM-13
Timing gear	EM-89
Tire rotation	MA-35
Tire size	GI-46
Tooth contact (R180A)	PD-26
Tooth contact (C200).....	PD-49
Tooth contact (H233B)	PD-70
Torsion bar spring	FA-28
Tow truck towing	GI-51
Towing point.....	GI-53
Transfer case	TF-8
Transfer oil replacement	MA-33
Transfer serial number.....	GI-43
Transmission case (M/T) (FS5R30A).....	MT-35
Transmission case (M/T) (FS5W71C).....	MT-14
Transmission serial number.....	GI-43
Tread - FR&RR (Dimensions)	GI-44
Trim	BT-15
Triple pressure switch	HA-12, 44
Turn signal lamp.....	EL-74
Two-pole lift.....	GI-50

U

Under body.....	BT-46
Upper link (front susp.)	FA-31

V

VSS - Wiring diagram	EC-119
Vacuum hose (brake system).....	BR-17
Vacuum hose drawing (ECCS).....	EC-12
Vacuum pump.....	BR-19
Valve clearance adjustment	MA-23
Valve clearance	EM-31
Valve guide (KA24 engine)	EM-29

Valve guide (TD25 engine)	EM-56
Valve lifter.....	EM-60
Valve seat (KA24 engine)	EM-31
Valve seat (TD25 engine)	EM-57
Valve spring (KA24 engine)	EM-32
Valve spring (TD25 engine)	EM-60
Vehicle identification number.....	GI-40
Vehicle recovery (freeing a stuck vehicle)	GI-53
Vehicle speed sensor (VSS).....	EC-118
Ventilator door control rod adjustment	HA-45
Viscosity number (SAE)	MA-13

W

WARN - Wiring diagram.....	EL-106
WINDOW - Wiring diagram.....	EL-157
WIPER - Wiring diagram.....	EL-122
Warning lamps	EL-105
Washer, front.....	EL-120
Water cock control rod adjustment.....	HA-46
Water pump (KA24 engine)	LC-7
Water pump (TD25 engine)	LC-21
Weatherstrip - See Exterior	BT-24
Wheel alignment (front).....	FA-7
Wheel balance.....	MA-34
Wheel bearing (front axle)	FA-5
Wheel bearing (rear).....	RA-4
Wheel hub (front)	FA-16
Wheel sensors (ABS)	BR-35
Wheel size	GI-46
Wheelbase (Dimensions)	GI-44
Width (Dimensions).....	GI-44
Window, back	BT-24
Window, door	BT-10
Window, side.....	BT-38
Windshield.....	BT-36
Wiper, front.....	EL-120
Wiring diagram (cell code) list.....	EL-253
Wiring diagrams	GI-9
Withdrawal lever (clutch).....	CL-9
Wrist pin - See Piston pin inspection.....	EM-39