

<SUPPLEMENT-I>

ALPHABETICAL INDEX

SECTION **IDX**

ALPHABETICAL INDEX

A

A/C component location (auto A/C).....	HA-1022
A/C compressor clutch removal and installation	HA-1087
A/C control operation (auto A/C).....	HA-1012
A/C mode switch (auto A/C).....	HA-1070
A/C operational check (auto A/C).....	HA-1014
A/C push control (auto A/C)	HA-1062
A/C switch (auto A/C).....	HA-1057
A/C switch (manual A/C).....	HA-1009
A/C trouble diagnoses (auto A/C)	HA-1013
A/C trouble diagnoses (manual A/C).....	HA-1002
A/C, A - Wiring diagram (auto A/C).....	HA-1025
A/C, M - Wiring diagram.....	HA-1003
Air bleeding (hydraulic clutch).....	CL-1004
Air cleaner filter replacement	MA-1005
Air mix door control linkage adjust- ment (auto A/C)	HA-1065
Air mix. door motor (auto A/C)	HA-1077
Alternator	EL-1012
Ambient sensor (auto A/C).....	HA-1068
Aspirator motor (auto A/C)	HA-1068
Audio	EL-1032
Auto air conditioner - Wiring diagram (auto A/C).....	HA-1025
Automatic amplifier (auto A/C)	HA-1070

B

Battery	EL-1010
---------------	---------

C

Camshaft inspection.....	EM-1017
Clutch cover	CL-1009
Clutch disc.....	CL-1008
Clutch operating cylinder	CL-1005
Clutch pedal	CL-1003
Clutch release bearing.....	CL-1006
Clutch release mechanism.....	CL-1006
Clutch withdrawal lever	CL-1006
Compressor clutch removal and installation	HA-1087
CONSULT general information.....	GI-1003
Cooling circuit (TD25Ti engine)	LC-1003
Cylinder head	EM-1011

D

DEF - Wiring diagram	EL-1031
Dim-dip lamp system.....	EL-1013
DIMDIP - Wiring diagram	EL-1013
Dimensions	GI-1007
D/LOCK - Wiring diagram	EL-1041

Dome light - See Interior lamp.....	EL-1024
-------------------------------------	---------

E

EGR control valve.....	EC-1009
Engine oil replacement.....	MA-1004
Engine outer component parts.....	EM-1002
Engine removal	EM-1016
Engine speed sensor.....	EC-1009
Exhaust system.....	FE-1002

F

Fan switch (auto A/C)	HA-1057, 1058, 1082
Fan switch (manual A/C).....	HA-1009
FICD - Wiring diagram.....	EC-1011
Fluids.....	MA-1002
Flywheel (clutch)	CL-1008

G

GLOW - Wiring diagram	EC-1004
Grease.....	MA-1002
Ground clearance	GI-1007

H

Harness layout	EL-1054
Hazard warning lamp	EL-1016
Height (Dimensions)	GI-1007

I

ILL - Wiring diagram.....	EL-1022
Illumination	EL-1022
In vehicle sensor (auto A/C).....	HA-1067
INT/L - Wiring diagram.....	EL-1024
Intake door control linkage adjustment (auto A/C).....	HA-1065
Intake door motor (auto A/C).....	HA-1061
Interior lamp	EL-1024

L

Length (Dimensions).....	GI-1007
Location of electrical units.....	EL-1051
Lubricants.....	MA-1002
Lubrication circuit (TD25Ti engine).....	LC-1002

M

Mirror defogger.....	EL-1031
----------------------	---------

ALPHABETICAL INDEX

Mode door control linkage adjustment
(auto A/C)..... HA-1064
Mode door motor (auto A/C) HA-1061
Model variation..... GI-1004
M/T removal and installation MT-1002
MULTI - Wiring diagram..... EL-1043

O

Oil change (capacity) MA-1002
Oil pan (engine)..... EM-1004
Oil seal replacement (engine) EM-1015
Operating cylinder (clutch) CL-1005

P

Piston assembly EM-1017
Piston ring inspection EM-1017
Potentiometer..... EC-1009
POWER - Wiring diagram EL-1003
Power door lock EL-1041
Power steering hydraulic pressure ST-1002
Power supply routing..... EL-1002
Pressure plate - See Clutch cover..... CL-1009

R

Rear window defogger EL-1031
Refrigerant lines..... HA-1084
Release bearing (clutch) CL-1006
Room lamp - See Interior lamp..... EL-1024

S

SMJ (super multiple junction) Foldout
Spot lamp EL-1024

SRS - Wiring diagram..... RS-1003
SRS Trouble diagnoses..... RS-1003
Starter..... EL-1011
Starting system..... EL-1011
Steering wheel and column ST-1003
Sunload sensor (auto A/C)..... HA-1069
Supplemental restraint system - Wiring
diagram RS-1003

T

Thermo control amp (auto A/C)..... HA-1058
Thermo control amp (manual A/C)..... HA-1010
Thermo switch (auto A/C)..... HA-1059
Thermo switch (manual A/C)..... HA-1010
Throwout bearing - See Clutch release
bearing..... CL-1006
Tread-FR&RR (Dimensions)..... GI-1007
Triple pressure switch (auto A/C)..... HA-1058
Triple pressure switch (manual A/C) HA-1010
Turbocharger precautions..... GI-1002
Turn signal lamp..... EL-1016

V

Viscosity number (SAE) MA-1003

W

Warning lamps EL-1026
Wheel alignment (front)..... FA-1002
Wheelbase (Dimensions)..... GI-1007
Width (Dimensions)..... GI-1007
WINDOW - Wiring diagram..... EL-1033
Wiring Diagram (Cell code) list EL-1067
Withdrawal lever (clutch)..... CL-1006