

<SUPPLEMENT-II>

ALPHABETICAL INDEX

SECTION **IDX**

ALPHABETICAL INDEX

A

A/C harness layout (auto A/C).....HA-2026
A/C operational check.....HA-2041
A/C relay.....HA-2021, 2073
A/C self-diagnoses (auto A/C).....HA-2034
A/C switch.....HA-2021
A/C system description (auto A/C).....HA-2023
A/C trouble diagnoses (manual A/C).....HA-2003
A/C, A - Wiring diagram.....HA-2028
A/C, M - Wiring diagram.....HA-2005
AAC/V - Wiring diagram.....EC-2011
Air bag.....RS-2004
Air bag disposal.....RS-2012
Air flow meter - See Mass air flow
sensor.....EC-2008
Air mix door control linkage
adjustment.....HA-2057
Air mix door motor.....HA-2057
Alternator.....EL-2016
Ambient sensor.....HA-2080
Antenna.....EL-2103
Anti-lock brake system - Wiring
diagram.....BR-2004, 2007
Aspirator motor.....HA-2084
Audio and A/C control removal and
installation - See Instrument panel.....BT-2004
Automatic amplifier.....HA-2032, 2045
Auxiliary air control (AAC) valve.....EC-2011

B

Back-up lamp.....EL-2035
Back-up lamp switch (M/T).....MT-2002
Baulk ring (M/T).....MT-2003

C

Camshaft position sensor (CMPS).....EC-2007
Center bearing assembly (propeller
shaft).....PD-2006
CHARGE - Wiring diagram.....EL-2013
Charging system.....EL-2013
CIGAR - Wiring diagram.....EL-2094
Cigarette lighter.....EL-2094
Clock.....EL-2095
CLOCK - Wiring diagram.....EL-2095
CMPS - Wiring diagram.....EC-2007
Collision diagnosis.....RS-2039
Combination meter.....EL-2049
Combination meter removal and instal-
lation - See Instrument panel.....BT-2004
Combination switch.....EL-2017
Control units (terminal arrangement).....EL-2176
Cooling fan control system.....LC-2002
Counter gear (M/T).....MT-2003
Coupling sleeve (M/T).....MT-2003

Crank angle sensor built into distribu-
tor - See Camshaft position sensor.....EC-2007
Crankshaft position sensor (POS).....EC-2007
Crankshaft position sensor (REF).....EC-2007
Cylinder head.....EM-2003

D

Daytime light system.....EL-2022
DEF - Wiring diagram.....EL-2096
Diagnosis sensor unit.....RS-2007
Differential carrier assembly.....PD-2008
Dim-dip lamp system.....EL-2025
Dimensions.....GI-2007
Door, front.....BT-2003

E

ECCS relay.....EC-2005
EGR - Wiring diagram.....EC-2027
EGRC/V - Wiring diagram.....EC-2013
Engine control circuit diagram.....EC-2004
Engine outer component parts.....EM-2002
EVAP canister purge control solenoid
valve.....EC-2013

F

F/HEAT - Wiring diagram.....EC-2033
F/PUMP - Wiring diagram.....EC-2015
Fan control amp.....HA-2064
Fan switch.....HA-2021
FICD - Wiring diagram.....EC-2018, 2034
Fog lamp, rear.....EL-2036
Fork rod (M/T).....MT-2006
Front door.....BT-2003
Front passenger air bag.....RS-2004
Front suspension.....FA-2002
Front wiper.....EL-2086
Fuel pump.....EC-2015
Fuel pump relay.....EC-2015
Fuse block.....EL-2175

G

Gauges.....EL-2049
Gear components (M/T).....MT-2003
Ground clearance.....GI-2007

H

H/AIM - Wiring diagram.....EL-2028
H/LAMP - Wiring diagram.....EL-2018
H02S - Wiring diagram.....EC-2010

ALPHABETICAL INDEX

Harness layout.....EL-2146
 Hazard warning lampEL-2038
 HeadlampEL-2018
 Headlamp washer.....EL-2092
 Headlining - See Roof trim.....BT-2010
 Heated oxygen sensor (HO2S)EC-2010
 Heated seatEL-2106
 HEATER - Wiring diagram.....HA-2003
 Height (Dimensions).....GI-2007
 HLC - Wiring diagram.....EL-2092
 HornEL-2093
 HORN - Wiring diagramEL-2093
 HSEAT - Wiring diagram.....EL-2106

I

IACV-AAC valve.....EC-2011
 ILL - Wiring diagram.....EL-2043
 Illumination.....EL-2043
 In vehicle sensor.....HA-2082
 Instrument panel.....BT-2004
 INT/L - Wiring diagram.....EL-2048
 Intake door control linkage
 adjustment.....HA-2061
 Intake sensorHA-2088
 InteriorBT-2007
 Interior lamp.....EL-2047

J

Jump seat.....BT-2012

K

Keyless entry system - See
 Multi-remote control systemEL-2129

L

Length (Dimensions).....GI-2007
 License lampEL-2030
 Location of electrical units.....EL-2143
 LubricantsMA-2003

M

MAFS - Wiring diagramEC-2008
 MAIN - Wiring diagramEC-2005
 Main drive gear (M/T)MT-2003
 Mainshaft (M/T).....MT-2003
 Mass air flow sensor (MAFS)EC-2008
 Meter.....EL-2049
 METER - Wiring diagramEL-2052
 MIL & Data link connectors circuit.....EC-2019

Mode door control linkage adjustmentHA-2051
 Mode door motorHA-2051
 MULTI - Wiring diagram.....EL-2131
 Multi-remote control systemEL-2129

N

NATS - Wiring diagramEL-2140
 Neutral position switch.....EC-2012

O

Oil change (capacity).....MA-2003

P

P/ANT - Wiring diagramEL-2103
 Park/neutral position switch (M/T)MT-2002
 Parking lamp.....EL-2030
 PGC/V - Wiring diagramEC-2013
 PNP/SW - Wiring diagramEC-2012
 POWER - Wiring diagramEL-2005
 Power door mirror.....EL-2104
 Power supply routing.....EL-2004
 Power windowEL-2108
 Propeller shaft.....PD-2004
 PST/SW - Wiring diagramEC-2016

R

R/FOG - Wiring diagramEL-2036
 Rear fog lamp.....EL-2036
 Rear window defoggerEL-2096
 Reverse idler shaft (M/T).....MT-2003
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T)MT-2002
 Reverse main gear (M/T)MT-2003
 Road wheel size.....GI-2007
 Roof trim.....BT-2010
 Room lampEL-2047
 ROOM/L - Wiring diagram.....EL-2047

S

S/SIG - Wiring diagram.....EC-2014
 Seat belt pre-tensionerRS-2004
 Seat belt pre-tensioner disposalRS-2012
 Shift control components (M/T)MT-2006
 Shift fork (M/T).....MT-2006
 Shift lever.....MT-2006
 Side trimBT-2007
 SMJ (super multiple junction).....EL-2173
 Spiral cableRS-2008
 Spot lampEL-2048

ALPHABETICAL INDEX

SRS - See Supplemental Restraint
 SystemRS-2004
 Start signalEC-2014
 START - Wiring diagramEL-2012
 Starting systemEL-2012
 Steering wheel and column.....ST-2002
 Stop lampEL-2034
 STOP/L - Wiring diagramEL-2034
 Striking rod (M/T).....MT-2006
 Sub-gear (M/T)MT-2003
 Sunload sensorHA-2084
 Supplemental Restraint SystemRS-2004
 Supplemental restraint system - Wiring
 diagramRS-2020
 Swirl control valve control solenoid
 valveEC-2017
 SWL/V - Wiring diagramEC-2017
 Synchronizer (M/T)MT-2003

T

Tail lampEL-2030
 TAIL/L - Wiring diagramEL-2030
 Thermal protector.....HA-2021
 Thermo control ampHA-2022, 2073
 Thermo switchHA-2022, 2074

Tire size.....GI-2007
 Transmission case (M/T).....MT-2002, 2005
 Tread-FR&RR (Dimensions)GI-2007
 TrimBT-2007
 Triple pressure switch.....HA-2022, 2073
 Turn signal lamp.....EL-2038

V

Vehicle identification numberGI-2006
 Vehicle speed sensor (VSS).....EC-2009
 VSS - Wiring diagramEC-2009

W

Warning lamps.....EL-2072
 Washer, frontEL-2086
 Wheel size.....GI-2007
 Wheelbase (Dimensions)GI-2007
 Width (Dimensions).....GI-2007
 WINDOW - Wiring diagramEL-2109
 WIPER - Wiring diagramEL-2086
 Wiring diagram (cell code) list.....EL-2171