

SECTION BR

MODIFICATION NOTICE:

 
- Wiring Diagrams have been changed.

CONTENTS

TROUBLE DIAGNOSES	3002	Schematic/4 Wheel Sensors Models.....	3009
Schematic/3 Wheel Sensors Models.....	3002	Wiring Diagram - ABS -/4 Wheel Sensors LHD	
Wiring Diagram - ABS -/3 Wheel Sensors LHD		Models.....	3010
Models.....	3003	Wiring Diagram - ABS -/4 Wheel Sensors	
Wiring Diagram - ABS -/3 Wheel Sensors		RHD Models.....	3013
RHD Models.....	3006		

TROUBLE DIAGNOSES

Schematic/3 Wheel Sensors Models






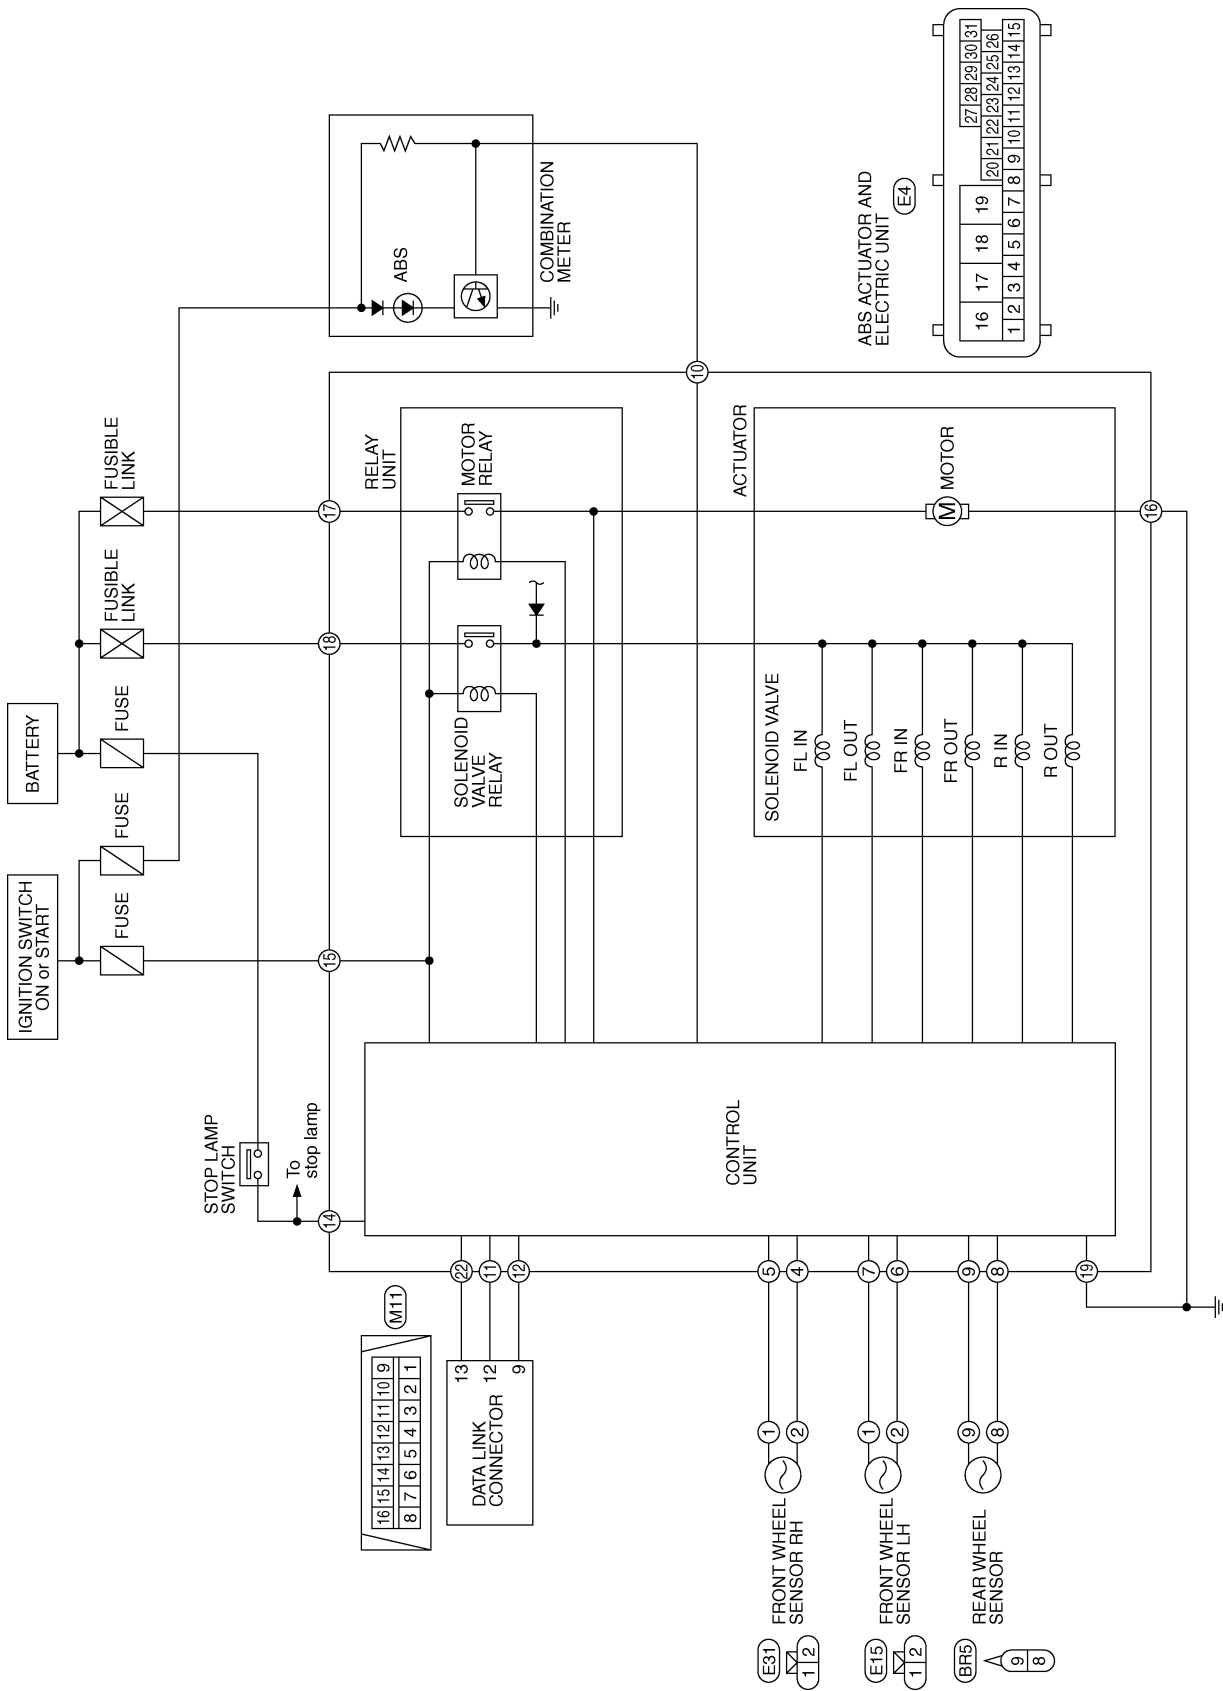


GBR006A

TROUBLE DIAGNOSES

Wiring Diagram — ABS —/3 Wheel Sensors LHD Models

      
BR-ABS-01

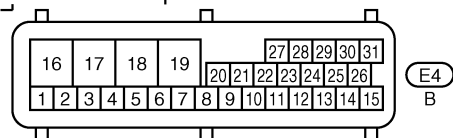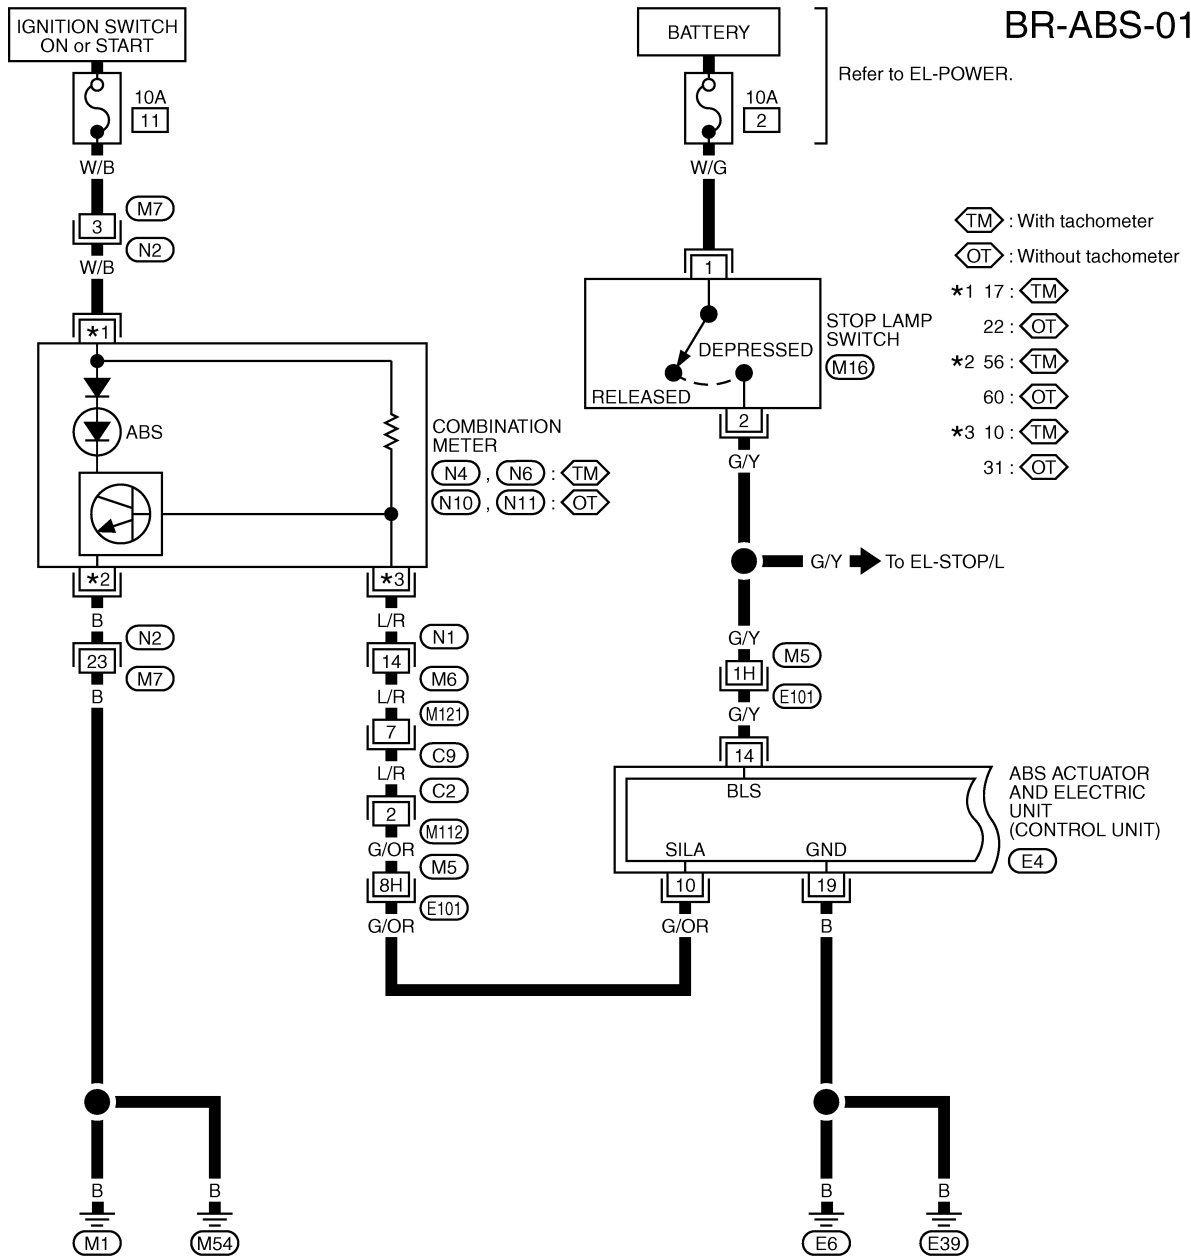

TROUBLE DIAGNOSES


Wiring Diagram — ABS —/3 Wheel Sensors LHD Models (Cont'd)

 BR-ABS-02

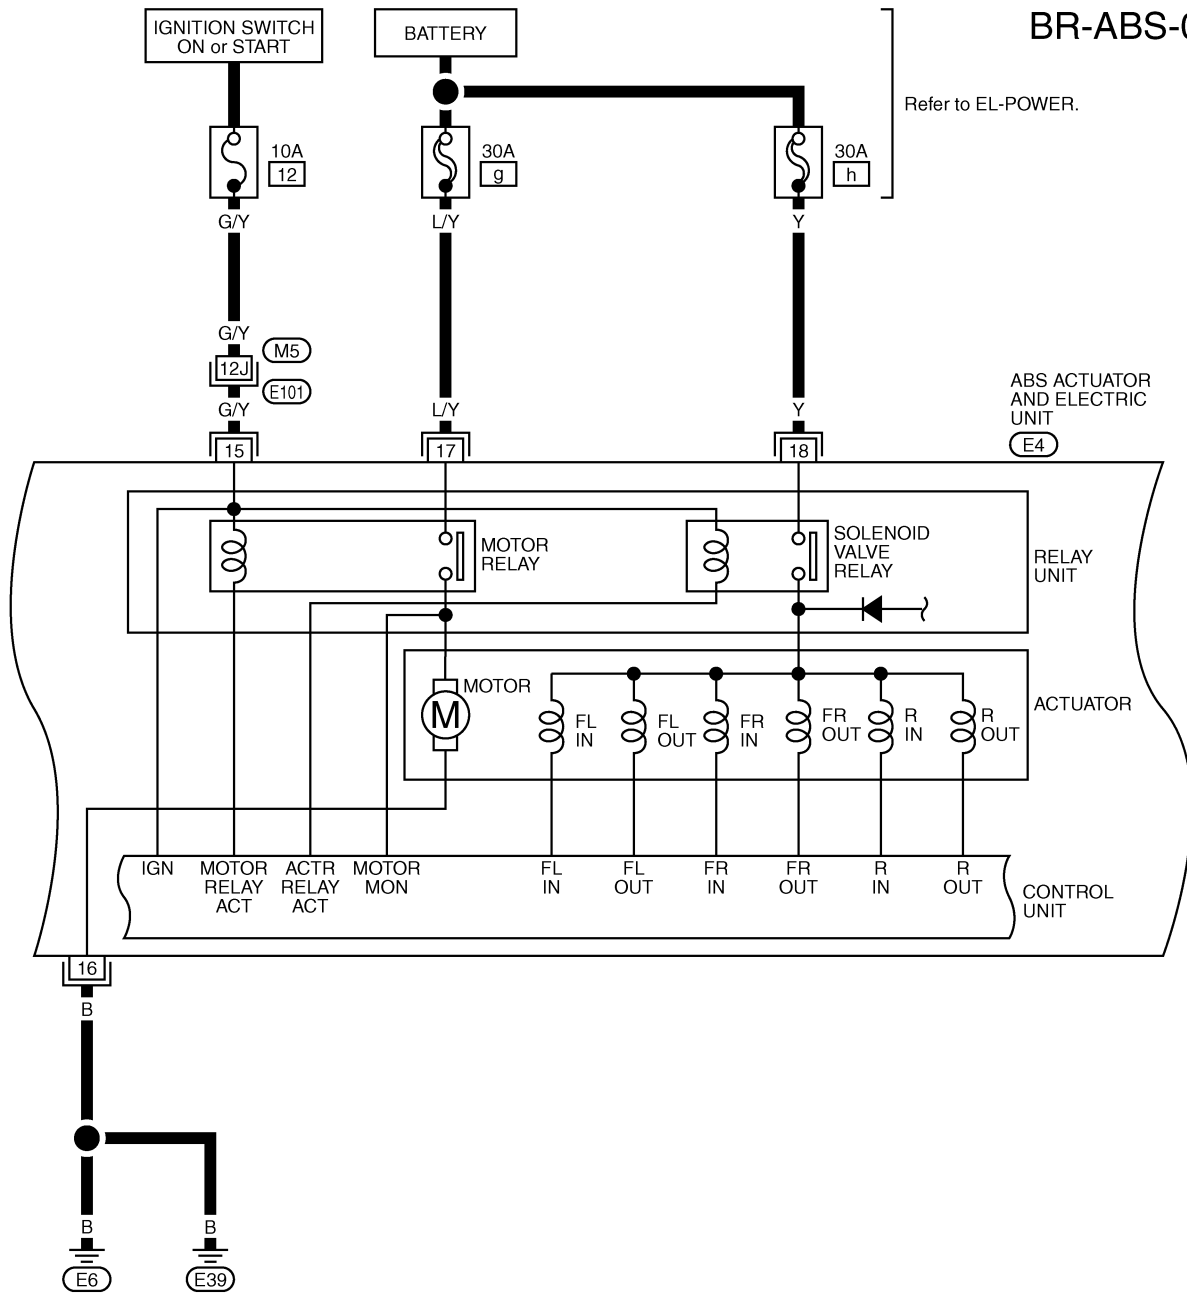

Refer to EL-POWER.

 ABS ACTUATOR AND ELECTRIC UNIT
(E4)

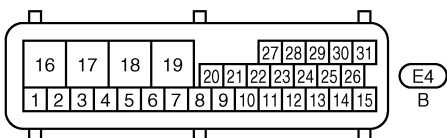




Refer to last page (Foldout page).

(M5), (E101)

TROUBLE DIAGNOSES

Wiring Diagram — ABS —/3 Wheel Sensors LHD Models (Cont'd)

   BR-ABS-03

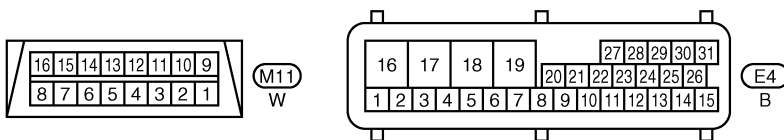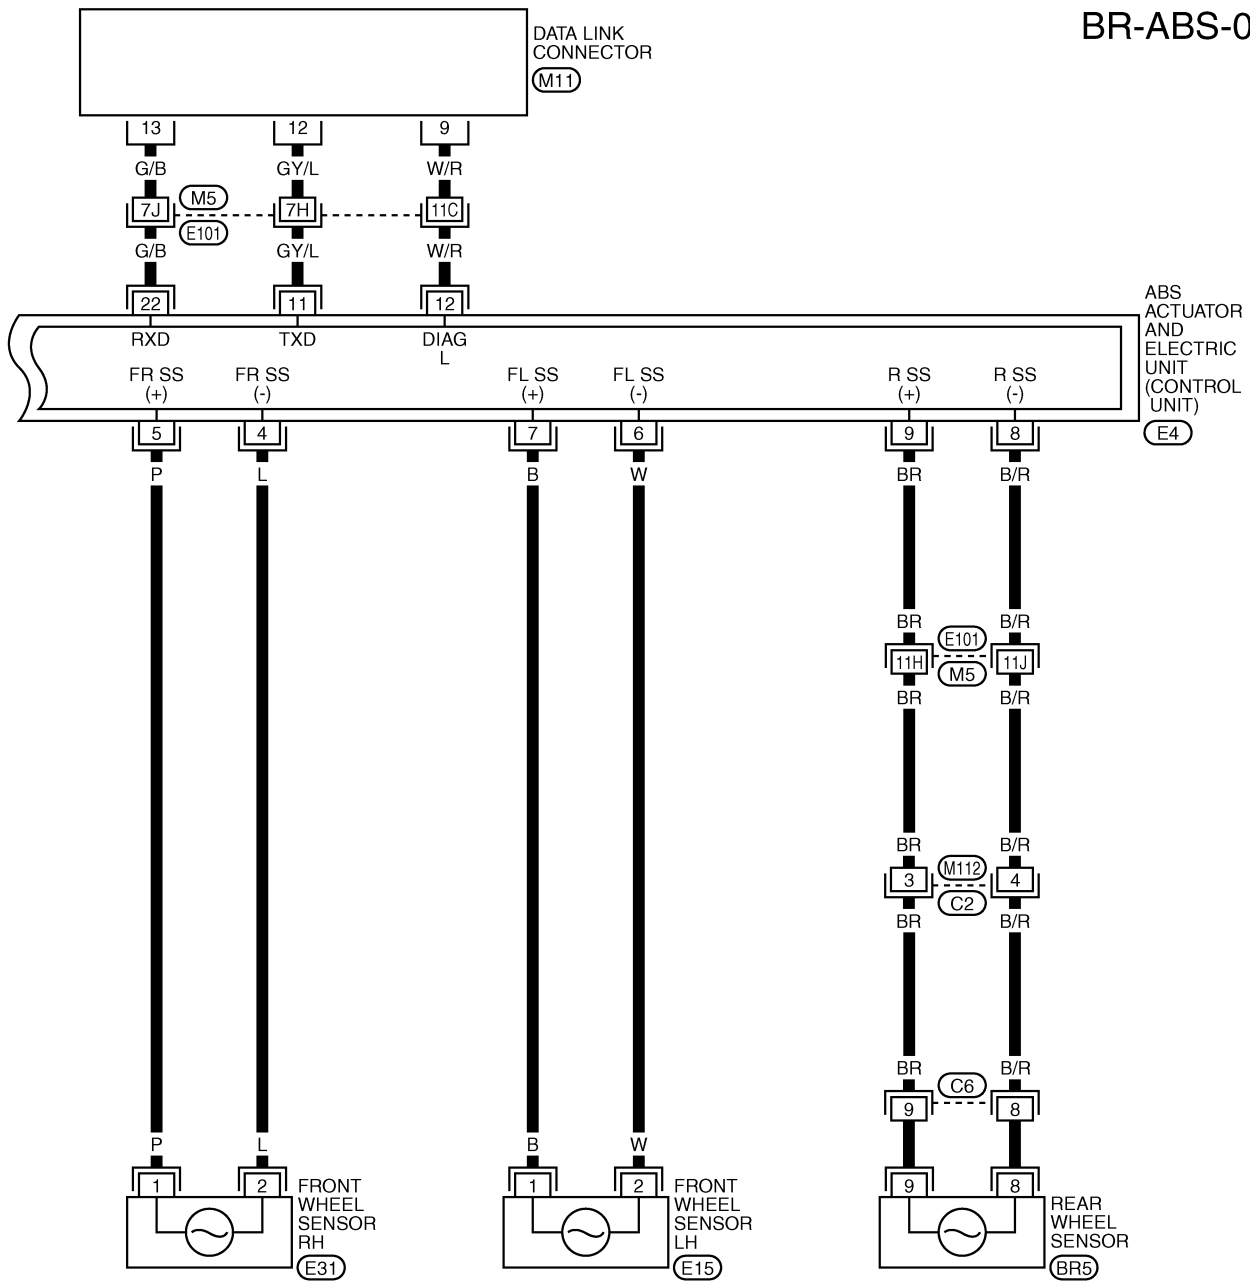

*: This connector is not shown in "HARNESS LAYOUT", EL section.

Refer to last page (Foldout page).





(M5), (E101)

GBR009A

TROUBLE DIAGNOSES

Wiring Diagram — ABS —/3 Wheel Sensors RHD Models

    BR-ABS-04

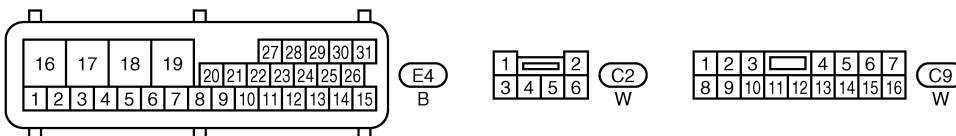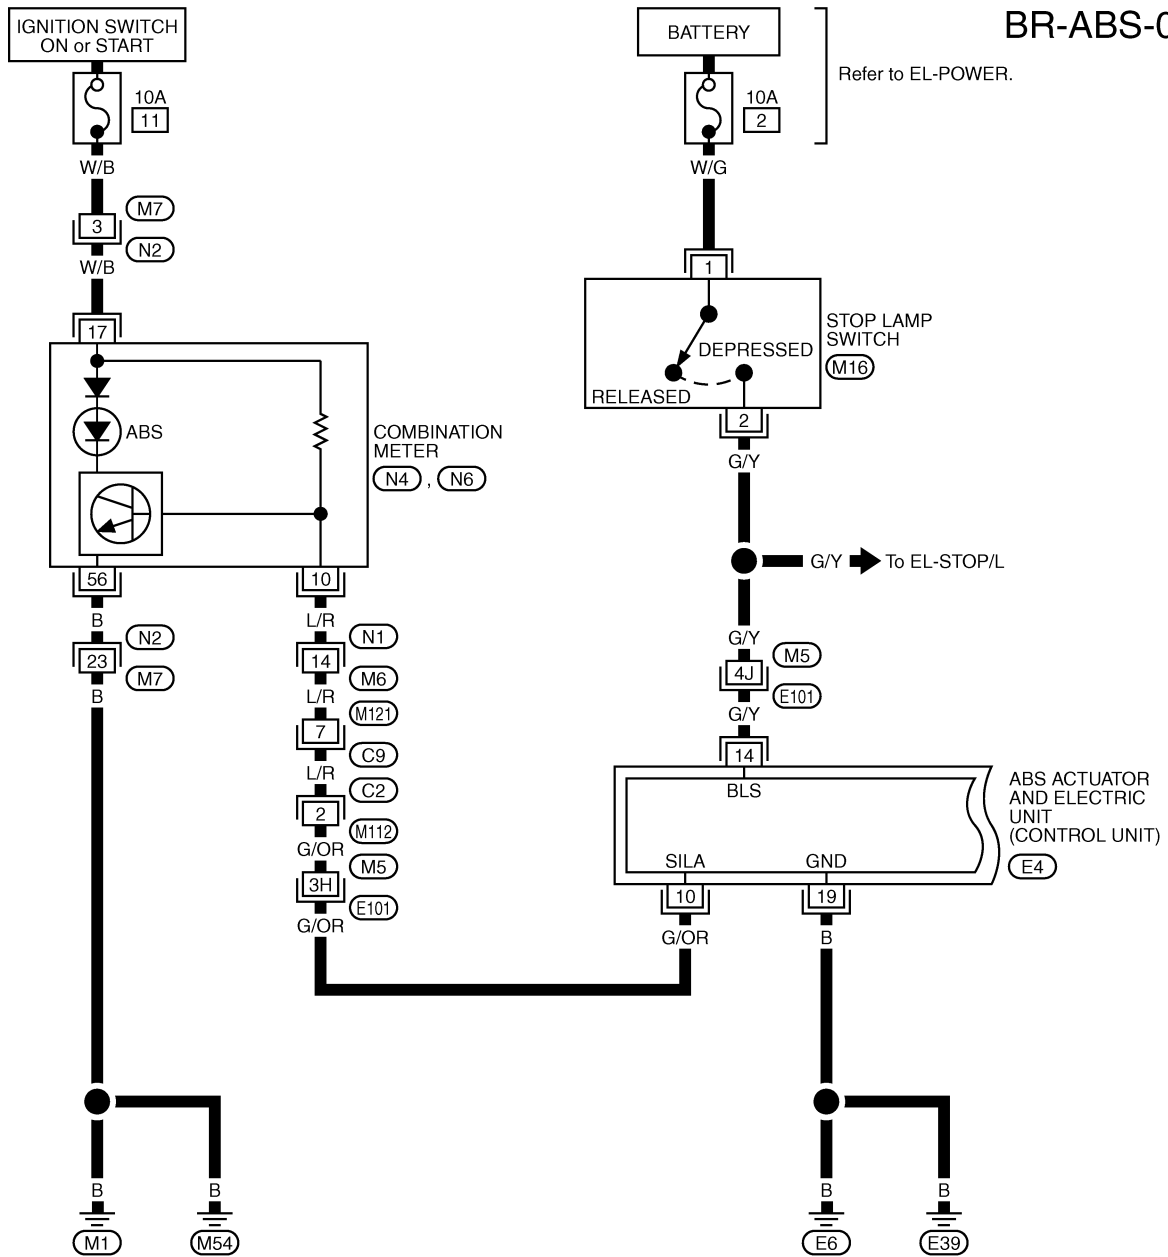



Refer to last page (Foldout page).

(M5), (E101)

TROUBLE DIAGNOSES

Wiring Diagram — ABS —/3 Wheel Sensors RHD Models (Cont'd)

  BR-ABS-05

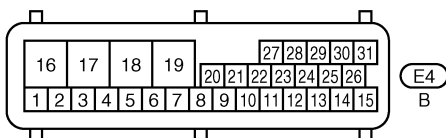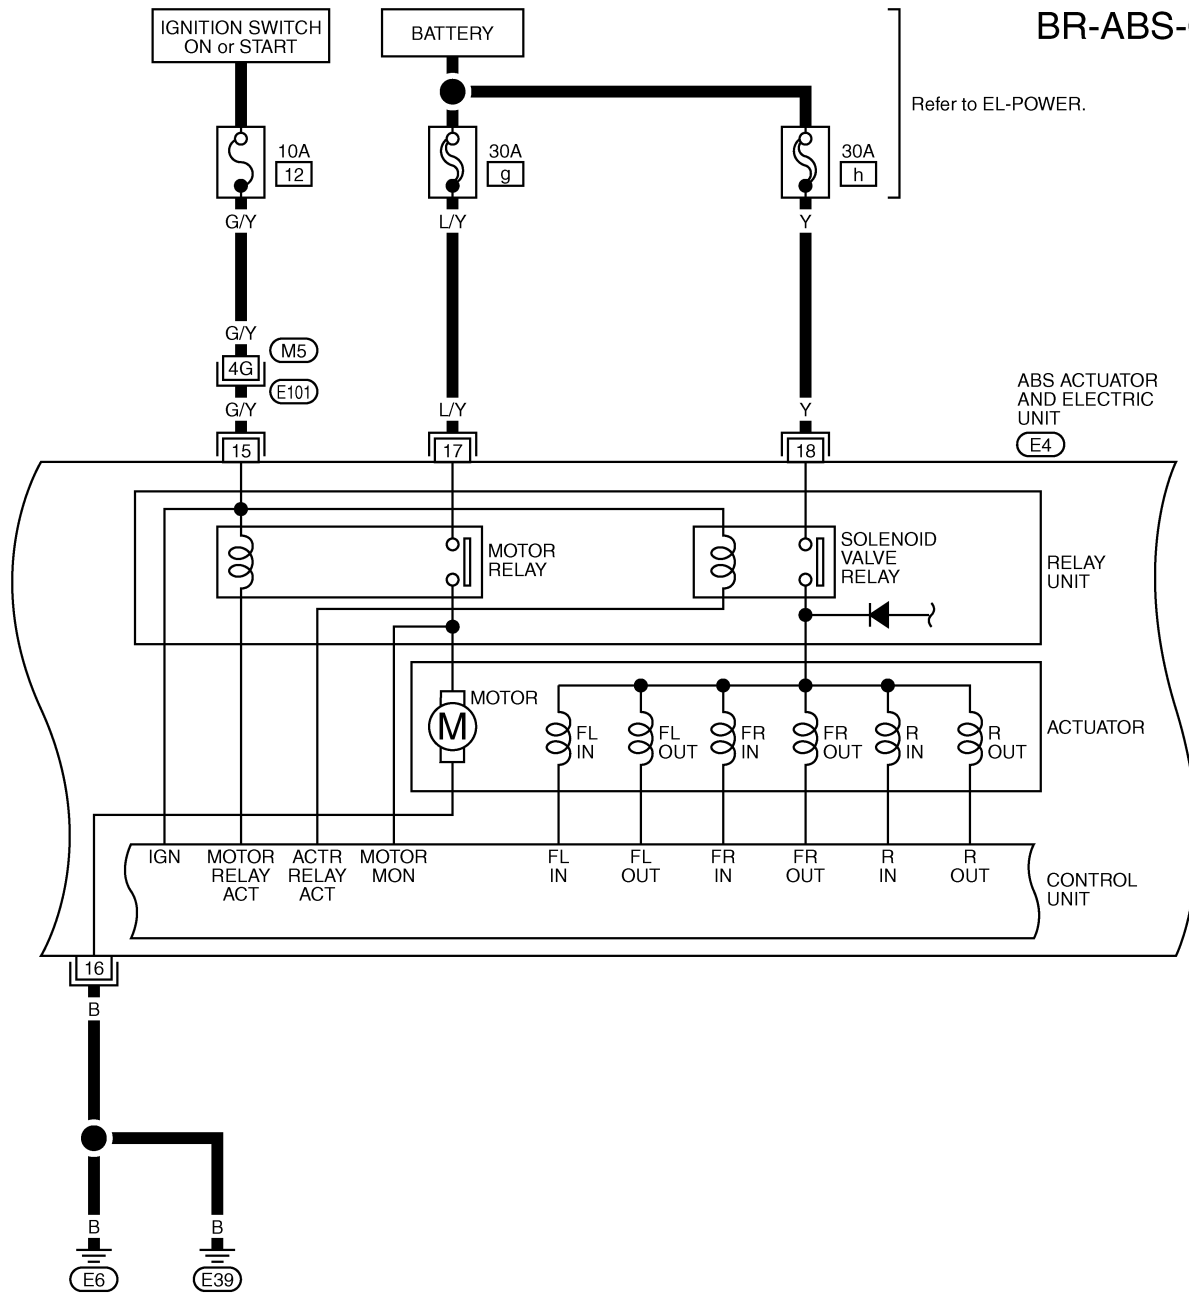




Refer to last page (Foldout page).

(M5), (E101)

TROUBLE DIAGNOSES

Wiring Diagram — ABS —/3 Wheel Sensors RHD Models (Cont'd)

   BR-ABS-06

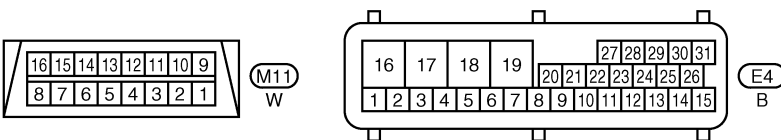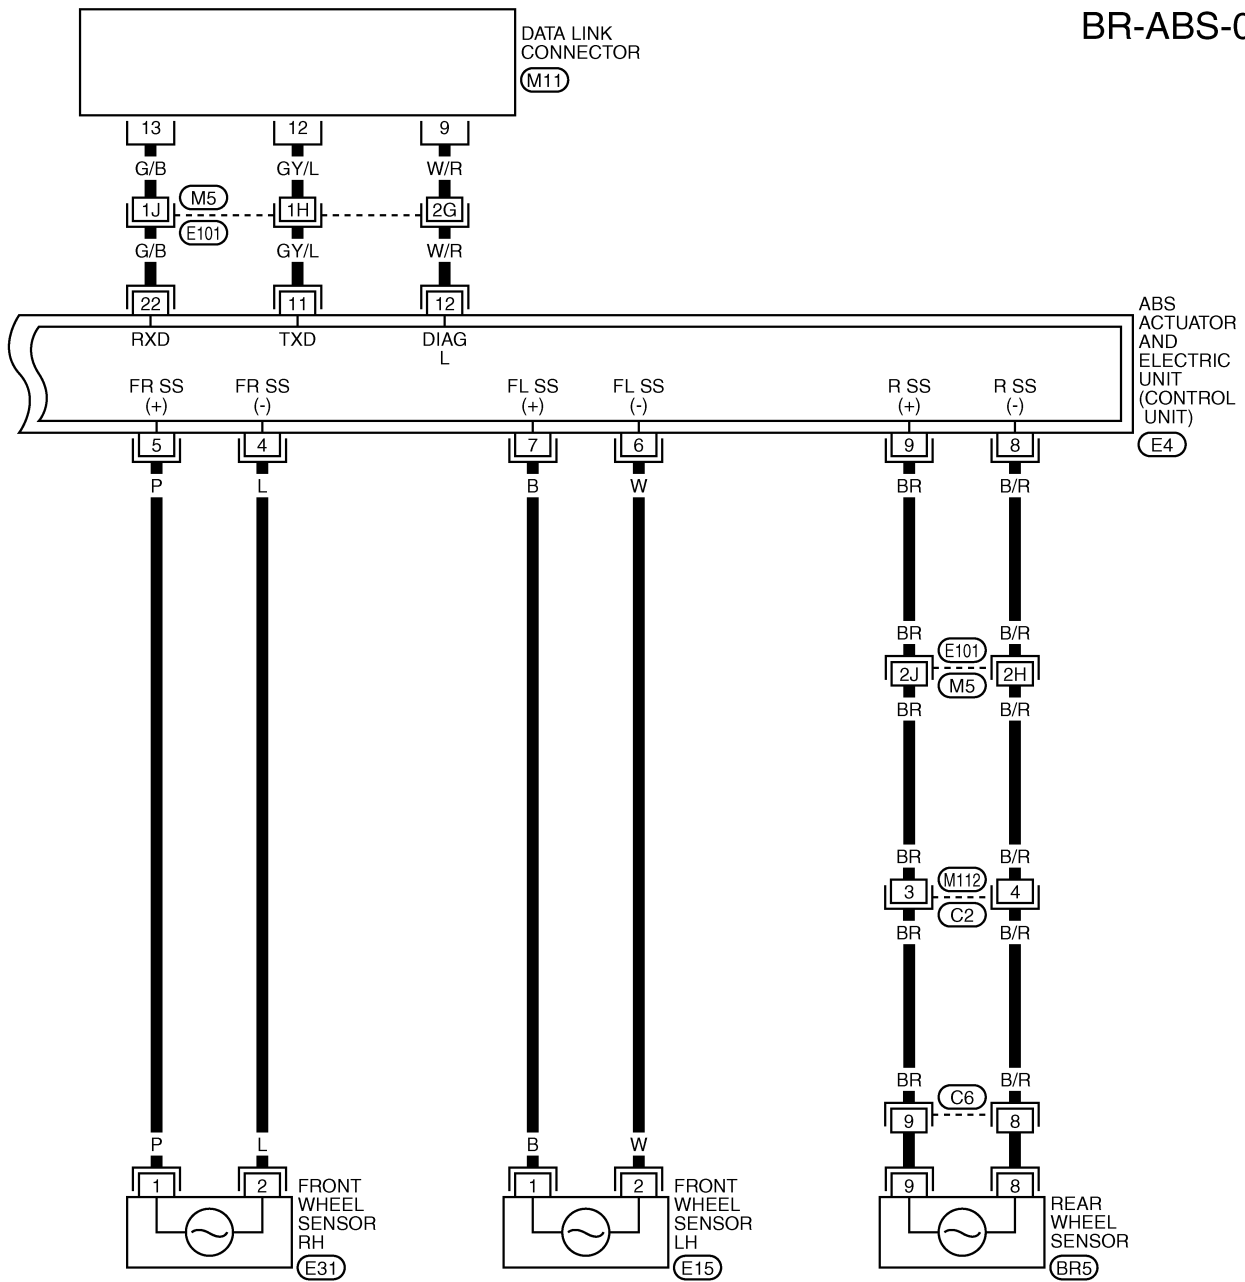


*: This connector is not shown in "HARNESS LAYOUT", EL section.

Refer to last page (Foldout page).

(M5), (E101)

TROUBLE DIAGNOSES


 
Schematic/4 Wheel Sensors Models

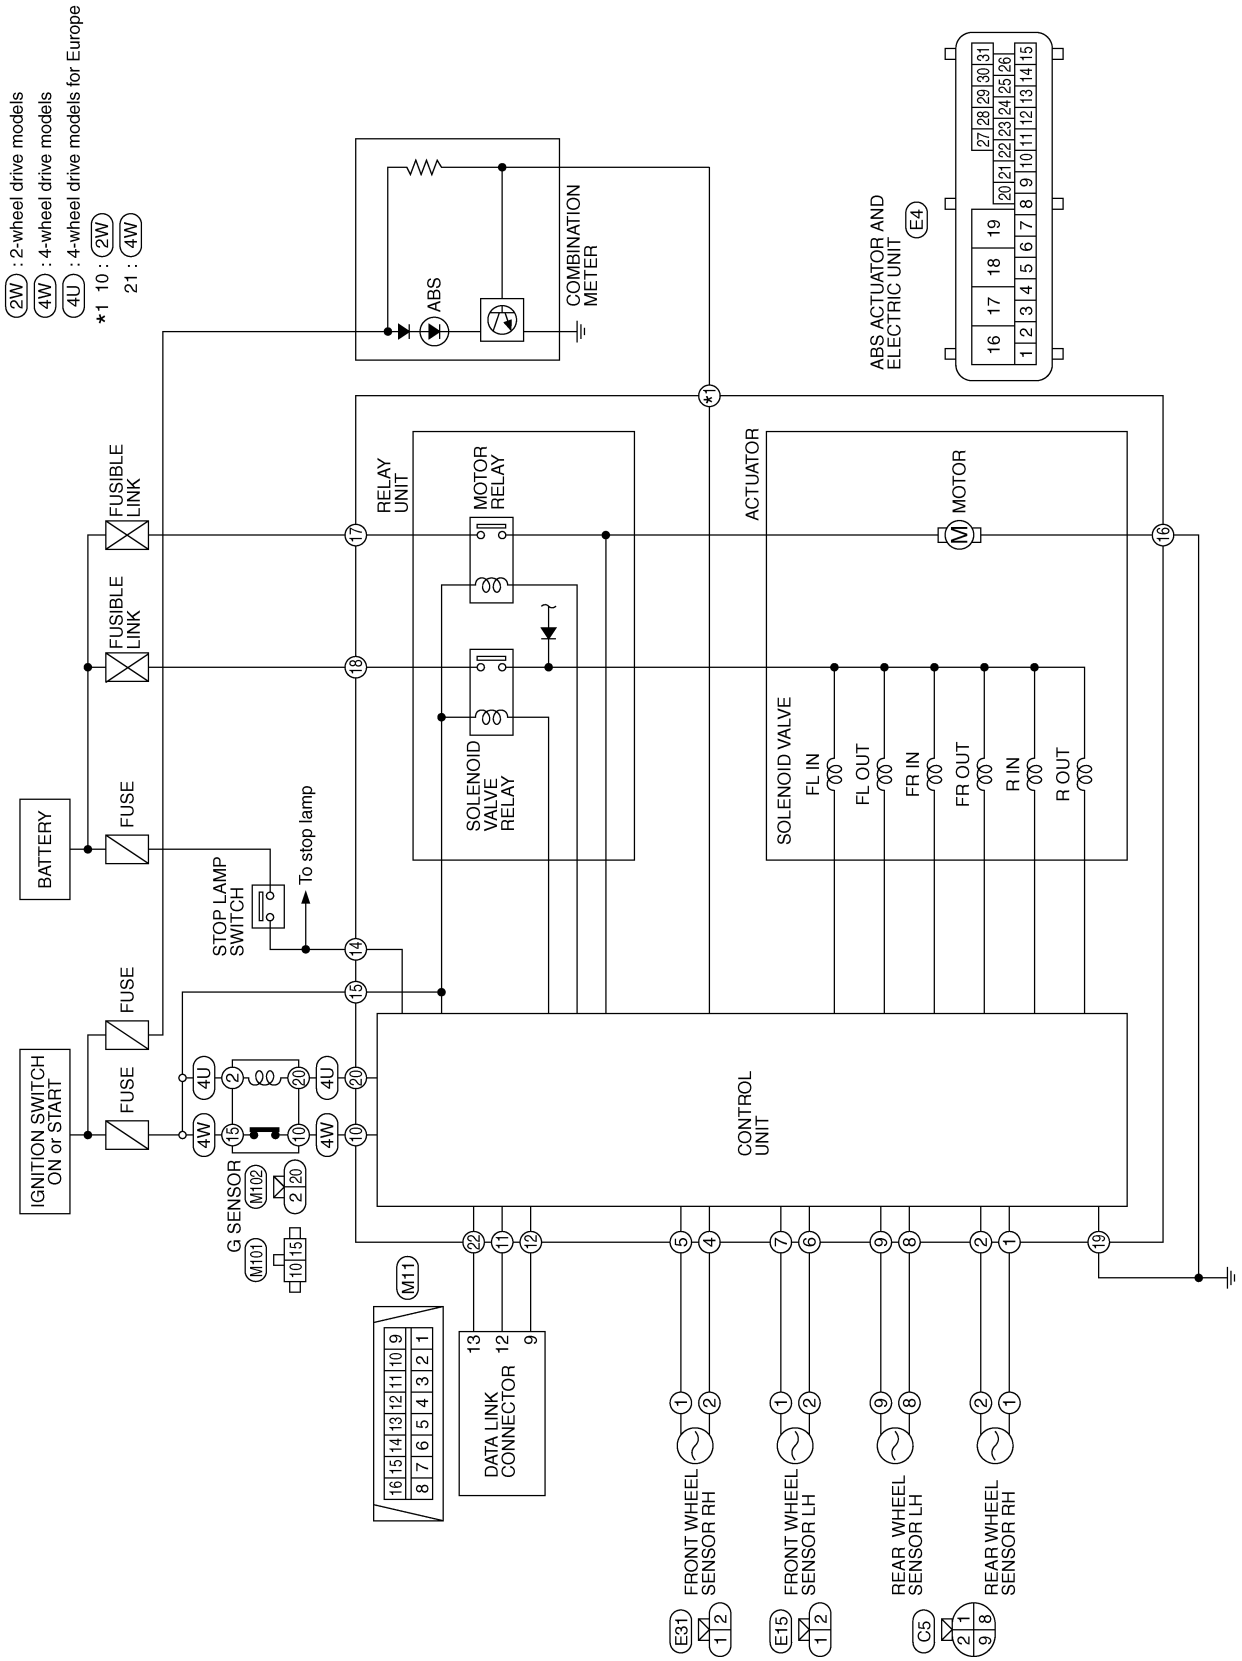

TROUBLE DIAGNOSES





Wiring Diagram — ABS —/4 Wheel Sensors LHD Models

  BR-ABS-07

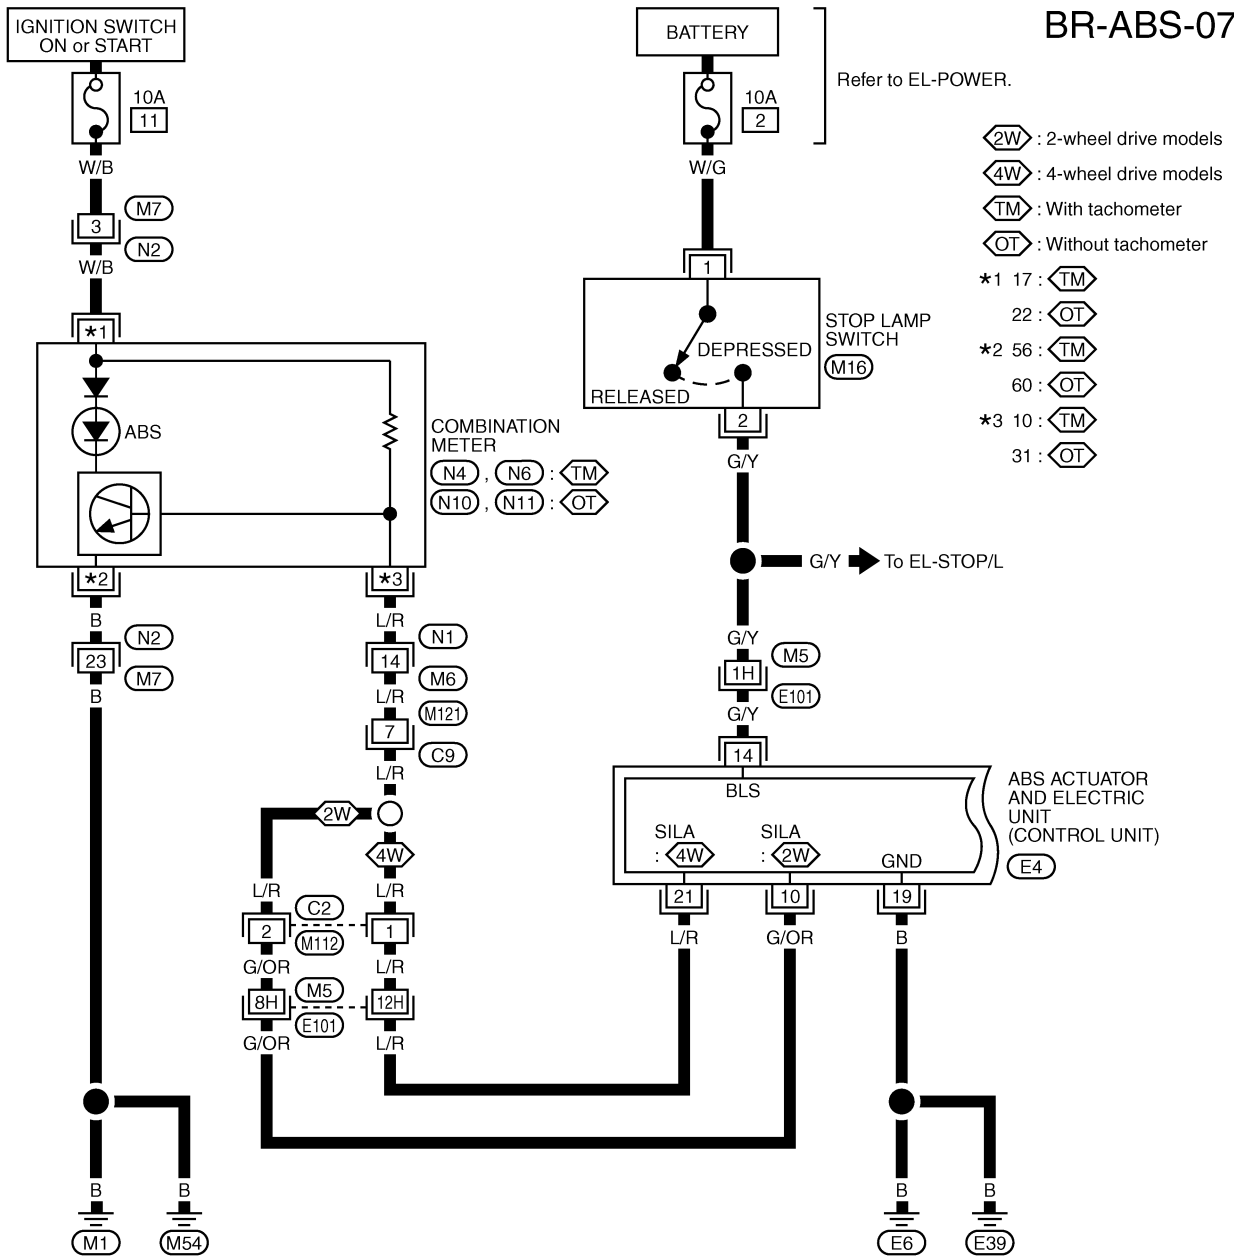

Refer to last page (Foldout page).

    M5, E101

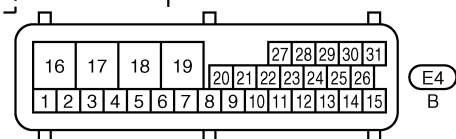

TROUBLE DIAGNOSES

 
 
Wiring Diagram — ABS —/4 Wheel Sensors LHD Models (Cont'd)

BR-ABS-08

Refer to EL-POWER.

: 4-wheel drive models

ABS ACTUATOR
AND ELECTRIC
UNIT

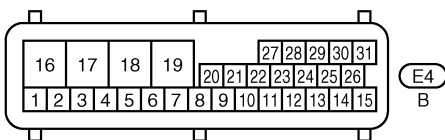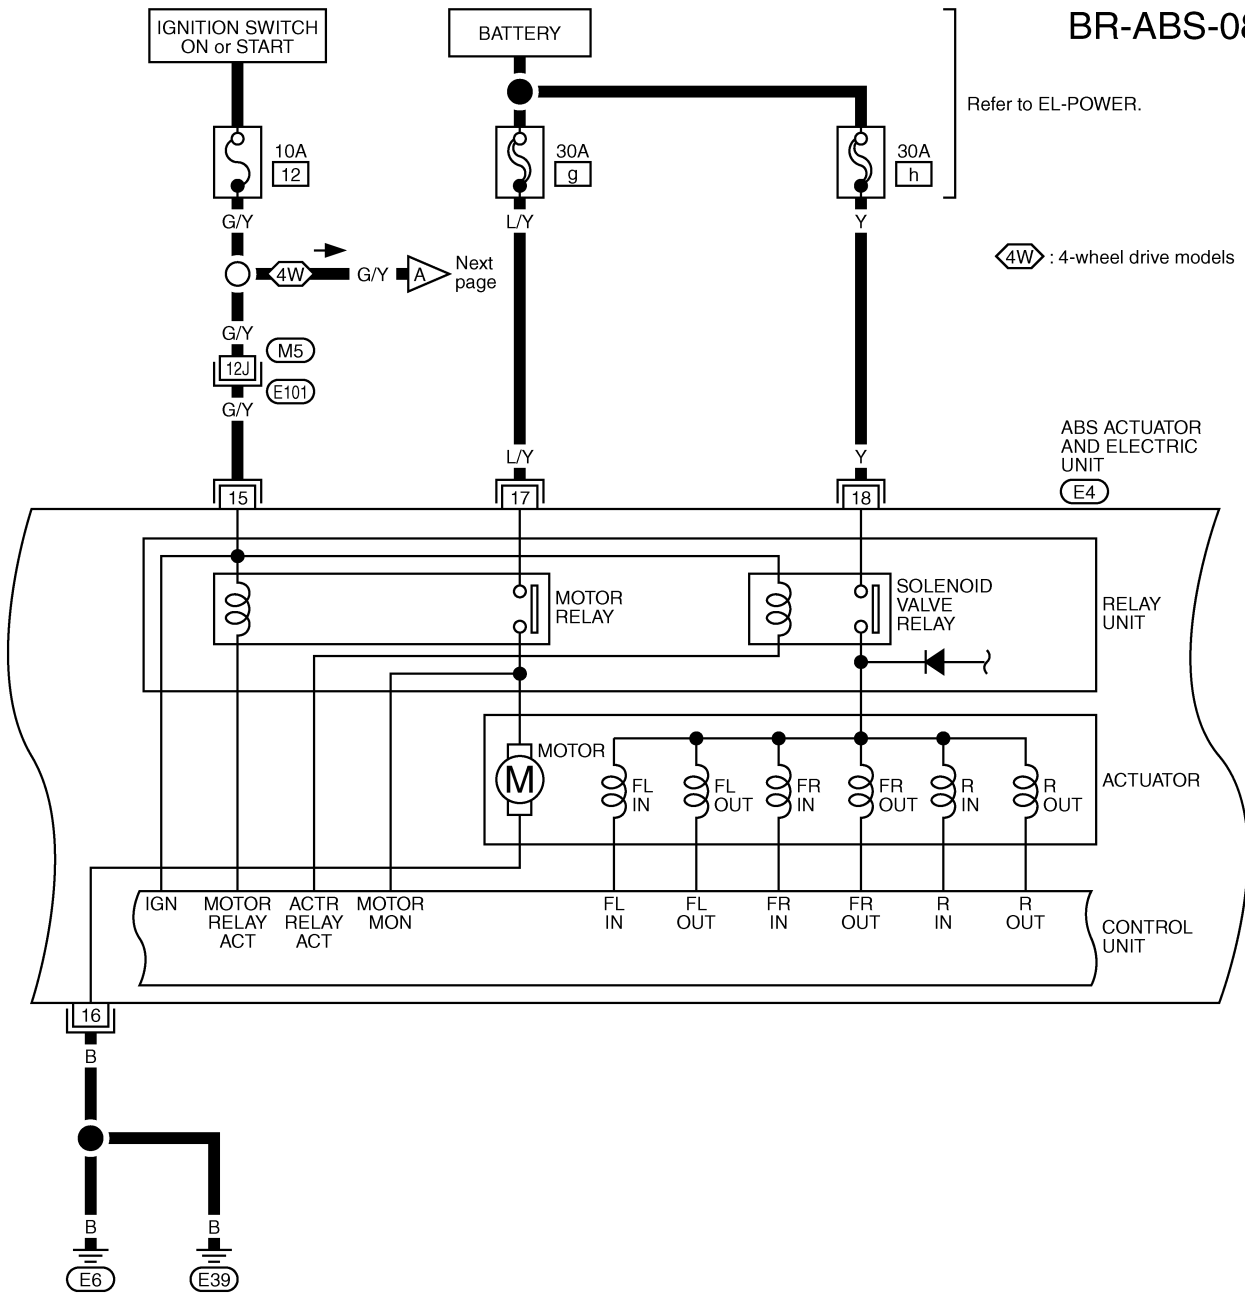

Refer to last page (Foldout page).




,

BGR029A

TROUBLE DIAGNOSES






Wiring Diagram — ABS —/4 Wheel Sensors LHD Models (Cont'd)

   BR-ABS-09

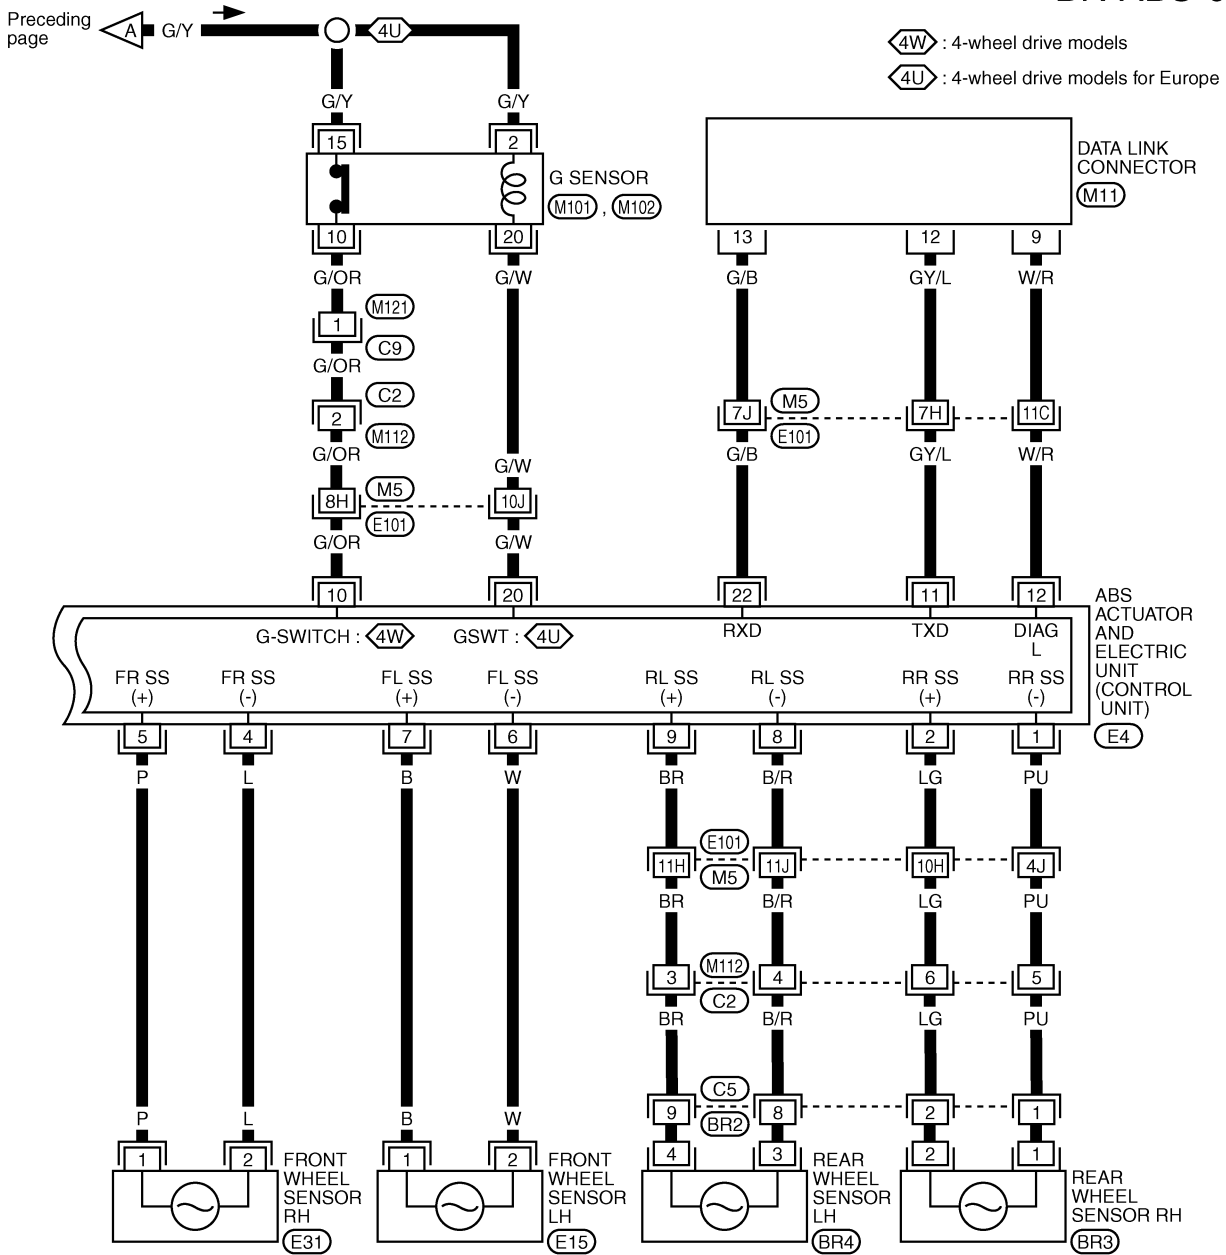

Refer to last page (Foldout page).

     M5, E101


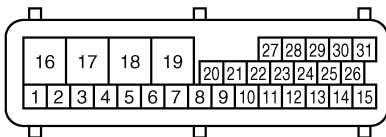


*: This connector is not shown in "HARNESS LAYOUT", EL section.

TROUBLE DIAGNOSES





Wiring Diagram — ABS —/4 Wheel Sensors RHD Models

  BR-ABS-10

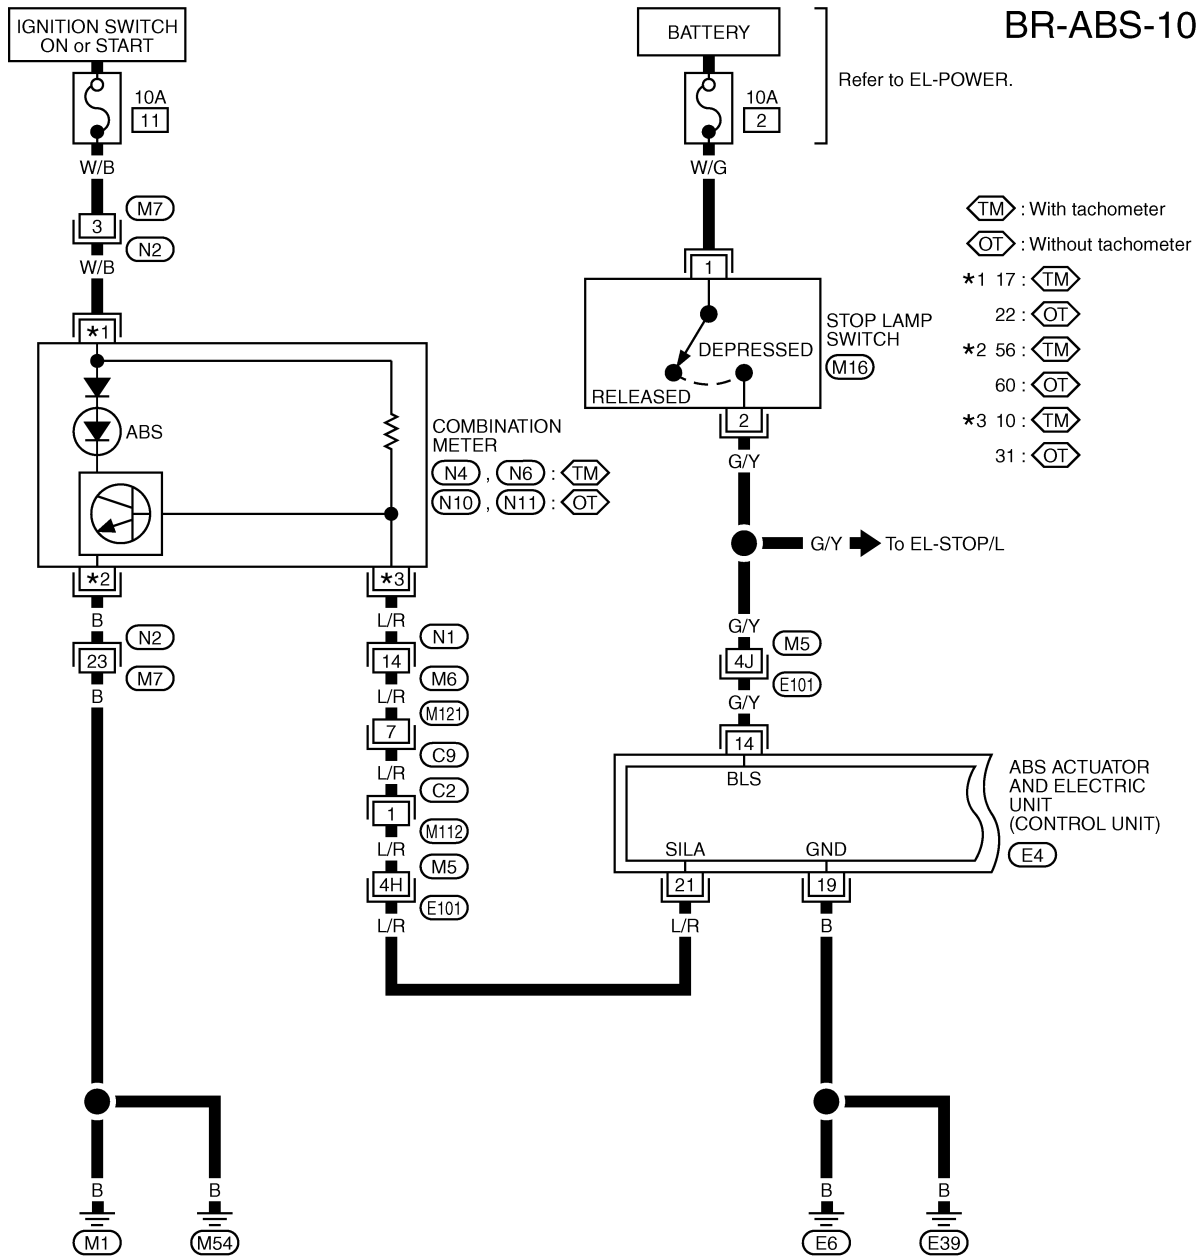

Refer to last page (Foldout page).

    M5, E101

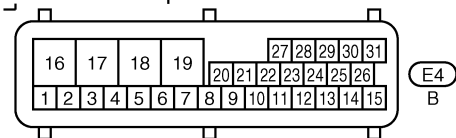



TROUBLE DIAGNOSES

Wiring Diagram — ABS —/4 Wheel Sensors RHD Models (Cont'd)

BR-ABS-11

  Refer to EL-POWER.

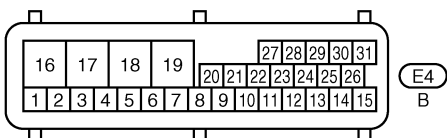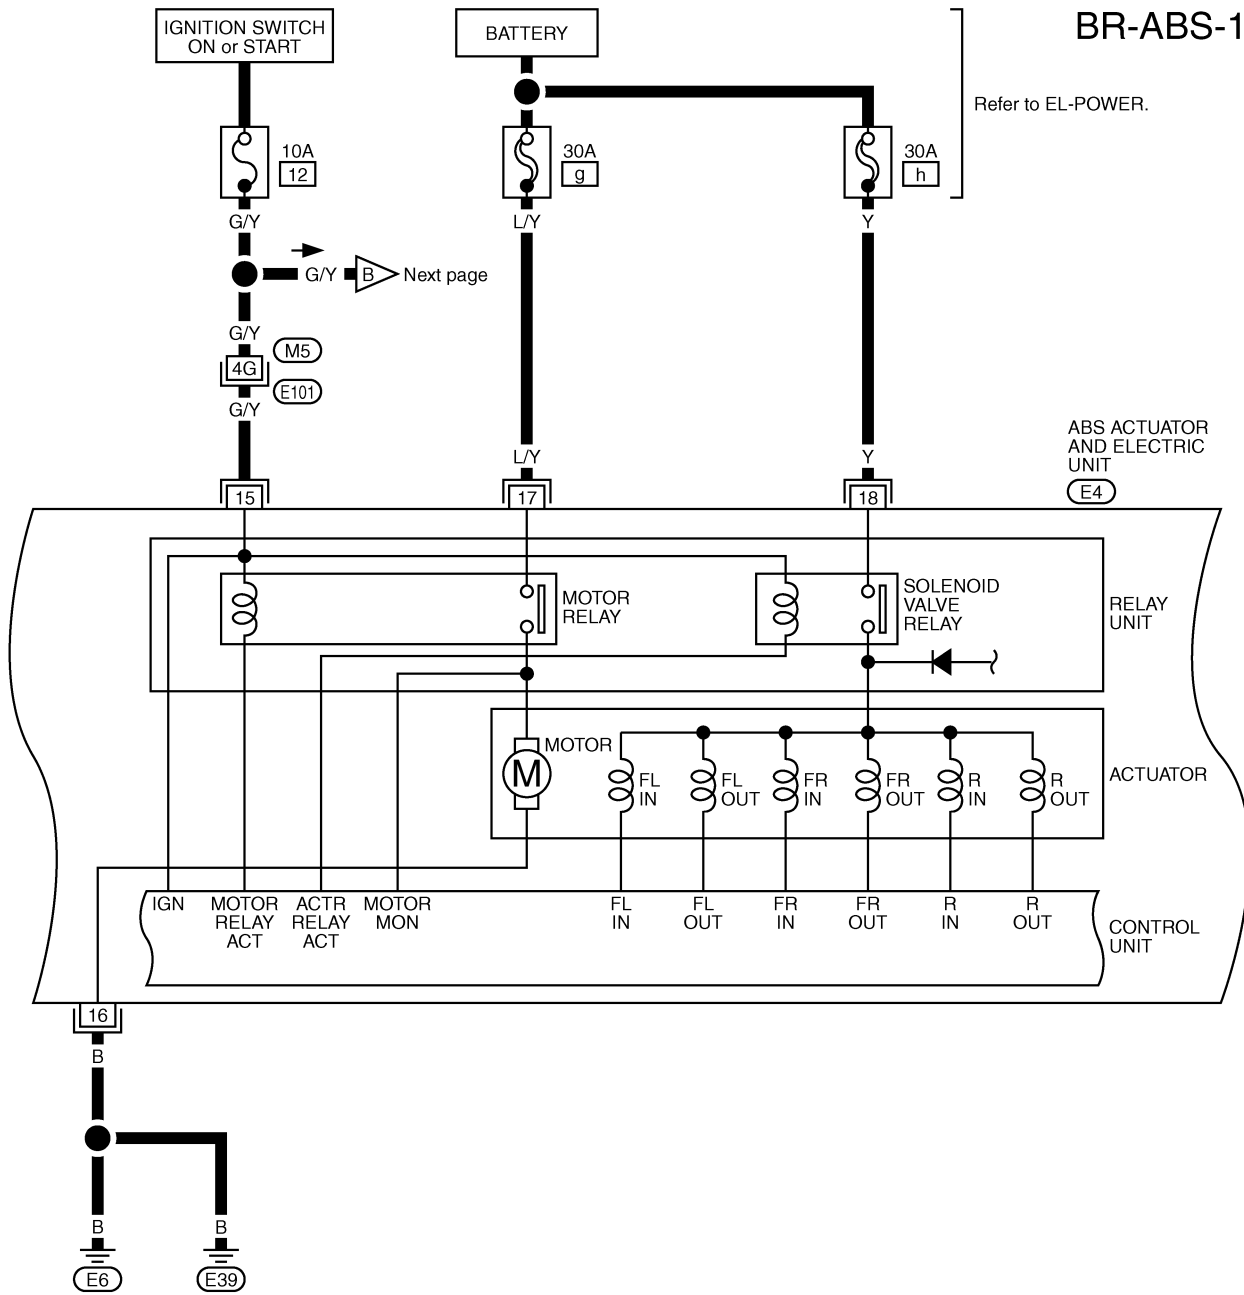




Refer to last page (Foldout page).

(M5), (E101)

TROUBLE DIAGNOSES


Wiring Diagram — ABS —/4 Wheel Sensors RHD Models (Cont'd)

   BR-ABS-12

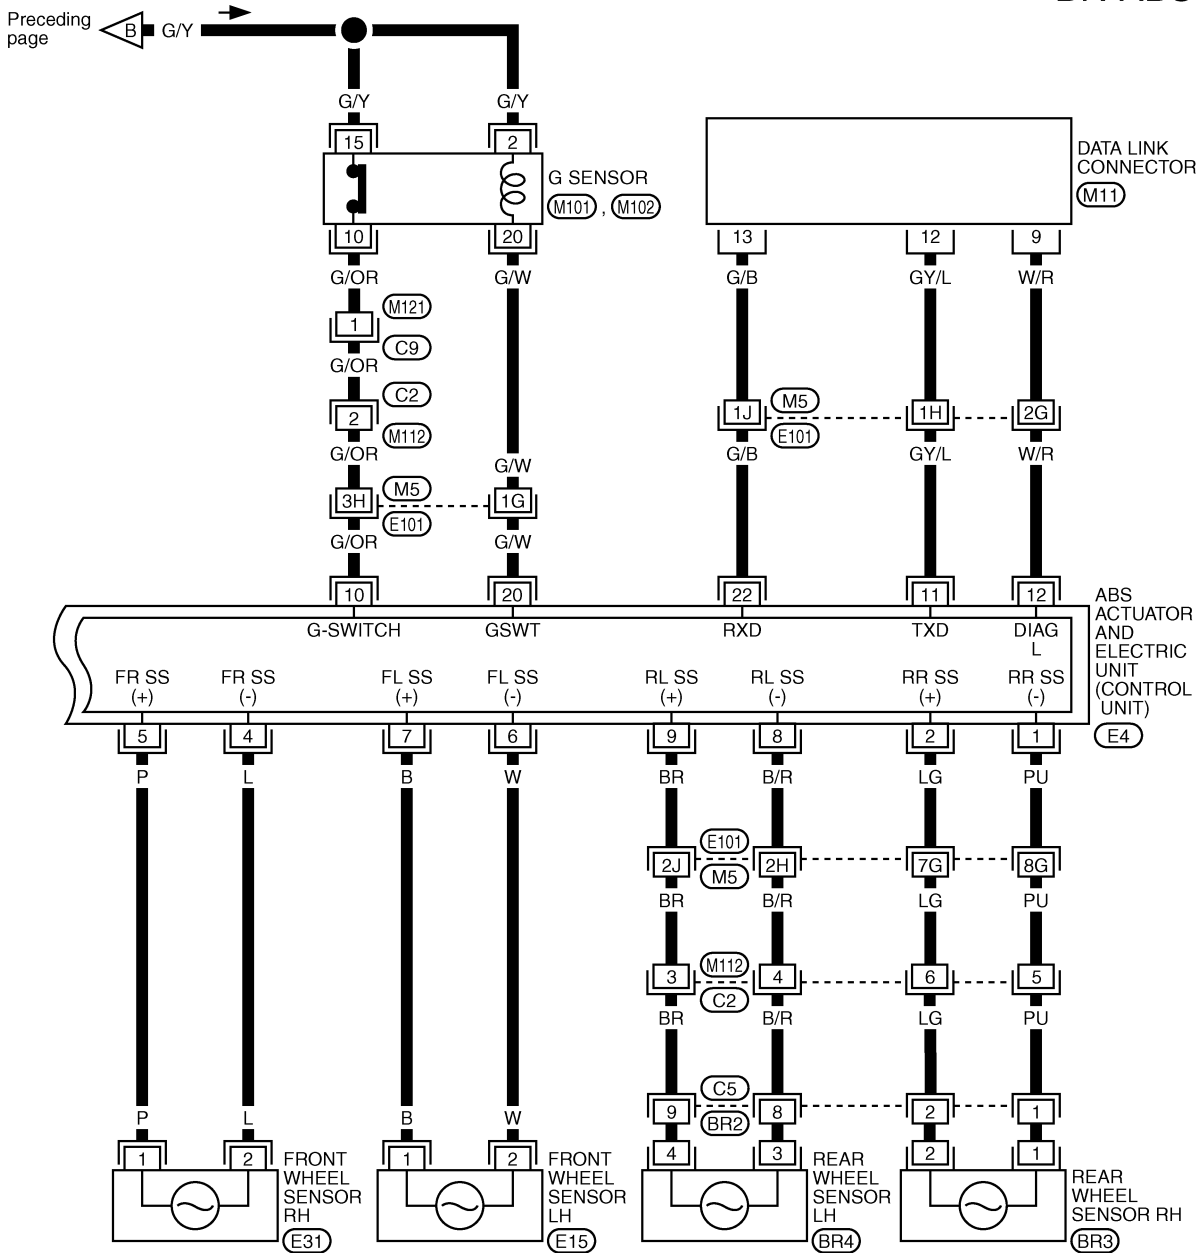

Refer to last page (Foldout page).

 M5, E101

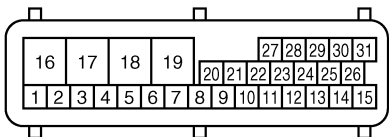


E4
B

1 2 E15, E31
BR, GY

1 2 C2
3 4 5 6 W

 2 1 C5
9 8 SB



C9
W



BR3
GY



BR4
BR

*: This connector is not shown in "HARNESS LAYOUT", EL section.