

<SUPPLEMENT-III>

ALPHABETICAL INDEX

SECTION IDX

ALPHABETICAL INDEX

A

- A/C relay HA-3019, 3029
A/C trouble diagnoses (auto A/C) HA-3020
A/C trouble diagnoses
 (manual A/C) HA-3004, 3020
A/C, A - Wiring diagram HA-3021
A/C, M - Wiring diagram HA-3006, 3009
A/T IND - Wiring diagram EL-3100
AAC/V - Wiring diagram EC-3298
ABS - Wiring diagram BR-3003, 3010
AT indicator lamp EL-3100
Accelerator control system FE-3002
Accelerator position sensor EC-3515, 3516
Air bag disposal RS-3011
Air bag RS-3003
Air cleaner filter replacement MA-3010, 3019
Air conditioner cut control EC-3028, 3413, 3414
Air flow meter - See Mass air flow
 sensor EC-3151
Alternator EL-3022
Angular tightening application EM-3003
Antenna EL-3115
Anti-lock brake system - Wiring
 diagram BR-3002, 3003, 3009
Auxiliary air control (AAC) valve EC-3295

B

- BACK/L - Wiring diagram EL-3044
BOOST - Wiring diagram
Back-up lamp EL-3044
Basic inspection EC-3086, 3444, 3445
Battery EL-3013
Bumper, front BT-3002

C

- CHARGE - Wiring diagram EL-3018
CIGAR - Wiring diagram EL-3110
CKPS - Wiring diagram EC-3266, 3351
CLOCK - Wiring diagram EL-3111
CMPS - Wiring diagram EC-3273
CONSULT for engine EC-3070, 3434, 3435
Camshaft inspection EM-3050
Camshaft position sensor (CMPS) EC-3270
Canister - See EVAP canister EC-3029
Center case (Transfer) TF-3003
Charging system EL-3018
Cigarette lighter EL-3110
Clock EL-3111
Closed throttle position switch EC-3301
Collision diagnosis RS-3037
Combination lamp, front, removal and
 installation BT-3002
Combination meter EL-3056
Compression pressure EM-3013
Connecting rod bearing clearance EM-3077

- Connecting rod bushing clearance EM-3080
Connecting rod EM-3072
Coolant replacement MA-3014
Cooling circuit (engine) LC-3010
Cooling fan control system LC-3002, 3017
Cooling fan control EC-3344, 3489, 3490
Cooling fan LC-3016
Counter gear (Transfer) TF-3004
Crank angle sensor built into
 distributor - See Camshaft position
 sensor EC-3270
Crankcase emission control system -
 See Positive crankcase
 ventilation EC-3032, 3414, 3415
Crankcase ventilation system - See
 Positive crankcase
 ventilation EC-3032, 3414, 3415
Crankshaft position sensor (OBD) cog
 chipping EC-3349
Crankshaft position sensor (OBD) EC-3264
Crankshaft position sensor
 (TDC) EC-3534, 3535
Crankshaft EM-3075
Cylinder block EM-3066
Cylinder head EM-3046

D

- DEF - Wiring diagram EL-3112
DIMDIP - Wiring diagram EL-3033
DTC P0121 TP Sensor EC-3170
DTC work support EC-3078
DTRL - Wiring diagram EL-3029
Data link connector for
 Consult EC-3033, 3434, 3435
Daytime light system EL-3029
Detonation sensor - See Knock
 sensor EC-3260
Diagnosis sensor unit RS-3005
Diagnostic trouble code (DTC) for
 OBD system EC-3009, 3428, 3429
Diagnostic trouble code (DTC) inspec-
 tion priority chart EC-3100
Dim-dip lamp system EL-3033
Distributor ignition (DI) system EC-3026
Distributor EC-3026
Drive belt inspection MA-3011
Drive chain (Transfer) TF-3004

E

- ECCS-D control
 module EC-3595, 3594, 3598, 3599, 3463,
 3464, 3501, 3502, 3581, 3582,
 3583, 3584, 3585, 3586
ECM input/output signal ... EC-3110, 3463, 3464
ECTS - Wiring diagram EC-3167
EGR - Wiring diagram EC-3607, 3608

ALPHABETICAL INDEX

EGR volume control valve EC-3605, 3606
EVAP canister purge volume control
 solenoid valve EC-3283
EVAP canister EC-3029
Electrical ignition system EC-3026
Electronic fuel injection
 pump EC-3419, 3420, 3508, 3509, 3542,
 3543, 3549, 3550, 3556, 3557,
 3563, 3564, 3570, 3571, 3573,
 3574, 3614, 3615
Engine control circuit
 diagram EC-3020, 3408, 3409
Engine control component parts
 location EC-3018
Engine control module (ECM) EC-3308
Engine control system diagram and
 chart EC-3021, 3409, 3410
Engine coolant temperature sensor
 (ECTS) EC-3165, 3480, 3481
Engine fail-safe system EC-3101
Engine oil filter replacement MA-3013
Engine oil replacement MA-3012
Engine outer component parts EM-3008
Engine removal EM-3063
Engine serial number GI-3006
Evaporative emission (EVAP)
 system EC-3029
Exhaust system FE-3005
Exterior BT-3006

F

F/PUMP - Wiring diagram EC-3380
FICD - Wiring diagram EC-3390
FUEL - Wiring diagram EC-3239, 3246
Fast idle cam (FIC) EC-3035
Fluids MA-3008
Flywheel runout EM-3080
Fog lamp, rear EL-3045
Freeze frame data EC-3050
Front bumper BT-3002
Front case (Transfer) TF-3003
Front combination lamp removal and
 installation BT-3002
Front drive shaft (Transfer) TF-3004
Front passenger air bag RS-3003, 3009
Fuel cut control (at no load & high
 engine speed) EC-3028, 3413, 3414
Fuel filter replacement MA-3018
Fuel filter EC-3033
Fuel injection system EC-3237, 3244,
 3411, 3412
Fuel injector EC-3369
Fuel line inspection MA-3019
Fuel pressure check EC-3033
Fuel pressure regulator EC-3034
Fuel pressure release EC-3033
Fuel pump relay EC-3378
Fuel pump EC-3378

Fuel system FE-3003
Fuel tank vacuum relief valve EC-3030
Fuse block EL-3199

G

Gauges EL-3056
Generic scan tool (GST) EC-3080
Glow plug EC-3621, 3622
Glow relay EC-3621, 3622
Grease MA-3008

H

H/AIM - Wiring diagram EL-3037
H/LAMP - Wiring diagram EL-3023
HEAT UP - Wiring diagram EC-3639, 3640
HEATER - Wiring diagram HA-3004
HLC - Wiring diagram EL-3108
HORN - Wiring diagram EL-3109
HSEAT - Wiring diagram EL-3118
Harness layout EL-3166
Hazard warning lamp EL-3047
Headlamp aiming control EL-3037
Headlamp removal and installation BT-3002
Headlamp washer EL-3108
Headlamp EL-3023
Heat up switch EC-3638, 3639
Heated oxygen sensor (HO2S)
 (front) EC-3202, 3213, 3196, 3310, 3317
Heated oxygen sensor (HO2S) heater
 (front) EC-3133
Heated oxygen sensor (HO2S) heater
 (rear) EC-3138
Heated oxygen sensor
 (rear) EC-3220, 3227, 3324, 3334
Heated seat EL-3118
Hood BT-3002
Horn EL-3109
How to erase DTC for OBD
 system EC-3060, 3428, 3429

I

IACV-AAC valve EC-3295
IACV-FICD solenoid valve EC-3389
IATS - Wiring diagram EC-3162, 3505, 3506
ILL - Wiring diagram EL-3050
INJECT - Wiring diagram EC-3370
INT/L - Wiring diagram EL-3055
Idle air control (IAC) system EC-3295
Idle air control valve (IACV) EC-3295
Idle mixture ratio EC-3035
Idle speed EC-3035, 3444, 3445
Ignition control system EC-3361
Ignition timing EC-3035
Illumination EL-3050

ALPHABETICAL INDEX

Injection nozzle EC-3415, 3416
Injector removal and installation EC-3034
Intake air temperature
 sensor EC-3160, 3193, 3503, 3504
Intake manifold EM-3008
Interior lamp EL-3054

K

KS - Wiring diagram EC-3261
Keyless entry system - See Multi-re-
 mote control system EL-3136
Knock sensor (KS) EC-3260, 3261

L

License lamp EL-148
Parking lamp EL-3039
Liquid gasket application EM-3003
Location of electrical units EL-3163
Lubricants MA-3008
Lubrication circuit (engine) LC-3003

M

M/T removal and installation MT-3002
MAFS - Wiring diagram EC-3146, 3154
MAIN - Wiring diagram EC-3124, 3470, 3471
METER - Wiring diagram EL-3062
MIL & Data link connectors circuit EC-3396
MIL/DL - Wiring diagram EC-3396, 3646, 3647
MIRROR - Wiring diagram EL-3116
MULTI - Wiring diagram EL-3137
Main gear (Transfer) TF-3004
Mainshaft (Transfer) TF-3004
Maintenance (engine) MA-3010, 3011
Malfunction indicator lamp
 (MIL) EC-3429, 3430
Manifold tightening torque (intake &
 exhaust) MA-3011
Mass air flow sensor
 (MAFS) DT-3143, EC-3143, 3151
Meter EL-3056
Misfire EC-3251
Model variation GI-3004
Mud guard - See Exterior BT-3006
Multi-remote control system EL-3136
Multiport fuel injection (MFI) system EC-3024

N

NATS (Nissan Anti-theft System) EL-3143
NATS - Wiring diagram EL-3146
Neutral position switch EC-3355

O

Oil change (capacity) MA-3008
Oil cooler (engine) LC-3006
Oil pan (engine) EM-3015
Oil pressure (engine) LC-3004
Oil pump (engine) LC-3004
Oil pump regulator valve (engine) LC-3005
On board diagnostic
 system EC-3049, 3428, 3429

P

P/ANT - Wiring diagram EL-3115
PCV (positive crankcase
 ventilation) EC-3032, 3414, 3415
PCV filter replacement MA-3010
PGC/V - Wiring diagram EC-3286
PNP/SW - Wiring diagram EC-3358
POWER - Wiring diagram EL-3006
PST/SW - Wiring diagram EC-3386
Park/Neutral position
 switch EC-3355, 3633, 3634
Parking lamp EL-3039
Piston assembly EM-3081
Piston pin inspection EM-3071
Piston ring inspection EM-3071
Piston to bore clearance EM-3073
Power door mirror EL-3116
Power steering oil pressure switch EC-3385
Power supply routing EL-3005
Power transistor & ignition coil EC-3361
Power window EL-3120
Priming pump EC-3444, 3445

Q

Quick-glow system EC-3621, 3622

R

R/FOG - Wiring diagram EL-3045
ROOM/L - Wiring diagram EL-3054
Radiator fan - See Cooling fan LC-3016
Radiator LC-3015
Rear case (Transfer) TF-3003
Rear fog lamp EL-3045
Rear window defogger EL-3112
Refrigerant connection precaution HA-3002
Refrigerant lines HA-3030
Road wheel size GI-3007
Room lamp EL-3054

ALPHABETICAL INDEX

S

S/SIG - Wiring diagram	EC-3375
SMJ (super multiple junction)	EL-3198
SRS - See Supplemental Restraint System	RS-3003
START - Wiring diagram	EL-3014
STOP/L - Wiring diagram	EL-3043
Seat belt pre-tensioner disposal	RS-3011
Seat belt pre-tensioner	RS-3003
Self-diagnostic results	EC-3429, 3430
Shift control (Transfer)	TF-3005
Side air bag	RS-3003
Spiral cable	RS-3006
Spot lamp	EL-3055
Start signal	EC-3374
Starter	EL-3017
Starting system	EL-3014
Stop lamp	EL-3043
Supplemental Restraint System	RS-3003
Supplemental restraint system - Wiring diagram	RS-3018
Symptom matrix chart	EC-3102, 3450, 3451
System readiness test (SRT) code	EC-3051

T

TAIL/L - Wiring diagram	EL-3039
THEFT - Wiring diagram	EL-3142
TP/SW - Wiring diagram	EC-3303
TPS - Wiring diagram	EC-3174, 3185
TURN - Wiring diagram	EL-3047
Tail lamp	EL-3039
Theft warning system	EL-3142
Thermostat	LC-3014
Three way catalyst	EC-3278

Throttle bodies	EM-3008
Throttle chambers	EM-3008
Throttle position sensor (TPS)	EC-3170, 3182
Throttle position sensor adjustment	EC-3086
Throttle position switch	EC-3301
Timing chain	EM-3021
Tire size	GI-3007
Turn signal lamp	EL-3047
Two trip detection logic	EC-3049

V

VSS - Wiring diagram	EC-3292
Vacuum hose drawing (Engine control)	EC-3022
Valve clearance	EM-3060
Valve guide	EM-3052
Valve seat	EM-3053
Valve spring	EM-3055
Vehicle identification number	GI-3005
Vehicle speed sensor (VSS)	EC-3290, 3484, 3485

W

WARN - Wiring diagram	EL-3083
WINDOW - Wiring diagram	EL-3123
Warning lamps	EL-3081
Water pump	LC-3012
Wheel size	GI-3007
Wide open & closed throttle position switch	EC-3170, 3182
Wiring diagram (cell code) list	EL-3196
Wrist pin - See Piston pin inspection ...	EM-3071