

<SUPPLEMENT-IV>

RESTRAINT SYSTEM

SECTION **RS**

MODIFICATION NOTICE:

Air bag system wiring diagram has been changed.

 
 
 
 
 

CONTENTS

TROUBLE DIAGNOSES - Supplemental Restraint System (SRS)	4002
Wiring Diagram - SRS -.....	4002

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS —

RS-SRS-01


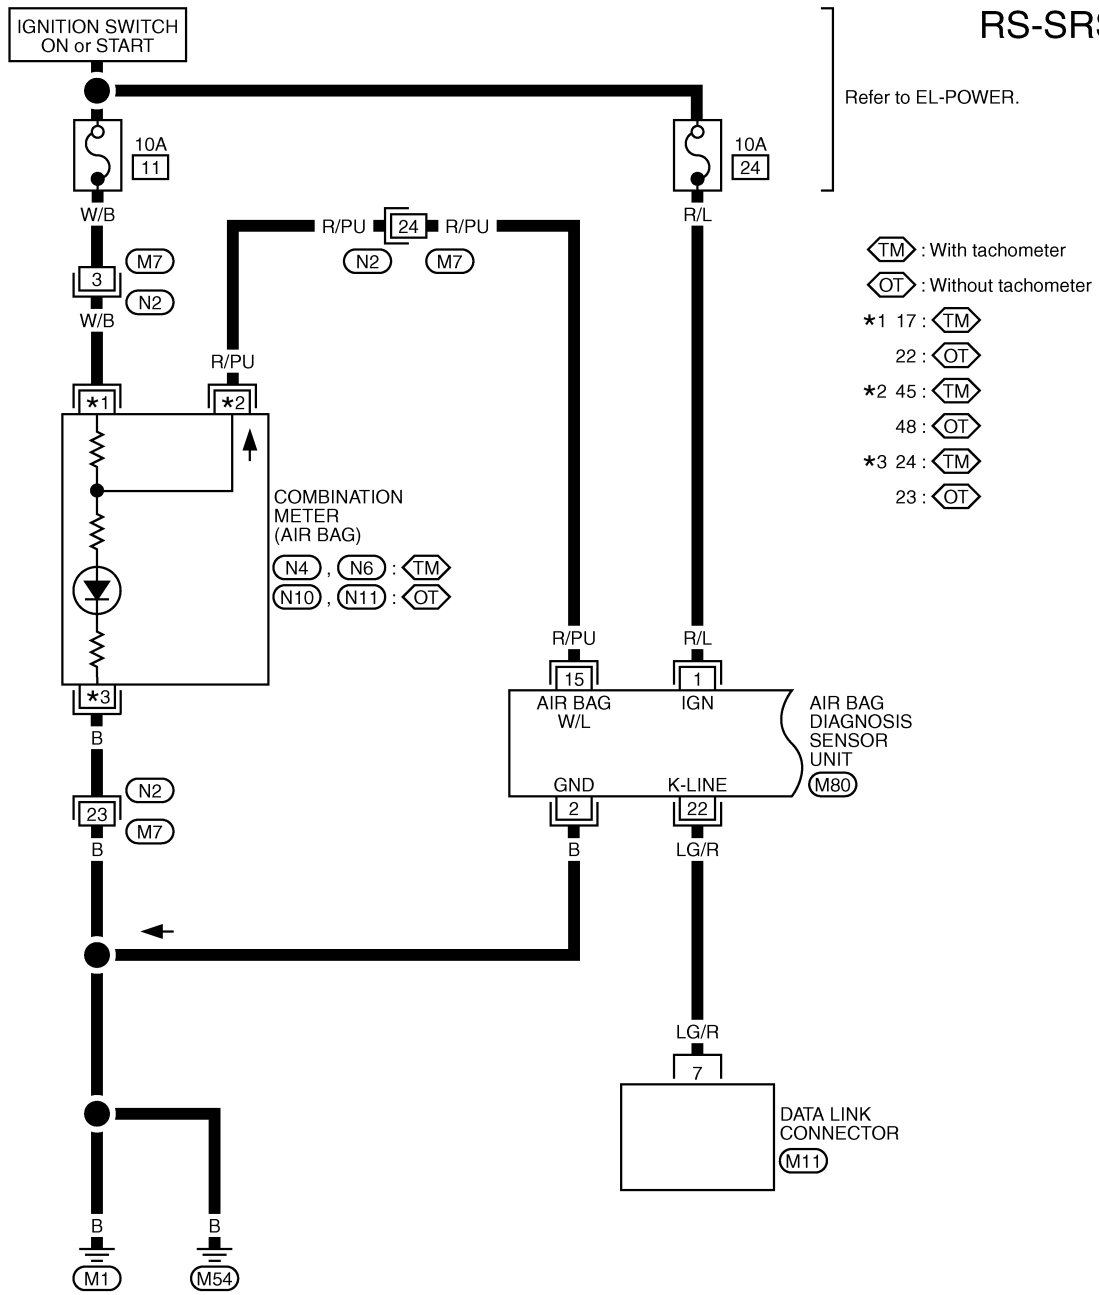


TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

Wiring Diagram — SRS — (Cont'd)

RS-SRS-02

- ⬡(DA) : With dual air bag
- ⬡(PT) : With seat belt pre-tensioner
- ⬡(AP) : With seat belt pre-tensioner (Driver and passenger side)
- ⬡(PM) : With seat belt pre-tensioner for the Middle East
- ⬡(XP) : With seat belt pre-tensioner except for the Middle East
- ⬡(AM) : With seat belt pre-tensioner (Driver and passenger side) for the Middle East
- ⬡(XA) : With seat belt pre-tensioner (Driver and passenger side) except for the Middle East

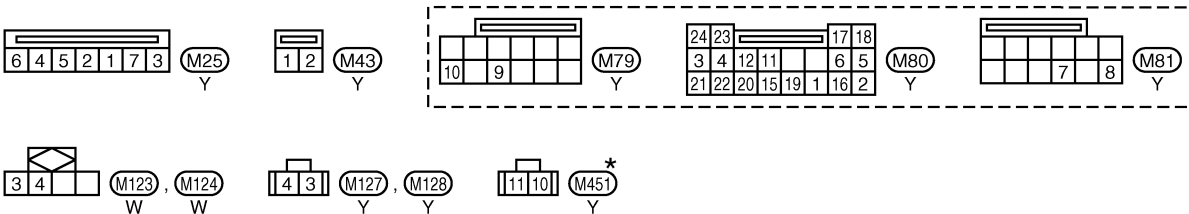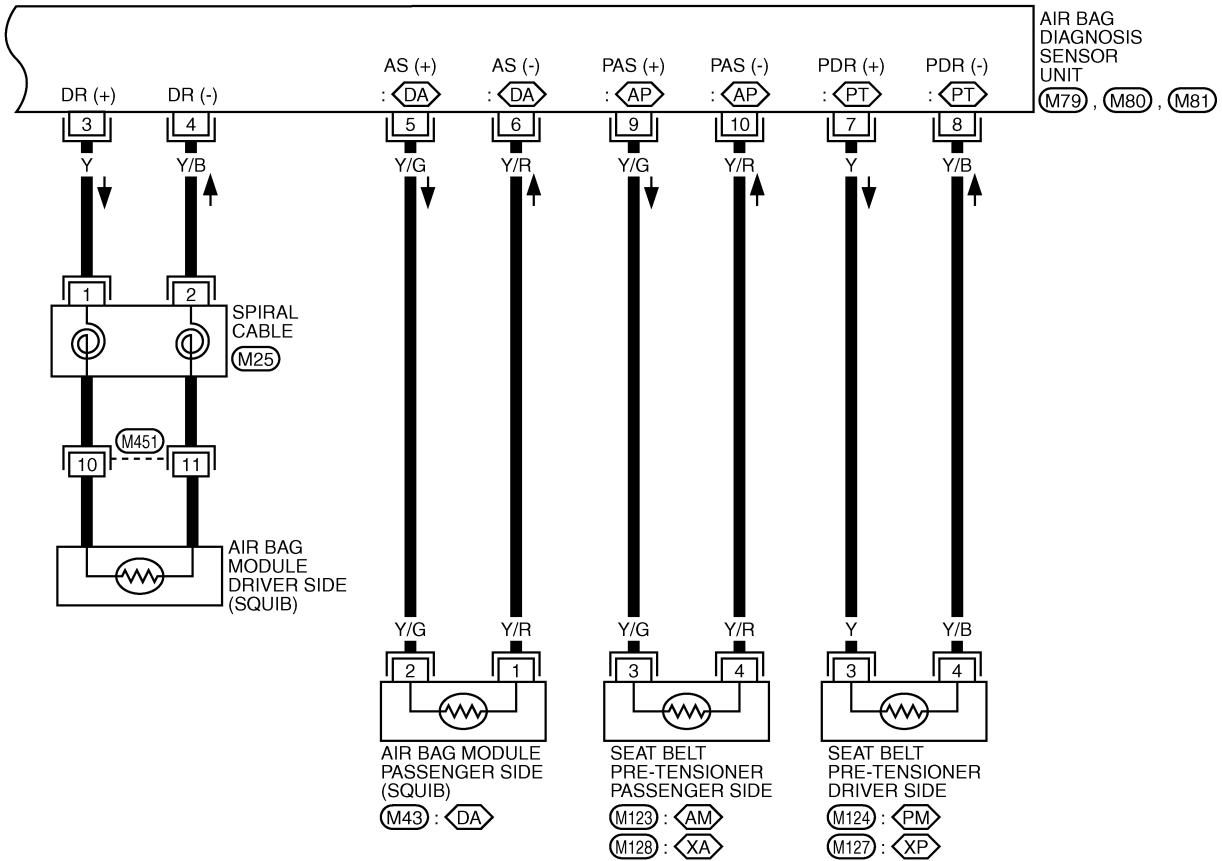

*: This connector is not shown in "HARNESS LAYOUT", EL section.