

<SUPPLEMENT-V>

HEATER & AIR CONDITIONER

SECTION **HA**

MODIFICATION NOTICE:

- Wiring diagrams have been changed for LHD models with KA, YD and ZD engines. (manual A/C)


CONTENTS

<input type="checkbox"/>	MANUAL	<input type="checkbox"/>
TROUBLE DIAGNOSES		5002
Circuit Diagram - A/C, M -		5002

Wiring Diagram - A/C, M -/LHD Models with KA, YD and ZD Engines.....	5003
---	------





Circuit Diagram — A/C, M —

- (VG) : VG engine
 - (KA) : KA engine
 - (KU) : KA engine for Europe
 - (KN) : KA engine except for Europe
 - (YZ) : YD and ZD engines
 - (MZ) : For the Middle East, with KA engine for Australia or with YD and ZD engines
 - (XM) : Except (MZ)
 - (EC) : KA, YG, YD and ZD engines
 - (XE) : TD and QD engines
 - (XK) : Except KA engine
- *1 12: (KU)
 - 23: (KN)
 - 9: (VG)
 - 15: (YZ)
 - *2 21: (KU), (YZ)
 - 46: (KN), (VG)
 - *3 9: (KU)
 - 25: (KN)

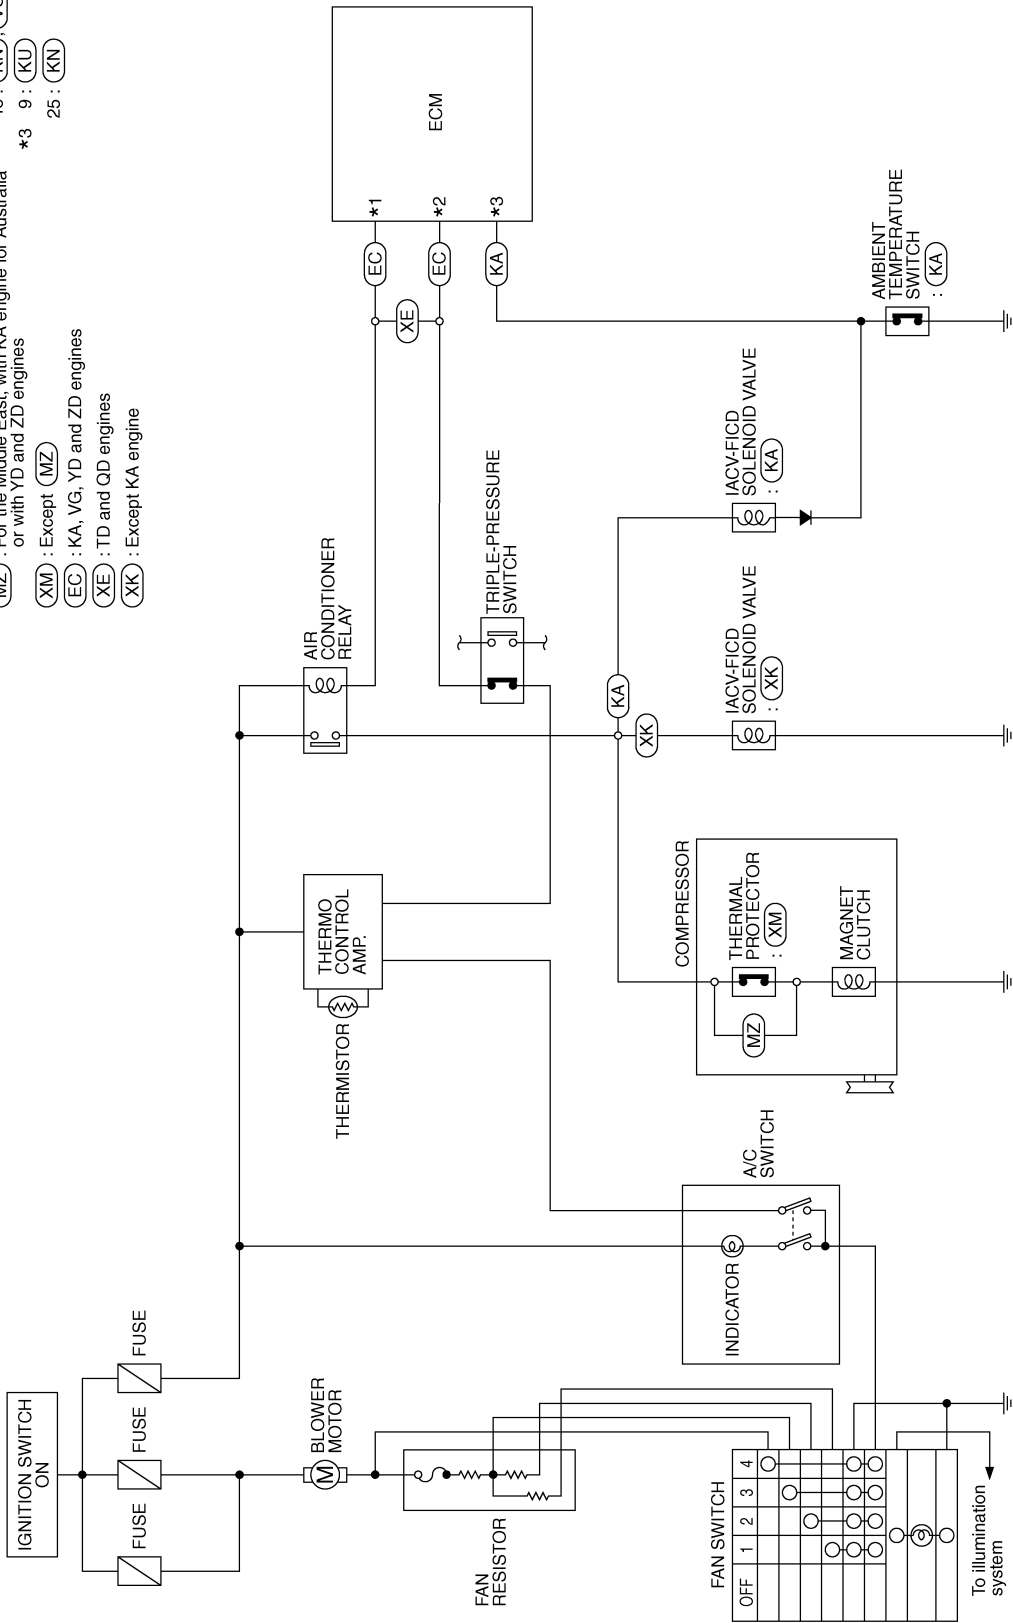


Wiring Diagram — A/C, M —/LHD Models with KA, YD and ZD Engines

   HA-A/C,M-01

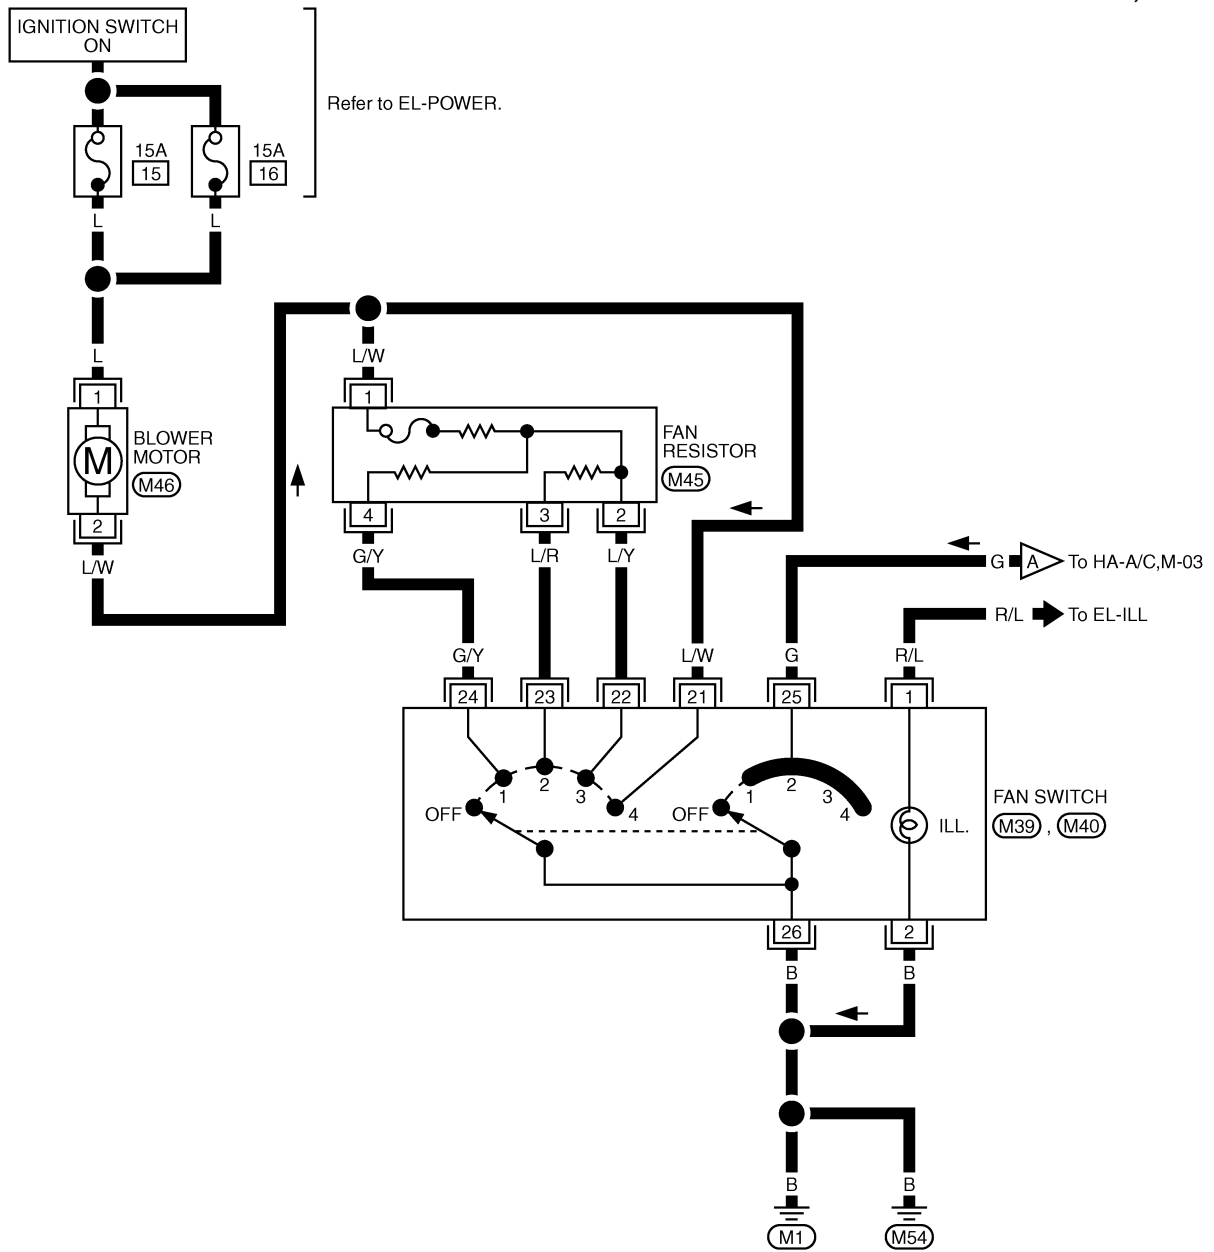


Wiring Diagram — A/C, M —/LHD Models with KA, YD and ZD Engines (Cont'd)

HA-A/C,M-02

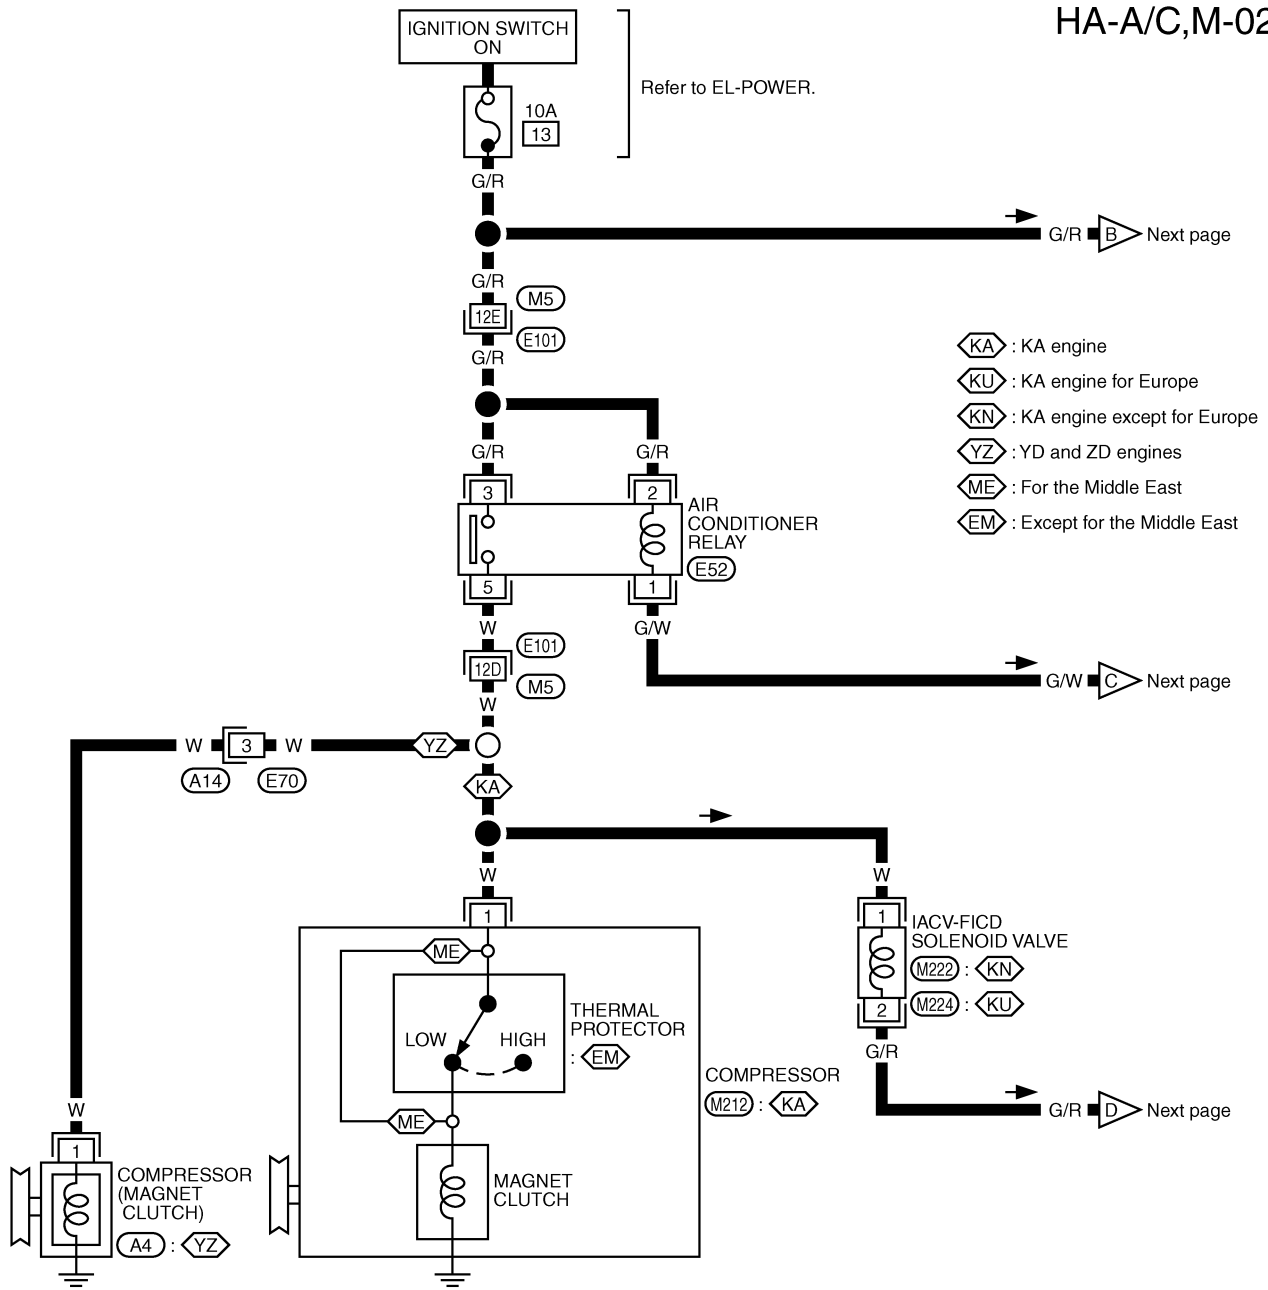


 
- ⬡KA : KA engine
- ⬡KU : KA engine for Europe
- ⬡KN : KA engine except for Europe
- ⬡YZ : YD and ZD engines
- ⬡ME : For the Middle East
- ⬡EM : Except for the Middle East



Refer to last page (Foldout page).
 ⊕ M5, E101

Wiring Diagram — A/C, M —/LHD Models with KA, YD and ZD Engines (Cont'd)

HA-A/C,M-03

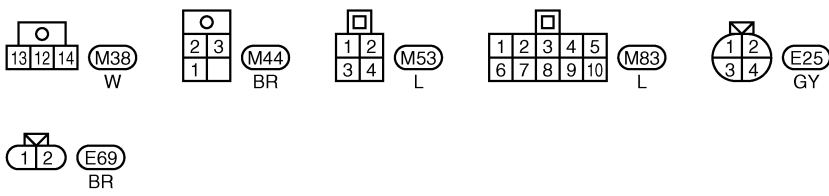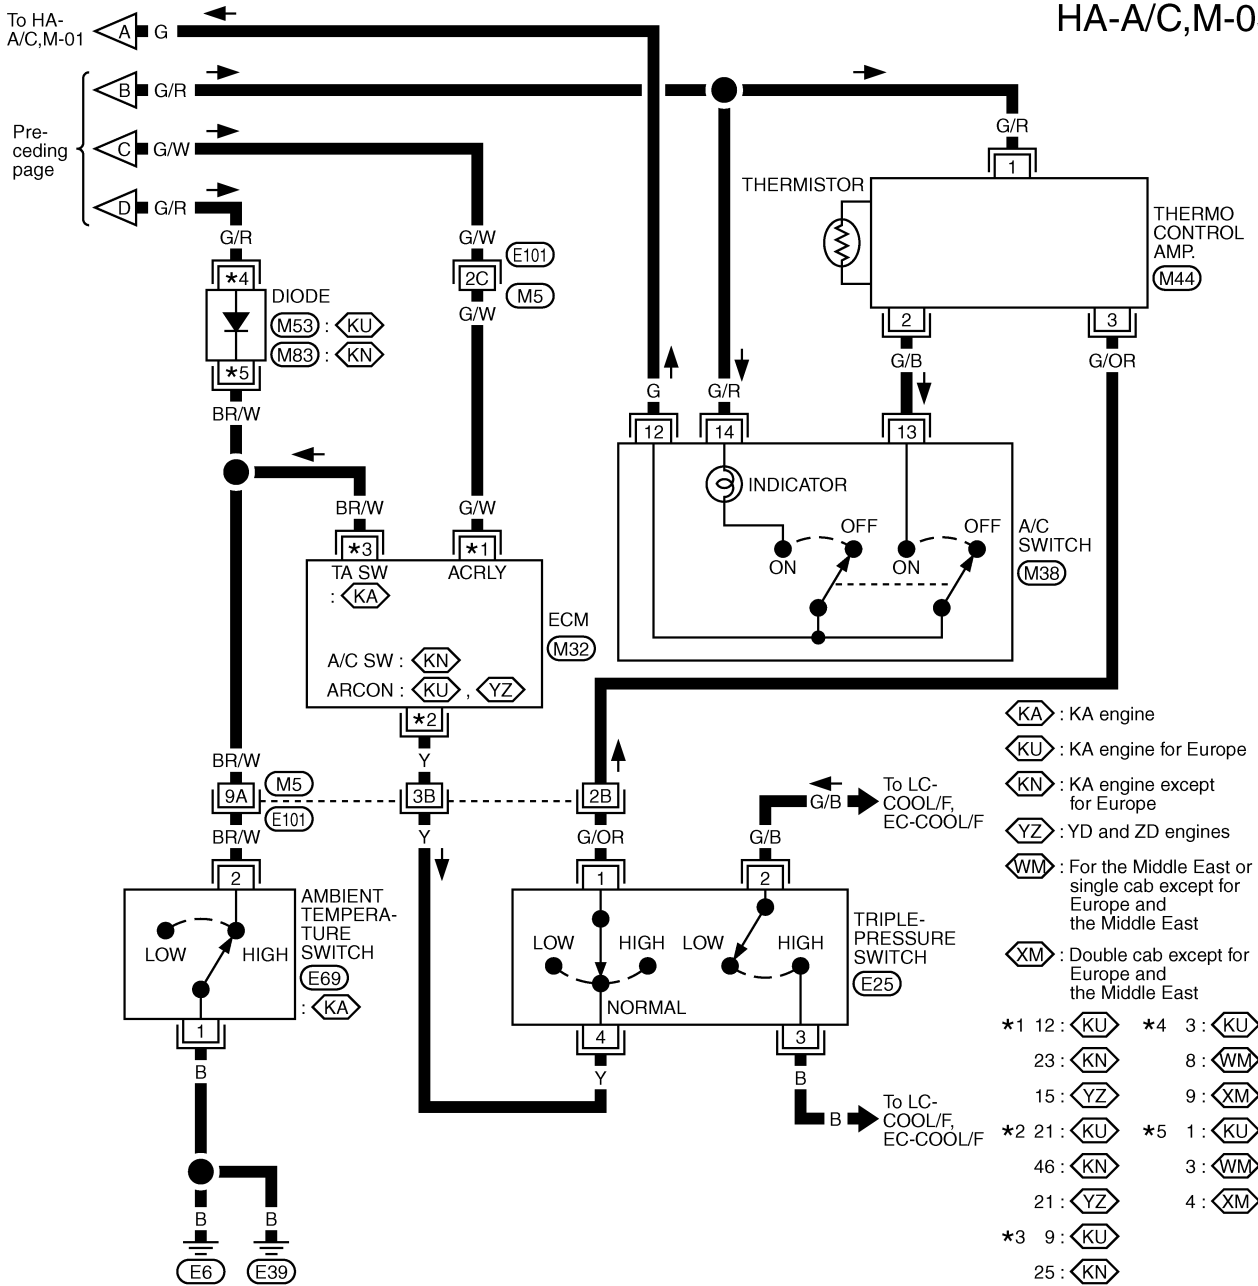

Refer to last page (Foldout page).
 (M5), (E101)
 (M32)