

SECTION **MT**

- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT**
- AT
- TF
- PD
- FA
- RA
- BR
- ST
- RS
- BT
- HA
- EL
- IDX

**MODIFICATION NOTICE:**


- Mainshaft spacer has been discontinued. (For FS5R30A models)

**CONTENTS**

	<b>FS5R30A</b>	
<b>MAJOR OVERHAUL</b> .....		2
Gear Components .....		2

Gear Components

SEC. 322

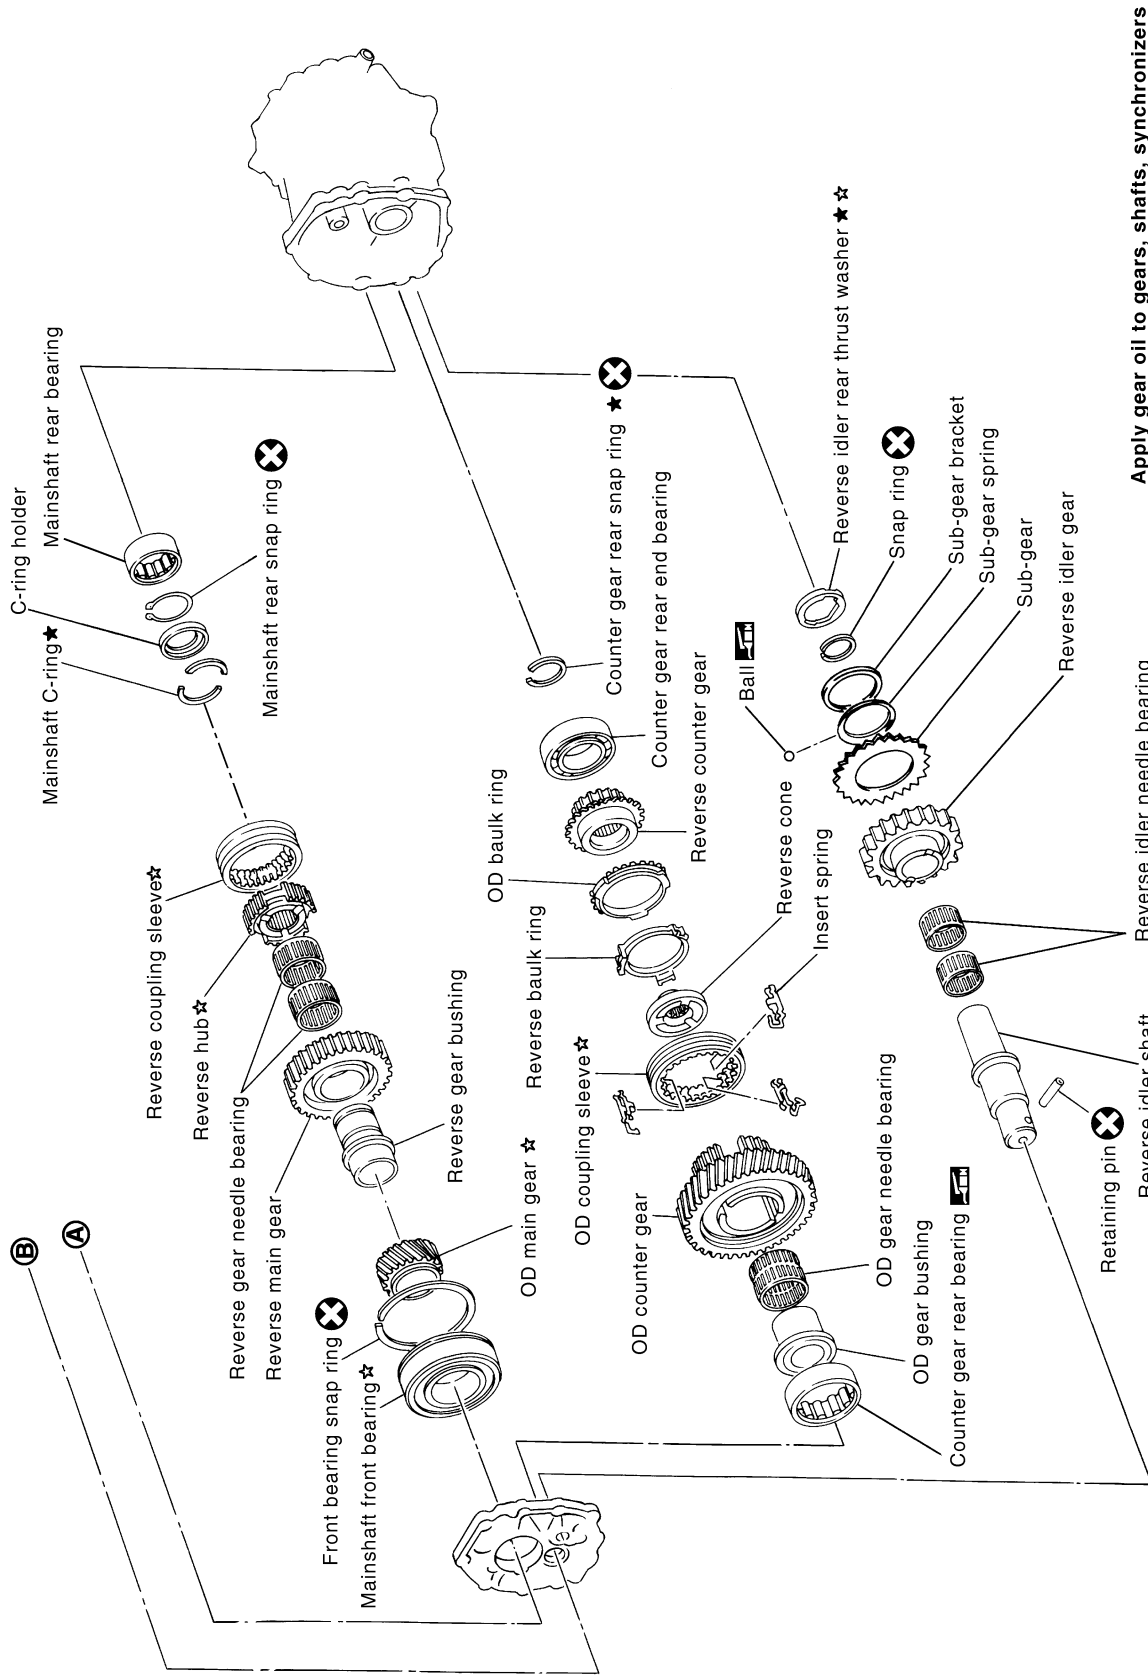

Apply gear oil to gears, shafts, synchronizers and bearings when assembling.

- ★ : Select with proper thickness.
- ☆ : Pay attention to its direction.