

SECTION RS

**MODIFICATION NOTICE:**

Air bag system wiring diagram has been changed.

 

**CONTENTS**

TROUBLE DIAGNOSES — Supplemental Restraint System (SRS) .....	Wiring Diagram — SRS —.....	2
------------------------------------------------------------------	-----------------------------	---





GI  
MA  
EM  
LC  
EC  
FE  
CL  
AT  
TF  
PD  
FA  
RA  
BR  
ST  
**RS**  
BT  
HA  
EL  
IDX

# TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)


## Wiring Diagram — SRS —

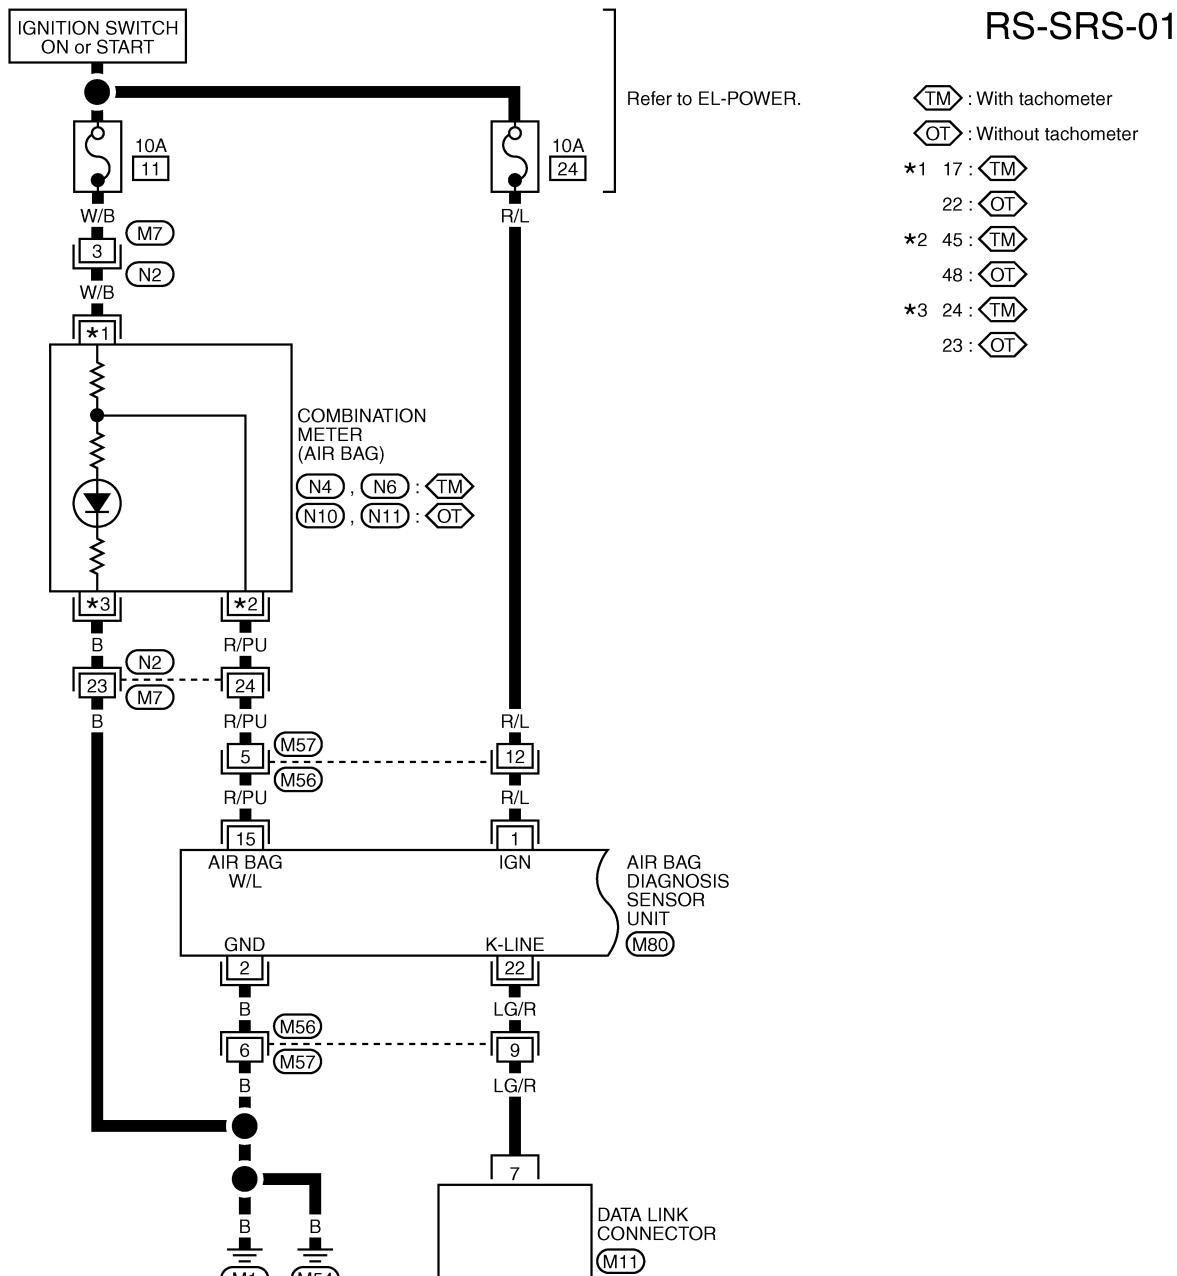


(M11)  
W

 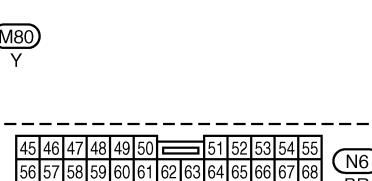  

(N2)  
BR

 

(N4)  
W

 

(N11)  
W

GRS032A

# TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

## Wiring Diagram — SRS — (Cont'd)

RS-SRS-02

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

 
 
 

ST

RS

DA : With dual air bag

PT : With seat belt pre-tensioner

AP : With seat belt pre-tensioner (Driver and passenger side)

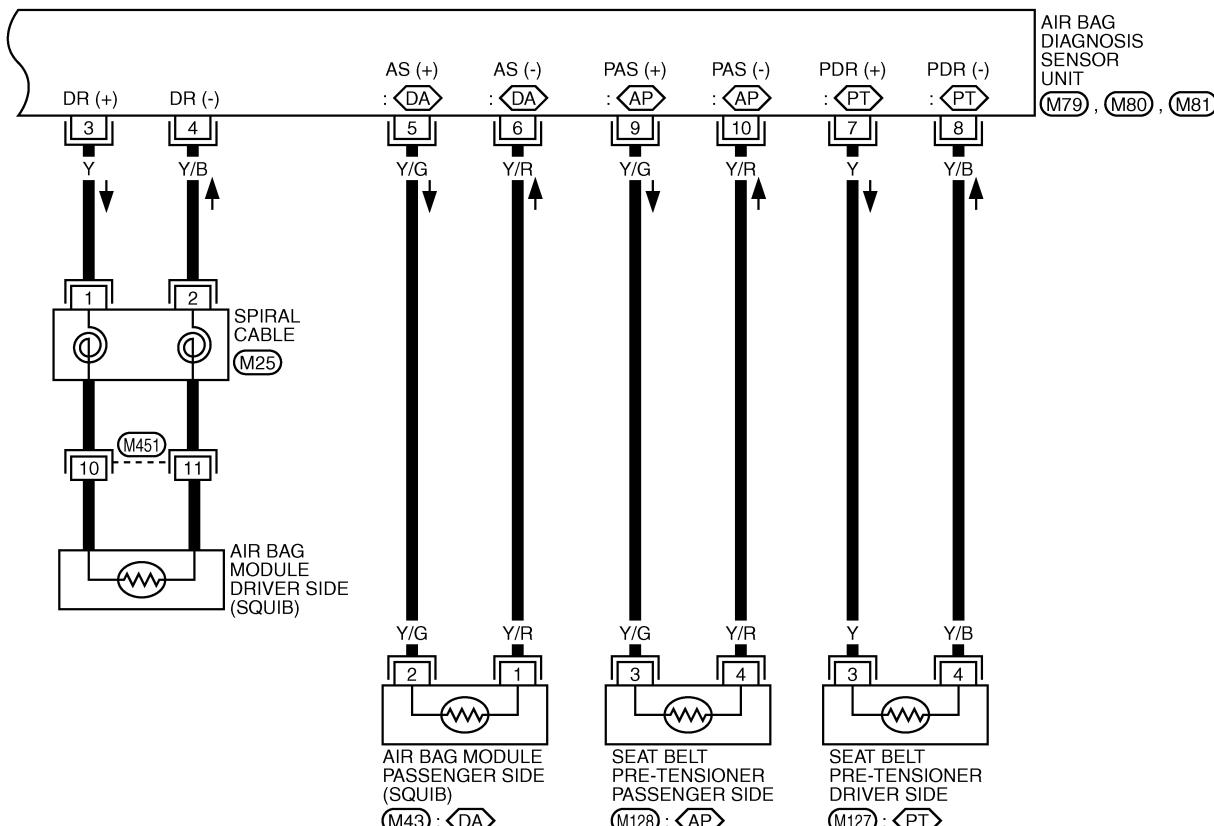

\*: This connector is not shown in "HARNESS LAYOUT", EL section.

BT

HA

EL

GRS026A

IDX