

ALPHABETICAL INDEX

GI

SECTION **IDX**

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-297
ABS - Wiring diagram	BR-40, BR-65
ABS (anti-lock brake system).....	BR-30
Absolute pressure sensor	EC-110
A/C - Wiring diagram.....	HA-21
A/C air flow.....	HA-16
A/C component location	HA-15
A/C compressor clutch removal and installation.....	HA-59
A/C compressor description	HA-7
A/C compressor mounting.....	HA-58
A/C compressor precaution.....	HA-7
A/C compressor special service tool.....	HA-10
A/C control operation (manual A/C).....	HA-14
A/C diagnostic work flow (manual A/C)	HA-25
A/C HFC134a (R134a) system introduction	HA-13
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-51, HA-54
A/C HFC134a (R134a) system service tools.....	HA-8
A/C HFC134a system service equipment precaution	HA-8
A/C lubricant (R134a).....	HA-56
A/C operational check.....	HA-23
A/C performance chart	HA-43
A/C performance test diagnoses.....	HA-41
A/C pressure switch	HA-13
A/C trouble diagnoses (manual A/C)	HA-25
Accelerator control system.....	FE-3
Accelerator wire adjustment.....	FE-3
Air bag	RS-9
Air bag disposal.....	RS-23
Air bag precautions	GI-2
Air bleeding for brake system	BR-6
Air bleeding (hydraulic clutch).....	CL-7
Air cleaner filter replacement	MA-14
Air conditioner cut control	EC-18
Air conditioning - See A/C.....	HA-13
Air flow meter - See Mass air flow sensor.....	EC-101
Alternator.....	EL-34
Angular tightening application.....	EM-2
Antenna	EL-130
Anti-lock brake system - See ABS.....	BR-30
Anti-lock brake system - Wiring diagram.....	BR-40
AP/SEN - Wiring diagram	EC-110
ASCD - Wiring diagram.....	EL-136
ASCD (automatic speed control device).....	EL-132
A/T - Wiring diagram	AT-7
A/T IND - Wiring diagram.....	EL-101
AT indicator lamp	EL-101
A/T shift lock system	AT-39
A/T shift lock system - Wiring diagram	AT-40
A/T trouble diagnoses	AT-23
Audio	EL-124

AUDIO - Wiring diagram	EL-125
Audio and A/C control removal and installation - See Instrument panel	BT-11
Auto lock free running hub.....	FA-17
Automatic speed control system - See ASCD.....	EL-132
Automatic transmission fluid replacement	MA-19
Automatic transmission number.....	GI-38
Auxiliary air control (AAC).....	EC-297
Axle housing (rear).....	RA-7

B

Back window	BT-22, BT-33
BACK/L - Wiring diagram.....	EL-59
Back-up lamp	EL-59
Back-up lamp switch (M/T)	MT-7
Ball joint front axle.....	FA-35
Basic inspection	EC-71
Battery	EL-23
Baulk ring (M/T).....	MT-12
Blower motor	HA-29
Blower relay.....	HA-17
Blower resistor.....	HA-29
Body alignment.....	BT-37
Body mounting	BT-36
Boring/honing cylinder block	EM-44
BPT valve	EC-259
Brake booster	BR-17
Brake control valve (Proportioning valve).....	BR-11
Brake fluid change	BR-5
Brake fluid level.....	MA-22
Brake fluid level and line check	BR-5
Brake hydraulic line.....	BR-7
Brake inspection.....	MA-22
Brake lines and cables inspection	MA-22
Brake master cylinder	BR-14
Brake pedal	BR-12
Bulb specifications.....	EL-232
Bumper, front.....	BT-5
Bumper, rear.....	BT-8
BYPSS/V - Wiring diagram.....	EC-386

C

Cab body.....	BT-36
Camshaft inspection.....	EM-30
Camshaft position sensor (CMPS).....	EC-241
Camshaft position sensor (PHASE).....	EC-241
Canister - See EVAP canister.....	EC-20
Center bearing assembly (propeller shaft).....	PD-11
Center bearing disassembly (propeller shaft).....	PD-10
Center case (Transfer)	TF-10
CHARGE - Wiring diagram	EL-35
Charging system	EL-34

ALPHABETICAL INDEX

<p>Chassis and body maintenance..... MA-18</p> <p>CHIME - Wiring diagram..... EL-105</p> <p>CIGAR - Wiring diagram..... EL-123</p> <p>Cigarette lighter..... EL-123</p> <p>Circuit breaker..... EL-15</p> <p>CKPS - Wiring diagram..... EC-236, EC-329</p> <p>Closed loop control..... EC-320</p> <p>Closed throttle position switch..... EC-303</p> <p>Clutch cover..... CL-14</p> <p>Clutch disc..... CL-13</p> <p>Clutch fluid level..... MA-18</p> <p>Clutch master cylinder..... CL-8</p> <p>Clutch operating cylinder..... CL-9</p> <p>Clutch pedal..... CL-5</p> <p>Clutch release bearing..... CL-10</p> <p>Clutch withdrawal lever..... CL-10</p> <p>CMPS - Wiring diagram..... EC-241</p> <p>Collision diagnosis..... RS-52</p> <p>Combination lamp, front, removal and installation..... BT-5</p> <p>Combination lamp, rear, removal and installation..... BT-22</p> <p>Combination meter..... EL-79</p> <p>Combination meter removal and installation - See Instrument panel..... BT-11</p> <p>Combination switch..... EL-39</p> <p>Component Location (manual A/C)..... HA-17</p> <p>Compression pressure..... EM-13</p> <p>Compressor clutch removal and installation..... HA-59</p> <p>Compressor description..... HA-7</p> <p>Compressor mounting..... HA-58</p> <p>Compressor precaution..... HA-7</p> <p>Compressor special service tool..... HA-10</p> <p>Connecting rod..... EM-43</p> <p>Connecting rod bearing clearance..... EM-47</p> <p>Connecting rod bushing clearance..... EM-48</p> <p>Connector inspection..... GI-17</p> <p>Console box - See Instrument panel..... BT-12</p> <p>CONSULT for ABS..... BR-71</p> <p>CONSULT for engine..... EC-54</p> <p>CONSULT general information..... GI-33</p> <p>Control lever (M/T)..... MT-14</p> <p>Control lever (Transfer)..... TF-9</p> <p>Control valve (A/T)..... AT-70</p> <p>Converter housing installation..... AT-50</p> <p>Coolant mixture ratio..... MA-9</p> <p>Coolant replacement..... MA-12</p> <p>Cooling circuit (engine)..... LC-7</p> <p>Cooling fan..... LC-12</p> <p>Counter gear (M/T)..... MT-12</p> <p>Counter gear (Transfer)..... TF-11</p> <p>Coupling sleeve (M/T)..... MT-12</p> <p>Crank angle sensor built into distributor - See Camshaft position sensor..... EC-241</p> <p>Crankcase emission control system - See positive crankcase ventilation..... EC-25</p>	<p>Crankcase ventilation system - See positive crankcase ventilation..... EC-25</p> <p>Crankshaft..... EM-45</p> <p>Crankshaft position sensor (OBD)..... EC-236, EC-329</p> <p>Crankshaft position sensor (OBD) cog chipping... EC-236</p> <p>Crankshaft position sensor (POS)..... EC-236</p> <p>Crankshaft position sensor (POS) chipping..... EC-236</p> <p>Crankshaft position sensor (REF)..... EC-236</p> <p>Crash zone sensor..... RS-14</p> <p>Cruise control - See ASCD..... EL-132</p> <p>Cylinder block..... EM-41</p> <p>Cylinder block boring..... EM-44</p> <p>Cylinder head..... EM-28</p> <p>Cylinder head bolt tightening..... EM-23</p>
D	
<p>Data link connector for Consult..... EC-54, EC-430</p> <p>Daytime light system..... EL-48</p> <p>Daytime running light - See Daytime light system..... EL-48</p> <p>Detonation sensor - See Knock sensor..... EC-232</p> <p>Diagnosis sensor unit..... RS-14</p> <p>Diagnostic trouble code (DTC) inspection priority chart..... EC-77</p> <p>Differential carrier assembly..... PD-29, PD-46, PD-64</p> <p>Differential carrier disassembly..... PD-35, PD-53</p> <p>Differential gear oil replacement..... MA-21</p> <p>Dimensions..... GI-39</p> <p>Distributor..... EC-17</p> <p>Distributor ignition (DI) system..... EC-17</p> <p>D/LOCK - Wiring diagram..... EL-161</p> <p>Dome light - See Interior lamp..... EL-71</p> <p>Door, front..... BT-10</p> <p>Door glass..... BT-10</p> <p>Door glass Fitting Adjustment..... BT-10</p> <p>Door lock..... BT-10</p> <p>Door mirror..... BT-35</p> <p>Door trim..... BT-17</p> <p>Drive belt inspection..... MA-10</p> <p>Drive chain (Transfer)..... TF-11</p> <p>Drive pinion diff. inspection..... PD-39, PD-57</p> <p>Drive pinion height..... PD-41, PD-59</p> <p>Drive plate runout..... EM-48</p> <p>Drive shaft (front)..... FA-22</p> <p>Drive shaft (rear)..... RA-7</p> <p>DTRL - Wiring diagram..... EL-51</p> <p>Dual pressure switch..... HA-37</p>	<p>GI</p> <p>MA</p> <p>EM</p> <p>LC</p> <p>EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>TF</p> <p>PD</p> <p>FA</p> <p>RA</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>EL</p>
E	
<p>ECCS relay..... EC-96</p> <p>ECM input/output signal..... EC-86</p> <p>ECTS - Wiring diagram..... EC-123, EC-142</p>	<p>EC</p> <p>FE</p> <p>CL</p> <p>MT</p> <p>AT</p> <p>TF</p> <p>PD</p> <p>FA</p> <p>RA</p> <p>BR</p> <p>ST</p> <p>RS</p> <p>BT</p> <p>HA</p> <p>EL</p>

ALPHABETICAL INDEX

EGR control (EGRC) - BPT valve.....	EC-255	FICD - Wiring diagram	EC-426
EGR control (EGRC) - solenoid valve	EC-334	Final drive disassembly.....	PD-35, PD-53
EGR control valve	EC-253, EC-259, EC-350	Final drive pre-inspection.....	PD-35, PD-53
EGR temperature sensor	EC-339	Final drive removal and installation	PD-15
EGRC1 - Wiring diagram	EC-247, EC-345	Floor trim	BT-14
EGRC/V - Wiring diagram.....	EC-334	Flow charts.....	GI-30
EGR/TS - Wiring diagram	EC-339	Fluids.....	MA-8
Electrical diagnoses	GI-20	Flywheel (clutch)	CL-14
Electrical ignition system.....	EC-17	Flywheel runout.....	EM-48
Electrical unit.....	EL-212	Fog lamp, front.....	EL-60
Electrical units location.....	EL-212	Fork rod (M/T)	MT-14
Electronic ignition (EI) system.....	EC-17	Forward clutch.....	AT-88
Engine compartment	BT-38	F/PUMP - Wiring diagram	EC-418
Engine control circuit diagram.....	EC-9	Freeze frame data.....	EC-35
Engine control component parts location.....	EC-10	FRO2 - Wiring diagram.....	EC-147
Engine control module (ECM).....	EC-309	FRO2/H - Wiring diagram	EC-179
Engine control system diagram and chart.....	EC-12	Front axle	FA-14
Engine coolant temperature sensor		Front bumper.....	BT-5
(ECTS).....	EC-123, EC-142	Front case (Transfer)	TF-10
Engine fail-safe system.....	EC-78	Front combination lamp removal and	
Engine oil filter replacement.....	MA-15	installation	BT-5
Engine oil precautions.....	GI-5	Front disc brake	BR-20
Engine oil replacement.....	MA-15	Front door.....	BT-10
Engine On board diagnostic system.....	EC-35	Front drive shaft (Transfer)	TF-11
Engine outer component parts.....	EM-10	Front final drive disassembly (4WD).....	PD-17
Engine removal	EM-38	Front final drive pre-inspection (4WD).....	PD-17
Engine room - See Engine compartment	BT-38	Front final drive removal and installation (4WD)	PD-14
Engine serial number	GI-38	Front heated oxygen sensor (HO2S).....	EC-147
EVAP canister	EC-20	Front heated oxygen sensor (HO2S) heater	EC-179
EVAP canister purge control solenoid		Front heated oxygen sensor (HO2S)	
valve.....	EC-275, EC-362	monitor	EC-46, EC-165
EVAP canister purge volume control solenoid		Front passenger air bag.....	RS-19
valve.....	EC-362	Front seat.....	BT-26
EVAP canister purge volume control valve.....	EC-275	Front seat belt.....	RS-4
EVAP canister vent control valve.....	EC-281	Front suspension.....	FA-27
EVAP control system pressure sensor	EC-286	FUEL - Wiring diagram	EC-213
EVAP control system purge flow monitoring		Fuel cut control (at no load & high engine	
diagnosis.....	EC-375	speed)	EC-19
EVAP control system (small leak)		Fuel damper	EC-418
diagnosis.....	EC-22, EC-265	Fuel filter replacement.....	MA-14
EVAP system close mode	EC-22, EC-56	Fuel injection system.....	EC-15
EVAP vapor lines inspection	MA-17	Fuel injector.....	EC-27, EC-412
Evaporative emission (EVAP) system.....	EC-20	Fuel line inspection	MA-14
Exhaust gas recirculation (EGR) valve... EC-247, EC-345		Fuel precautions.....	GI-6
Exhaust system.....	FE-8	Fuel pressure check.....	EC-26
Exhaust system inspection.....	MA-18	Fuel pressure regulator.....	EC-26
Extension tube diff.....	PD-20	Fuel pressure release	EC-26
Exterior	BT-22	Fuel pump	EC-418
		Fuel pump and gauge.....	FE-7
		Fuel pump relay	EC-418
		Fuel system	FE-4
		Fuel tank vacuum relief valve	EC-21
		Fuel temperature sensor	EC-223
		Fuse.....	EL-15
		Fusible link	EL-15

F

Fan switch	HA-29, HA-38
Fast idle cam (FIC)	EC-28
Fast idle cam (FIC) inspection and adjustment.....	EC-28
F/FOG - Wiring diagram.....	EL-61

ALPHABETICAL INDEX

G

Garage jack and safety stand.....	GI-41
Gauges.....	EL-79
Gear components (M/T).....	MT-12
Generator.....	EL-34
Generic scan tool (GST).....	EC-65
Glass.....	BT-10
Governer valve assembly.....	AT-81
Grease.....	MA-8
Grille - See Exterior.....	BT-5
Ground clearance.....	GI-39
Ground distribution.....	EL-16

H

Harness connector.....	EL-3
Harness connector inspection.....	GI-17
Harness layout.....	EL-215
Hazard warning lamp.....	EL-64
Headlamp.....	EL-42
Headlamp aiming control.....	EL-45
Headlamp leveler - See Headlamp aiming control.....	EL-45
Headlining - See Roof trim.....	BT-20
Heated oxygen sensor heater.....	EC-157, EC-171, EC-179
Heated oxygen sensor (HO2S) (front).....	EC-147
Heated oxygen sensor (HO2S) heater (front).....	EC-147
Heated oxygen sensor (HO2S) heater (rear).....	EC-209
Heated oxygen sensor monitor (HO2S) (front).....	EC-165
Heated oxygen sensor (rear).....	EC-183
HEATER - Wiring diagram.....	HA-20
Height (Dimensions).....	GI-39
HFC134a (R134a) system introduction.....	HA-13
HFC134a (R134a) system precaution.....	HA-2
HFC134a (R134a) system service procedure.....	HA-51, HA-54
HFC134a (R134a) system service tools.....	HA-8
HFC134a system service equipment precaution.....	HA-8
High clutch.....	AT-86
H/LAMP - Wiring diagram.....	EL-43
Hood.....	BT-5
Horn.....	EL-122
HORN - Wiring diagram.....	EL-122

I

IACV-AAC valve.....	EC-297
IACV-FICD solenoid valve.....	EC-426
IATS - Wiring diagram.....	EC-117
Identification plate.....	GI-37
Idle air control valve (IACV).....	EC-297

Idle mixture ratio.....	EC-29	GI
Idle speed.....	EC-29	
Ignition coil.....	EC-322	MA
Ignition timing.....	EC-29	
Ignition wire inspection.....	EC-231	EM
IGN/SG - Wiring diagram.....	EC-322	
ILL - Wiring diagram.....	EL-70	LC
Illumination.....	EL-69	
INJECT - Wiring diagram.....	EC-412	EC
Injector.....	EC-414	
Injector removal and installation.....	EC-27	FE
Instrument panel.....	BT-11	
Intake air temperature sensor.....	EC-117	CL
Intake manifold.....	EM-10	
Interior.....	BT-14	MT
Interior lamp.....	EL-71	AT
Interior lamp on-off control.....	EL-73	TF
INT/L - Wiring diagram.....	EL-78	PD

J

Jacking points.....	GI-40	FA
Journal bearing assembly (propeller shaft).....	PD-12	RA
Journal bearing disassembly (propeller shaft).....	PD-11	BR
Jump seat.....	BT-29	ST

K

Keyless entry system - See Multi-remote control system.....	EL-172	RS
Knock sensor (KS).....	EC-232	BT
Knuckle spindle.....	FA-19	HA
KS - Wiring diagram.....	EC-232	EL

L

Leaf spring (rear).....	RA-15	ST
Length (Dimensions).....	GI-39	
License lamp.....	EL-57	RS
Lifting points.....	GI-40	
Line pressure test (A/T).....	AT-26	BT
Liquid gasket application.....	EM-2	
LKUP - Wiring diagram.....	EC-401	HA
Location of electrical units.....	EL-212	
Lock, door.....	BT-10	
Low and reverse brake.....	AT-92	
LSV (Load sensing valve).....	BR-9	
Lubricant (R134a) A/C.....	HA-56	EL
Lubricants.....	MA-8	
Lubrication circuit (engine).....	LC-4	
Lubrication-locks, hinges and hood latches.....	MA-24	IDX
Luggage room lamp.....	EL-78	

ALPHABETICAL INDEX

M

MAFS - Wiring diagram.....	EC-101
Magnet clutch.....	HA-59
MAIN - Wiring diagram.....	EC-96
Main drive gear (M/T).....	MT-12
Main gear (Transfer).....	TF-11
Mainshaft (M/T).....	MT-12
Mainshaft (Transfer).....	TF-11
Maintenance.....	MA-3
Maintenance (engine).....	MA-10
MAJOR OVERHAUL.....	AT-51
Major overhaul (Transfer).....	TF-10
Malfunction indicator lamp (MIL).....	EC-46
Manual lock free running hub.....	FA-16
Manual steering gear.....	ST-15
Manual transmission number.....	GI-38
Manual transmission oil replacement.....	MA-18
MAP/BARO switch solenoid valve.....	EC-311
Mass air flow sensor (MAFS).....	EC-101
Master cylinder (brake).....	BR-14
Master cylinder (clutch).....	CL-8
Meter.....	EL-79
METER - Wiring diagram.....	EL-84
MIL & data link connectors circuit.....	EC-430
MIL/DL - Wiring diagram.....	EC-430
MIRROR - Wiring diagram.....	EL-131
Mirror, door.....	BT-35
Mirror, out side.....	BT-35
Misfire.....	EC-227
Model variation.....	GI-35
Molding - See Exterior.....	BT-22
M/T major overhaul.....	MT-11
M/T removal and installation.....	MT-8
Mud guard - See Exterior.....	BT-25
MULTI - Wiring diagram.....	EL-176
Multipoint fuel injection (MFI) system.....	EC-15
Multipoint fuel injection precautions.....	GI-5
Multipoint fuel injection system inspection.....	EC-15
Multi-remote control system.....	EL-172

N

Neutral position switch.....	EC-396
NVH troubleshooting (BR).....	BR-4
NVH troubleshooting (CL).....	CL-3
NVH troubleshooting (EM).....	EM-8
NVH troubleshooting (FA).....	FA-4
NVH troubleshooting (M/T).....	MT-4
NVH troubleshooting (PD).....	PD-6
NVH troubleshooting (RA).....	RA-4
NVH troubleshooting (ST).....	ST-5
NVH troubleshooting (Transfer).....	TF-4

O

Oil change (capacity).....	MA-8
Oil change (interval).....	MA-6
Oil pan (engine).....	EM-14
Oil pressure (engine).....	LC-5
Oil pump (A/T).....	AT-66
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine).....	EM-25
Oil seal replacement (front final drive 4WD).....	PD-13
Operating cylinder (clutch).....	CL-9
Out side mirror.....	BT-35
Overdrive control switch.....	AT-36
Overrun clutch.....	AT-88
Oversize piston.....	EM-44

P

Pantograph jack.....	GI-40
Parking brake control.....	BR-28
Parking lamp.....	EL-56
Park/neutral position (PNP) switch.....	EC-396
Park/neutral position switch (A/T).....	AT-37
Park/neutral position switch (PNP) (M/T).....	MT-7
PCV (positive crankcase ventilation).....	EC-25
PGC/V - Wiring diagram.....	EC-275, EC-362
Pilot bushing replacement.....	EM-50
Pinion bearing preload diff.....	PD-24
Pinion gear height diff.....	PD-24, PD-41, PD-59
Piston assembly.....	EM-48
Piston pin inspection.....	EM-42
Piston ring inspection.....	EM-43
Piston to bore clearance.....	EM-44
PNP/SW - Wiring diagram.....	EC-396
POWER - Wiring diagram.....	EL-10
Power door lock.....	EL-157
Power door mirror.....	EL-131
Power steering fluid level.....	MA-23, ST-6
Power steering gear.....	ST-21, ST-29
Power steering hydraulic pressure.....	ST-10
Power steering oil pressure switch.....	EC-423
Power steering oil pump.....	ST-36
Power steering system bleeding.....	ST-7
Power supply routing.....	EL-8
Power transistor.....	EC-322
Power transistor & ignition coil.....	EC-322
Power window.....	EL-152
Precautions (General).....	GI-3
PRE/SE - Wiring diagram.....	EC-286
Pressure plate - See Clutch cover.....	CL-14
Pressure test (A/T).....	AT-26
Propeller shaft.....	PD-7
Propeller shaft inspection.....	MA-20

ALPHABETICAL INDEX

Propeller shaft on vehicle service..... PD-9
 Propeller shaft vibration PD-9
 PST/SW - Wiring diagram..... EC-423

R

R134a - See HFC134a HA-2
 Radiator LC-11
 Radiator fan - See Cooling fan LC-12
 Radio - See Audio EL-124
 Rear axle RA-7
 Rear axle (drum brake type) RA-8
 Rear body BT-36
 Rear bumper BT-8
 Rear case (Transfer) TF-10
 Rear combination lamp removal and installation BT-22
 Rear cover packing replacement diff. PD-13
 Rear drum brake BR-24
 Rear heated oxygen sensor (HO2S) EC-183
 Rear heated oxygen sensor (HO2S) heater EC-209
 Rear seat BT-29
 Rear seat belt RS-5
 Rear side window BT-32
 Rear suspension RA-14
 Rear wheel anti-lock brake system (R-ABS) BR-30
 Rear window BT-33
 Refrigerant connection precaution HA-4
 Refrigerant discharging evacuating charging HA-54
 Refrigerant general precaution HA-3
 Refrigerant lines HA-50
 Refrigeration cycle HA-13
 Release bearing (clutch) CL-10
 Removal and installation (A/T) AT-48
 Removal and installation (Transfer) TF-8
 Resistor EC-328
 Reverse clutch AT-82
 Reverse idler shaft (M/T) MT-12
 Reverse lamp switch (M/T) - See Back-up lamp
 switch (M/T) MT-7
 Reverse main gear (M/T) MT-12
 Ring gear diff. inspection PD-39, PD-57
 RO2H-L - Wiring diagram EC-183
 Road wheel size GI-39
 Roof trim BT-20
 Room lamp EL-71
 Room lamp - See Interior lamp EL-71
 ROOM/L - Wiring diagram EL-74
 Rotor disc (front) FA-17
 RRO2/H - Wiring diagram EC-209

S

SAE J1930 terminology list GI-47
 SAE J1979 - Mode 1 - 7 EC-35

Seal - See Exterior BT-22
 Seat belt, front RS-4
 Seat belt inspection MA-25, RS-6
 Seat belt, rear RS-5
 Seat, front BT-26
 Seat, rear BT-29
 Self-diagnostic results EC-46
 SHIFT - Wiring diagram AT-40
 Shift control components (M/T) MT-14
 Shift control (Transfer) TF-12
 Shift fork (M/T) MT-14
 Shift lever MT-14
 Shift lock system AT-39
 Shift schedule AT-122
 Shock absorber (front) FA-29
 Shock absorber (rear) RA-15
 Side bearing preload diff. PD-40, PD-58
 Side bearing preload (front final drive 4WD) PD-23
 Side shaft diff. PD-20
 Side trim BT-14
 Smart entrance control unit EL-172, EL-207
 Spare tire size GI-39
 Spark plug replacement MA-16
 Spiral cable RS-15
 Spot lamp EL-78
 SRS - See Supplemental Restraint System RS-9
 SRS - Wiring diagram RS-32
 SRS Trouble diagnoses RS-27
 S/SIG - Wiring diagram EC-415
 Stabilizer bar (front) FA-31
 Stall test (A/T) AT-23
 Standardized relay EL-5
 START - Wiring diagram EL-29
 Start signal EC-415
 Starter EL-27
 Starting system EL-27
 Steering gear and linkage inspection MA-23
 Steering gear oil level MA-23
 Steering knuckle FA-19
 Steering linkage ST-39
 Steering switch EL-41
 Steering wheel and column ST-11
 Steering wheel play ST-8
 Steering wheel turning force ST-8
 Stop lamp EL-58
 STOP/L - Wiring diagram EL-58
 Striking rod (M/T) MT-14
 Sub-gear (M/T) MT-12
 Sunroof BT-30
 Supplemental Restraint System RS-9
 Supplemental restraint system - Wiring diagram RS-32
 SW/V - Wiring diagram EC-311
 Symbols and abbreviations GI-8
 Symptom matrix chart EC-79
 Synchronizer (M/T) MT-12
 System readiness test (SRT) code EC-35

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

ALPHABETICAL INDEX

T

Tail lamp	EL-56
TAIL/L - Wiring diagram	EL-56
Tank fuel temperature sensor	EC-223
Tension rod (front)	FA-33
TFTS - Wiring diagram	EC-223
THEFT - Wiring diagram	EL-193
Theft warning system	EL-187
Thermal protector	HA-37
Thermo control amp	HA-37
Thermostat	LC-10
Three way catalyst	EC-260
Three way catalyst precautions	GI-5
Throttle bodies	EM-10
Throttle chambers	EM-10
Throttle drum adjustment	FE-3
Throttle position sensor adjustment	EC-71
Throttle position sensor (TPS)	EC-128
Throttle position switch	EC-303
Throat bearing - See Clutch release bearing	CL-10
Thrust washer selection diff.	PD-71, PD-72, PD-73
Tie-rod	ST-39
Tie-rod ball joints	ST-39
Tightening torque of standard bolts	GI-46
Timing chain	EM-16
Tire rotation	MA-21
Tire size	GI-39
Tooth contact diff.	PD-45, PD-63
Tooth contact (front final drive 4WD)	PD-28
Torque converter clutch solenoid valve	AT-34
Torque converter installation	AT-50
Torque convertor clutch solenoid valve ..	EC-401, EC-405
Torsion bar spring	FA-29
Towing point	GI-45
TPS - Wiring diagram	EC-128
TP/SW - Wiring diagram	EC-303
Transfer case	TF-10
Transfer fluid replacement	MA-20
Transfer oil replacement	MA-20
Transfer serial number	GI-38
Transmission case (M/T)	MT-11
Tread-FR&RR (Dimensions)	GI-39
Trim	BT-14
Trouble diagnoses	GI-20
Trunk room lamp	EL-78
TURN - Wiring diagram	EL-66
Turn signal lamp	EL-64
Two trip detection logic	EC-35
Two-pole lift	GI-42

U

Under body	BT-40
------------------	-------

Upper link (front susp.)	FA-32
--------------------------------	-------

V

Vacuum cut valve	EC-395
Vacuum cut valve bypass valve	EC-391
Vacuum hose (brake system)	BR-19
Vacuum hose drawing (Engine control)	EC-13
Valve clearance	EM-35
Valve guide	EM-31
Valve lifter	EM-35
Valve seat	EM-33
Valve spring	EM-34
Vehicle identification number	GI-37
Vehicle speed sensor (VSS)	EC-292
Vent mode switch	HA-14
VENT/V - Wiring diagram	EC-281
Viscosity number (SAE)	MA-9
VSS - Wiring diagram	EC-292

W

WARN - Wiring diagram	EL-97
Warning chime	EL-102
Warning lamps	EL-94
Washer, front	EL-114
Water pump	LC-9
Weatherstrip - See Exterior	BT-22
Wheel alignment (front)	FA-9
Wheel balance	MA-21
Wheel bearing (front axle)	FA-7
Wheel bearing (rear)	RA-6
Wheel hub (front)	FA-17
Wheel sensors (ABS)	BR-31, BR-57
Wheel sensors (TCS)	BR-57
Wheel size	GI-39
Wheelbase (Dimensions)	GI-39
Wide open & closed throttle position switch	EC-303
Width (Dimensions)	GI-39
WINDOW - Wiring diagram	EL-154
Window, back	BT-22, BT-33
Window, door	BT-10
Window, rear	BT-33
Windshield	BT-31
WIPER - Wiring diagram	EL-116
Wiper and washer	EL-114
Wiper, front	EL-114
Wiring Diagram (Cell code) list	EL-233
Wiring diagrams	GI-9
Withdrawal lever (clutch)	CL-10
Wrist pin - See Piston pin inspection	EM-42



PLEASE HELP MAKE THIS SERVICE MANUAL BETTER!

Your comments are important to NISSAN and will help us to improve our Service Manuals. Use this form to report any issues or comments you may have regarding our Service Manuals. Please photocopy this form and type or print your comments below. Mail or fax to:

Nissan North America, Inc.
Technical Service Information
39001 Sunrise Drive, P.O. Box 9200
Farmington Hills, MI USA 48331
FAX: (248) 488-3910

SERVICE MANUAL: Model: _____ Year: _____

PUBLICATION NO. (Please photocopy back cover): _____

VEHICLE INFORMATION VIN: _____ **Production Date:** _____

Please describe any issues or problems in detail:

Page number(s) _____ *Note: Please include a copy of each page, marked with your comments.*

Are the trouble diagnosis procedures logical and easy to use? (circle your answer) YES NO

If no, what page number(s)? _____ *Note: Please include a copy of each page, marked with your comments.*

Please describe the issue or problem in detail: _____

Is the organization of the manual clear and easy to follow? (circle your answer) YES NO

Please comment: _____

What information should be included in NISSAN Service Manuals to better support you in servicing or repairing customer vehicles?

DATE: _____ YOUR NAME: _____ POSITION: _____

DEALER: _____ DEALER NO.: _____ ADDRESS: _____

CITY: _____ STATE/PROV./COUNTRY: _____ ZIP/POSTAL CODE: _____