
ALPHABETICAL INDEX

Numerics

1ST POSITION SWITCH [TM-227](#)

Numerics

4WD BRANCH LINE CIRCUIT [LAN-80](#)
4WD SHIFT INDICATOR LAMP AND 4LO
INDICATOR LAMP DO NOT TURN ON [DLN-74](#)
4WD SHIFT INDICATOR LAMP KEEPS FLASHING
[DLN-78](#)
4WD SHIFT INDICATOR LAMP OR 4LO
INDICATOR LAMP DO NOT CHANGE [DLN-75](#)
4WD SYSTEM [DLN-10](#)
4WD SYSTEM SYMPTOMS [DLN-72](#)
4WD WARNING LAMP DOES NOT TURN ON
[DLN-73](#)
4WD WARNING LAMP FLASHES SLOWLY [DLN-79](#)

A

A-BAG BRANCH LINE CIRCUIT [LAN-81](#)
A/T CONTROL SYSTEM [TM-133](#), [TM-234](#)
A/T FLUID [TM-270](#)
A/T FLUID COOLER [TM-304](#)
A/T SHIFT LOCK SYSTEM [TM-155](#), [TM-223](#),
[TM-241](#)
ABBREVIATIONS [GI-13](#)
ABS [BRC-22](#), [BRC-170](#)
ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT) [BRC-114](#), [BRC-265](#)
ABS BRANCH LINE CIRCUIT [LAN-87](#)
ABS FUNCTION DOES NOT OPERATE [BRC-134](#),
[BRC-284](#)
ABS WARNING LAMP [BRC-108](#), [BRC-258](#)
ACCELERATOR CONTROL SYSTEM [ACC-3](#)
ACTUATOR AND ELECTRIC UNIT (ASSEMBLY) .
[BRC-144](#), [BRC-294](#)
ADDITIONAL SERVICE WHEN REPLACING
CONTROL VALVE & TCM [TM-132](#)
ADDITIONAL SERVICE WHEN REPLACING
TRANSMISSION ASSEMBLY [TM-131](#)
AIR BREATHER HOSE [DLN-99](#), [TM-19](#), [TM-71](#),
[TM-301](#)
AIR CLEANER AND AIR DUCT [EM-25](#), [EM-142](#)
AIR CLEANER FILTER [EM-17](#), [EM-132](#)
AIR CONDITIONER CONTROL . [HAC-61](#), [HAC-63](#),
[HAC-72](#), [HAC-131](#), [HAC-133](#), [HAC-142](#),
[HAC-198](#), [HAC-200](#), [HAC-212](#)
AIR CONDITIONING CUT CONTROL [EC-37](#),
[EC-502](#), [EC-1005](#)
AIR MIX DOOR MOTOR [HAC-25](#), [HAC-107](#),
[HAC-176](#), [VTL-22](#)
AMBIENT SENSOR [HA-35](#), [HAC-48](#)
AMP ON SIGNAL CIRCUIT [AV-231](#)

APPLICATION NOTICE . [BRC-7](#), [BRC-14](#), [BRC-33](#),
[BRC-113](#), [BRC-129](#), [BRC-149](#), [BRC-156](#),
[BRC-181](#), [BRC-264](#), [BRC-279](#)
ASCD BRAKE SWITCH [EC-938](#), [EC-1361](#)
ASCD INDICATOR [EC-447](#), [EC-945](#), [EC-1365](#)
ASSEMBLY [TM-364](#)
ATP SWITCH [DLN-80](#)
ATP WARNING LAMP DOES NOT TURN ON
[DLN-77](#)
AUDIO AMP [AV-170](#)
AUDIO AMP [AV-258](#)
AUDIO ANTENNA. [AV-59](#), [AV-90](#), [AV-151](#), [AV-266](#),
[AV-359](#)
AUDIO SYSTEM [AV-10](#), [AV-43](#), [AV-63](#), [AV-80](#),
[AV-137](#)
AUDIO UNIT [AV-27](#), [AV-51](#), [AV-72](#), [AV-86](#), [AV-101](#),
[AV-145](#)
AUTO LIGHT SYSTEM [EXL-15](#), [EXL-86](#)
AUTO OPERATION DOES NOT OPERATE. [RF-39](#)
AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATES NORMALLY (DRIVER
SIDE) [PWC-68](#)
AUTOMATIC AIR CONDITIONER SYSTEM [HAC-13](#)
AUTOMATIC DOOR LOCKS [DLK-8](#)
AUTOMATIC SPEED CONTROL DEVICE (ASCD)
[CCS-3](#), [EC-38](#), [EC-503](#), [EC-1006](#)
AUXILIARY INPUT JACK [AV-136](#), [AV-155](#), [AV-239](#),
[AV-268](#), [AV-336](#), [AV-361](#)
AV BRANCH LINE CIRCUIT [LAN-78](#)
AV CONTROL UNIT [AV-166](#), [AV-257](#), [AV-282](#),
[AV-353](#)
AXLE BEARING [RAX-12](#), [RAX-23](#)
AXLE OIL SEAL [RAX-13](#), [RAX-24](#)
AXLE SHAFT [RAX-7](#), [RAX-19](#)

B

B TERMINAL CIRCUIT [CHG-13](#), [STR-16](#)
B0001, B0002 DRIVER AIRBAG MODULE [SRC-19](#)
B0010, B0011 PASSENGER AIRBAG MODULE
[SRC-22](#)
B0020 SIDE AIRBAG MODULE LH [SRC-25](#)
B0021 SIDE CURTAIN AIR BAG MODULE LH
[SRC-28](#)
B0028 SIDE AIRBAG MODULE RH [SRC-31](#)
B0029 SIDE CURTAIN AIR BAG MODULE RH
[SRC-34](#)
B0091 FRONT SIDE AIR BAG SATELLITE
SENSOR LH [SRC-37](#)
B0093 FRONT DOOR SATELLITE SENSOR LH ...
[SRC-40](#)
B0094 CRASH ZONE SENSOR [SRC-43](#)
B0096 FRONT SIDE AIR BAG SATELLITE
SENSOR RH [SRC-46](#)

B0098 FRONT DOOR SATELLITE SENSOR RH...
 [SRC-49](#)
 B00A0 OCCUPANT CLASSIFICATION SYSTEM
 CONTROL UNIT [SRC-52](#)
 B00D2 FRONT PASSENGER AIR BAG ON
 INDICATOR [SRC-57](#)
 B00D5 PASSENGER AIR BAG OFF INDICATOR ..
 [SRC-60](#)
 B1400, B1401, B1402, B1403, B1404, B1405 AIR
 BAG DIAGNOSIS SENSOR UNIT [SRC-63](#)
 B1406, B1407, B1408, B1409, B1410 AIR BAG
 DIAGNOSIS SENSOR UNIT [SRC-65](#)
 B1411, B1412, B1413, B1414, B1415 AIR BAG
 DIAGNOSIS SENSOR UNIT [SRC-67](#)
 B1416, B1417, B1418, B1419, B1420 AIR BAG
 DIAGNOSIS SENSOR UNIT [SRC-69](#)
 B1428 SEAT BELT BUCKLE SWITCH LH. [SRC-76](#)
 B1429 SEAT BELT BUCKLE SWITCH RH. [SRC-79](#)
 B142A IGNITION VOLTAGE [SRC-71](#)
 B142B IGNITION VOLTAGE [SRC-73](#)
 B142X COLLISION DETECTION..... [SRC-75](#)
 B1430 SEAT BELT PRE-TENSIONER..... [SRC-82](#)
 B1431 SEAT BELT PRE-TENSIONER..... [SRC-85](#)
 B1500 DOOR SATELLITE SENSOR..... [SRC-88](#)
 B2190, P1614 NATS ANTENNA AMP. [SEC-18](#)
 B2191, P1615 DIFFERENCE OF KEY..... [SEC-21](#)
 B2192, P1611 ID DISCORD, IMMU-ECM .. [SEC-22](#)
 B2193, P1612 CHAIN OF ECM-IMMU [SEC-24](#)
 BACK-UP LAMP [EXL-115](#)
 BASE AUDIO SYSTEM..... [AV-32](#), [AV-74](#)
 BATTERY [PG-80](#), [PG-89](#)
 BATTERY SAVER OUTPUT/POWER SUPPLY
 CIRCUIT [INL-16](#)
 BATTERY TERMINAL WITH FUSIBLE LINK [PG-90](#)
 BCM (BODY CONTROL MODULE) [BCS-38](#),
 [BCS-49](#), [BCS-56](#), [DEF-18](#), [DLK-64](#), [EXL-57](#),
 [INL-26](#), [INL-84](#), [MWI-42](#), [PWC-38](#), [RF-21](#),
 [SEC-34](#), [WCS-27](#), [WT-24](#), [WW-25](#)
 BCM BRANCH LINE CIRCUIT [LAN-82](#)
 BED RAILS AND TRIM [EXT-36](#)
 BLOWER MOTOR..... [HAC-115](#), [HAC-182](#), [VTL-11](#)
 BLOWER MOTOR CONTROL SYSTEM ... [HAC-36](#)
 BLOWER MOTOR RESISTOR [VTL-13](#)
 BLUETOOTH CONTROL UNIT [AV-56](#)
 BLUETOOTH® CONTROL UNIT [AV-30](#)
 BODY ALIGNMENT [BRM-25](#)
 BODY COMPONENT PARTS [BRM-9](#)
 BODY CONSTRUCTION [BRM-23](#)
 BODY CONTROL SYSTEM [BCS-8](#)
 BODY EXTERIOR PAINT COLOR..... [BRM-2](#)
 BODY SIDE TRIM [INT-18](#)
 BOTH SIDE FRONT FOG LAMPS ARE NOT
 TURNED ON [EXL-135](#)
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED
 ON [EXL-133](#)

BOTH SIDE HEADLAMPS DO NOT SWITCH TO
 HIGH BEAM [EXL-131](#)
 BRAKE BOOSTER [BR-9](#), [BR-34](#)
 BRAKE CONTROL SYSTEM - VDC [BRC-120](#),
 [BRC-271](#)
 BRAKE FLUID [BR-18](#)
 BRAKE MASTER CYLINDER [BR-11](#), [BR-32](#), [BR-47](#)
 BRAKE PEDAL [BR-16](#), [BR-24](#)
 BRAKE PEDAL POSITION SWITCH [EC-443](#)
 BRAKE SIGNAL CIRCUIT [TM-222](#)
 BRAKE TUBE AND HOSE [BR-12](#), [BR-26](#)
 BRAKE WARNING LAMP [BRC-109](#), [BRC-259](#)
 BULB SPECIFICATIONS..... [INL-67](#), [INL-121](#)
 BUZZER [SN-27](#)

C

C1101, C1102, C1103, C1104 WHEEL SENSOR ...
 [BRC-34](#), [BRC-182](#)
 C1105, C1106, C1107, C1108 WHEEL SENSOR ...
 [BRC-39](#), [BRC-187](#)
 C1109 POWER AND GROUND SYSTEM [BRC-46](#),
 [BRC-194](#)
 C1110 CONTROL FAILURE [BRC-48](#), [BRC-196](#)
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM.....
 [BRC-50](#), [BRC-198](#)
 C1113, C1145, C1146 YAW RATE/SIDE/DECEL G
 SENSOR [BRC-53](#), [BRC-201](#)
 C1115 WHEEL SENSOR..... [BRC-57](#), [BRC-205](#)
 C1116 STOP LAMP SWITCH [BRC-64](#), [BRC-212](#)
 C1120, C1122, C1124, C1126 ABS IN VALVE
 SYSTEM..... [BRC-69](#), [BRC-217](#)
 C1121, C1123, C1125, C1127 ABS OUT VALVE
 SYSTEM..... [BRC-71](#), [BRC-219](#)
 C1130, C1131, C1132, C1133, C1136 ENGINE
 SIGNAL [BRC-73](#), [BRC-221](#)
 C1140 ACTUATOR RELAY SYSTEM..... [BRC-75](#),
 [BRC-223](#)
 C1142 PRESS SENSOR [BRC-77](#), [BRC-225](#)
 C1143 STEERING ANGLE SENSOR..... [BRC-80](#),
 [BRC-228](#)
 C1144 INCOMPLETE STEERING ANGLE SENSOR
 ADJUSTMENT [BRC-84](#), [BRC-232](#)
 C1155 BRAKE FLUID LEVEL SWITCH [BRC-86](#),
 [BRC-234](#)
 C1156 STEERING ANGLE SENSOR (CAN).....
 [BRC-90](#), [BRC-238](#)
 C1160 INCOMPLETE DECEL G SENSOR
 CALIBRATION [BRC-92](#), [BRC-240](#)
 C1163 ST ANGLE SEN SAFE ... [BRC-94](#), [BRC-242](#)
 C1164, C1165 CV SYSTEM [BRC-95](#), [BRC-243](#)
 C1166, C1167 SV SYSTEM..... [BRC-97](#), [BRC-245](#)
 C1170 VARIANT CODING [BRC-99](#), [BRC-247](#)
 C1187 DIFFERENTIAL LOCK CONTROL UNIT
 [BRC-100](#), [BRC-248](#)
 C1203 ABS SYSTEM [DLN-293](#)

C1708 - C1711 DATA FROM TRANSMITTER NOT BEING RECEIVED WT-15
 C1712 - C1715, C1720 - C1723, C1724 - C1727 TRANSMITTER MALFUNCTION WT-17
 C1716 - C1719 TRANSMITTER PRESSURE MALFUNCTION WT-19
 C1729 VEHICLE SPEED SIGNAL WT-21
 C1735 IGNITION SIGNAL WT-22
 CAMSHAFT EM-55, EM-195
 CAMSHAFT VALVE CLEARANCE EM-20, EM-135
 CAN COMMUNICATION EC-40, EC-505, EC-1008
 CAN COMMUNICATION CIRCUIT LAN-89
 CAN COMMUNICATION SYSTEM LAN-4, LAN-53, LAN-68
 CAN SYSTEM LAN-61
 CARGO LAMP CONTROL CIRCUIT INL-20, INL-80
 CARRIER COVER .. DLN-190, DLN-223, DLN-254, DLN-318
 CASE COMPONENTS TM-30, TM-83
 CENTER CONSOLE IP-26
 CENTER CONSOLE ASSEMBLY IP-29
 CHARGING SYSTEM CHG-8, CHG-18, CHG-25
 CHARGING SYSTEM PRELIMINARY INSPECTION CHG-10
 CHASSIS AND BODY MAINTENANCE MA-43
 CLOSED THROTTLE POSITION AND WIDE OPEN THROTTLE POSITION CIRCUIT TM-221
 CLUSTER LID A IP-17
 CLUSTER LID C IP-19
 CLUSTER LID D IP-21
 CLUTCH DISC, CLUTCH COVER CL-19
 CLUTCH FLUID CL-8
 CLUTCH MASTER CYLINDER CL-10
 CLUTCH PEDAL CL-7, CL-9
 CLUTCH PIPING CL-13
 CLUTCH RELEASE MECHANISM CL-14
 CLUTCH RESERVOIR CL-11
 COIL SPRING AND SHOCK ABSORBER FSU-14, FSU-23
 COLLISION DIAGNOSIS SR-4
 COMBINATION METER MWI-39, MWI-91, WCS-24
 COMBINATION SWITCH INPUT CIRCUIT BCS-35
 COMBINATION SWITCH OUTPUT CIRCUIT BCS-36
 COMBINATION SWITCH READING SYSTEM BCS-10, EXL-25
 COMBINATION SWITCH SYSTEM SYMPTOMS... BCS-53
 COMPASS MWI-23, MWI-60
 COMPRESSION PRESSURE EM-23, EM-139
 COMPRESSOR HA-25
 CONDENSER HA-34
 CONTROL UNIT VTL-7
 CONTROL VALVE WITH TCM TM-289
 COOLING FAN CO-19, EC-946, EC-1366
 COOLING FAN CONTROL EC-506, EC-1009

COOLING SYSTEM CO-7, CO-35
 CORROSION PROTECTION BRM-17
 COWL TOP EXT-24
 CRASH ZONE SENSOR SR-20
 CYLINDER HEAD EM-68, EM-208

D

DAYTIME LIGHT RELAY CIRCUIT EXL-46
 DAYTIME LIGHT SYSTEM EXL-12, EXL-79
 DAYTIME LIGHT SYSTEM INOPERATIVE EXL-132
 DIAG ON CAN LAN-6
 DIAGNOSIS AND REPAIR WORK FLOW .. BRC-8, BRC-150, EC-114, SRC-3
 DIAGNOSIS SENSOR UNIT SR-22, SRC-90
 DIAGNOSIS SYSTEM (AUDIO UNIT) AV-96
 DIAGNOSIS SYSTEM (AV CONTROL UNIT) AV-163, AV-279
 DIAGNOSIS SYSTEM (BCM) BCS-19, DEF-6, DLK-20, EXL-29, HAC-18, HAC-99, HAC-169, INL-11, INL-76, PWC-8, RF-8, SEC-14, WCS-15, WT-12, WW-8
 DIAGNOSIS SYSTEM (DIFFERENTIAL LOCK CONTROL UNIT) DLN-273
 DIAGNOSIS SYSTEM (ECM) EC-48, EC-518, EC-1020
 DIAGNOSIS SYSTEM (HVAC) HAC-17
 DIAGNOSIS SYSTEM (IPDM E/R) EXL-32, PCS-9, WW-10
 DIAGNOSIS SYSTEM (METER) MWI-25, WCS-11
 DIAGNOSIS SYSTEM (TCM) TM-158
 DIAGNOSIS SYSTEM (TRANSFER CONTROL UNIT) DLN-17
 DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)] .. BRC-28, BRC-176
 DIFF BRANCH LINE CIRCUIT LAN-83
 DIFF LOCK INDICATOR LAMP DOES NOT TURN ON WITH DIFFERENTIAL LOCK SWITCHED ON DLN-304
 DIFF LOCK INDICATOR LAMP FLASHES WHILE DRIVING DLN-305
 DIFF LOCK INDICATOR LAMP INOPERATIVE DLN-303
 DIFFERENTIAL GEAR OIL DLN-186, DLN-220, DLN-251, DLN-310
 DIFFERENTIAL LOCK CONTROL UNIT DLN-296, DLN-311
 DIFFERENTIAL LOCK POSITION SWITCH DLN-312
 DIFFERENTIAL LOCK SYSTEM DLN-269
 DIRECT CLUTCH TM-361
 DISASSEMBLY TM-325
 DISPLAY AUDIO AV-104
 DLC BRANCH LINE CIRCUIT LAN-84
 DOES NOT STOP FULLY-OPEN OR FULLY-CLOSED POSITION RF-40

DOOR	DLK-132
DOOR FINISHER	INT-15
DOOR LOCK	DLK-116
DOOR LOCK ACTUATOR.....	DLK-43
DOOR LOCK AND UNLOCK SWITCH	DLK-32
DOOR LOCK FUNCTION	DLK-12
DOOR MIRROR	MIR-2, MIR-24, MIR-26
DOOR MIRROR DEFOGGER DOES NOT OPERATE	DEF-36
DOOR MIRROR DEFOGGER LH	DEF-14
DOOR MIRROR DEFOGGER RH	DEF-16
DOOR MIRROR REMOTE CONTROL SWITCH MIR-14	
DOOR OUTSIDE MOLDING	EXT-33
DOOR SWITCH.....	DLK-27, PWC-31, RF-16
DRIVE BELTS.....	EM-14, EM-130
DRIVE SHAFT	FAX-6, FAX-10
DRIVER AIR BAG MODULE	SR-11
DRIVER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE	DEF-37
DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE	PWC-64
DTC B2205 VEHICLE SPEED CIRCUIT	MWI-30
DTC U1000 CAN COMMUNICATION	MWI-29
DUCTS AND GRILLES	VTL-25

E

EBD	BRC-25, BRC-173
ECM BRANCH LINE CIRCUIT	LAN-76
ELECTRIC IGNITION SYSTEM	EC-36, EC-501, EC-1004
ELECTRICAL LEAK DETECTOR.....	HA-20
ELECTRICAL LOAD SIGNAL	EC-448, EC-948, EC-1368
ELECTRICAL UNITS LOCATION.....	PG-5
ENGINE ASSEMBLY	EM-78, EM-219
ENGINE CONTROL SYSTEM	EC-26, EC-96, EC-489, EC-569, EC-993, EC-1066
ENGINE CONTROL SYSTEM SYMPTOM.....	SEC-471, EC-976, EC-1397
ENGINE COOLANT	CO-11, CO-39
ENGINE COOLING FAN	CO-47
ENGINE MAINTENANCE (QR25DE ENGINE)	MA-24
ENGINE MAINTENANCE (VQ40DE)	MA-33
ENGINE OIL	LU-9, LU-22
ENGINE ROOM COVER.....	EM-141
ENGINE UNIT	EM-81, EM-222
EVAP CANISTER	FL-15
EVAP LEAK CHECK.....	EC-479, EC-983, EC-1404
EVAPORATIVE EMISSION SYSTEM	EC-41, EC-507, EC-1010
EVAPORATOR	VTL-16
EXCESSIVE ABS FUNCTION OPERATION FREQUENCY	BRC-131, BRC-281

EXHAUST MANIFOLD AND THREE WAY CATALYST	EM-31, EM-148
EXHAUST SYSTEM	EX-4, EX-5
EXPANSION VALVE	HA-37, VTL-18
EXTERIOR LIGHTING SYSTEM SYMPTOMS	EXL-128

F

FENDER PROTECTOR	EXT-26
FILAMENT	DEF-41
FLOOR TRIM.....	INT-23
FLUORESCENT LEAK DETECTOR	HA-18
FRONT BUMPER	EXT-15
FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR.....	TM-349
FRONT COMBINATION LAMP	EXL-149
FRONT DISC BRAKE.....	BR-7, BR-20, BR-37, BR-49
FRONT DOOR GLASS AND REGULATOR	GW-16
FRONT DOOR LOCK.....	DLK-137
FRONT DOOR SPEAKER.....	AV-17, AV-53, AV-66, AV-88, AV-123, AV-147, AV-216, AV-260, AV-323, AV-355
FRONT DRIVE SHAFT	DLN-124
FRONT FENDER.....	EXT-25
FRONT FINAL DRIVE	DLN-193
FRONT FINAL DRIVE ASSEMBLY	DLN-191
FRONT FOG LAMP	EXL-18, EXL-94, EXL-138, EXL-142
FRONT FOG LAMP CIRCUIT	EXL-48
FRONT GRILLE.....	EXT-23
FRONT OIL SEAL	DLN-93, DLN-187, DLN-221, DLN-252, DLN-316
FRONT PASSENGER AIR BAG MODULE ..	SR-15
FRONT PASSENGER SIDE POWER WINDOW ALONE DOES NOT OPERATE	PWC-65
FRONT POWER WINDOW SWITCH.....	PWC-75
FRONT SEAT	SE-27, SE-39
FRONT SEAT BELT.....	SB-6
FRONT SEAT BELT PRE-TENSIONER	SR-21
FRONT SUN GEAR, 3RD ONE-WAY CLUTCH	TM-347
FRONT SUSPENSION ASSEMBLY	FSU-13
FRONT TIMING CHAIN CASE	EM-170
FRONT TWEETER.....	AV-19, AV-52, AV-68, AV-87, AV-125, AV-146, AV-219, AV-259, AV-325, AV-354
FRONT WASHER NOZZLE.....	WW-57
FRONT WASHER TUBE	WW-56
FRONT WIPER AND WASHER SYSTEM.....	WW-4, WW-43
FRONT WIPER ARM.....	WW-54
FRONT WIPER AUTO STOP SIGNAL CIRCUIT	WW-19
FRONT WIPER DOES NOT OPERATE	WW-51
FRONT WIPER DRIVE ASSEMBLY	WW-55

FRONT WIPER MOTOR GROUND CIRCUIT	
WW-21	
FRONT WIPER MOTOR HI CIRCUIT	WW-17
FRONT WIPER MOTOR LO CIRCUIT	WW-15
FUEL FILLER CAP WARNING SYSTEM	EC-45,
EC-511, EC-1014	
FUEL INJECTOR	EC-449, EC-950, EC-1370
FUEL INJECTOR AND FUEL TUBE	EM-40, EM-164
FUEL LEVEL SENSOR SIGNAL CIRCUIT	MWI-34
FUEL LEVEL SENSOR UNIT, FUEL FILTER AND	
FUEL PUMP ASSEMBLY	FL-11, FL-17
FUEL PRESSURE	EC-476, EC-981, EC-1402
FUEL PUMP	EC-452, EC-954, EC-1374
FUEL SYSTEM	FL-5
FUEL TANK	FL-6
FUNCTION INFORMATION	HAC-8, HAC-92,
HAC-162	
FUSE AND RELAY BOX	PG-78
FUSE BLOCK - JUNCTION BOX (J/B)	PG-76
FUSE INSPECTION	PG-84
FUSE, FUSIBLE LINK AND RELAY BOX	PG-77
FUSIBLE LINK INSPECTION	PG-88

G

GEAR COMPONENTS	TM-37, TM-102
GENERAL MAINTENANCE	MA-7
GENERATOR	CHG-28
GPS ANTENNA	AV-270, AV-363
GROUND	PG-32

H

HANDLING PRECAUTIONS	BRM-6
HARNESS	PG-44
HAZARD FUNCTION	DLK-56
HAZARD SWITCH	EXL-147
HAZARD WARNING LAMPS FLASH	WT-42
HEADLAMP .. EXL-10, EXL-75, EXL-136, EXL-140	
HEADLAMP (HI) CIRCUIT	EXL-39
HEADLAMP (LO) CIRCUIT	EXL-42
HEADLAMP FUNCTION	DLK-57
HEADLINING	INT-25
HEATED SEAT	SE-8, SE-16
HEATER & COOLING UNIT ASSEMBLY ...	VTL-14
HEATER CORE	VTL-19
HIGH AND LOW REVERSE CLUTCH	TM-359
HIGH-PRESSURE FLEXIBLE HOSE	HA-30
HIGH-PRESSURE PIPE	HA-31
HILL DESCENT CONTROL SWITCH	BRC-299
HOMELINK UNIVERSAL TRANSCEIVER	DLK-19,
DLK-62	
HOOD	DLK-128
HORN	HRN-3, HRN-5
HORN FUNCTION	DLK-53, SEC-31
HOW TO ERASE PERMANENT DTC	EC-135,
EC-614	

HOW TO FOLLOW TROUBLE DIAGNOSES ..	GI-6
HOW TO READ WIRING DIAGRAMS	GI-9
HOW TO SELECT PISTON AND BEARING	EM-102,
EM-246	
HOW TO SET SRT CODE	EC-129, EC-608,
EC-1101	
HOW TO USE THIS MANUAL	GI-3
HOW TO USE THIS SECTION	LAN-36
HVAC BRANCH LINE CIRCUIT	LAN-79
HYDRAULIC LINE	ST-22
Hill descent control	BRC-157
Hill descent control INDICATOR LAMP	BRC-260
Hill descent control SWITCH	BRC-254
Hill start assist	BRC-161

I

ID REGISTRATION CANNOT BE COMPLETED	
WT-43	
ID REGISTRATION PROCEDURE	WT-6
IDENTIFICATION INFORMATION	GI-22
IGNITION COIL	EM-37, EM-159
IGNITION KEYHOLE ILLUMINATION CONTROL	
CIRCUIT	INL-24
IGNITION SIGNAL	EC-456, EC-957, EC-1378
ILLUMINATION .. INL-50, INL-66, INL-104, INL-120	
ILLUMINATION CONTROL SYSTEM	INL-9, INL-74
IN-CABIN MICROFILTER	VTL-5, VTL-6
IN-VEHICLE SENSOR	HAC-51, VTL-8
INSIDE MIRROR	MIR-8, MIR-23
INSPECTIONS BEFORE TROUBLE DIAGNOSIS .	
TM-276	
INSTRUMENT LOWER PANEL LH	IP-18
INSTRUMENT LOWER PANEL RH AND GLOVE	
BOX	IP-24, IP-27
INSTRUMENT PANEL ASSEMBLY	IP-14
INSUFFICIENT COOLING	HAC-73, HAC-143,
HAC-213	
INSUFFICIENT HEATING	HAC-81, HAC-151,
HAC-221	
INTAKE DOOR MOTOR	HAC-33, HAC-112,
HAC-180, VTL-20	
INTAKE MANIFOLD	EM-27, EM-146
INTAKE MANIFOLD COLLECTOR	EM-143
INTAKE SENSOR HAC-56, HAC-125, HAC-192,	
VTL-10	
INTAKE VALVE TIMING CONTROL	EC-44, EC-510,
EC-1013, EM-45, EM-169	
INTEGRATED HOMELINK TRANSMITTER	DLK-75
INTERIOR LIGHTING SYSTEM SYMPTOMS	
INL-60, INL-114	
INTERIOR ROOM LAMP ... INL-37, INL-63, INL-71,	
INL-78, INL-95, INL-117	
INTERIOR ROOM LAMP CONTROL CIRCUIT	
INL-18	
INTERIOR ROOM LAMP CONTROL SYSTEM	INL-6
INTERMITTENT INCIDENT	SRC-5

IPDM E/R (INTELLIGENT POWER DISTRIBUTION
MODULE ENGINE ROOM)... [EXL-68](#), [MWI-53](#),
[PCS-15](#), [PCS-22](#), [PCS-28](#), [PG-79](#), [SEC-45](#),
[WW-36](#)
IPDM-E BRANCH LINE CIRCUIT[LAN-88](#)

K

KEY CYLINDER SWITCH [DLK-39](#), [SEC-28](#)
KEY INTERLOCK CABLE [TM-298](#)
KEY SWITCH (BCM INPUT) [DLK-42](#)
KEY SWITCH SIGNAL CIRCUIT [WCS-22](#)
KEYFOB BATTERY AND FUNCTION.....[DLK-51](#)
KEYFOB ID SET UP WITH CONSULT[DLK-59](#)
KEYFOB ID SET UP WITHOUT CONSULT [DLK-60](#)
KNUCKLE [FSU-12](#), [FSU-20](#)

L

L TERMINAL CIRCUIT (OPEN)[CHG-14](#)
L TERMINAL CIRCUIT (SHORT).....[CHG-16](#)
LATCH (LOWER ANCHORS AND TETHER FOR
CHILDREN) SYSTEM[SB-13](#)
LEAF SPRING [RSU-9](#)
LICENSE PLATE LAMP [EXL-144](#)
LIFTING POINT [GI-34](#)
LIGHTING & TURN SIGNAL SWITCH[EXL-146](#)
LOCK INDICATOR LAMP [DLN-294](#)
LOW TIRE PRESSURE WARNING LAMP BLINKS
[WT-41](#)
LOW TIRE PRESSURE WARNING LAMP DOES
NOT TURN ON [WT-39](#)
LOW TIRE PRESSURE WARNING LAMP STAYS
ON [WT-40](#)
LOW-PRESSURE FLEXIBLE HOSE.....[HA-32](#)
LOW-PRESSURE PIPE [HA-33](#)
LOWER LINK [FSU-18](#)
LUBRICATION SYSTEM [LU-7](#), [LU-21](#)

M

M&A BRANCH LINE CIRCUIT[LAN-85](#)
M/T OIL..... [TM-14](#), [TM-65](#)
MAGNET CLUTCH... [HAC-43](#), [HAC-121](#), [HAC-188](#)
MAIN LINE BETWEEN DLC AND ABS CIRCUIT ...
[LAN-75](#)
MAIN LINE BETWEEN HVAC AND DLC CIRCUIT .
[LAN-74](#)
MAIN LINE BETWEEN TCM AND DLC CIRCUIT...
[LAN-72](#)
MAIN LINE BETWEEN TCM AND HVAC CIRCUIT
[LAN-70](#)
MAIN POWER SUPPLY AND GROUND CIRCUIT .
[TM-219](#)
MALFUNCTION AREA CHART.....[LAN-69](#)

MANUAL A/C IDENTIFICATION TABLE ...[HAC-88](#),
[HAC-91](#), [HAC-102](#), [HAC-130](#), [HAC-141](#),
[HAC-157](#), [HAC-161](#), [HAC-171](#), [HAC-197](#),
[HAC-211](#)

MANUAL AIR CONDITIONER SYSTEM...[HAC-95](#),
[HAC-165](#)

MAP LAMP AND IGNITION KEYHOLE
ILLUMINATION FUNCTION [DLK-58](#)
MEMORY FUNCTION DOES NOT OPERATE
[HAC-85](#)

METER [MWI-66](#)
METER BUZZER CIRCUIT [WCS-19](#)
METER SYSTEM [MWI-5](#)
MICROPHONE [AV-58](#), [AV-150](#), [AV-265](#), [AV-358](#)
MICROPHONE SIGNAL CIRCUIT . [AV-25](#), [AV-133](#),
[AV-236](#), [AV-333](#)

MID SUN GEAR, REAR SUN GEAR, HIGH AND
LOW REVERSE CLUTCH HUB [TM-354](#)
MIXTURE RATIO SELF-LEARNING VALUE CLEAR
[EC-607](#)

MODE DOOR MOTOR..... [HAC-21](#), [HAC-103](#),
[HAC-172](#), [VTL-21](#)

MUDGUARD..... [EXT-29](#)
MULTI AV SYSTEM [AV-240](#), [AV-337](#)
MULTIPOINT FUEL INJECTION SYSTEM .. [EC-33](#),
[EC-498](#), [EC-1001](#)

N

NATS ANTENNA AMP [SEC-79](#)
NAVIGATION WITH AMPLIFIER [AV-173](#)
NAVIGATION WITHOUT AMPLIFIER [AV-286](#)
NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS
SYMPTOMS [SEC-77](#)
NOISE..... [HAC-83](#), [HAC-153](#), [HAC-223](#)
NOISE, VIBRATION AND HARSHNESS (NVH)
TROUBLESHOOTINGCL-3, [DLN-20](#), [DLN-150](#),
[DLN-161](#), [DLN-172](#), [DLN-184](#), [DLN-218](#),
[DLN-250](#), [DLN-274](#), [EM-12](#), [EM-128](#), [FSU-5](#),
[RAX-5](#), [RAX-17](#), [ST-5](#), [TM-12](#), [TM-62](#)

NONE OF THE POWER WINDOWS CAN BE
OPERATED USING ANY SWITCH [PWC-63](#)
NORMAL OPERATING CONDITION [AV-46](#), [AV-82](#),
[AV-140](#), [AV-245](#), [AV-341](#), [BCS-54](#), [BRC-137](#),
[BRC-287](#), [EC-475](#), [EC-980](#), [EC-1401](#), [EXL-130](#),
[MWI-88](#), [WW-50](#)

NVIS [SEC-72](#)
NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-
NATS) [SEC-8](#)

O

OCCUPANT CLASSIFICATION SYSTEM..[SRC-10](#)
OCCUPANT CLASSIFICATION SYSTEM
CONTROL UNIT..... [SR-24](#)
OIL [HA-16](#)
OIL COOLER..... [LU-14](#), [LU-27](#)

OIL FILTERLU-12, LU-25
OIL PANEM-34, TM-287
OIL PAN AND OIL STRAINER.....EM-153
OIL PRESSURE SWITCH SIGNAL CIRCUIT.....
MWI-37
OIL PUMP LU-30, LU-32, TM-344
OIL SEALEM-64, EM-205
ON BOARD DIAGNOSTIC (OBD) SYSTEM EC-47,
EC-517, EC-1019, SRC-13, TM-156
ON BOARD REFUELING VAPOR RECOVERY
(ORVR)EC-461, EC-962, EC-1383
ON-VEHICLE SERVICEFSU-6, RAX-6, RAX-18
OPERATING CYLINDER CL-12
OPTICAL SENSOR..... EXL-56, EXL-148, HAC-54,
VTL-9
OVERDRIVE CONTROL SWITCH TM-225
OVERHAUL TM-314
OVERHEATING CAUSE ANALYSIS..CO-9, CO-37

P

P0011 IVT CONTROLEC-155
P0011, P0021 IVT CONTROL EC-634, EC-1120
P0030, P0031, P0032 A/F SENSOR 1 HEATER....
EC-158
P0031, P0032, P0051, P0052 A/F SENSOR 1
HEATER..... EC-637, EC-1123
P0037, P0038 HO2S2 HEATEREC-161
P0037, P0038, P0057, P0058 HO2S2 HEATER
EC-640, EC-1126
P0075 IVT CONTROL SOLENOID VALVE. EC-164
P0075, P0081 IVT CONTROL SOLENOID VALVE.
EC-643, EC-1130
P0101 MAF SENSOREC-167, EC-646
P0102, P0103 MAF SENSOR.....EC-171, EC-650,
EC-1133
P0111 IAT SENSOR.....EC-176, EC-654
P0112, P0113 IAT SENSOREC-179, EC-657,
EC-1138
P0116 ECT SENSOR.....EC-182, EC-660
P0117, P0118 ECT SENSOR.....EC-185, EC-663,
EC-1141
P0122, P0123 TP SENSOR.....EC-188, EC-666,
EC-1145
P0125 ECT SENSOREC-192, EC-670
P0127 IAT SENSOR EC-195, EC-673, EC-1149
P0128 THERMOSTAT FUNCTIONEC-198, EC-676
P0130 A/F SENSOR 1 EC-201
P0130, P0150 A/F SENSOR 1.... EC-679, EC-1152
P0131 A/F SENSOR 1 EC-205
P0131, P0151 A/F SENSOR 1.... EC-683, EC-1156
P0132 A/F SENSOR 1EC-208
P0132, P0152 A/F SENSOR 1.... EC-686, EC-1160
P0133, P0153 A/F SENSOR 1..... EC-1164
P0137 HO2S2 EC-211
P0137, P0157 HO2S2..... EC-689, EC-1170
P0138 HO2S2 EC-215

P0138, P0158 HO2S2EC-694, EC-1176
P0139 HO2S2EC-221
P0139, P0159 HO2S2.....EC-702, EC-1184
P014C, P014D, P014E, P014F, P015A, P015B,
P015C, P015D A/F SENSOR 1EC-708
P014C, P014D, P015A, P015B, A/F SENSOR 1
EC-227
P0171 FUEL INJECTION SYSTEM FUNCTION
EC-232
P0171, P0174 FUEL INJECTION SYSTEM
FUNCTION.....EC-714, EC-1190
P0172 FUEL INJECTION SYSTEM FUNCTION
EC-237
P0172, P0175 FUEL INJECTION SYSTEM
FUNCTION.....EC-720, EC-1196
P0181 FTT SENSOREC-241, EC-726
P0182, P0183 FTT SENSOR.....EC-246, EC-731,
EC-1202
P0196 EOT SENSOREC-734
P0197, P0198 EOT SENSOREC-738
P0222, P0223 TP SENSOR.....EC-249, EC-740,
EC-1205
P0300, P0301, P0302, P0303, P0304 MISFIRE.....
EC-253
P0300, P0301, P0302, P0303, P0304, P0305,
P0306 MISFIREEC-744, EC-1209
P0327, P0328 KS.....EC-259
P0327, P0328, P0332, P0333 KSEC-752, EC-1217
P0335 CKP SENSOR (POS)EC-262, EC-755,
EC-1220
P0340 CMP SENSOR (PHASE)EC-266
P0340, P0345 CMP SENSOR (PHASE)....EC-758,
EC-1224
P0420 THREE WAY CATALYST FUNCTIONEC-270
P0420, P0430 THREE WAY CATALYST FUNCTION
EC-762, EC-1228
P0441 EVAP CONTROL SYSTEMEC-274, EC-766
P0442 EVAP CONTROL SYSTEMEC-279, EC-771,
EC-1233
P0443 EVAP CANISTER PURGE VOLUME
CONTROL SOLENOID VALVEEC-286, EC-778,
EC-1242
P0444 EVAP CANISTER PURGE VOLUME
CONTROL SOLENOID VALVEEC-1249
P0444, P0445 EVAP CANISTER PURGE VOLUME
CONTROL SOLENOID VALVEEC-291, EC-784
P0447 EVAP CANISTER VENT CONTROL VALVE
EC-294, EC-787
P0448 EVAP CANISTER VENT CONTROL VALVE
EC-298, EC-791
P0451 EVAP CONTROL SYSTEM PRESSURE
SENSOR EC-302, EC-796, EC-1252
P0452 EVAP CONTROL SYSTEM PRESSURE
SENSOREC-306, EC-799
P0453 EVAP CONTROL SYSTEM PRESSURE
SENSOREC-310, EC-803

P0455 EVAP CONTROL SYSTEM	EC-315 , EC-808
P0456 EVAP CONTROL SYSTEM	EC-322 , EC-815 , EC-1256
P0460 FUEL LEVEL SENSOR	EC-330 , EC-823
P0461 FUEL LEVEL SENSOR	EC-332 , EC-825
P0462, P0463 FUEL LEVEL SENSOR	EC-334 , EC-827
P0500 VSS	EC-336 , EC-829 , EC-1264
P0506 ISC SYSTEM	EC-340 , EC-831 , EC-1266
P0507 ISC SYSTEM	EC-342 , EC-833 , EC-1268
P050A, P050E COLD START CONTROL	EC-344 , EC-835
P0550 PSP SENSOR	EC-346 , EC-837 , EC-1270
P0603 ECM	EC-840 , EC-1273
P0603 ECM POWER SUPPLY	EC-349
P0604 ECM	EC-841 , EC-1274
P0605 ECM	EC-351 , EC-842 , EC-1275
P0606 ECM	EC-843 , EC-1276
P0607 ECM	EC-353 , EC-844 , EC-1277
P060A ECM	EC-845 , EC-1278
P060B ECM	EC-846 , EC-1279
P0615 STARTER RELAY	TM-168
P0643 SENSOR POWER SUPPLY	EC-354 , EC-847 , EC-1280
P0700 TRANSMISSION CONTROL	TM-170
P0705 TRANSMISSION RANGE SENSOR A	TM-171
P0717 INPUT SPEED SENSOR A	TM-173
P0720 OUTPUT SPEED SENSOR	TM-175
P0725 ENGINE SPEED	TM-178
P0731 1GR INCORRECT RATIO	TM-180
P0732 2GR INCORRECT RATIO	TM-182
P0733 3GR INCORRECT RATIO	TM-184
P0734 4GR INCORRECT RATIO	TM-186
P0735 5GR INCORRECT RATIO	TM-188
P0740 TORQUE CONVERTER	TM-190
P0744 TORQUE CONVERTER	TM-192
P0745 PRESSURE CONTROL SOLENOID A	TM-194
P0850 PNP SWITCH	EC-357 , EC-850 , EC-1283
P1148 CLOSED LOOP CONTROL	EC-361
P1148, P1168 CLOSED LOOP CONTROL	EC-854
P1212 TCS COMMUNICATION LINE	EC-362 , EC-855 , EC-1286
P1217 ENGINE OVER TEMPERATURE	EC-363 , EC-856 , EC-1287
P1225 TP SENSOR	EC-366 , EC-860 , EC-1291
P1226 TP SENSOR	EC-368 , EC-862 , EC-1293
P1550 BATTERY CURRENT SENSOR	EC-370 , EC-864 , EC-1295
P1551, P1552 BATTERY CURRENT SENSOR	EC-373 , EC-867 , EC-1299
P1553 BATTERY CURRENT SENSOR	EC-376 , EC-870 , EC-1303
P1554 BATTERY CURRENT SENSOR	EC-379 , EC-873 , EC-1307
P1564 ASCD STEERING SWITCH	EC-382 , EC-876 , EC-1311
P1572 ASCD BRAKE SWITCH	EC-386 , EC-879 , EC-1315
P1574 ASCD VEHICLE SPEED SENSOR	EC-394 , EC-887 , EC-1320
P1610 LOCK MODE	SEC-25
P1705 TP SENSOR	TM-196
P1710 TRANSMISSION FLUID TEMPERATURE SENSOR	TM-198
P1715 INPUT SPEED SENSOR	EC-396 , EC-889 , EC-1322
P1721 VEHICLE SPEED SIGNAL	TM-201
P1730 INTERLOCK	TM-203
P1731 1ST ENGINE BRAKING	TM-205
P1752 INPUT CLUTCH SOLENOID	TM-207
P1757 FRONT BRAKE SOLENOID	TM-209
P1762 DIRECT CLUTCH SOLENOID	TM-211
P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID	TM-213
P1772 LOW COAST BRAKE SOLENOID	TM-215
P1774 LOW COAST BRAKE SOLENOID	TM-217
P1800 VIAS CONTROL SOLENOID VALVE 1	EC-890 , EC-1323
P1801, P1811 POWER SUPPLY CIRCUIT FOR TRANSFER CONTROL UNIT	DLN-21
P1802 – P1804, P1809 TRANSFER CONTROL UNIT	DLN-24
P1805 BRAKE SWITCH	EC-397 , EC-893 , EC-1326
P1807 VEHICLE SPEED SENSOR (A/T)	DLN-26
P1808 VEHICLE SPEED SENSOR (ABS)	DLN-27
P1810 4 LO SWITCH	DLN-28
P1813 4WD SHIFT SWITCH	DLN-31
P1814 WAIT DETECTION SWITCH	DLN-34
P1816 PNP SWITCH (A/T)	DLN-37
P1816 PNP SWITCH (M/T)	DLN-38
P1817 ACTUATOR MOTOR	DLN-41
P1818 ACTUATOR POSITION SWITCH	DLN-47
P1819 TRANSFER CONTROL DEVICE	DLN-50
P1820 ENGINE SPEED SIGNAL	DLN-53
P1833 INITIAL START	DLN-276
P1834 CONTROL UNIT 1	DLN-277
P1835 CONTROL UNIT 2	DLN-278
P1836 CONTROL UNIT 3	DLN-279
P1837 CONTROL UNIT 4	DLN-280
P1838 ON SWITCH	DLN-281
P1839 POSITION SWITCH ON	DLN-283
P1844 RELAY	DLN-285
P1847 SOLENOID CIRCUIT	DLN-286
P1848 SOLENOID DISCONNECT	DLN-287
P1849 SOLENOID SHORT	DLN-289
P1850 SOLENOID CURRENT	DLN-291
P2004 INTAKE MANIFOLD RUNNER CONTROL VALVE	EC-896

P2014, P2016, P2017, P2018 INTAKE MANIFOLD
 RUNNER CONTROL VALVE POSITION
 SENSOR EC-899

P2096, P2097 A/F SENSOR 1 EC-400

P2096, P2097, P2098, P2099 A/F SENSOR 1
 EC-902, EC-1329

P2100, P2103 THROTTLE CONTROL MOTOR
 RELAY EC-405, EC-907, EC-1335

P2101 ELECTRIC THROTTLE CONTROL
 FUNCTION EC-408, EC-910, EC-1338

P2118 THROTTLE CONTROL MOTOR EC-412,
 EC-914, EC-1342

P2119 ELECTRIC THROTTLE CONTROL
 ACTUATOR EC-414, EC-916, EC-1344

P2122, P2123 APP SENSOR EC-416, EC-918,
 EC-1346

P2127, P2128 APP SENSOR EC-419, EC-921,
 EC-1349

P2135 TP SENSOR EC-423, EC-925, EC-1353

P2138 APP SENSOR ... EC-427, EC-929, EC-1357

P219A AIR FUEL RATIO EC-431

P219A, P219B AIR FUEL RATIO EC-933

P219C, P219D, P219E, P219F AIR FUEL RATIO ..
 EC-437

PARKING BRAKE CONTROL PB-5

PARKING BRAKE SHOE PB-7

PARKING BRAKE SYSTEM PB-4

PARKING LAMP CIRCUIT EXL-50

PARKING, LICENSE PLATE AND TAIL LAMPS
 EXL-21

PARKING, LICENSE PLATE AND TAIL LAMPS ARE
 NOT TURNED ON EXL-134

PARKING, LICENSE PLATE AND TAIL LAMPS
 SYSTEM EXL-104

PART TIME 4WD SYSTEM DLN-63

PASSENGER SEAT BELT WARNING SYSTEM
 SRC-12, SRC-123

PASSENGER SIDE DOOR MIRROR DEFOGGER
 DOES NOT OPERATE. DEF-38

PEDAL VIBRATION OR ABS OPERATION SOUND
 OCCURS BRC-135, BRC-285

PERIODIC MAINTENANCE MA-11

PLANETARY CARRIER DLN-120

POSITION SWITCH TM-16, TM-68

POSITIVE CRANKCASE VENTILATION ... EC-466,
 EC-967, EC-1388

POWER CONSUMPTION CONTROL SYSTEM
 BCS-15, PCS-7

POWER CONTROL SYSTEM PCS-5

POWER DOOR LOCK SYSTEM DLK-77

POWER GENERATION VOLTAGE VARIABLE
 CONTROL SYSTEM CHG-9

POWER GENERATION VOLTAGE VARIABLE
 CONTROL SYSTEM OPERATION
 INSPECTION CHG-11

POWER SEAT FOR DRIVER SIDE SE-9

POWER SEAT FOR PASSENGER SIDE SE-13

POWER SOCKET PWO-2, PWO-7

POWER STEERING FLUID ST-6

POWER STEERING GEAR AND LINKAGE . ST-16

POWER STEERING OIL PUMP ST-8, ST-19, ST-26

POWER SUPPLY AND GROUND CIRCUIT FOR
 CONTROLLER HAC-59, HAC-128, HAC-195

POWER SUPPLY ROUTING CIRCUIT PG-14

POWER WINDOW LOCK SWITCH PWC-36

POWER WINDOW LOCK SWITCH DOES NOT
 FUNCTION PWC-70

POWER WINDOW MAIN SWITCH PWC-73

POWER WINDOW MOTOR PWC-24

POWER WINDOW RETAINED POWER
 OPERATION DOES NOT OPERATE
 PROPERLY PWC-69

POWER WINDOW SYSTEM PWC-4, PWC-37,
 PWC-49

PRE-INSPECTION FOR DIAGNOSTIC SEC-6

PRECAUTION HRN-2, SN-24, WW-53

PRECAUTIONS ACC-2, AV-48, AV-83, AV-142,
 AV-254, AV-350, BCS-55, BR-3, BRC-138,
 BRC-288, BRM-5, CCS-2, CHG-26, CL-4, CO-3,
 CO-31, DEF-40, DLK-125, DLN-83, DLN-130,
 DLN-139, DLN-148, DLN-159, DLN-170,
 DLN-180, DLN-214, DLN-246, DLN-306, EC-20,
 EC-483, EC-986, EM-4, EM-120, EX-2, EXL-4,
 EXT-2, FAX-2, FL-2, FSU-2, GI-28, GW-8, HA-2,
 HAC-86, HAC-155, HAC-225, INL-61, INL-115,
 INT-2, IP-2, LAN-3, LAN-37, LU-3, LU-17, MA-4,
 MIR-21, MWI-89, PB-2, PCS-27, PG-3, PWC-71,
 PWO-5, RAX-2, RAX-15, RF-49, RSU-2, SB-2,
 SE-21, SEC-78, SR-2, SRC-124, ST-2, STR-3,
 TM-7, TM-56, TM-265, VTL-2, WCS-47, WT-45

PROPELLER SHAFT DLN-134, DLN-136, DLN-143,
 DLN-145

PROPELLER SHAFT ASSEMBLY DLN-133,
 DLN-142, DLN-151, DLN-162, DLN-173

R

RADIATOR CO-16, CO-44

REAR BUMPER EXT-21

REAR COMBINATION LAMP EXL-145

REAR DISC BRAKE ... BR-8, BR-22, BR-42, BR-52

REAR DOOR GLASS AND REGULATOR ... GW-20

REAR DOOR LOCK DLK-140

REAR DOOR SPEAKER AV-21, AV-54, AV-70,
 AV-89, AV-127, AV-148, AV-222, AV-261,
 AV-327, AV-356

REAR FINAL DRIVEDLN-224, DLN-225, DLN-298,
 DLN-321

REAR FINAL DRIVE ASSEMBLY DLN-255,
 DLN-256, DLN-319

REAR LH SIDE POWER WINDOW ALONE DOES
 NOT OPERATE PWC-66

REAR OIL SEAL . DLN-95, TM-15, TM-66, TM-297

REAR POWER WINDOW SWITCH PWC-76
 REAR PROPELLER SHAFT ... DLN-152, DLN-154,
 DLN-163, DLN-165, DLN-174, DLN-176
 REAR RH SIDE POWER WINDOW ALONE DOES
 NOT OPERATE PWC-67
 REAR SEAT SE-36, SE-48
 REAR SEAT BELT SB-10
 REAR SONAR SYSTEM SN-5
 REAR SUSPENSION ASSEMBLY .. RSU-5, RSU-6
 REAR TIMING CHAIN CASE EM-190
 REAR TWEETER AV-225, AV-262
 REAR VIEW CAMERA AV-156, AV-272, AV-365
 REAR VIEW CAMERA IMAGE SIGNAL CIRCUIT..
 AV-129, AV-232, AV-329
 REAR WINDOW DEFOGGER DEF-27
 REAR WINDOW DEFOGGER DOES NOT
 OPERATE DEF-35
 REAR WINDOW DEFOGGER FEEDBACK SIGNAL
 DEF-13
 REAR WINDOW DEFOGGER POWER SUPPLY
 AND GROUND CIRCUIT DEF-11
 REAR WINDOW DEFOGGER RELAY DEF-10
 REAR WINDOW DEFOGGER SWITCH DEF-8
 REAR WINDOW DEFOGGER SWITCH DOES NOT
 LIGHT, BUT REAR WINDOW DEFOGGER
 OPERATES DEF-39
 REAR WINDOW DEFOGGER SYSTEM DEF-4
 REAR WINDOW GLASS AND MOLDING .. GW-14
 RECOMMENDED CHEMICAL PRODUCTS AND
 SEALANTS GI-21
 RECOMMENDED FLUIDS AND LUBRICANTS
 MA-18
 REFRIGERANT PRESSURE SENSOR EC-468,
 EC-969, EC-1390, HA-36
 REFRIGERATION SYSTEM HA-13, HA-14, HA-23,
 HAC-11, HAC-94, HAC-164
 RELAY CONTROL SYSTEM PCS-2
 REMOTE KEYLESS ENTRY RECEIVER .. DLK-49,
 SEC-80
 REMOTE KEYLESS ENTRY SYSTEM DLK-98,
 DLK-117
 REPAIRING HIGH STRENGTH STEEL BRM-51
 REPLACEMENT OPERATIONS BRM-54
 RETAINED POWER OPERATION DOES NOT
 OPERATE PROPERLY RF-41
 ROAD TEST TM-280
 ROCKER COVER EM-38, EM-160
 ROOF RACK EXT-32
 RUNNING BOARDS EXT-30

S

S CONNECTOR CIRCUIT STR-18
 S TERMINAL CIRCUIT CHG-17
 SATELLITE RADIO ANTENNA AV-153, AV-269,
 AV-362
 SATELLITE SENSOR SR-25

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT..
 WCS-20
 SELF-DIAGNOSIS FUNCTION . HAC-20, HAC-101
 SENSOR ROTOR BRC-143, BRC-293
 SERVICE DATA AND SPECIFICATIONS (SDS)
 ACC-5, BR-55, CHG-30, CL-25, CO-30, CO-60,
 DLN-129, DLN-138, DLN-147, DLN-158,
 DLN-169, DLN-179, DLN-212, DLN-244,
 DLN-265, DLN-331, EC-481, EC-984, EC-1405,
 EM-109, EM-251, EXL-150, FAX-16, FL-18,
 FSU-25, HA-38, LU-16, LU-34, PB-10, PG-91,
 RAX-14, RAX-25, RSU-12, ST-32, TM-53,
 TM-125, TM-386, WT-54, WW-63
 SERVICE INFORMATION FOR ELECTRICAL
 INCIDENT GI-39
 SHIFT CONTROL DLN-126, TM-17, TM-69
 SHIFT CONTROL COMPONENTS .. TM-35, TM-94
 SHIFT CONTROL SYSTEM TM-285
 SHIFT SELECTOR FINISHER IP-25
 SHIPPING MODE CANCEL OPERATION ... BCS-6
 SHOCK ABSORBER RSU-8
 SIDE AIR BAG MODULE SE-33
 SIDE CURTAIN AIR BAG MODULE SR-18
 SIDE GUARD MOLDING EXT-34
 SIDE OIL SEAL DLN-189
 SIDE WINDOW GLASS GW-24
 SIGNAL BUFFER SYSTEM BCS-14, PCS-6
 SLIP INDICATOR LAMP BRC-112, BRC-263
 SONAR BUZZER CIRCUIT INSPECTION SN-11
 SONAR CONTROL UNIT SN-14, SN-26
 SONAR SENSOR SN-25
 SONAR SENSOR CIRCUIT INSPECTION .. SN-10
 SONAR SYSTEM SN-16
 SONAR SYSTEM OFF SWITCH CIRCUIT
 INSPECTION SN-12
 SONAR SYSTEM SYMPTOMS SN-22
 SPARK PLUG EM-18, EM-133
 SPIRAL CABLE SR-13
 SQUEAK AND RATTLE TROUBLE DIAGNOSES ..
 DLK-119, EXT-9, GW-2, INT-9, IP-8, MIR-15,
 RF-43, SE-2
 SRS AIR BAG CONTROL SYSTEM SRC-97
 SRS AIR BAG SYSTEM SRC-6, SRC-121
 STABILIZER BAR FSU-15
 STARTER MOTOR STR-34, STR-36
 STARTING SYSTEM STR-11, STR-19, STR-33
 STEERING ANGLE SENSOR . BRC-146, BRC-296
 STEERING COLUMN ST-12, ST-24
 STEERING COLUMN COVERS IP-16
 STEERING GEAR AND LINKAGE ST-29
 STEERING LOCK UNIT DLK-145
 STEERING SWITCH AV-23, AV-55, AV-131, AV-149,
 AV-234, AV-264, AV-331, AV-357
 STEERING WHEEL ST-9, ST-11
 STOP LAMP EXL-110, EXL-143
 STRG BRANCH LINE CIRCUIT LAN-86

SUBWOOFER.....AV-228, AV-263
 SUNROOF RF-33
 SUNROOF DOES NOT OPERATE ANTI-PINCH
 FUNCTION RF-42
 SUNROOF DOES NOT OPERATE PROPERLY
 RF-38
 SUNROOF MOTOR ASSEMBLY RF-32
 SUNROOF SWITCH CIRCUIT RF-13
 SUNROOF SYSTEM RF-6, RF-51
 SYSTEM SYMPTOM TM-243

T

TAIL GATE DLK-144
 TAIL GATE FINISHER.....EXT-38
 TCM TM-229
 TCM BRANCH LINE CIRCUIT.....LAN-77
 TCS.....BRC-19, BRC-167
 THE BRAKING DISTANCE IS LONG BRC-133,
 BRC-283
 THE FUEL GAUGE POINTER DOES NOT MOVE
 MWI-84
 THE FUEL GAUGE POINTER DOES NOT MOVE
 TO
 THE KEY WARNING DOES NOT SOUNDWCS-46
 THE LIGHT REMINDER WARNING DOES NOT
 SOUNDWCS-44
 THE OIL PRESSURE WARNING LAMP DOES NOT
 TURN OFFMWI-87
 THE OIL PRESSURE WARNING LAMP DOES NOT
 TURN ON.....MWI-86
 THE SEAT BELT WARNING CONTINUES
 SOUNDING, OR DOES NOT SOUND.WCS-45
 THERMOSTAT AND THERMOSTAT HOUSING
 CO-23
 TIGHTENING TORQUE OF STANDARD BOLTS...
 GI-18
 TIMING CHAIN EM-46, EM-179
 TIMING CHAIN TENSIONEREM-187
 TIRE PRESSURE MONITORING SYSTEM WT-35
 TOP TETHER STRAP CHILD RESTRAINT . SB-14
 TOW TRUCK TOWING..... GI-36
 TPMSWT-9, WT-38
 TRAILER TOW..... EXL-23, EXL-119
 TRANSFER ASSEMBLY..... DLN-101, DLN-103
 TRANSFER CONTROL DEVICE.....DLN-97
 TRANSFER CONTROL UNIT DLN-56, DLN-92
 TRANSFER FLUIDDLN-90
 TRANSIT MODE CANCEL OPERATIONBCS-7
 TRANSMISSION ASSEMBLYTM-21, TM-23, TM-72,
 TM-77, TM-305
 TRANSMITTER..... WT-50
 TROUBLE DIAGNOSISLAN-7, LAN-56
 TROUBLE DIAGNOSIS - SPECIFICATION VALUE
 EC-141, EC-620, EC-1106
 TUMBLE CONTROL VALVE CONTROLEC-513

TURN SIGNAL AND HAZARD WARNING LAMP
 SYSTEM EXL-98
 TURN SIGNAL AND HAZARD WARNING LAMPS
 EXL-19
 TURN SIGNAL LAMP CIRCUIT EXL-53

U

U0100 LOST COMMUNICATION (ECM A).TM-166
 U0101 CAN COMM CIRCUITEC-153, EC-632,
 EC-1118
 U1000 CAN COMM CIRCUITAV-196, AV-305,
 BCS-31, BRC-102, BRC-250, DLK-23, DLN-54,
 DLN-275, PCS-13, SEC-16, SRC-17, TM-167
 U1001 CAN COMM CIRCUITEC-154, EC-633,
 EC-1119
 U1010 CONTROL UNIT (CAN).....AV-197, AV-306,
 BCS-32, DLK-24, DLN-55, SEC-17, SRC-18
 U1217 AV CONTROL UNITAV-198, AV-307
 U1229 AV CONTROL UNITAV-199, AV-308
 U122F AV CONTROL UNITAV-200, AV-309
 U1244 GPS ANTENNAAV-201, AV-310
 U1258 SATELLITE RADIO ANTENNA AV-202,
 AV-311
 U1263 USBAV-203, AV-312
 U1265 AUDIO AMP..... AV-204
 U12AA CONFIGURATION ERRORAV-205, AV-313
 U12AB ANTENNA.....AV-206, AV-314
 U12AC AV CONTROL UNITAV-207, AV-315
 U12AD AV CONTROL UNITAV-208, AV-316
 U12AE AV CONTROL UNITAV-209, AV-317
 U12AF AV CONTROL UNIT.....AV-210, AV-318
 U12B0 POWER SUPPLY VOLTAGEAV-211, AV-319
 U12B1 POWER SUPPLY VOLTAGEAV-212, AV-320
 U1310 AV CONTROL UNITAV-213, AV-321
 UNEXPECTED PEDAL REACTION BRC-132,
 BRC-282
 UPPER BALL JOINT AND LOWER BALL JOINT...
 FSU-10, FSU-19
 UPPER GLOVE BOX..... IP-23
 UPPER LINKFSU-16
 USB CONNECTOR.....AV-135, AV-154, AV-238,
 AV-271, AV-335, AV-364

V

VACUUM LINES.....BR-10, BR-36
 VARIABLE BLOWER CONTROL VTL-12
 VARIABLE INDUCTION AIR SYSTEMEC-514,
 EC-1016
 VDC..... BRC-15, BRC-164
 VDC OFF INDICATOR LAMP ..BRC-110, BRC-261
 VDC OFF SWITCH BRC-106, BRC-148, BRC-256,
 BRC-298
 VDC/TCS/ABS BRC-130, BRC-280
 VEHICLE JERKS DURING VDC/TCS/ABS
 CONTROL..... BRC-136, BRC-286

VEHICLE SECURITY INDICATOR..... SEC-32
VEHICLE SECURITY SYSTEM ...SEC-11, SEC-52
VEHICLE SECURITY SYSTEM SYMPTOMS.....
SEC-76
VEHICLE SPEED SIGNAL CIRCUITRF-15
VIAS EC-972, EC-1393

W

WARNING CHIME FUNCTIONDLK-55
WARNING CHIME SYSTEMWCS-4, WCS-38
WASHER LEVEL SWITCH.....WW-62
WASHER MOTOR CIRCUITWW-23
WASHER PUMP.....WW-60
WASHER SWITCH.....WW-22
WASHER TANK.....WW-58
WATER CONTROL VALVE CO-26
WATER INLET AND THERMOSTAT ASSEMBLY ...
CO-56
WATER OUTLET AND WATER PIPING CO-28,
CO-58
WATER PUMPCO-21, CO-50
WHEEL WT-47
WHEEL AND TIRE ASSEMBLY WT-48
WHEEL HUBFAX-5, FAX-8
WHEEL SENSOR..... BRC-142, BRC-292
WINDSHIELD GLASS GW-10
WIPER & WASHER SWITCH.....WW-61
WIPER AND WASHER FUSEWW-14
WIPER AND WASHER SYSTEM SYMPTOMS
WW-48

Y

YAW RATE/SIDE/DECEL G SENSORBRC-147,
BRC-297

