

# TM

## SECTION

### TRANSAXLE & TRANSMISSION

A

B

C

TM

## CONTENTS

E

### 6MT: RS6F94R

|                                                                                                  |    |                                                                   |    |
|--------------------------------------------------------------------------------------------------|----|-------------------------------------------------------------------|----|
| <b>PRECAUTION</b> .....                                                                          | 11 | <b>NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING</b> ..... | 21 |
| <b>PRECAUTIONS</b> .....                                                                         | 11 | NVH Troubleshooting Chart .....                                   | 21 |
| Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" ..... | 11 | <b>PERIODIC MAINTENANCE</b> .....                                 | 22 |
| Precaution for Procedure without Cowl Top Cover... ..                                            | 11 | <b>GEAR OIL</b> .....                                             | 22 |
| Precautions for Removing Battery Terminal .....                                                  | 12 | Inspection .....                                                  | 22 |
| Service Notice or Precautions for Manual Transaxle .....                                         | 12 | Draining .....                                                    | 22 |
| <b>PREPARATION</b> .....                                                                         | 13 | Refilling .....                                                   | 22 |
| <b>PREPARATION</b> .....                                                                         | 13 | <b>REMOVAL AND INSTALLATION</b> .....                             | 23 |
| Special Service Tools .....                                                                      | 13 | <b>SIDE OIL SEAL</b> .....                                        | 23 |
| Commercial Service Tools .....                                                                   | 15 | Removal and Installation .....                                    | 23 |
| <b>SYSTEM DESCRIPTION</b> .....                                                                  | 17 | Inspection .....                                                  | 23 |
| <b>COMPONENT PARTS</b> .....                                                                     | 17 | <b>POSITION SWITCH</b> .....                                      | 24 |
| Component Parts Location .....                                                                   | 17 | Removal and Installation .....                                    | 24 |
| <b>STRUCTURE AND OPERATION</b> .....                                                             | 18 | Inspection .....                                                  | 24 |
| Sectional View .....                                                                             | 18 | <b>CONTROL LINKAGE</b> .....                                      | 25 |
| System Description .....                                                                         | 18 | Exploded View .....                                               | 25 |
| <b>DTC/CIRCUIT DIAGNOSIS</b> .....                                                               | 20 | Removal and Installation .....                                    | 25 |
| <b>POSITION SWITCH</b> .....                                                                     | 20 | Inspection .....                                                  | 28 |
| <b>BACK-UP LAMP SWITCH</b> .....                                                                 | 20 | <b>AIR BREATHER HOSE</b> .....                                    | 29 |
| BACK-UP LAMP SWITCH : Component Inspection .....                                                 | 20 | Exploded View .....                                               | 29 |
| <b>PARK/NEUTRAL POSITION (PNP) SWITCH</b> .....                                                  | 20 | Removal and Installation .....                                    | 29 |
| PARK/NEUTRAL POSITION (PNP) SWITCH : Component Inspection .....                                  | 20 | <b>UNIT REMOVAL AND INSTALLATION</b> .....                        | 30 |
| <b>SYMPTOM DIAGNOSIS</b> .....                                                                   | 21 | <b>TRANSAXLE ASSEMBLY</b> .....                                   | 30 |
|                                                                                                  |    | Exploded View .....                                               | 30 |
|                                                                                                  |    | Removal and Installation .....                                    | 30 |
|                                                                                                  |    | Inspection .....                                                  | 31 |
|                                                                                                  |    | <b>UNIT DISASSEMBLY AND ASSEMBLY</b> ...                          | 32 |
|                                                                                                  |    | <b>TRANSAXLE ASSEMBLY</b> .....                                   | 32 |
|                                                                                                  |    | Exploded View .....                                               | 32 |
|                                                                                                  |    | Disassembly .....                                                 | 37 |
|                                                                                                  |    | Assembly .....                                                    | 42 |

F

G

H

I

J

K

L

M

N

O

P

|                                                                                                  |           |                                                                   |            |
|--------------------------------------------------------------------------------------------------|-----------|-------------------------------------------------------------------|------------|
| Inspection .....                                                                                 | 48        | BACK-UP LAMP SWITCH : Component Inspection .....                  | 77         |
| <b>INPUT SHAFT AND GEAR .....</b>                                                                | <b>49</b> | <b>PARK/NEUTRAL POSITION (PNP) SWITCH .....</b>                   | <b>77</b>  |
| Exploded View .....                                                                              | 49        | PARK/NEUTRAL POSITION (PNP) SWITCH : Component Inspection .....   | 77         |
| Disassembly .....                                                                                | 49        | <b>SYMPTOM DIAGNOSIS .....</b>                                    | <b>78</b>  |
| Assembly .....                                                                                   | 51        | <b>NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING .....</b> | <b>78</b>  |
| Inspection .....                                                                                 | 53        | NVH Troubleshooting Chart .....                                   | 78         |
| <b>MAINSHAFT AND GEAR .....</b>                                                                  | <b>55</b> | <b>PERIODIC MAINTENANCE .....</b>                                 | <b>79</b>  |
| Exploded View .....                                                                              | 55        | <b>GEAR OIL .....</b>                                             | <b>79</b>  |
| Disassembly .....                                                                                | 56        | Inspection .....                                                  | 79         |
| Assembly .....                                                                                   | 57        | Draining .....                                                    | 79         |
| Inspection .....                                                                                 | 59        | Refilling .....                                                   | 79         |
| <b>REVERSE IDLER SHAFT AND GEAR .....</b>                                                        | <b>61</b> | <b>REMOVAL AND INSTALLATION .....</b>                             | <b>80</b>  |
| Exploded View .....                                                                              | 61        | <b>SIDE OIL SEAL .....</b>                                        | <b>80</b>  |
| Disassembly .....                                                                                | 61        | Removal and Installation .....                                    | 80         |
| Assembly .....                                                                                   | 62        | <b>POSITION SWITCH .....</b>                                      | <b>81</b>  |
| Inspection .....                                                                                 | 62        | Removal and Installation .....                                    | 81         |
| <b>FINAL DRIVE .....</b>                                                                         | <b>64</b> | Inspection .....                                                  | 81         |
| Exploded View .....                                                                              | 64        | <b>CONTROL LINKAGE .....</b>                                      | <b>82</b>  |
| Disassembly .....                                                                                | 64        | Exploded View .....                                               | 82         |
| Assembly .....                                                                                   | 65        | Removal and Installation .....                                    | 82         |
| Inspection .....                                                                                 | 65        | <b>AIR BREATHER HOSE .....</b>                                    | <b>84</b>  |
| <b>SERVICE DATA AND SPECIFICATIONS (SDS) .....</b>                                               | <b>67</b> | Exploded View .....                                               | 84         |
| <b>SERVICE DATA AND SPECIFICATIONS (SDS) .....</b>                                               | <b>67</b> | Removal and Installation .....                                    | 84         |
| General Specifications .....                                                                     | 67        | <b>UNIT REMOVAL AND INSTALLATION ....</b>                         | <b>85</b>  |
| <b>6MT: RS6F52H</b>                                                                              |           | <b>TRANSAXLE ASSEMBLY .....</b>                                   | <b>85</b>  |
| <b>PRECAUTION .....</b>                                                                          | <b>68</b> | Exploded View .....                                               | 85         |
| <b>PRECAUTIONS .....</b>                                                                         | <b>68</b> | Removal and Installation .....                                    | 85         |
| Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" ..... | 68        | <b>UNIT DISASSEMBLY AND ASSEMBLY ...</b>                          | <b>87</b>  |
| Precaution for Procedure without Cowl Top Cover..                                                | 68        | <b>TRANSAXLE ASSEMBLY .....</b>                                   | <b>87</b>  |
| Precautions for Removing Battery Terminal .....                                                  | 69        | Exploded View .....                                               | 87         |
| Precaution for Work .....                                                                        | 69        | Disassembly .....                                                 | 91         |
| Service Notice or Precaution .....                                                               | 69        | Assembly .....                                                    | 98         |
| <b>PREPARATION .....</b>                                                                         | <b>70</b> | Adjustment .....                                                  | 108        |
| <b>PREPARATION .....</b>                                                                         | <b>70</b> | <b>INPUT SHAFT AND GEARS .....</b>                                | <b>116</b> |
| Special Service Tool .....                                                                       | 70        | Exploded View .....                                               | 116        |
| Commercial Service Tool .....                                                                    | 73        | Disassembly and Assembly .....                                    | 117        |
| <b>SYSTEM DESCRIPTION .....</b>                                                                  | <b>75</b> | <b>MAINSHAFT AND GEARS .....</b>                                  | <b>124</b> |
| <b>STRUCTURE AND OPERATION .....</b>                                                             | <b>75</b> | Exploded View .....                                               | 124        |
| Sectional View .....                                                                             | 75        | Disassembly and Assembly .....                                    | 124        |
| System Description .....                                                                         | 76        | <b>REVERSE IDLER SHAFT AND GEARS .....</b>                        | <b>133</b> |
| <b>DTC/CIRCUIT DIAGNOSIS .....</b>                                                               | <b>77</b> | Disassembly and Assembly .....                                    | 133        |
| <b>POSITION SWITCH .....</b>                                                                     | <b>77</b> | <b>FINAL DRIVE .....</b>                                          | <b>135</b> |
| <b>BACK-UP LAMP SWITCH .....</b>                                                                 | <b>77</b> |                                                                   |            |

|                                                                                                  |            |    |
|--------------------------------------------------------------------------------------------------|------------|----|
| Exploded View .....                                                                              | 135        |    |
| Disassembly and Assembly .....                                                                   | 135        |    |
| <b>SHIFT CONTROL .....</b>                                                                       | <b>138</b> |    |
| Exploded View .....                                                                              | 138        |    |
| Disassembly and Assembly .....                                                                   | 138        |    |
| <b>SERVICE DATA AND SPECIFICATIONS (SDS) .....</b>                                               | <b>142</b> |    |
| <b>SERVICE DATA AND SPECIFICATIONS (SDS) .....</b>                                               | <b>142</b> |    |
| General Specification .....                                                                      | 142        |    |
| Gear End Play .....                                                                              | 143        |    |
| Baulk Ring Clearance .....                                                                       | 143        |    |
| Available Snap Rings .....                                                                       | 143        |    |
| Available C-Rings .....                                                                          | 144        |    |
| Available Thrust Washer .....                                                                    | 144        |    |
| Available Adjusting Shims .....                                                                  | 145        |    |
| Available Shims .....                                                                            | 146        |    |
| <b>CVT: RE0F10B</b>                                                                              |            |    |
| <b>PRECAUTION .....</b>                                                                          | <b>148</b> |    |
| <b>PRECAUTIONS .....</b>                                                                         | <b>148</b> |    |
| Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" ..... | 148        |    |
| Precaution for Procedure without Cowl Top Cover .....                                            | 148        |    |
| Precautions for Removing Battery Terminal .....                                                  | 149        |    |
| Precaution for On Board Diagnosis (OBD) System of CVT and Engine .....                           | 149        |    |
| Precaution for TCM and Transaxle Assembly or Control Valve Replacement .....                     | 149        |    |
| Removal and Installation Procedure for CVT Unit Connector .....                                  | 149        |    |
| General Precautions .....                                                                        | 150        |    |
| Service Notice or Precaution .....                                                               | 151        |    |
| <b>PREPARATION .....</b>                                                                         | <b>152</b> |    |
| <b>PREPARATION .....</b>                                                                         | <b>152</b> |    |
| Special Service Tool .....                                                                       | 152        |    |
| Commercial Service Tool .....                                                                    | 152        |    |
| <b>SYSTEM DESCRIPTION .....</b>                                                                  | <b>154</b> |    |
| <b>COMPONENT PARTS .....</b>                                                                     | <b>154</b> |    |
| <b>CVT CONTROL SYSTEM .....</b>                                                                  | <b>154</b> |    |
| CVT CONTROL SYSTEM : Component Parts Location .....                                              | 154        |    |
| CVT CONTROL SYSTEM : Component Description .....                                                 | 155        |    |
| CVT CONTROL SYSTEM : TCM .....                                                                   | 156        |    |
| CVT CONTROL SYSTEM : Transmission Range Switch .....                                             | 156        |    |
| CVT CONTROL SYSTEM : Primary Speed Sensor .....                                                  | 156        |    |
| CVT CONTROL SYSTEM : Secondary Speed Sensor .....                                                | 156        |    |
| CVT CONTROL SYSTEM : CVT Fluid Temperature Sensor .....                                          | 157        | A  |
| CVT CONTROL SYSTEM : Secondary Pressure Sensor .....                                             | 157        | B  |
| CVT CONTROL SYSTEM : Line Pressure Solenoid Valve .....                                          | 158        | C  |
| CVT CONTROL SYSTEM : Secondary Pressure Solenoid Valve .....                                     | 158        | TM |
| CVT CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve .....                                | 158        |    |
| CVT CONTROL SYSTEM : Lock-up Select Solenoid Valve .....                                         | 158        |    |
| CVT CONTROL SYSTEM : Step Motor .....                                                            | 159        | E  |
| CVT CONTROL SYSTEM : Manual Mode Switch .....                                                    | 159        | F  |
| CVT CONTROL SYSTEM : CVT Indicator .....                                                         | 159        |    |
| CVT CONTROL SYSTEM : Shift Position Indicator .....                                              | 159        |    |
| CVT CONTROL SYSTEM : Manual Mode Indicator .....                                                 | 159        |    |
| CVT CONTROL SYSTEM : Paddle Shifter .....                                                        | 160        |    |
| <b>SHIFT LOCK SYSTEM .....</b>                                                                   | <b>160</b> | G  |
| SHIFT LOCK SYSTEM : Component Parts Location .....                                               | 160        |    |
| SHIFT LOCK SYSTEM : Component Description .....                                                  | 160        | H  |
| <b>STRUCTURE AND OPERATION .....</b>                                                             | <b>162</b> |    |
| <b>TRANSAXLE .....</b>                                                                           | <b>162</b> | I  |
| TRANSAXLE : Cross-Sectional View .....                                                           | 162        |    |
| TRANSAXLE : Main Component Elements .....                                                        | 163        | J  |
| TRANSAXLE : Belt & Pulley .....                                                                  | 164        |    |
| <b>FLUID COOLER &amp; FLUID WARMER SYSTEM .....</b>                                              | <b>165</b> | K  |
| FLUID COOLER & FLUID WARMER SYSTEM : System Description .....                                    | 165        |    |
| <b>MECHANICAL SYSTEM .....</b>                                                                   | <b>166</b> | L  |
| MECHANICAL SYSTEM : System Diagram .....                                                         | 167        |    |
| MECHANICAL SYSTEM : System Description .....                                                     | 167        |    |
| MECHANICAL SYSTEM : Component Description .....                                                  | 171        | M  |
| <b>SYSTEM .....</b>                                                                              | <b>173</b> |    |
| <b>CVT CONTROL SYSTEM .....</b>                                                                  | <b>173</b> | N  |
| CVT CONTROL SYSTEM : System Description .....                                                    | 173        |    |
| CVT CONTROL SYSTEM : System Diagram .....                                                        | 174        |    |
| CVT CONTROL SYSTEM : Fail-Safe .....                                                             | 174        |    |
| <b>OIL PRESSURE CONTROL SYSTEM .....</b>                                                         | <b>176</b> | O  |
| OIL PRESSURE CONTROL SYSTEM : System Diagram .....                                               | 176        |    |
| OIL PRESSURE CONTROL SYSTEM : System Description .....                                           | 176        | P  |
| <b>CONTROL SYSTEM .....</b>                                                                      | <b>177</b> |    |
| CONTROL SYSTEM : System Diagram .....                                                            | 177        |    |
| CONTROL SYSTEM : System Description .....                                                        | 178        |    |
| CONTROL SYSTEM : CAN Communication .....                                                         | 178        |    |
| CONTROL SYSTEM : Engine and CVT Integrated Control (CAN Communication Control) .....             | 179        |    |

|                                                                                              |            |                                                                                    |            |
|----------------------------------------------------------------------------------------------|------------|------------------------------------------------------------------------------------|------------|
| CONTROL SYSTEM : Control between CVT and Combination Meter (CAN Communication Control) ..... | 179        | <b>ADDITIONAL SERVICE WHEN REPLACING CONTROL VALVE OR TRANSAXLE ASSEMBLY .....</b> | <b>218</b> |
| CONTROL SYSTEM : Control between CVT and BCM (CAN Communication Control) .....               | 179        | Description .....                                                                  | 218        |
| <b>LOCK-UP AND SELECT CONTROL SYSTEM .....</b>                                               | <b>179</b> | Work Procedure .....                                                               | 218        |
| LOCK-UP AND SELECT CONTROL SYSTEM : System Diagram .....                                     | 179        | <b>CVT FLUID COOLER SYSTEM .....</b>                                               | <b>220</b> |
| LOCK-UP AND SELECT CONTROL SYSTEM : System Description .....                                 | 179        | Cleaning .....                                                                     | 220        |
| <b>SHIFT CONTROL SYSTEM .....</b>                                                            | <b>180</b> | <b>STALL TEST .....</b>                                                            | <b>223</b> |
| SHIFT CONTROL SYSTEM : System Diagram .....                                                  | 180        | Inspection and Judgment .....                                                      | 223        |
| SHIFT CONTROL SYSTEM : System Description .....                                              | 180        | <b>LINE PRESSURE TEST .....</b>                                                    | <b>225</b> |
| <b>INTEGRATED CONTROL SYSTEM .....</b>                                                       | <b>182</b> | Inspection and Judgment .....                                                      | 225        |
| INTEGRATED CONTROL SYSTEM : System Diagram .....                                             | 183        | <b>ROAD TEST .....</b>                                                             | <b>227</b> |
| INTEGRATED CONTROL SYSTEM : System Description .....                                         | 183        | Description .....                                                                  | 227        |
| <b>SHIFT LOCK SYSTEM .....</b>                                                               | <b>184</b> | Check before Engine Is Started .....                                               | 227        |
| SHIFT LOCK SYSTEM : System Description .....                                                 | 184        | Check at Idle .....                                                                | 227        |
| <b>KEY LOCK SYSTEM .....</b>                                                                 | <b>185</b> | Cruise Test .....                                                                  | 228        |
| KEY LOCK SYSTEM : System Description .....                                                   | 185        | <b>CVT POSITION .....</b>                                                          | <b>230</b> |
| <b>ON BOARD DIAGNOSTIC (OBD) SYSTEM ..</b>                                                   | <b>186</b> | Inspection and Adjustment .....                                                    | 230        |
| Diagnosis Description .....                                                                  | 186        | <b>CVT FLUID .....</b>                                                             | <b>231</b> |
| <b>DIAGNOSIS SYSTEM (TCM) .....</b>                                                          | <b>188</b> | Changing .....                                                                     | 231        |
| CONSULT Function .....                                                                       | 188        | <b>DTC/CIRCUIT DIAGNOSIS .....</b>                                                 | <b>232</b> |
| ATFTEMP COUNT Conversion Table .....                                                         | 192        | <b>U0100 LOST COMMUNICATION (ECM A) .....</b>                                      | <b>232</b> |
| Diagnostic Tool Function .....                                                               | 192        | DTC Logic .....                                                                    | 232        |
| <b>ECU DIAGNOSIS INFORMATION .....</b>                                                       | <b>193</b> | Diagnosis Procedure .....                                                          | 232        |
| <b>TCM .....</b>                                                                             | <b>193</b> | <b>U1000 CAN COMM CIRCUIT .....</b>                                                | <b>233</b> |
| Reference Value .....                                                                        | 193        | Description .....                                                                  | 233        |
| Fail-Safe .....                                                                              | 198        | DTC Logic .....                                                                    | 233        |
| DTC Inspection Priority Chart .....                                                          | 200        | Diagnosis Procedure .....                                                          | 233        |
| DTC Index .....                                                                              | 201        | <b>U1010 CONTROL UNIT (CAN) .....</b>                                              | <b>234</b> |
| <b>WIRING DIAGRAM .....</b>                                                                  | <b>203</b> | Description .....                                                                  | 234        |
| <b>CVT CONTROL SYSTEM .....</b>                                                              | <b>203</b> | DTC Logic .....                                                                    | 234        |
| Wiring Diagram .....                                                                         | 203        | Diagnosis Procedure .....                                                          | 234        |
| <b>CVT SHIFT LOCK SYSTEM .....</b>                                                           | <b>210</b> | <b>P0703 BRAKE SWITCH B .....</b>                                                  | <b>235</b> |
| Wiring Diagram .....                                                                         | 210        | Description .....                                                                  | 235        |
| <b>BASIC INSPECTION .....</b>                                                                | <b>213</b> | DTC Logic .....                                                                    | 235        |
| <b>DIAGNOSIS AND REPAIR WORKFLOW .....</b>                                                   | <b>213</b> | Diagnosis Procedure .....                                                          | 235        |
| Work Flow .....                                                                              | 213        | Component Inspection (Stop Lamp Switch) .....                                      | 236        |
| Diagnostic Work Sheet .....                                                                  | 214        | <b>P0705 TRANSMISSION RANGE SENSOR A..</b>                                         | <b>238</b> |
| <b>ADDITIONAL SERVICE WHEN REPLACING TCM .....</b>                                           | <b>216</b> | DTC Logic .....                                                                    | 238        |
| Description .....                                                                            | 216        | Diagnosis Procedure .....                                                          | 238        |
| Work Procedure .....                                                                         | 216        | Component Inspection (Transmission Range Switch) .....                             | 240        |
|                                                                                              |            | <b>P0710 TRANSMISSION FLUID TEMPERATURE SENSOR A .....</b>                         | <b>241</b> |
|                                                                                              |            | DTC Logic .....                                                                    | 241        |
|                                                                                              |            | Diagnosis Procedure .....                                                          | 242        |
|                                                                                              |            | <b>P0715 INPUT SPEED SENSOR A .....</b>                                            | <b>245</b> |
|                                                                                              |            | DTC Logic .....                                                                    | 245        |



|                                                 |            |                                                  |            |    |
|-------------------------------------------------|------------|--------------------------------------------------|------------|----|
| Diagnosis Procedure .....                       | 245        | DTC Logic .....                                  | 278        |    |
| <b>P0720 OUTPUT SPEED SENSOR .....</b>          | <b>248</b> | Diagnosis Procedure .....                        | 278        | A  |
| DTC Logic .....                                 | 248        | <b>P1705 TP SENSOR .....</b>                     | <b>281</b> |    |
| Diagnosis Procedure .....                       | 248        | Description .....                                | 281        | B  |
| <b>P0725 ENGINE SPEED .....</b>                 | <b>251</b> | DTC Logic .....                                  | 281        |    |
| Description .....                               | 251        | Diagnosis Procedure .....                        | 281        |    |
| DTC Logic .....                                 | 251        | <b>P1709 INCOMPLETED DATA WRITING .....</b>      | <b>282</b> | C  |
| Diagnosis Procedure .....                       | 251        | Description .....                                | 282        |    |
| <b>P0740 TORQUE CONVERTER .....</b>             | <b>252</b> | DTC Logic .....                                  | 282        |    |
| DTC Logic .....                                 | 252        | Diagnosis Procedure .....                        | 282        | TM |
| Diagnosis Procedure .....                       | 252        | <b>P1722 VEHICLE SPEED .....</b>                 | <b>284</b> |    |
| <b>P0744 TORQUE CONVERTER .....</b>             | <b>255</b> | Description .....                                | 284        |    |
| Description .....                               | 255        | DTC Logic .....                                  | 284        | E  |
| DTC Logic .....                                 | 255        | Diagnosis Procedure .....                        | 284        |    |
| Diagnosis Procedure .....                       | 255        | <b>P1723 SPEED SENSOR .....</b>                  | <b>285</b> | F  |
| <b>P0745 PRESSURE CONTROL SOLENOID A. 257</b>   |            | Description .....                                | 285        |    |
| DTC Logic .....                                 | 257        | DTC Logic .....                                  | 285        |    |
| Diagnosis Procedure .....                       | 257        | Diagnosis Procedure .....                        | 285        | G  |
| <b>P0746 PRESSURE CONTROL SOLENOID A. 259</b>   |            | <b>P1726 THROTTLE CONTROL SIGNAL .....</b>       | <b>287</b> |    |
| Description .....                               | 259        | Description .....                                | 287        |    |
| DTC Logic .....                                 | 259        | DTC Logic .....                                  | 287        | H  |
| Diagnosis Procedure .....                       | 259        | Diagnosis Procedure .....                        | 287        |    |
| <b>P0776 PRESSURE CONTROL SOLENOID B. 261</b>   |            | <b>P1740 SELECT SOLENOID .....</b>               | <b>288</b> |    |
| Description .....                               | 261        | DTC Logic .....                                  | 288        | I  |
| DTC Logic .....                                 | 261        | Diagnosis Procedure .....                        | 288        |    |
| Diagnosis Procedure .....                       | 261        | <b>P1777 STEP MOTOR .....</b>                    | <b>290</b> | J  |
| <b>P0778 PRESSURE CONTROL SOLENOID B. 263</b>   |            | DTC Logic .....                                  | 290        |    |
| DTC Logic .....                                 | 263        | Diagnosis Procedure .....                        | 290        |    |
| Diagnosis Procedure .....                       | 263        | <b>P1778 STEP MOTOR .....</b>                    | <b>293</b> | K  |
| <b>P0826 UP AND DOWN SHIFT SW .....</b>         | <b>265</b> | Description .....                                | 293        |    |
| DTC Logic .....                                 | 265        | DTC Logic .....                                  | 293        |    |
| Diagnosis Procedure .....                       | 266        | Diagnosis Procedure .....                        | 294        | L  |
| Component Inspection (Manual Mode Switch) ....  | 269        | <b>SHIFT POSITION INDICATOR CIRCUIT .....</b>    | <b>295</b> |    |
| Component Inspection (Paddle Shifter) .....     | 270        | Description .....                                | 295        |    |
| <b>P0840 TRANSMISSION FLUID PRESSURE</b>        |            | Component Function Check .....                   | 295        | M  |
| <b>SEN/SW A .....</b>                           | <b>271</b> | Diagnosis Procedure .....                        | 295        |    |
| DTC Logic .....                                 | 271        | <b>SHIFT LOCK SYSTEM .....</b>                   | <b>296</b> | N  |
| Diagnosis Procedure .....                       | 271        | Component Function Check .....                   | 296        |    |
| <b>P0841 TRANSMISSION FLUID PRESSURE</b>        |            | Diagnosis Procedure .....                        | 296        |    |
| <b>SEN/SW A .....</b>                           | <b>274</b> | Component Inspection (Shift Lock Solenoid) ..... | 298        | O  |
| Description .....                               | 274        | Component Inspection (Park Position Switch) .... | 298        |    |
| DTC Logic .....                                 | 274        | Component Inspection (CVT Shift Selector Har-    | 298        |    |
| Diagnosis Procedure .....                       | 274        | nass) .....                                      | 298        | P  |
| <b>P0868 TRANSMISSION FLUID PRESSURE .. 276</b> |            | Component Inspection (Stop Lamp Switch) .....    | 299        |    |
| Description .....                               | 276        | <b>SYMPTOM DIAGNOSIS .....</b>                   | <b>300</b> |    |
| DTC Logic .....                                 | 276        | <b>SYSTEM SYMPTOM .....</b>                      | <b>300</b> |    |
| Diagnosis Procedure .....                       | 276        | Symptom Table .....                              | 300        |    |
| <b>P1701 TCM .....</b>                          | <b>278</b> | <b>PERIODIC MAINTENANCE .....</b>                | <b>311</b> |    |
| Description .....                               | 278        |                                                  |            |    |

|                                         |            |                                                  |            |
|-----------------------------------------|------------|--------------------------------------------------|------------|
| <b>CVT FLUID</b> .....                  | <b>311</b> | Inspection .....                                 | 340        |
| Inspection .....                        | 311        |                                                  |            |
| <b>REMOVAL AND INSTALLATION</b> .....   | <b>313</b> |                                                  |            |
| <b>CVT SHIFT SELECTOR</b> .....         | <b>313</b> |                                                  |            |
| Exploded View .....                     | 313        |                                                  |            |
| Removal and Installation .....          | 313        |                                                  |            |
| Disassembly and Assembly .....          | 314        |                                                  |            |
| Inspection .....                        | 314        |                                                  |            |
| <b>CONTROL CABLE</b> .....              | <b>316</b> |                                                  |            |
| Exploded View .....                     | 316        |                                                  |            |
| Removal and Installation .....          | 316        |                                                  |            |
| Inspection .....                        | 318        |                                                  |            |
| <b>PADDLE SHIFTER</b> .....             | <b>319</b> |                                                  |            |
| Exploded View .....                     | 319        |                                                  |            |
| Removal and Installation .....          | 319        |                                                  |            |
| <b>KEY INTERLOCK CABLE</b> .....        | <b>321</b> |                                                  |            |
| Exploded View .....                     | 321        |                                                  |            |
| Removal and Installation .....          | 321        |                                                  |            |
| Inspection .....                        | 322        |                                                  |            |
| <b>TRANSMISSION RANGE SWITCH</b> .....  | <b>323</b> |                                                  |            |
| Exploded View .....                     | 323        |                                                  |            |
| Removal and Installation .....          | 323        |                                                  |            |
| Inspection and Adjustment .....         | 323        |                                                  |            |
| <b>TCM</b> .....                        | <b>325</b> |                                                  |            |
| Exploded View .....                     | 325        |                                                  |            |
| Removal and Installation .....          | 325        |                                                  |            |
| Adjustment .....                        | 325        |                                                  |            |
| <b>AIR BREATHER HOSE</b> .....          | <b>326</b> |                                                  |            |
| Removal and Installation .....          | 326        |                                                  |            |
| <b>CONTROL VALVE</b> .....              | <b>327</b> |                                                  |            |
| Exploded View .....                     | 327        |                                                  |            |
| Removal and Installation .....          | 327        |                                                  |            |
| Inspection and Adjustment .....         | 333        |                                                  |            |
| <b>PRIMARY SPEED SENSOR</b> .....       | <b>334</b> |                                                  |            |
| Exploded View .....                     | 334        |                                                  |            |
| Removal and Installation .....          | 334        |                                                  |            |
| Inspection .....                        | 334        |                                                  |            |
| <b>SECONDARY SPEED SENSOR</b> .....     | <b>335</b> |                                                  |            |
| Exploded View .....                     | 335        |                                                  |            |
| Removal and Installation .....          | 335        |                                                  |            |
| Inspection .....                        | 335        |                                                  |            |
| <b>DIFFERENTIAL SIDE OIL SEAL</b> ..... | <b>337</b> |                                                  |            |
| Exploded View .....                     | 337        |                                                  |            |
| Removal and Installation .....          | 337        |                                                  |            |
| Inspection .....                        | 339        |                                                  |            |
| <b>OIL PUMP FITTING BOLT</b> .....      | <b>340</b> |                                                  |            |
| Description .....                       | 340        |                                                  |            |
| Exploded View .....                     | 340        |                                                  |            |
| Removal and Installation .....          | 340        |                                                  |            |
|                                         |            | Inspection .....                                 | 340        |
|                                         |            | <b>WATER HOSE</b> .....                          | <b>341</b> |
|                                         |            | Exploded View .....                              | 341        |
|                                         |            | Removal and Installation .....                   | 341        |
|                                         |            | Inspection .....                                 | 342        |
|                                         |            | <b>UNIT REMOVAL AND INSTALLATION</b> ...         | <b>344</b> |
|                                         |            | <b>TRANSAXLE ASSEMBLY</b> .....                  | <b>344</b> |
|                                         |            | Exploded View .....                              | 344        |
|                                         |            | Removal and Installation .....                   | 344        |
|                                         |            | Inspection and Adjustment .....                  | 346        |
|                                         |            | <b>UNIT DISASSEMBLY AND ASSEMBLY</b> ..          | <b>348</b> |
|                                         |            | <b>TORQUE CONVERTER AND CONVERTER</b>            |            |
|                                         |            | <b>HOUSING OIL SEAL</b> .....                    | <b>348</b> |
|                                         |            | Exploded View .....                              | 348        |
|                                         |            | Disassembly .....                                | 348        |
|                                         |            | Assembly .....                                   | 348        |
|                                         |            | Inspection .....                                 | 349        |
|                                         |            | <b>SERVICE DATA AND SPECIFICATIONS</b>           |            |
|                                         |            | <b>(SDS)</b> .....                               | <b>350</b> |
|                                         |            | <b>SERVICE DATA AND SPECIFICATIONS</b>           |            |
|                                         |            | <b>(SDS)</b> .....                               | <b>350</b> |
|                                         |            | General Specification .....                      | 350        |
|                                         |            | Shift Characteristics .....                      | 350        |
|                                         |            | Stall Speed .....                                | 350        |
|                                         |            | Line Pressure .....                              | 350        |
|                                         |            | Torque Converter .....                           | 350        |
|                                         |            | Heater Thermostat .....                          | 350        |
|                                         |            | <b>CVT: RE0F10D</b>                              |            |
|                                         |            | <b>PRECAUTION</b> .....                          | <b>352</b> |
|                                         |            | <b>PRECAUTIONS</b> .....                         | <b>352</b> |
|                                         |            | Precaution for Supplemental Restraint System     |            |
|                                         |            | (SRS) "AIR BAG" and "SEAT BELT PRE-TEN-          |            |
|                                         |            | SIONER" .....                                    | 352        |
|                                         |            | Precaution for Procedure without Cowl Top Cover. | 352        |
|                                         |            | Precautions for Removing Battery Terminal .....  | 353        |
|                                         |            | Precaution for TCM and Transaxle Assembly Re-    |            |
|                                         |            | placement .....                                  | 353        |
|                                         |            | General Precautions .....                        | 353        |
|                                         |            | On Board Diagnosis (OBD) System of CVT and       |            |
|                                         |            | Engine .....                                     | 354        |
|                                         |            | Removal and Installation Procedure for CVT Unit  |            |
|                                         |            | Connector .....                                  | 354        |
|                                         |            | <b>PREPARATION</b> .....                         | <b>356</b> |
|                                         |            | <b>PREPARATION</b> .....                         | <b>356</b> |
|                                         |            | Special Service Tools .....                      | 356        |
|                                         |            | Commercial Service Tools .....                   | 356        |
|                                         |            | <b>SYSTEM DESCRIPTION</b> .....                  | <b>358</b> |
|                                         |            | <b>COMPONENT PARTS</b> .....                     | <b>358</b> |

|                                                                   |            |                                                                                         |            |    |
|-------------------------------------------------------------------|------------|-----------------------------------------------------------------------------------------|------------|----|
| <b>CVT CONTROL SYSTEM .....</b>                                   | <b>358</b> | CVT CONTROL SYSTEM : Fail-safe .....                                                    | 377        |    |
| CVT CONTROL SYSTEM : Component Parts Location .....               | 358        | CVT CONTROL SYSTEM : Protection Control .....                                           | 380        | A  |
| CVT CONTROL SYSTEM : Component Description .....                  | 359        | <b>LINE PRESSURE CONTROL .....</b>                                                      | <b>381</b> |    |
| CVT CONTROL SYSTEM : TCM .....                                    | 360        | LINE PRESSURE CONTROL : System Description .....                                        | 381        | B  |
| CVT CONTROL SYSTEM : Transmission Range Switch .....              | 360        | <b>SHIFT CONTROL .....</b>                                                              | <b>382</b> |    |
| CVT CONTROL SYSTEM : Primary Speed Sensor .....                   | 360        | SHIFT CONTROL : System Description .....                                                | 383        | C  |
| CVT CONTROL SYSTEM : Output Speed Sensor .....                    | 361        | <b>SELECT CONTROL .....</b>                                                             | <b>386</b> |    |
| CVT CONTROL SYSTEM : Input Speed Sensor .....                     | 362        | SELECT CONTROL : System Description .....                                               | 386        | TM |
| CVT CONTROL SYSTEM : CVT Fluid Temperature Sensor .....           | 362        | <b>LOCK-UP CONTROL .....</b>                                                            | <b>386</b> |    |
| CVT CONTROL SYSTEM : Primary Pressure Sensor .....                | 363        | LOCK-UP CONTROL : System Description .....                                              | 387        |    |
| CVT CONTROL SYSTEM : Secondary Pressure Sensor .....              | 363        | <b>INTEGRATED CONTROL SYSTEM .....</b>                                                  | <b>387</b> | E  |
| CVT CONTROL SYSTEM : Primary Pressure Solenoid Valve .....        | 363        | INTEGRATED CONTROL SYSTEM : System Diagram .....                                        | 388        |    |
| CVT CONTROL SYSTEM : Secondary Pressure Solenoid Valve .....      | 364        | INTEGRATED CONTROL SYSTEM : System Description .....                                    | 388        | F  |
| CVT CONTROL SYSTEM : Select Solenoid Valve .....                  | 364        | <b>ON BOARD DIAGNOSTIC (OBD) SYSTEM ..</b>                                              | <b>391</b> |    |
| CVT CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve ..... | 364        | Description .....                                                                       | 391        | G  |
| CVT CONTROL SYSTEM : Line Pressure Solenoid Valve .....           | 365        | GST (Generic Scan Tool) .....                                                           | 391        |    |
| CVT CONTROL SYSTEM : Manual Mode Switch .....                     | 365        | <b>DIAGNOSIS SYSTEM (TCM) .....</b>                                                     | <b>392</b> | H  |
| CVT CONTROL SYSTEM : CVT Indicator lamp ..                        | 365        | <b>DIAGNOSIS DESCRIPTION .....</b>                                                      | <b>392</b> |    |
| CVT CONTROL SYSTEM : Shift Position Indicator .....               | 365        | DIAGNOSIS DESCRIPTION : 1 Trip Detection Diagnosis and 2 Trip Detection Diagnosis ..... | 392        | I  |
| CVT CONTROL SYSTEM : Manual Mode Indicator .....                  | 366        | DIAGNOSIS DESCRIPTION : DTC and DTC of 1st Trip .....                                   | 392        |    |
| CVT CONTROL SYSTEM : Paddle Shifter .....                         | 366        | DIAGNOSIS DESCRIPTION : Malfunction Indicator Lamp (MIL) .....                          | 392        | J  |
|                                                                   |            | DIAGNOSIS DESCRIPTION : Counter System ..                                               | 392        |    |
|                                                                   |            | CONSULT Function .....                                                                  | 394        | K  |
| <b>SHIFT LOCK SYSTEM .....</b>                                    | <b>366</b> | <b>ECU DIAGNOSIS INFORMATION .....</b>                                                  | <b>399</b> |    |
| SHIFT LOCK SYSTEM : Component Parts Location .....                | 367        | <b>TCM .....</b>                                                                        | <b>399</b> | L  |
| SHIFT LOCK SYSTEM : Component Description ..                      | 367        | Reference Value .....                                                                   | 399        |    |
| <b>STRUCTURE AND OPERATION .....</b>                              | <b>368</b> | Fail-safe .....                                                                         | 406        |    |
| <b>TRANSAXLE .....</b>                                            | <b>368</b> | Protection Control .....                                                                | 409        | M  |
| TRANSAXLE : Cross-Sectional View .....                            | 368        | DTC Inspection Priority Chart .....                                                     | 410        |    |
| TRANSAXLE : Operation Status .....                                | 369        | DTC Index .....                                                                         | 411        |    |
| TRANSAXLE : Transaxle Mechanism .....                             | 369        | <b>WIRING DIAGRAM .....</b>                                                             | <b>413</b> | N  |
| TRANSAXLE : Oil Pressure System .....                             | 372        | <b>CVT CONTROL SYSTEM .....</b>                                                         | <b>413</b> |    |
| TRANSAXLE : Component Description .....                           | 373        | Wiring Diagram .....                                                                    | 413        | O  |
| <b>FLUID COOLER &amp; FLUID WARMER SYSTEM .....</b>               | <b>373</b> | <b>CVT SHIFT LOCK SYSTEM .....</b>                                                      | <b>419</b> |    |
| FLUID COOLER & FLUID WARMER SYSTEM : System Description .....     | 374        | Wiring Diagram .....                                                                    | 419        | P  |
| <b>SHIFT LOCK SYSTEM .....</b>                                    | <b>374</b> | <b>BASIC INSPECTION .....</b>                                                           | <b>422</b> |    |
| SHIFT LOCK SYSTEM : System Description .....                      | 374        | <b>DIAGNOSIS AND REPAIR WORK FLOW .....</b>                                             | <b>422</b> |    |
| <b>SYSTEM .....</b>                                               | <b>376</b> | Work Flow .....                                                                         | 422        |    |
| <b>CVT CONTROL SYSTEM .....</b>                                   | <b>376</b> | Diagnostic Work Sheet .....                                                             | 423        |    |
| CVT CONTROL SYSTEM : System Description ..                        | 376        | <b>ADDITIONAL SERVICE WHEN REPLACING TCM .....</b>                                      | <b>425</b> |    |

|                                                                               |            |                                                                  |            |
|-------------------------------------------------------------------------------|------------|------------------------------------------------------------------|------------|
| Description .....                                                             | 425        | DTC Logic .....                                                  | 447        |
| Work Procedure .....                                                          | 425        | Diagnosis Procedure .....                                        | 447        |
| <b>ADDITIONAL SERVICE WHEN REPLACING<br/>TRANSAXLE ASSEMBLY .....</b>         | <b>427</b> | <b>U1000 CAN COMM CIRCUIT .....</b>                              | <b>448</b> |
| Description .....                                                             | 427        | Description .....                                                | 448        |
| Work Procedure .....                                                          | 427        | DTC Logic .....                                                  | 448        |
| <b>ADDITIONAL SERVICE WHEN REPLACING<br/>TCM AND TRANSAXLE ASSEMBLY .....</b> | <b>429</b> | Diagnosis Procedure .....                                        | 448        |
| Description .....                                                             | 429        | <b>U1117 LOST COMMUNICATION (ABS) .....</b>                      | <b>449</b> |
| Work Procedure .....                                                          | 429        | DTC Logic .....                                                  | 449        |
| <b>CVT FLUID COOLER SYSTEM .....</b>                                          | <b>431</b> | Diagnosis Procedure .....                                        | 449        |
| Cleaning .....                                                                | 431        | <b>P062F EEPROM .....</b>                                        | <b>450</b> |
| <b>STALL TEST .....</b>                                                       | <b>434</b> | Description .....                                                | 450        |
| Work Procedure .....                                                          | 434        | DTC Logic .....                                                  | 450        |
| <b>CVT POSITION .....</b>                                                     | <b>435</b> | Diagnosis Procedure .....                                        | 450        |
| Inspection .....                                                              | 435        | <b>P0705 TRANSMISSION RANGE SENSOR A..</b>                       | <b>451</b> |
| Adjustment .....                                                              | 435        | DTC Logic .....                                                  | 451        |
| <b>CVT FLUID .....</b>                                                        | <b>436</b> | Diagnosis Procedure .....                                        | 451        |
| Replacement .....                                                             | 436        | Component Inspection .....                                       | 454        |
| Adjustment .....                                                              | 437        | <b>P0706 TRANSMISSION RANGE SENSOR A..</b>                       | <b>456</b> |
| <b>HOW TO ERASE PERMANENT DTC .....</b>                                       | <b>439</b> | DTC Logic .....                                                  | 456        |
| Description .....                                                             | 439        | Diagnosis Procedure .....                                        | 456        |
| <b>DTC/CIRCUIT DIAGNOSIS .....</b>                                            | <b>440</b> | Component Inspection .....                                       | 458        |
| <b>U0073 COMMUNICATION BUS A OFF .....</b>                                    | <b>440</b> | <b>P0711 TRANSMISSION FLUID TEMPERA-<br/>TURE SENSOR A .....</b> | <b>459</b> |
| DTC Logic .....                                                               | 440        | DTC Description .....                                            | 459        |
| Diagnosis Procedure .....                                                     | 440        | Diagnosis Procedure .....                                        | 462        |
| <b>U0100 LOST COMMUNICATION (ECM A) ....</b>                                  | <b>441</b> | <b>P0712 TRANSMISSION FLUID TEMPERA-<br/>TURE SENSOR A .....</b> | <b>464</b> |
| DTC Logic .....                                                               | 441        | DTC Logic .....                                                  | 464        |
| Diagnosis Procedure .....                                                     | 441        | Diagnosis Procedure .....                                        | 464        |
| <b>U0102 LOST COMMUNICATION (TRANS-<br/>FER) .....</b>                        | <b>442</b> | <b>P0713 TRANSMISSION FLUID TEMPERA-<br/>TURE SENSOR A .....</b> | <b>466</b> |
| DTC Logic .....                                                               | 442        | DTC Logic .....                                                  | 466        |
| Diagnosis Procedure .....                                                     | 442        | Diagnosis Procedure .....                                        | 466        |
| <b>U0140 LOST COMMUNICATION (BCM) .....</b>                                   | <b>443</b> | <b>P0715 INPUT SPEED SENSOR A .....</b>                          | <b>468</b> |
| DTC Logic .....                                                               | 443        | DTC Logic .....                                                  | 468        |
| Diagnosis Procedure .....                                                     | 443        | Diagnosis Procedure .....                                        | 469        |
| <b>U0141 LOST COMMUNICATION (BCM A) ....</b>                                  | <b>444</b> | <b>P0717 INPUT SPEED SENSOR A .....</b>                          | <b>471</b> |
| DTC Logic .....                                                               | 444        | DTC Logic .....                                                  | 471        |
| Diagnosis Procedure .....                                                     | 444        | Diagnosis Procedure .....                                        | 472        |
| <b>U0155 LOST COMMUNICATION (IPC) .....</b>                                   | <b>445</b> | <b>P0740 TORQUE CONVERTER .....</b>                              | <b>474</b> |
| DTC Logic .....                                                               | 445        | DTC Logic .....                                                  | 474        |
| Diagnosis Procedure .....                                                     | 445        | Diagnosis Procedure .....                                        | 475        |
| <b>U0164 LOST COMMUNICATION (HVAC) ....</b>                                   | <b>446</b> | <b>P0743 TORQUE CONVERTER .....</b>                              | <b>476</b> |
| DTC Logic .....                                                               | 446        | DTC Logic .....                                                  | 476        |
| Diagnosis Procedure .....                                                     | 446        | Diagnosis Procedure .....                                        | 477        |
| <b>U0300 CAN COMMUNICATION DATA .....</b>                                     | <b>447</b> | <b>P0744 TORQUE CONVERTER .....</b>                              | <b>478</b> |
|                                                                               |            | DTC Logic .....                                                  | 478        |
|                                                                               |            | Diagnosis Procedure .....                                        | 479        |

|                                                    |                                                       |    |
|----------------------------------------------------|-------------------------------------------------------|----|
| <b>P0746 PRESSURE CONTROL SOLENOID A. 480</b>      | Diagnosis Procedure ..... 507                         |    |
| DTC Logic ..... 480                                |                                                       | A  |
| Diagnosis Procedure ..... 481                      |                                                       |    |
| <b>P0776 PRESSURE CONTROL SOLENOID B. 482</b>      | <b>P0965 PRESSURE CONTROL SOLENOID B. 509</b>         |    |
| DTC Logic ..... 482                                | DTC Logic ..... 509                                   | B  |
| Diagnosis Procedure ..... 483                      | Diagnosis Procedure ..... 510                         |    |
| <b>P0778 PRESSURE CONTROL SOLENOID B. 484</b>      | <b>P0966 PRESSURE CONTROL SOLENOID B. 511</b>         |    |
| DTC Logic ..... 484                                | DTC Logic ..... 511                                   | C  |
| Diagnosis Procedure ..... 484                      | Diagnosis Procedure ..... 511                         |    |
| <b>P0779 PRESSURE CONTROL SOLENOID B. 485</b>      | <b>P0967 PRESSURE CONTROL SOLENOID B. 513</b>         | TM |
| DTC Logic ..... 485                                | DTC Logic ..... 513                                   |    |
| Diagnosis Procedure ..... 485                      | Diagnosis Procedure ..... 513                         |    |
| <b>P0826 UP AND DOWN SHIFT SW ..... 487</b>        | <b>P2765 INPUT SPEED SENSOR B ..... 515</b>           | E  |
| DTC Logic ..... 487                                | DTC Logic ..... 515                                   |    |
| Diagnosis Procedure ..... 488                      | Diagnosis Procedure ..... 516                         |    |
| Component Inspection (Manual Mode Switch) .... 491 | <b>P2813 SELECT SOLENOID ..... 519</b>                | F  |
| Component Inspection (Paddle Shifter) ..... 492    | DTC Logic ..... 519                                   |    |
|                                                    | Diagnosis Procedure ..... 520                         |    |
| <b>P0841 TRANSMISSION FLUID PRESSURE</b>           | <b>P2814 SELECT SOLENOID ..... 521</b>                | G  |
| <b>SEN/SW A ..... 493</b>                          | DTC Logic ..... 521                                   |    |
| DTC Logic ..... 493                                | Diagnosis Procedure ..... 521                         |    |
| Diagnosis Procedure ..... 493                      | <b>P2815 SELECT SOLENOID ..... 523</b>                | H  |
| <b>P0847 TRANSMISSION FLUID PRESSURE</b>           | DTC Logic ..... 523                                   |    |
| <b>SEN/SW B ..... 494</b>                          | Diagnosis Procedure ..... 523                         |    |
| DTC Logic ..... 494                                | <b>MAIN POWER SUPPLY AND GROUND CIR-</b>              | I  |
| Diagnosis Procedure ..... 494                      | <b>CUIT ..... 525</b>                                 |    |
| <b>P0848 TRANSMISSION FLUID PRESSURE</b>           | Diagnosis Procedure ..... 525                         | J  |
| <b>SEN/SW B ..... 496</b>                          | <b>SHIFT POSITION INDICATOR CIRCUIT ..... 527</b>     |    |
| DTC Logic ..... 496                                | Component Parts Function Inspection ..... 527         | K  |
| Diagnosis Procedure ..... 496                      | Diagnosis Procedure ..... 527                         |    |
| <b>P084C TRANSMISSION FLUID PRESSURE</b>           | <b>SHIFT LOCK SYSTEM ..... 528</b>                    | L  |
| <b>SEN/SW H ..... 498</b>                          | Component Function Check ..... 528                    |    |
| DTC Logic ..... 498                                | Diagnosis Procedure ..... 528                         |    |
| Diagnosis Procedure ..... 498                      | Component Inspection (Stop Lamp Switch) ..... 529     | M  |
| <b>P084D TRANSMISSION FLUID PRESSURE</b>           | Component Inspection (Park Position Switch) ..... 530 |    |
| <b>SEN/SW H ..... 500</b>                          | Component Inspection (Shift Lock Solenoid) ..... 530  |    |
| DTC Logic ..... 500                                | Component Inspection (CVT Shift Selector Har-         |    |
| Diagnosis Procedure ..... 500                      | nass) ..... 530                                       |    |
| <b>P0863 TCM COMMUNICATION ..... 502</b>           | <b>SYMPTOM DIAGNOSIS ..... 532</b>                    | N  |
| DTC Logic ..... 502                                |                                                       |    |
| Diagnosis Procedure ..... 502                      | <b>CVT CONTROL SYSTEM ..... 532</b>                   | O  |
| <b>P0890 TCM ..... 503</b>                         | Symptom Table ..... 532                               |    |
| DTC Logic ..... 503                                | <b>PERIODIC MAINTENANCE ..... 538</b>                 |    |
| Diagnosis Procedure ..... 503                      | <b>CVT FLUID ..... 538</b>                            | P  |
| <b>P0962 PRESSURE CONTROL SOLENOID A. 505</b>      | Inspection ..... 538                                  |    |
| DTC Logic ..... 505                                | <b>REMOVAL AND INSTALLATION ..... 539</b>             |    |
| Diagnosis Procedure ..... 505                      | <b>CVT SHIFT SELECTOR ..... 539</b>                   |    |
| <b>P0963 PRESSURE CONTROL SOLENOID A. 507</b>      | Exploded View ..... 539                               |    |
| DTC Logic ..... 507                                | Removal and Installation ..... 539                    |    |

|                                         |            |                                          |            |
|-----------------------------------------|------------|------------------------------------------|------------|
| Disassembly and Assembly .....          | 540        | Exploded View .....                      | 563        |
| Inspection .....                        | 541        | Removal and Installation .....           | 563        |
| <b>CONTROL CABLE .....</b>              | <b>542</b> | Inspection .....                         | 564        |
| Exploded View .....                     | 542        | <b>FLUID COOLER HOSE .....</b>           | <b>565</b> |
| Removal and Installation .....          | 542        | Exploded View .....                      | 565        |
| Inspection and Adjustment .....         | 544        | Removal and Installation .....           | 565        |
| <b>PADDLE SHIFTER .....</b>             | <b>545</b> | Inspection .....                         | 566        |
| Exploded View .....                     | 545        | <b>CVT OIL WARMER .....</b>              | <b>567</b> |
| Removal and Installation .....          | 545        | Exploded View .....                      | 567        |
| <b>TCM .....</b>                        | <b>547</b> | Removal and Installation .....           | 567        |
| Exploded View .....                     | 547        | Inspection .....                         | 568        |
| Removal and Installation .....          | 547        | <b>PLUG .....</b>                        | <b>569</b> |
| Adjustment .....                        | 547        | Description .....                        | 569        |
| <b>AIR BREATHER HOSE .....</b>          | <b>548</b> | Exploded View .....                      | 569        |
| Exploded View .....                     | 548        | Removal and Installation .....           | 569        |
| Removal and Installation .....          | 548        | Inspection and Adjustment .....          | 569        |
| <b>OIL PAN .....</b>                    | <b>550</b> | <b>UNIT REMOVAL AND INSTALLATION ...</b> | <b>570</b> |
| Exploded View .....                     | 550        | <b>TRANSAXLE ASSEMBLY .....</b>          | <b>570</b> |
| Removal and Installation .....          | 550        | Exploded View .....                      | 570        |
| Inspection .....                        | 552        | Removal and Installation .....           | 570        |
| <b>INPUT SPEED SENSOR .....</b>         | <b>553</b> | Inspection and Adjustment .....          | 573        |
| Exploded View .....                     | 553        | <b>UNIT DISASSEMBLY AND ASSEMBLY ..</b>  | <b>574</b> |
| Removal and Installation .....          | 553        | <b>TORQUE CONVERTER AND CONVERTER</b>    |            |
| Inspection and Adjustment .....         | 554        | <b>HOUSING OIL SEAL .....</b>            | <b>574</b> |
| <b>PRIMARY SPEED SENSOR .....</b>       | <b>555</b> | Exploded View .....                      | 574        |
| Exploded View .....                     | 555        | Disassembly .....                        | 574        |
| Removal and Installation .....          | 555        | Assembly .....                           | 574        |
| Inspection and Adjustment .....         | 556        | Inspection .....                         | 575        |
| <b>OUTPUT SPEED SENSOR .....</b>        | <b>557</b> | <b>SERVICE DATA AND SPECIFICATIONS</b>   |            |
| Exploded View .....                     | 557        | <b>(SDS) .....</b>                       | <b>577</b> |
| Removal and Installation .....          | 557        | <b>SERVICE DATA AND SPECIFICATIONS</b>   |            |
| Inspection and Adjustment .....         | 558        | <b>(SDS) .....</b>                       | <b>577</b> |
| <b>DIFFERENTIAL SIDE OIL SEAL .....</b> | <b>559</b> | General Specification .....              | 577        |
| Exploded View .....                     | 559        | Shift Characteristics .....              | 577        |
| Removal and Installation .....          | 559        | Stall Speed .....                        | 577        |
| Inspection and Adjustment .....         | 562        | Torque Converter .....                   | 577        |
| <b>WATER HOSE .....</b>                 | <b>563</b> |                                          |            |

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000011688313

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Procedure without Cowl Top Cover

INFOID:0000000011688314

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

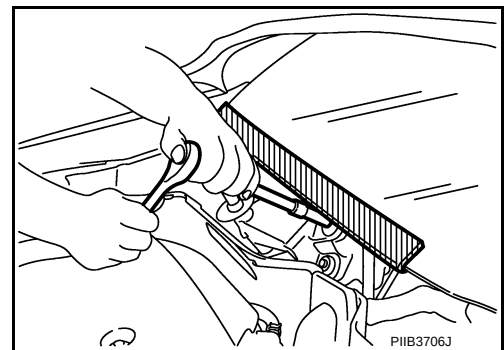

## PRECAUTIONS

< PRECAUTION >

[6MT: RS6F94R]

### Precautions for Removing Battery Terminal

INFOID:000000011688315

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

**NOTE:**

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


**NOTE:**

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

**NOTE:**

The removal of 12V battery may cause a DTC detection error.

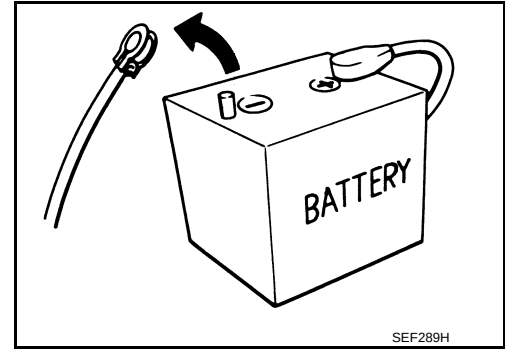

### Service Notice or Precautions for Manual Transaxle

INFOID:000000011463567

**CAUTION:**

- Never reuse CSC (Concentric Slave Cylinder). Because CSC slides back to the original position every time when removing transaxle assembly. At this timing, dust on the sliding parts may damage a seal of CSC and may cause clutch fluid leakage. Refer to [CL-17, "Removal and Installation"](#).
- Never reuse transaxle gear oil, once it has been drained.
- Check oil level or replace gear oil with vehicle on level surface.
- During removal or installation, keep inside of transaxle clear of dust or dirt.
- Check for the correct installation status prior to removal or disassembly. If matching marks are required, be certain they never interfere with the function of the parts they are applied.
- In principle, tighten bolts or nuts gradually in several steps working diagonally from inside to outside. If tightening sequence is specified, use it.
- Never damage sliding surfaces and mating surfaces.








## PREPARATION

### PREPARATION

#### Special Service Tools

INFOID:0000000011463569







The actual shapes of TechMate tools may differ from those of special service tools illustrated here.
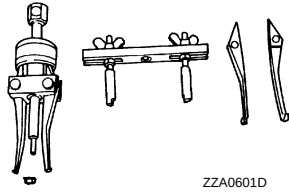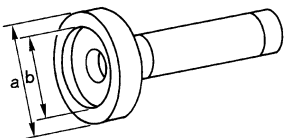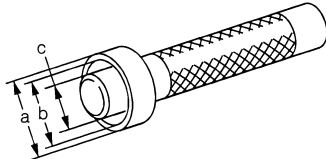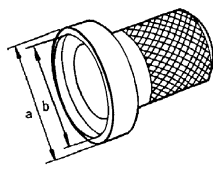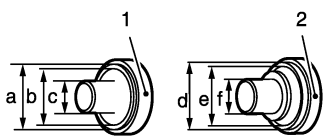
| Tool number<br>(TechMate No.)<br>Tool name                                                                                                                                                                                                                                                                                                                                                                                                                      | Description                                                                                                                                                                                                                          |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| KV381054S0<br>(J-34286)<br>Puller <br>ZZA0601D                                                                                                                                                                                                                                                                                                                                 | Removing mainshaft front bearing outer race                                                                                                                                                                                          |
| KV38100200<br>(-)<br>Drift<br>a: 65 mm (2.56 in) dia.<br>b: 49 mm (1.93 in) dia. <br>ZZA1143D                                                                                                                                                                                                                                                                                  | <ul style="list-style-type: none"> <li>Installing mainshaft front bearing outer race</li> <li>Installing mainshaft rear bearing outer race</li> <li>Installing differential side bearing outer race (clutch housing side)</li> </ul> |
| ST33220000<br>(-)<br>Drift<br>a: 37 mm (1.46 in) dia.<br>b: 31 mm (1.22 in) dia.<br>c: 22 mm (0.87 in) dia. <br>ZZA1046D                                                                                                                                                                                                                                                     | Installing input shaft oil seal                                                                                                                                                                                                      |
| ST33400001<br>(J-26082)<br>Drift<br>a: 60 mm (2.36 in) dia.<br>b: 47 mm (1.85 in) dia. <br>ZZA0814D                                                                                                                                                                                                                                                                          | Installing differential side bearing outer race (transaxle case side)                                                                                                                                                                |
| KV32500QAA<br>(-)<br>(Renault SST: B.vi 1666)<br>Drift set<br>1. —<br>(-)<br>(Stamping number: B.vi 1666-A)<br>Drift<br>a: 54.3 mm (2.138 in) dia.<br>b: 45 mm (1.77 in) dia.<br>c: 26.6 mm (1.047 in) dia.<br>2. —<br>(-)<br>(Stamping number: B.vi 1666-B)<br>Drift<br>d: 54 mm (2.13 in) dia.<br>e: 48.6 mm (1.913 in) dia.<br>f: 26.6 mm (1.047 in) dia. <br>JPDIC0730ZZ | Installing differential side oil seal                                                                                                                                                                                                |

# PREPARATION
  
< PREPARATION >

[6MT: RS6F94R]
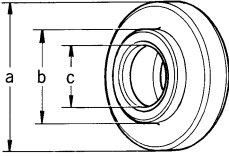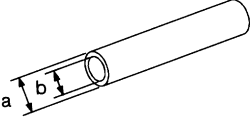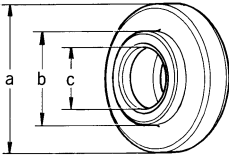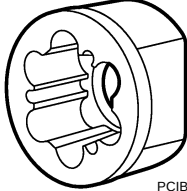
| Tool number<br>(TechMate No.)<br>Tool name                                                                              |                                                                                                      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ST36720030<br>( - )<br>Drift<br>a: 70 mm (2.76 in) dia.<br>b: 40 mm (1.57 in) dia.<br>c: 29 mm (1.14 in) dia.           |  <p>ZZA0978D</p>    | <ul style="list-style-type: none"> <li>• Installing input shaft rear bearing</li> <li>• Installing mainshaft front bearing inner race</li> </ul>                                                                                                                                                                                                                                                                                                    |
| ST33052000<br>( - )<br>Drift<br>a: 22 mm (0.87 in) dia.<br>b: 28 mm (1.10 in) dia.                                      |  <p>ZZA0969D</p>    | <ul style="list-style-type: none"> <li>• Removing mainshaft rear bearing inner race</li> <li>• Removing 6th main gear</li> <li>• Removing 5th main gear</li> <li>• Removing 4th main gear</li> <li>• Removing 1st main gear</li> <li>• Removing 1st-2nd synchronizer hub assembly</li> <li>• Removing 2nd main gear</li> <li>• Removing bushing</li> <li>• Removing 3rd main gear</li> <li>• Removing mainshaft front bearing inner race</li> </ul> |
| KV32102700<br>( - )<br>Drift<br>a: 48.6 mm (1.913 in) dia.<br>b: 41.6 mm (1.638 in) dia.                                |  <p>S-NT065</p>    | <ul style="list-style-type: none"> <li>• Installing bushing</li> <li>• Installing 2nd main gear</li> <li>• Installing 3rd main gear</li> <li>• Installing 4th main gear</li> <li>• Installing 5th main gear</li> <li>• Installing 6th main gear</li> </ul>                                                                                                                                                                                          |
| ST30901000<br>(J-26010-01)<br>Drift<br>a: 79 mm (3.11 in) dia.<br>b: 45 mm (1.77 in) dia.<br>c: 35.2 mm (1.386 in) dia. |  <p>ZZA0978D</p>  | Installing mainshaft rear bearing inner race                                                                                                                                                                                                                                                                                                                                                                                                        |
| ST33061000<br>(J-8107-2)<br>Drift<br>a: 28.5 mm (1.122 in) dia.<br>b: 38 mm (1.50 in) dia.                              |  <p>ZZA0969D</p>  | Removing differential side bearing inner race<br>(clutch housing side)                                                                                                                                                                                                                                                                                                                                                                              |
| KV32300QAM<br>( - )<br>(Renault SST: B.vi 1823)<br>Drift                                                                |  <p>PCIB2078J</p> | Removing and installing input shaft rear bearing mounting bolt                                                                                                                                                                                                                                                                                                                                                                                      |






# PREPARATION
   
< PREPARATION >

[6MT: RS6F94R]

## Commercial Service Tools





INFOID:0000000011463570
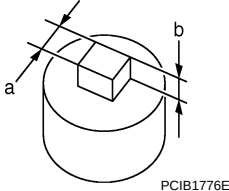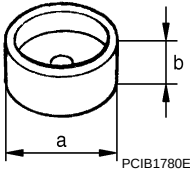
| Tool name                                                   | Description                                                                                                                                                                                                                                            |
|-------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Socket<br>a: 8 mm (0.31 in)<br>b: 5 mm (0.20 in)            |  Removing and installing drain plug                                                                                                                                   |
| Spacer<br>a: 25 mm (0.98 in) dia.<br>b: 25 mm (0.98 in)     |  Removing mainshaft front bearing outer race                                                                                                                          |
| Drift<br>a: 17 mm (0.67 in) dia.                            |  Installing bushing                                                                                                                                                   |
| Drift<br>a: 24 mm (0.94 in) dia.                            |  Removing input shaft rear bearing                                                                                                                                  |
| Drift<br>a: 35 mm (1.38 in) dia.<br>b: 25 mm (0.98 in) dia. |  Installing input shaft front bearing                                                                                                                               |
| Drift<br>a: 43 mm (1.69 in) dia.                            |  <ul style="list-style-type: none"> <li>Installing input shaft rear bearing</li> <li>Removing differential side bearing inner race (transaxle case side)</li> </ul> |

# PREPARATION
  
< PREPARATION >

[6MT: RS6F94R]
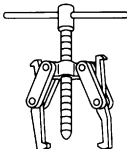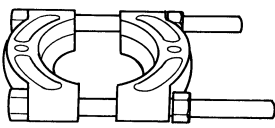
| Tool name                                                                                                                                                                   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Drift</p> <p>a: 45 mm (1.77 in) dia.</p> <p>b: 39 mm (1.54 in) dia.</p>  <p>S-NT474</p> | <p>Installing differential side bearing inner race (clutch housing side)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <p>Drift</p> <p>a: 52 mm (2.05 in) dia.</p> <p>b: 45 mm (1.77 in) dia.</p>  <p>S-NT474</p> | <p>Installing differential side bearing inner race (transaxle case side)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <p>Puller</p>  <p>NT077</p>                                                                | <ul style="list-style-type: none"> <li>• Removing differential side bearing inner race (clutch housing side)</li> <li>• Removing differential side bearing inner race (transaxle case side)</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <p>Puller</p>  <p>ZZB0823D</p>                                                           | <ul style="list-style-type: none"> <li>• Removing differential side bearing inner race (clutch housing side)</li> <li>• Removing differential side bearing inner race (transaxle case side)</li> <li>• Removing input shaft rear bearing</li> <li>• Removing input shaft front bearing</li> <li>• Removing mainshaft rear bearing inner race</li> <li>• Removing 6th main gear</li> <li>• Removing 4th main gear</li> <li>• Removing 5th main gear</li> <li>• Removing 1st main gear</li> <li>• Removing 1st-2nd synchronizer hub assembly</li> <li>• Removing 2nd main gear</li> <li>• Removing 3rd main gear</li> <li>• Removing mainshaft front bearing inner race</li> </ul> |
| <p>Remover</p>  <p>S-NT134</p>                                                           | <ul style="list-style-type: none"> <li>• Removing bushing</li> <li>• Removing mainshaft rear bearing outer race</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |


## SYSTEM DESCRIPTION

### COMPONENT PARTS

#### Component Parts Location

#### POSITION SWITCH

1 : Position switch

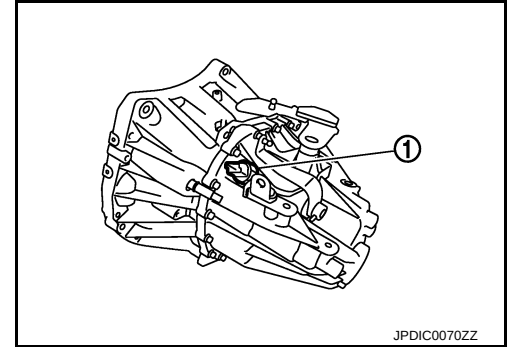


INFOID:0000000011463571

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## STRUCTURE AND OPERATION

### Sectional View

INFOID:000000011463572

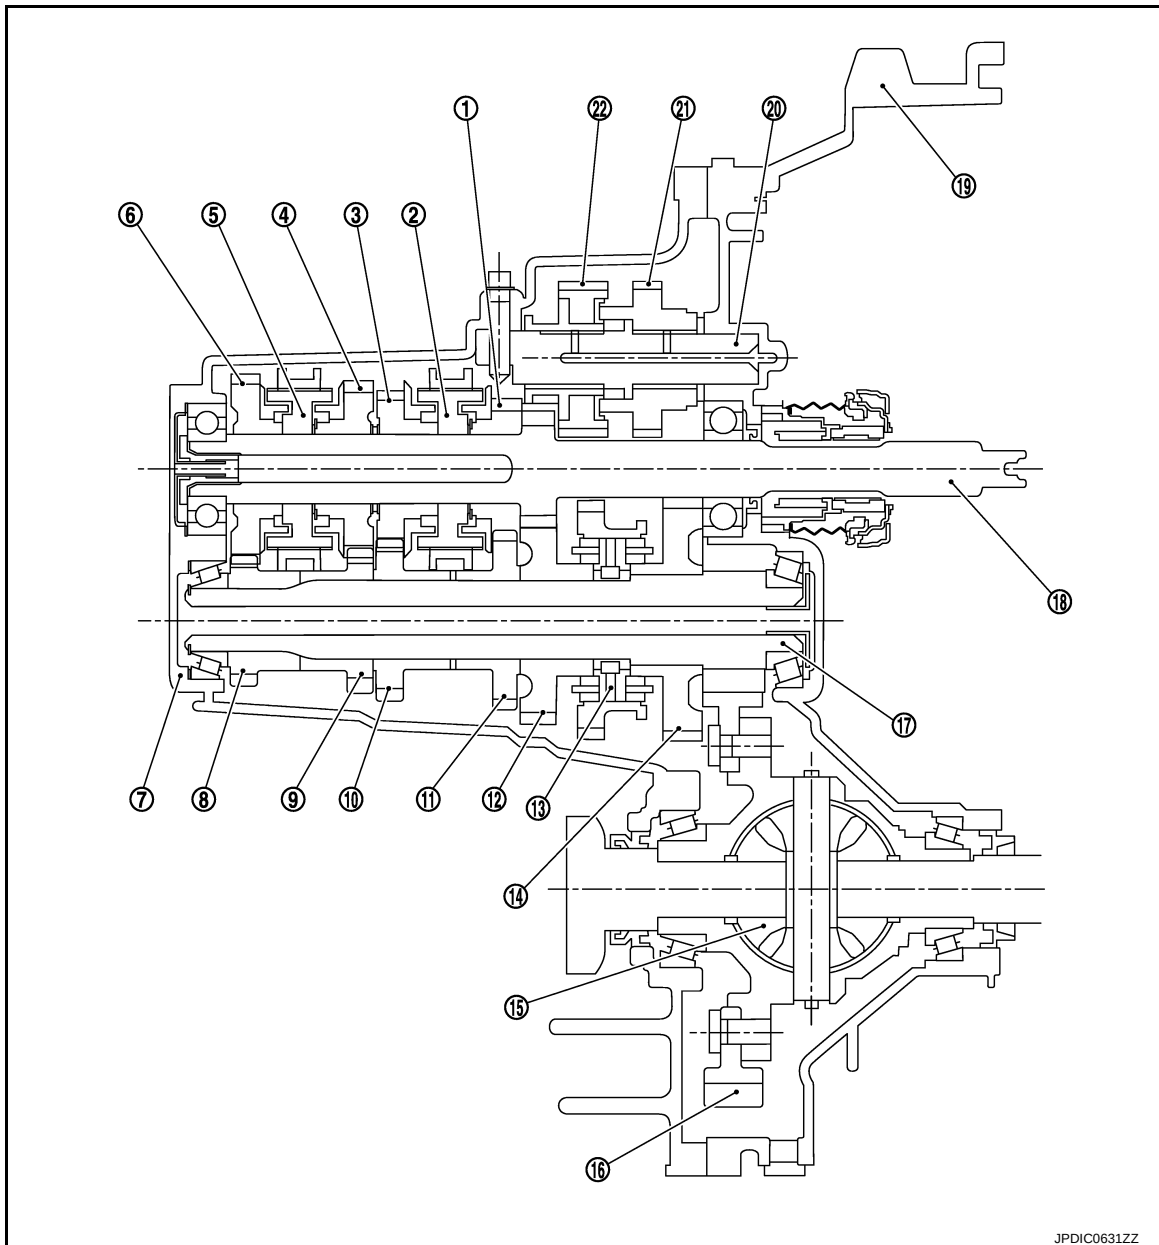

- |                                       |                                      |                        |
|---------------------------------------|--------------------------------------|------------------------|
| 1. 3rd input gear                     | 2. 3rd-4th synchronizer hub assembly | 3. 4th input gear      |
| 4. 5th input gear                     | 5. 5th-6th synchronizer hub assembly | 6. 6th input gear      |
| 7. Transaxle case                     | 8. 6th main gear                     | 9. 5th main gear       |
| 10. 4th main gear                     | 11. 3rd main gear                    | 12. 2nd main gear      |
| 13. 1st-2nd synchronizer hub assembly | 14. 1st main gear                    | 15. Differential       |
| 16. Final gear                        | 17. Mainshaft                        | 18. Input shaft        |
| 19. Clutch housing                    | 20. Reverse idler shaft              | 21. Reverse input gear |
| 22. Reverse output gear               |                                      |                        |

### System Description

INFOID:000000011463573

### TRIPLE-CONE SYNCHRONIZER


# STRUCTURE AND OPERATION

## < SYSTEM DESCRIPTION >

[6MT: RS6F94R]

Triple-cone synchronizers are adopted for the 1st and the 2nd gears to reduce operating force of the shifter lever.


- 1 : 1st main gear
- 2 : 1st-2nd coupling sleeve
- 3 : Insert key
- 4 : Outer baulk ring
- 5 : 2nd main gear
- 6 : Synchronizer cone
- 7 : Inner baulk ring
- 8 : 1st-2nd synchronizer hub

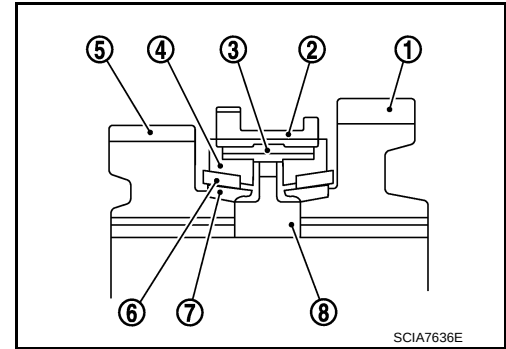

## REVERSE GEAR NOISE PREVENTION FUNCTION (SYNCHRONIZING METHOD)

Reverse gear assembly consists of reverse input gear, return spring, reverse baulk ring, and reverse output gear. When the shifter lever is shifted to the reverse position, the construction allows smooth shift operation by stopping the reverse idler shaft rotation by frictional force of synchronizer.

- 1 : Reverse fork rod
- 2 : Reverse output gear
- 3 : Return spring
- 4 : Reverse baulk ring
- 5 : Reverse input gear

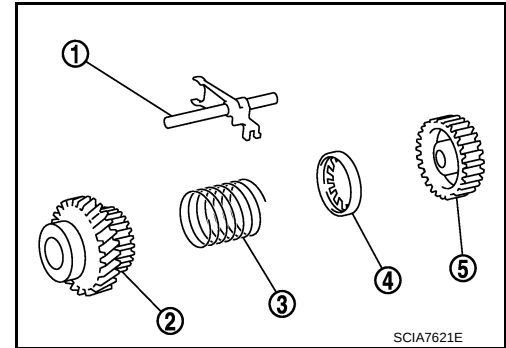

## DTC/CIRCUIT DIAGNOSIS

### POSITION SWITCH

#### BACK-UP LAMP SWITCH

#### BACK-UP LAMP SWITCH : Component Inspection

INFOID:0000000011463574

#### 1.CHECK BACK-UP LAMP SWITCH


1. Disconnect position switch connector. Refer to [TM-24, "Removal and Installation"](#).
2. Check continuity between position switch terminals.

| Terminals |   | Condition                    | Continuity  |
|-----------|---|------------------------------|-------------|
| 1         | 2 | Reverse gear position        | Existed     |
|           |   | Except reverse gear position | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace position switch. Refer to [TM-24, "Removal and Installation"](#).

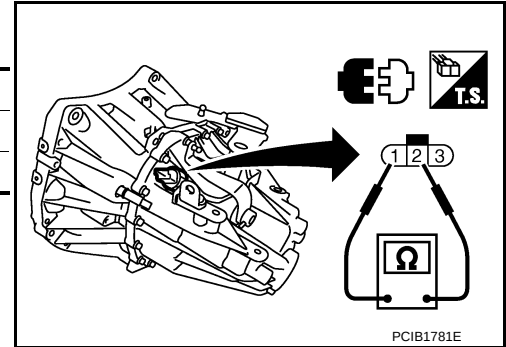

### PARK/NEUTRAL POSITION (PNP) SWITCH

#### PARK/NEUTRAL POSITION (PNP) SWITCH : Component Inspection

INFOID:0000000011463575

#### 1.CHECK PARK/NEUTRAL POSITION (PNP) SWITCH


1. Disconnect position switch connector. Refer to [TM-24, "Removal and Installation"](#).
2. Check continuity between position switch terminals.

| Terminals |   | Condition                    | Continuity  |
|-----------|---|------------------------------|-------------|
| 2         | 3 | Neutral gear position        | Existed     |
|           |   | Except neutral gear position | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace position switch. Refer to [TM-24, "Removal and Installation"](#).

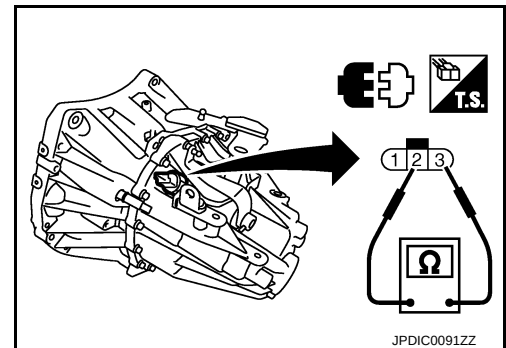



# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[6MT: RS6F94R]

## SYMPTOM DIAGNOSIS

### NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

#### NVH Troubleshooting Chart

INFOID:0000000011463576

Use the chart below to find the cause of the symptom. The numbers indicate the order of the inspection. If necessary, repair or replace these parts.

| SUSPECTED PARTS<br>(Possible cause) |                                 | OIL (Oil level is low) | OIL (Wrong oil)       | OIL (Oil level is high) | GASKET (Damaged) | OIL SEAL (Worn or damaged) | O-RING (Worn or damaged) | SHIFT CONTROL LINKAGE (Worn) | SHIFT FORK (Worn)     | GEAR (Worn or damaged) | BEARING (Worn or damaged) | BAULK RING (Worn or damaged) | INSERT SPRING (Damaged) |
|-------------------------------------|---------------------------------|------------------------|-----------------------|-------------------------|------------------|----------------------------|--------------------------|------------------------------|-----------------------|------------------------|---------------------------|------------------------------|-------------------------|
| Reference                           |                                 |                        | <a href="#">TM-22</a> |                         |                  | <a href="#">TM-32</a>      |                          | <a href="#">TM-28</a>        | <a href="#">TM-32</a> |                        |                           | <a href="#">TM-32</a>        |                         |
| Symptoms                            | Noise                           | 1                      | 2                     |                         |                  |                            |                          |                              |                       | 3                      | 3                         |                              |                         |
|                                     | Oil leakage                     |                        | 3                     | 1                       | 2                | 2                          | 2                        |                              |                       |                        |                           |                              |                         |
|                                     | Hard to shift or will not shift |                        | 1                     | 1                       |                  |                            |                          | 2                            |                       |                        |                           | 3                            | 3                       |
|                                     | Jumps out of gear               |                        |                       |                         |                  |                            |                          | 1                            | 2                     | 2                      |                           |                              |                         |

## PERIODIC MAINTENANCE

### GEAR OIL

#### Inspection


INFOID:000000011463577

#### OIL LEAKAGE

Make sure that gear oil is not leaking from transaxle or around it.

#### OIL LEVEL


1. Remove filler plug (1) and gasket from transaxle case.
2. Check the oil level from filler plug mounting hole as shown in the figure.  
**CAUTION:**  
**Never start engine while checking oil level.**
3. Set a gasket on filler plug and then install it to transaxle case.  
**CAUTION:**  
**Never reuse gasket.**
4. Tighten filler plug to the specified torque. Refer to [TM-32, "Exploded View"](#).

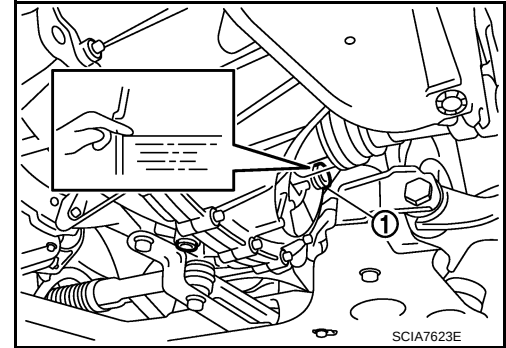

#### Draining

INFOID:000000011463578

1. Start engine and let it run to warm up transaxle.
2. Stop engine. Remove drain plug (1) and gasket, using a socket [Commercial service tool] and then drain gear oil.
3. Set a gasket on drain plug and install it to clutch housing, using a socket [Commercial service tool].  
**CAUTION:**  
**Never reuse gasket.**
4. Tighten drain plug to the specified torque. Refer to [TM-32, "Exploded View"](#).

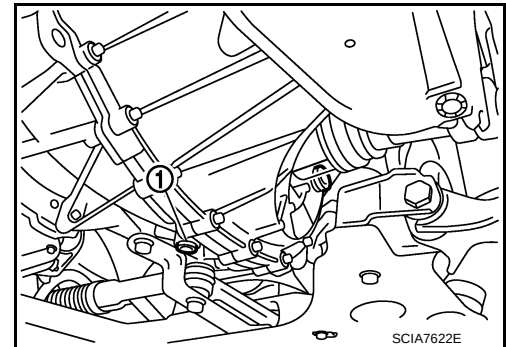

#### Refilling


INFOID:000000011463579

1. Remove filler plug (1) and gasket from transaxle case.
2. Fill with new gear oil until oil level reaches the specified limit at filler plug mounting hole as shown in the figure.

**Oil grade and viscosity** : Refer to [MA-11, "Fluids and Lubricants"](#).

**Oil capacity** : Refer to [TM-67, "General Specifications"](#).

3. After refilling gear oil, check the oil level. Refer to [TM-22, "Inspection"](#).
4. Set a gasket on filler plug and then install it to transaxle case.  
**CAUTION:**  
**Never reuse gasket.**
5. Tighten filler plug to the specified torque. Refer to [TM-32, "Exploded View"](#).

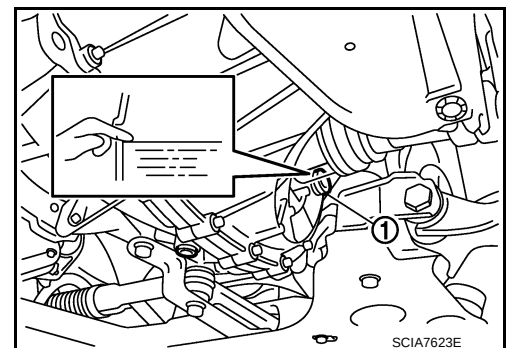

## REMOVAL AND INSTALLATION

### SIDE OIL SEAL

#### Removal and Installation


INFOID:0000000011463580

#### REMOVAL

1. Remove front drive shafts. Refer to [FAX-80, "2WD : Removal and Installation"](#).
2. Remove differential side oil seals (1) from clutch housing and transaxle case, using an oil seal remover.

#### CAUTION:

Never damage transaxle case and clutch housing.

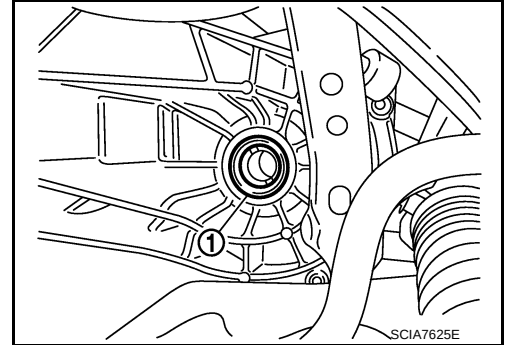

#### INSTALLATION

Note the following, and install in the reverse order of removal.

- Install differential side oil seals (1) to clutch housing and transaxle case, using the drift [Stamping number: B.vi 1666-B] of the drift set [SST: KV32500QAA ( - )].

A : Transaxle case side


B : Clutch housing side

Dimension "L1" : 1.2 – 1.8 mm (0.047 – 0.071 in)

Dimension "L2" : 2.7 – 3.3 mm (0.106 – 0.130 in)

#### CAUTION:

- Never incline differential side oil seal.
- Never damage clutch housing and transaxle case.

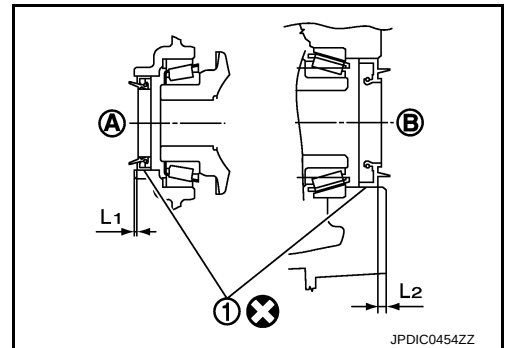

#### Inspection

INFOID:0000000011463581

#### INSPECTION AFTER INSTALLATION

Check the oil level and oil leakage. Refer to [TM-22, "Inspection"](#).

## POSITION SWITCH

### Removal and Installation

INFOID:000000011463582

#### REMOVAL

1. Remove battery. Refer to [PG-116, "Removal and Installation"](#).
2. Disconnect position switch connector.
3. Remove position switch from transaxle case.

#### INSTALLATION

1. Apply recommended sealant to threads of position switch.
  - Use Genuine Silicone RTV or an equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

**CAUTION:**

**Remove old sealant and oil adhering to threads.**

2. Install position switch to transaxle case.
3. Tighten position switch to the specified torque. Refer to [TM-32, "Exploded View"](#).
4. For the next step and after, install in the reverse order of removal.

### Inspection

INFOID:000000011463583

#### INSPECTION AFTER INSTALLATION

- Check continuity between position switch terminals. Refer to [TM-20, "BACK-UP LAMP SWITCH : Component Inspection"](#) (Back-up lamp switch) and [TM-20, "PARK/NEUTRAL POSITION \(PNP\) SWITCH : Component Inspection"](#) (PNP switch).
- Check the oil leakage. Refer to [TM-22, "Inspection"](#).

A  
B  
C  
**M**  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## CONTROL LINKAGE


### < REMOVAL AND INSTALLATION >

[6MT: RS6F94R]



3. Remove bracket (1), as per the following procedure.

↶ : Vehicle front


- Disconnect clips (A) from bracket.
- Remove bolts (B) from bracket.
- Remove bracket.
- Pull out and disconnect the each cable from the shifter lever A and the selector lever, using a suitable remover.

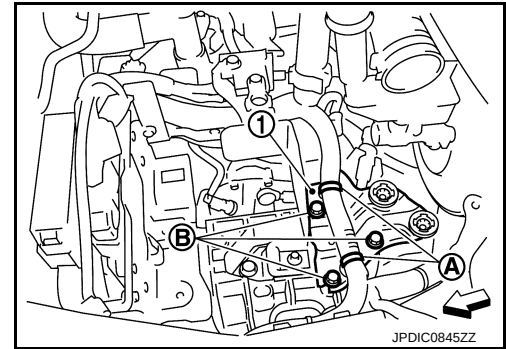

- While pressing the lock of the selector cable in the direction of the arrow shown in the figure, remove the selector cable from the cable mounting bracket.
- While pressing the lock of the shifter cable in the direction of the arrow shown in the figure, remove the shifter cable from the cable mounting bracket.
- Remove cable mounting bracket from transaxle case.
- Pull the shifter lever knob upward to remove.
- Remove center console assembly. Refer to [JP-24, "Removal and Installation"](#).
- Pull out and disconnect the shifter cable from the pin of the M/T shift selector assembly, using a suitable remover.
- Pull up the stopper (A) of the selector cable in the direction of the arrow as shown in the figure.
- Pull out and disconnect the selector cable from the pin of the M/T shift selector assembly, using a suitable remover.

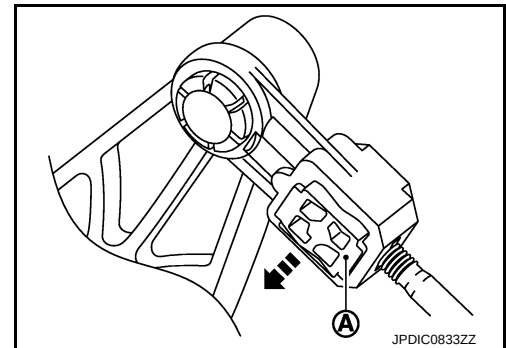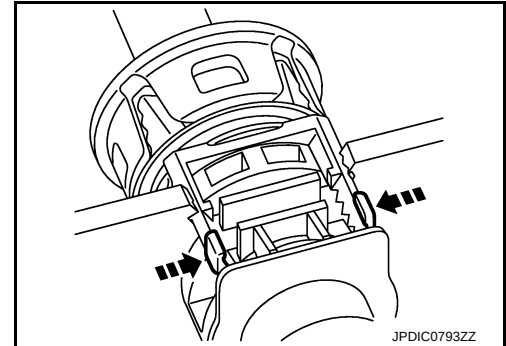

- While pressing the lock of the selector cable in the direction of the arrow shown in the figure, remove the selector cable from the M/T shift selector assembly.
- While pressing the lock of the shifter cable in the direction of the arrow shown in the figure, remove the shifter cable from the M/T shift selector assembly.
- Remove the M/T shift selector assembly.
- Remove three way catalyst and heat plate. Refer to [EX-10, "Removal and Installation"](#).
- Remove the bracket from the vehicle.

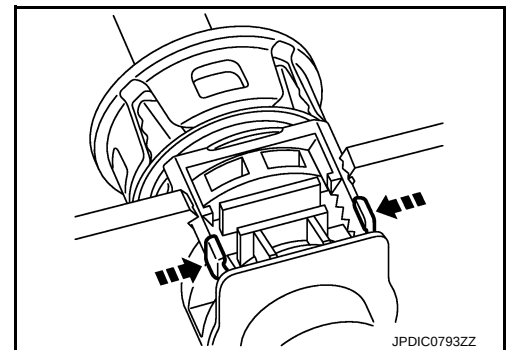


## CONTROL LINKAGE

### < REMOVAL AND INSTALLATION >

[6MT: RS6F94R]

18. Disengage the pawls (A) of the grommet (1), and pull downwards to remove.
19. Remove the shifter cable and selector cable from the vehicle.

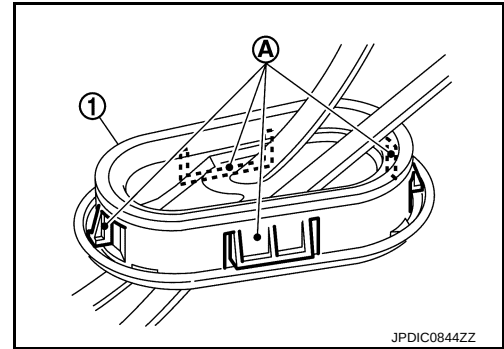

### INSTALLATION

Note the following, and install in the reverse order of removal.

#### CAUTION:

- Install each cable without causing interference with other parts, a 120 mm (4.72 in)-or-less bend, and a 180-degrees-or-more twist.
- Install boot of each cable without causing interference with other parts and a 90-degrees-or-more twist.
- Fit boot of to center console assembly the groove on shifter lever knob.
- To install the shifter lever knob, press it into the shifter lever.


#### CAUTION:

- Never reuse shifter lever knob.
- Be careful with orientation of shifter lever knob.
- Tapping work for tapping bolts is not applied to new transaxle case. Do not perform tapping by other than screwing tapping bolts because tapping is formed by screwing tapping bolts into transaxle case.

#### CAUTION:

#### Never reuse tapping bolt.

- Insert the each cable until it reaches the cable mounting bracket and M/T shift selector assembly.
- Insert the each cable until it reaches the shifter lever A and the selector lever.
- Shift the shifter lever to the neutral position.
- Install the shifter cable (1) and the selector cable (2) to the bracket (3) as shown in the figure.

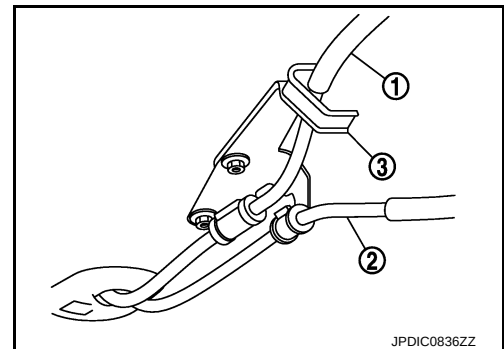

Install the selector cable (the M/T shift selector assembly side), as per the following procedure.


When M/T shift selector assembly is replaced:

1. Install the selector cable to the M/T shift selector assembly.
2. Shift the shifter lever to the neutral position.
3. Install the lever stopper (A) to the M/T shift selector assembly as shown in the figure.

#### CAUTION:

**Selector cable cannot be adjusted accurately without using the lever stopper.**

4. Check that the shifter lever does not move in the direction of the select. If it moves, repeat step 3.

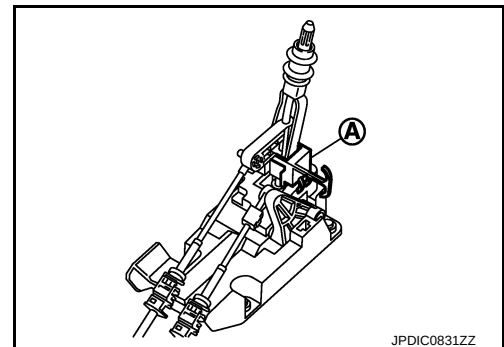


## CONTROL LINKAGE

### < REMOVAL AND INSTALLATION >

[6MT: RS6F94R]


5. Insert the stopper (A) until it reaches the selector cable.
6. Remove the lever stopper from the M/T shift selector assembly.
7. Shift the shifter lever to each gear position to check that there are no bindings. If any, repeat step 3.

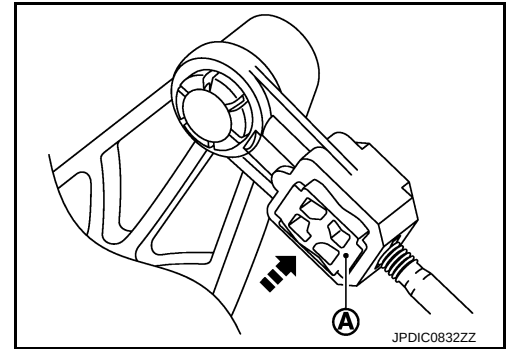


When M/T shift selector assembly is not replaced:

1. Install the selector cable to the M/T shift selector assembly.
2. Shift the shifter lever to the 4th gear position.
3. Adjust the length "L" between the stopper (A) and the lever to the standard value.

**Length "L" : 3.51 – 4.11 mm (0.1382 – 0.1618 in)**

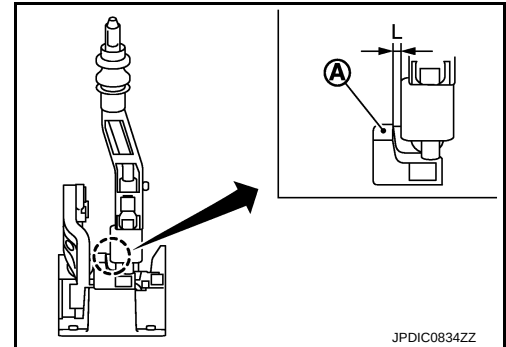

4. Insert the stopper (A) until it reaches the selector cable.
5. Shift the shifter lever to each gear position to check that there are no bindings. If any, repeat step 3.

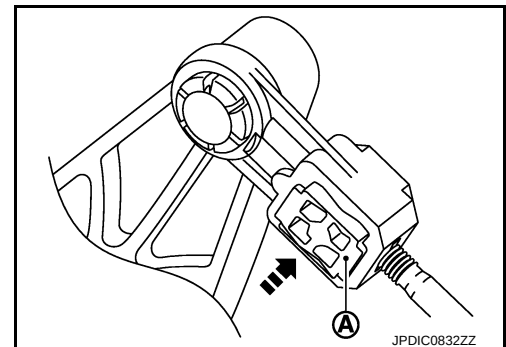

## Inspection

INFOID:0000000011463586

### INSPECTION AFTER INSTALLATION

#### Shifter Lever Knob

Check that the shifter lever knob is installed in the right position.

#### Shifter Cable and Selector Cable

- Pull each cable in the removal direction to check that it does not disconnect from the cable mounting bracket.
- Pull each cable in the removal direction to check that it does not disconnect from the M/T shift selector assembly.
- Pull grommet in the removal direction to check that it does not disconnect from the vehicle.

#### M/T Shift Selector Assembly and Shifter Lever

- Check that there is no tangle, hook, abnormal sound, looseness, and interference when the shifter lever is moved to each position. If there is a malfunction, then repair or replace the malfunctioning part.
- Check that the shifter lever smoothly returns to the neutral position after moving the lever from 1st to 2nd gear and moving hands off the lever. If there is a malfunction, then repair or replace the malfunctioning part.
- Check that the shifter lever smoothly returns to the neutral position after moving the lever from 5th to 6th gear and moving hands off the lever. If there is a malfunction, then repair or replace the malfunctioning part.



# AIR BREATHER HOSE


< REMOVAL AND INSTALLATION >

[6MT: RS6F94R]

## AIR BREATHER HOSE

### Exploded View

INFOID:0000000011463587

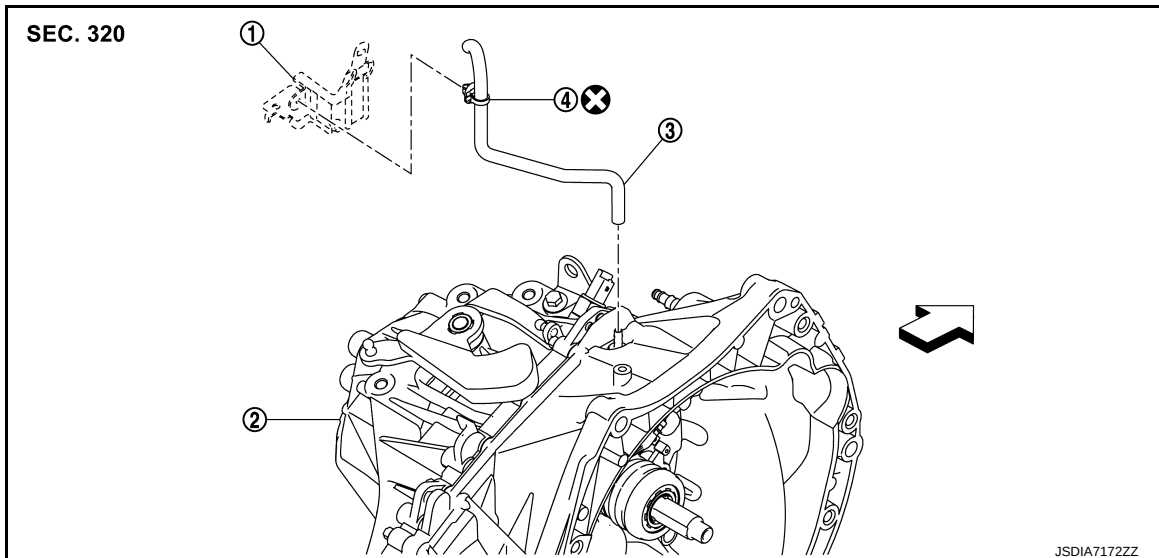

1. Harness bracket
2. Transaxle assembly
3. Air breather hose
4. Clip

⇐: Vehicle front

⊗: Always replace after every disassembly.

### Removal and Installation

INFOID:0000000011463588

#### REMOVAL


1. Remove air cleaner case. Refer to [EM-191. "Removal and Installation"](#).
2. Remove clip (1) from harness bracket (2).

⇐ : Vehicle front

3. Remove air breather hose from the 2 way connector of transaxle assembly.

#### CAUTION:

**When removing air breather hose, be sure to hold 2 way connector securely.**

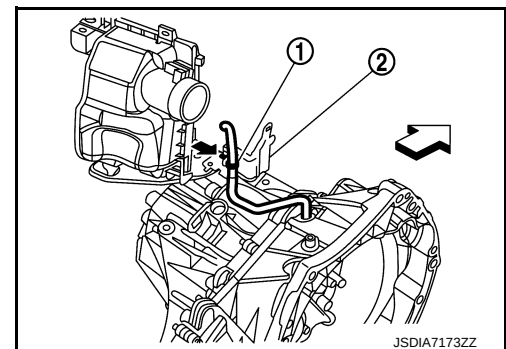

#### INSTALLATION

Note the following, and install in the reverse order of removal.

#### CAUTION:


- Install air breather hose, preventing crush and clogging caused by bending.
- Insert the allowance of air breather hose to the spool of the 2 way connector.
- Install air breather hose to the 2 way connector with the paint mark faced forward of the vehicle.
- Securely engage the clip in the mounting hole of harness bracket.
- Never reuse clip.

## UNIT REMOVAL AND INSTALLATION

### TRANSAXLE ASSEMBLY

#### Exploded View

INFOID:000000011463589

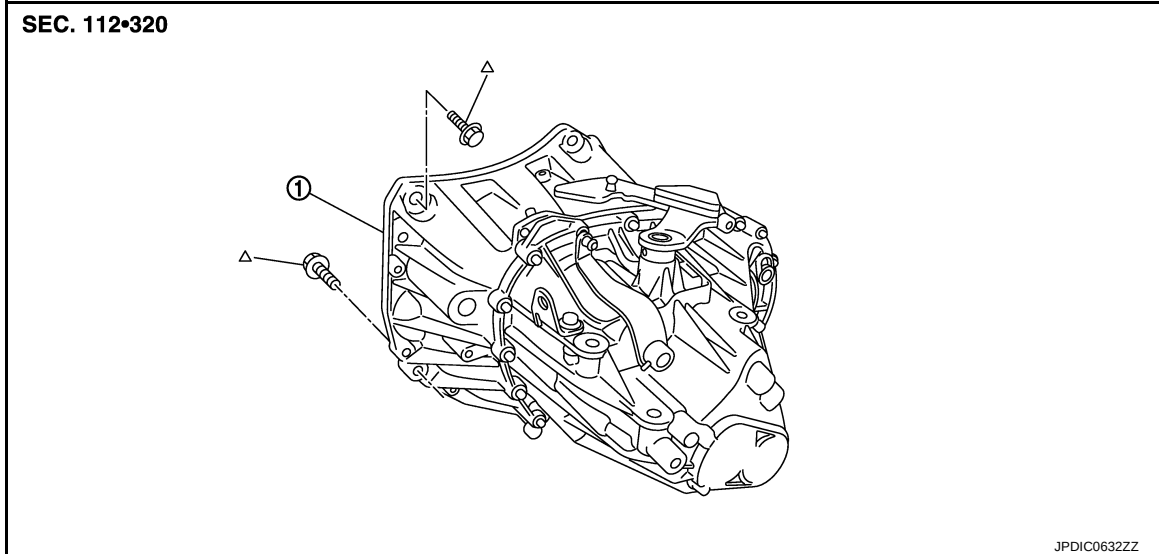

1. Transaxle assembly

△ : Refer to "INSTALLATION" in [TM-30, "Removal and Installation"](#) for the locations and tightening torque.

#### Removal and Installation

INFOID:000000011463590

#### CAUTION:

**Never reuse CSC (Concentric Slave Cylinder). Because CSC slides back to the original position every time when removing transaxle assembly. At this timing, dust on the sliding parts may damage a seal of CSC and may cause clutch fluid leakage. Refer to [CL-17, "Removal and Installation"](#).**

#### REMOVAL

1. Disconnect battery cable from negative terminal. Refer to [PG-116, "Removal and Installation"](#).
2. Shift the shifter lever to the neutral position.
3. Remove battery. Refer to [PG-116, "Removal and Installation"](#).
4. Remove air cleaner case. Refer to [EM-191, "Removal and Installation"](#).
5. Remove air breather hose. Refer to [TM-29, "Removal and Installation"](#).
6. Disconnect position switch connector. Refer to [TM-24, "Removal and Installation"](#).
7. Remove harness clip from transaxle assembly.
8. Disconnect selector cable and shifter cable from transaxle assembly. Refer to [TM-25, "Removal and Installation"](#).
9. Remove starter motor. Refer to [STR-26, "MR16DDT : Removal and Installation"](#).
10. Remove clutch tube from CSC (Concentric Slave Cylinder). Refer to [CL-15, "Removal and Installation"](#).

#### CAUTION:

- Keep painted surface on the body or other parts free of clutch fluid. If it spills, wipe up immediately and wash the affected area with water.
- Never depress clutch pedal during removal procedure.

11. Remove engine under cover.
12. Remove fender protector LH. Refer to [EXT-31, "Removal and Installation"](#).
13. Disconnect ground cable.
14. Remove front suspension member. Refer to [FSU-15, "Removal and Installation"](#).
15. Remove front drive shafts. Refer to [FAX-80, "2WD : Removal and Installation"](#).

# TRANSAXLE ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[6MT: RS6F94R]

## NOTE:

Insert a suitable plug into differential side oil seal after removing front drive shaft.

16. Set a suitable jack to transaxle assembly and then set a suitable jack to engine assembly.

## CAUTION:

**When setting a suitable jack, be careful so that it does not contact with the switch.**

17. Remove engine mounting bracket (LH) mounting bolts from transaxle assembly. Refer to [EM-216, "2WD : Removal and Installation"](#).

18. Remove rear torque rod bracket and rear torque rod. Refer to [EM-216, "2WD : Removal and Installation"](#).

19. Remove transaxle assembly mounting bolts.

20. Remove transaxle assembly from the engine.

## CAUTION:

- **Fix transaxle assembly to a suitable jack.**
- **The transaxle assembly must not interfere with the wire harnesses and clutch tube.**

21. Remove CSC. Refer to [CL-17, "Removal and Installation"](#).


## INSTALLATION

Note the following, and install in the reverse order of removal.

## CAUTION:

- **Fix transaxle assembly to a suitable jack.**
- **The transaxle assembly must not interfere with the wire harnesses and clutch tube.**
- **When installing transaxle assembly, never bring input shaft into contact with clutch cover.**
- **Tapping work for tapping bolts is not applied to new transaxle case. Do not perform tapping by other than screwing tapping bolts because tapping is formed by screwing tapping bolts into transaxle case.**
- Tighten transaxle assembly mounting bolts to the specified torque.  
The figure is the view from the engine.

| Bolt symbol                            | A                   | B                   |
|----------------------------------------|---------------------|---------------------|
| Insertion direction                    | Transaxle to engine | Engine to transaxle |
| Quantity                               | 3                   | 6                   |
| Bolt length<br>"ℓ" mm (in)             | 60 (2.36)           | 50 (1.97)           |
| Tightening torque<br>N·m (kg-m, ft-lb) | 62.0 (6.3, 46)      |                     |

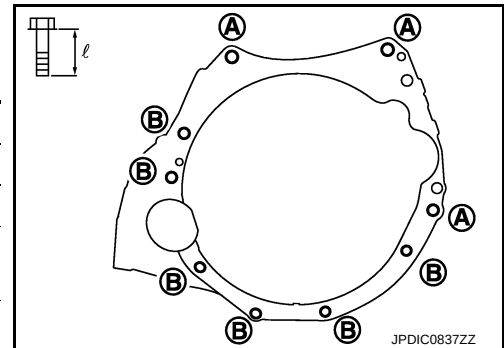

INFOID:000000011463591

## Inspection

## INSPECTION AFTER INSTALLATION

- Check the operation of the control linkage. Refer to [TM-28, "Inspection"](#).
- Check the oil leakage and the oil level. Refer to [TM-22, "Inspection"](#).


## UNIT DISASSEMBLY AND ASSEMBLY

### TRANSAXLE ASSEMBLY

#### Exploded View

INFOID:000000011463592

#### CASE AND HOUSING

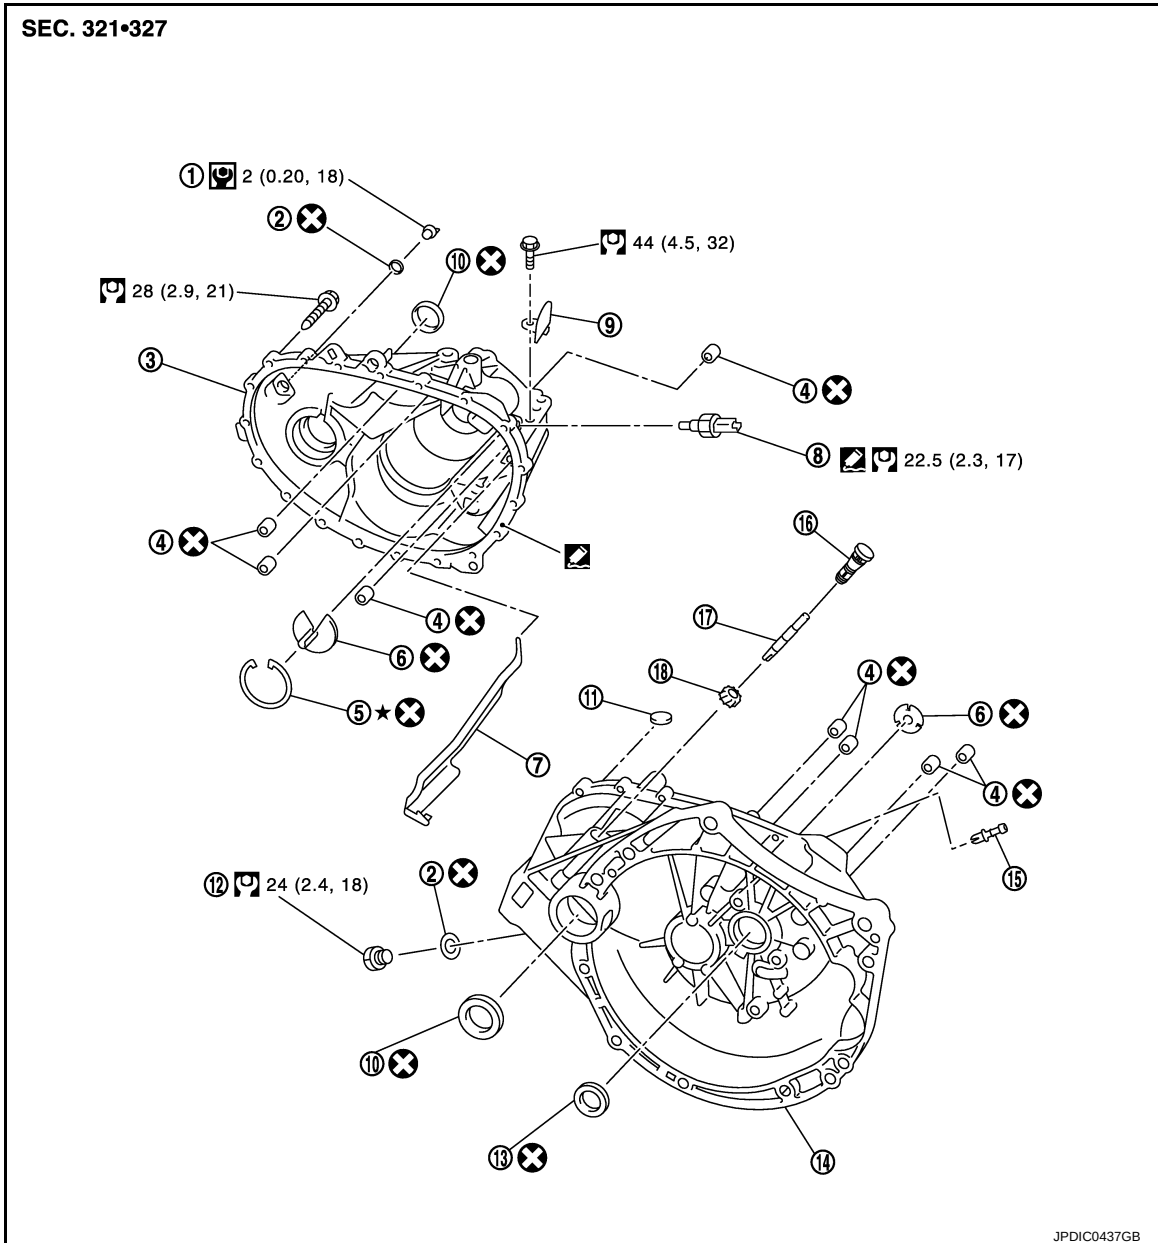

- |                                |                    |                     |
|--------------------------------|--------------------|---------------------|
| 1. Filler plug                 | 2. Gasket          | 3. Transaxle case   |
| 4. Bushing                     | 5. Snap ring       | 6. Oil channel      |
| 7. Oil gutter                  | 8. Position switch | 9. Bracket          |
| 10. Differential side oil seal | 11. Magnet         | 12. Drain plug      |
| 13. Input shaft oil seal       | 14. Clutch housing | 15. 2 way connector |
| 16. Plug                       | 17. Pinion shaft   | 18. Pinion gear     |

: Apply Genuine Silicone RTV or an equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

: Always replace after every disassembly.

# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F94R]

★ : Select with proper thickness.

 : N·m (kg-m, ft-lb)

 : N·m (kg-m, in-lb)

## SHAFT AND GEAR

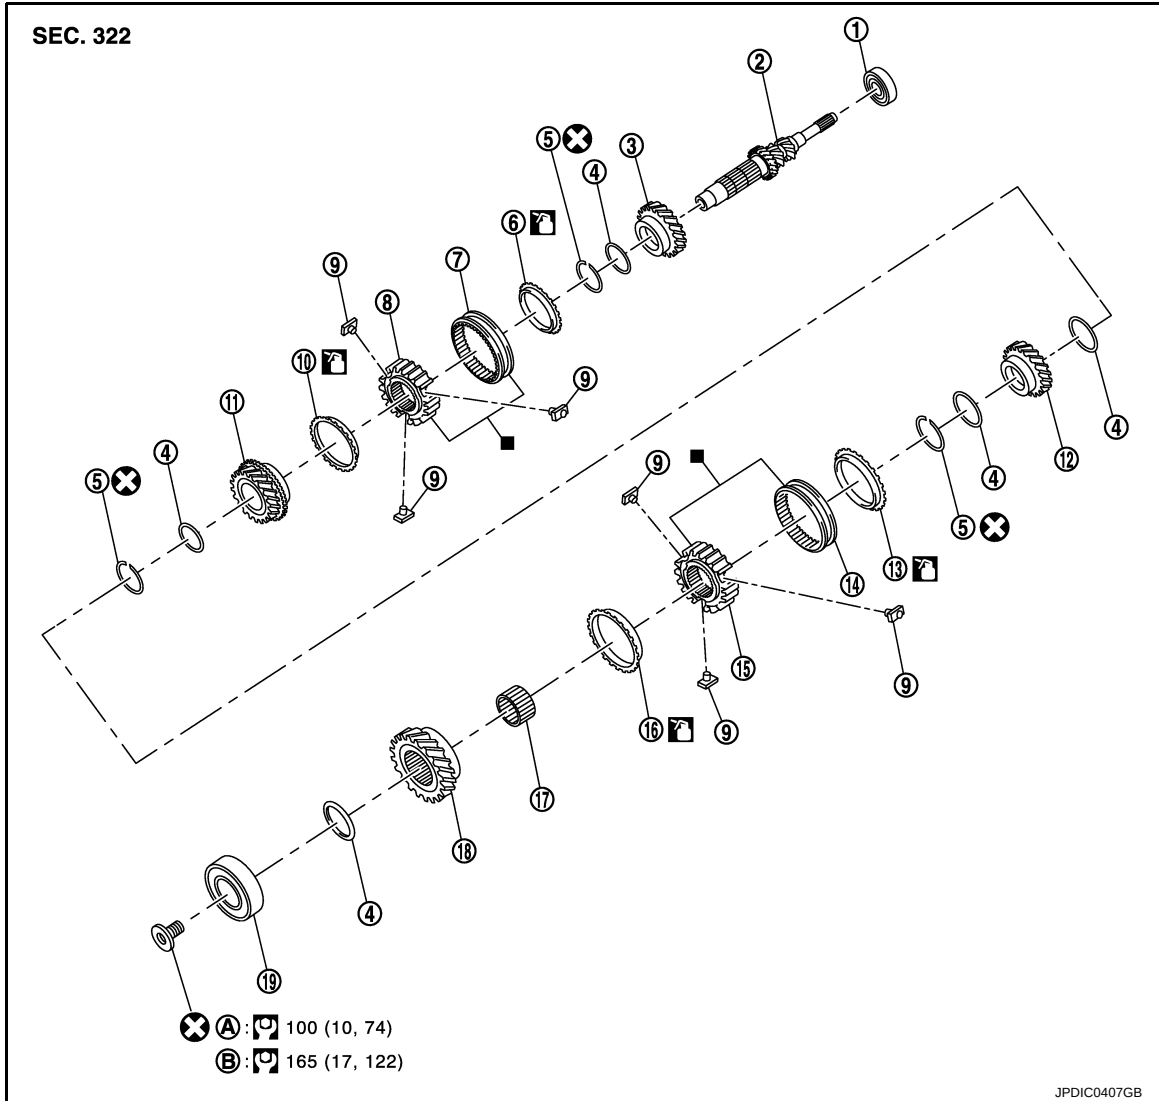

- |                              |                             |                              |
|------------------------------|-----------------------------|------------------------------|
| 1. Input shaft front bearing | 2. Input shaft              | 3. 3rd input gear            |
| 4. Spacer                    | 5. Snap ring                | 6. 3rd baulk ring            |
| 7. 3rd-4th coupling sleeve   | 8. 3rd-4th synchronizer hub | 9. Insert key                |
| 10. 4th baulk ring           | 11. 4th input gear          | 12. 5th input gear           |
| 13. 5th baulk ring           | 14. 5th-6th coupling sleeve | 15. 5th-6th synchronizer hub |
| 16. 6th baulk ring           | 17. Needle bearing          | 18. 6th input gear           |
| 19. Input shaft rear bearing |                             |                              |
| A. First step                | B. Final step               |                              |

 : Apply gear oil.

 : Replace the parts as a set.


 : Always replace after every disassembly.

 : N·m (kg-m, ft-lb)

# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

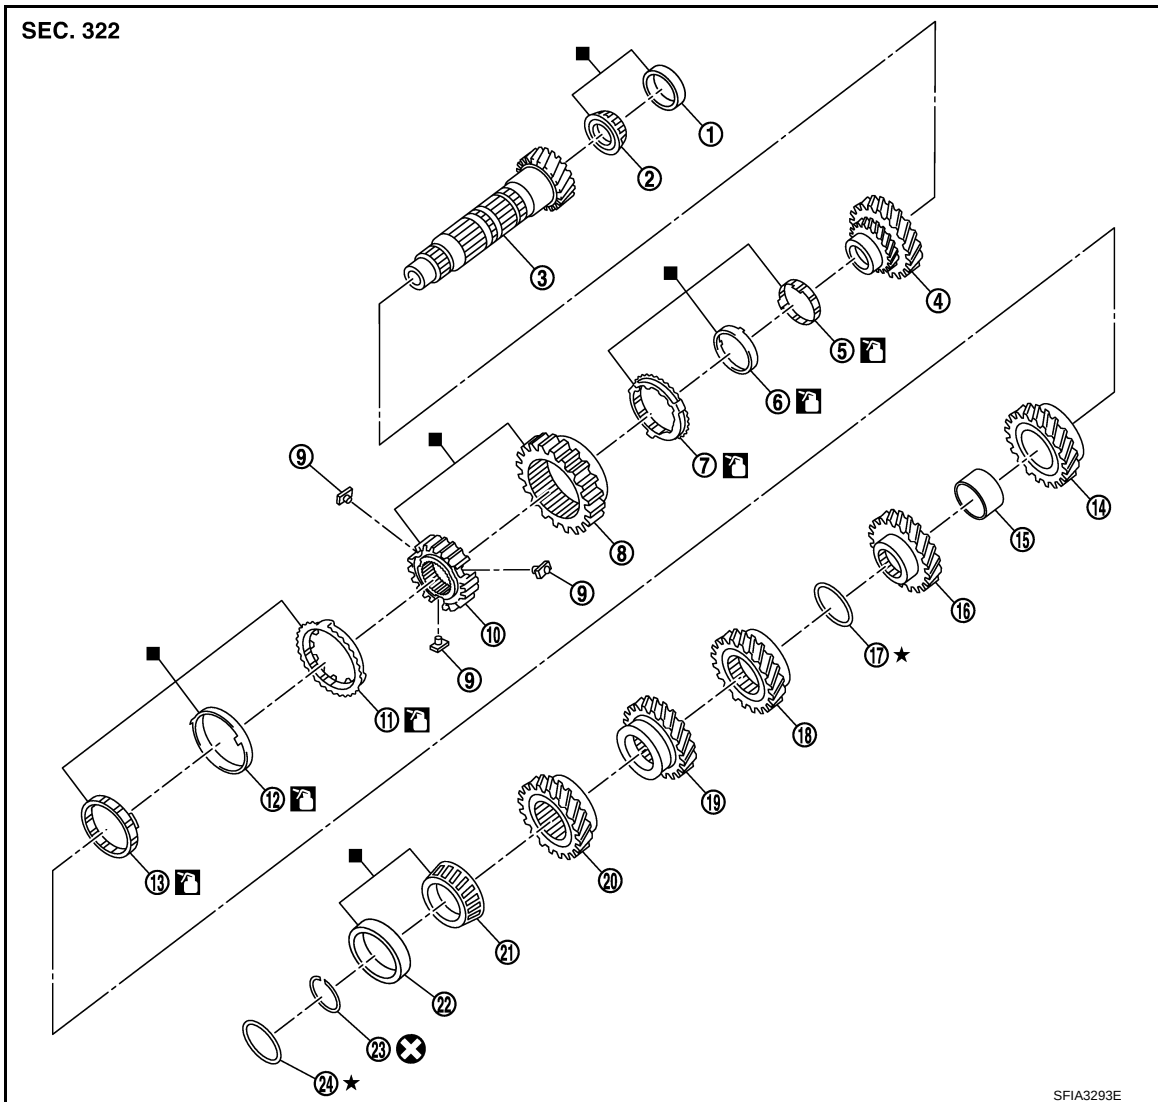

- |                                       |                                       |                                           |
|---------------------------------------|---------------------------------------|-------------------------------------------|
| 1. Mainshaft front bearing outer race | 2. Mainshaft front bearing inner race | 3. Mainshaft                              |
| 4. 1st main gear                      | 5. 1st inner baulk ring               | 6. 1st synchronizer cone                  |
| 7. 1st outer baulk ring               | 8. 1st-2nd coupling sleeve            | 9. Insert key                             |
| 10. 1st-2nd synchronizer hub          | 11. 2nd outer baulk ring              | 12. 2nd synchronizer cone                 |
| 13. 2nd inner baulk ring              | 14. 2nd main gear                     | 15. Bushing                               |
| 16. 3rd main gear                     | 17. Mainshaft adjusting shim          | 18. 4th main gear                         |
| 19. 5th main gear                     | 20. 6th main gear                     | 21. Mainshaft rear bearing inner race     |
| 22. Mainshaft rear bearing outer race | 23. Snap ring                         | 24. Mainshaft rear bearing adjusting shim |



: Apply gear oil.



: Replace the parts as a set.



★ : Select with proper thickness.




⊗ : Always replace after every disassembly.

# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

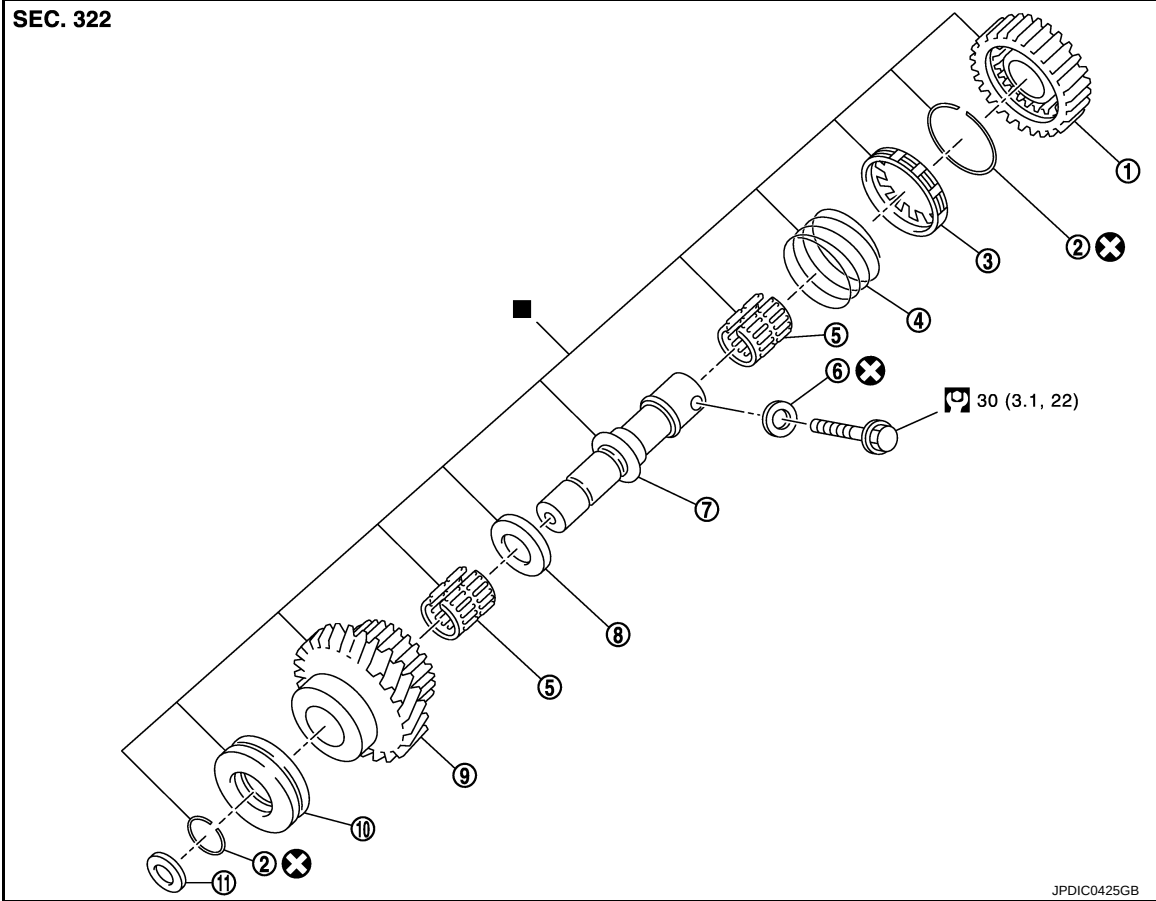

- |                        |                   |                       |
|------------------------|-------------------|-----------------------|
| 1. Reverse output gear | 2. Snap ring      | 3. Reverse baulk ring |
| 4. Return spring       | 5. Needle bearing | 6. Seal washer        |
| 7. Reverse idler shaft | 8. Spacer         | 9. Reverse input gear |
| 10. Lock washer        | 11. Spring washer |                       |

■ : Replace the parts as a set.

⊗ : Always replace after every disassembly.

Ⓐ : N·m (kg-m, ft-lb)


## SHIFT FORK AND FORK ROD

# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

## SEC. 328

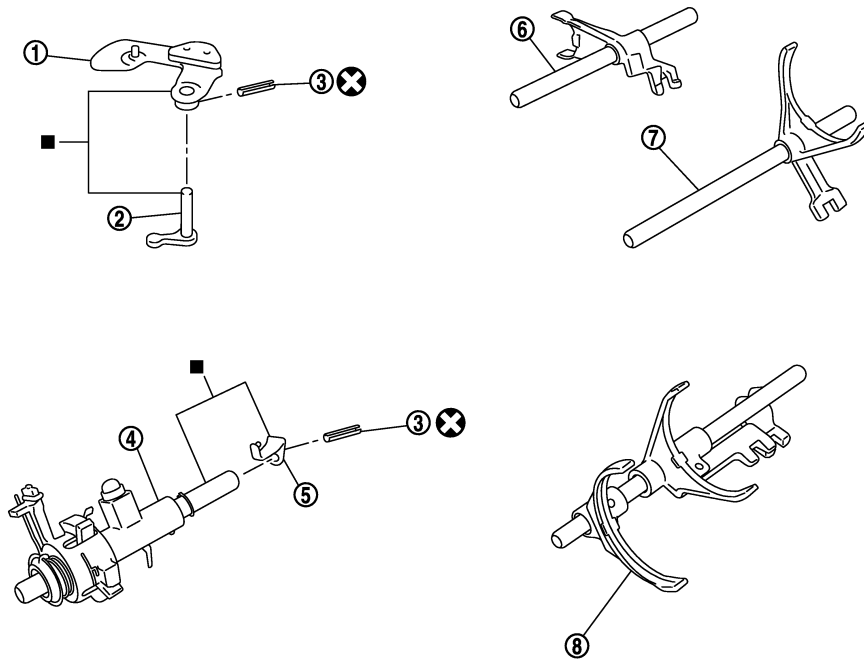

JPDIC0603ZZ

- |                     |                    |                     |
|---------------------|--------------------|---------------------|
| 1. Shifter lever A  | 2. Shifter lever B | 3. Retaining pin    |
| 4. Selector         | 5. Selector lever  | 6. Reverse fork rod |
| 7. 1st-2nd fork rod | 8. Fork rod        |                     |

■ : Replace the parts as a set.

⊗ : Always replace after every disassembly.


## FINAL DRIVE



# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F94R]

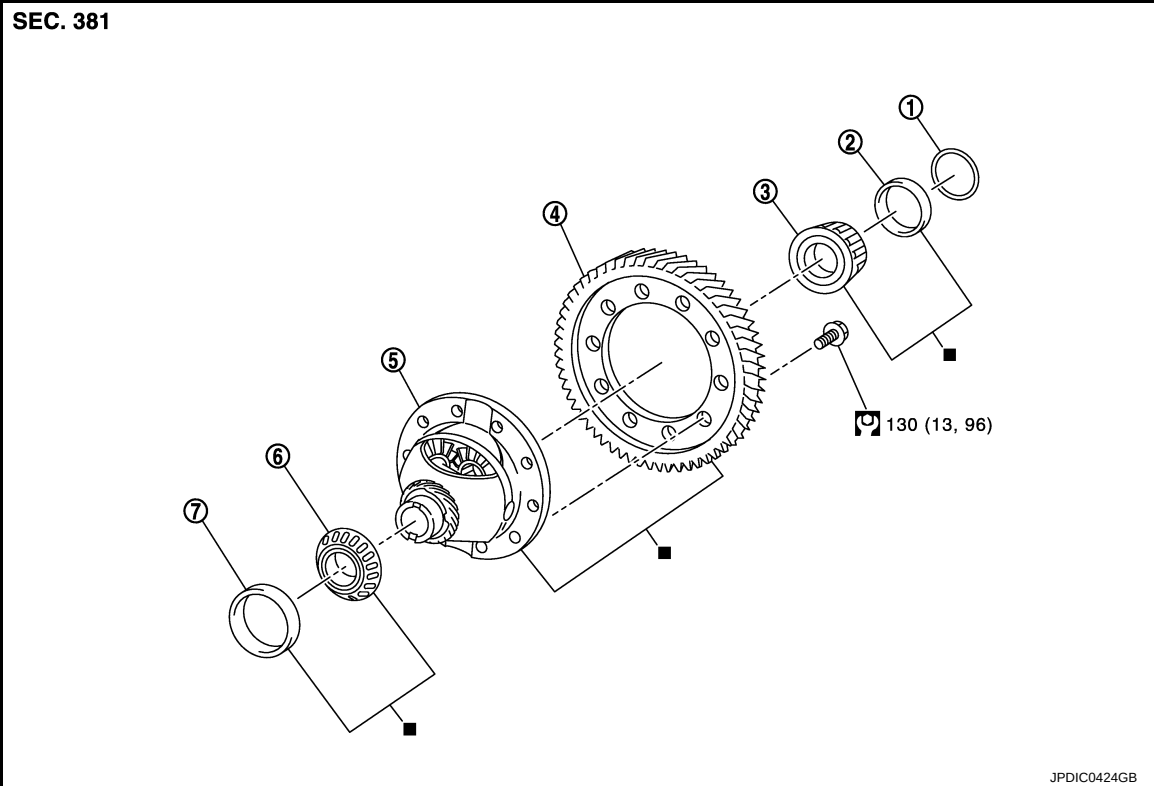

## Disassembly

INFOID:0000000011463593

1. Remove drain plug and gasket from clutch housing, using a socket [Commercial service tool] and then drain gear oil.
2. Remove filler plug and gasket from transaxle case.
3. Remove selector lever (1) retaining pin with a pin punch to remove selector lever.
4. Remove bracket (2) and position switch (3) from transaxle case.

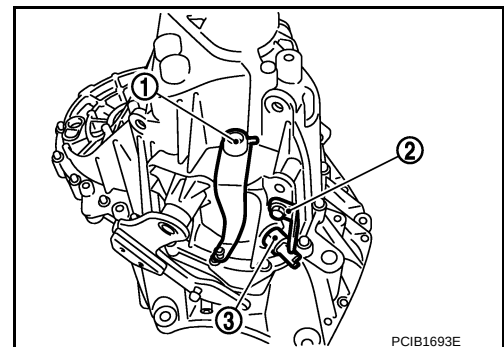


## TRANSAXLE ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]


5. Remove transaxle case mounting bolts (←).

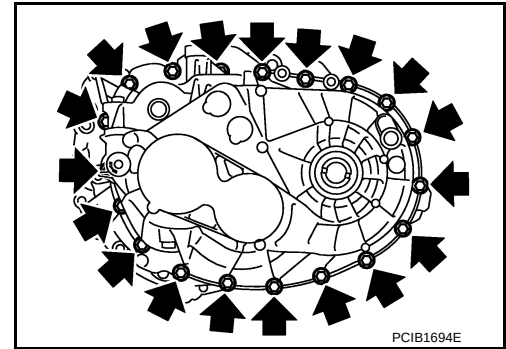


6. Remove reverse idler shaft mounting bolt (←) and seal washer.

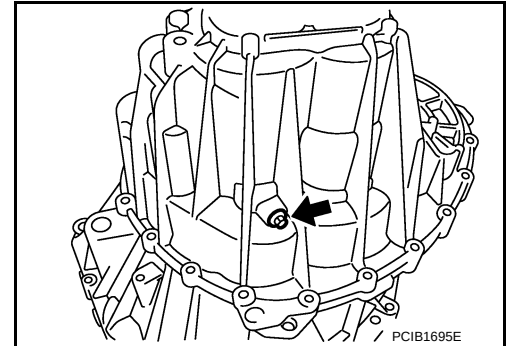


7. Remove transaxle case (2) while rotating shifter lever A (1) in the direction as shown in the figure.

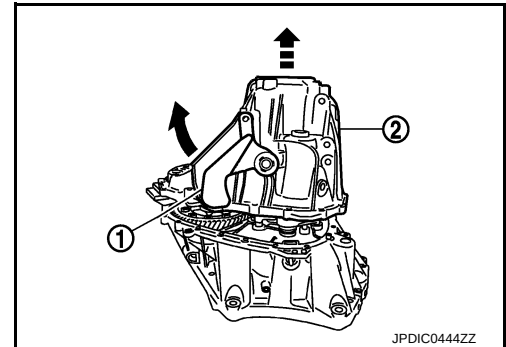

8. Remove selector spring (1) from return bushing (A).

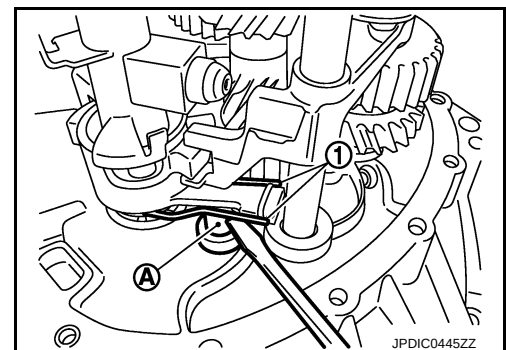

9. Shift 1st-2nd fork rod (1), fork rod (2), and reverse fork rod (3) to the neutral position.  
10. Remove selector (4) from clutch housing.

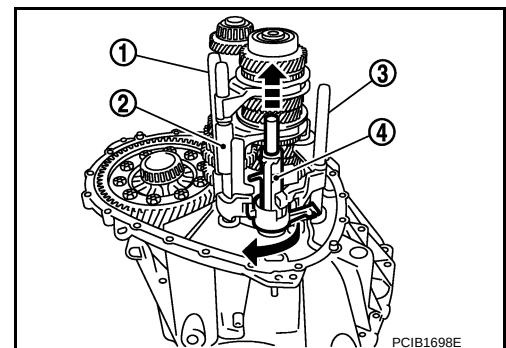

# TRANSAXLE ASSEMBLY

## < UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F94R]

11. Remove reverse idler shaft assembly (1), as per the following procedure.
  - a. Pull up input shaft assembly (2), mainshaft assembly (3), fork rod (4), and 1st-2nd fork rod (5).

**NOTE:**

It is easier to pull up when shifting each fork rod to each shaft side.


- b. Remove reverse idler shaft assembly and reverse fork rod (6) from clutch housing.
12. Remove spring washer from clutch housing.

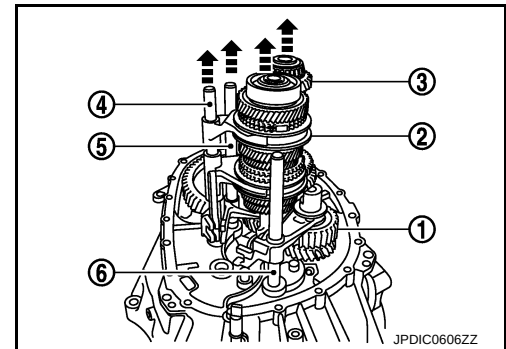


13. Pull up and remove input shaft assembly (1), mainshaft assembly (2), fork rod (3), and 1st-2nd fork rod (4) from clutch housing.

**NOTE:**

It is easier to pull up when shifting each fork rod to each shaft side.

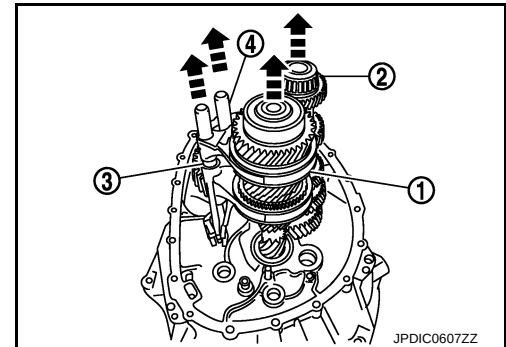


14. Remove final drive assembly (1) from clutch housing.
15. Remove magnet from clutch housing.

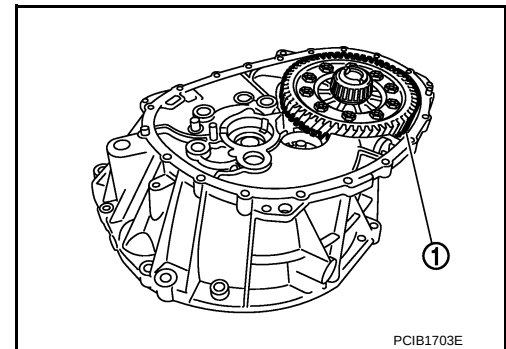

16. Remove differential side oil seals (1) from clutch housing and transaxle case.

**CAUTION:**


Never damage clutch housing and transaxle case.

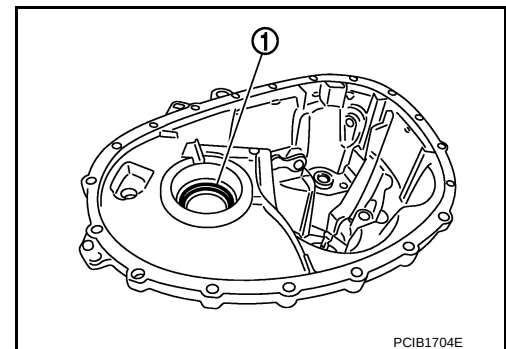

17. Remove differential side bearing outer race (1) from clutch housing, using a brass rod.

**CAUTION:**

Never damage clutch housing.

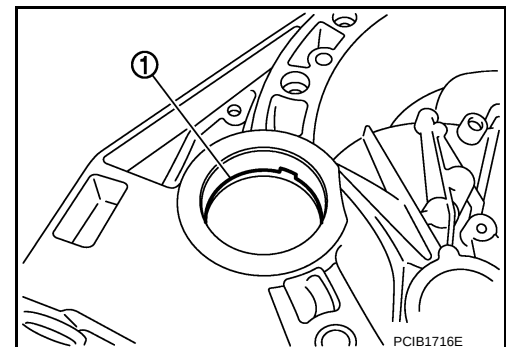

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F94R]

18. Remove differential side bearing outer race (1) from transaxle case, using a brass rod.

**CAUTION:**


**Never damage transaxle case.**

19. Remove shim (2) from transaxle case.

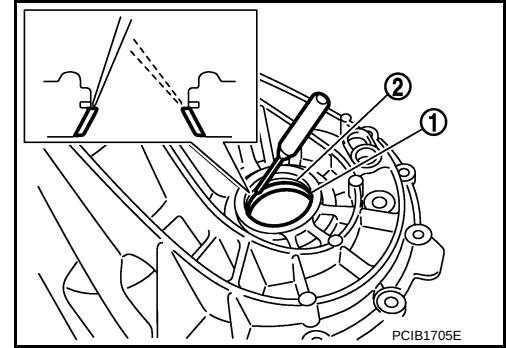


20. Remove shifter lever A (1) retaining pin, using a pin punch.


21. Remove shifter lever A from transaxle case.

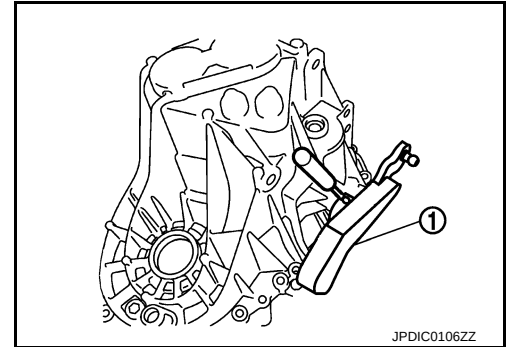


22. Remove shifter lever B (1) from transaxle case.

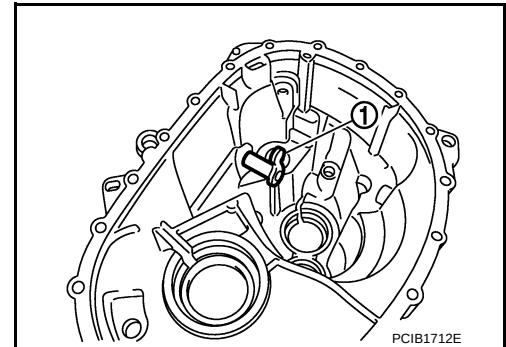

23. Remove oil gutter (1) from transaxle case.

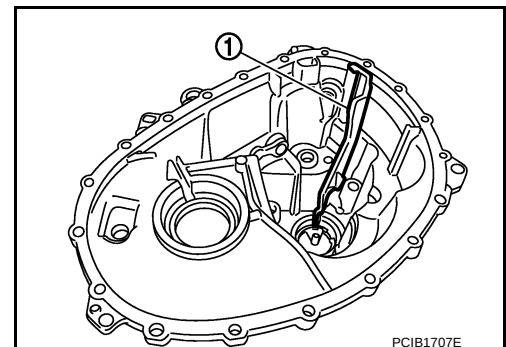

24. Remove bushings (1) from transaxle case, using a remover [Commercial service tool].

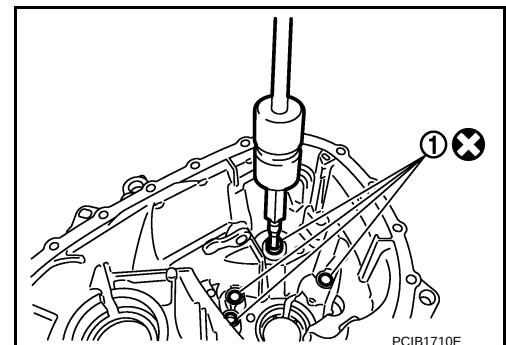


# TRANSAXLE ASSEMBLY


## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

25. Remove mainshaft rear bearing outer race from transaxle case, using a remover [Commercial service tool].
26. Remove mainshaft rear bearing adjusting shim from transaxle case.

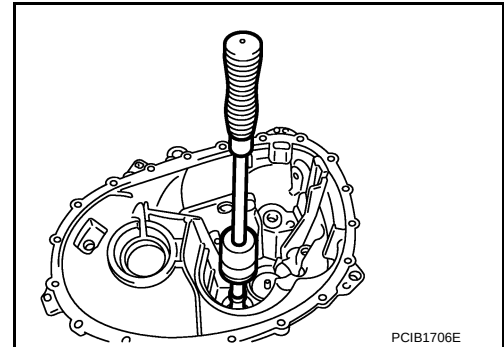


27. Remove snap ring (1) and oil channel (2) from transaxle case.

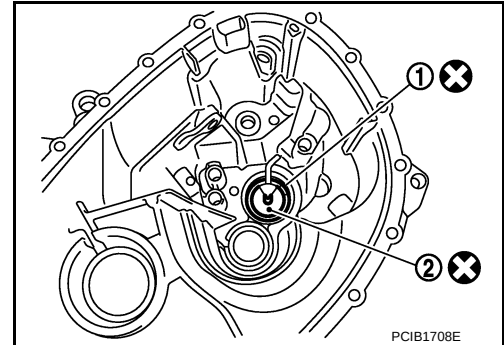


28. Remove input shaft oil seal (1) from clutch housing, using an oil seal remover.


**CAUTION:**  
Never damage clutch housing.

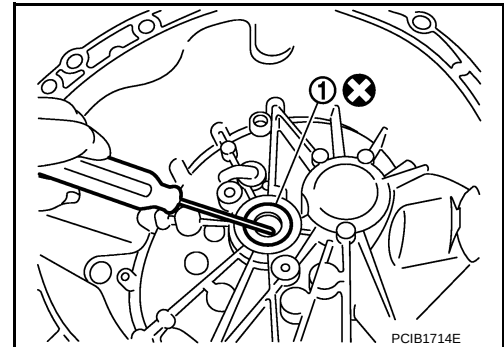

29. Remove mainshaft front bearing outer race (1) from clutch housing, using the puller (A) [SST: KV381054S0 (J-34286)] and a spacer (B) [Commercial service tool].
30. Remove oil channel (2) from clutch housing.

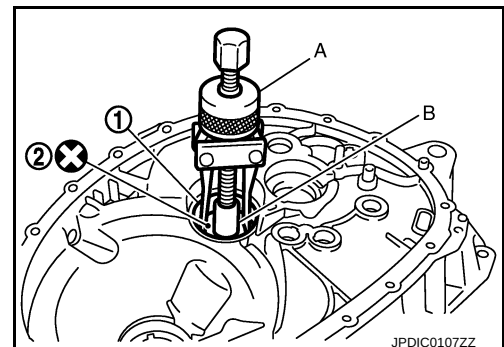

31. Remove bushing (1) from clutch housing, using a remover [Commercial service tool].

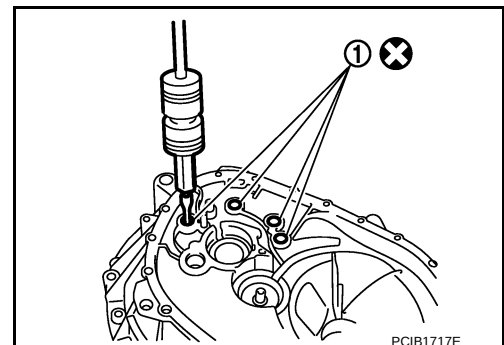


# TRANSAXLE ASSEMBLY


## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

32. Remove 2 way connector (1) from clutch housing.
33. Remove plug from clutch housing.

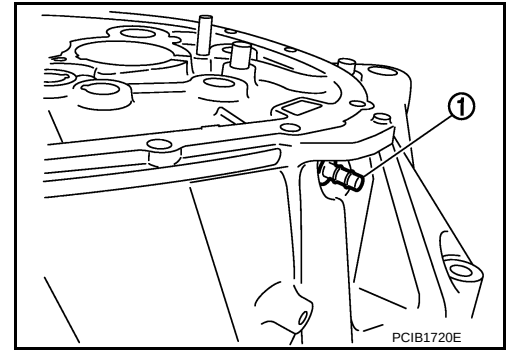



34. Remove pinion gear (1) and pinion shaft (2) from clutch housing.

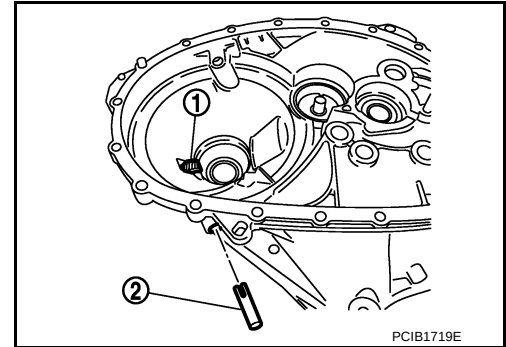

## Assembly

INFOID:000000011463594

1. Install pinion gear (1) and pinion shaft (2) to clutch housing.  
**CAUTION:**  
**Replace transaxle assembly when replacing clutch housing.**
2. Install plug to clutch housing.
3. Install 2 way connector (1) to clutch housing.

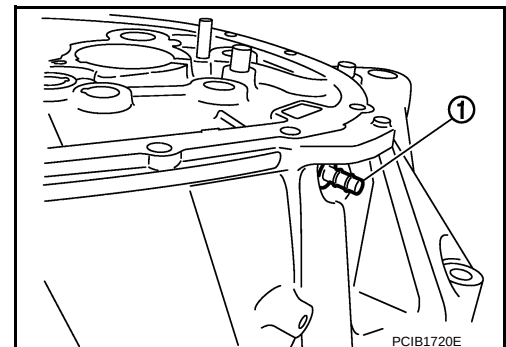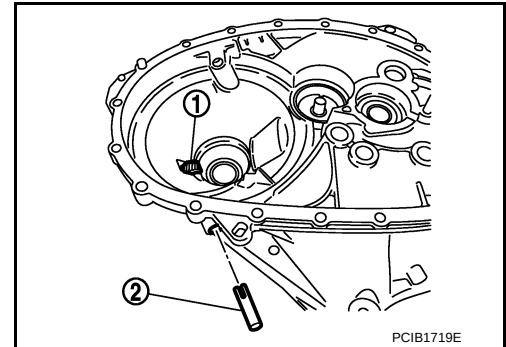

# TRANSAXLE ASSEMBLY


## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

4. Install bushings (1) so that they become even to clutch housing edge surface, using a drift (A) [Commercial service tool].
5. Install oil channel to clutch housing.

**CAUTION:**


Never reuse oil channel.

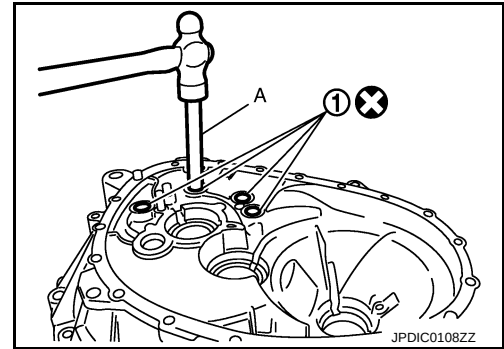


6. Install mainshaft front bearing outer race to clutch housing, using the drift (A) [SST: KV38100200 ( - )].

**CAUTION:**

Replace mainshaft front bearing outer race and mainshaft front bearing inner race as a set.

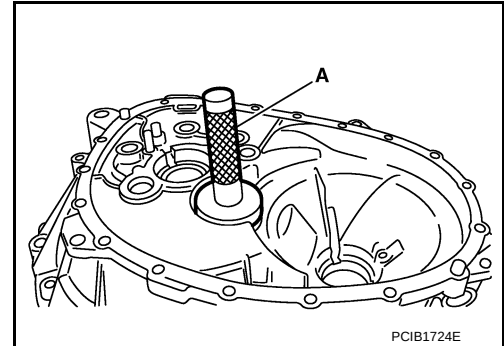

7. Install input shaft oil seal (1) to clutch housing, using the drift (A) [SST: ST33220000 ( - )].

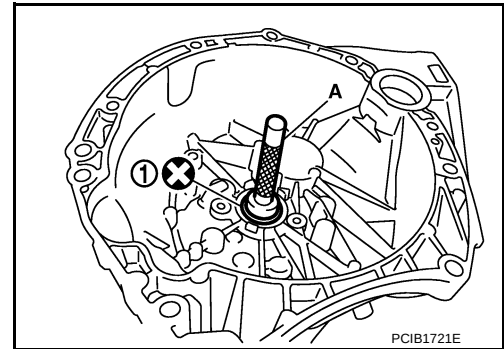

8. Install snap ring (1) and oil channel (2) to transaxle case.

**CAUTION:**


- Select and install snap ring that has the same thickness as previous one.
- Replace transaxle assembly when replacing transaxle case.

9. Install mainshaft rear bearing adjusting shim to transaxle case.

**CAUTION:**

Select mainshaft rear bearing adjusting shim, as per the following procedure when replacing mainshaft adjusting shim, 6th main gear, 5th main gear, or 4th main gear.

- Replace mainshaft adjusting shim.
  - If new mainshaft adjusting shim is thinner than previous one, offset the thickness difference by selecting thicker mainshaft rear bearing adjusting shim.
  - If new mainshaft adjusting shim is thicker than previous one, offset the thickness difference by selecting thinner mainshaft rear bearing adjusting shim.
- Replace 6th main gear, 5th main gear, or 4th main gear.
- Measure the thickness of the main gear used before and the new main gear
- Increase the thickness of the mainshaft rear bearing adjusting shim, if the difference is smaller than 0.025 mm (0.0010 in).
- Decrease the thickness of the mainshaft rear bearing adjusting shim, if the difference is greater than 0.025 mm (0.0010 in).

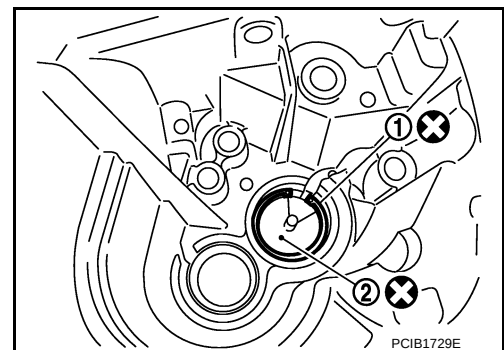

# TRANSAXLE ASSEMBLY


## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]


10. Install mainshaft rear bearing outer race to transaxle case, using the drift (A) [SST: KV38100200 ( - )].

**CAUTION:**


**Replace mainshaft rear bearing outer race and mainshaft rear bearing inner race as a set.**

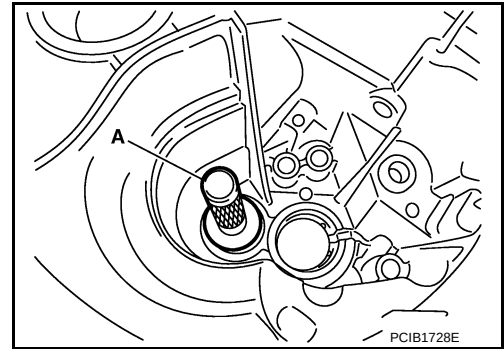

11. Install bushings (1) to transaxle case, using a drift (A) [Commercial service tool].

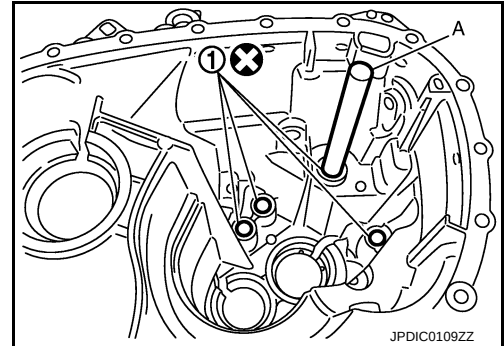

12. Install oil gutter (1) to transaxle case.

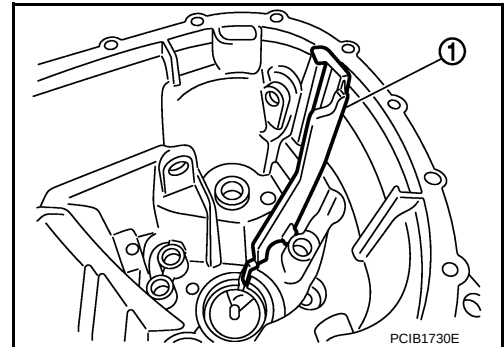

13. Install shifter lever B (1) to transaxle case.


**CAUTION:**

**Replace shifter lever A and shifter lever B as a set.**

14. Install shifter lever A to transaxle case.

**CAUTION:**

**Replace shifter lever A and shifter lever B as a set.**

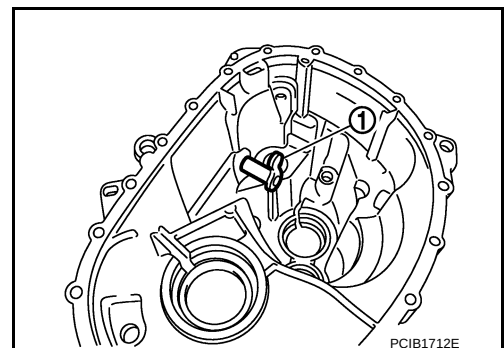


15. Install retaining pin to shifter lever A (1), using a pin punch.

**CAUTION:**

**Never reuse retaining pin.**

16. Install shim to transaxle case.

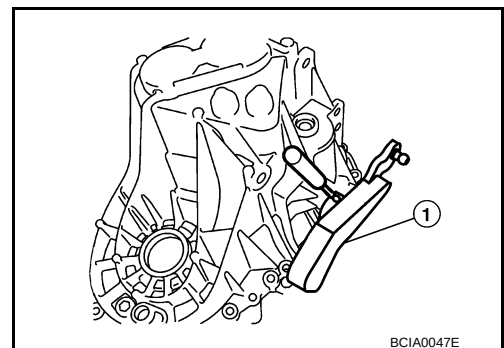



# TRANSAXLE ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

17. Install differential side bearing outer race (transaxle case side) to transaxle case, using the drift (A) [SST: ST33400001 (J-26082)].

**CAUTION:**


Replace differential side bearing outer race (transaxle case side) and differential side bearing inner race (transaxle case side) as a set.

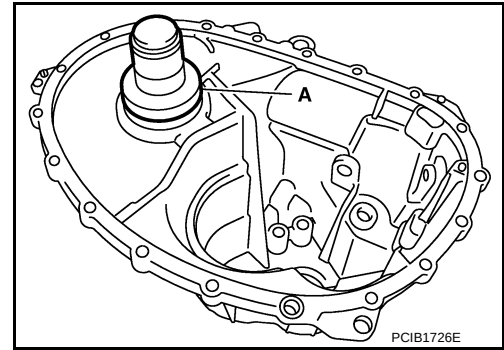

18. Install differential side bearing outer race (clutch housing side) to clutch housing, using the drift (A) [SST: KV38100200 ( - )].

**CAUTION:**

Replace differential side bearing outer race (clutch housing side) and differential side bearing inner race (clutch housing side) as a set.

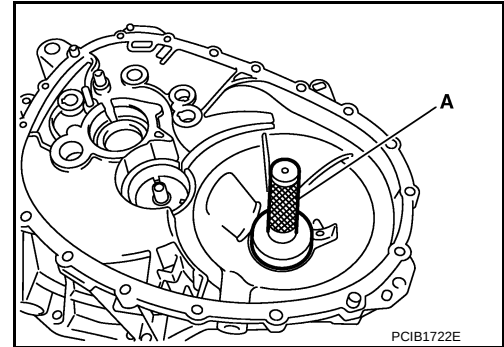

19. Install differential side oil seals (1) to clutch housing and transaxle case, using the drift [Stamping number: B.vi 1666-B] of the drift set [SST: KV32500QAA ( - )].

A : Transaxle case side


B : Clutch housing side

**Dimension "L1" : 1.2 – 1.8 mm (0.047 – 0.071 in)**


**Dimension "L2" : 2.7 – 3.3 mm (0.106 – 0.130 in)**

**CAUTION:**

- Never incline differential side oil seal.
- Never damage clutch housing and transaxle case.

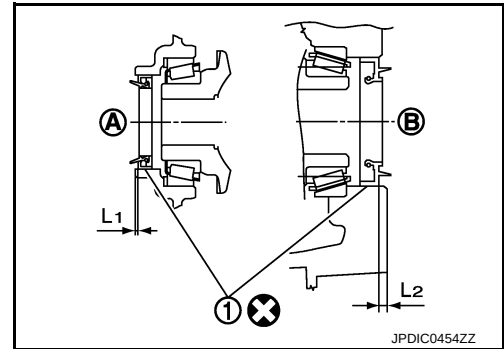

20. Install magnet to clutch housing.
21. Install final drive assembly to clutch housing.
22. Set fork rod (1) to input shaft assembly (2), and then install them to clutch housing.

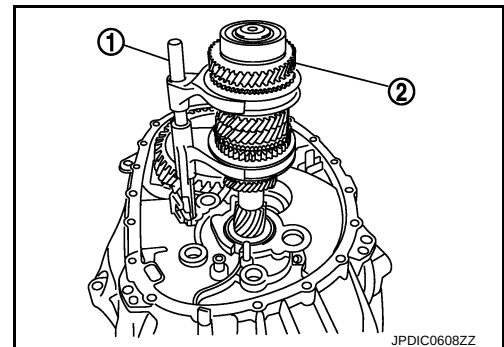


# TRANSAXLE ASSEMBLY

## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

23. Install mainshaft assembly (1), as per the following procedure.

- Pull up input shaft assembly (2) and fork rod (3).
- Set 1st-2nd fork rod (4) to mainshaft assembly, and then install them to clutch housing.

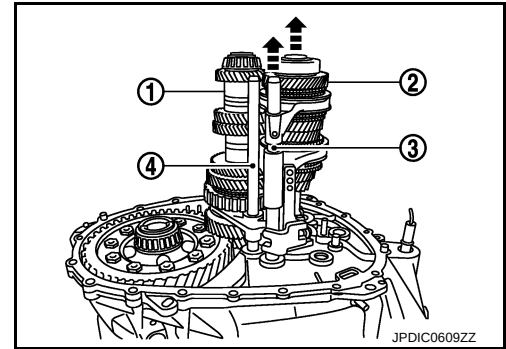


24. Install reverse idler shaft assembly (1), as per the following procedure.

- Install spring washer to clutch housing.
- Pull up input shaft assembly (2), mainshaft assembly (3), fork rod (4), and 1st-2nd fork rod (5).

**NOTE:**

It is easier to pull up when shifting each fork rod to each shaft side.

- Set reverse fork rod (6) to reverse idler shaft assembly, and then install them to clutch housing.

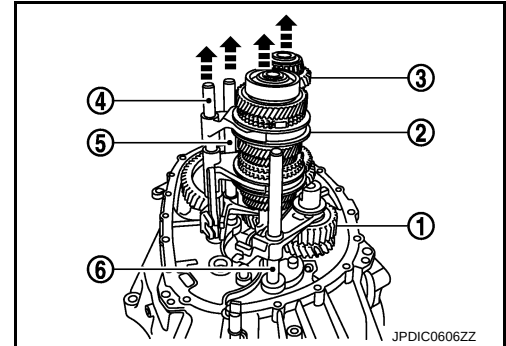


25. Shift 1st-2nd fork rod (1), fork rod (2), and reverse fork rod (3) to the neutral position.

26. Install selector (4) to clutch housing.

**CAUTION:**

Replace selector lever and selector as a set.

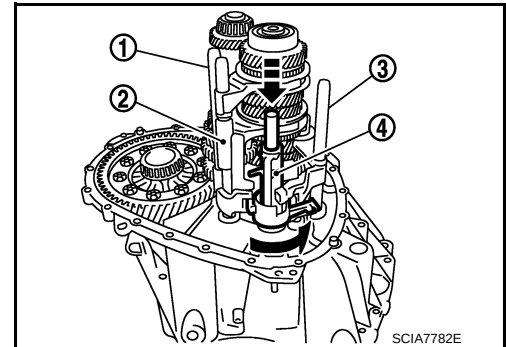


27. Install selector spring (1) to return bushing (A).

28. Apply recommended sealant to mounting surface of transaxle case.


- Use Genuine Silicone RTV or an equivalent. Refer to [GL-22, "Recommended Chemical Products and Sealants"](#).

**CAUTION:**

- Never allow old liquid gasket, moisture, oil, or foreign matter to remain on mounting surface.
- Check that mounting surface is not damaged.
- Apply sealant bead continuously.

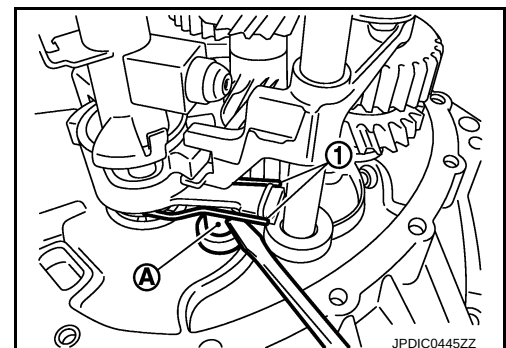

29. Install transaxle case to clutch housing while rotating shifter lever A (1) in the direction as shown in the figure.

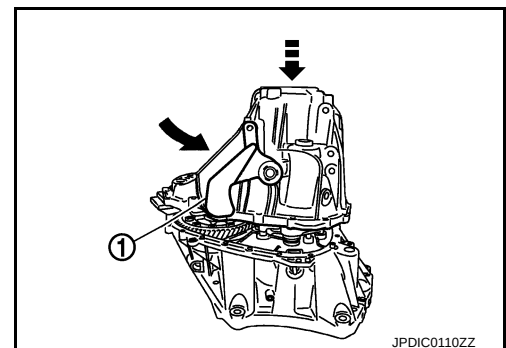

# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]


30. Install reverse idler shaft mounting bolt (←), as per the following procedure.

- a. Install seal washer to reverse idler shaft mounting bolt, and install reverse idler shaft mounting bolt to transaxle case.


**CAUTION:**

**Never reuse seal washer.**

- b. Tighten reverse idler shaft mounting bolt to the specified torque.

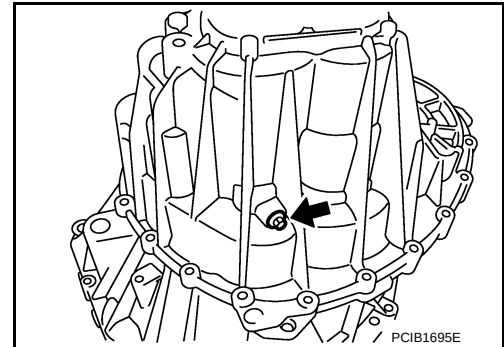

31. Tighten transaxle case mounting bolts (←) to the specified torque.

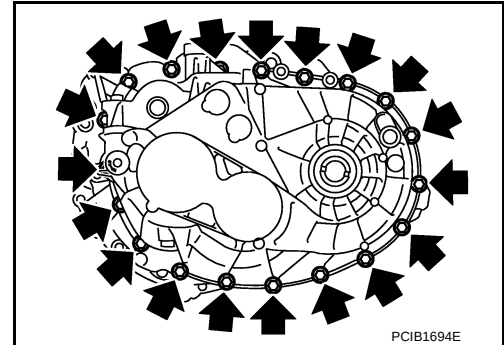

32. Install position switch (1), as per the following procedure.

- a. Apply recommended sealant to threads of position switch.

• Use Genuine Silicone RTV or an equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

**CAUTION:**

**Never allow old liquid gasket, moisture, oil, or foreign matter to remain on thread.**

- b. Install position switch to transaxle case, and tighten it to the specified torque.

33. Install bracket (2) to transaxle case, and tighten mounting bolt to the specified torque.

34. Install selector lever (3), as per the following procedure.

- a. Install selector lever to transaxle case.

**CAUTION:**

**Replace selector lever and selector as a set.**

- b. Install retaining pin to selector lever, using a pin punch.

**CAUTION:**

**Never reuse retaining pin.**

35. Install drain plug, as per the following procedure.

- a. Install gasket to drain plug.

**CAUTION:**

**Never reuse gasket.**

- b. Install drain plug to clutch housing, using a socket [Commercial service tool].

- c. Tighten drain plug to the specified torque.

36. Install filler plug, as per the following procedure.

- a. Install gasket to filler plug, and then install them to transaxle case.


**CAUTION:**

**Never reuse gasket.**

- b. Tighten filler plug to the specified torque.

**CAUTION:**

**Fill with gear oil before tighten filler plug to the specified torque.**

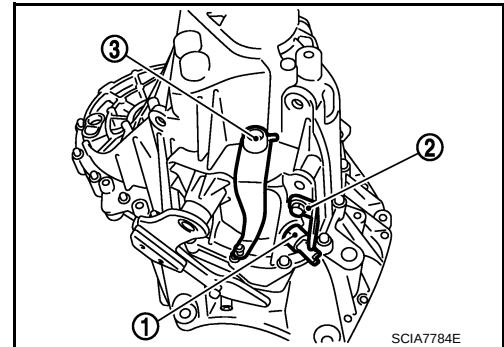

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F94R]

## Inspection

INFOID:000000011463595

### INSPECTION AFTER DISASSEMBLY

Check contact surface and sliding surface for excessive wear, uneven wear, bend, and damage. Replace if necessary.

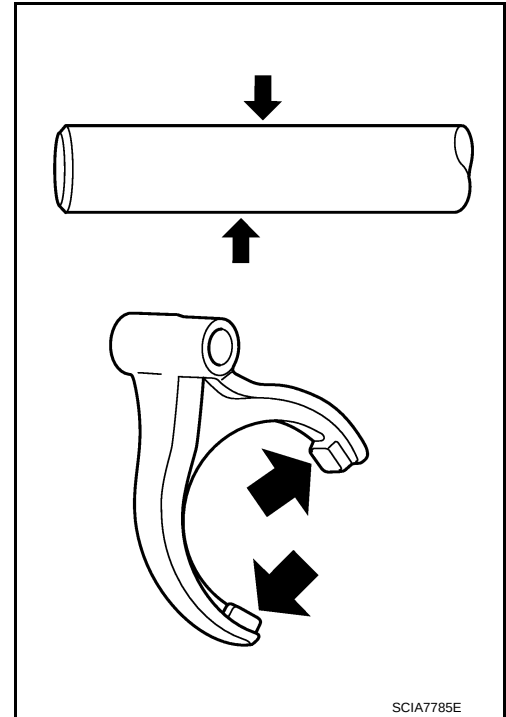

# INPUT SHAFT AND GEAR


< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

## INPUT SHAFT AND GEAR

### Exploded View

INFOID:0000000011463596

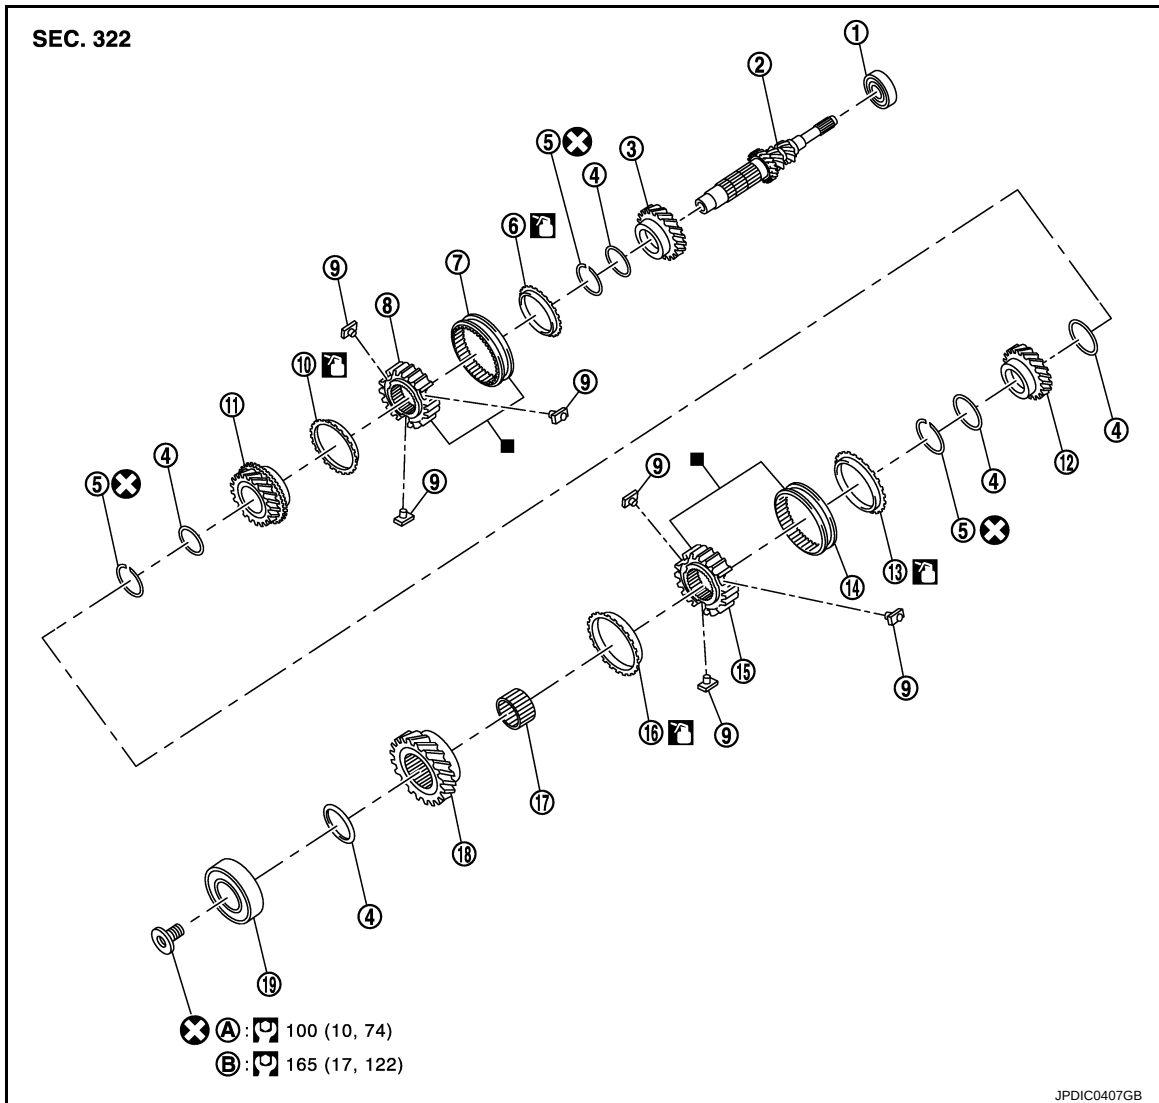

### Disassembly

INFOID:0000000011463597


**CAUTION:**

## INPUT SHAFT AND GEAR


< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]


- Fix input shaft in a vise with back plate, and then remove gears and snap rings.
- For removal of snap ring, set snap ring pliers and flat pliers at both sides of snap ring. While expanding snap ring with snap ring pliers, move snap ring with flat pliers.
- Disassemble gear components putting direction marks on the parts that do not affect any functions.

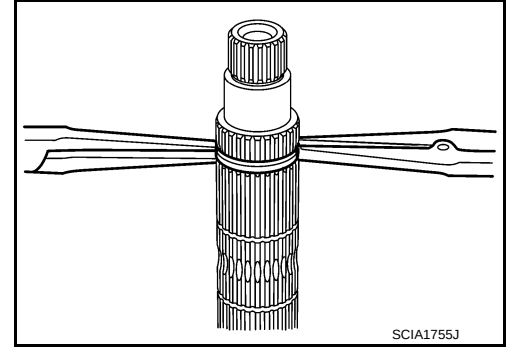


1. Remove input shaft rear bearing mounting bolt (1), using the drift (A) [SST: KV32300QAM ( - )].

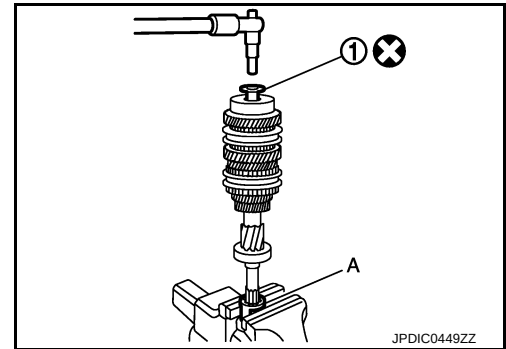

2. Remove input shaft rear bearing (1), as per the following procedure.
  - a. Set a puller [Commercial service tool] to input shaft rear bearing.
  - b. Remove input shaft rear bearing, using a drift (A) [Commercial service tool].

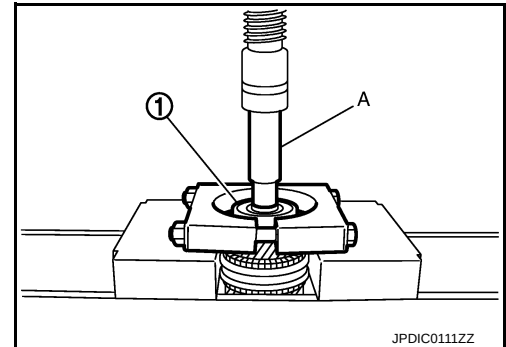

3. Remove spacer (1), 6th input gear (2), needle bearing, 6th baulk ring, and 5th-6th synchronizer hub assembly (3).
4. Remove insert keys and 5th-6th coupling sleeve from 5th-6th synchronizer hub.

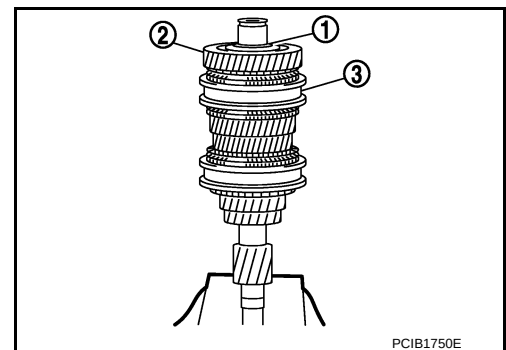


# INPUT SHAFT AND GEAR


< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]


5. Remove snap ring (1).
6. Remove spacer, 5th baulk ring, 5th input gear (2), and spacer.

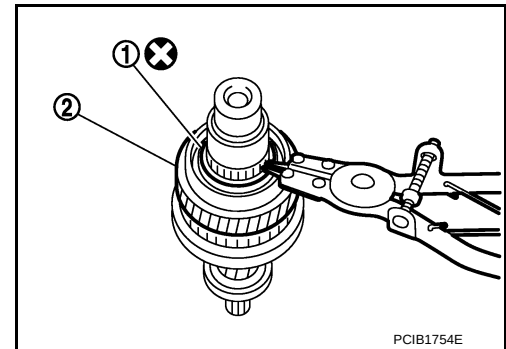


7. Remove snap ring (1).
8. Remove spacer, 4th input gear (2), 4th baulk ring, and 3rd-4th synchronizer hub assembly (3).
9. Remove insert keys and 3rd-4th coupling sleeve from 3rd-4th synchronizer hub.

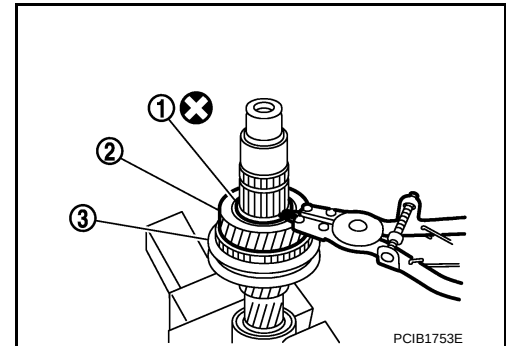

10. Remove snap ring (1).
11. Remove spacer, 3rd baulk ring, and 3rd input gear (2).

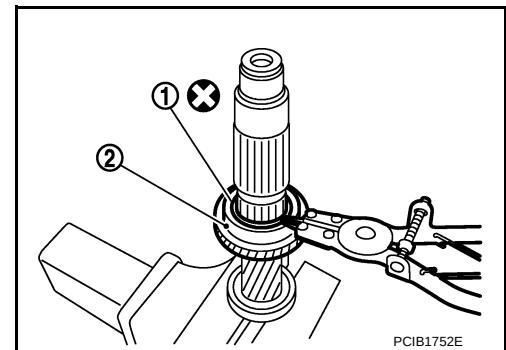

12. Set a puller [Commercial service tool] to input shaft front bearing (1), and then remove input shaft front bearing.

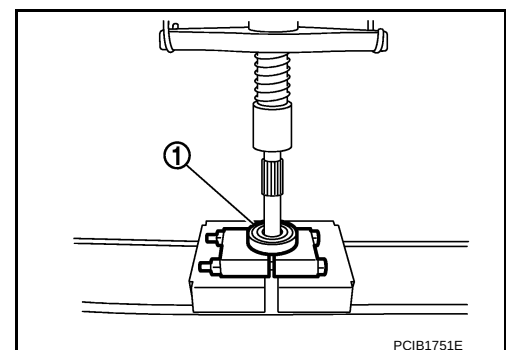

INFOID:0000000011463598

## Assembly

Note the following procedures, and assemble in the reverse order of disassembly.

### CAUTION:


- Replace transaxle assembly when replacing input shaft.

## INPUT SHAFT AND GEAR

### < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]


- For installation of snap ring, set snap ring pliers and flat pliers at both sides of snap ring. While expanding snap ring with snap ring pliers, move snap ring with flat pliers.
- Never reuse snap ring.
- Check that snap ring is securely installed in a groove.
- Replace 3rd-4th coupling sleeve and 3rd-4th synchronizer hub as a set.
- Replace 5th-6th coupling sleeve and 5th-6th synchronizer hub as a set.

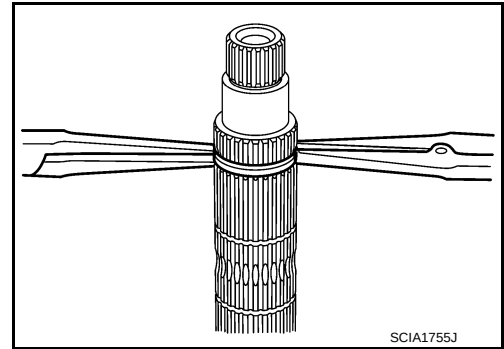

- Be careful to install 3rd-4th synchronizer hub according to the specified direction.

A : 3rd input gear side


B : 4th input gear side

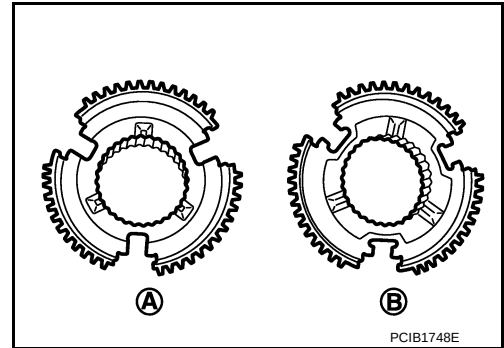


- Be careful to install 5th-6th synchronizer hub according to the specified direction.

A : 5th input gear side

B : 6th input gear side

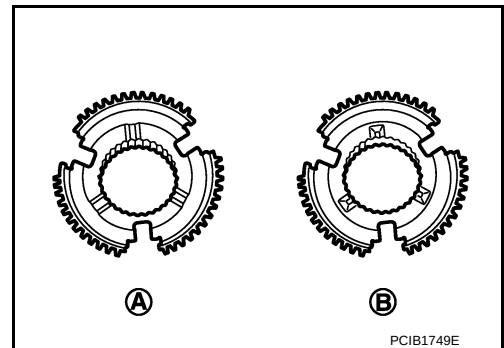

- Install input shaft front bearing (1), using a drift (A) [Commercial service tool].

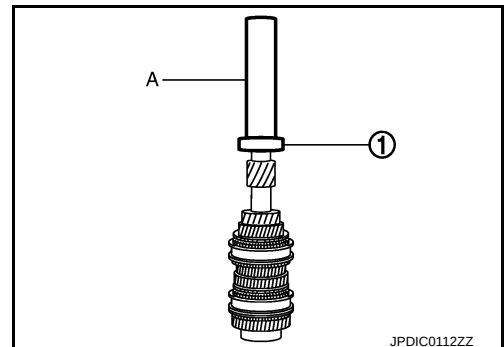




# INPUT SHAFT AND GEAR

## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

- Install input shaft rear bearing (1), using a drift (A) [Commercial service tool] and the drift (B) [SST: ST36720030 ( - )].
- Apply gear oil to 3rd baulk ring, 4th baulk ring, 5th baulk ring, and 6th baulk ring.

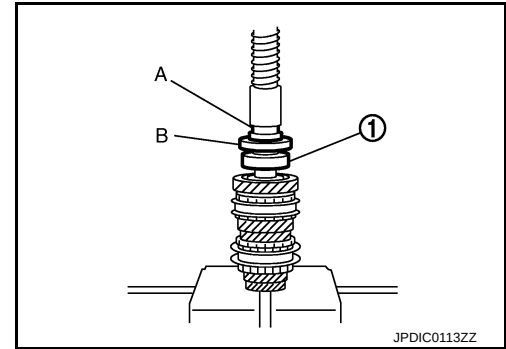


- Install input shaft rear bearing mounting bolt (1), as per the following procedure.

### CAUTION:

**Follow the procedures. Otherwise it may cause a transaxle malfunction.**

1. Fix the drift (A) [SST: KV32300QAM ( - )] in a vise, and then set input shaft assembly.
2. Install input shaft rear bearing mounting bolt, and then tighten it to the specified torque of the first step.
3. Loosen input shaft rear bearing mounting bolt by a half turn.
4. Tighten input shaft rear bearing mounting bolt to the specified torque of the final step.

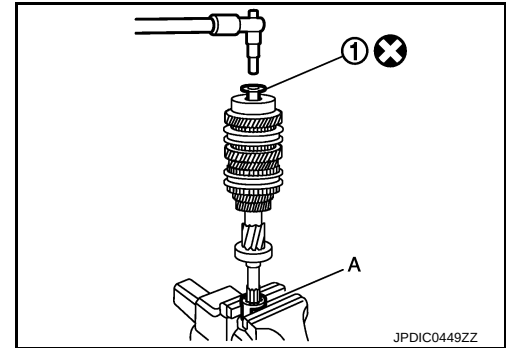

## Inspection


INFOID:0000000011463599

## INSPECTION AFTER DISASSEMBLY

### Input Shaft and Gear

Check the following items and replace if necessary.


- Damage, peeling, bend, uneven wear, and distortion of shaft.
- Excessive wear, damage, and peeling of gear.

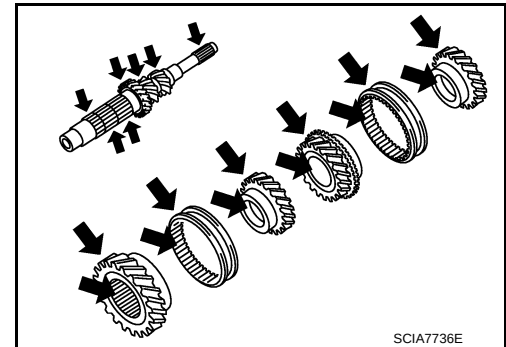

### Synchronizer Hub and Coupling Sleeve

Check the following items and replace if necessary.

- Breakage, damage, and unusual wear on contact surface of coupling sleeve, synchronizer hub, and insert key.
- Coupling sleeve and synchronizer hub move smoothly.

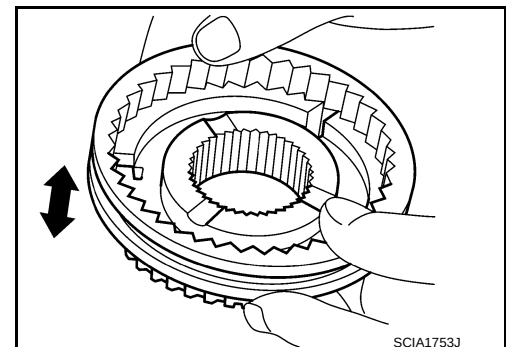


### Baulk Ring

## INPUT SHAFT AND GEAR

### < UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F94R]

Check contact surface of baulk ring cam and insert key for excessive wear, uneven wear, bend, and damage. Replace if necessary.

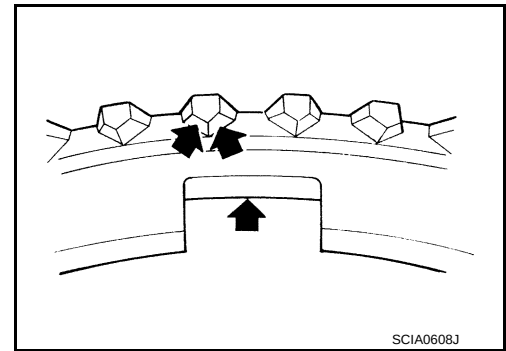

### Bearing

Check bearing for damage and unsmooth rotation. Replace if necessary.

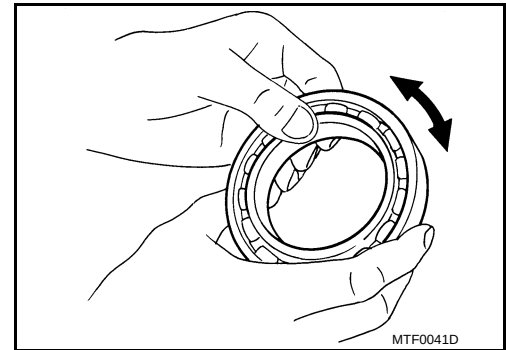

# MAINSHAFT AND GEAR


< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

## MAINSHAFT AND GEAR

### Exploded View

INFOID:0000000011463600

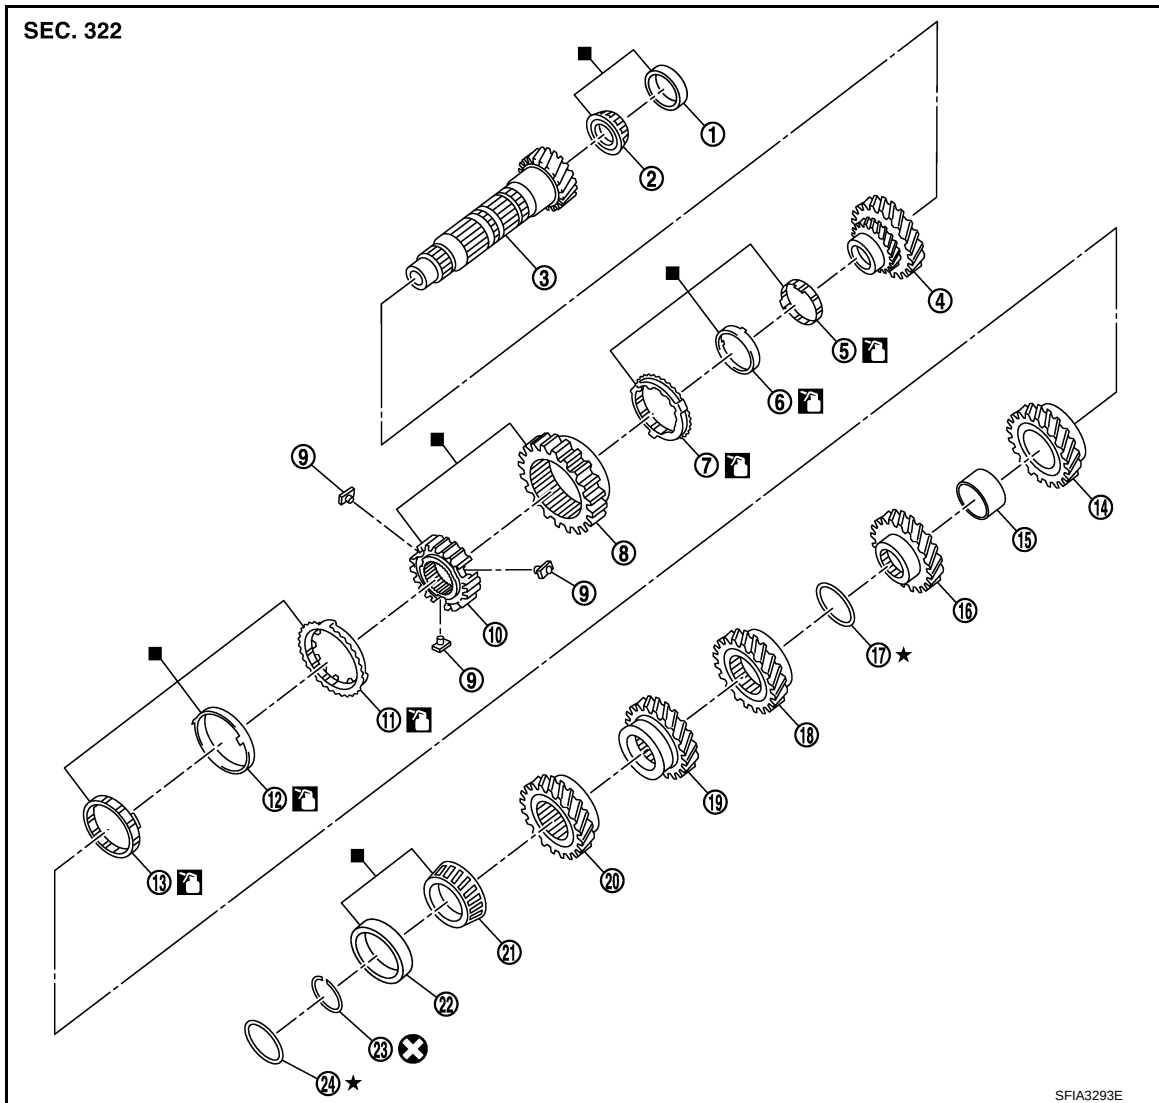

- |                                       |                                       |                                           |
|---------------------------------------|---------------------------------------|-------------------------------------------|
| 1. Mainshaft front bearing outer race | 2. Mainshaft front bearing inner race | 3. Mainshaft                              |
| 4. 1st main gear                      | 5. 1st inner baulk ring               | 6. 1st synchronizer cone                  |
| 7. 1st outer baulk ring               | 8. 1st-2nd coupling sleeve            | 9. Insert key                             |
| 10. 1st-2nd synchronizer hub          | 11. 2nd outer baulk ring              | 12. 2nd synchronizer cone                 |
| 13. 2nd inner baulk ring              | 14. 2nd main gear                     | 15. Bushing                               |
| 16. 3rd main gear                     | 17. Mainshaft adjusting shim          | 18. 4th main gear                         |
| 19. 5th main gear                     | 20. 6th main gear                     | 21. Mainshaft rear bearing inner race     |
| 22. Mainshaft rear bearing outer race | 23. Snap ring                         | 24. Mainshaft rear bearing adjusting shim |



: Apply gear oil.



: Replace the parts as a set.



★ : Select with proper thickness.



⊗ : Always replace after every disassembly.

# MAINSHAFT AND GEAR

< UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F94R]

## Disassembly


INFOID:000000011463601

### CAUTION:


- Fix mainshaft in a vise with back plate, and then remove gears and snap rings.
- For removal of snap ring, set snap ring pliers and flat pliers at both sides of snap ring. While expanding snap ring with snap ring pliers, move snap ring with flat pliers.
- Disassemble gear components putting direction marks on the parts that never affect any functions.

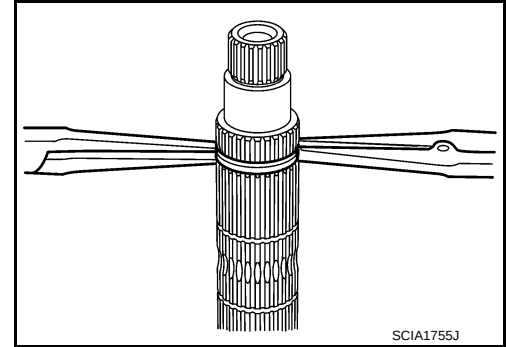


1. Remove snap ring (1).

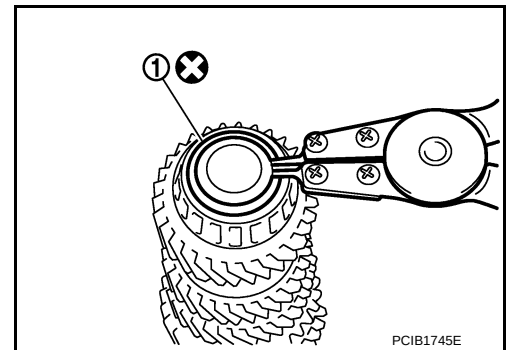

2. Remove 6th main gear (1) and mainshaft rear bearing inner race (2), as per the following procedure.
  - a. Set a puller [Commercial service tool] to 6th main gear.
  - b. Remove mainshaft rear bearing inner race and 6th main gear, using the drift (A) [SST: ST33052000 ( - )].

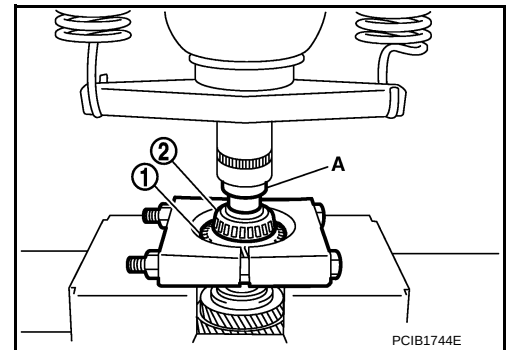

3. Remove 4th main gear (1) and 5th main gear (2), as per the following procedure.
  - a. Set a puller [Commercial service tool] to 4th main gear.
  - b. Remove 5th main gear and 4th main gear, using the drift (A) [SST: ST33052000 ( - )].
4. Remove mainshaft adjusting shim.


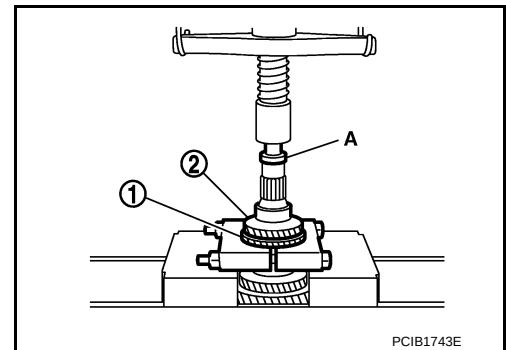


# MAINSHAFT AND GEAR

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

5. Remove 1st main gear (1), 1st-2nd synchronizer hub assembly (2), 2nd main gear (3), and 3rd main gear (4), as per the following procedure.
  - a. Set a puller [Commercial service tool] to 1st main gear.
  - b. Remove 3rd main gear, busing, 2nd main gear, 2nd inner baulk ring, 2nd synchronizer cone, 2nd outer baulk ring, 1st-2nd synchronizer hub assembly, 1st outer baulk ring, 1st synchronizer cone, 1st inner baulk ring, and 1st main gear, using the drift (A) [SST: ST33052000 ( - )].
  - c. Remove insert keys and 1st-2nd coupling sleeve from 1st-2nd synchronizer hub.
6. Remove mainshaft front bearing inner race (1), as per the following procedure.
  - a. Set a puller [Commercial service tool] to mainshaft front bearing inner race.
  - b. Remove mainshaft front bearing inner race, using the drift (A) [SST: ST33052000 ( - )].

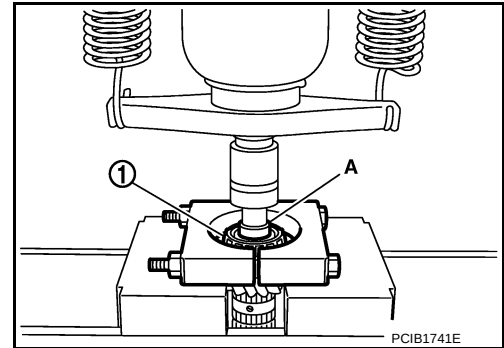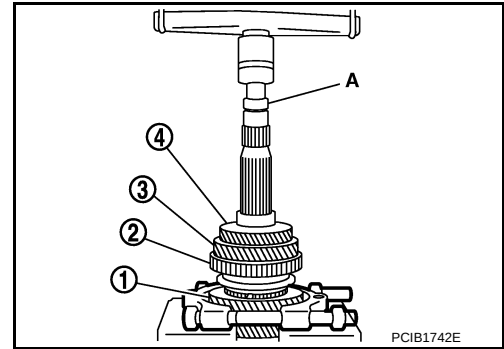


INFOID:0000000011463602

## Assembly

### CAUTION:

- Select mainshaft rear bearing adjusting shim, as per the following procedure when replacing mainshaft adjusting shim, 6th main gear, 5th main gear, or 4th main gear.
- Replace mainshaft adjusting shim.
- If new mainshaft adjusting shim is thinner than previous one, offset the thickness difference by selecting thicker mainshaft rear bearing adjusting shim.
- If new mainshaft adjusting shim is thicker than previous one, offset the thickness difference by selecting thinner mainshaft rear bearing adjusting shim.
- Replace 6th main gear, 5th main gear, or 4th main gear.
- Measure the thickness of the main gear used before and the new main gear
- Increase the thickness of the mainshaft rear bearing adjusting shim, if the difference is smaller than 0.025 mm (0.0010 in).
- Replace transaxle assembly when replacing mainshaft.
- For installation of snap ring, set snap ring pliers and flat pliers at both sides of snap ring. While expanding snap ring with snap ring pliers, move snap ring with flat pliers.

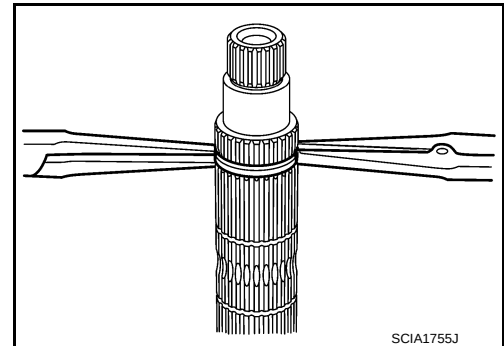

# MAINSHAFT AND GEAR

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

1. Install mainshaft front bearing inner race (1), using the drift (A) [SST: ST36720030 ( - )].

**CAUTION:**

**Replace mainshaft front bearing outer race and mainshaft front bearing inner race as a set.**

2. Apply gear oil to 1st inner baulk ring, 1st synchronizer cone, 1st outer baulk ring, 2nd inner baulk ring, 2nd synchronizer cone, and 2nd outer baulk ring.

**CAUTION:**

• **Replace 1st inner baulk ring, 1st synchronizer cone, and 1st outer baulk ring as a set.**

• **Replace 2nd inner baulk ring, 2nd synchronizer cone, and 2nd outer baulk ring as a set.**



3. Install insert keys and 1st-2nd coupling sleeve to 1st-2nd synchronizer hub.

**CAUTION:**


**Replace 1st-2nd synchronizer hub and 1st-2nd coupling sleeve as a set.**

4. Install 1st main gear (1), 1st inner baulk ring, 1st synchronizer cone, 1st outer baulk ring, 1st-2nd synchronizer hub assembly (2), 2nd inner baulk ring, 2nd synchronizer cone, and 2nd outer baulk ring.

5. Install bushing (3), using the drift (A) [SST: KV32102700 ( - )].

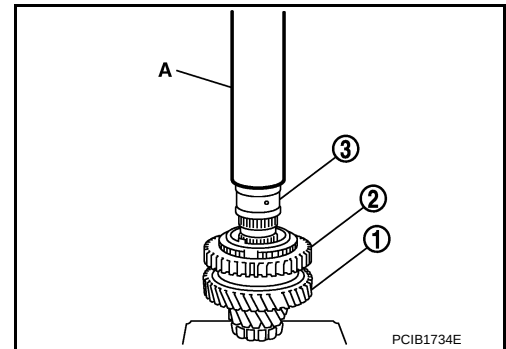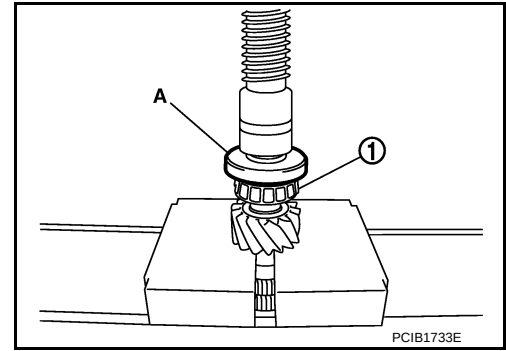

6. Install 3rd main gear (1) and 2nd main gear (2), using the drift (A) [SST: KV32102700 ( - )].

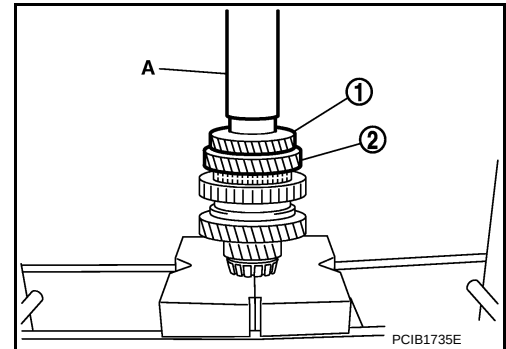


7. Measure dimension "L" as shown in the figure. Select mainshaft adjusting shim (1) according to the following list, and then install it to mainshaft.

2 : Mainshaft

3 : 3rd main gear

Unit: mm (in)

| Dimension "L"                       | Mainshaft adjusting shim thickness |
|-------------------------------------|------------------------------------|
| 147.690 – 147.666 (5.8146 – 5.8136) | 1.500 (0.0591)                     |
| 147.665 – 147.641 (5.8136 – 5.8126) | 1.525 (0.0600)                     |
| 147.640 – 147.616 (5.8126 – 5.8116) | 1.550 (0.0610)                     |
| 147.615 – 147.591 (5.8116 – 5.8107) | 1.575 (0.0620)                     |
| 147.590 – 147.566 (5.8106 – 5.8097) | 1.600 (0.0630)                     |
| 147.565 – 147.541 (5.8096 – 5.8087) | 1.625 (0.0640)                     |
| 147.540 – 147.516 (5.8086 – 5.8077) | 1.650 (0.0650)                     |
| 147.515 – 147.491 (5.8077 – 5.8067) | 1.675 (0.0659)                     |

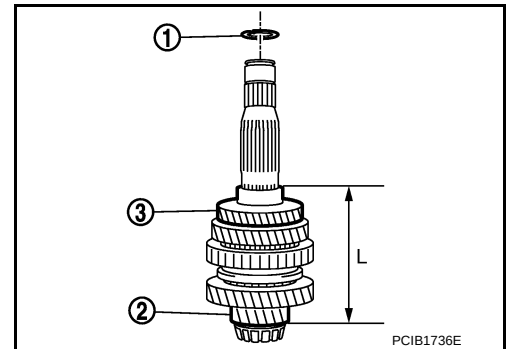


# MAINSHAFT AND GEAR

< UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F94R]

| Dimension "L"                       | Mainshaft adjusting shim thickness |
|-------------------------------------|------------------------------------|
| 147.490 – 147.466 (5.8067 – 5.8057) | 1.700 (0.0669)                     |
| 147.465 – 147.441 (5.8057 – 5.8048) | 1.725 (0.0679)                     |
| 147.440 – 147.416 (5.8047 – 5.8038) | 1.750 (0.0689)                     |
| 147.415 – 147.391 (5.8037 – 5.8028) | 1.775 (0.0699)                     |


8. Install 4th main gear (1), using the drift (A) [SST: KV32102700 (-)].

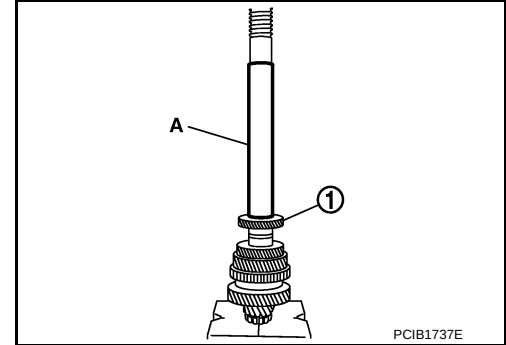

9. Install 5th main gear (1), using the drift (A) [SST: KV32102700 (-)].

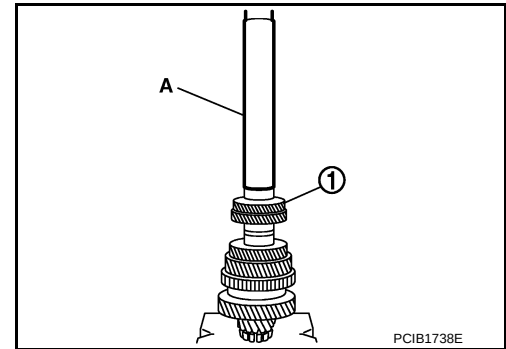

10. Install 6th main gear (1), using the drift (A) [SST: KV32102700 (-)].

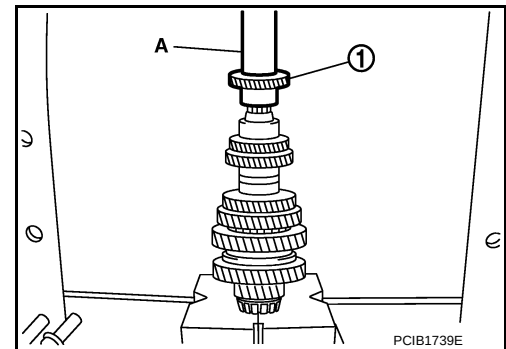

11. Install mainshaft rear bearing inner race (1), using the drift (A) [SST: ST30901000 (J-26010-01)].


**CAUTION:**

**Replace mainshaft rear bearing inner race and mainshaft rear bearing outer race as a set.**

12. Install snap ring.

**CAUTION:**

**Never reuse snap ring.**

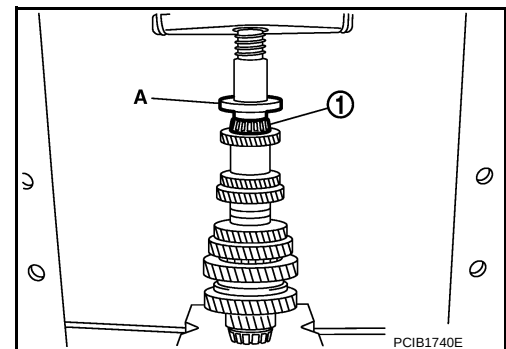

## Inspection

INFOID:0000000011463603

## INSPECTION AFTER DISASSEMBLY

### Mainshaft and Gear


## MAINSHAFT AND GEAR

### < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

Check the following items and replace if necessary.


- Damage, peeling, bend, uneven wear, and distortion of shaft.
- Excessive wear, damage, and peeling of gear.

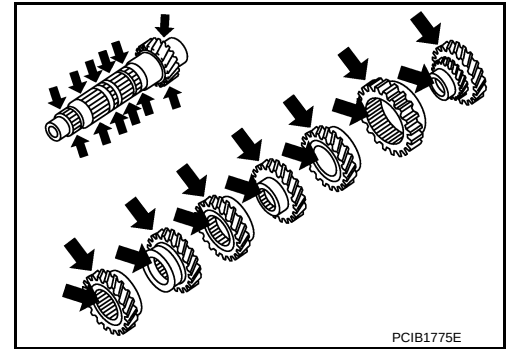

#### Synchronizer Hub and Coupling Sleeve


Check the following items and replace if necessary.

- Breakage, damage, and unusual wear on contact surface of coupling sleeve, synchronizer hub, and insert key.
- Coupling sleeve and synchronizer hub move smoothly.

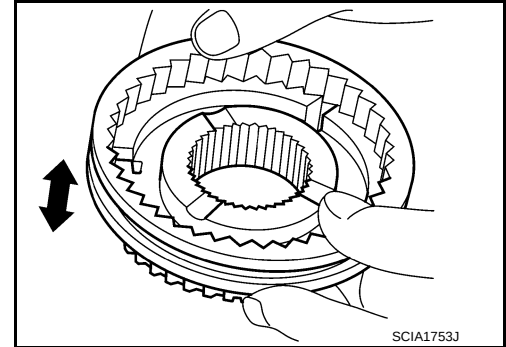

#### Baulk Ring

Check contact surface of baulk ring cam and insert key for excessive wear, uneven wear, bend, and damage. Replace if necessary.

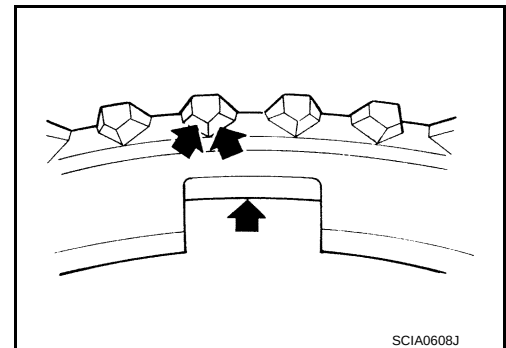


#### Bearing

Check bearing for damage and unsmooth rotation. Replace if necessary.

#### **CAUTION:**

- Replace mainshaft front bearing outer race and mainshaft front bearing inner race as a set.
- Replace mainshaft rear bearing inner race and mainshaft rear bearing outer race as a set.

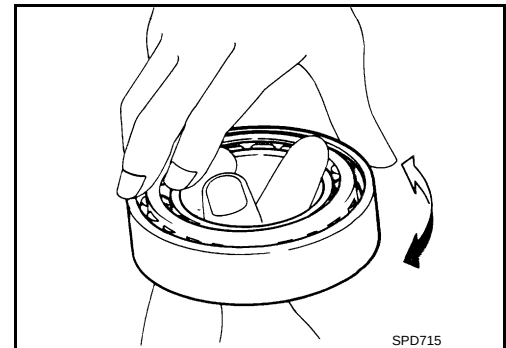



# REVERSE IDLER SHAFT AND GEAR


< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

## REVERSE IDLER SHAFT AND GEAR

### Exploded View

INFOID:0000000011463604

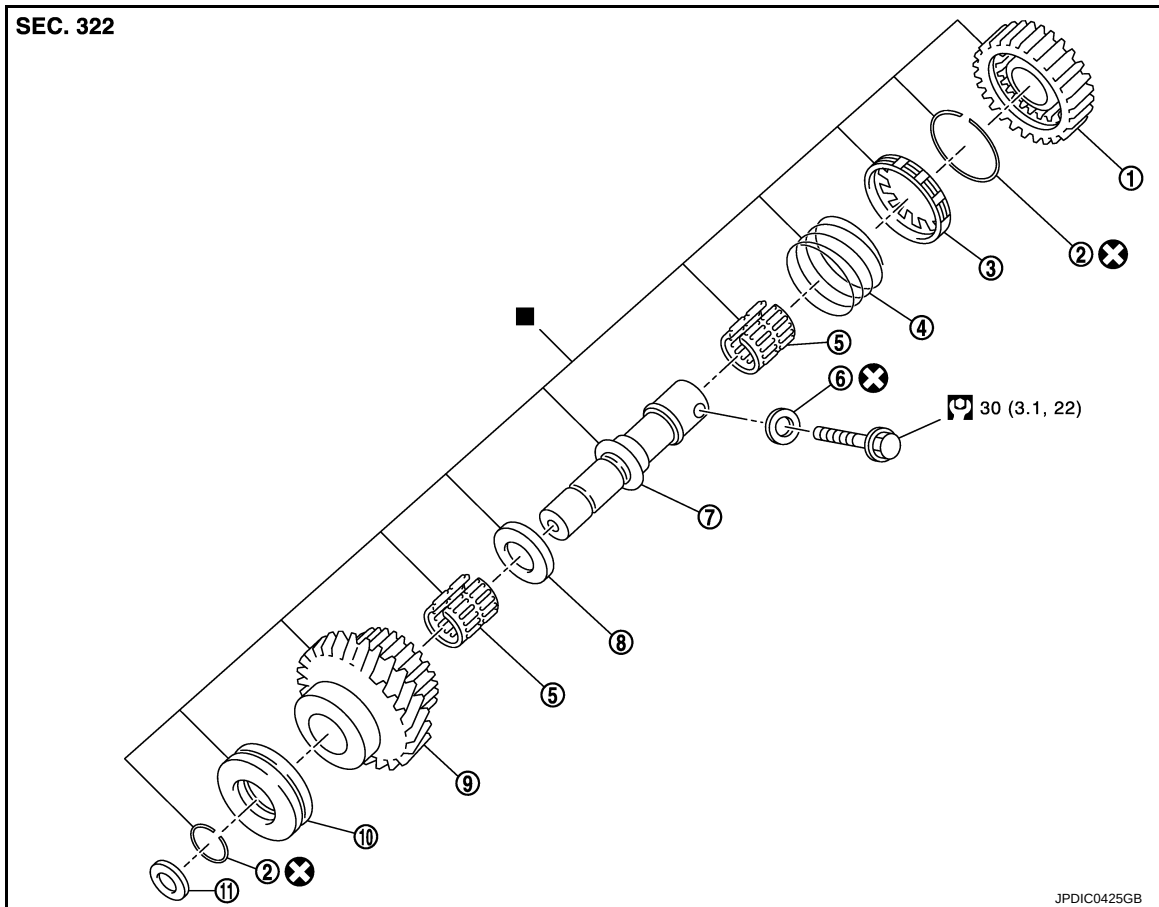

- |                        |                   |                       |
|------------------------|-------------------|-----------------------|
| 1. Reverse output gear | 2. Snap ring      | 3. Reverse baulk ring |
| 4. Return spring       | 5. Needle bearing | 6. Seal washer        |
| 7. Reverse idler shaft | 8. Spacer         | 9. Reverse input gear |
| 10. Lock washer        | 11. Spring washer |                       |

■ : Replace the parts as a set.


⊗ : Always replace after every disassembly.

Ⓐ : N·m (kg-m, ft-lb)

### Disassembly

INFOID:0000000011463605

1. Remove reverse output gear (1).

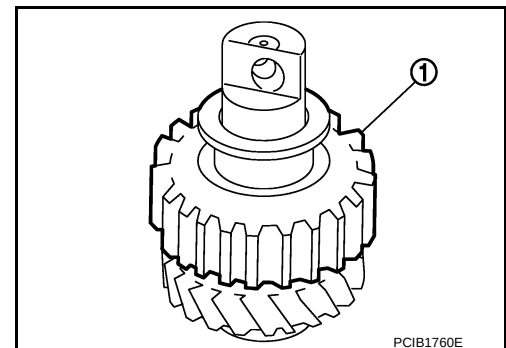


PCIB1760E

## REVERSE IDLER SHAFT AND GEAR


< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]


2. Remove snap ring (1).

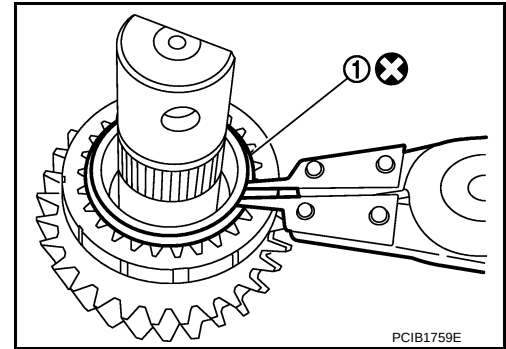


3. Remove reverse baulk ring (1) and return spring (2).

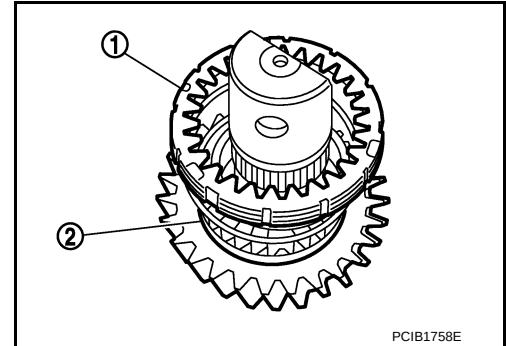

4. Remove snap ring (1), lock washer (2), and reverse input gear (3).

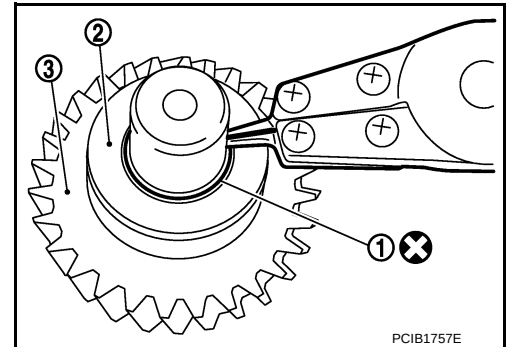

5. Remove needle bearings (1) and washer.

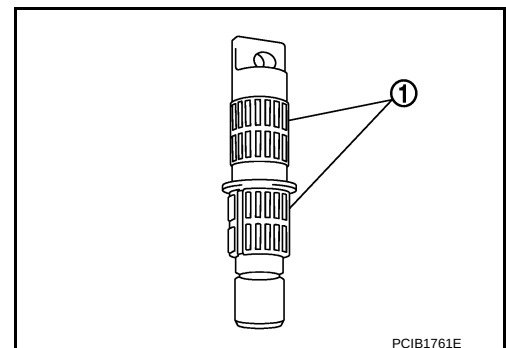

INFOID:0000000011463606

### Assembly

Note the following procedures, and assemble in the reverse order of disassembly.

#### CAUTION:

- Never reuse snap ring.
- Check that snap ring is securely installed in a groove.
- Replace reverse output gear, snap ring, reverse baulk ring, return spring, needle bearing, reverse idler shaft, spacer, reverse input gear, and lock washer as a set.

### Inspection

INFOID:0000000011463607

### INSPECTION AFTER DISASSEMBLY

# REVERSE IDLER SHAFT AND GEAR

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

## Shaft and Gear

Check the following items. Replace reverse output gear, snap ring, reverse baulk ring, return spring, needle bearing, reverse idler shaft, spacer, reverse input gear, and lock washer as a set, if necessary.

- Damage, peeling, bend, uneven wear, and distortion of shaft
- Excessive wear, damage, and peeling of gear

## Bearing

Check damage and rotation of bearing. Replace reverse output gear, snap ring, reverse baulk ring, return spring, needle bearing, reverse idler shaft, spacer, reverse input gear, and lock washer as a set, if necessary.


A  
B  
C  
  
E  
  
F  
  
G  
  
H  
  
I  
  
J  
  
K  
  
L  
  
M  
  
N  
  
O  
  
P

TM

## FINAL DRIVE

### Exploded View

INFOID:000000011463608

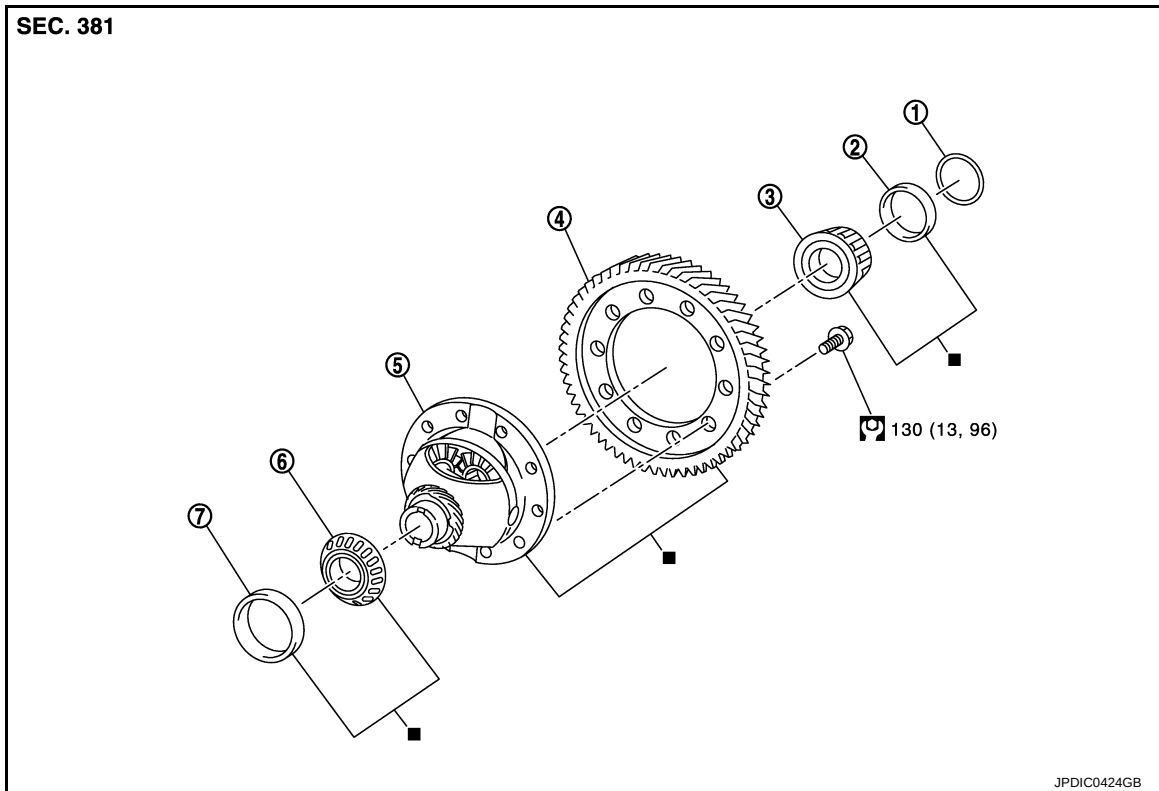

- |                                                               |                                                               |                                                               |
|---------------------------------------------------------------|---------------------------------------------------------------|---------------------------------------------------------------|
| 1. Shim                                                       | 2. Differential side bearing outer race (transaxle case side) | 3. Differential side bearing inner race (transaxle case side) |
| 4. Final gear                                                 | 5. Differential case                                          | 6. Differential side bearing inner race (clutch housing side) |
| 7. Differential side bearing outer race (clutch housing side) |                                                               |                                                               |


■ : Replace the parts as a set.

Ⓒ : N·m (kg-m, ft-lb)

### Disassembly

INFOID:000000011463609

1. Remove differential side bearing inner race (clutch housing side) (1), as per the following procedure.
  - a. Set a puller [Commercial service tool] to differential side bearing inner race (clutch housing side).
  - b. Remove differential side bearing inner race (clutch housing side), using the drift (A) [SST: ST33061000 (J-8107-2)].

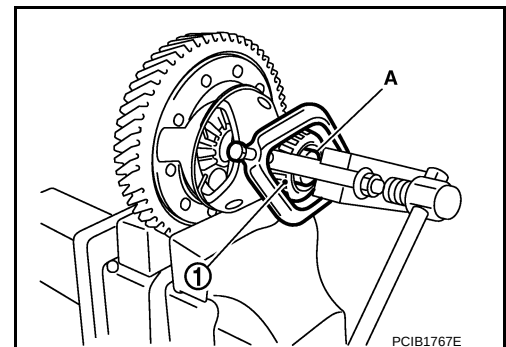


## FINAL DRIVE


### < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

2. Remove final gear mounting bolts, and then remove final gear (1).

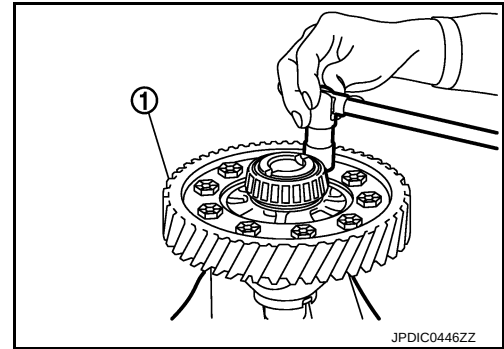

3. Remove differential side bearing inner race (transaxle case side) (1), as per the following procedure.
  - a. Set a puller [Commercial service tool] to differential side bearing inner race (transaxle case side).
  - b. Remove differential side bearing inner race (transaxle case side), using a drift (A) [Commercial service tool].

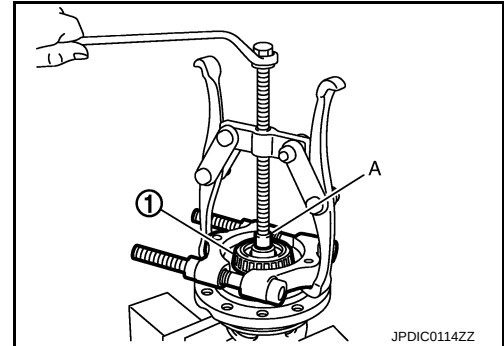

INFOID:0000000011463610

### Assembly

1. Install final gear, and then tighten final gear mounting bolts to the specified torque.


#### **CAUTION:**

**Replace final gear and differential case as a set.**

2. Install differential side bearing inner race (clutch housing side), using a drift (A) [Commercial service tool].

#### **CAUTION:**


**Replace differential side bearing inner race (clutch housing side) and differential side bearing outer race (clutch housing side) as a set.**

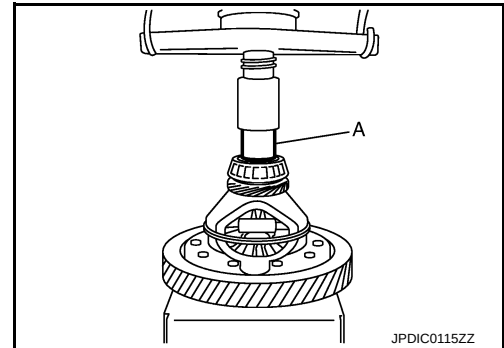

3. Install differential side bearing inner race (transaxle case side), using a drift (A) [Commercial service tool].

#### **CAUTION:**

**Replace differential side bearing inner race (transaxle case side) and differential side bearing outer race (transaxle case side) as a set.**

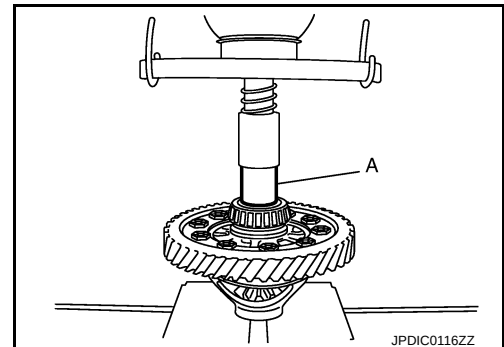

INFOID:0000000011463611

### Inspection

#### INSPECTION AFTER DISASSEMBLY

##### Gear and Case

Check final gear and differential case. Replace if necessary.


## FINAL DRIVE

### < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F94R]

#### Bearing

Check bearing for damage and unsmooth rotation. Replace if necessary.

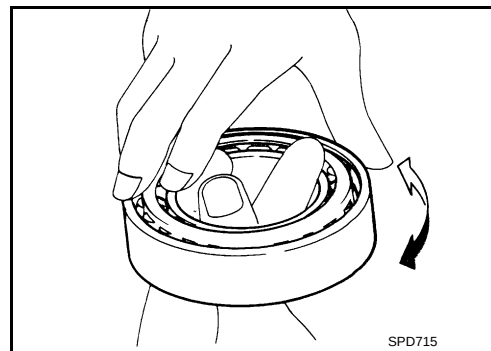

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[6MT: RS6F94R]

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### General Specifications

INFOID:0000000011463612

|                                           |                          |                            |                                                                                                                                            |
|-------------------------------------------|--------------------------|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| Transaxle type                            |                          |                            | RS6F94R                                                                                                                                    |
| Engine type                               |                          |                            | MR16DDT                                                                                                                                    |
| Axle type                                 |                          |                            | 2WD                                                                                                                                        |
| Number of speed                           |                          |                            | 6                                                                                                                                          |
| Synchromesh type                          |                          |                            | Warner                                                                                                                                     |
| Shift pattern                             |                          |                            | <div><div><div>R</div><div>1</div><div>3</div><div>5</div><div>2</div><div>4</div><div>6</div><div>N</div></div><div>PCIB1769E</div></div> |
| Gear ratio                                | 1st                      |                            | 3.7273                                                                                                                                     |
|                                           | 2nd                      |                            | 2.1053                                                                                                                                     |
|                                           | 3rd                      |                            | 1.5185                                                                                                                                     |
|                                           | 4th                      |                            | 1.1714                                                                                                                                     |
|                                           | 5th                      |                            | 0.9143                                                                                                                                     |
|                                           | 6th                      |                            | 0.7674                                                                                                                                     |
|                                           | Reverse                  |                            | 3.6865                                                                                                                                     |
|                                           | Final gear               |                            | 3.9333                                                                                                                                     |
| Number of teeth                           | Input gear               | 1st                        | 11                                                                                                                                         |
|                                           |                          | 2nd                        | 19                                                                                                                                         |
|                                           |                          | 3rd                        | 27                                                                                                                                         |
|                                           |                          | 4th                        | 35                                                                                                                                         |
|                                           |                          | 5th                        | 35                                                                                                                                         |
|                                           |                          | 6th                        | 43                                                                                                                                         |
|                                           |                          | Reverse                    | 11                                                                                                                                         |
|                                           | Main gear                | 1st                        | 41                                                                                                                                         |
|                                           |                          | 2nd                        | 40                                                                                                                                         |
|                                           |                          | 3rd                        | 41                                                                                                                                         |
|                                           |                          | 4th                        | 41                                                                                                                                         |
|                                           |                          | 5th                        | 32                                                                                                                                         |
|                                           |                          | 6th                        | 33                                                                                                                                         |
|                                           |                          | Reverse                    | 42                                                                                                                                         |
|                                           | Reverse idler gear       | Input/Output               | 28/29                                                                                                                                      |
|                                           | Final gear               | Final gear/Pinion          | 59/15                                                                                                                                      |
|                                           |                          | Side gear/Pinion mate gear | 13/10                                                                                                                                      |
| Oil capacity (Reference)ℓ (US pt, Imp pt) |                          |                            | Approx. 2.0 (4-1/4, 3-1/2)                                                                                                                 |
| Remarks                                   | Reverse synchronizer     |                            | Installed                                                                                                                                  |
|                                           | Triple-cone synchronizer |                            | 1st and 2nd                                                                                                                                |

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011688422

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Procedure without Cowl Top Cover

INFOID:000000011688423

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

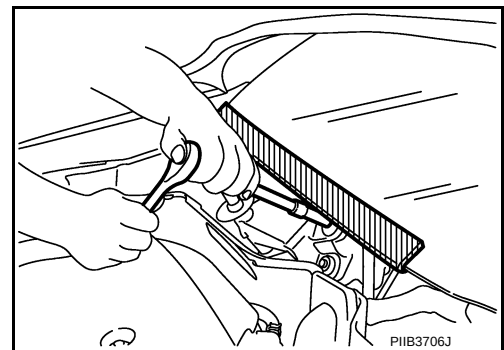



## PRECAUTIONS

< PRECAUTION >

[6MT: RS6F52H]

### Precautions for Removing Battery Terminal

INFOID:0000000011688424

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

**NOTE:**

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


**NOTE:**

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

**NOTE:**

The removal of 12V battery may cause a DTC detection error.

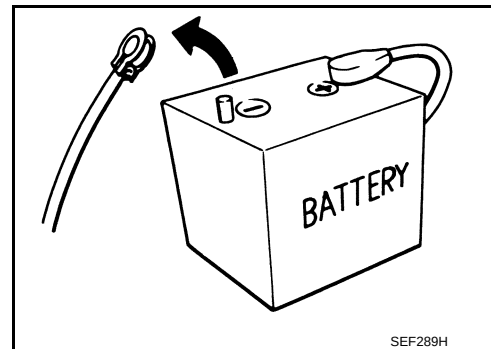

### Precaution for Work

INFOID:0000000011463615

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components.
  - Water soluble dirt: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the dirty area. Then rub with a soft and dry cloth.
  - Oily dirt: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the dirty area. Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol, or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

### Service Notice or Precaution

INFOID:0000000011463616

- Do not reuse transaxle oil, once it has been drained.
- Check oil level or replace oil with vehicle on level surface.
- During removal or installation, keep inside of transaxle clear of dust or dirt.
- Check for the correct installation status prior to removal or disassembly. If matching marks are required, be certain they do not interfere with the function of the parts they are applied.
- In principle, tighten bolts or nuts gradually in several steps working diagonally from inside to outside. If tightening sequence is specified, use it.
- Be careful not to damage sliding surfaces and mating surfaces.

# PREPARATION

< PREPARATION >

[6MT: RS6F52H]



 


## PREPARATION

### PREPARATION

#### Special Service Tool

INFOID:0000000011463618






The actual shapes of TechMate tools may differ from those of special service tools illustrated here.
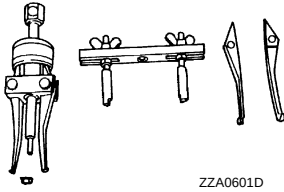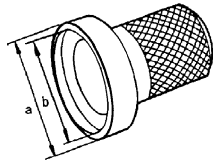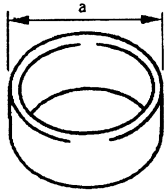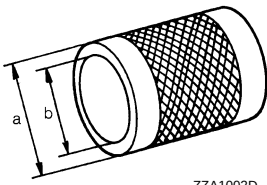
| Tool number<br>(TechMate No.)<br>Tool name |                                                                                     | Description                                                                                                                                                                                                                                                                                                                                                          |
|--------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| KV381054S0<br>(J-34286)<br>Puller          |    | <ul style="list-style-type: none"> <li>Removing differential side bearing outer race (clutch housing side)</li> <li>Removing differential side bearing outer race (transaxle case side)</li> <li>Removing mainshaft front bearing</li> </ul>                                                                                                                         |
| ST33400001<br>(J-26082)<br>Drift           |    | Installing differential side oil seal (clutch housing side)<br><b>a: 60 mm (2.36 in) dia.</b><br><b>b: 47 mm (1.85 in) dia.</b>                                                                                                                                                                                                                                      |
| ST35321000<br>( — )<br>Drift               |  | <ul style="list-style-type: none"> <li>Installing input shaft oil seal</li> <li>Installing reverse main gear</li> <li>Installing 1st main gear bushing</li> <li>Installing 1st-2nd synchronizer hub assembly</li> <li>Installing 2nd main gear bushing</li> <li>Installing 3rd main gear</li> </ul> <b>a: 49 mm (1.93 in) dia.</b><br><b>b: 41 mm (1.61 in) dia.</b> |
| KV40105320<br>( — )<br>Drift               |  | Installing differential side bearing outer race (clutch housing side)<br><b>a: 88 mm (3.46 in) dia.</b>                                                                                                                                                                                                                                                              |
| ST33200000<br>(J-26082)<br>Drift           |  | <ul style="list-style-type: none"> <li>Installing mainshaft front bearing</li> <li>Installing 6th input gear bushing</li> <li>Installing 4th main gear</li> <li>Installing 5th main gear</li> <li>Installing 6th main gear</li> </ul> <b>a: 60 mm (2.36 in) dia.</b><br><b>b: 44.5 mm (1.752 in) dia.</b>                                                            |

# PREPARATION
   
< PREPARATION >






[6MT: RS6F52H]
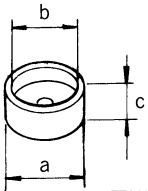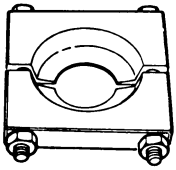
| Tool number<br>(TechMate No.)<br>Tool name |                                                                                                 | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                   |
|--------------------------------------------|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|
| ST30720000<br>(J-25405)<br>Drift           | <br>ZZA0811D   | <ul style="list-style-type: none"> <li>Installing differential side oil seal (transaxle case side)</li> <li>Installing differential side bearing outer race (clutch housing side)</li> <li>Installing differential side bearing outer race (transaxle case side)</li> <li>Installing mainshaft rear bearing</li> <li>Installing differential side bearing (clutch housing side)</li> <li>Installing differential side bearing (transaxle case side)</li> </ul> <p><b>a: 77 mm (3.03 in) dia.</b><br/><b>b: 55.5 mm (2.185 in) dia.</b></p>                                                    | A<br>B<br>C<br>TM |
| ST33061000<br>(J-8107-2)<br>Drift          | <br>ZZA1000D   | <ul style="list-style-type: none"> <li>Installing bore plug</li> <li>Removing differential side bearing (transaxle case side)</li> <li>Removing differential side bearing (clutch housing side)</li> </ul> <p><b>a: 38 mm (1.50 in) dia.</b><br/><b>b: 28.5 mm (1.122 in) dia.</b></p>                                                                                                                                                                                                                                                                                                        | E<br>F<br>G       |
| ST33052000<br>( — )<br>Drift               | <br>ZZA1023D  | <ul style="list-style-type: none"> <li>Removing input shaft rear bearing</li> <li>Removing 6th input gear, 6th input gear bushing, 5th-6th synchronizer hub assembly, and 5th input gear</li> <li>Removing 5th input gear bushing, 4th input gear, 4th input gear bushing, 3rd-4th synchronizer hub assembly, and 3rd input gear</li> <li>Installing input shaft front bearing</li> <li>Removing mainshaft rear bearing</li> <li>Removing 6th main gear</li> <li>Removing 4th main gear and 5th main gear</li> </ul> <p><b>a: 22 mm (0.87 in) dia.</b><br/><b>b: 28 mm (1.10 in) dia.</b></p> | H<br>I<br>J       |
| KV40105020<br>( — )<br>Drift               | <br>ZZA1133D | <p>Removing 3rd main gear, 2nd main gear, 2nd main gear bushing, 1st-2nd synchronizer hub assembly, 1st main gear, 1st main gear bushing, and reverse main gear</p> <p><b>a: 39.7 mm (1.563 in) dia.</b><br/><b>b: 35 mm (1.38 in) dia.</b><br/><b>c: 15 mm (0.59 in)</b></p>                                                                                                                                                                                                                                                                                                                 | K<br>L<br>M       |
| ST30031000<br>(J-22912-01)<br>Puller       | <br>ZZA0537D | Measuring wear of inner baulk ring                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | N<br>O<br>P       |

# PREPARATION

< PREPARATION >

[6MT: RS6F52H]

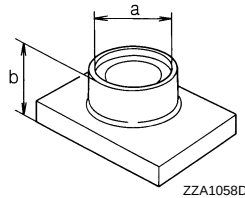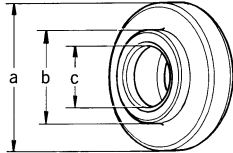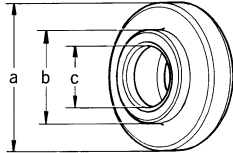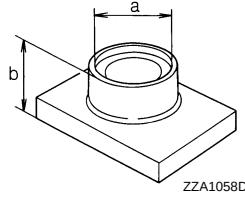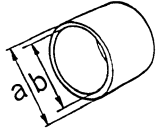
| Tool number<br>(TechMate No.)<br>Tool name |                                                                                     | Description                                                                                                                                                                                                                                                                                                                                                                                |
|--------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| KV40105710<br>( — )<br>Press stand         |    | <ul style="list-style-type: none"> <li>Installing 3rd-4th synchronizer hub assembly</li> <li>Installing 4th input gear bushing</li> <li>Installing 5th input gear bushing</li> <li>Installing 5th-6th synchronizer hub assembly</li> <li>Installing 2nd main gear bushing</li> <li>Installing 3rd main gear</li> </ul> <p><b>a: 46 mm (1.81 in) dia.</b><br/><b>b: 41 mm (1.61 in)</b></p> |
| ST30901000<br>(J-26010-01)<br>Drift        |    | <ul style="list-style-type: none"> <li>Installing input shaft rear bearing</li> <li>Installing 4th main gear</li> <li>Installing 5th main gear</li> <li>Installing 6th main gear</li> <li>Installing mainshaft rear bearing</li> </ul> <p><b>a: 79 mm (3.11 in) dia.</b><br/><b>b: 45 mm (1.77 in) dia.</b><br/><b>c: 35.2 mm (1.386 in) dia.</b></p>                                      |
| ST30032000<br>(J-26010-01)<br>Drift        |   | <p>Installing input shaft front bearing</p> <p><b>a: 80 mm (3.15 in) dia.</b><br/><b>b: 38 mm (1.50 in) dia.</b><br/><b>c: 31 mm (1.22 in) dia.</b></p>                                                                                                                                                                                                                                    |
| ST38220000<br>( — )<br>Press stand         |  | <ul style="list-style-type: none"> <li>Installing reverse main gear</li> <li>Installing 1st main gear bushing</li> <li>Installing 1st-2nd synchronizer hub assembly</li> </ul> <p><b>a: 63 mm (2.48 in) dia.</b><br/><b>b: 65 mm (2.56 in)</b></p>                                                                                                                                         |
| KV40101630<br>(J-35870)<br>Drift           |  | <p>Installing reverse main gear</p> <p><b>a: 68 mm (2.68 in) dia.</b><br/><b>b: 60 mm (2.36 in) dia.</b></p>                                                                                                                                                                                                                                                                               |

# PREPARATION


< PREPARATION >

[6MT: RS6F52H]

| Tool number<br>(TechMate No.)<br>Tool name | Description                                                                                                                                                                                                                                                                                                                                       |
|--------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| KV38102510<br>( — )<br>Drift               | <ul style="list-style-type: none"> <li>Installing 1st main gear bushing</li> <li>Installing 1st-2nd synchronizer hub assembly</li> <li>Installing differential side bearing (transaxle case side)</li> <li>Installing differential side bearing (clutch housing side)</li> </ul> <b>a: 71 mm (2.80 in) dia.</b><br><b>b: 65 mm (2.56 in) dia.</b> |
| —<br>( J-46534 )<br>Trim tool set          | For removing trim                                                                                                                                                                                                                                                                                                                                 |

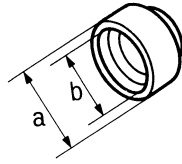

ZZA0838D

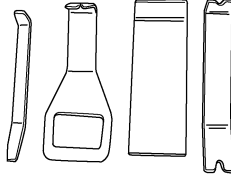


AWJIA0483ZZ


## Commercial Service Tool

 INFOID:0000000011463619


| Tool name | Description                                                                                      |
|-----------|--------------------------------------------------------------------------------------------------|
| Pin punch | Removing and installing retaining pin<br><b>a: 4.5 mm (0.177 in) dia.</b>                        |
| Pin punch | Removing and installing retaining pin of selector lever<br><b>a: 5.5 mm (0.217 in) dia.</b>      |
| Pin punch | Removing and installing retaining pin of each shifter lever<br><b>a: 7.5 mm (0.295 in) dia.</b>  |
| Drift     | Installing striking rod oil seal and shifter lever oil seal<br><b>a: 24.5 mm (0.965 in) dia.</b> |




NT410

 

NT410

 

NT410



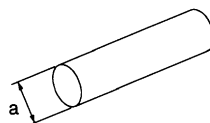


S-NT063

# PREPARATION

< PREPARATION >

[6MT: RS6F52H]

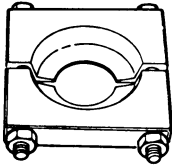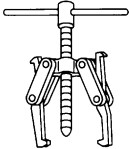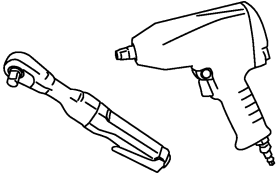
| Tool name                                                                                                            | Description                                     |
|----------------------------------------------------------------------------------------------------------------------|-------------------------------------------------|
| <p>Puller</p>  <p>ZZA0537D</p>      | <p>Removing each bearing, gear, and bushing</p> |
| <p>Puller</p>  <p>NT077</p>         | <p>Removing each bearing, gear, and bushing</p> |
| <p>Power tool</p>  <p>PBIC0190E</p> | <p>Loosening bolts and nuts</p>                 |

## SYSTEM DESCRIPTION

### STRUCTURE AND OPERATION

#### Sectional View

INFOID:0000000011463620

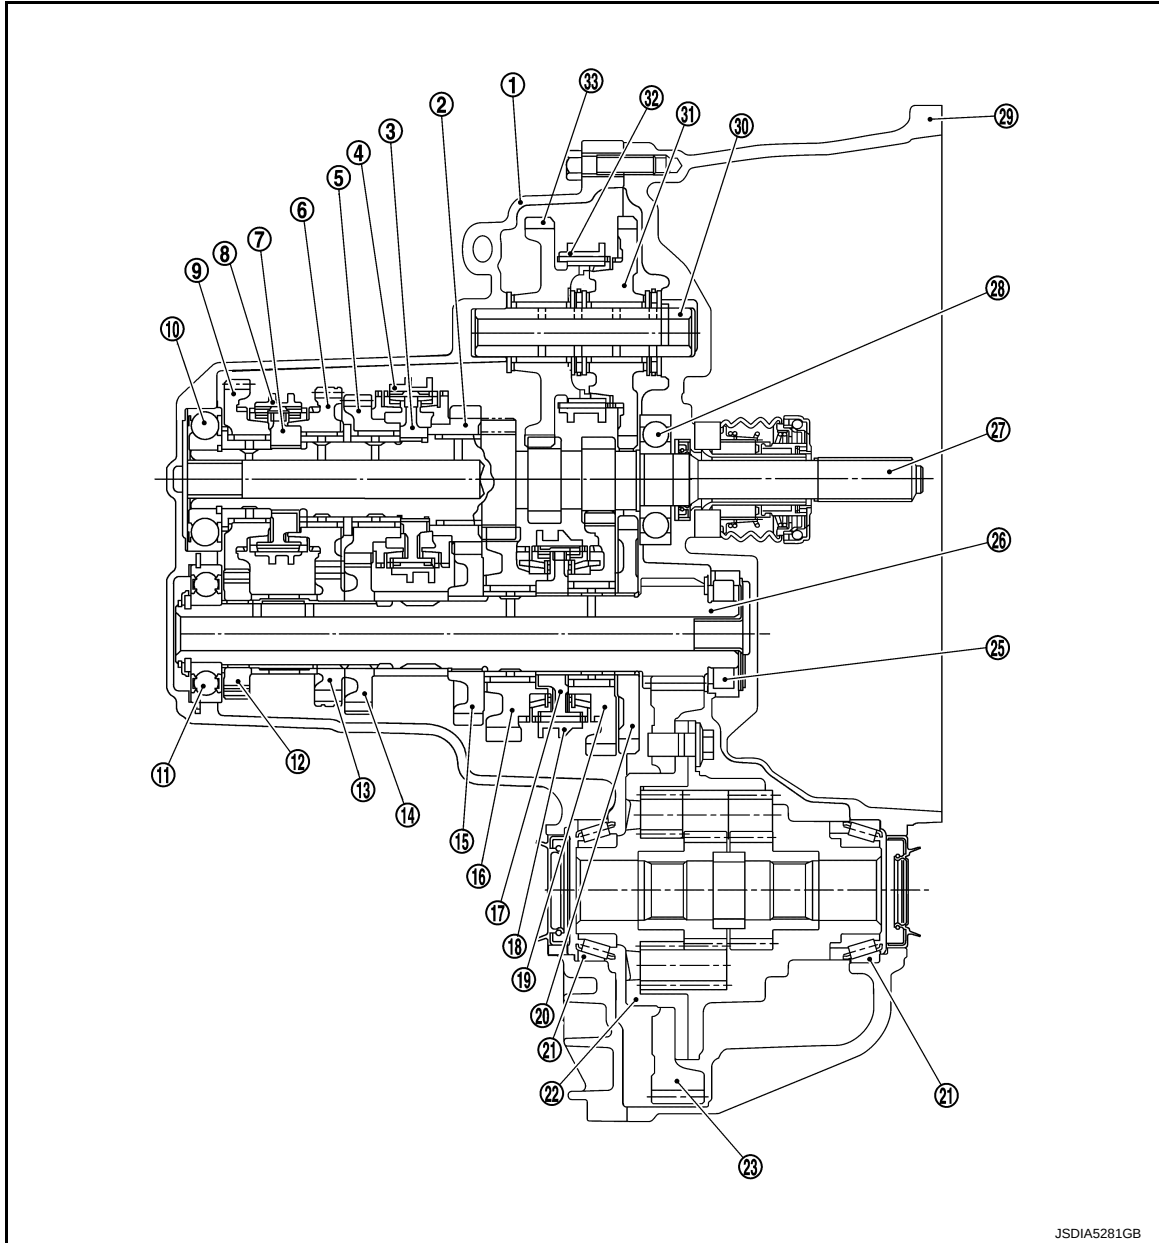

- |                                |                              |                                |
|--------------------------------|------------------------------|--------------------------------|
| 1. Transaxle case              | 2. 3rd input gear            | 3. 3rd-4th synchronizer hub    |
| 4. 3rd-4th coupling sleeve     | 5. 4th input gear            | 6. 5th input gear              |
| 7. 5th-6th synchronizer hub    | 8. 5th-6th coupling sleeve   | 9. 6th input gear              |
| 10. Input shaft rear bearing   | 11. Mainshaft rear bearing   | 12. 6th main gear              |
| 13. 5th main gear              | 14. 4th main gear            | 15. 3rd main gear              |
| 16. 2nd main gear              | 17. 1st-2nd synchronizer hub | 18. 1st-2nd coupling sleeve    |
| 19. 1st main gear              | 20. Reverse main gear        | 21. Differential side bearing  |
| 22. Differential case assembly | 23. Final gear               | 24. Mainshaft front bearing    |
| 25. Mainshaft                  | 26. Input shaft              | 27. Input shaft front bearing  |
| 28. Clutch housing             | 29. Reverse idler shaft      | 30. Reverse idler gear (front) |
| 31. Reverse coupling sleeve    | 32. Reverse idler gear(rear) |                                |

JSDIA5281GB

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[6MT: RS6F52H]

## System Description


INFOID:000000011463621

### DOUBLE-CONE SYNCHRONIZER

Double-cone synchronizer is adopted for 3rd gear to reduce operating force of the control lever.

### TRIPLE-CONE SYNCHRONIZER


Triple-cone synchronizer are adopted for 1st and 2nd gears to reduce operating force of the control lever.

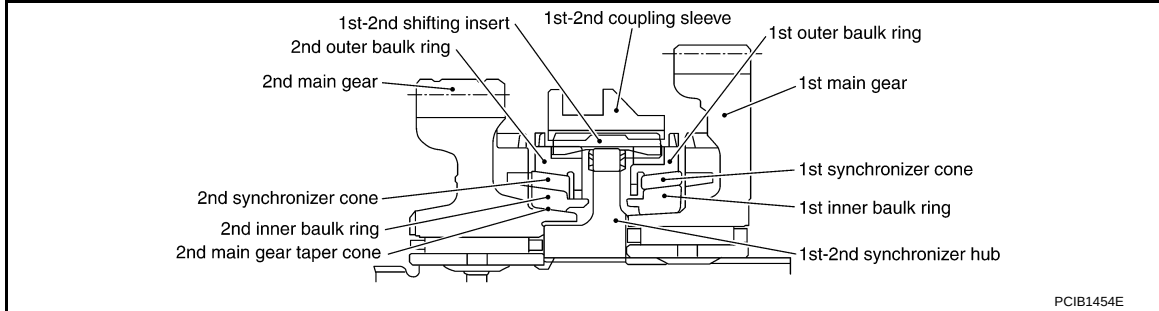

### REVERSE GEAR NOISE PREVENTION FUNCTION (SYNCHRONIZING METHOD)

Reverse gear can be matched smoothly in a structure by setting synchronizer hub (1) of reverse idler gear (rear), reverse coupling sleeve (2), reverse baulk ring (3), and reverse insert spring (4) to reverse idler gears, and letting reverse gear be synchronized.

- 5 : Reverse idler gear (rear)
- 6 : Reverse idler gear (front)

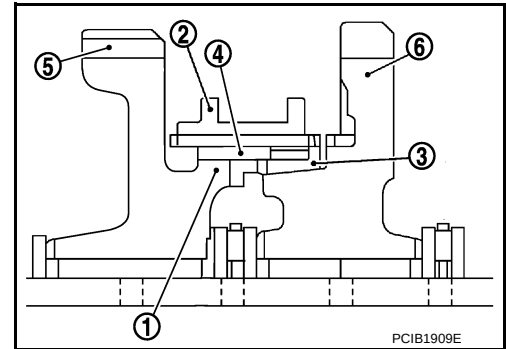



# POSITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[6MT: RS6F52H]

## DTC/CIRCUIT DIAGNOSIS

### POSITION SWITCH

#### BACK-UP LAMP SWITCH

#### BACK-UP LAMP SWITCH : Component Inspection

INFOID:0000000011463622

#### 1.CHECK BACK-UP LAMP SWITCH

1. Disconnect position switch connector. Refer to [TM-81, "Removal and Installation"](#).
2. Check continuity between position switch terminals.

| Gear position  | Continuity |
|----------------|------------|
| Reverse        | Yes        |
| Except reverse | No         |

1 : Park/Neutral position (PNP) switch

2 : Back-up lamp switch

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace position switch. Refer to [TM-81, "Removal and Installation"](#).

#### PARK/NEUTRAL POSITION (PNP) SWITCH

#### PARK/NEUTRAL POSITION (PNP) SWITCH : Component Inspection

INFOID:0000000011463623

#### 1.CHECK PARK/NEUTRAL POSITION (PNP) SWITCH



1. Disconnect position switch connector. Refer to [TM-81, "Removal and Installation"](#).
2. Check continuity between position switch terminals.

| Gear position  | Continuity |
|----------------|------------|
| Neutral        | Yes        |
| Except neutral | No         |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace position switch.

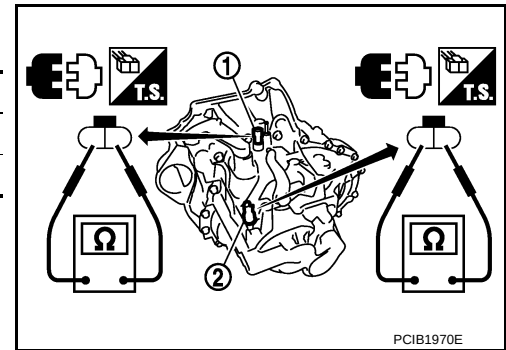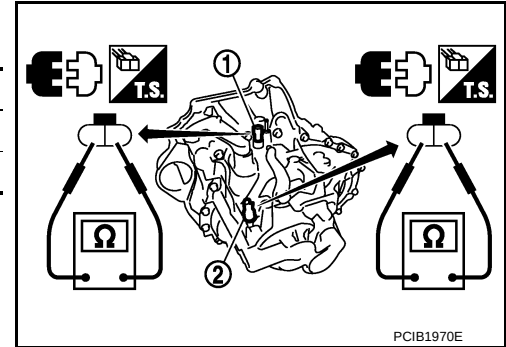

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[6MT: RS6F52H]

## SYMPTOM DIAGNOSIS

### NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

#### NVH Troubleshooting Chart

INFOID:000000011463624

Use the chart below to help you find the cause of the symptom. The numbers indicate the order of the inspection. If necessary, repair or replace these parts.

| SUSPECTED PARTS<br>(Possible cause) |                                 | OIL (Oil level is low.) |   |   | OIL (Wrong oil.) |   | OIL (Oil level is high.) |                       | GASKET (Damaged) |   | OIL SEAL (Worn or damaged) |  | SHIFT CONTROL LINKAGE (Worn) |  | STRIKING ROD ASSEMBLY (Worn or damaged) |                                                                                                                           | SHIFT FORK (Worn) |   | GEAR (Worn or damaged) |  | BEARING (Worn or damaged) |   | BAULK RING (Worn or damaged) |  | INSERT SPRING (Damaged) |  |
|-------------------------------------|---------------------------------|-------------------------|---|---|------------------|---|--------------------------|-----------------------|------------------|---|----------------------------|--|------------------------------|--|-----------------------------------------|---------------------------------------------------------------------------------------------------------------------------|-------------------|---|------------------------|--|---------------------------|---|------------------------------|--|-------------------------|--|
|                                     |                                 |                         |   |   |                  |   |                          |                       |                  |   |                            |  |                              |  |                                         |                                                                                                                           |                   |   |                        |  |                           |   |                              |  |                         |  |
| Reference page                      |                                 | <a href="#">TM-79</a>   |   |   |                  |   |                          | <a href="#">TM-87</a> |                  |   | <a href="#">TM-82</a>      |  | <a href="#">TM-124</a>       |  |                                         | <a href="#">TM-87</a> , <a href="#">TM-116</a> , <a href="#">TM-124</a> , <a href="#">TM-135</a> , <a href="#">TM-135</a> |                   |   |                        |  |                           |   |                              |  |                         |  |
| Symptoms                            | Noise                           | 1                       | 2 |   |                  |   |                          |                       |                  |   |                            |  |                              |  |                                         |                                                                                                                           |                   | 3 | 3                      |  |                           |   |                              |  |                         |  |
|                                     | Oil leakage                     |                         | 3 | 1 |                  | 2 | 2                        |                       |                  |   |                            |  |                              |  |                                         |                                                                                                                           |                   |   |                        |  |                           |   |                              |  |                         |  |
|                                     | Hard to shift or will not shift |                         | 1 | 1 |                  |   |                          | 2                     |                  |   |                            |  |                              |  |                                         |                                                                                                                           |                   |   |                        |  |                           | 3 |                              |  | 3                       |  |
|                                     | Jumps out of gear               |                         |   |   |                  |   |                          | 1                     | 2                | 3 | 3                          |  |                              |  |                                         |                                                                                                                           |                   |   |                        |  |                           |   |                              |  |                         |  |

# PERIODIC MAINTENANCE

## GEAR OIL

### Inspection

INFOID:0000000011463625

#### OIL LEAKAGE

Make sure that gear oil is not leaking from transaxle or around it.

#### OIL LEVEL

1. Remove filler plug (1) and gasket from transaxle case.
2. Check the oil level from filler plug mounting hole as shown in the figure.

**CAUTION:**


**Never start engine while checking oil level.**

3. Set a gasket on filler plug and then install it to transaxle case.

**CAUTION:**

**Never reuse gasket.**

4. Tighten filler plug to the specified torque. Refer to [TM-87, "Exploded View"](#).

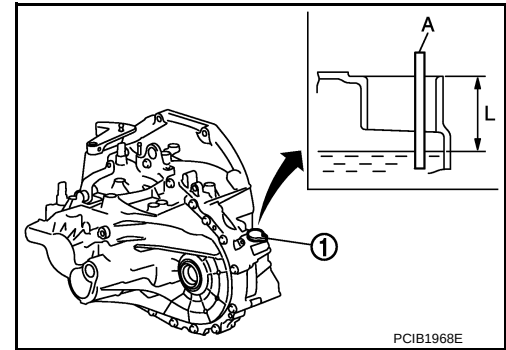

### Draining


INFOID:0000000011463626

1. Start engine and let it run to warm up transaxle.
2. Stop engine. Remove drain plug (1) and gasket, using a socket [Commercial service tool] and then drain gear oil.
3. Set a gasket on drain plug and install it to clutch housing, using a socket [Commercial service tool].

**CAUTION:**

**Never reuse gasket.**

4. Tighten drain plug to the specified torque. Refer to [TM-85, "Exploded View"](#).

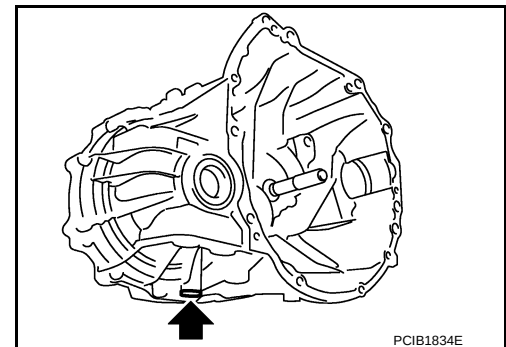

### Refilling

INFOID:0000000011463627

#### Refilling

1. Remove plug (1). Fill the transaxle with new oil and check the oil level (L) using suitable gauge (A) as shown.


**Oil grade and capacity** : Refer to [TM-142, "General Specification"](#).

**Oil level (L)** : 38.5 - 45.5 mm (1.516 - 1.791 in)

2. Install a new O-ring onto plug (1) and then install it to transaxle. Tighten to the specified torque. Refer to [TM-87, "Exploded View"](#).

**CAUTION:**

**Do not reuse O-ring.**

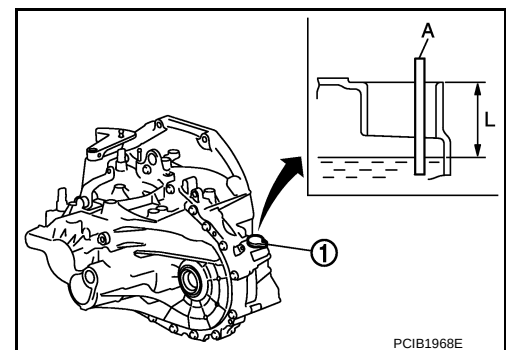

## REMOVAL AND INSTALLATION

### SIDE OIL SEAL

#### Removal and Installation


INFOID:000000011463628

#### REMOVAL

1. Remove front drive shafts from transaxle assembly. Refer to [FAX-27, "2WD : Removal and Installation"](#).
2. Remove differential side oil seal (1) using a suitable tool.

**CAUTION:**

**Do not damage transaxle case and clutch housing.**

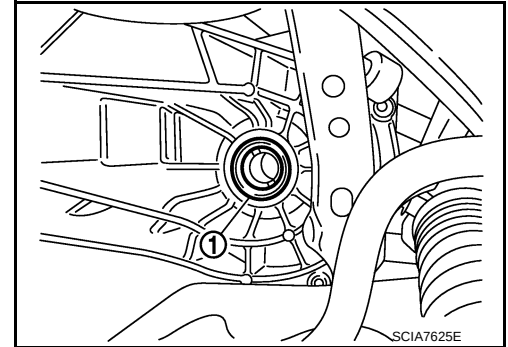

#### INSTALLATION

Installation is in the reverse order of removal.

- Install differential side oil seal to clutch housing and transaxle case to the specified dimension (A) using Tools.

**Dimension A)** : -0.5 - 0.5 mm (-0.020 - 0.020 in)


**Tool numbers** : ST30720000 (J-25405)

: ST33400001 (J-26082)

**CAUTION:**

**Do not reuse oil seal.**

- Check oil level after installation. Refer to [TM-79, "Inspection"](#).

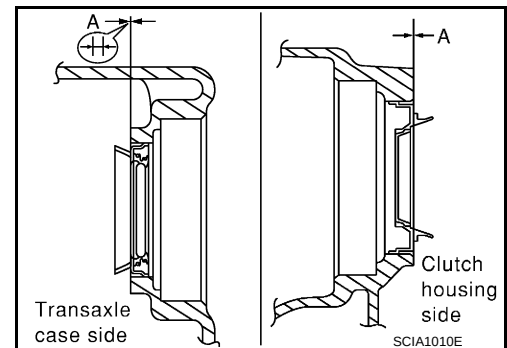

## POSITION SWITCH

### Removal and Installation

INFOID:0000000011463629

#### REMOVAL

1. Remove battery. Refer to [PG-116, "Removal and Installation"](#).
2. Disconnect position switch connector.
3. Remove position switch from transaxle case.

#### INSTALLATION

1. Apply recommended sealant to threads of position switch.
  - Use Genuine Silicone RTV or an equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

#### CAUTION:

**Remove old sealant and oil adhering to threads.**

2. Install position switch to transaxle case.
3. Tighten position switch to the specified torque. Refer to [TM-87, "Exploded View"](#).
4. For the next step and after, install in the reverse order of removal.

### Inspection

INFOID:0000000011463630

#### INSPECTION AFTER INSTALLATION

- Check continuity between position switch terminals. Refer to [TM-77, "BACK-UP LAMP SWITCH : Component Inspection"](#) (Back-up lamp switch) and [TM-77, "PARK/NEUTRAL POSITION \(PNP\) SWITCH : Component Inspection"](#) (PNP switch).
- Check the oil leakage. Refer to [TM-79, "Inspection"](#).

# CONTROL LINKAGE


< REMOVAL AND INSTALLATION >

[6MT: RS6F52H]

## CONTROL LINKAGE

### Exploded View

INFOID:000000011463631

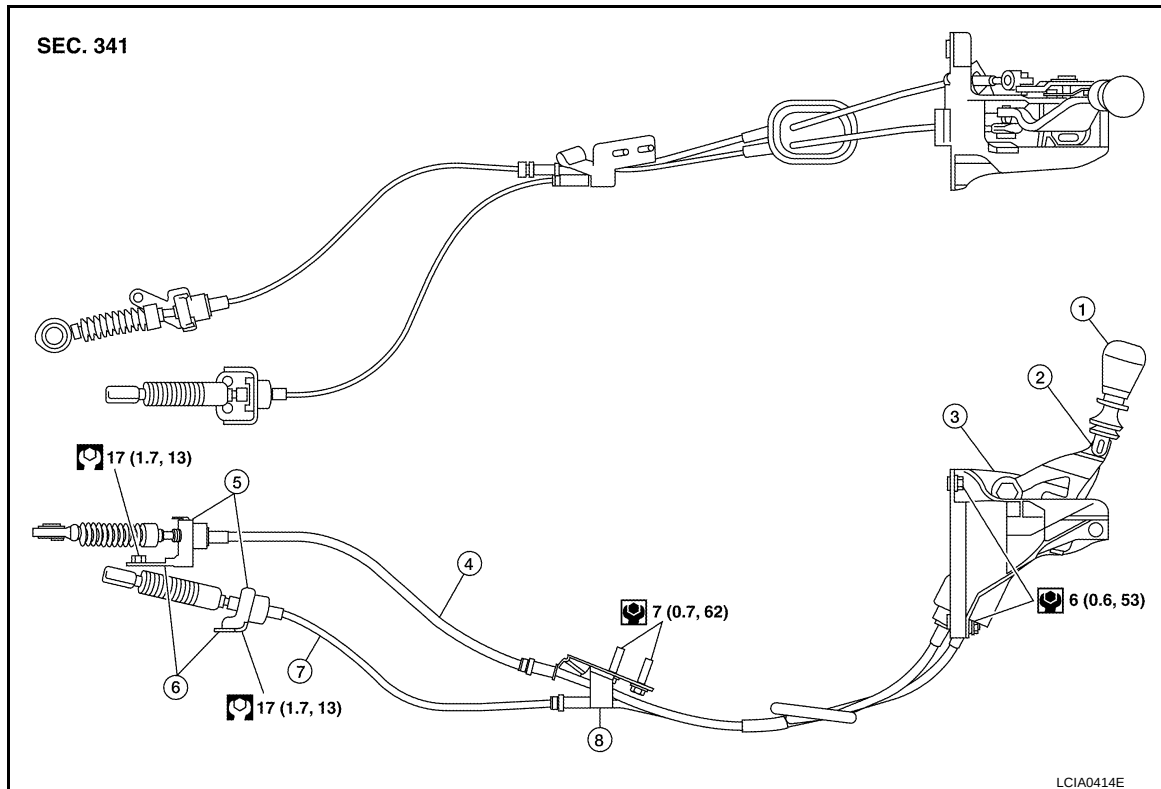

1. Shift selector knob

2. Shift selector

3. Shift selector assembly

4. Select cable

5. Lock plate

6. Cable bracket

7. Shift cable

8. Cable support bracket

 : N·m (kg-m, ft-lb)


 : N·m (kg-m, in-lb)

## Removal and Installation

INFOID:000000011463632

### REMOVAL

1. Remove battery. Refer to [PG-116, "Removal and Installation"](#).
2. Remove air cleaner and air duct. Refer to [EM-27, "Removal and Installation"](#).
3. Remove shift cable from shifter lever as shown.

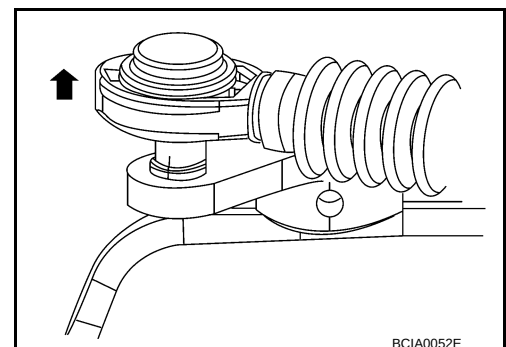


## CONTROL LINKAGE

### < REMOVAL AND INSTALLATION >

[6MT: RS6F52H]

4. Remove select cable from selector lever A as shown.

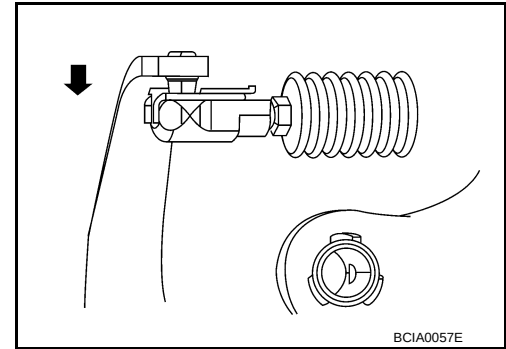


5. Move shift selector to neutral position.  
6. Remove shift selector knob.  
7. Remove center console assembly. Refer to [IP-24, "Removal and Installation"](#).  
8. Remove shift selector assembly nuts.  
9. Remove exhaust front tube, center muffler and heat shield. Refer to [EX-10, "Removal and Installation"](#).  
10. Remove cable support bracket.  
11. Remove select cable and shift cable from cable bracket.  
12. Remove shift selector assembly from the vehicle.

### INSTALLATION

Installation is in the reverse order of removal.

- Securely install each cable to shifter lever and selector lever.
- Be careful about the installation direction, and screw shift selector knob onto shift selector.

⇐: Front

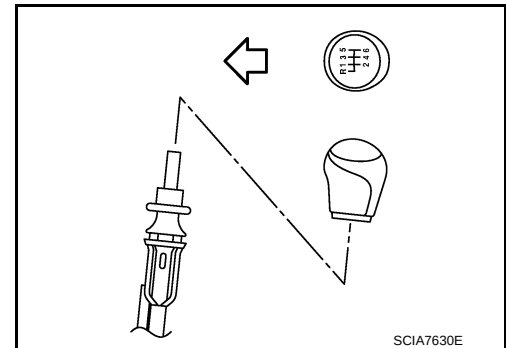

- When shift selector is selected to 1st-2nd side and 5th-6th side, confirm shift selector returns to neutral position smoothly.
- When shift selector is shifted to each position, make sure there is no binding or disconnection in each boot.

# AIR BREATHER HOSE


< REMOVAL AND INSTALLATION >

[6MT: RS6F52H]

## AIR BREATHER HOSE

Exploded View

INFOID:0000000011463633

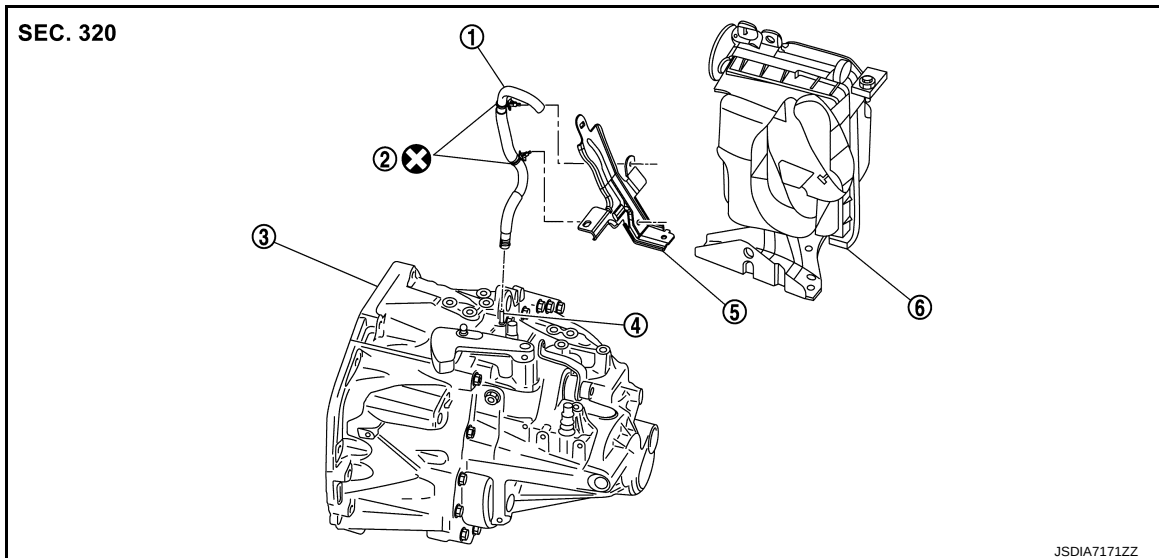

- |                      |            |                       |
|----------------------|------------|-----------------------|
| 1. Air breather hose | 2. Clip    | 3. Transaxle assembly |
| 4. Air breather tube | 5. Bracket | 6. Air cleaner case   |

⊗: Always replace after every disassembly.

## Removal and Installation

INFOID:0000000011463634

### REMOVAL

1. Disconnect clip of air breather hose from bracket.
2. Remove air breather hose from air breather tube of transaxle assembly.

### INSTALLATION

Installation is in the reverse order of removal.

#### CAUTION:

- Make sure there are no pinched or restricted areas on the air breather hose caused by bending or winding when installing it.
- Never reuse clip.
- Be sure to insert air breather hose into air breather tube until hose end reaches the tube's base.
- Set air breather hose with painted mark facing forward.
- Install air breather hose to bracket by fully inserting the clip.




## UNIT REMOVAL AND INSTALLATION

### TRANSAXLE ASSEMBLY

#### Exploded View

INFOID:0000000011463635

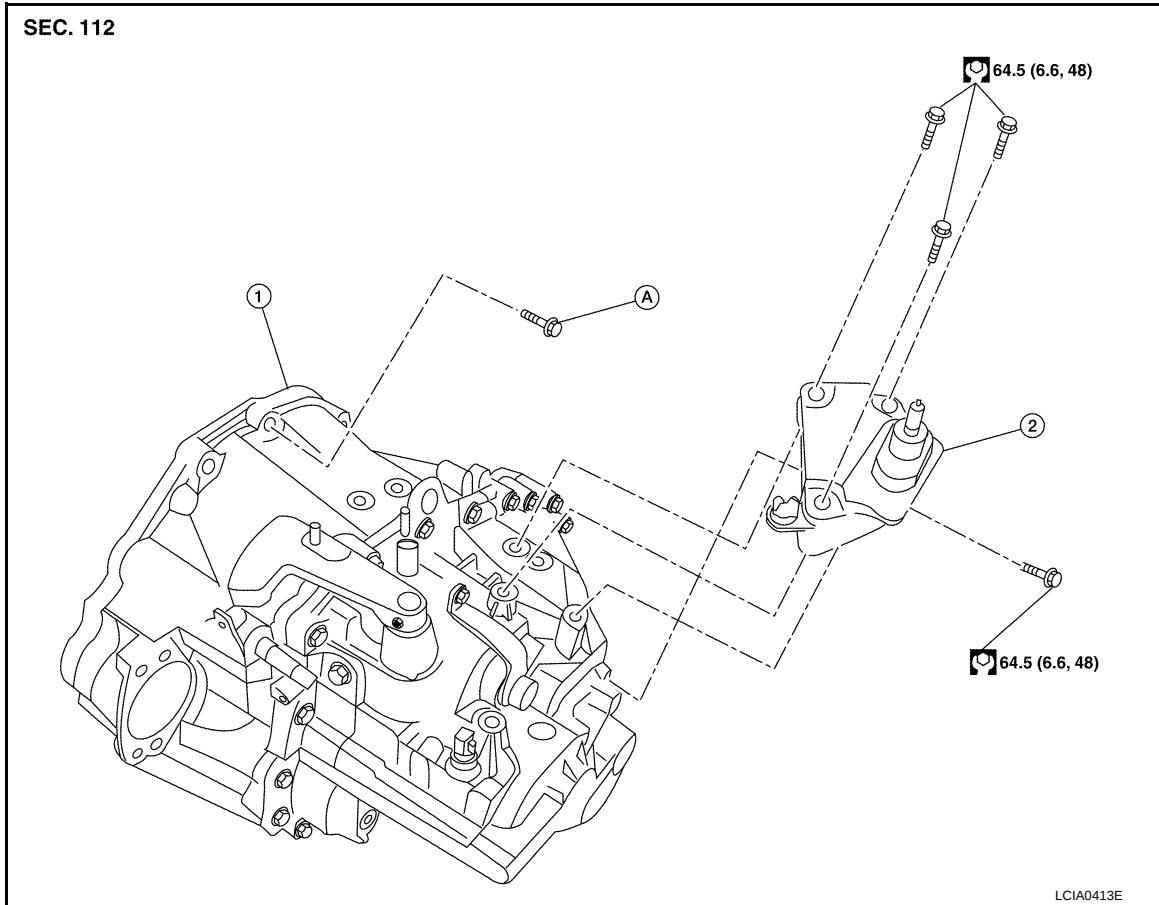

1. Transaxle assembly
2. LH engine mount bracket
- A. Refer to [TM-85. "Removal and Installation"](#).

#### Removal and Installation

INFOID:0000000011463636

#### CAUTION:

If transaxle assembly is removed from the vehicle, always replace CSC (Concentric Slave Cylinder). Inserted CSC returns to the original position when removing transaxle assembly. Dust on clutch disc sliding parts may damage CSC seal, and may cause clutch fluid leakage.

#### REMOVAL

1. Remove clutch tube from CSC. Refer to [CL-17. "Removal and Installation"](#).

#### CAUTION:

Do not depress clutch pedal during removal procedure.

#### NOTE:

Cap or plug opening(s) to prevent fluid from spilling.

2. Remove engine and transaxle assembly. Refer to [EM-63. "2WD : Removal and Installation"](#).
3. Remove starter motor. Refer to [STR-26. "MR16DDT : Removal and Installation"](#).
4. Remove transaxle assembly to engine bolts.
5. Separate transaxle assembly from engine.

#### INSTALLATION

Installation is in the reverse order of removal.

# TRANSAXLE ASSEMBLY

[6MT: RS6F52H]


## < UNIT REMOVAL AND INSTALLATION >

- If transaxle assembly is removed from the vehicle, always replace CSC. Refer to [CL-17, "Removal and Installation"](#).
- When installing the transaxle assembly to the engine, use the specified tightening torque in the numerical sequence shown:

- : Transaxle to engine
- ✕ : Engine to transaxle

### CAUTION:

**When installing transaxle assembly, do not allow the transaxle input shaft to make contact with the clutch cover.**

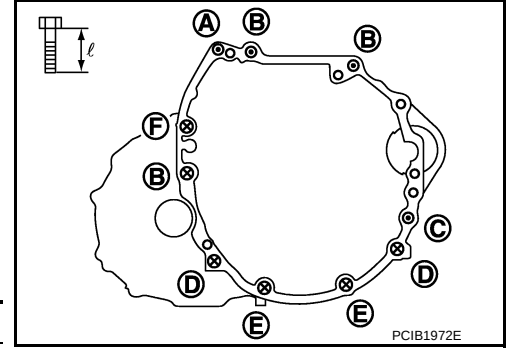

| Bolt symbol                            | A                 | B                 | C                 | D                 | E            | F |
|----------------------------------------|-------------------|-------------------|-------------------|-------------------|--------------|---|
| Quantity                               | 1                 | 3                 | 1                 | 2                 | 2            | 1 |
| Bolt length "ℓ"<br>mm (in)             | 45<br>(1.77)      | 80<br>(3.15)      | 45<br>(1.77)      | 35<br>(1.38)      | 45<br>(1.77) |   |
| Tightening torque<br>N·m (kg·m, ft·lb) | 35.3<br>(3.6, 26) | 74.5<br>(7.6, 55) | 42.6<br>(4.3, 31) | 48.0<br>(4.9, 35) |              |   |

- Bleed the air from the clutch hydraulic system. Refer to [CL-10, "Air Bleeding"](#).
- After installation, check oil level and check for leaks and loose mechanisms. Refer to [TM-79, "Inspection"](#).

# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]


## UNIT DISASSEMBLY AND ASSEMBLY

### TRANSAXLE ASSEMBLY

#### Exploded View

INFOID:000000011463637

#### CASE AND HOUSING

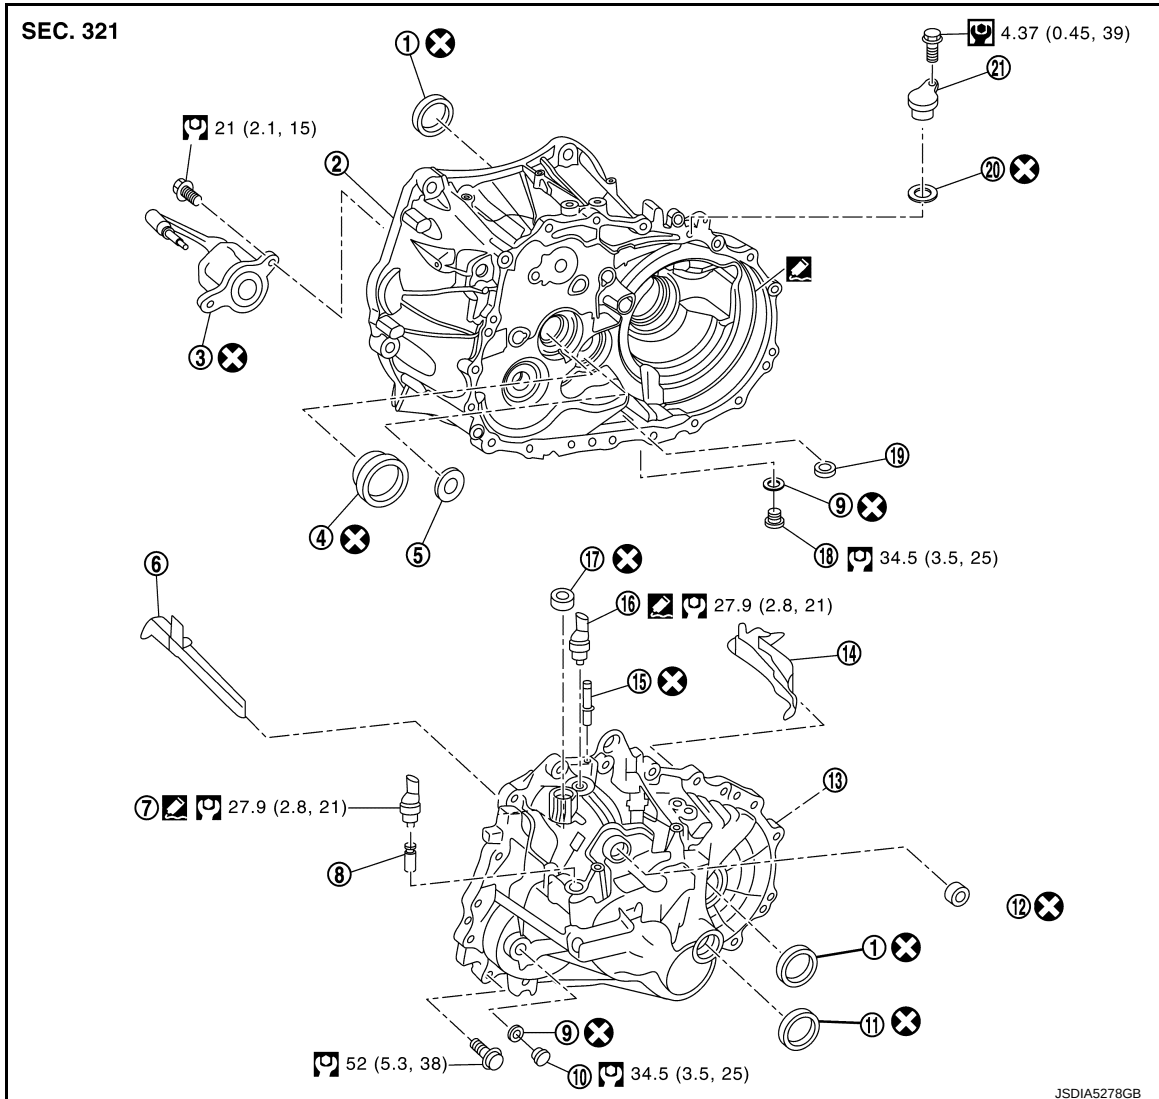

- |                                        |                            |                                    |
|----------------------------------------|----------------------------|------------------------------------|
| 1. Differential side oil seal          | 2. Clutch housing          | 3. CSC (Concentric Slave Cylinder) |
| 4. Input shaft oil seal                | 5. Oil channel             | 6. Oil gutter A                    |
| 7. Back-up lamp switch                 | 8. Plunger                 | 9. Gasket                          |
| 10. Plug                               | 11. Bore plug              | 12. Striking rod oil seal          |
| 13. Transaxle case                     | 14. Oil gutter B           | 15. Air breather tube              |
| 16. Park/Neutral position (PNP) switch | 17. Shifter lever oil seal | 18. Drain plug                     |
| 19. Magnet                             | 20. O-ring                 | 21. Plug                           |

: Apply Genuine Silicone RTV or an equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

: Always replace after every disassembly.

★ : Select with proper thickness.

# TRANSAXLE ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

 : N·m (kg-m, ft-lb)

 : N·m (kg-m, in-lb)

## SHAFT AND GEAR

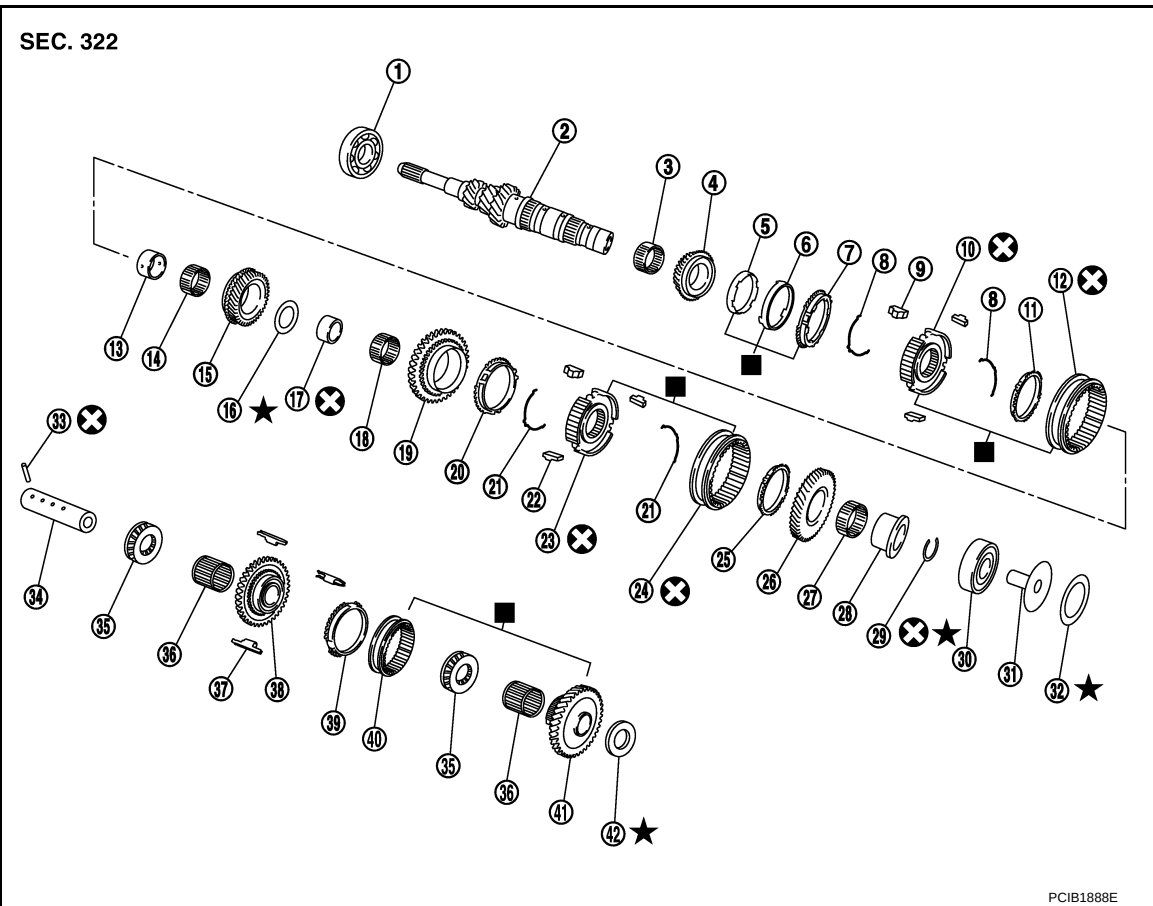

- |                              |                                             |                                       |
|------------------------------|---------------------------------------------|---------------------------------------|
| 1. Input shaft front bearing | 2. Input shaft                              | 3. 3rd needle bearing                 |
| 4. 3rd input gear            | 5. 3rd inner baulk ring                     | 6. 3rd synchronizer cone              |
| 7. 3rd outer baulk ring      | 8. 3rd-4th spread spring                    | 9. 3rd-4th shifting insert            |
| 10. 3rd-4th synchronizer hub | 11. 4th baulk ring                          | 12. 3rd-4th coupling sleeve           |
| 13. 4th input gear bushing   | 14. 4th needle bearing                      | 15. 4th input gear                    |
| 16. Thrust washer            | 17. 5th input gear bushing                  | 18. 5th needle bearing                |
| 19. 5th input gear           | 20. 5th baulk ring                          | 21. 5th-6th spread spring             |
| 22. 5th-6th shifting insert  | 23. 5th-6th synchronizer hub                | 24. 5th-6th coupling sleeve           |
| 25. 6th baulk ring           | 26. 6th input gear                          | 27. 6th needle bearing                |
| 28. 6th input gear bushing   | 29. Snap ring                               | 30. Input shaft rear bearing          |
| 31. Oil channel              | 32. Input shaft rear bearing adjusting shim | 33. Retaining pin                     |
| 34. Reverse idler shaft      | 35. Thrust needle bearing                   | 36. Reverse idler gear needle bearing |
| 37. Reverse insert spring    | 38. Reverse idler gear (front)              | 39. Reverse baulk ring                |
| 40. Reverse coupling sleeve  | 41. Reverse idler gear (rear)               | 42. Reverse idler gear adjusting shim |

 : Apply gear oil.

 : Replace the parts as a set.


 : Always replace after every disassembly.

 : N·m (kg-m, ft-lb)

# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

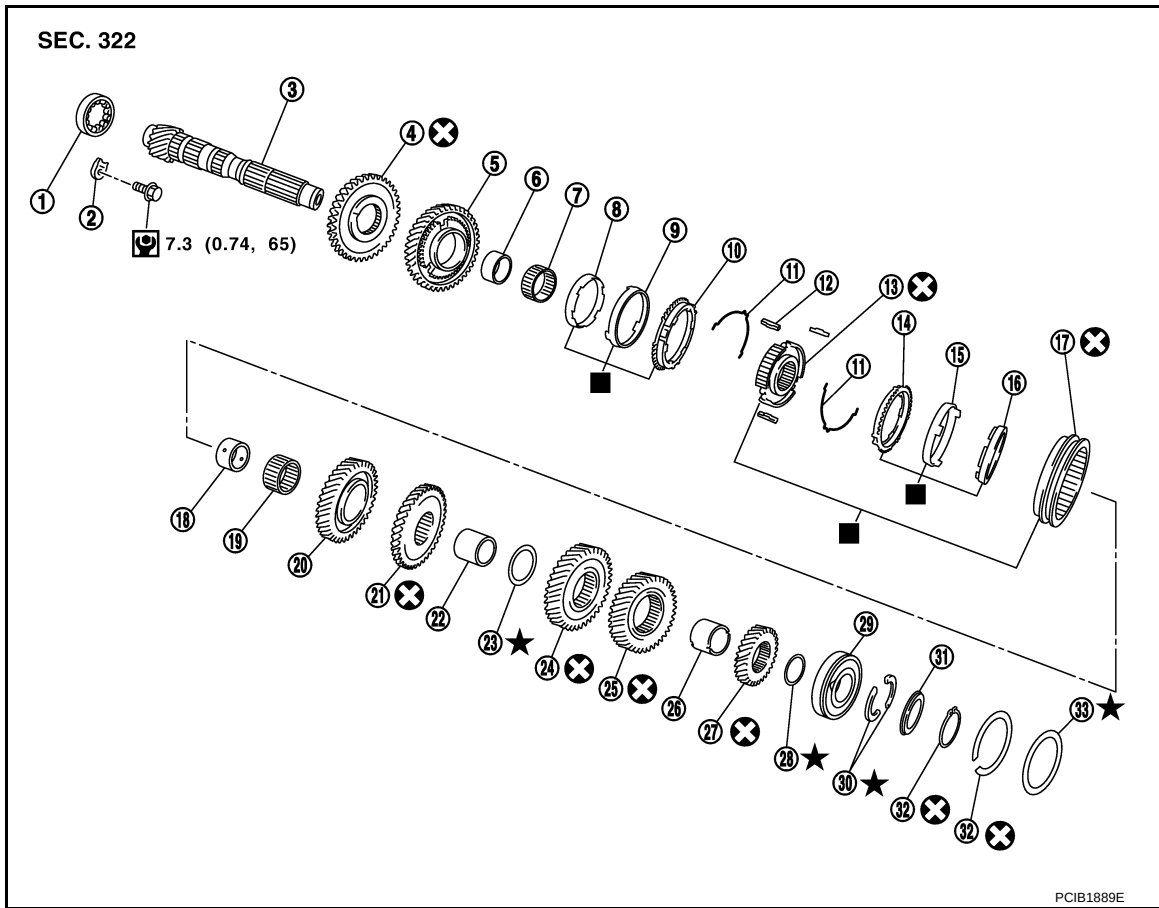

- |                                  |                                  |                                                |
|----------------------------------|----------------------------------|------------------------------------------------|
| 1. Mainshaft front bearing       | 2. Mainshaft bearing retainer    | 3. Mainshaft                                   |
| 4. Reverse main gear             | 5. 1st main gear                 | 6. 1st main gear bushing                       |
| 7. 1st needle bearing            | 8. 1st inner baulk ring          | 9. 1st synchronizer cone                       |
| 10. 1st outer baulk ring         | 11. 1st-2nd spread spring        | 12. 1st-2nd shifting insert                    |
| 13. 1st-2nd synchronizer hub     | 14. 2nd outer baulk ring         | 15. 2nd synchronizer cone                      |
| 16. 2nd inner baulk ring         | 17. 1st-2nd coupling sleeve      | 18. 2nd main gear bushing                      |
| 19. 2nd needle bearing           | 20. 2nd main gear                | 21. 3rd main gear                              |
| 22. 3rd-4th mainshaft spacer     | 23. 4th main gear adjusting shim | 24. 4th main gear                              |
| 25. 5th main gear                | 26. 5th-6th mainshaft spacer     | 27. 6th main gear                              |
| 28. 6th main gear adjusting shim | 29. Mainshaft rear bearing       | 30. Mainshaft C-ring                           |
| 31. C-ring holder                | 32. Snap ring                    | 33. Mainshaft rear bearing adjust-<br>ing shim |

: Apply gear oil.

: Replace the parts as a set.

: Always replace after every disassembly.

: N·m (kg-m, ft-lb)


SHIFT FORK AND FORK ROD

# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

SEC. 328

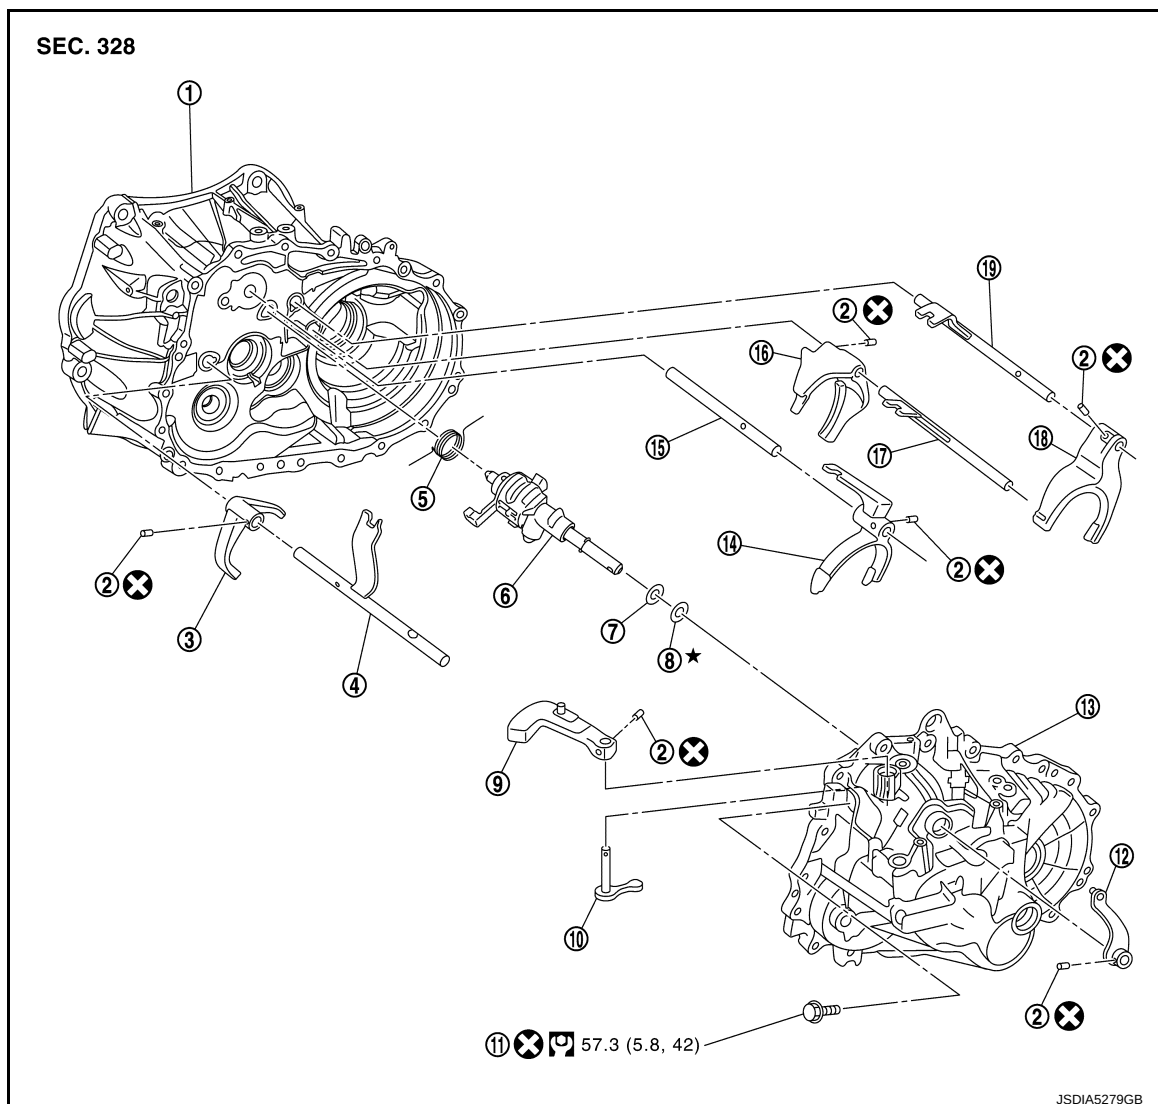

- |                        |                                |                          |
|------------------------|--------------------------------|--------------------------|
| 1. Clutch housing      | 2. Retaining pin               | 3. Reverse shift fork    |
| 4. Reverse fork rod    | 5. Return spring               | 6. Striking rod assembly |
| 7. Striking rod shim   | 8. Striking rod adjusting shim | 9. Shifter lever A       |
| 10. Shifter lever B    | 11. Guide bolt                 | 12. Selector lever       |
| 13. Transaxle case     | 14. 3rd-4th shift fork         | 15. 3rd-4th fork rod     |
| 16. 1st-2nd shift fork | 17. 1st-2nd fork rod           | 18. 5th-6th shift fork   |
| 19. 5th-6th fork rod   |                                |                          |

■ : Replace the parts as a set.


⊗ : Always replace after every disassembly.

FINAL DRIVE

# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

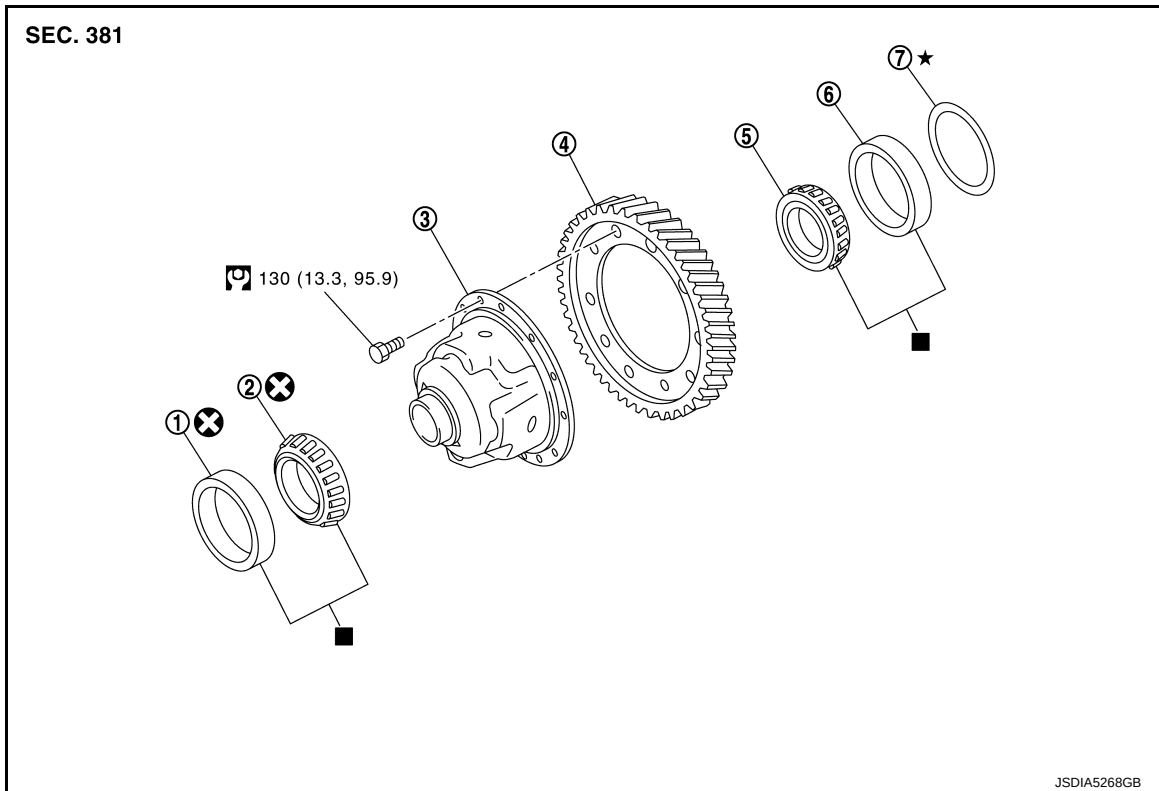

- |                                                               |                                                    |                                                               |
|---------------------------------------------------------------|----------------------------------------------------|---------------------------------------------------------------|
| 1. Differential side bearing outer race (clutch housing side) | 2. Differential side bearing (clutch housing side) | 3. Differential case assembly                                 |
| 4. Final gear                                                 | 5. Differential side bearing (transaxle case side) | 6. Differential side bearing outer race (transaxle case side) |
| 7. Differential side bearing adjust-ing shim                  |                                                    |                                                               |

■ : Replace the parts as a set.


⊗ : N·m (kg·m, ft·lb)

## Disassembly

INFOID:0000000011463638

### DISASSEMBLY

1. Remove drain plug and gasket from clutch housing.

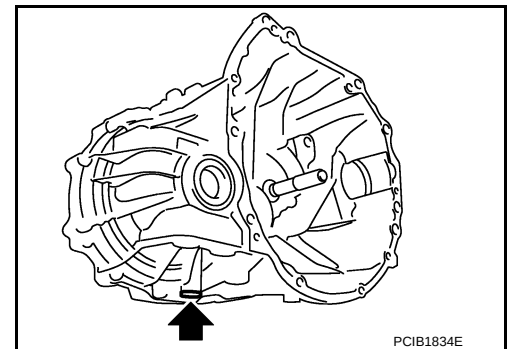


## TRANSAXLE ASSEMBLY


### < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]


2. Remove plug bolt and then plug and O-ring from clutch housing.

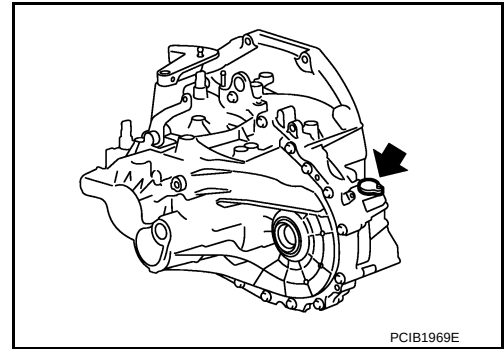


3. Remove plug and gasket from transaxle case.

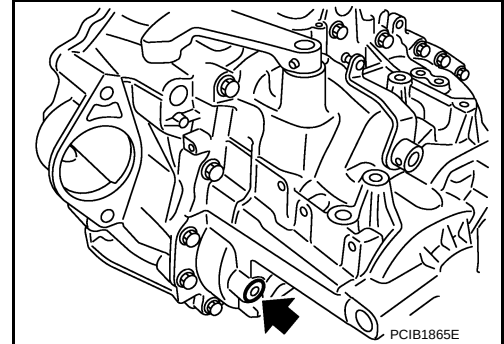


4. Remove park/neutral position (PNP) switch (1) from transaxle case.
  5. Remove back-up lamp switch (2) and plunger from transaxle case.
- CAUTION:**  
**Do not lose plunger.**
6. Remove air breather tube (3) from transaxle case.

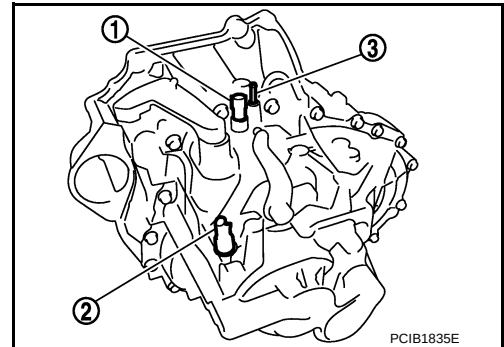

7. Remove guide bolt from transaxle case.

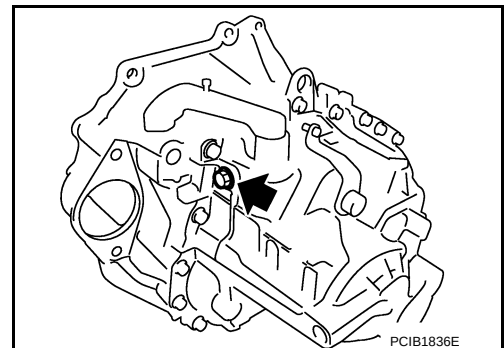

8. Remove retaining pin using suitable tool and then remove selector lever from transaxle case.

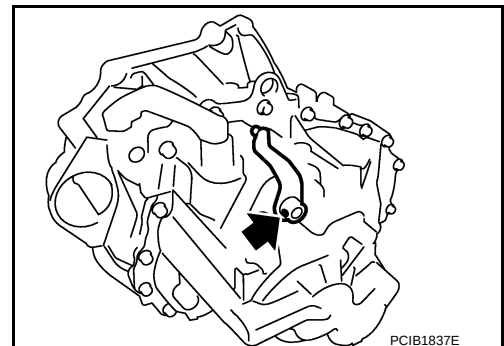




# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]


9. Remove transaxle case bolts.

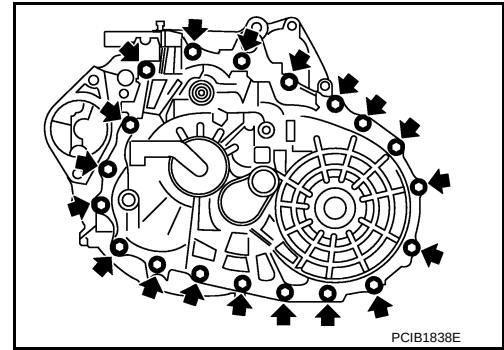

10. Remove bore plug from transaxle case using suitable tool.


**CAUTION:**

- Do not damage transaxle case.
- Access bore plug from cutout (A) of transaxle case when removing.

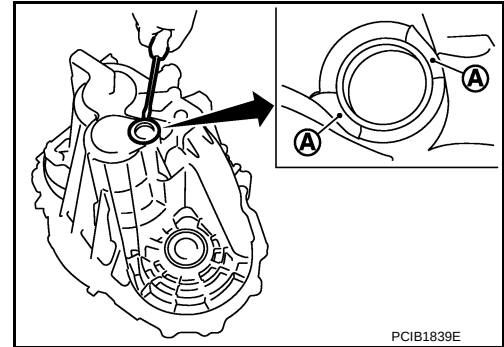

11. Remove transaxle case following the procedures below.

- a. Expand snap ring at mainshaft rear bearing accessing from the bore plug hole. Then pull up transaxle case from clutch housing until snap ring comes off.

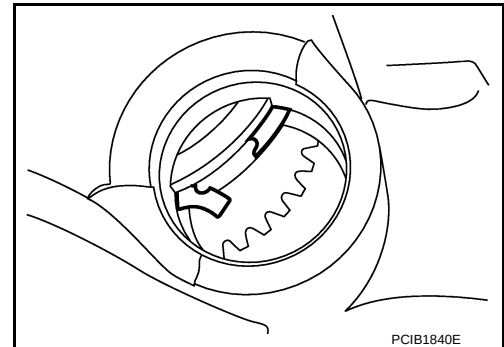


- b. With shifter lever A (1) held in the position shown, remove transaxle case from clutch housing.

**CAUTION:**

**Do not drop adjusting shims.**

**NOTE:**

Make sure to hold shifter lever A in the position shown. Otherwise transaxle case cannot be removed from clutch housing.

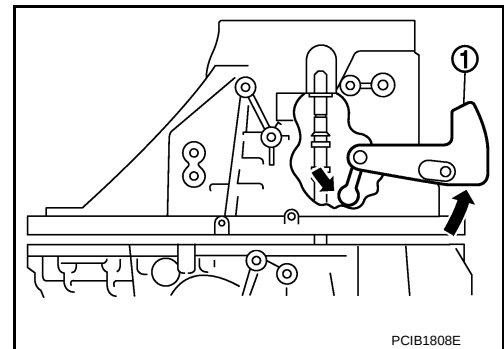


# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

12. Remove oil gutter A (1) and oil gutter B (2) from transaxle case.


A : Tab of oil gutter

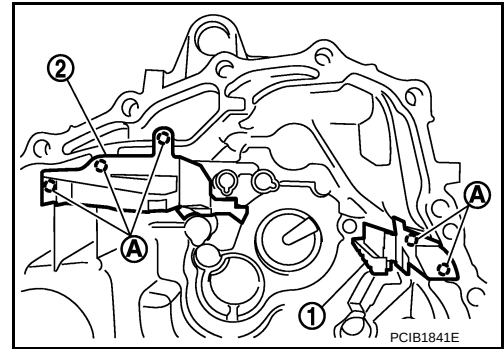

13. Remove snap ring from transaxle case.

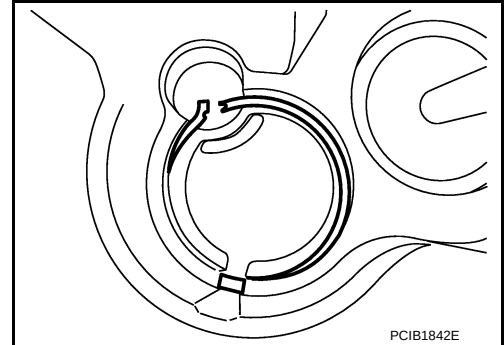

14. Remove retaining pin using suitable tool and then remove shifter lever A and shifter lever B from transaxle case.

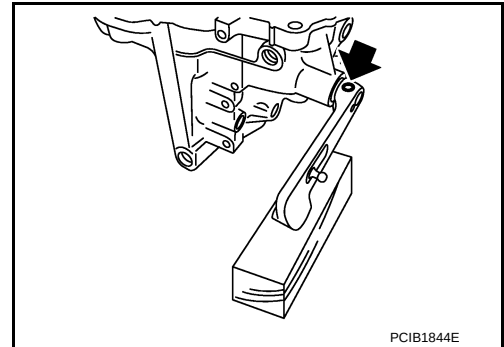


15. Remove differential side bearing outer race (transaxle case side) from transaxle case using Tool. Then remove differential side bearing adjusting shim from transaxle case.

**Tool number** : KV381054S0 (J-34286)

**CAUTION:**


**Do not damage transaxle case or differential side bearing outer race.**

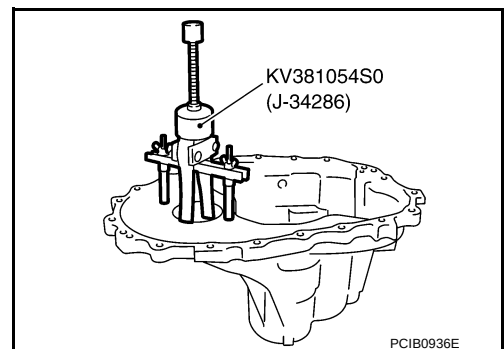

16. Remove differential side oil seal from transaxle case using suitable tool.

**CAUTION:**

**Do not damage transaxle case.**

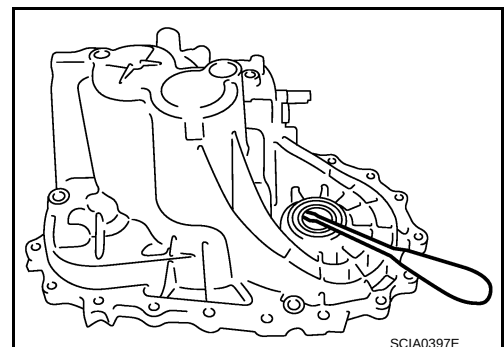

# TRANSAXLE ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]


17. Remove shifter lever oil seal (1) and striking rod oil seal (2) from transaxle case.

**CAUTION:**

**Do not damage transaxle case.**

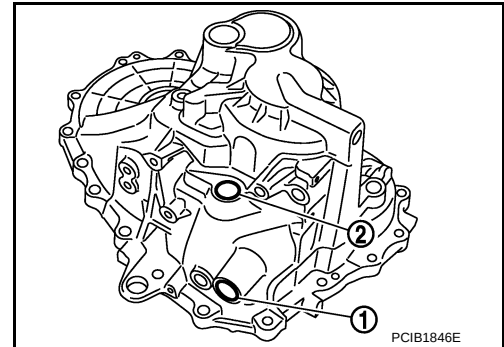


18. Remove striking rod shim (1), striking rod adjusting shim (2), mainshaft rear bearing adjusting shim (3), input shaft rear bearing adjusting shim (4), and reverse idler gear adjusting shim (5).

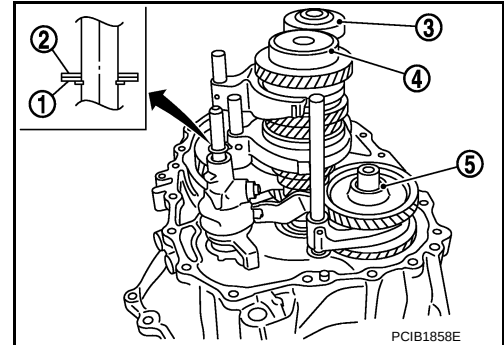


19. Remove retaining pin of reverse shift fork (1) using suitable tool.

2 : Reverse fork rod

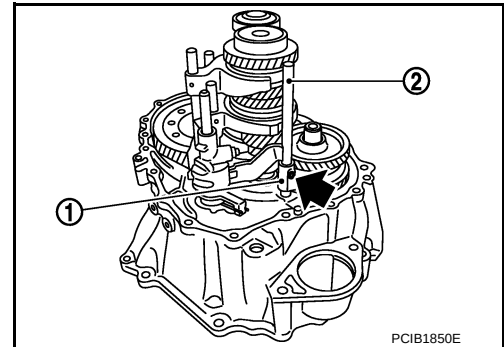


20. Rotate striking lever of striking rod assembly as shown. Then rotate reverse fork rod to a position where bracket of reverse fork rod does not interfere with striking lever of striking rod assembly.

21. Pull out reverse shift fork and reverse fork rod.

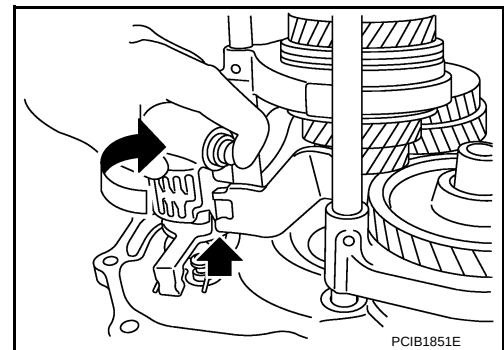

22. Remove retaining pin of 5th-6th shift fork (1) using suitable tool.

2 : 5th-6th fork rod

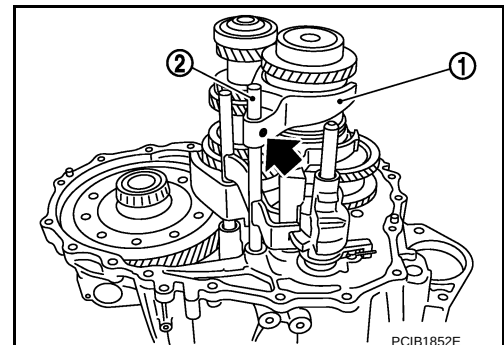


# TRANSAXLE ASSEMBLY

## < UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

23. Remove retaining pin of 3rd-4th shift fork (1) using suitable tool.


24. Pull out 3rd-4th fork rod (2).

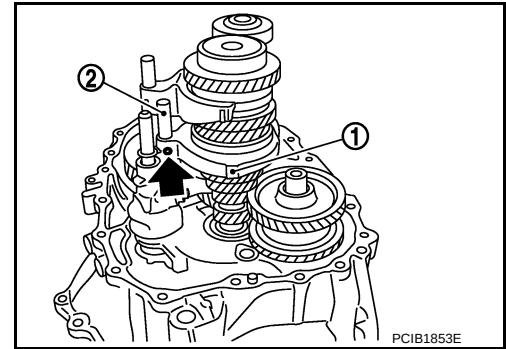

25. Pull out 5th-6th shift fork (1) and 5th-6th fork rod (2).

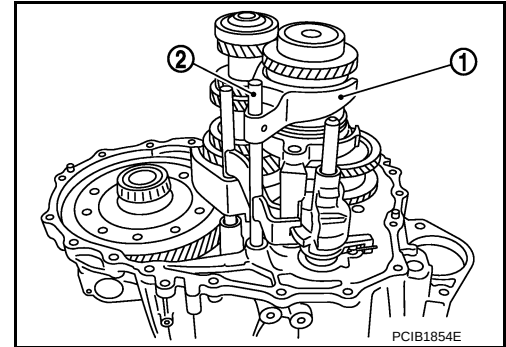


26. Pull out 3rd-4th shift fork (1).

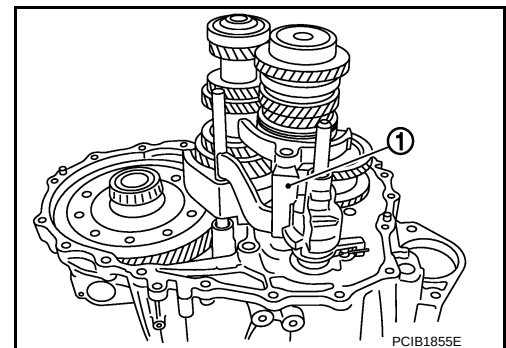


27. Remove retaining pin of 1st-2nd shift fork (1) using suitable tool.

28. Pull out 1st-2nd shift fork and 1st-2nd fork rod (2).

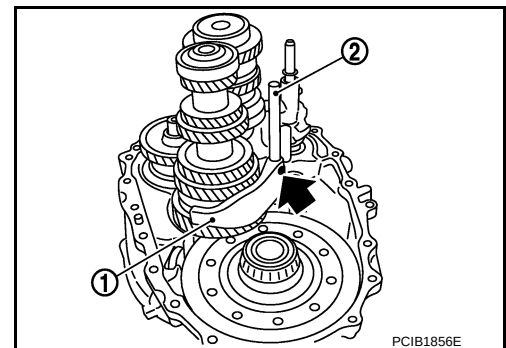

29. Remove striking rod assembly (1).

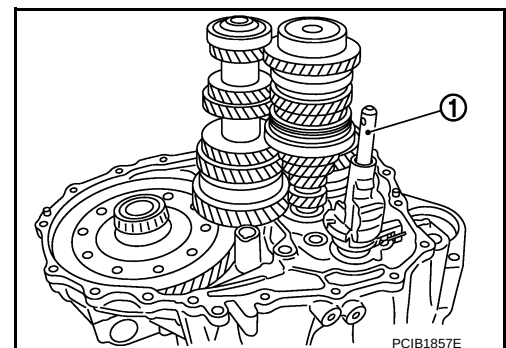

# TRANSAXLE ASSEMBLY

## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]


30. Remove gear components from clutch housing in the following procedure.

- a. Remove a set of input shaft assembly, mainshaft assembly, and reverse idler gear assembly by tapping the tip of input shaft from the back of the clutch housing with a plastic hammer.


**CAUTION:**

**Always withdraw mainshaft straight out. Failure to do so can damage resin oil channel on clutch housing side.**

- b. Remove final drive assembly.

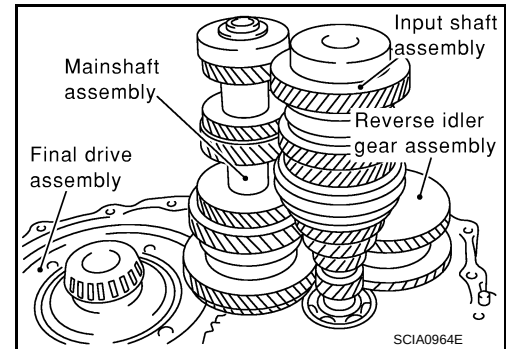

31. Remove magnet from clutch housing.

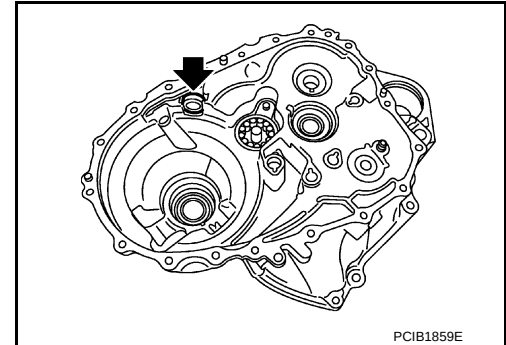


32. Remove mainshaft bearing retainer and then mainshaft front bearing from clutch housing using the Tool.

**Tool number : KV381054S0 (J-34286)**

**CAUTION:**

**Do not damage clutch housing, mainshaft front bearing, or oil channel.**

33. Remove oil channel from clutch housing.

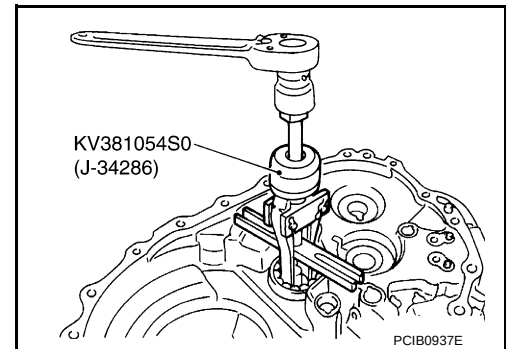


34. Remove differential side bearing outer race (clutch housing side) from clutch housing using the puller.

**Tool number : KV381054S0 (J-34286)**

**CAUTION:**


**Do not damage clutch housing or differential side bearing outer race.**

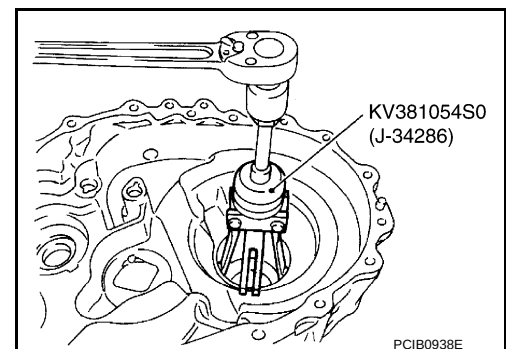

35. Remove input shaft oil seal from clutch housing, using a suitable tool.

**CAUTION:**

**Do not damage clutch housing.**

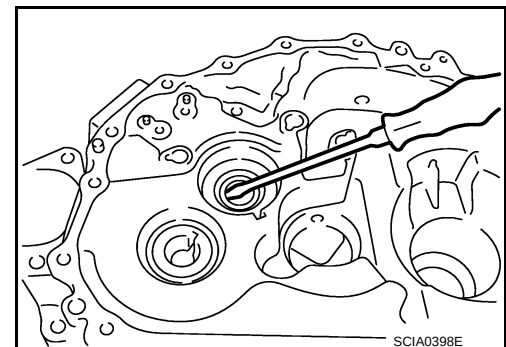

# TRANSAXLE ASSEMBLY


## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

36. Remove differential side oil seal from clutch housing, using a suitable tool.

**CAUTION:**

**Do not damage clutch housing.**

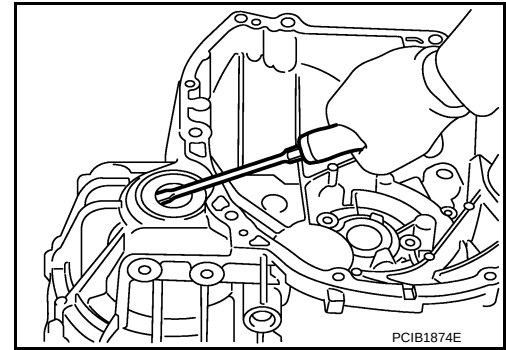

INFOID:000000011463639

## Assembly

### ASSEMBLY


1. Install differential side oil seal (1) to clutch housing using Tool (A).

**Dimension (H) : -0.5 - 0.5 mm (-0.020 - 0.020 in)**

**Tool number : ST33400001 (J-26082)**

**CAUTION:**

- Do not reuse differential side oil seal.
- When installing, do not incline differential side oil seal.
- Do not damage clutch housing.

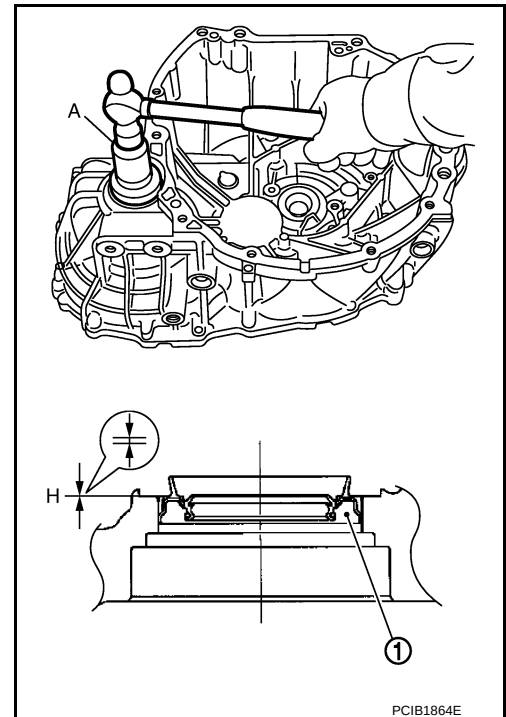

# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]


2. Install input shaft oil seal (1) to clutch housing using Tool (A).

Dimension (H) : 1.1 - 2.0 mm (0.043 - 0.078 in)

Tool number : ST35321000 ( — )

**CAUTION:**

- Do not reuse input shaft oil seal.
- When installing, do not incline input shaft oil seal.
- Do not damage clutch housing.

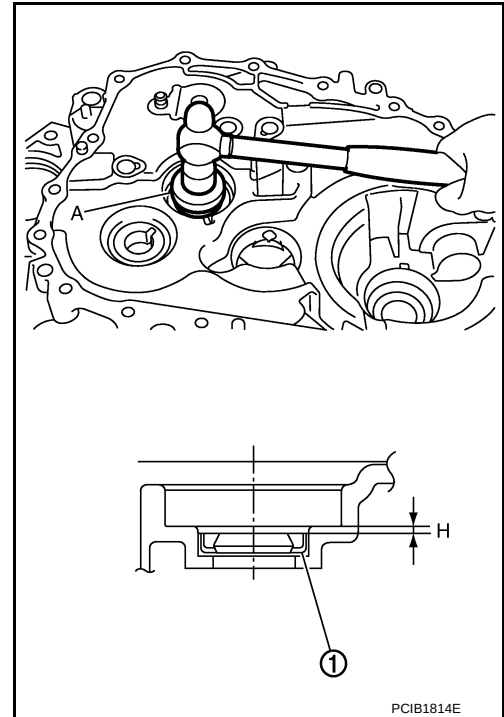


3. Install differential side bearing outer race (clutch housing side) to clutch housing using Tools.

Tool number : KV40105320 ( — )  
: ST30720000 (J-25405)

**CAUTION:**


Replace differential side bearing and differential side bearing outer race as a set.

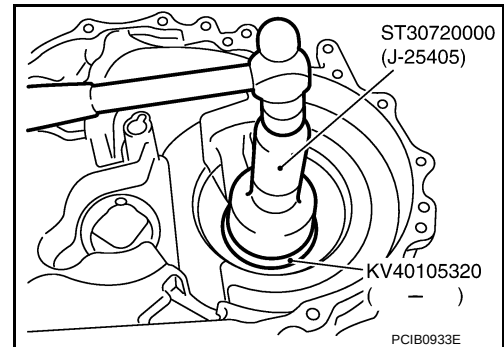

4. Install oil channel (1) on mainshaft side.

**CAUTION:**

When installing oil channel, fit the rib (A) of oil channel into the processed area of the spot facing (B).

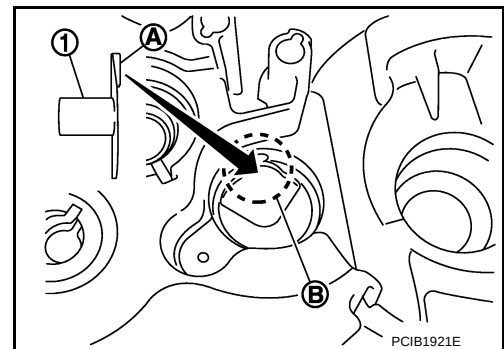


5. Install mainshaft front bearing to clutch housing using Tool.

Tool number : ST33200000 (J-26082)

**CAUTION:**

Be careful with the orientation of mainshaft front bearing.

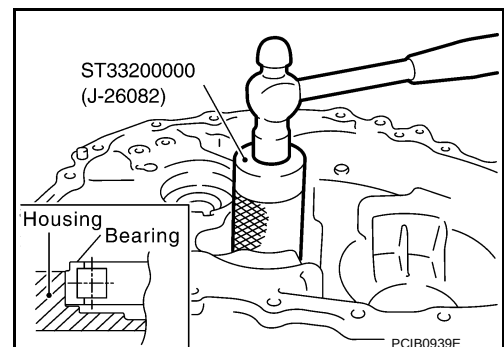



# TRANSAXLE ASSEMBLY

## < UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

6. Install mainshaft bearing retainer (1) to clutch housing and tighten bolt to the specified torque.


- 2 : Mainshaft front bearing  
3 : Oil channel

**CAUTION:**


Install with punched surface facing up.

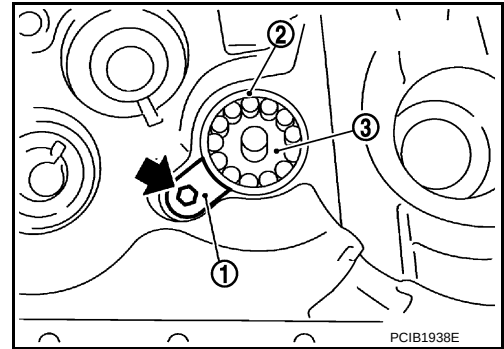

7. Install magnet to clutch housing.

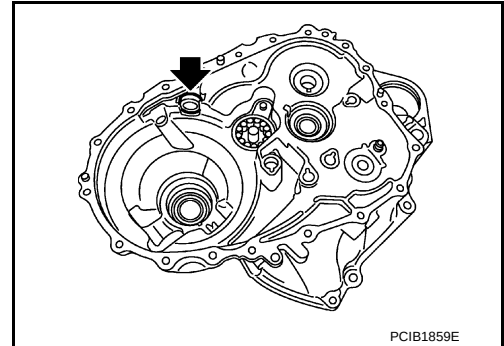


8. Install final drive assembly into clutch housing.

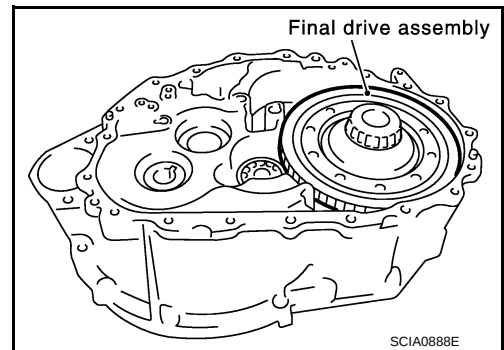


9. Install input shaft assembly, mainshaft assembly, and reverse idler gear assembly into clutch housing.

**CAUTION:**

- Wrap a tape, etc. to the spline of input shaft so as not to damage the input shaft oil seal.
- Be careful with the orientation of reverse idler shaft.

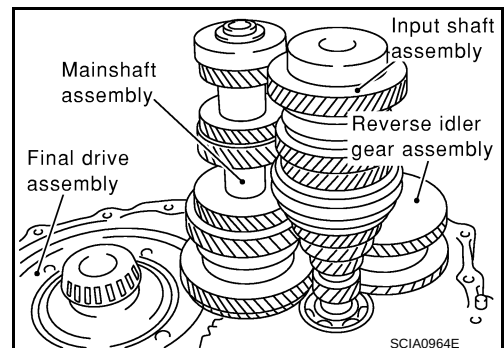

10. Install striking rod assembly (1) into clutch housing.

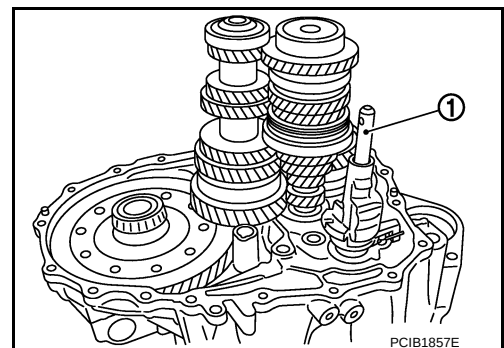




# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

## CAUTION:


- Check that return spring is securely seated in the groove on return pin.

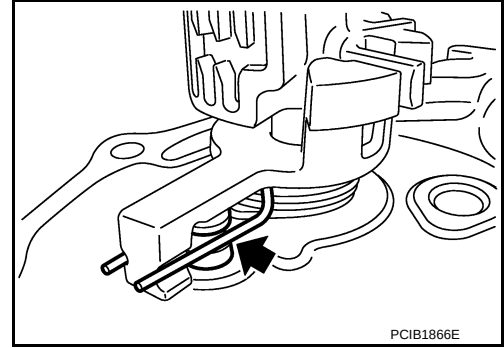

11. Install 1st-2nd shift fork (1) and 1st-2nd fork rod (2) and then install retaining pin to 1st-2nd shift fork.

## CAUTION:


- Do not reuse retaining pin.
- Be careful with the orientation of 1st-2nd shift fork and 1st-2nd fork rod.
- Assemble retaining pin from the direction shown by the arrow until it becomes flush with the end surface of 1st-2nd shift fork.

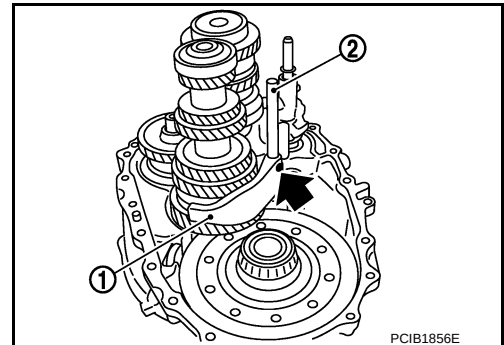

12. Install 3rd-4th shift fork (1) to 3rd-4th coupling sleeve.

## CAUTION:


Be careful with the orientation of 3rd-4th shift fork.

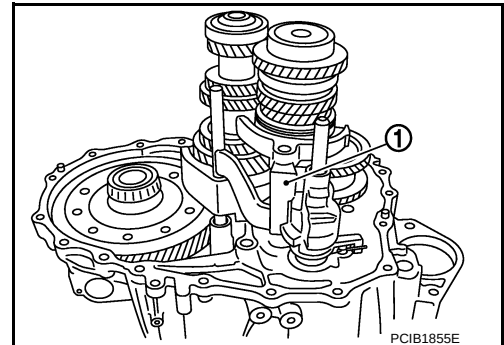

13. Install 5th-6th shift fork (1) and 5th-6th fork rod (2) and then install retaining pin to 5th-6th shift fork.

## CAUTION:

- Do not reuse retaining pin.
- Be careful with the orientation of 5th-6th shift fork and 5th-6th fork rod.
- Assemble retaining pin from the direction shown by the arrow until it becomes flush with the end surface of 5th-6th shift fork.

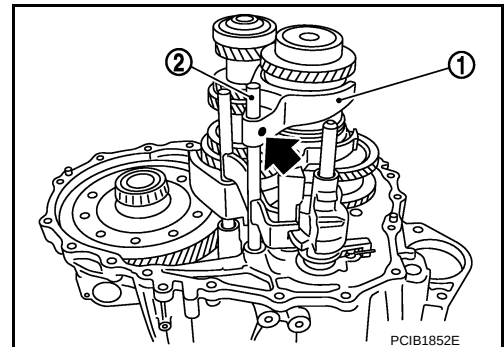

# TRANSAXLE ASSEMBLY


## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

14. Install 3rd-4th fork rod (2) and then install retaining pin to 3rd-4th shift fork (1).

**CAUTION:**


- Do not reuse retaining pin.
- Be careful with the orientation of 3rd-4th fork rod.
- Assemble retaining pin from the direction shown by the arrow until it becomes flush with the end surface of 3rd-4th shift fork.

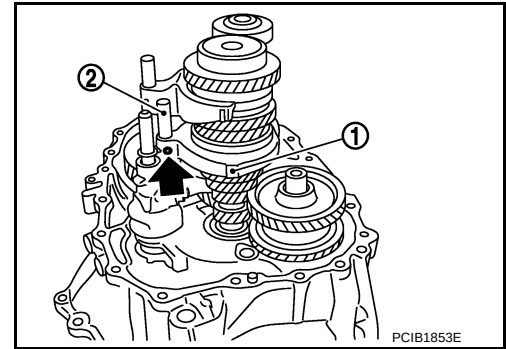


15. Install reverse shift fork (1) and reverse fork rod (2).

**CAUTION:**

- Be careful with the orientation of reverse shift fork and reverse fork rod.

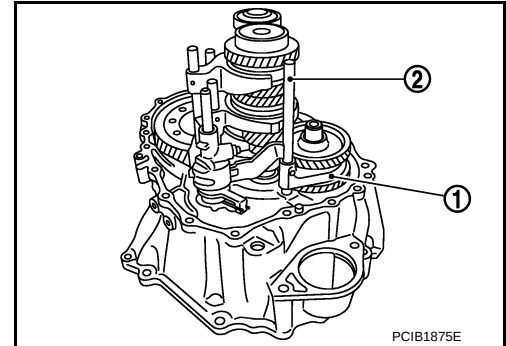

16. Rotate striking lever of striking rod assembly as shown. Then rotate reverse fork rod to a position where bracket of reverse fork rod does not interfere with striking lever of striking rod assembly.

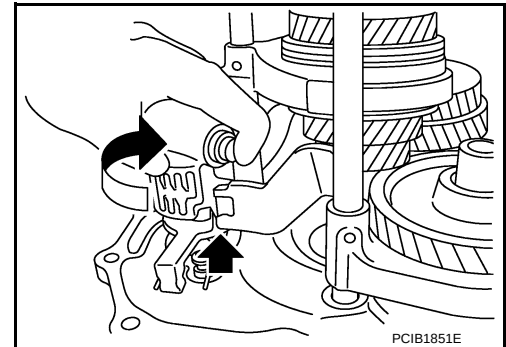


17. Install retaining pin to reverse shift fork (1).

2 : Reverse fork rod

**CAUTION:**

- Do not reuse retaining pin.
- Assemble retaining pin from the direction shown by the arrow until it becomes flush with the end surface of reverse shift fork.

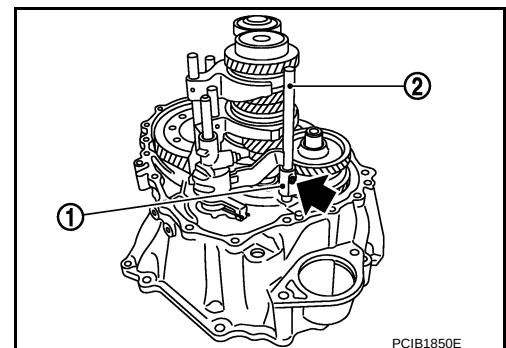

18. Install selected differential side bearing adjusting shim(s) and differential side bearing outer race (transaxle case side).
19. Install selected reverse idler gear adjusting shim onto reverse idler gear assembly.
20. Install selected input shaft rear bearing adjusting shim onto input shaft.
21. Install selected striking rod adjusting shim and striking rod shim onto striking rod assembly.

# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

22. Install shifter lever oil seal (1) and striking rod oil seal (2) to transaxle case using suitable tool.

**Dimension (H) : 0 - 1.0 mm (0 - 0.039 in)**

**CAUTION:**

- Do not reuse shifter lever oil seal or striking rod oil seal.
- When installing, do not incline shifter lever oil seal and striking rod oil seal.
- Do not damage transaxle case.

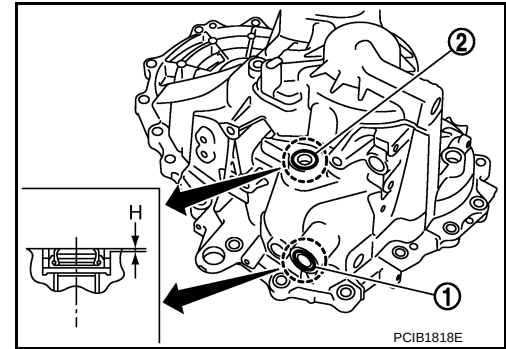


23. Install differential side oil seal (1) to transaxle case using Tool (A).

**Dimension (H) : -0.5 - 0.5 mm (-0.020 - 0.020 in)**

**Tool number : ST30720000 (J-25405)**

**CAUTION:**


- Do not reuse differential side oil seal.
- When installing, do not incline differential side oil seal.
- Do not damage transaxle case.

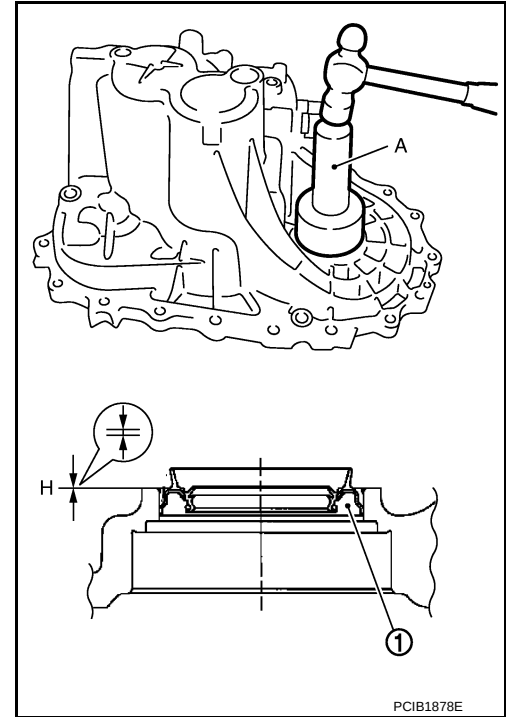

24. Install shifter lever B (1) and shifter lever A (2) to transaxle case.

**CAUTION:**


**Be careful with the orientation of shifter lever B and shifter lever A.**

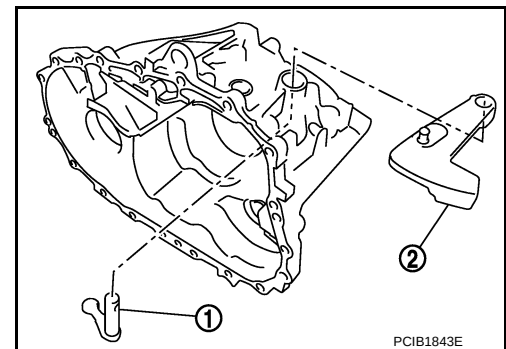

25. Install retaining pin to shifter lever A.

**CAUTION:**

- Do not reuse retaining pin.
- Assemble retaining pin from the direction shown by the arrow until it becomes flush with the end surface of shifter lever A.

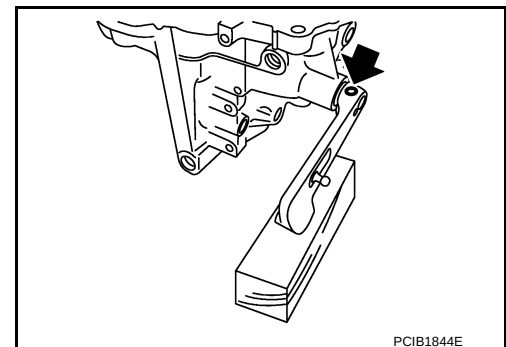

# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

26. Install transaxle case following the procedures below.

- a. Install selected mainshaft rear bearing adjusting shim into transaxle case.
- b. Install oil gutter A (1) and oil gutter B (2) to transaxle case.

**CAUTION:**


Insert the tab (A) of oil gutter A and oil gutter B into transaxle case.

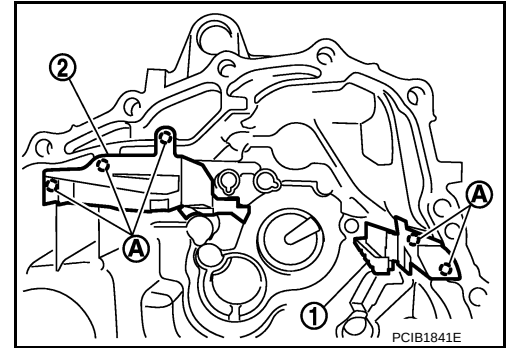

- c. Temporarily install snap ring of mainshaft rear bearing into transaxle case.

**CAUTION:**

Do not reuse snap ring.

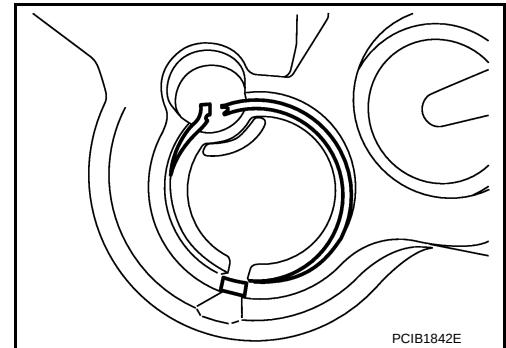


- d. Apply recommended sealant to mating surface of clutch housing as shown.

- Use Genuine Silicone RTV or an equivalent. Refer to [MA-11, "Fluids and Lubricants"](#).

**CAUTION:**

- Remove old sealant adhering to the mounting surfaces. Also remove any moisture, oil, or foreign material adhering to both mounting surfaces.
- Apply sealant so as not to break the bead.
- The width of sealant bead is 1 - 2 mm (0.04 - 0.08 in).
- The height of sealant bead is 0.4 - 1 mm (0.016 - 0.04 in).
- The overlap length of both ends of sealant bead is 3 - 5 mm (0.12 - 0.20 in).

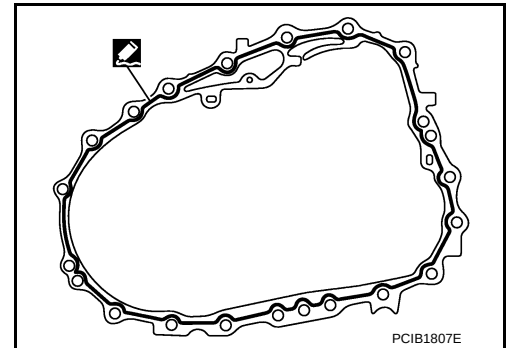


- e. With shifter lever A (1) held in the position shown, temporarily assemble transaxle case to clutch housing.

**CAUTION:**

Do not damage striking rod oil seal.

**NOTE:**

Make sure to hold shifter lever A in the position shown. Otherwise transaxle case cannot be installed to clutch housing.

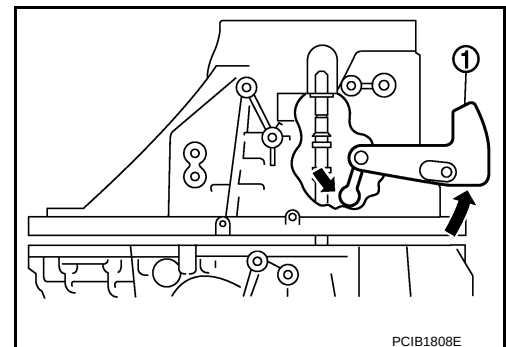


# TRANSAXLE ASSEMBLY

## < UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

- f. While rotating shifter lever A (1) in the direction of the arrow shown, assemble transaxle case to clutch housing.

2 : shifter lever B

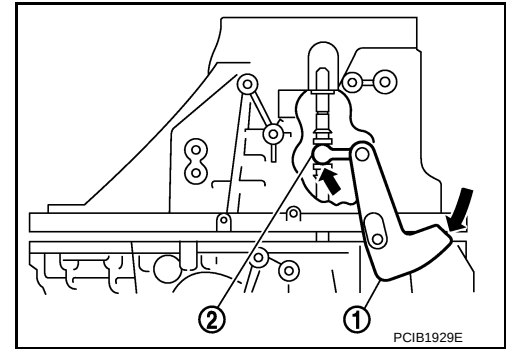


- g. Accessing from the bore plug hole, expand snap ring at mainshaft rear bearing so that the ring catches the periphery of mainshaft rear bearing.
- h. Temporarily tighten transaxle case bolts.

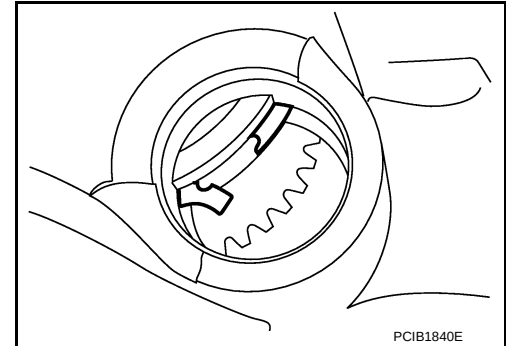

- i. Shift the shifter lever A (1) to 2nd gear position.


### NOTE:

- The 2nd gear position is attained when shifter lever A is in the position shown.

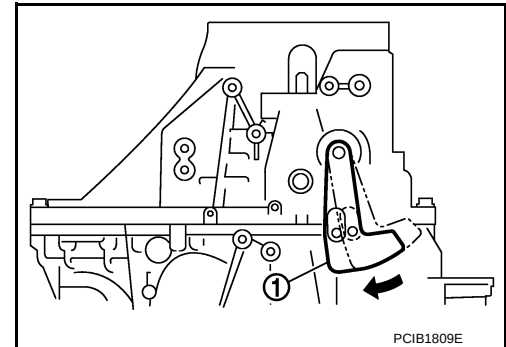

- When transaxle is shifted to the 2nd gear position, mainshaft assembly is lifted.

- j. Seat snap ring in the groove on mainshaft rear bearing. If snap ring is not seated in the groove on mainshaft rear bearing, remove transaxle case and repeat the procedure from step d.

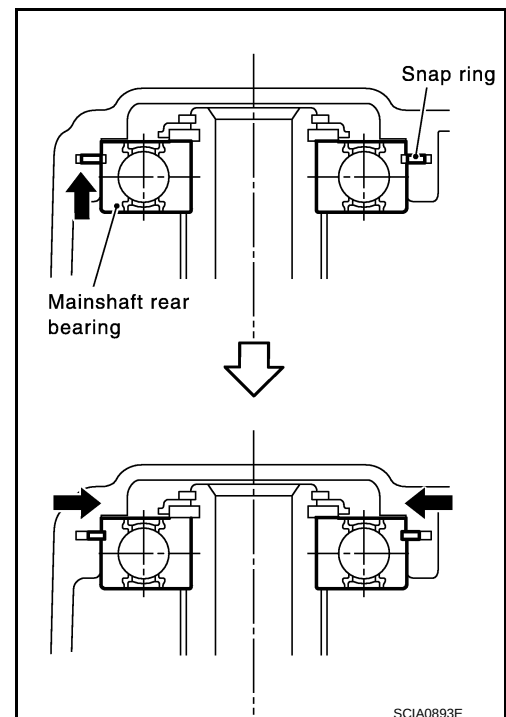


# TRANSAXLE ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]


- k. Tighten transaxle case bolts to the specified torque.

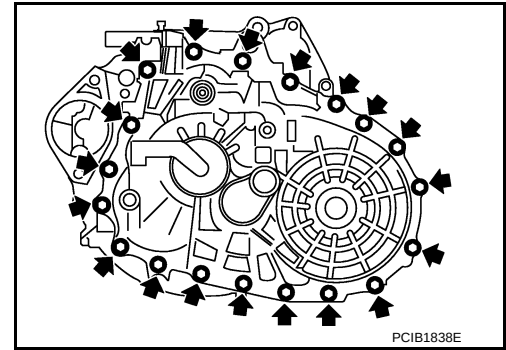

- l. Shift the shifter lever A (1) to neutral position.

**NOTE:**

The neutral position is attained when shifter lever A is in the position shown.

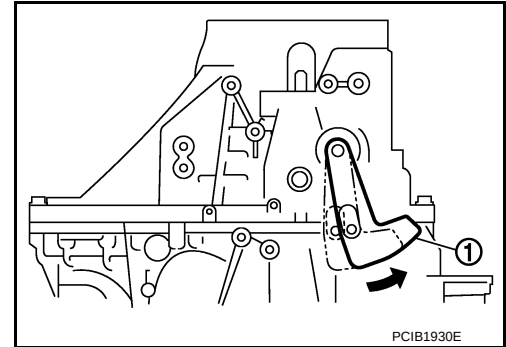


27. Install bore plug to transaxle case using Tool.

**Tool number : ST33061000 (J-8107-2)**

**CAUTION:**


**Do not reuse bore plug.**

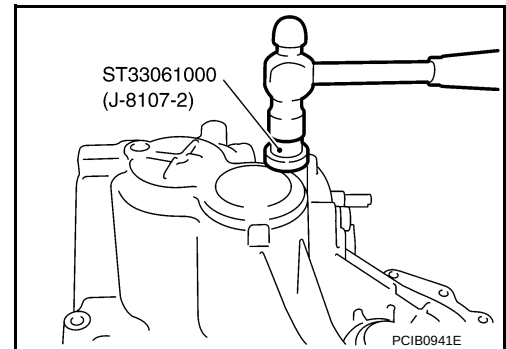

28. Install selector lever to transaxle case and then install retaining pin to selector lever.

**CAUTION:**

- Do not reuse retaining pin.
- Assemble retaining pin from the direction shown by the arrow until it becomes flush with the end surface of selector lever.

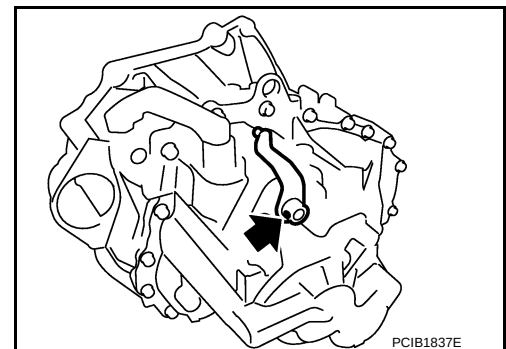

29. Install guide bolt following the procedures below.

- a. Shift the shifter lever A and selector lever to neutral position.

# TRANSAXLE ASSEMBLY

## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]


- b. Visually confirm from the guide bolt hole (C) that the lever is securely set to neutral position (A). If it is not in the neutral position, repeat the procedure from step a.

1 : Guide bolt

### CAUTION:

The guide groove (D) of striking rod assembly will be damaged when assembling guide bolt with the lever is in except neutral position (B).


- c. Check continuity between terminals of park/neutral position (PNP) switch to confirm it in the neutral position. If it is not in the neutral position, remove park/neutral position (PNP) switch and repeat the procedure from step a. Refer to [TM-77, "PARK/NEUTRAL POSITION \(PNP\) SWITCH : Component Inspection"](#).

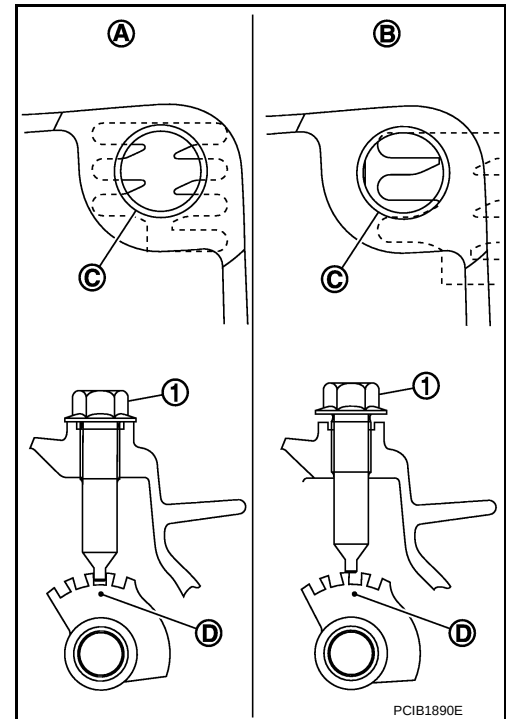

- d. Install guide bolt to transaxle case and then tighten guide bolt to the specified torque.

### CAUTION:

Do not reuse guide bolt.

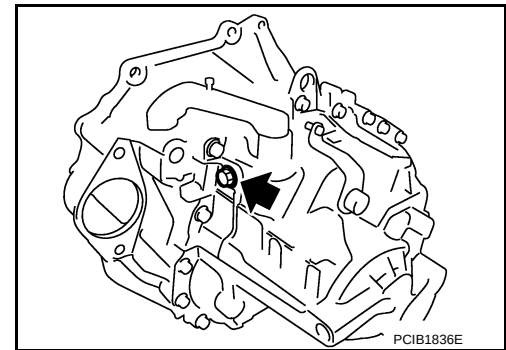

30. Apply recommended sealant to threads of park/neutral position (PNP) switch (1). Then install it to transaxle case and tighten to the specified torque.

• Use Genuine Silicone RTV or an equivalent. Refer to [MA-11, "Fluids and Lubricants"](#).

### CAUTION:

Remove old sealant and oil adhering to threads.

31. Install plunger to transaxle case.

32. Apply recommended sealant to threads of back-up lamp switch (2). Then install it to transaxle case and tighten to the specified torque.

• Use Genuine Silicone RTV or an equivalent. Refer to [MA-11, "Fluids and Lubricants"](#).

### CAUTION:


Remove old sealant and oil adhering to threads.

33. Install air breather tube (3) to transaxle case.

### CAUTION:

• Do not reuse air breather tube.

• Assemble air breather tube until its collar element contacts with transaxle case.

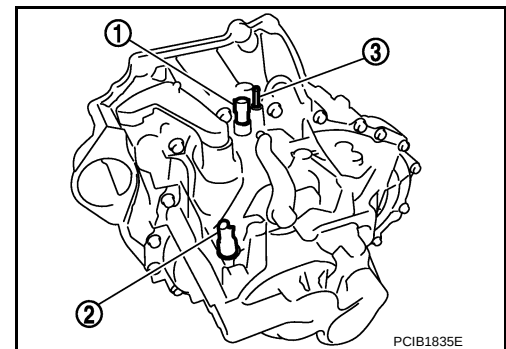



# TRANSAXLE ASSEMBLY


## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

34. Install gasket onto plug and then install them into transaxle case. Tighten plug to the specified torque.

**CAUTION:**


**Do not reuse gasket.**

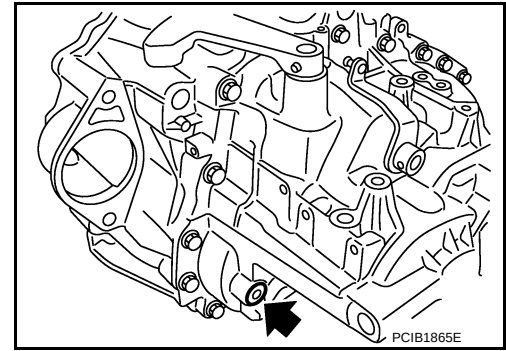

35. Install gasket onto drain plug and then install them into clutch housing. Tighten drain plug to the specified torque.

**CAUTION:**


**Do not reuse gasket.**

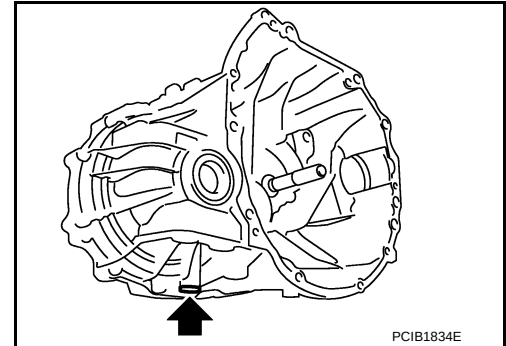

36. Install O-ring onto plug and then install it into clutch housing. Tighten bolt to the specified torque.

**CAUTION:**

- Do not reuse O-ring.
- After oil is filled, tighten bolt to specified torque.

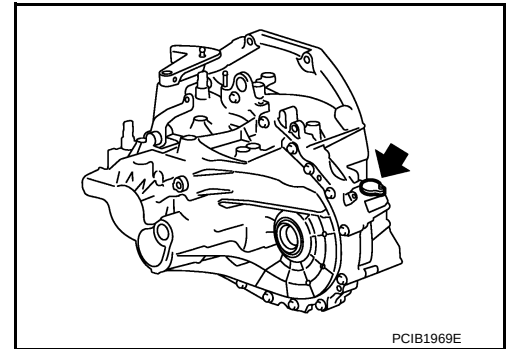

INFOID:0000000011463640

## Adjustment

### ADJUSTMENT

#### Differential Side Bearing Preload

- When adjusting differential side bearing preload, select adjusting shim for differential side bearing. To select adjusting shim, measure clearance (L) between transaxle case and differential side bearing outer race. Refer to [TM-146, "Available Shims"](#).

**CAUTION:**

**Up to 2 adjusting shims can be selected.**

- Calculate dimension (L) (thickness of adjusting shim) using the following procedure to satisfy specification of preload for differential side bearing.


**Preload** : Refer to [TM-146, "Available Shims"](#).

**Dimension L** = (L1 - L2) + Preload

**L** : Thickness of adjusting shim

**L1** : Distance between transaxle case end face and mounting face of adjusting shim

**L2** : Distance between differential side bearing outer race and clutch housing end face

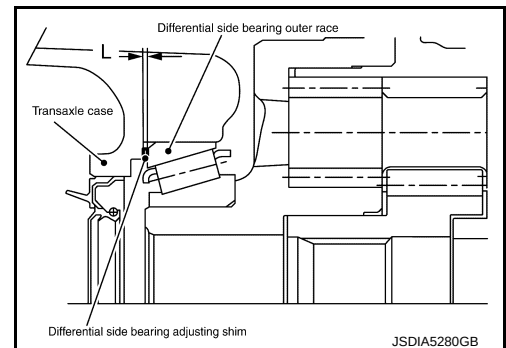




# TRANSAXLE ASSEMBLY

## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]


1. Using a depth micrometer and straightedge, measure dimension (L1) between transaxle case end face and mounting face of adjusting shim.
2. Install differential side bearing outer race onto differential side bearing on final gear side. Holding lightly differential side bearing outer race horizontally by hand, rotate final gear five times or more (for smooth movement of bearing roller).

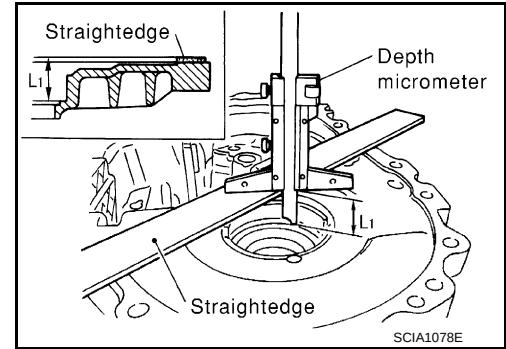

3. Using a depth micrometer and straightedge as shown, measure dimension (L2) between differential side bearing outer race and clutch housing end face.

**CAUTION:**

**L2: Measure at 4 point by approximately 90 degrees and use the average value.**

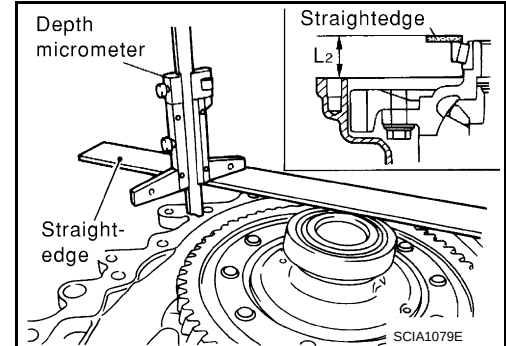


4. Install selected differential side bearing adjusting shim and then install differential side bearing outer race (transaxle case side) using Tool.

**Tool number : ST30720000 (J25405)**

**CAUTION:**

**Replace differential side bearing and differential side bearing outer race as a set.**

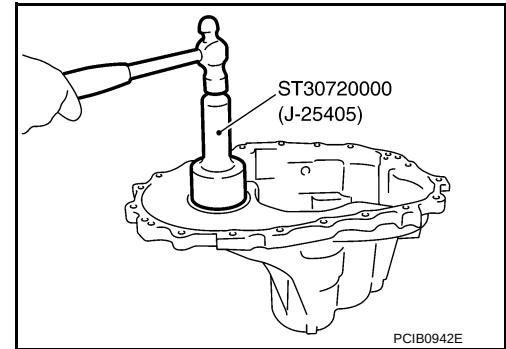

### Reverse Idler Gear End Play

- When adjusting reverse idler gear end play, select adjusting shim for reverse idler gear. To select adjusting shim (1), measure clearance between transaxle case (2) and reverse idler gear (rear) (3). Refer to [TM-145, "Available Adjusting Shims"](#).

**CAUTION:**

**Only 1 adjusting shim can be selected.**

- Calculate dimension (Q) (thickness of adjusting shim) using the following procedure to satisfy specification of end play for reverse idler gear.


**End play : Refer to [TM-145, "Available Adjusting Shims"](#).**

**Dimension Q = (Q1 - Q2) - End play**

**Q : Thickness of adjusting shim**

**Q1 : Distance between transaxle case end face and mounting face of adjusting shim**

**Q2 : Distance between clutch housing end face and end face of reverse idler gear (rear)**

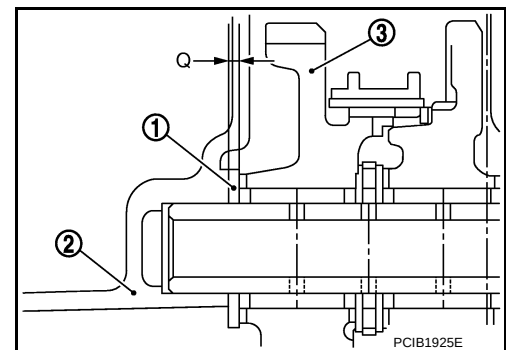


# TRANSAXLE ASSEMBLY

## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

1. Using a depth micrometer and straightedge, measure dimension (Q<sub>1</sub>) between transaxle case end face and mounting face of adjusting shim.

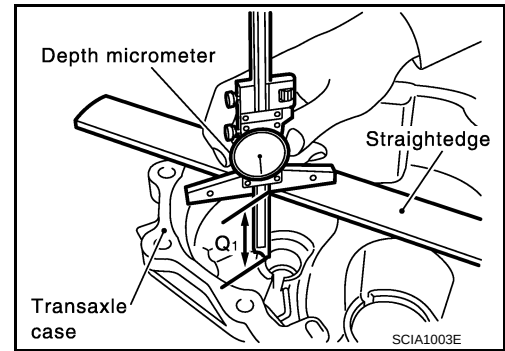


2. Using a depth micrometer and straightedge as shown, measure dimension (Q<sub>2</sub>) between clutch housing (1) end face and end face of reverse idler gear (rear) (2).

**CAUTION:**

**Q<sub>2</sub>: Measure at 4 point by approximately 90 degrees and use the average value.**

3. Install selected reverse idler gear adjusting shim onto reverse idler gear (rear).

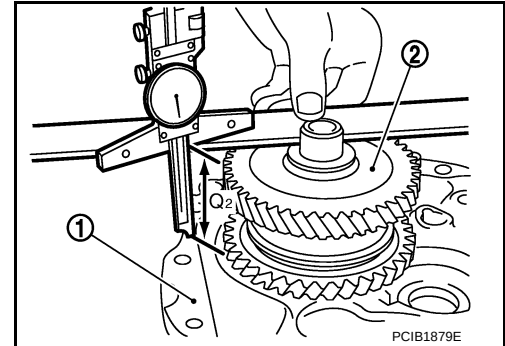

### Input Shaft End Play

- When adjusting input shaft end play, select adjusting shim for input shaft rear bearing. To select adjusting shim, measure clearance between transaxle case and input shaft rear bearing. Refer to [TM-145, "Available Adjusting Shims"](#).

**CAUTION:**

**Only 1 adjusting shim can be selected.**

- Calculate dimension (O) (thickness of adjusting shim) using the following procedure to satisfy specification of end play for input shaft rear bearing.

**End play : Refer to [TM-145, "Available Adjusting Shims"](#).**

**Dimension O = (O<sub>1</sub> - O<sub>2</sub>) - End play**

**O : Thickness of adjusting shim**



**O<sub>1</sub> : Distance between transaxle case end face and mounting face of adjusting shim**

**O<sub>2</sub> : Distance between clutch housing end face and end face of input shaft rear bearing**

1. Using a depth micrometer and straightedge, measure dimension (O<sub>1</sub>) between transaxle case end face and mounting face of adjusting shim.

**CAUTION:**

**O<sub>1</sub>: Measure at 4 point by approximately 90 degrees and use the average value.**

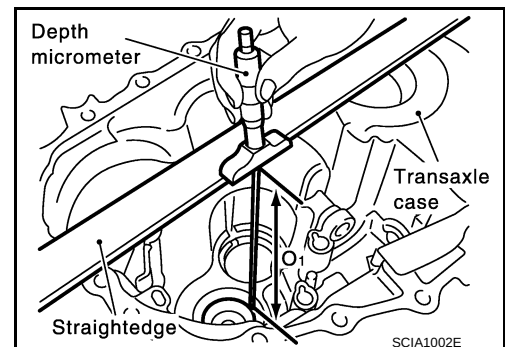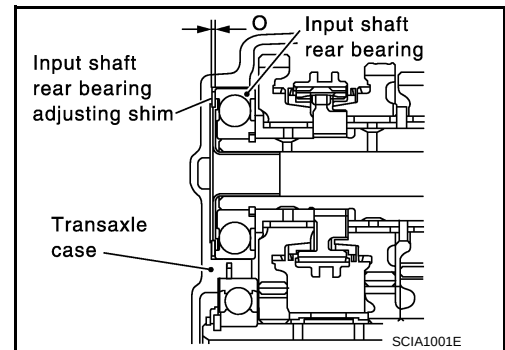

# TRANSAXLE ASSEMBLY

## < UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

- Using a depth micrometer and straightedge as shown, measure dimension (O<sub>2</sub>) between clutch housing end face and end face of input shaft rear bearing.

**CAUTION:**

(O<sub>2</sub>): Measure at 4 point by approximately 90 degrees and use the average value.

- Install selected input shaft rear bearing adjusting shim onto input shaft.

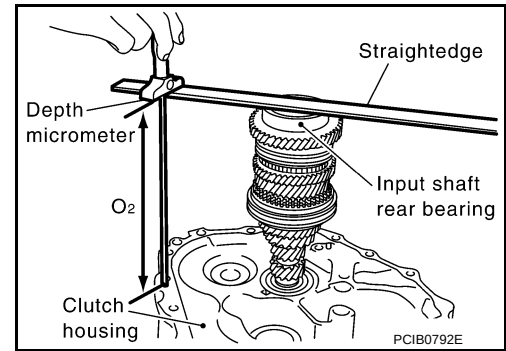


### Striking rod End Play

- When adjusting striking rod end play, select adjusting shim (1) for striking rod (2). To select adjusting shim, measure clearance between transaxle case (3) and striking rod shim (4). Refer to [TM-145, "Available Adjusting Shims"](#).

**CAUTION:**

**Only 1 adjusting shim can be selected.**

- Calculate dimension (R) (thickness of adjusting shim) using the following procedure to satisfy specification of end play for striking rod.

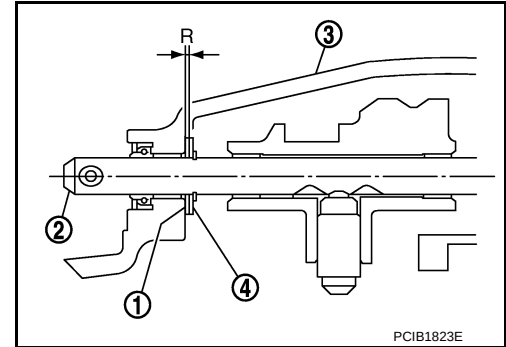

**End play** : Refer to [TM-145, "Available Adjusting Shims"](#).

**Dimension R = (R<sub>1</sub> - R<sub>2</sub>) - End play**

**R** : Thickness of adjusting shim


**R<sub>1</sub>** : Distance between transaxle case end face and mounting face of adjusting shim

**R<sub>2</sub>** : Distance between clutch housing end face and end face of striking rod shim

- Using a depth micrometer (A) and straightedge (B), measure dimension (R<sub>1</sub>) between transaxle case (1) end face and mounting face of adjusting shim.

**CAUTION:**

**R<sub>1</sub>: Measure at 4 point by approximately 90 degrees and use the average value.**

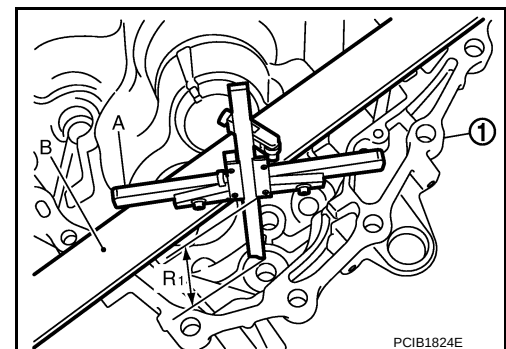


- Using a depth micrometer (A) and straightedge (B) as shown, measure dimension (R<sub>2</sub>) between clutch housing (1) end face and end face of striking rod shim (2).

**CAUTION:**

- R<sub>2</sub>: Measure at 4 point by approximately 90 degrees and use the average value.**
- When measuring, be careful for the inclination of striking rod assembly and striking rod shim.**

- Install selected striking rod adjusting shim onto striking rod assembly.

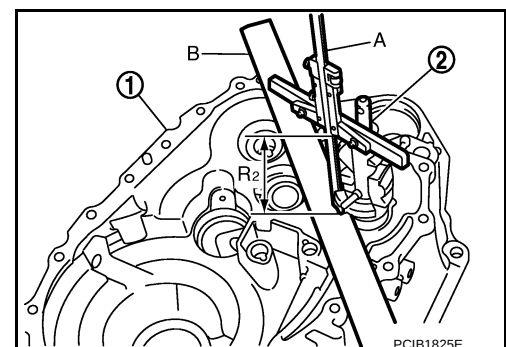

### Mainshaft End Play

# TRANSAXLE ASSEMBLY

## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

- When adjusting mainshaft end play, select adjusting shim (1) for mainshaft rear bearing (2). To select adjusting shim, measure clearance (M) between transaxle case (3) and dummy adjusting shim (4) on mainshaft rear bearing. Refer to [TM-145, "Available Adjusting Shims"](#).

5 : Snap ring

6 : Mainshaft

### CAUTION:

**Only 1 adjusting shim can be selected.**

- Calculate dimension (P) (thickness of adjusting shim) using the following procedure to satisfy specification of end play for mainshaft rear bearing.

**End play** : Refer to [TM-145, "Available Adjusting Shims"](#).

**Dimension P = (M + N) - End play**

**P** : Thickness of adjusting shim

**M** : Distance between dummy adjusting shim on mainshaft rear bearing end face and transaxle case end face

**N\*** : Thickness of dummy adjusting shim




\*: Refer to the latest parts information to use a dummy adjusting shim of which part number is the thinnest in thickness. Refer to [TM-145, "Available Adjusting Shims"](#).

- Install transaxle case following the procedures below.
  - Temporarily install snap ring of mainshaft rear bearing into transaxle case.

### CAUTION:

**Do not reuse snap ring.**

- Install dummy adjusting shim (1) to mainshaft assembly.

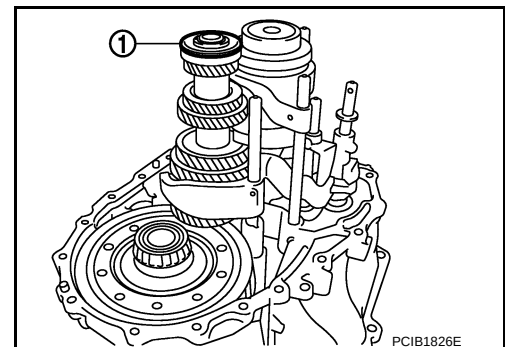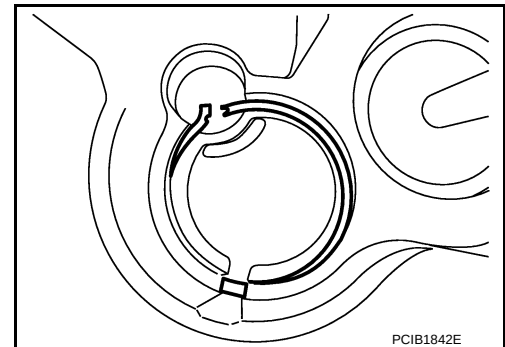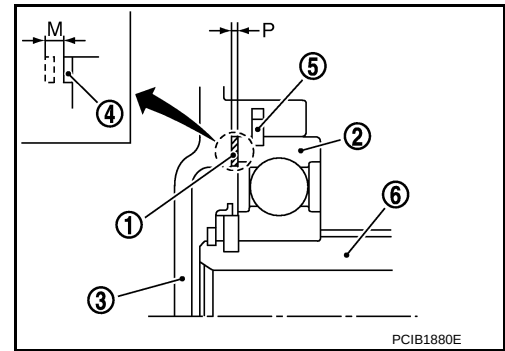

# TRANSAXLE ASSEMBLY

## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]


- c. With shifter lever A (1) held in the position shown, temporarily assemble transaxle case to clutch housing.

**CAUTION:**

**Do not damage striking rod oil seal.**


**NOTE:**

Make sure to hold shifter lever A in the position shown. Otherwise transaxle case cannot be installed to clutch housing.

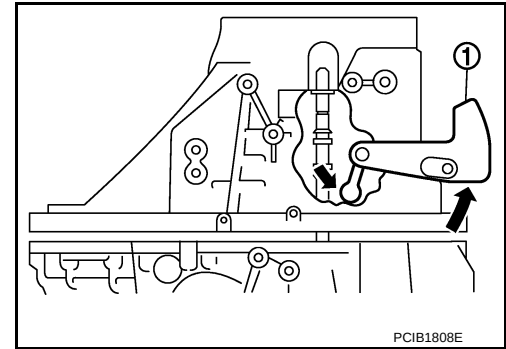


- d. While rotating shifter lever A (1) in the direction of the arrow shown, assemble transaxle case to clutch housing.

2 : shifter lever B

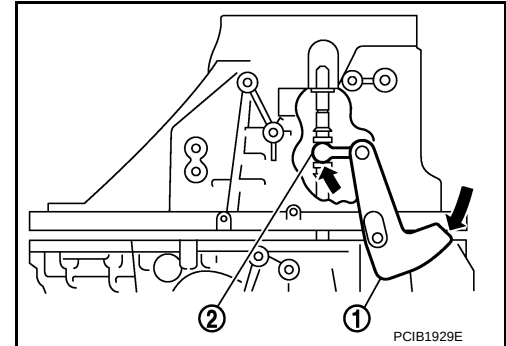


- e. Accessing from the bore plug hole, expand snap ring at mainshaft rear bearing so that the ring catches the periphery of mainshaft rear bearing.
- f. Temporarily tighten transaxle case bolts.

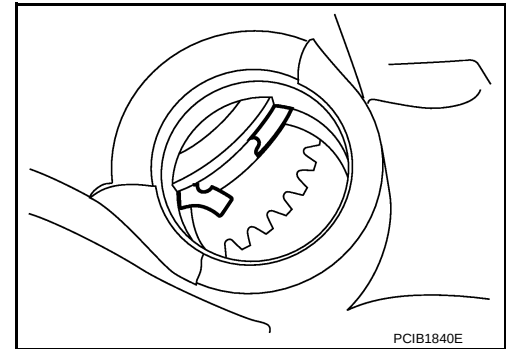


2. Shift the shifter lever A to 2nd gear position.

**NOTE:**

- The 2nd gear position is attained when shifter lever A (1) is in the position shown.

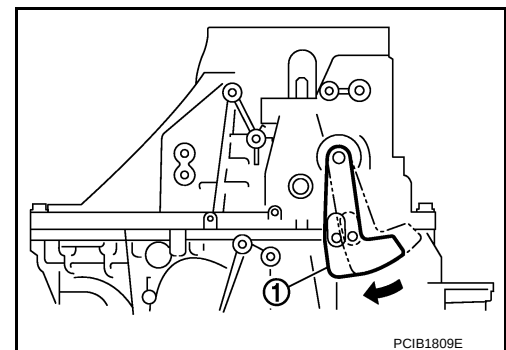

- When transaxle is shifted to the 2nd gear position, mainshaft assembly (1) is lifted.

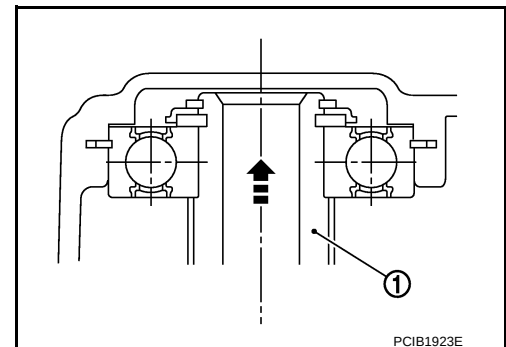

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TRANSAXLE ASSEMBLY


## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]


3. Seat snap ring in the groove on mainshaft rear bearing. If snap ring is not seated in the groove on mainshaft rear bearing, remove transaxle case and repeat the procedure 1 from step c.
4. Shift the shifter lever A to 1st gear position, and then shift it to 2nd gear position. Repeat 3 times.

**NOTE:**

- The mainshaft rear bearing position will be stabilized by shifting between 1st gear position and 2nd gear position alternately.
- The 1st gear position is attained when shifter lever A (1) is in the position shown.

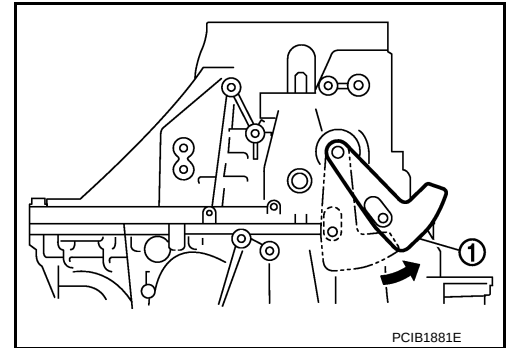


- When transaxle is shifted to the 1st gear position, mainshaft assembly (1) is declined.

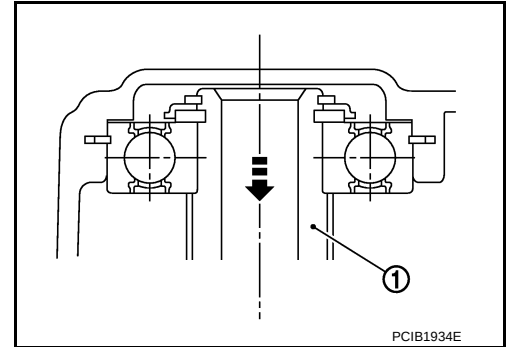

5. Set the dial indicator (A) to dummy adjusting shim (1) through the bore plug hole.

- 2 : Mainshaft rear bearing
- 3 : Snap ring

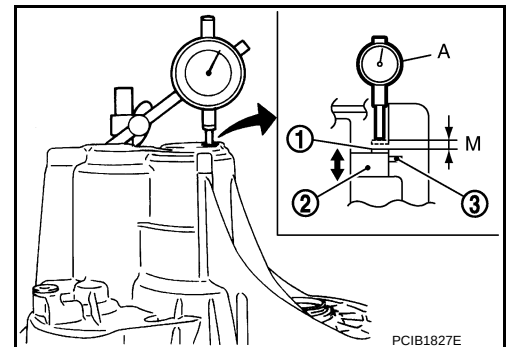


# TRANSAXLE ASSEMBLY

## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

6. Shift the shifter lever A (1) to 2nd gear position (A), and then rotate it in the direction of the arrow (C) shown until it stops. Using this position as the reference point, measure the amount of movement when shifting shifter lever A to 1st gear position (B) and rotating it in the direction of the arrow (D) shown until it stops. This measurement is the (M) dimension.
7. When measurement (M) is 0 - 0.06 mm (0 - 0.0024 in), adjustment terminates, and the dummy adjusting shim becomes regular adjusting shim. Select adjusting shim from the computed expressions when measurement (M) is over 0.06 mm (0.0024 in).

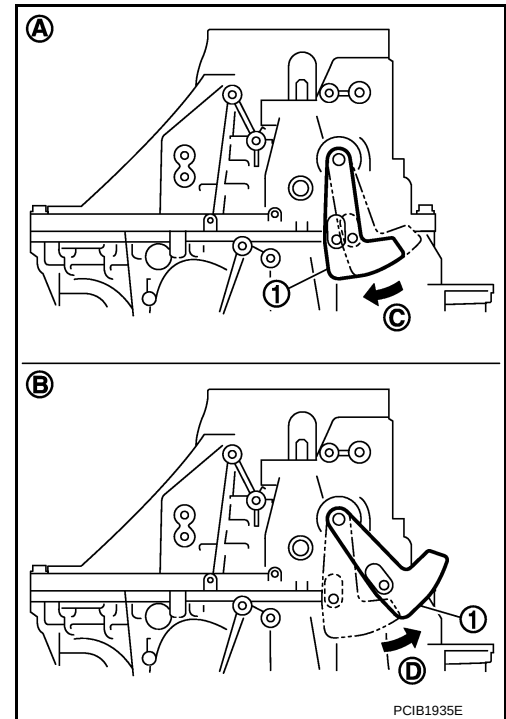

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# INPUT SHAFT AND GEARS


< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

## INPUT SHAFT AND GEARS

### Exploded View

INFOID:000000011463641

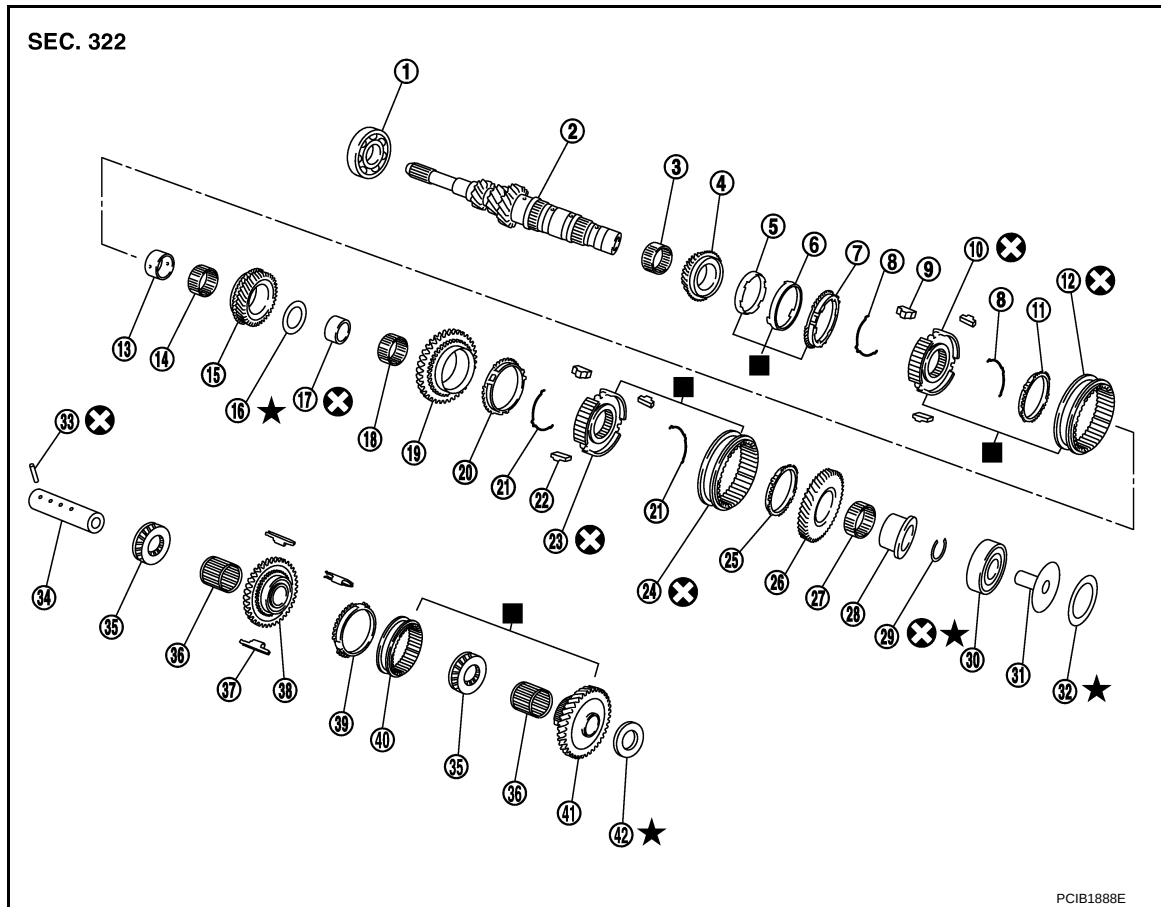

- |                              |                                             |                                       |
|------------------------------|---------------------------------------------|---------------------------------------|
| 1. Input shaft front bearing | 2. Input shaft                              | 3. 3rd needle bearing                 |
| 4. 3rd input gear            | 5. 3rd inner baulk ring                     | 6. 3rd synchronizer cone              |
| 7. 3rd outer baulk ring      | 8. 3rd-4th spread spring                    | 9. 3rd-4th shifting insert            |
| 10. 3rd-4th synchronizer hub | 11. 4th baulk ring                          | 12. 3rd-4th coupling sleeve           |
| 13. 4th input gear bushing   | 14. 4th needle bearing                      | 15. 4th input gear                    |
| 16. Thrust washer            | 17. 5th input gear bushing                  | 18. 5th needle bearing                |
| 19. 5th input gear           | 20. 5th baulk ring                          | 21. 5th-6th spread spring             |
| 22. 5th-6th shifting insert  | 23. 5th-6th synchronizer hub                | 24. 5th-6th coupling sleeve           |
| 25. 6th baulk ring           | 26. 6th input gear                          | 27. 6th needle bearing                |
| 28. 6th input gear bushing   | 29. Snap ring                               | 30. Input shaft rear bearing          |
| 31. Oil channel              | 32. Input shaft rear bearing adjusting shim | 33. Retaining pin                     |
| 34. Reverse idler shaft      | 35. Thrust needle bearing                   | 36. Reverse idler gear needle bearing |
| 37. Reverse insert spring    | 38. Reverse idler gear (front)              | 39. Reverse baulk ring                |
| 40. Reverse coupling sleeve  | 41. Reverse idler gear (rear)               | 42. Reverse idler gear adjusting shim |



: Apply gear oil.



: Replace the parts as a set.



: Always replace after every disassembly.



: N·m (kg-m, ft-lb)



# INPUT SHAFT AND GEARS

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

## Disassembly and Assembly

INFOID:0000000011463642


### DISASSEMBLY

1. Before disassembling, measure end play for 3rd, 4th, 5th, and 6th input gears.

**End play standard value**

**: Refer to [TM-143, "Gear End Play"](#).**


2. Remove oil channel.

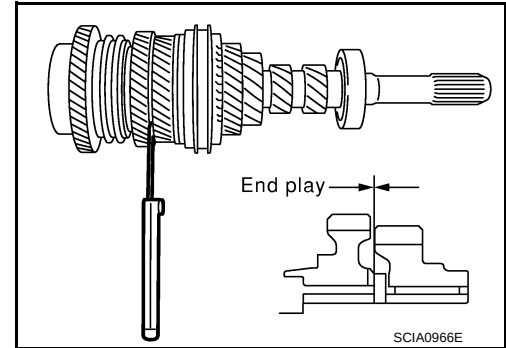

3. Press out input shaft rear bearing using Tool and a puller.

**Tool number : ST33052000 ( — )**


4. Remove snap ring.

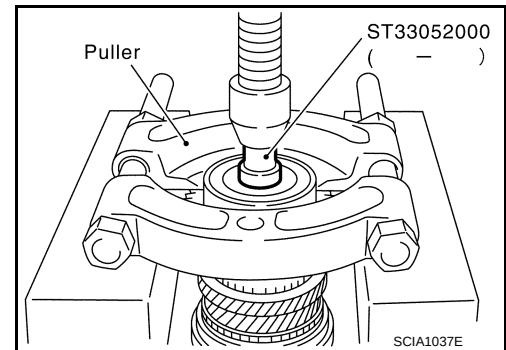

5. Press out 6th input gear, 6th needle bearing, 6th input gear bushing, 5th-6th synchronizer hub assembly, and 5th input gear using Tool (A) and a puller (B).

**Tool number A: ST33052000 ( — )**


6. Remove 5th needle bearing.

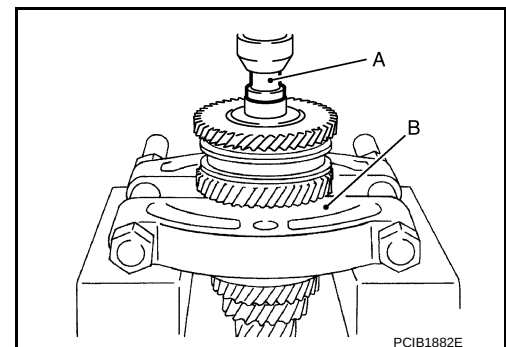

7. Press out 5th input gear bushing, thrust washer, 4th input gear, 4th needle bearing, 4th input gear bushing, 3rd-4th synchronizer hub assembly, and 3rd input gear using Tool and a puller.

**Tool number : ST33052000 ( — )**

8. Remove 3rd needle bearing.

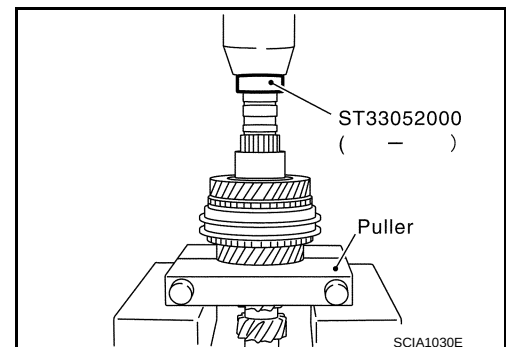


# INPUT SHAFT AND GEARS

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

9. Press out input shaft front bearing using a puller.

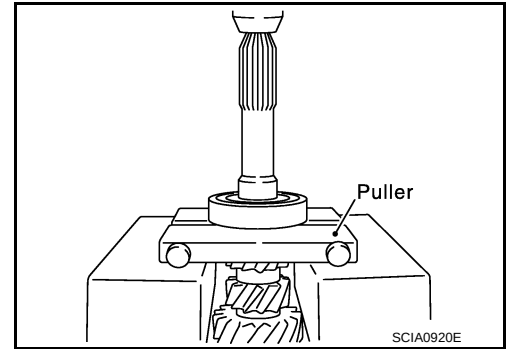


## INSPECTION AFTER DISASSEMBLY

### Input Shaft and Gears

Check items below. If necessary, replace them with new ones.


- Damage, peeling, dent, uneven wear, bending, etc. of shaft
- Excessive wear, damage, peeling, etc. of gears

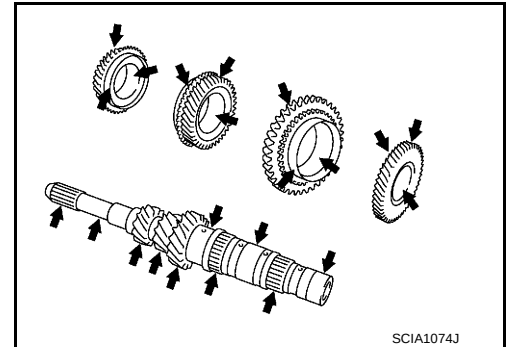


### Synchronizer

Check items below. If necessary, replace them with new ones.

- Damage and excessive wear of contact surfaces of coupling sleeve, synchronizer hub and shifting insert
- Coupling sleeve and synchronizer hub must move smoothly.

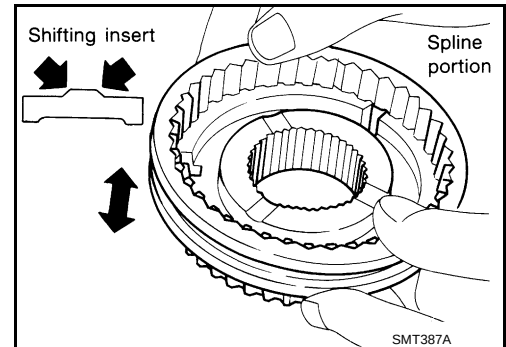

- If any crack, damage, or excessive wear is found on cam face of baulk ring or working face of insert, replace it.

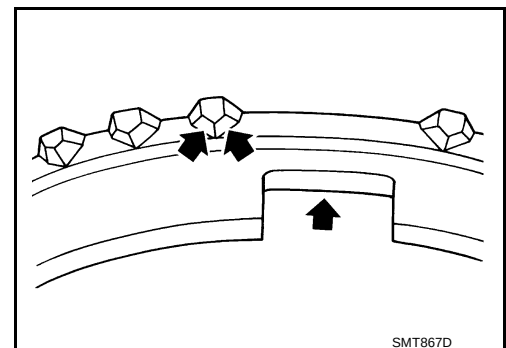

## BAULK RING CLEARANCE

- Single-cone synchronizer (4th, 5th, and 6th)

# INPUT SHAFT AND GEARS

< UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

Push baulk ring on the cone and measure the clearance between baulk ring and cone. If measurement is below limit, replace it with a new one.

## Clearance

**Standard value** : Refer to [TM-143, "Baulk Ring Clearance"](#).

**Limit value** : Refer to [TM-143, "Baulk Ring Clearance"](#).

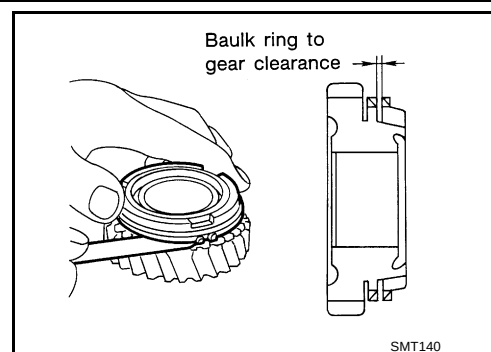


## • Double-cone synchronizer (3rd)

Check the clearance between outer baulk ring, synchronizer cone, and inner baulk ring as follows.

### CAUTION:

The clearances (A) and (B) are controlled with outer baulk ring, synchronizer cone, and inner baulk ring as a set. Replace them as a set if the clearances are outside the limit value.

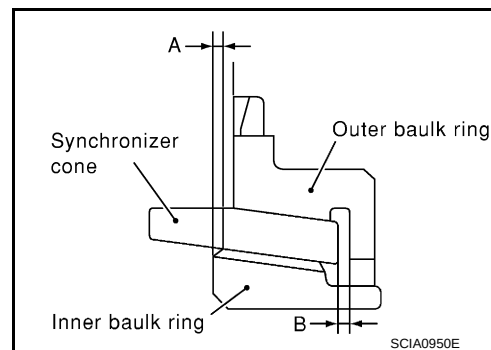


1. Measure the clearance (A) at 2 points or more diagonally opposite using a dial indicator. And then calculate mean value.

**Tool number** : ST30031000 (J-22912-01)

## Clearance (A)

**Standard value** : Refer to [TM-143, "Baulk Ring Clearance"](#).

**Limit value** : Refer to [TM-143, "Baulk Ring Clearance"](#).

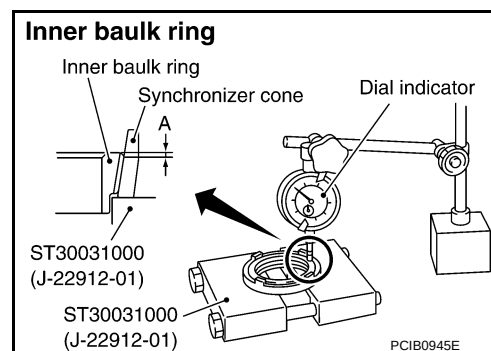


2. Measure the clearance (B) at 2 points or more diagonally opposite using a feeler gauge. And then calculate mean value.

## Clearance (B)

**Standard value** : Refer to [TM-143, "Baulk Ring Clearance"](#).

**Limit value** : Refer to [TM-143, "Baulk Ring Clearance"](#).

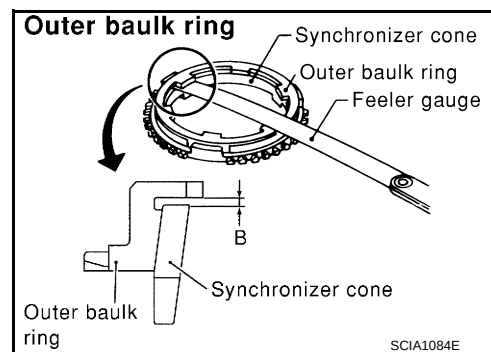

Bearing


## INPUT SHAFT AND GEARS

### < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

Check items below. If necessary, replace them with new ones.

- Damage and rough rotation of bearing

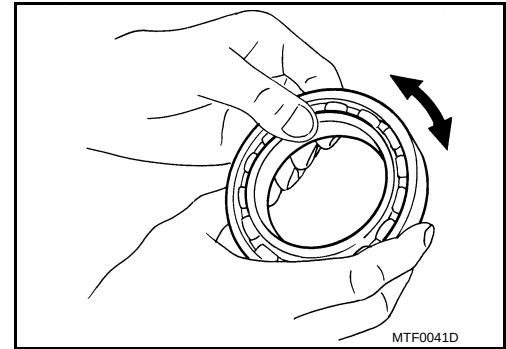


### ASSEMBLY


1. Install 3rd needle bearing to input shaft.
2. Install 3rd input gear, 3rd inner baulk ring, 3rd synchronizer cone, and 3rd outer baulk ring to input shaft.  
**CAUTION:**  
**Replace 3rd inner baulk ring, 3rd synchronizer cone, and 3rd outer baulk ring as a set.**
3. Install 3rd-4th spread springs, 3rd-4th shifting inserts, and 3rd-4th synchronizer hub onto 3rd-4th coupling sleeve.

**CAUTION:**


- Be careful with orientation of 3rd-4th synchronizer hub.
- Do not reuse 3rd-4th synchronizer hub and 3rd-4th coupling sleeve.
- Replace 3rd-4th synchronizer hub and 3rd-4th coupling sleeve as a set.

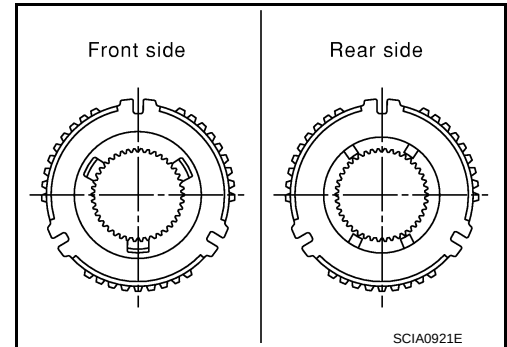

- Be careful with orientation of 3rd-4th coupling sleeve.

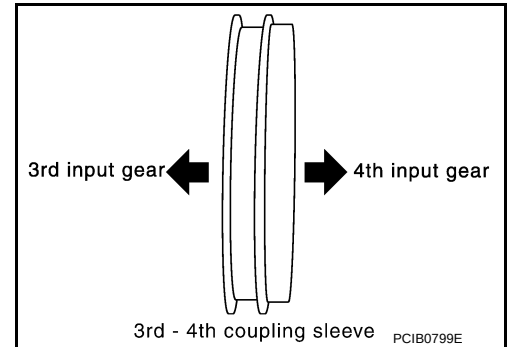

- Be sure not to hook center projection of 2 spread springs on same shifting insert.

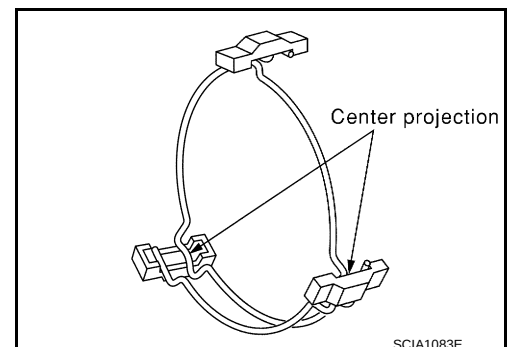

# INPUT SHAFT AND GEARS

< UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

4. Press in 3rd-4th synchronizer hub assembly using Tool.

**Tool number** : KV40105710 ( — )

**CAUTION:**


Align grooves of 3rd-4th shifting insert and 3rd outer baulk ring.

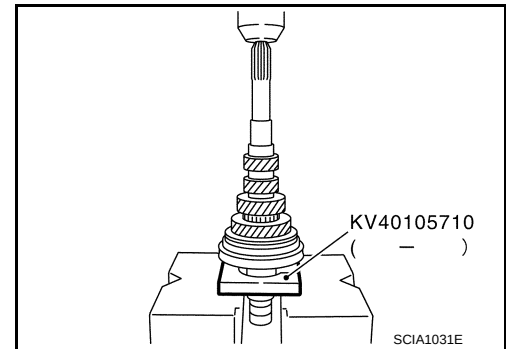

5. Press in 4th input gear bushing using Tool.

**Tool number** : KV40105710 ( — )

6. Install 4th baulk ring.  
7. Install 4th needle bearing and 4th input gear to input shaft.

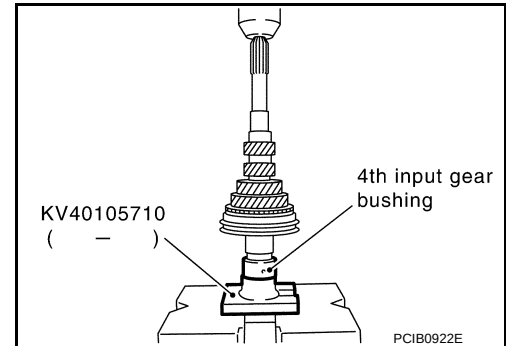


8. Select thrust washer so that dimension "C2" satisfies the standard value below. Then install thrust washer onto input shaft. Refer to [TM-144, "Available Thrust Washer"](#).

**Standard value for dimension "C2"**

: Refer to [TM-144, "Available Thrust Washer"](#).

**CAUTION:**

Only one thrust washer can be selected.

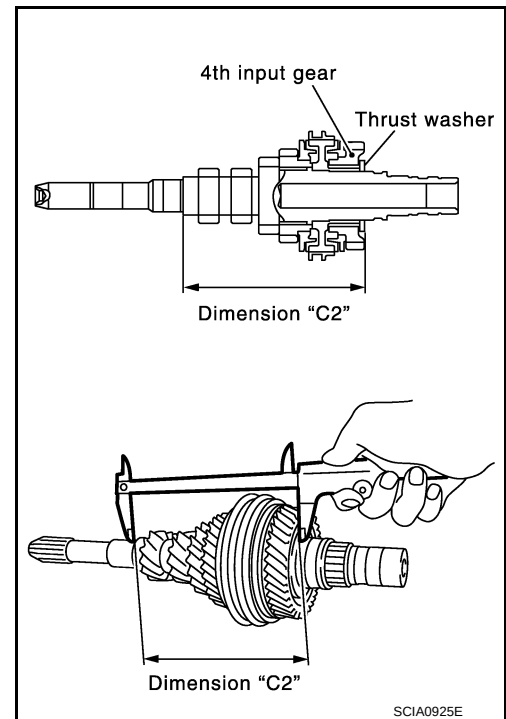


9. Press in 5th input gear bushing using Tool.

**Tool number** : KV40105710 ( — )

**CAUTION:**

Do not reuse 5th input gear bushing.

10. Install 5th needle bearing and 5th input gear to input shaft.  
11. Install 5th baulk ring.

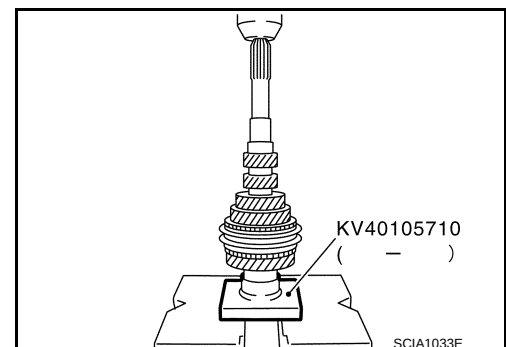

## INPUT SHAFT AND GEARS

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

12. Install 5th-6th synchronizer hub, 5th-6th spread springs, and 5th-6th shifting inserts onto 5th-6th coupling sleeve.


**CAUTION:**

- Be careful with orientation of 5th-6th synchronizer hub.

A : Front side

B : Rear side


- Do not reuse 5th-6th synchronizer hub and 5th-6th coupling sleeve.
- Replace 5th-6th synchronizer hub and 5th-6th coupling sleeve as a set.

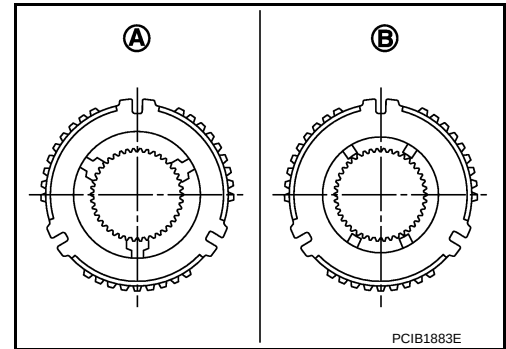


- Be careful with orientation of 5th-6th coupling sleeve.

A : 5th input gear side

B : 6th input gear side

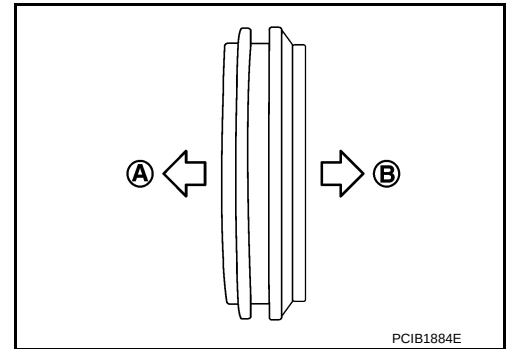

- Be sure not to hook center projection of 2 spread springs on same shifting insert.

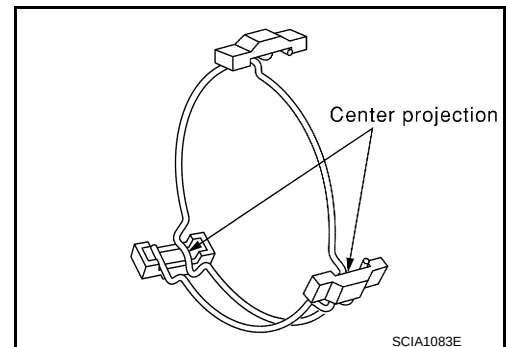


13. Press in 5th-6th synchronizer hub assembly using Tool.

**Tool number** : KV40105710 ( — )

**CAUTION:**

Align grooves of 5th-6th shifting insert and 5th baulk ring.

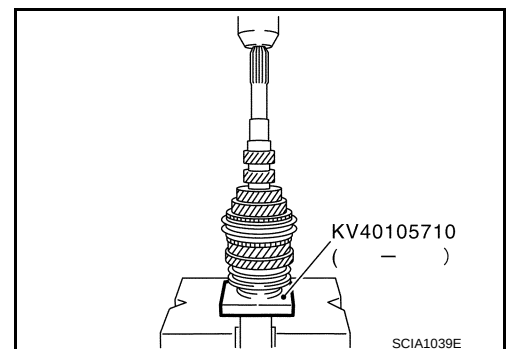


# INPUT SHAFT AND GEARS

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

14. Install 6th needle bearing, 6th input gear, 6th baulk ring onto 6th input gear bushing and then press in 6th input gear bushing onto input shaft using Tool.

**Tool number** : ST33200000 (J-26082)

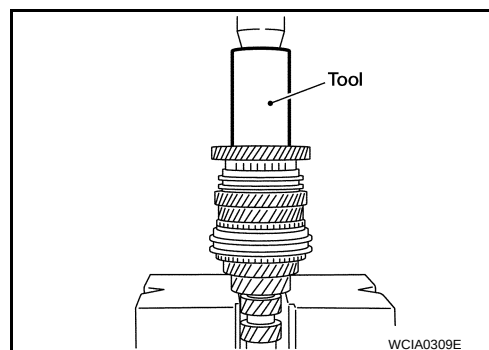

15. Install snap ring onto input shaft and make sure that end play (gap between snap ring and groove) of 6th input gear bushing satisfies the standard value.


**End play standard value**

: Refer to [TM-143, "Available Snap Rings"](#).

- If measurement is outside the standard range, select snap ring. Refer to [TM-143, "Available Snap Rings"](#).

**CAUTION:**

**Do not reuse snap ring.**

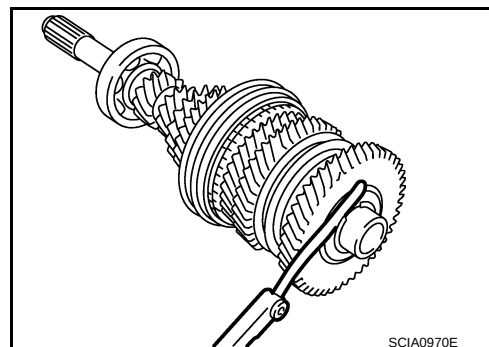


16. Press in input shaft rear bearing using Tool.

**Tool number** : ST30901000 (J-26010-01)

**CAUTION:**

**Install input shaft rear bearing with its brown surface facing the 6th input gear side.**

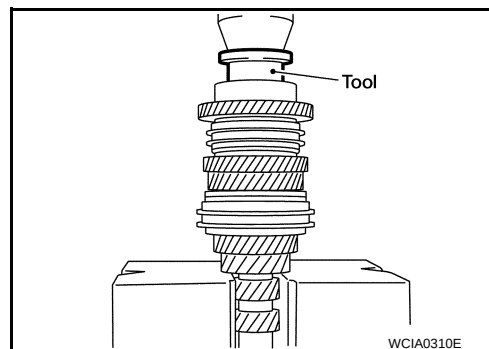


17. Press in input shaft front bearing using Tools.

**Tool number** **A:** ST33052000 ( — )

**B:** ST30032000 (J-26010-01)


18. Install oil channel onto input shaft.

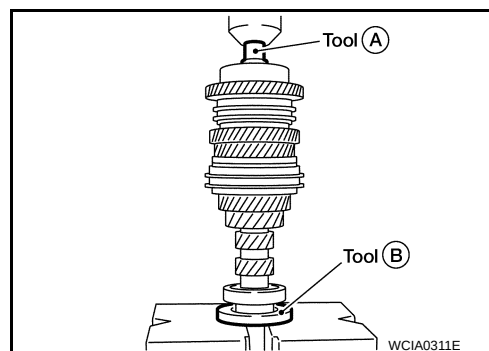

19. Check end play of 3rd, 4th, 5th, and 6th input gears.

**End play standard value**

: Refer to [TM-143, "Gear End Play"](#).

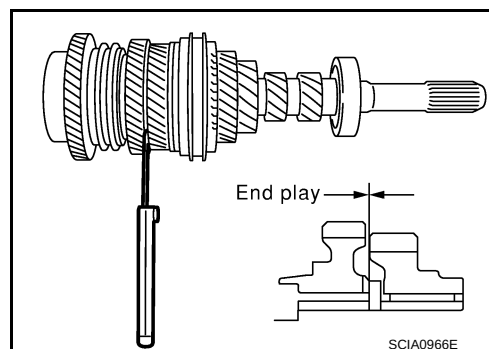

# MAINSHAFT AND GEARS

< UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

## MAINSHAFT AND GEARS

### Exploded View

INFOID:000000011463643

### MAINSHAFT AND GEARS

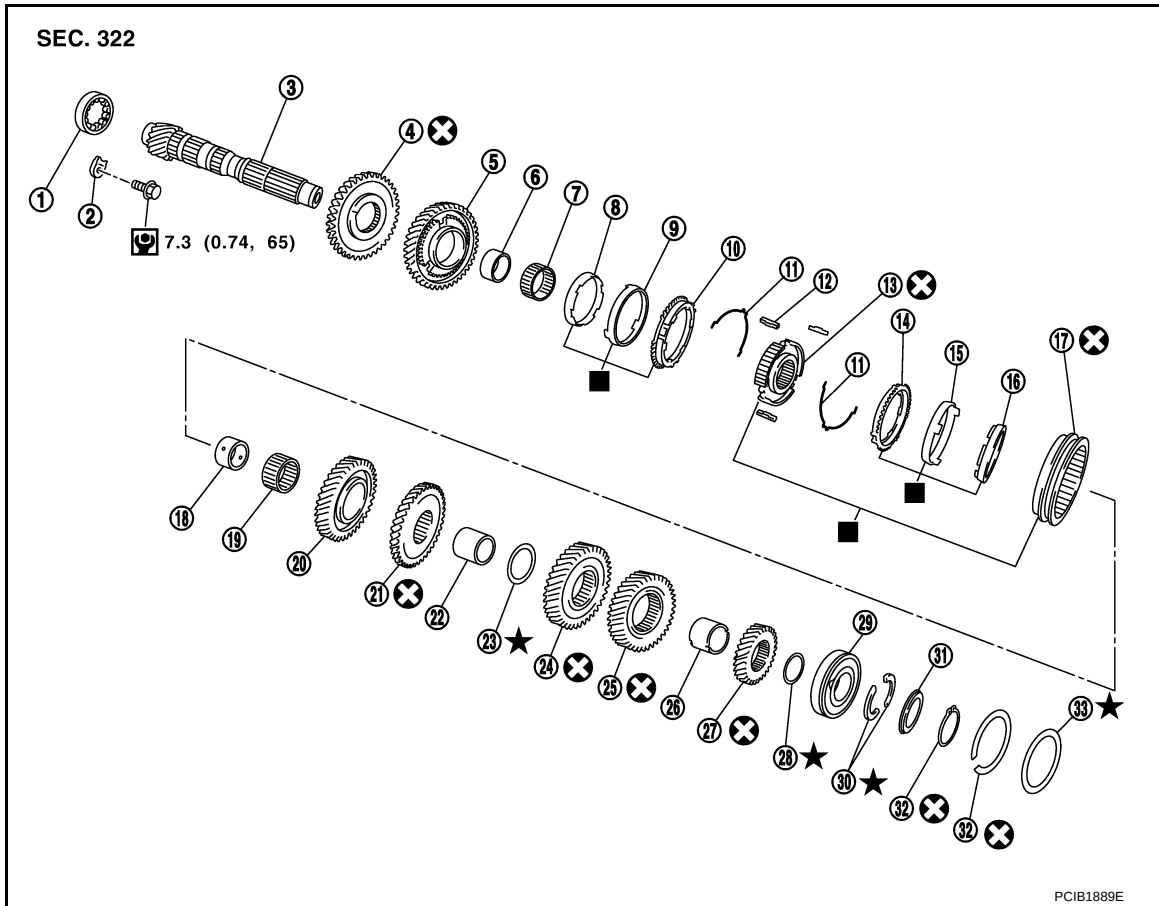

- |                                  |                                  |                                           |
|----------------------------------|----------------------------------|-------------------------------------------|
| 1. Mainshaft front bearing       | 2. Mainshaft bearing retainer    | 3. Mainshaft                              |
| 4. Reverse main gear             | 5. 1st main gear                 | 6. 1st main gear bushing                  |
| 7. 1st needle bearing            | 8. 1st inner baulk ring          | 9. 1st synchronizer cone                  |
| 10. 1st outer baulk ring         | 11. 1st-2nd spread spring        | 12. 1st-2nd shifting insert               |
| 13. 1st-2nd synchronizer hub     | 14. 2nd outer baulk ring         | 15. 2nd synchronizer cone                 |
| 16. 2nd inner baulk ring         | 17. 1st-2nd coupling sleeve      | 18. 2nd main gear bushing                 |
| 19. 2nd needle bearing           | 20. 2nd main gear                | 21. 3rd main gear                         |
| 22. 3rd-4th mainshaft spacer     | 23. 4th main gear adjusting shim | 24. 4th main gear                         |
| 25. 5th main gear                | 26. 5th-6th mainshaft spacer     | 27. 6th main gear                         |
| 28. 6th main gear adjusting shim | 29. Mainshaft rear bearing       | 30. Mainshaft C-ring                      |
| 31. C-ring holder                | 32. Snap ring                    | 33. Mainshaft rear bearing adjusting shim |

: Apply gear oil.

: Replace the parts as a set.

: Always replace after every disassembly.

: N·m (kg-m, ft-lb)

### Disassembly and Assembly

INFOID:000000011463644

### DISASSEMBLY



# MAINSHAFT AND GEARS


< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]


- Before disassembling, measure the end play of 1st and 2nd main gears.

**End play standard value**

: Refer to [TM-143, "Gear End Play"](#).

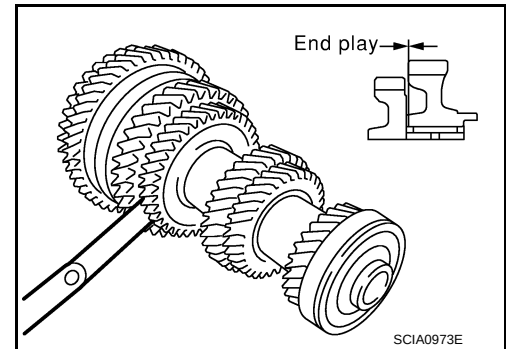


- Remove snap ring.
- Remove C-ring holder and then remove mainshaft C-rings.

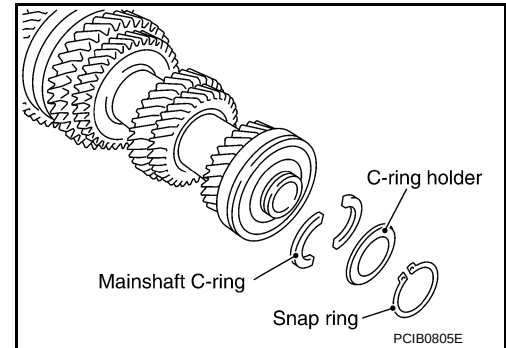

- Press out mainshaft rear bearing, 6th main gear adjusting shim, and 6th main gear using Tool and a puller.

**Tool number** : ST33052000 ( — )


- Remove 5th-6th mainshaft spacer.

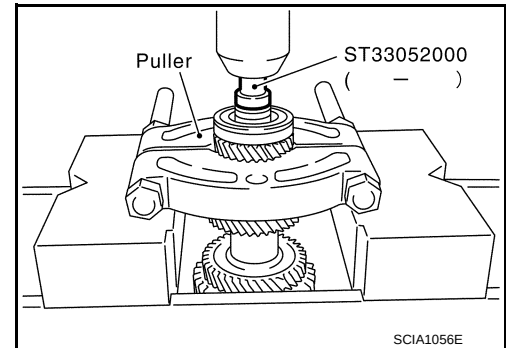

- Press out 4th main gear and 5th main gear using Tool and a puller.

**Tool number** : ST33052000 ( — )


- Remove 4th main gear adjusting shim.
- Remove 3rd-4th mainshaft spacer.

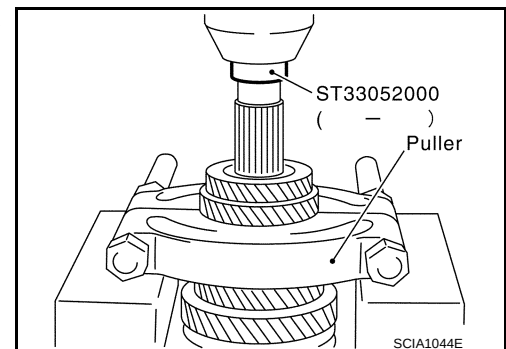

- Press out 3rd main gear and 2nd main gear using Tool (A) and a puller (B).

**Tool number** A: KV40105020 ( — )

- Remove 2nd needle bearing.

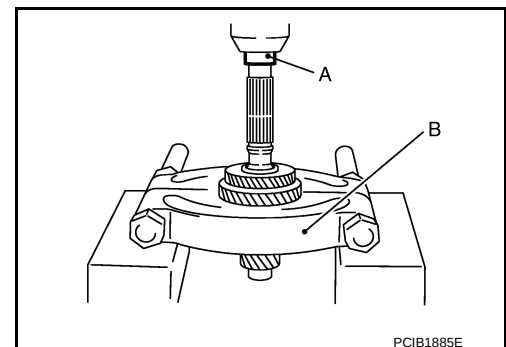


# MAINSHAFT AND GEARS

## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

11. Press out 2nd main gear bushing, 1st-2nd synchronizer hub assembly, 1st main gear, 1st needle bearing, 1st main gear bushing, and reverse main gear using Tool (A).

Tool number      A: KV40105020 ( — )

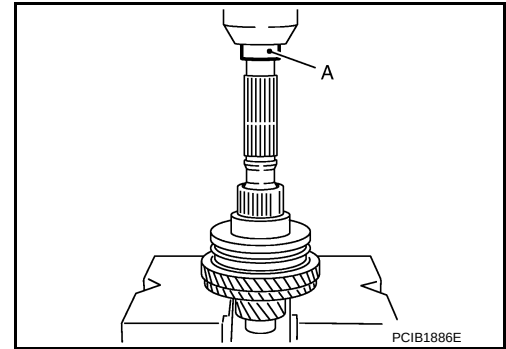


## INSPECTION AFTER DISASSEMBLY

### Mainshaft and Gears

Check items below. If necessary, replace them with new ones.


- Damage, peeling, dent, uneven wear, bending, and other non-standard conditions of the shaft.
- Excessive wear, damage, peeling, and other non-standard conditions of the gears.

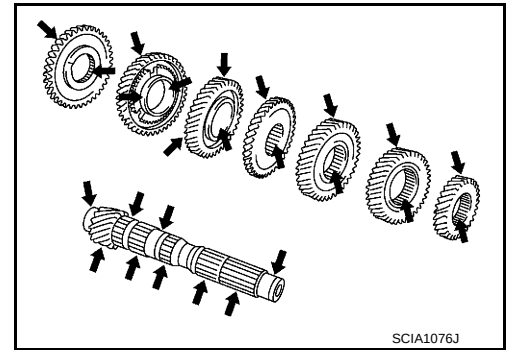


### Synchronizer

Check items below. If necessary, replace them with new ones.

- Damage and unusual wear on contact surfaces of coupling sleeve, synchronizer hub and shifting insert.
- Coupling sleeve and synchronizer hub must move smoothly.

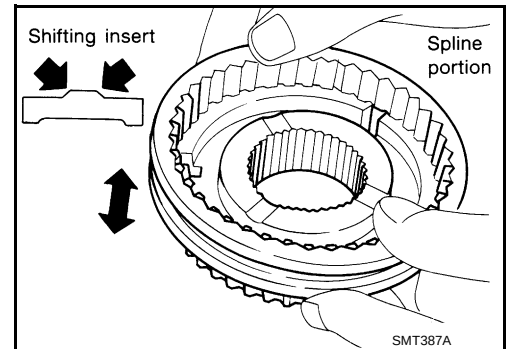

- If any crack, damage, or excessive wear is found on cam face of baulk ring or working face of insert, replace it.

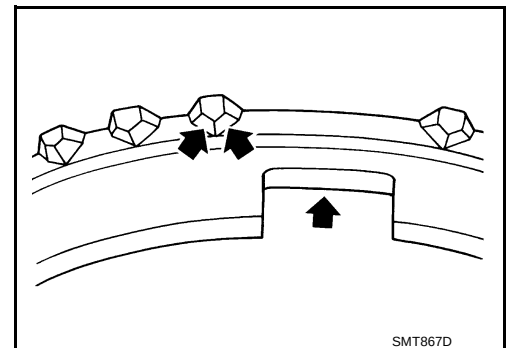

## BAULK RING CLEARANCE

Triple-cone synchronizer (1st and 2nd)

# MAINSHAFT AND GEARS


## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

- Check the clearance between outer baulk ring, synchronizer cone, and inner baulk ring as follows.

### CAUTION:

The clearances (A), B, and (C) are controlled with outer baulk ring, synchronizer cone, and inner baulk ring as a set. Replace them as a set if the clearances are outside the limit value.

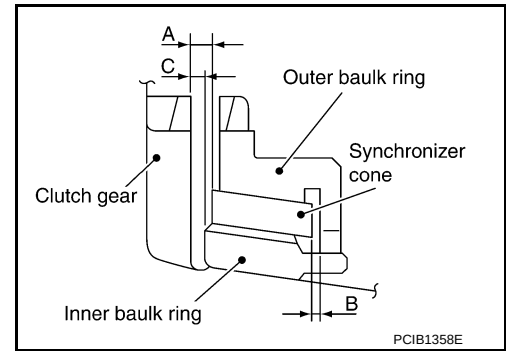


- Measure the clearance (A) at 2 points or more diagonally opposite using a feeler gauge when pressing baulk ring toward clutch gear taper cone. And then calculate mean value.

### Clearance (A)

Standard value : Refer to [TM-143, "Baulk Ring Clearance"](#).

Limit value : Refer to [TM-143, "Baulk Ring Clearance"](#).

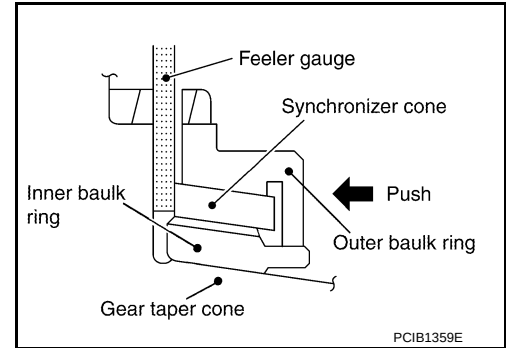


- Measure the clearance (B) at 2 points or more diagonally opposite using a feeler gauge. And then calculate mean value.

### Clearance (B)

Standard value : Refer to [TM-143, "Baulk Ring Clearance"](#).

Limit value : Refer to [TM-143, "Baulk Ring Clearance"](#).

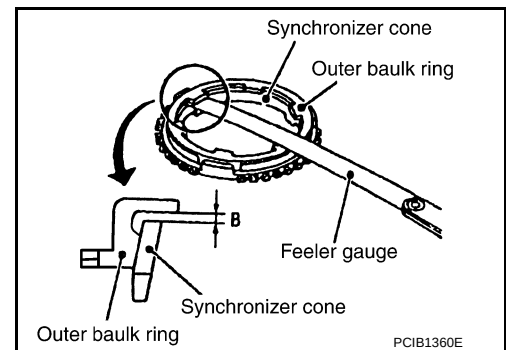


- Measure the clearance (C) at 2 points or more diagonally opposite using a feeler gauge when pressing baulk ring toward clutch gear taper cone. And then calculate mean value.

### Clearance (C)

Standard value : Refer to [TM-143, "Baulk Ring Clearance"](#).

Limit value : Refer to [TM-143, "Baulk Ring Clearance"](#).

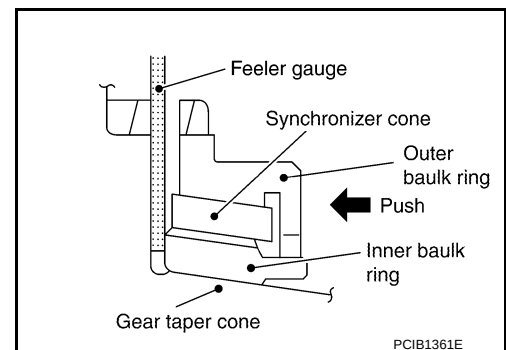

Bearing


## MAINSHAFT AND GEARS

### < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

Check items below. If necessary, replace them with new ones.


- Damage and rough rotation of bearing

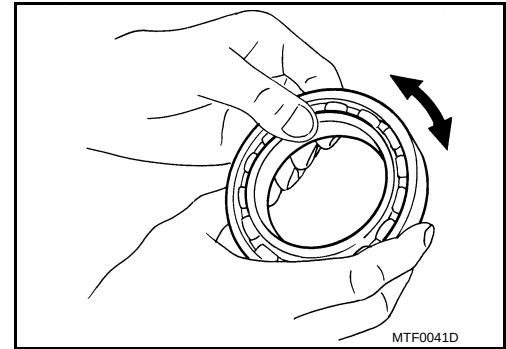

### ASSEMBLY


1. Press in reverse main gear using Tools.

**Tool number** : KV40101630 (J-35870)  
: ST35321000 ( — )  
: ST38220000 ( — )

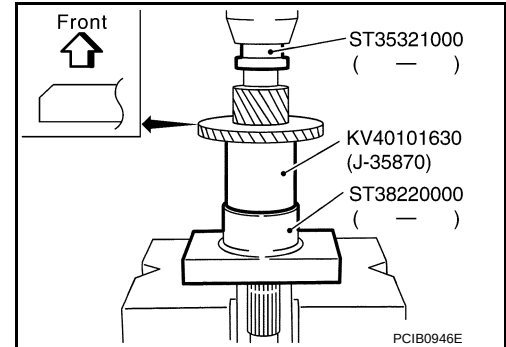

#### CAUTION:


- Be careful with orientation of reverse main gear.
- Do not reuse reverse main gear.

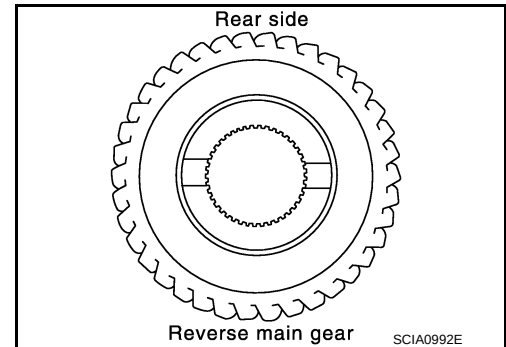

2. Press in 1st main gear bushing using Tools.

**Tool number** : KV38102510 ( — )  
: ST35321000 ( — )  
: ST38220000 ( — )

3. Install 1st needle bearing and then 1st main gear.

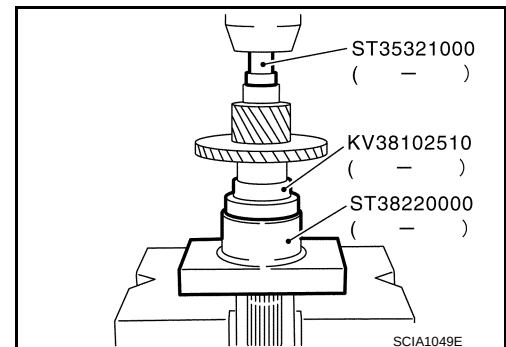

4. Install 1st-2nd spread springs, 1st-2nd shifting inserts, and 1st-2nd synchronizer hub onto 1st-2nd coupling sleeve.


#### CAUTION:

# MAINSHAFT AND GEARS


< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]


- Be careful with orientation of 1st-2nd synchronizer hub.
- Do not reuse 1st-2nd synchronizer hub and 1st-2nd coupling sleeve.
- Replace 1st-2nd synchronizer hub and 1st-2nd coupling sleeve as a set.

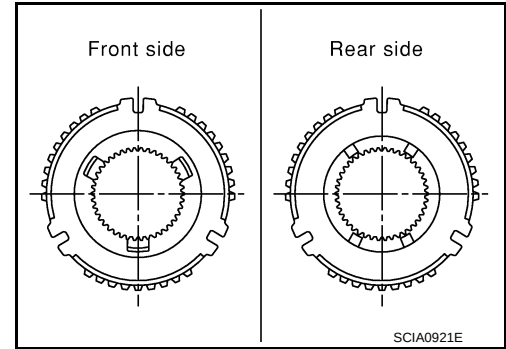

- Be careful with orientation of 1st-2nd coupling sleeve.

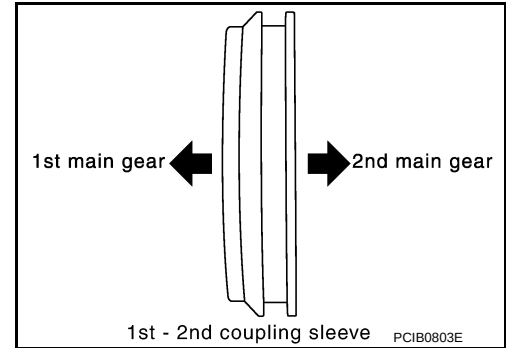

- Be sure not to hook center projection of 2 spread springs on same 1st-2nd shifting insert.

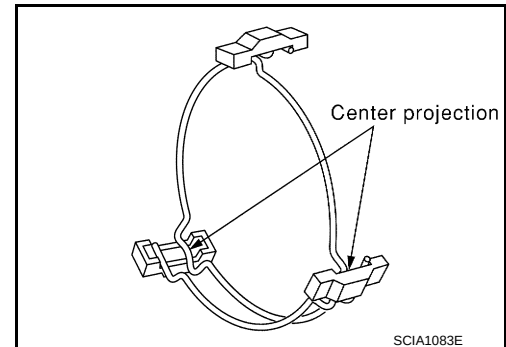


5. Install 1st inner baulk ring, 1st synchronizer cone, and 1st outer baulk ring onto mainshaft and then press in 1st-2nd synchronizer hub assembly onto mainshaft using Tools.

**Tool number** : KV40101630 (J-35870)  
: ST35321000 ( — )  
: ST38220000 ( — )

## CAUTION:

- Outer baulk ring, synchronizer cone, and inner baulk ring on 2nd gear-side must have been removed.
- Be careful with orientation of coupling sleeve.
- Replace 1st inner baulk ring, 1st synchronizer cone, and 1st outer baulk ring as a set.

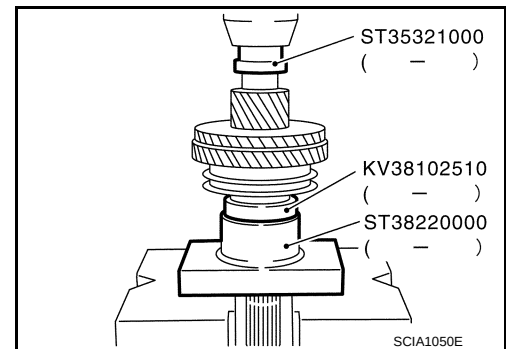

# 

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

6. Press in 2nd main gear bushing using Tools.

**Tool number** : KV40105710 ( — )  
: ST35321000 ( — )

7. Install 2nd outer baulk ring, 2nd synchronizer cone, and 2nd inner baulk ring.

**CAUTION:**

Replace 2nd outer baulk ring, 2nd synchronizer cone, and 2nd inner baulk ring as a set.

8. Install 2nd needle bearing and 2nd main gear.

9. Press in 3rd main gear using Tools.

**Tool number** : KV40105710 ( — )  
: ST35321000 ( — )

**CAUTION:**

- Be careful with orientation of 3rd main gear.
- Do not reuse 3rd main gear.

10. Install 3rd-4th mainshaft spacer.




11. Select 4th main gear adjusting shim so that dimension "C1" satisfies the standard value below and install 4th main gear adjusting shim onto mainshaft. Refer to [TM-145, "Available Adjusting Shims"](#).

**Standard value for dimension "C1"**

: Refer to [TM-145, "Available Adjusting Shims"](#).

**CAUTION:**

Only one adjusting shim can be selected.

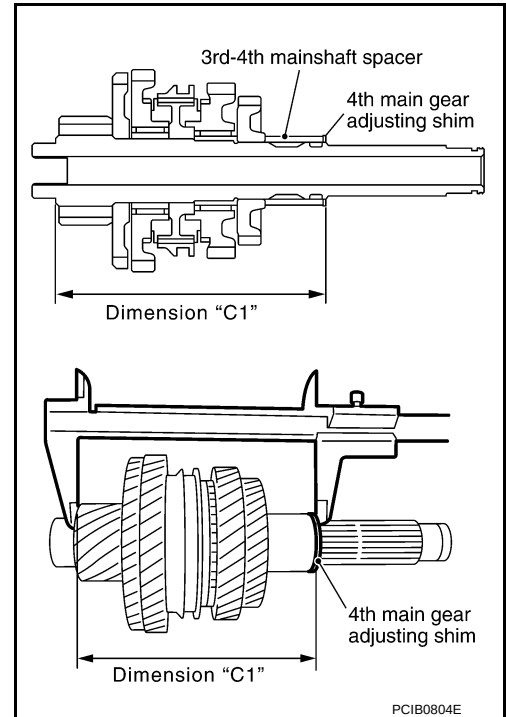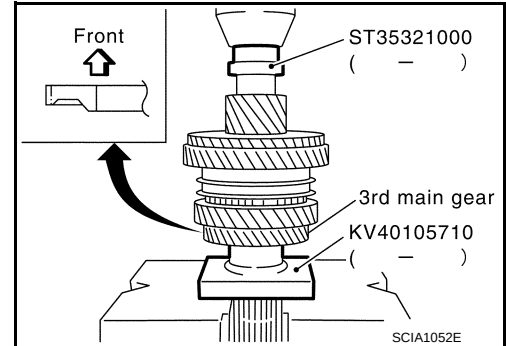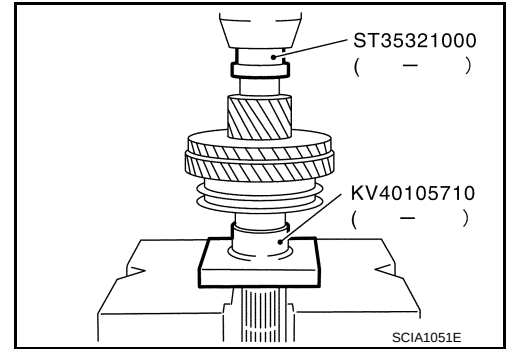


12. Press in 4th main gear using Tools.

**Tool number** : ST33200000 (J-26082)  
: ST30901000 (J-26010-01)

**CAUTION:**

- Be careful with orientation of 4th main gear.
- Do not reuse 4th main gear.

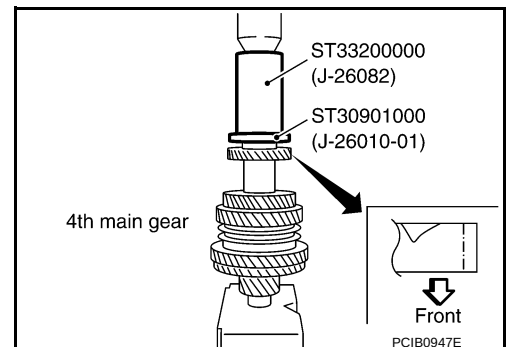

# MAINSHAFT AND GEARS

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

13. Press in 5th main gear using Tools.

**Tool number** : ST33200000 (J-26082)  
: ST30901000 (J-26010-01)

**CAUTION:**

- Be careful with orientation of 5th main gear.
- Do not reuse 5th main gear.

14. Install 5th-6th mainshaft spacer.

15. Press in 6th main gear using Tools (A), (B).

**Tool number** A: ST33200000 (J-26082)  
B: ST30901000 (J-26010-01)

**CAUTION:**

Do not reuse 6th main gear.

16. Select 6th main gear adjusting shim and then install it onto mainshaft.

- Calculate thickness (S) of 6th main gear adjusting shim following the procedure below so that end play dimension between 6th main gear and mainshaft rear bearing becomes the dimension shown below. Refer to [TM-145, "Available Adjusting Shims"](#).

**End play** :Refer to [TM-145, "Available Adjusting Shims"](#).

**Dimension S = (S<sub>1</sub> - S<sub>2</sub>) - End play**

**S** : Thickness of adjusting shim

**S<sub>1</sub>** : Dimension from mainshaft standard face to mainshaft rear bearing press-fit end face

**S<sub>2</sub>** : Dimension from mainshaft standard face to 6th main gear end face





**CAUTION:**

Only one adjusting shim can be selected.

- Measure dimension (S<sub>1</sub>) and (S<sub>2</sub>) using a height gauge (A) and pick tester (B).
- Install selected 6th main gear adjusting shim to mainshaft.

17. Press in mainshaft rear bearing using Tools.

**Tool number** A: ST30720000 (J-25405)  
B: ST30901000 (J-26010-01)

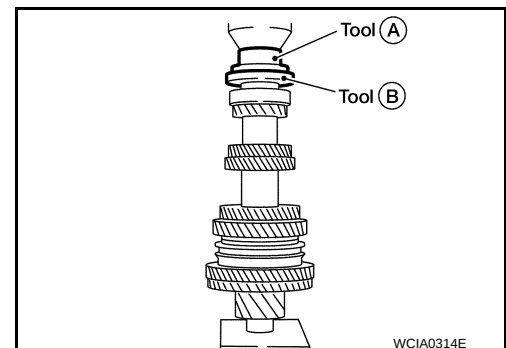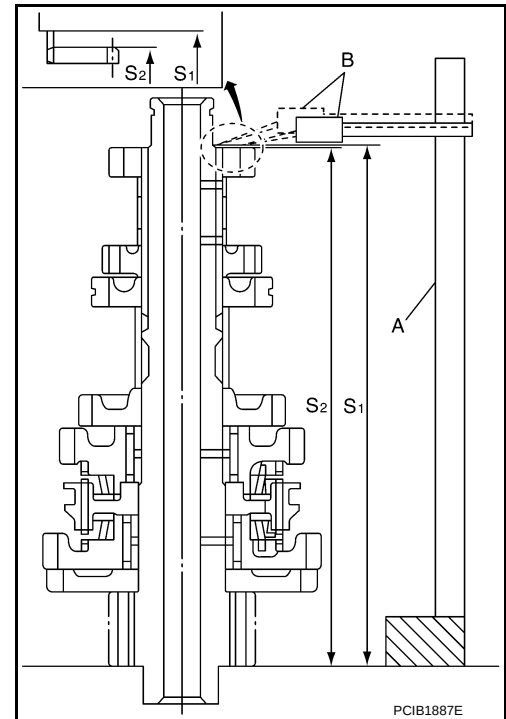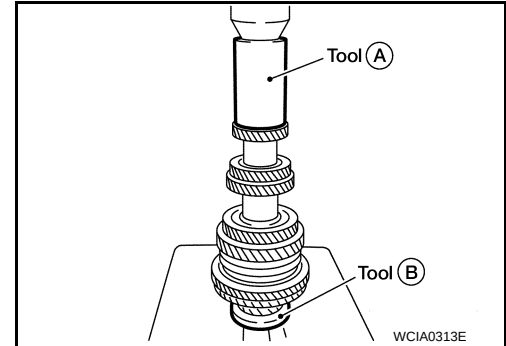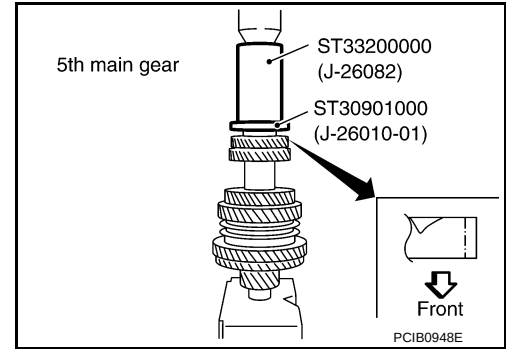

## MAINSHAFT AND GEARS

< UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

18. Install mainshaft C-rings onto mainshaft and check that end play of mainshaft rear bearing satisfies the standard value.

**End play standard value**

: Refer to [TM-144, "Available C-Rings"](#).


- If measurement is outside the standard range, reselect mainshaft C-rings. Refer to [TM-144, "Available C-Rings"](#).

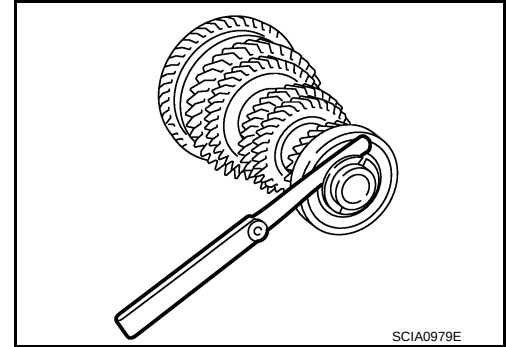

19. Install C-ring holder and then install snap ring.

**CAUTION:**


**Do not reuse snap ring.**

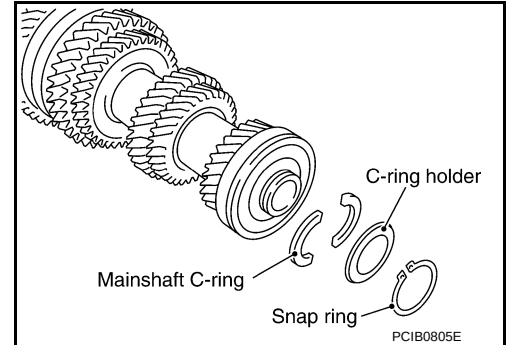

20. Check end play of 1st and 2nd main gears.

**End play standard value**

: Refer to [TM-143, "Gear End Play"](#).

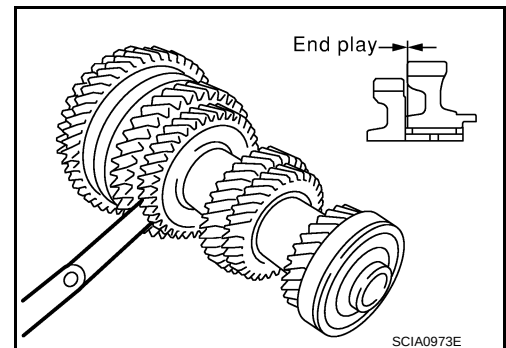



# REVERSE IDLER SHAFT AND GEARS

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

## REVERSE IDLER SHAFT AND GEARS

### Disassembly and Assembly

INFOID:0000000011463645

#### DISASSEMBLY


1. Remove reverse idler gear (rear), reverse coupling sleeve, and reverse insert springs simultaneously.
2. Remove reverse idler gear needle bearing.
3. Remove thrust needle bearing.
4. Remove reverse baulk ring.
5. Remove reverse idler gear (front).
6. Remove reverse idler gear needle bearing.
7. Remove thrust needle bearing.
8. Remove retaining pin from reverse idler shaft.

#### INSPECTION AFTER DISASSEMBLY

##### Reverse Idler Shaft and Gears

Check items below. If necessary, replace them with new ones.


- Damage, peeling, dent, uneven wear, bending, and other non-standard conditions of the shaft.
- Excessive wear, damage, peeling, and other non-standard conditions of the gears.

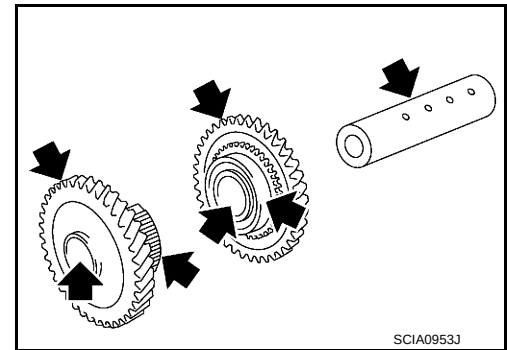


##### Synchronizer

Check items below. If necessary, replace them with new ones.

- Damage and unusual wear on contact surfaces of coupling sleeve, synchronizer hub of reverse idler gear (rear), and insert spring.
- Coupling sleeve and synchronizer hub of reverse idler gear (rear) must move smoothly.

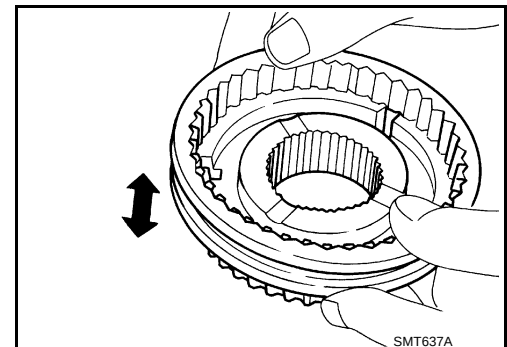

- If any crack, damage, or excessive wear is found on cam face of baulk ring or working face of insert, replace it.

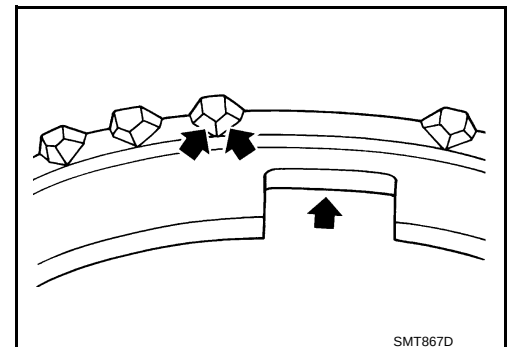

#### BAULK RING CLEARANCE

## REVERSE IDLER SHAFT AND GEARS

### < UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

- Push baulk ring on the cone and measure the clearance between baulk ring and cone. If the measurement is below limit, replace it with a new one.

#### Clearance

**Standard value** : Refer to [TM-143, "Baulk Ring Clearance"](#).

**Limit value** : Refer to [TM-143, "Baulk Ring Clearance"](#).

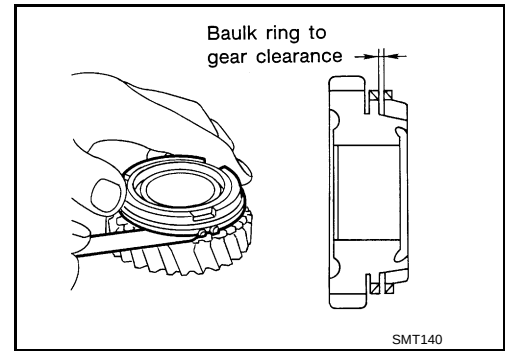

#### Bearing

Check items below. If necessary, replace them with new ones.

- Damage and rough rotation of bearing.


### ASSEMBLY

Note the following, and assemble in the reverse order of disassembly.

#### CAUTION:

- **Do not reuse retaining pin.**
- **Be careful with orientation of reverse insert spring.**

← : Front

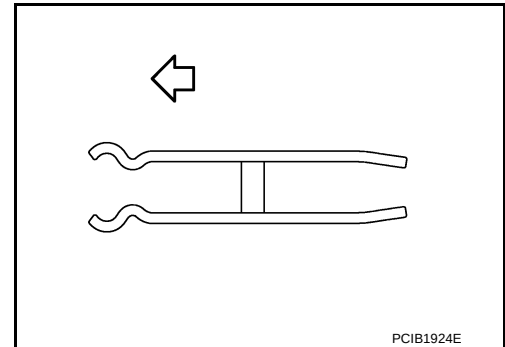

# FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]


## FINAL DRIVE

### Exploded View

INFOID:0000000011463646

FINAL DRIVE

FINAL DRIVE

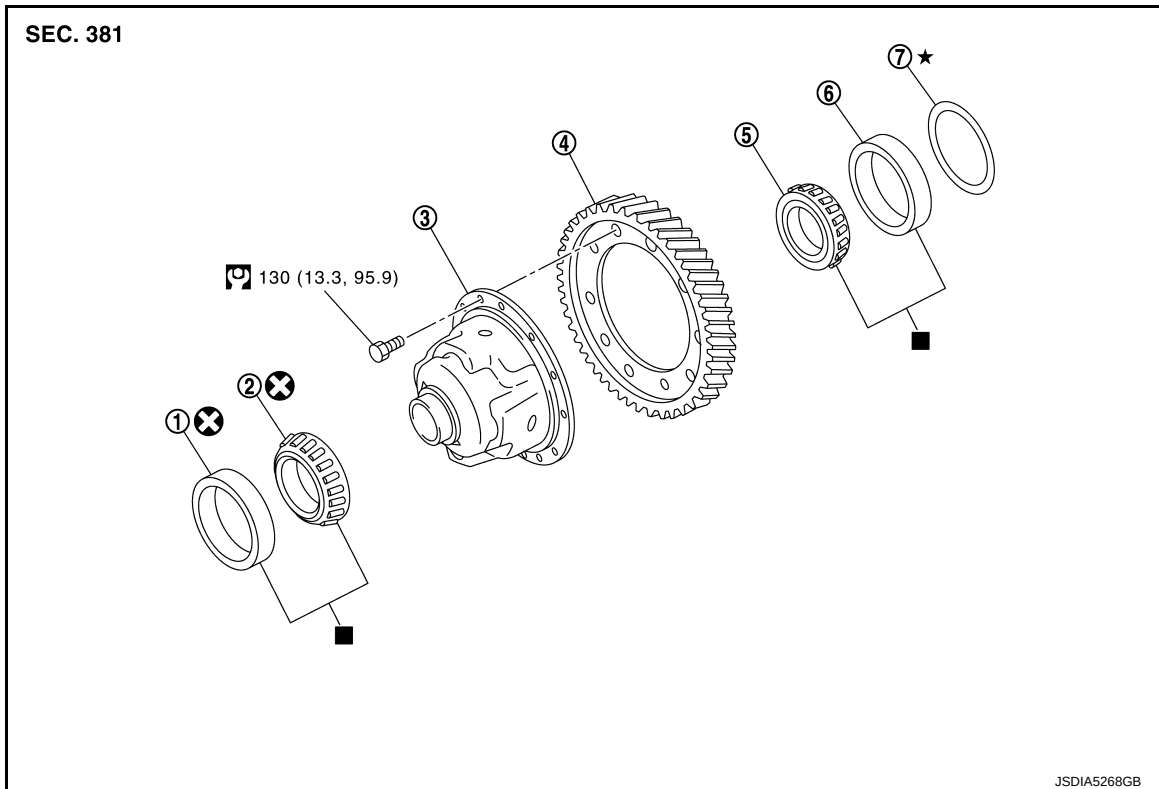

- |                                                               |                                                    |                                                               |
|---------------------------------------------------------------|----------------------------------------------------|---------------------------------------------------------------|
| 1. Differential side bearing outer race (clutch housing side) | 2. Differential side bearing (clutch housing side) | 3. Differential case assembly                                 |
| 4. Final gear                                                 | 5. Differential side bearing (transaxle case side) | 6. Differential side bearing outer race (transaxle case side) |
| 7. Differential side bearing adjusting shim                   |                                                    |                                                               |

■ : Replace the parts as a set.

⊗ : N·m (kg·m, ft·lb)

## Disassembly and Assembly

INFOID:0000000011463647


### DISASSEMBLY

1. Remove final gear bolts and then separate the final gear from differential case.
2. Remove differential side bearing (clutch housing side) using Tool and pullers (B).

**Tool number**     **A: ST33061000 (J-8107-2)**

### CAUTION:

Hook a puller on the cage of differential side bearing.

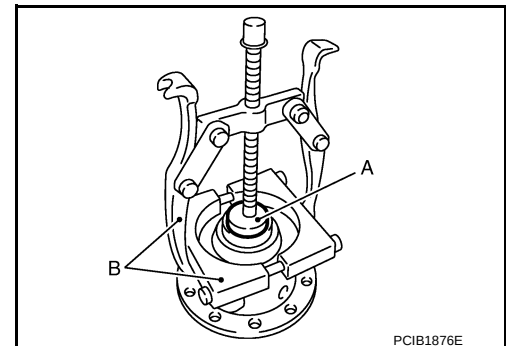

## FINAL DRIVE

### < UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

3. Remove differential side bearing (transaxle case side) using Tool and puller.

**Tool number**     **A: ST33061000 (J-8107-2)**

**CAUTION:**

Hook a puller on the inner race of differential side bearing.

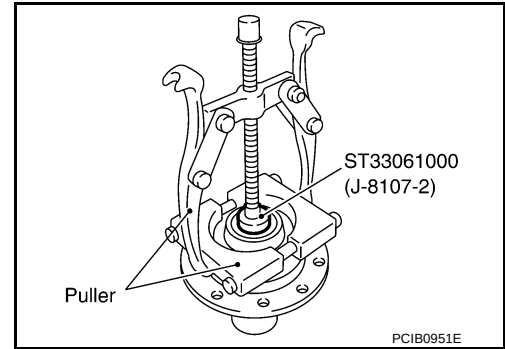


### INSPECTION AFTER DISASSEMBLY

#### Bearing

- Check for bearings damage and rough rotation. If necessary, replace with a new one.

**CAUTION:**

When replacing tapered roller bearing, replace outer and inner races as a set.

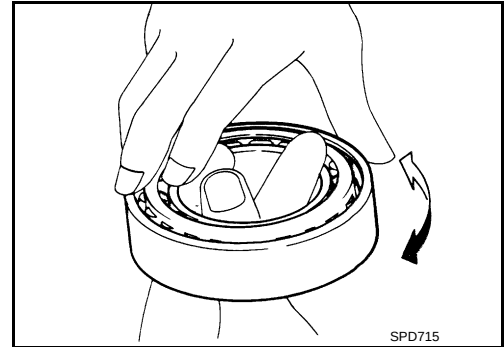


### ASSEMBLY

1. Press in differential side bearing (transaxle case side) to differential case using Tools.

**Tool number**     : KV38102510 ( — )  
                             : ST30720000 (J-25405)

**CAUTION:**

Replace differential side bearing and differential side bearing outer race as a set.

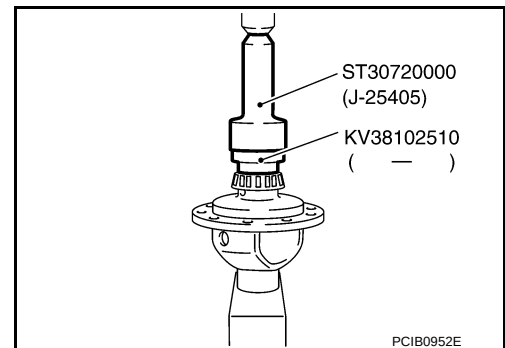


2. Press in differential side bearing (clutch housing side) to differential case using Tools.

**Tool number**     **A: ST30720000 (J-25405)**  
                             **B: KV38102510 ( — )**

**CAUTION:**

- Do not reuse differential side bearing and differential side bearing outer race.
- Replace differential side bearing and differential side bearing outer race as a set.

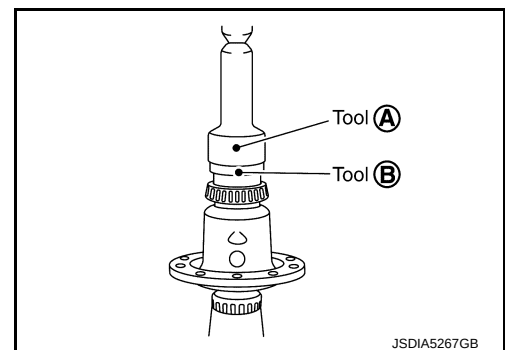


## FINAL DRIVE

### < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]

3. Install final gear into differential case and tighten final gear bolts to the specified torque. Refer to [TM-135, "Exploded View"](#).

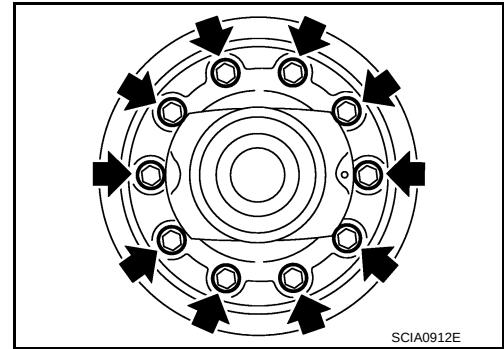

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# SHIFT CONTROL

< UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

## SHIFT CONTROL

### Exploded View

INFOID:000000011463648

### SHIFT CONTROL

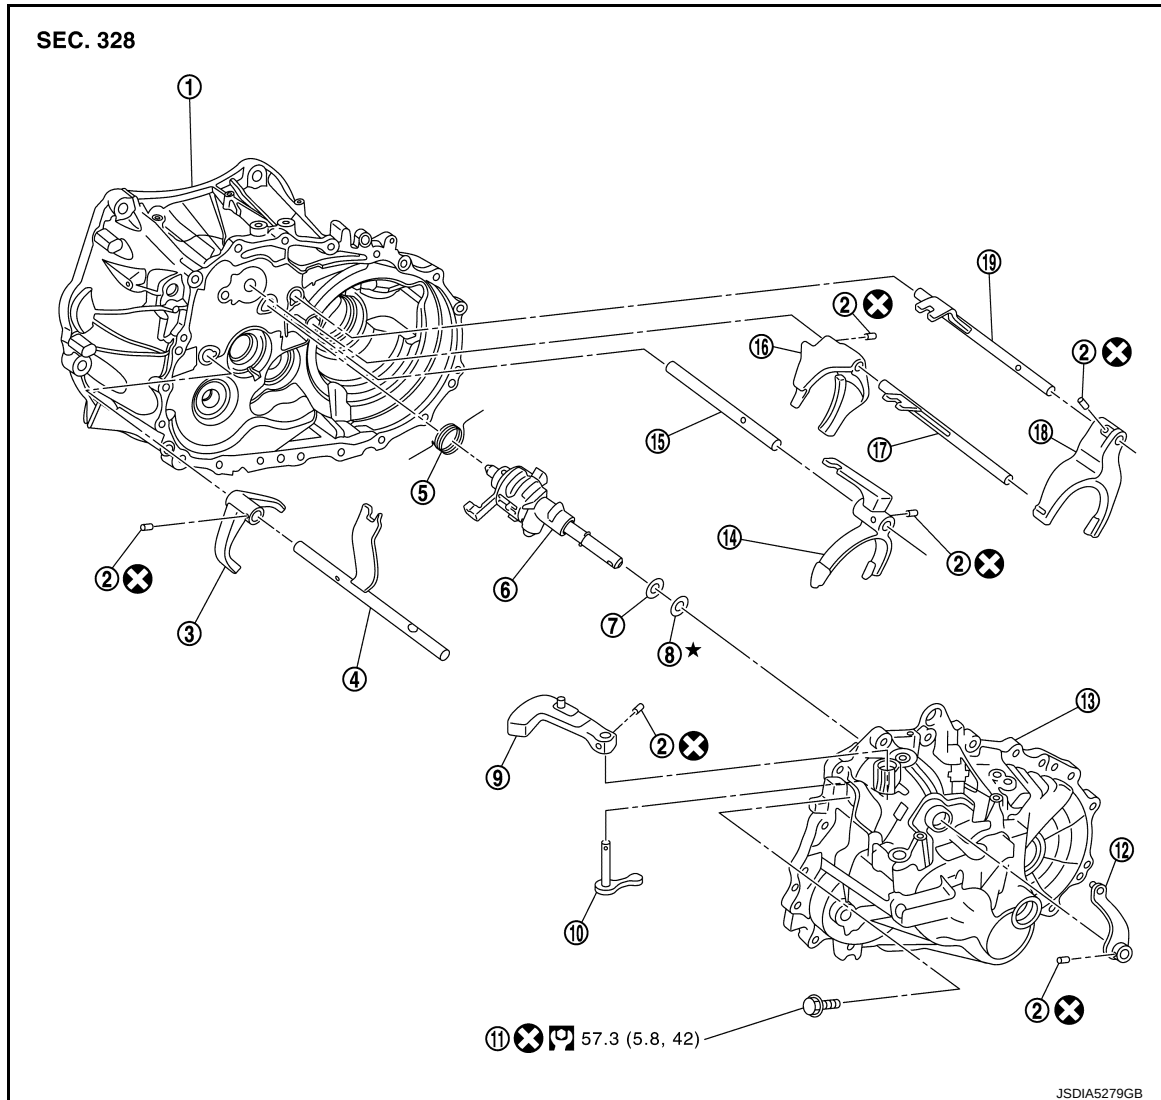

- |                        |                                |                          |
|------------------------|--------------------------------|--------------------------|
| 1. Clutch housing      | 2. Retaining pin               | 3. Reverse shift fork    |
| 4. Reverse fork rod    | 5. Return spring               | 6. Striking rod assembly |
| 7. Striking rod shim   | 8. Striking rod adjusting shim | 9. Shifter lever A       |
| 10. Shifter lever B    | 11. Guide bolt                 | 12. Selector lever       |
| 13. Transaxle case     | 14. 3rd-4th shift fork         | 15. 3rd-4th fork rod     |
| 16. 1st-2nd shift fork | 17. 1st-2nd fork rod           | 18. 5th-6th shift fork   |
| 19. 5th-6th fork rod   |                                |                          |

■ : Replace the parts as a set.

⊗ : Always replace after every disassembly.

### Disassembly and Assembly

INFOID:000000011463649


### DISASSEMBLY

# SHIFT CONTROL

## < UNIT DISASSEMBLY AND ASSEMBLY >

[6MT: RS6F52H]


1. Remove return spring to striking rod assembly.

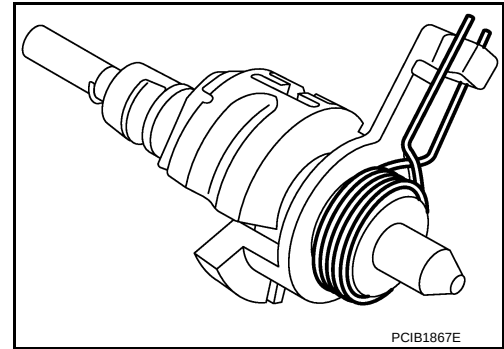

## INSPECTION AFTER DISASSEMBLY

### Striking Rod Assembly and Return Spring

- Check contact surfaces and sliding area for wear, damage, bending, etc. If necessary, replace parts.

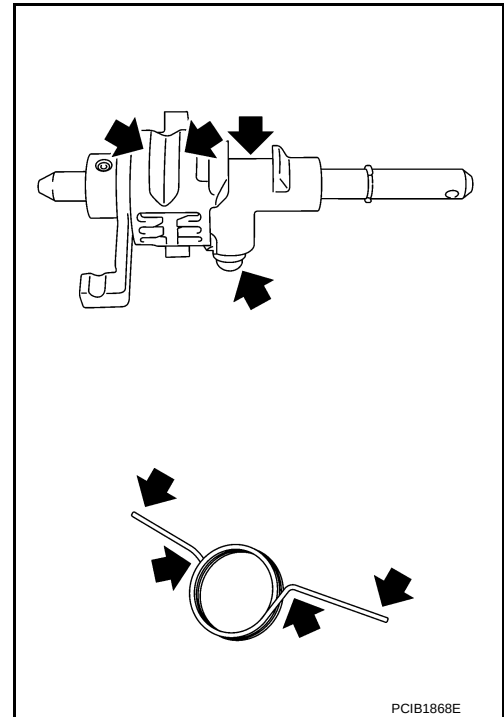


### Fork Rod and Shift Fork

# SHIFT CONTROL

## < UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

- Check contact surfaces and sliding area for wear, damage, bending, etc. If necessary, replace parts.

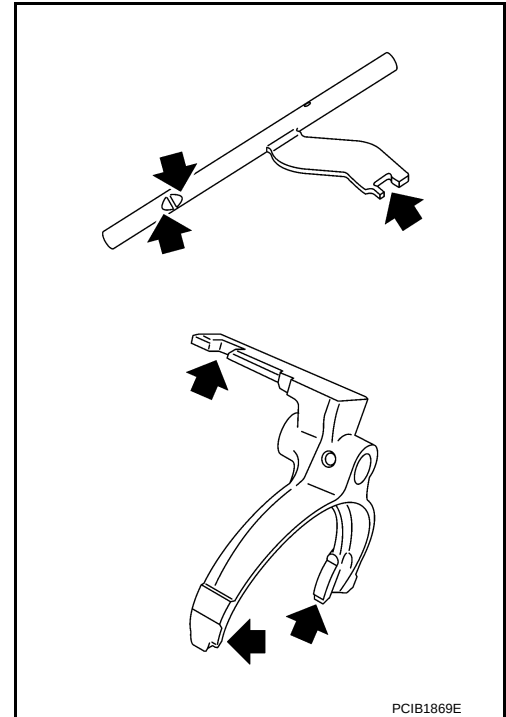

- Check if the width of shift fork hook (sliding area with coupling sleeve) is within allowable specification below.

| Item    | One-side wear specification | Sliding width of new part                |
|---------|-----------------------------|------------------------------------------|
| 1st-2nd | 0.2 mm (0.008 in)           | 7.80 - 7.93 mm<br>(0.3071 - 0.3122 in)   |
| 3rd-4th | 0.2 mm (0.008 in)           | 7.80 - 7.93 mm<br>(0.3071 - 0.3122 in)   |
| 5th-6th | 0.2 mm (0.008 in)           | 6.10 - 6.23 mm<br>(0.2402 - 0.2453 in)   |
| Reverse | 0.2 mm (0.008 in)           | 12.80 - 12.93 mm<br>(0.5039 - 0.5091 in) |

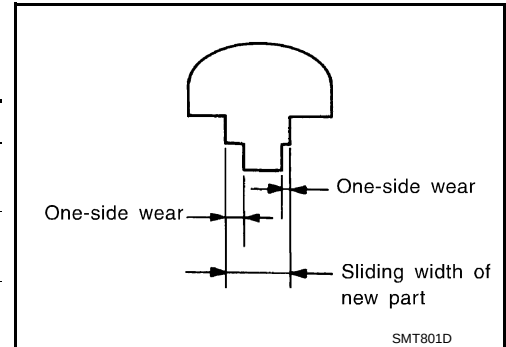


## ASSEMBLY

1. Temporarily install return spring to striking rod assembly.

**CAUTION:**

**Be careful with the orientation of return spring.**

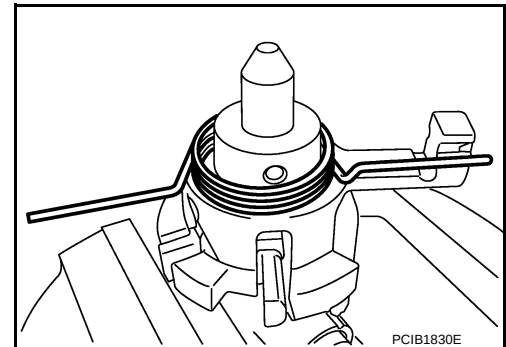




## SHIFT CONTROL

### < UNIT DISASSEMBLY AND ASSEMBLY >


[6MT: RS6F52H]

2. Attach one end of the return spring to striking interlock of striking rod assembly while holding return spring.

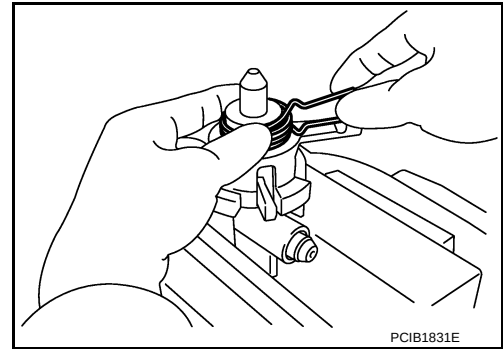

#### **CAUTION:**

- When installing, check that return spring is securely seated in the groove of striking interlock of striking rod assembly.

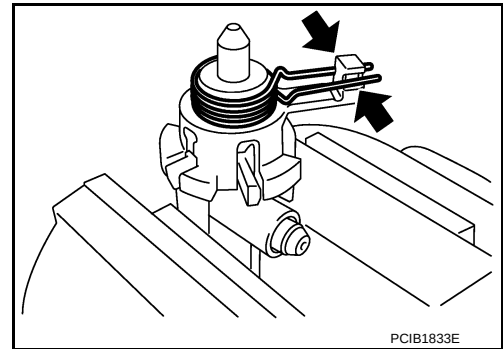

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[6MT: RS6F52H]

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### General Specification

INFOID:0000000011463650

#### TRANSAXLE

|                          |                          |                   |                                                                                                                                            |
|--------------------------|--------------------------|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| Engine type              |                          |                   | MR16DDT                                                                                                                                    |
| Transaxle model          |                          |                   | RS6F52H                                                                                                                                    |
| Model code number        |                          |                   | 3YW0D                                                                                                                                      |
| Number of speed          |                          |                   | 6                                                                                                                                          |
| Synchromesh type         |                          |                   | Warner                                                                                                                                     |
| Shift pattern            |                          |                   | <div><div><div>R</div><div>1</div><div>3</div><div>5</div><div>2</div><div>4</div><div>6</div><div>N</div></div><div>PCIB1769E</div></div> |
| Gear ratio               | 1st                      |                   | 3.727                                                                                                                                      |
|                          | 2nd                      |                   | 2.043                                                                                                                                      |
|                          | 3rd                      |                   | 1.392                                                                                                                                      |
|                          | 4th                      |                   | 1.055                                                                                                                                      |
|                          | 5th                      |                   | 0.865                                                                                                                                      |
|                          | 6th                      |                   | 0.732                                                                                                                                      |
|                          | Reverse                  |                   | 3.641                                                                                                                                      |
| Number of teeth          | Input gear               | 1st               | 11                                                                                                                                         |
|                          |                          | 2nd               | 23                                                                                                                                         |
|                          |                          | 3rd               | 28                                                                                                                                         |
|                          |                          | 4th               | 36                                                                                                                                         |
|                          |                          | 5th               | 52                                                                                                                                         |
|                          |                          | 6th               | 56                                                                                                                                         |
|                          |                          | Reverse           | 11                                                                                                                                         |
|                          | Main gear                | 1st               | 41                                                                                                                                         |
|                          |                          | 2nd               | 47                                                                                                                                         |
|                          |                          | 3rd               | 39                                                                                                                                         |
|                          |                          | 4th               | 38                                                                                                                                         |
|                          |                          | 5th               | 45                                                                                                                                         |
|                          |                          | 6th               | 41                                                                                                                                         |
|                          |                          | Reverse           | 38                                                                                                                                         |
|                          | Reverse idler gear       | Front             | 37                                                                                                                                         |
|                          |                          | Rear              | 39                                                                                                                                         |
| Oil level                |                          | mm (in)           | 38.5 - 45.5 (1.516 - 1.791)                                                                                                                |
| Oil capacity (Reference) |                          | ℓ (US pt, Imp pt) | 1.9 (4, 3-3/8)                                                                                                                             |
| Remarks                  | Reverse synchronizer     |                   | Installed                                                                                                                                  |
|                          | Double-cone synchronizer |                   | 3rd                                                                                                                                        |
|                          | Triple-cone synchronizer |                   | 1st and 2nd                                                                                                                                |

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[6MT: RS6F52H]

## FINAL GEAR

|                   |                            |         |
|-------------------|----------------------------|---------|
| Engine type       |                            | MR16DDT |
| Transaxle model   |                            | RS6F52H |
| Model code number |                            | 3YW0D   |
| Final gear ratio  |                            | 4.428   |
| Number of teeth   | Final gear/Pinion          | 62/14   |
|                   | Side gear/Pinion mate gear | —       |

## Gear End Play

INFOID:0000000011463651

 

Unit: mm (in)

| Gear           | Standard value                |
|----------------|-------------------------------|
| 1st main gear  | 0.20 - 0.30 (0.0079 - 0.0118) |
| 2nd main gear  | 0.06 - 0.16 (0.0024 - 0.0063) |
| 3rd input gear | 0.18 - 0.31 (0.0071 - 0.0122) |
| 4th input gear | 0.20 - 0.30 (0.0079 - 0.0118) |
| 5th input gear | 0.06 - 0.16 (0.0024 - 0.0063) |
| 6th input gear | 0.06 - 0.16 (0.0024 - 0.0063) |

## Baulk Ring Clearance

INFOID:0000000011463652

Unit: mm (in)
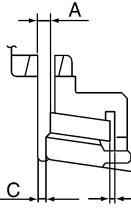
| Measurement point                                                                                    |                                                                       | Standard value             | Limit value |
|------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|----------------------------|-------------|
| 3rd<br>(Double-cone synchronizer)                                                                    | Clearance between synchronizer cone and inner baulk ring end face (A) | 0.6 - 0.8 (0.024 - 0.031)  | 0.2 (0.008) |
|                                                                                                      | Clearance between outer baulk ring pawl and synchronizer cone (B)     | 0.6 - 1.1 (0.024 - 0.043)  | 0.2 (0.008) |
|  <p>PCIB0249E</p> |                                                                       |                            |             |
| 1st and 2nd<br>(Triple-cone synchronizer)                                                            | Clearance between synchronizer cone and clutch gear end face (A)      | 0.6 - 1.2 (0.024 - 0.047)  | 0.3 (0.012) |
|                                                                                                      | Clearance between outer baulk ring pawl and synchronizer cone (B)     | 0.6 - 1.1 (0.024 - 0.043)  | 0.2 (0.008) |
|                                                                                                      | Clearance between inner baulk ring and clutch gear end face (C)       | 0.7 - 1.1 (0.028 - 0.043)  | 0.3 (0.012) |
|  <p>PCIB0835J</p> |                                                                       |                            |             |
| 4th                                                                                                  |                                                                       | 0.9 - 1.45 (0.035 - 0.057) | 0.7 (0.028) |
| 5th                                                                                                  |                                                                       | 0.95 - 1.4 (0.037 - 0.055) | 0.7 (0.028) |
| 6th                                                                                                  |                                                                       | 0.95 - 1.4 (0.037 - 0.055) | 0.7 (0.028) |
| Reverse                                                                                              |                                                                       | 0.95 - 1.4 (0.037 - 0.055) | 0.7 (0.028) |

## Available Snap Rings

INFOID:0000000011463653

## 6TH INPUT GEAR BUSHING

# SERVICE DATA AND SPECIFICATIONS (SDS)

## < SERVICE DATA AND SPECIFICATIONS (SDS)

[6MT: RS6F52H]

| End play standard value |              | 0 - 0.1 mm (0 - 0.004 in) |              |
|-------------------------|--------------|---------------------------|--------------|
| Thickness mm (in)       | Part number* | Thickness mm (in)         | Part number* |
| 1.76 (0.0693)           | 32204 8H511  | 2.01 (0.0791)             | 32204 8H516  |
| 1.81 (0.0713)           | 32204 8H512  | 2.06 (0.0811)             | 32204 8H517  |
| 1.86 (0.0732)           | 32204 8H513  | 2.11 (0.0831)             | 32204 8H518  |
| 1.91 (0.0752)           | 32204 8H514  | 2.16 (0.0850)             | 32204 8H519  |
| 1.96 (0.0772)           | 32204 8H515  | 2.21 (0.0870)             | 32204 8H520  |

\*: Always check with the Parts Department for the latest parts information.

## Available C-Rings

INFOID:0000000011463654

## MAINSHAFT C-RING


| End play standard value |              | 0 - 0.06 mm (0 - 0.0024 in) |              |
|-------------------------|--------------|-----------------------------|--------------|
| Thickness mm (in)       | Part number* | Thickness mm (in)           | Part number* |
| 2.535 (0.0998)          | 32348 8H800  | 2.835 (0.1116)              | 32348 8H810  |
| 2.565 (0.1010)          | 32348 8H801  | 2.865 (0.1128)              | 32348 8H811  |
| 2.595 (0.1022)          | 32348 8H802  | 2.895 (0.1140)              | 32348 8H812  |
| 2.625 (0.1033)          | 32348 8H803  | 2.925 (0.1152)              | 32348 8H813  |
| 2.655 (0.1045)          | 32348 8H804  | 2.955 (0.1163)              | 32348 8H814  |
| 2.685 (0.1057)          | 32348 8H805  | 2.985 (0.1175)              | 32348 8H815  |
| 2.715 (0.1069)          | 32348 8H806  | 3.015 (0.1187)              | 32348 8H816  |
| 2.745 (0.1081)          | 32348 8H807  | 3.045 (0.1199)              | 32348 8H817  |
| 2.775 (0.1093)          | 32348 8H808  | 3.075 (0.1211)              | 32348 8H818  |
| 2.805 (0.1104)          | 32348 8H809  |                             |              |

\*: Always check with the Parts Department for the latest parts information.

## Available Thrust Washer

INFOID:0000000011463655

## INPUT SHAFT THRUST WASHER

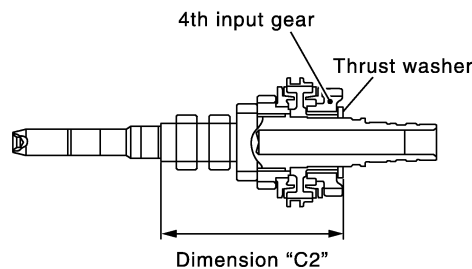

SCIA1008E

| Standard value for dimension "C2" |              | 154.7 - 154.8 mm (6.091 - 6.094 in) |              |
|-----------------------------------|--------------|-------------------------------------|--------------|
| Thickness mm (in)                 | Part number* | Thickness mm (in)                   | Part number* |
| 3.84 (0.1512)                     | 32347 8H500  | 4.02 (0.1583)                       | 32347 8H503  |
| 3.90 (0.1535)                     | 32347 8H501  | 4.08 (0.1606)                       | 32347 8H504  |
| 3.96 (0.1559)                     | 32347 8H502  | 4.14 (0.1630)                       | 32347 8H505  |

\*: Always check with the Parts Department for the latest parts information.

## DIFFERENTIAL SIDE GEAR THRUST WASHER

| Allowable Clearance between side gear and differential case with thrust washer | 0.1 - 0.2 mm (0.004 - 0.008 in) |
|--------------------------------------------------------------------------------|---------------------------------|
|--------------------------------------------------------------------------------|---------------------------------|

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[6MT: RS6F52H]


| Thickness mm (in) | Part number* |
|-------------------|--------------|
| 0.75 (0.0295)     | 38424 81X00  |
| 0.80 (0.0315)     | 38424 81X01  |
| 0.85 (0.0335)     | 38424 81X02  |
| 0.90 (0.0354)     | 38424 81X03  |
| 0.95 (0.0374)     | 38424 81X04  |

\*: Always check with the Parts Department for the latest parts information.

## Available Adjusting Shims

INFOID:0000000011463656

### 4TH MAIN GEAR ADJUSTING SHIM

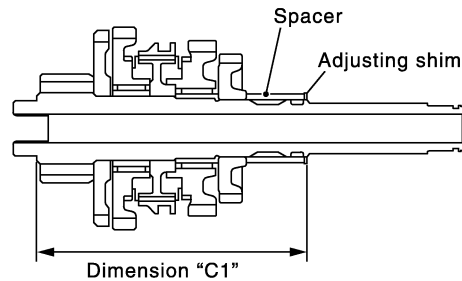

SCIA1009E

| Standard value for dimension "C1" |              | 173.85 - 173.95 mm (6.844 - 6.848 in) |              |
|-----------------------------------|--------------|---------------------------------------|--------------|
| Thickness mm (in)                 | Part number* | Thickness mm (in)                     | Part number* |
| 0.52 (0.0205)                     | 32238 8H500  | 0.84 (0.0331)                         | 32238 8H504  |
| 0.60 (0.0236)                     | 32238 8H501  | 0.92 (0.0362)                         | 32238 8H505  |
| 0.68 (0.0268)                     | 32238 8H502  | 1.00 (0.0394)                         | 32238 8H506  |
| 0.76 (0.0299)                     | 32238 8H503  | 1.08 (0.0425)                         | 32238 8H507  |

\*: Always check with the Parts Department for the latest parts information.

### INPUT SHAFT REAR BEARING ADJUSTING SHIM

| End play standard value |              |                   | 0 - 0.06 mm (0 - 0.0024 in) |                   |              |
|-------------------------|--------------|-------------------|-----------------------------|-------------------|--------------|
| Thickness mm (in)       | Part number* | Thickness mm (in) | Part number*                | Thickness mm (in) | Part number* |
| 0.40 (0.0157)           | 32225 8H500  | 0.88 (0.0346)     | 32225 8H512                 | 1.36 (0.0535)     | 32225 8H524  |
| 0.44 (0.0173)           | 32225 8H501  | 0.92 (0.0362)     | 32225 8H513                 | 1.40 (0.0551)     | 32225 8H560  |
| 0.48 (0.0189)           | 32225 8H502  | 0.96 (0.0378)     | 32225 8H514                 | 1.44 (0.0567)     | 32225 8H561  |
| 0.52 (0.0205)           | 32225 8H503  | 1.00 (0.0394)     | 32225 8H515                 | 1.48 (0.0583)     | 32225 8H562  |
| 0.56 (0.0220)           | 32225 8H504  | 1.04 (0.0409)     | 32225 8H516                 | 1.52 (0.0598)     | 32225 8H563  |
| 0.60 (0.0236)           | 32225 8H505  | 1.08 (0.0425)     | 32225 8H517                 | 1.56 (0.0614)     | 32225 8H564  |
| 0.64 (0.0252)           | 32225 8H506  | 1.12 (0.0441)     | 32225 8H518                 | 1.60 (0.0630)     | 32225 8H565  |
| 0.68 (0.0268)           | 32225 8H507  | 1.16 (0.0457)     | 32225 8H519                 | 1.64 (0.0646)     | 32225 8H566  |
| 0.72 (0.0283)           | 32225 8H508  | 1.20 (0.0472)     | 32225 8H520                 |                   |              |
| 0.76 (0.0299)           | 32225 8H509  | 1.24 (0.0488)     | 32225 8H521                 |                   |              |
| 0.80 (0.0315)           | 32225 8H510  | 1.28 (0.0504)     | 32225 8H522                 |                   |              |
| 0.84 (0.0331)           | 32225 8H511  | 1.32 (0.0520)     | 32225 8H523                 |                   |              |

\*: Always check with the Parts Department for the latest parts information.

### MAINSHAFT REAR BEARING ADJUSTING SHIM

## SERVICE DATA AND SPECIFICATIONS (SDS)

### < SERVICE DATA AND SPECIFICATIONS (SDS)

[6MT: RS6F52H]

| End play standard value |              | 0 - 0.06 mm (0 - 0.0024 in) |              |
|-------------------------|--------------|-----------------------------|--------------|
| Thickness mm (in)       | Part number* | Thickness mm (in)           | Part number* |
| 0.44 (0.0173)           | 32238 8H510  | 0.80 (0.0315)               | 32238 8H519  |
| 0.48 (0.0189)           | 32238 8H511  | 0.84 (0.0331)               | 32238 8H520  |
| 0.52 (0.0205)           | 32238 8H512  | 0.88 (0.0346)               | 32238 8H521  |
| 0.56 (0.0220)           | 32238 8H513  | 0.92 (0.0362)               | 32238 8H522  |
| 0.60 (0.0236)           | 32238 8H514  | 0.96 (0.0378)               | 32238 8H523  |
| 0.64 (0.0252)           | 32238 8H515  | 1.00 (0.0394)               | 32238 8H524  |
| 0.68 (0.0268)           | 32238 8H516  | 1.04 (0.0409)               | 32238 8H560  |
| 0.72 (0.0283)           | 32238 8H517  | 1.08 (0.0425)               | 32238 8H561  |
| 0.76 (0.0299)           | 32238 8H518  |                             |              |

\*: Always check with the Parts Department for the latest parts information.

### REVERSE IDLER GEAR ADJUSTING SHIM

| End play standard value |              | 0.04 - 0.10 mm (0.0016 - 0.0039 in) |              |
|-------------------------|--------------|-------------------------------------|--------------|
| Thickness mm (in)       | Part number* | Thickness mm (in)                   | Part number* |
| 1.76 (0.0693)           | 32237 8H800  | 2.24 (0.0882)                       | 32237 8H812  |
| 1.80 (0.0709)           | 32237 8H801  | 2.28 (0.0898)                       | 32237 8H813  |
| 1.84 (0.0724)           | 32237 8H802  | 2.32 (0.0913)                       | 32237 8H814  |
| 1.88 (0.0740)           | 32237 8H803  | 2.36 (0.0929)                       | 32237 8H815  |
| 1.92 (0.0756)           | 32237 8H804  | 2.40 (0.0945)                       | 32237 8H816  |
| 1.96 (0.0772)           | 32237 8H805  | 2.44 (0.0961)                       | 32237 8H817  |
| 2.00 (0.0787)           | 32237 8H806  | 2.48 (0.0976)                       | 32237 8H818  |
| 2.04 (0.0803)           | 32237 8H807  | 2.52 (0.0992)                       | 32237 8H819  |
| 2.08 (0.0819)           | 32237 8H808  | 2.56 (0.1008)                       | 32237 8H820  |
| 2.12 (0.0835)           | 32237 8H809  | 2.60 (0.1024)                       | 32237 8H821  |
| 2.16 (0.0850)           | 32237 8H810  | 2.64 (0.1039)                       | 32237 8H822  |
| 2.20 (0.0866)           | 32237 8H811  |                                     |              |

\*: Always check with the Parts Department for the latest parts information.

### 6TH MAIN GEAR ADJUSTING SHIM

| End play standard value |              | 0 - 0.1 mm (0 - 0.004 in) |              |
|-------------------------|--------------|---------------------------|--------------|
| Thickness mm (in)       | Part number* | Thickness mm (in)         | Part number* |
| 0.88 (0.0346)           | 32237 8H560  | 1.20 (0.0472)             | 32237 8H564  |
| 0.96 (0.0378)           | 32237 8H561  | 1.28 (0.0504)             | 32237 8H565  |
| 1.04 (0.0409)           | 32237 8H562  | 1.36 (0.0535)             | 32237 8H566  |
| 1.12 (0.0441)           | 32237 8H563  |                           |              |

\*: Always check with the Parts Department for the latest parts information.

### STRIKING ROD ADJUSTING SHIM

| End play standard value |              | 0.05 - 0.152 mm (0.0020 - 0.0060 in) |              |
|-------------------------|--------------|--------------------------------------|--------------|
| Thickness mm (in)       | Part number* | Thickness mm (in)                    | Part number* |
| 1.12 (0.0441)           | 33761 JA60A  | 1.52 (0.0598)                        | 33761 JA65A  |
| 1.20 (0.0472)           | 33761 JA61A  | 1.60 (0.0630)                        | 33761 JA66A  |
| 1.28 (0.0504)           | 33761 JA62A  | 1.68 (0.0661)                        | 33761 JA67A  |
| 1.36 (0.0535)           | 33761 JA63A  | 1.76 (0.0693)                        | 33761 JA68A  |
| 1.44 (0.0567)           | 33761 JA64A  | 1.84 (0.0724)                        | 33761 JA69A  |

\*: Always check with the Parts Department for the latest parts information.

### Available Shims

INFOID:0000000011463657

### — Differential Side Bearing Preload and Adjusting Shim

#### BEARING PRELOAD

|                                       |                                     |
|---------------------------------------|-------------------------------------|
| Differential side bearing preload: L* | 0.15 - 0.21 mm (0.0059 - 0.0083 in) |
|---------------------------------------|-------------------------------------|

## SERVICE DATA AND SPECIFICATIONS (SDS)

### < SERVICE DATA AND SPECIFICATIONS (SDS)

[6MT: RS6F52H]

\*: Install shims which are "deflection of differential case" + "L" in thickness.

#### DIFFERENTIAL SIDE BEARING ADJUSTING SHIM(S)

| Thickness mm (in) | Part number* | Thickness mm (in) | Part number* |
|-------------------|--------------|-------------------|--------------|
| 0.48 (0.0189)     | 31438 80X00  | 0.72 (0.0283)     | 31438 80X06  |
| 0.52 (0.0205)     | 31438 80X01  | 0.76 (0.0299)     | 31438 80X07  |
| 0.56 (0.0220)     | 31438 80X02  | 0.80 (0.0315)     | 31438 80X08  |
| 0.60 (0.0236)     | 31438 80X03  | 0.84 (0.0331)     | 31438 80X09  |
| 0.64 (0.0252)     | 31438 80X04  | 0.88 (0.0346)     | 31438 80X10  |
| 0.68 (0.0268)     | 31438 80X05  | 0.92 (0.0362)     | 31438 80X11  |

\*: Always check with the Parts Department for the latest parts information.

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011463658

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Procedure without Cowl Top Cover

INFOID:000000011463659

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

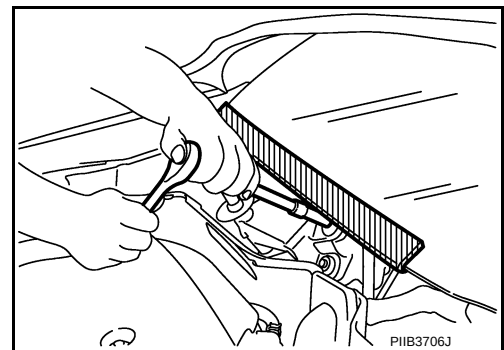



## PRECAUTIONS

< PRECAUTION >

[CVT: RE0F10B]

### Precautions for Removing Battery Terminal

INFOID:0000000011463660

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

**NOTE:**

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


**NOTE:**

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

**NOTE:**

The removal of 12V battery may cause a DTC detection error.

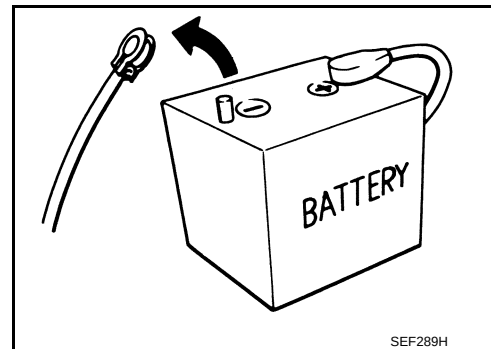

### Precaution for On Board Diagnosis (OBD) System of CVT and Engine

INFOID:0000000011463661

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

**CAUTION:**

- Be sure to turn the ignition switch OFF and disconnect the battery cable from the negative terminal before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to an open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Be sure to route and secure the harnesses properly after work. Interference of the harness with a bracket, etc. may cause the MI to light up due to a short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to a malfunction of the EVAP system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the TCM and ECM before returning the vehicle to the customer.

### Precaution for TCM and Transaxle Assembly or Control Valve Replacement

INFOID:0000000011463662

**CAUTION:**


- To replace TCM, refer to [TM-216, "Description"](#).
- To replace transaxle assembly, refer to [TM-218, "Description"](#).
- To replace control valve, refer to [TM-218, "Description"](#).

### Removal and Installation Procedure for CVT Unit Connector

INFOID:0000000011463663

#### REMOVAL

Rotate bayonet ring (1) counterclockwise, pull out CVT unit harness connector (2) upward and remove it.

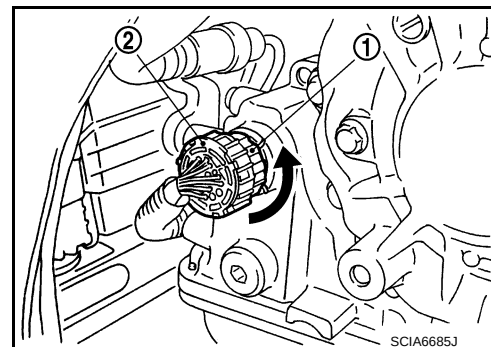


#### INSTALLATION

## PRECAUTIONS


### < PRECAUTION >

[CVT: RE0F10B]

1. Align  $\Delta$  marking on CVT unit harness connector terminal body with  $\square$  marking on bayonet ring, insert CVT unit harness connector, and then rotate bayonet ring clockwise.

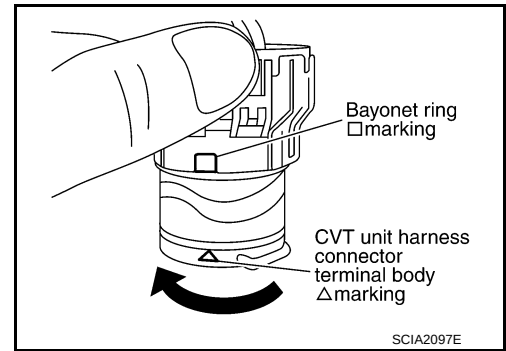


2. Rotate bayonet ring clockwise until  $\Delta$  marking on CVT unit harness connector terminal body is aligned with the slit on bayonet ring as shown in the figure (correctly fitting condition), install CVT unit harness connector to CVT unit harness connector terminal body.

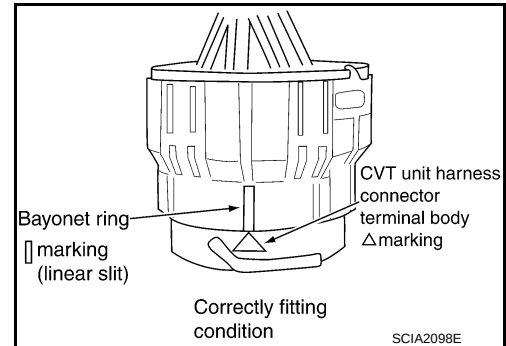

### CAUTION:


- Securely align  $\Delta$  marking on CVT unit harness connector terminal body with bayonet ring slit. Then, be careful not to make a half fit condition as shown in the figure.
- Never mistake the slit of bayonet ring for other dent portion.

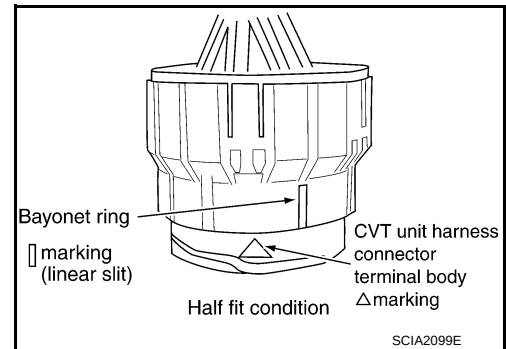

## General Precautions

INFOID:000000011463664

- Before connecting or disconnecting the TCM harness connector, turn ignition switch OFF and disconnect negative battery cable. Because battery voltage is applied to TCM even if ignition switch is turned OFF.

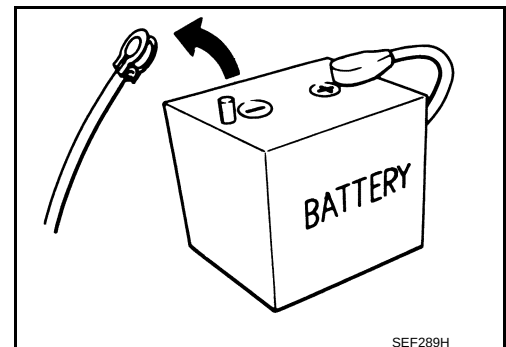


# PRECAUTIONS

< PRECAUTION >


[CVT: RE0F10B]

- When connecting or disconnecting pin connectors into or from TCM, take care not to damage pin terminals (bend or break).


When connecting pin connectors make sure that there are not any bends or breaks on TCM pin terminal.

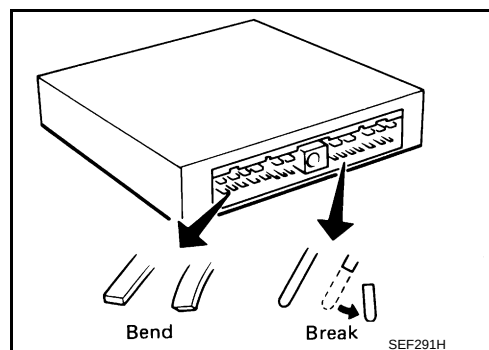

- Before replacing TCM, perform TCM input/output signal inspection and make sure whether TCM functions properly or not. Refer to [TM-193, "Reference Value"](#).

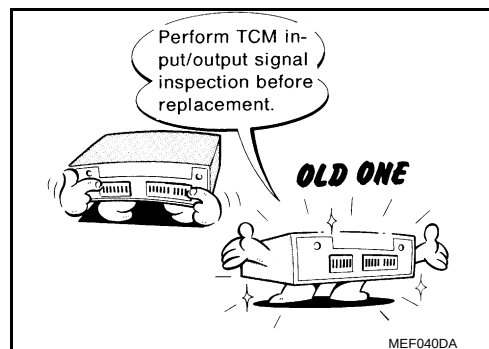

- After performing each TROUBLE DIAGNOSIS, perform "DTC Confirmation Procedure".  
If the repair is completed the DTC should not be displayed in the "DTC Confirmation Procedure".
- Always use the specified brand of CVT fluid. Refer to [MA-11, "Fluids and Lubricants"](#).
- Use lint-free paper, not cloth rags, during work.
- After replacing the CVT fluid, dispose of the waste oil using the methods prescribed by law, ordinance, etc.

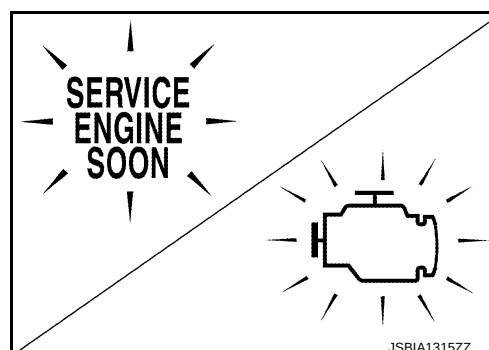

INFOID:000000011463665

## Service Notice or Precaution

### OBD-II SELF-DIAGNOSIS

- CVT self-diagnosis is performed by the TCM in combination with the ECM. The results can be read through the blinking pattern of the malfunction indicator lamp (MIL). Refer to the table on [TM-188, "CONSULT Function"](#) for the indicator used to display each self-diagnostic result.
- The self-diagnostic results indicated by the MI are automatically stored in both the ECM and TCM memories. Always perform the procedure on [TM-186, "Diagnosis Description"](#) to complete the repair and avoid unnecessary blinking of the MIL.

For details of OBD-II, refer to [EC-72, "Diagnosis Description"](#).

- Certain systems and components, especially those related to OBD-II, may use the new style slide-locking type harness connector. For description and how to disconnect, refer to [PG-5, "Harness Connector"](#).

# PREPARATION

< PREPARATION >

[CVT: RE0F10B]



## PREPARATION

### PREPARATION

#### Special Service Tool

INFOID:000000011463666

The actual shapes of TechMate tools may differ from those of special service tools illustrated here.
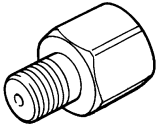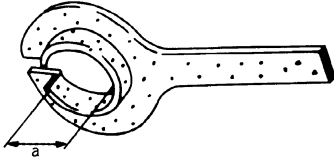
| Tool number<br>(TechMate No.)<br>Tool name                             |                                                                                                  | Description             |
|------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|-------------------------|
| —<br>(OTC3492)<br>Oil pressure gauge set                               | <br>SCIA7531E   | Measuring line pressure |
| 1. ST25054000<br>( — )<br>Adapter<br>2. ST25055000<br>( — )<br>Adapter | <br>SCIA8372J   | Measuring line pressure |
| KV31103600<br>(J-45674)<br>Joint pipe adapter<br>(With ST25054000)     | <br>ZZA1227D  | Measuring line pressure |
| KV38107900<br>( — )<br>Protector<br>a: 32 mm (1.26 in) dia.            | <br>PDIA1183J | Installing drive shaft  |





#### Commercial Service Tool

INFOID:000000011463667

# PREPARATION

< PREPARATION >

[CVT: RE0F10B]
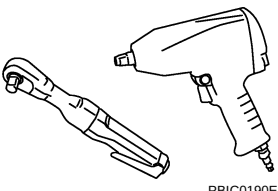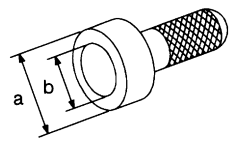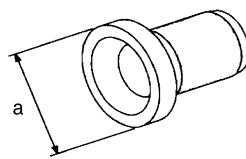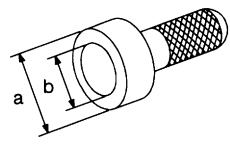
| Tool number<br>Tool name                                                                           | Description                                                    |
|----------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| Power tool                                                                                         | Loosening nuts and bolts                                       |
|  <p>PBIC0190E</p> |                                                                |
| Drift<br>a: 53 mm (2.09 in) dia.<br>b: 50 mm (1.97 in) dia.                                        | Installing differential side oil seal (transaxle case side)    |
|  <p>NT115</p>     |                                                                |
| Drift<br>a: 60 mm (2.36 in) dia.                                                                   | Installing differential side oil seal (converter housing side) |
|  <p>SCIA5338E</p> |                                                                |
| Drift<br>a: 65 mm (2.13 in) dia.<br>b: 60 mm (1.97 in) dia.                                        | Installing converter housing oil seal                          |
|  <p>NT115</p>   |                                                                |

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


## SYSTEM DESCRIPTION

### COMPONENT PARTS

### CVT CONTROL SYSTEM

### CVT CONTROL SYSTEM : Component Parts Location

INFOID:000000011463668

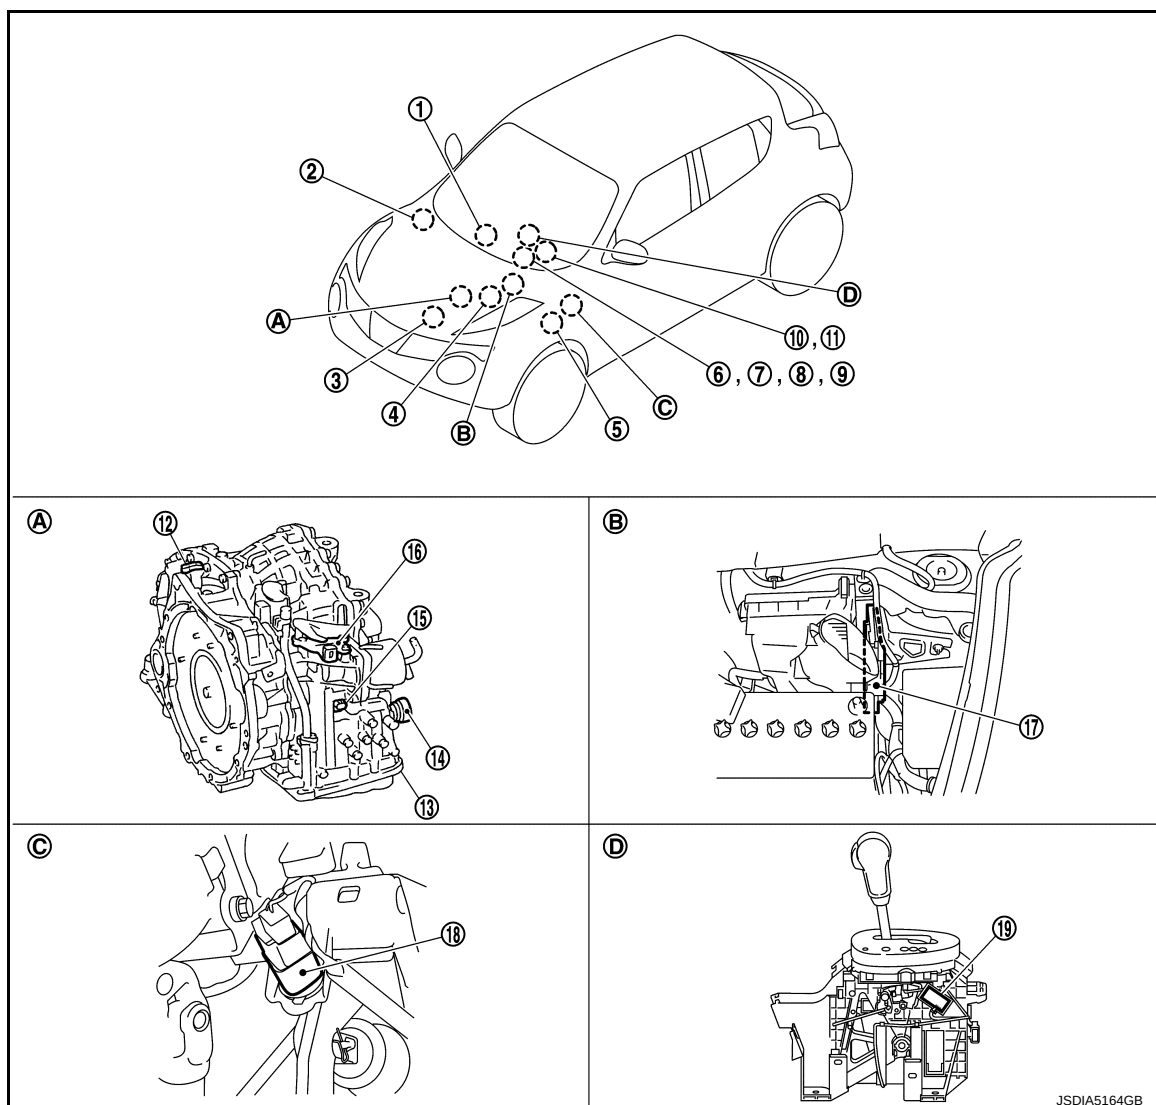

- |                                                                                             |                                                                                                                  |                                                                                                |
|---------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| 1. Multi display unit (MDU)<br>Refer to <a href="#">DMS-3, "Component Parts Location"</a> . | 2. ABS actuator and electric unit (control unit)<br>Refer to <a href="#">BRC-9, "Component Parts Location"</a> . | 3. ECM<br>Refer to <a href="#">EC-26, "ENGINE CONTROL SYSTEM : Component Parts Location"</a> . |
| 4. IPDM E/R<br>Refer to <a href="#">PCS-4, "Component Parts Location"</a> .                 | 5. BCM<br>Refer to <a href="#">BCS-4, "BODY CONTROL SYSTEM : Component Parts Location"</a> .                     | 6. Combination meter                                                                           |
| 7. Manual mode indicator<br>(On the combination meter)                                      | 8. Shift position indicator<br>(On the combination meter)                                                        | 9. CVT indicator<br>(On the combination meter)                                                 |
| 10. Paddle shifter (shift-down switch)                                                      | 11. Paddle shifter (shift-up switch)                                                                             | 12. Secondary speed sensor                                                                     |
| 13. Control valve*                                                                          | 14. CVT unit connector                                                                                           | 15. Primary speed sensor                                                                       |
| 16. Transmission range switch                                                               | 17. TCM                                                                                                          | 18. Stop lamp switch                                                                           |
| 19. Manual mode switch                                                                      |                                                                                                                  |                                                                                                |
| A. Transaxle assembly                                                                       | B. Engine room                                                                                                   | C. Brake pedal, upper                                                                          |

D. CVT shift selector assembly

\*: Control valve is installed in transaxle assembly.

### NOTE:

- The following components are included in control valve assembly.
  - CVT fluid temperature sensor
  - Secondary pressure sensor
  - Line pressure solenoid valve
  - Torque converter clutch solenoid valve
  - Lock-up select solenoid valve
  - Step motor
  - ROM assembly
- The following components are included in manual mode switch.
  - Mode select switch
  - Select position switch

## CVT CONTROL SYSTEM : Component Description

INFOID:0000000011463669

| Name                                   | Function                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TCM                                    | <a href="#">TM-156, "CVT CONTROL SYSTEM : TCM"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Transmission range switch              | <a href="#">TM-156, "CVT CONTROL SYSTEM : Transmission Range Switch"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Primary speed sensor                   | <a href="#">TM-156, "CVT CONTROL SYSTEM : Primary Speed Sensor"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Secondary speed sensor                 | <a href="#">TM-156, "CVT CONTROL SYSTEM : Secondary Speed Sensor"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| CVT fluid temperature sensor           | <a href="#">TM-157, "CVT CONTROL SYSTEM : CVT Fluid Temperature Sensor"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Secondary pressure sensor              | <a href="#">TM-157, "CVT CONTROL SYSTEM : Secondary Pressure Sensor"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Line pressure solenoid valve           | <a href="#">TM-158, "CVT CONTROL SYSTEM : Line Pressure Solenoid Valve"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Secondary pressure solenoid valve      | <a href="#">TM-158, "CVT CONTROL SYSTEM : Secondary Pressure Solenoid Valve"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Torque converter clutch solenoid valve | <a href="#">TM-158, "CVT CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Lock-up select solenoid valve          | <a href="#">TM-158, "CVT CONTROL SYSTEM : Lock-up Select Solenoid Valve"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Step motor                             | <a href="#">TM-159, "CVT CONTROL SYSTEM : Step Motor"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Manual mode switch                     | <a href="#">TM-159, "CVT CONTROL SYSTEM : Manual Mode Switch"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Shift position indicator               | <a href="#">TM-159, "CVT CONTROL SYSTEM : Shift Position Indicator"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Manual mode indicator                  | <a href="#">TM-159, "CVT CONTROL SYSTEM : Manual Mode Indicator"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Paddle shifter (shift-down switch)     | <a href="#">TM-160, "CVT CONTROL SYSTEM : Paddle Shifter"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Paddle shifter (shift-up switch)       | <a href="#">TM-160, "CVT CONTROL SYSTEM : Paddle Shifter"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Accelerator pedal position sensor      | <a href="#">EC-32, "Accelerator Pedal Position Sensor"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Stop lamp switch                       | <a href="#">BRC-13, "Stop Lamp Switch"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| ECM                                    | <ul style="list-style-type: none"> <li>• For purposes including improving the feeling when shifting speeds and preventing drops in engine speed, control signals are exchanged between the ECM and TCM, and real-time cooperative control is performed according to the vehicle driving conditions. (Engine and CVT integrated control)</li> <li>- Engine and CVT integrated control signal</li> </ul> <p><b>NOTE:</b><br/>General term for the communication (torque-down permission, torque-down request, etc.) exchanged between the ECM and TCM.</p> <ul style="list-style-type: none"> <li>• The TCM receives the following signal via CAN communications from the ECM for judging the vehicle driving conditions.                             <ul style="list-style-type: none"> <li>- Engine speed signal</li> <li>- Accelerator pedal position signal</li> <li>- Closed throttle position signal</li> </ul> </li> </ul> |
| BCM                                    | <p>The TCM receives the following signal via CAN communications from the BCM for judging the vehicle driving conditions.</p> <ul style="list-style-type: none"> <li>• Stop lamp switch signal</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F10B]

| Name                                          | Function                                                                                                                                                                                                                                                                                                                  |
|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ABS actuator and electric unit (control unit) | The TCM receives the following signal via CAN communications from the ABS actuator and electric unit (control unit) for judging the vehicle driving conditions. <ul style="list-style-type: none"> <li>Vehicle speed signal (ABS)</li> <li>ABS operation signal</li> </ul>                                                |
| Combination meter                             | The TCM receives the following signal via CAN communications from the combination meter for judging the driving request from the driver. <ul style="list-style-type: none"> <li>Manual mode signal</li> <li>Non-manual mode signal</li> <li>Manual mode shift up signal</li> <li>Manual mode shift down signal</li> </ul> |
| IPDM E/R                                      | The TCM receives the following signal via CAN communications from the ABS actuator and electric unit (control unit) for judging the vehicle driving conditions. <ul style="list-style-type: none"> <li>A/C compressor feedback signal</li> </ul>                                                                          |
| MDU                                           | The TCM receives the following signals from MDU via CAN communication to switch driving mode of the Integrated Control System. <ul style="list-style-type: none"> <li>NORMAL mode signal</li> <li>ECO mode signal</li> <li>SPORT mode signal</li> </ul>                                                                   |

## CVT CONTROL SYSTEM : TCM

INFOID:0000000011463670

- The vehicle driving status is judged based on the signals from the sensors, switches, and other control units, and the optimal transaxle control is performed.
- For TCM control items, refer to [TM-178, "CONTROL SYSTEM : System Description"](#).

## CVT CONTROL SYSTEM : Transmission Range Switch


INFOID:0000000011463671

- The transmission range switch is installed to upper part of transaxle case.
- The transmission range switch detects the selector lever position.

## CVT CONTROL SYSTEM : Primary Speed Sensor

INFOID:0000000011463672

- The primary speed sensor is installed to front part of transaxle assembly.
- The primary speed sensor detects primary pulley speed.
- The primary speed sensor generates the ON-OFF pulse (short waveform) in proportion to the rotating body speed which is "The higher the rotating body speed is, the faster the change cycle is". The TCM judges the rotating speed from the changing cycle of this pulse signal.

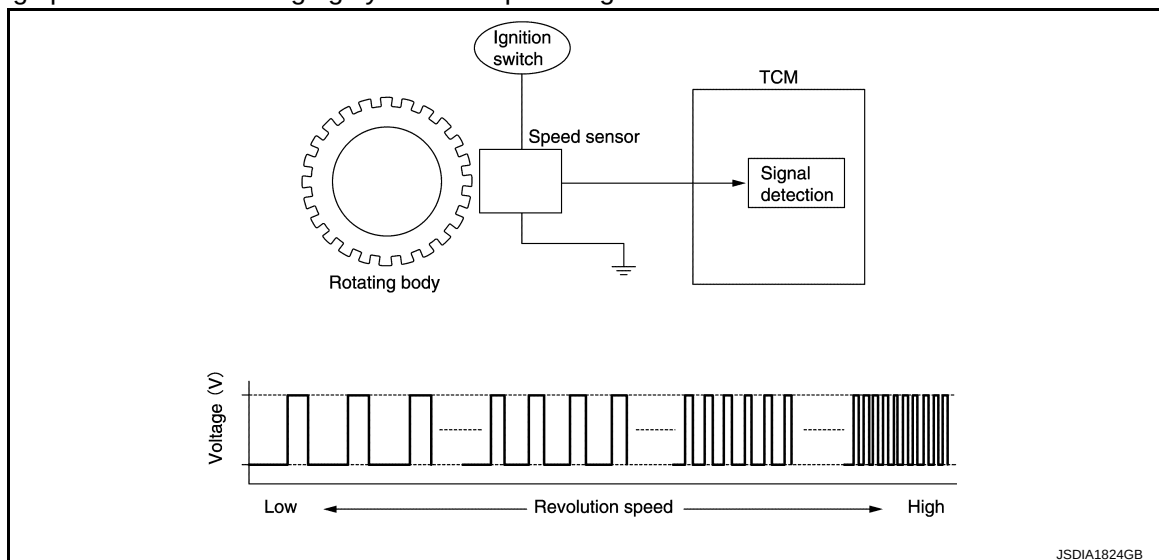

## CVT CONTROL SYSTEM : Secondary Speed Sensor

INFOID:0000000011463673

- The secondary speed sensor is installed to upper part of converter housing.
- The secondary speed sensor detects secondary pulley speed.




## COMPONENT PARTS

### < SYSTEM DESCRIPTION >

[CVT: RE0F10B]


- The secondary speed sensor generates the ON-OFF pulse (short waveform) in proportion to the rotating body speed which is "The higher the rotating body speed is, the faster the change cycle is". The TCM judges the rotating speed from the changing cycle of this pulse signal.

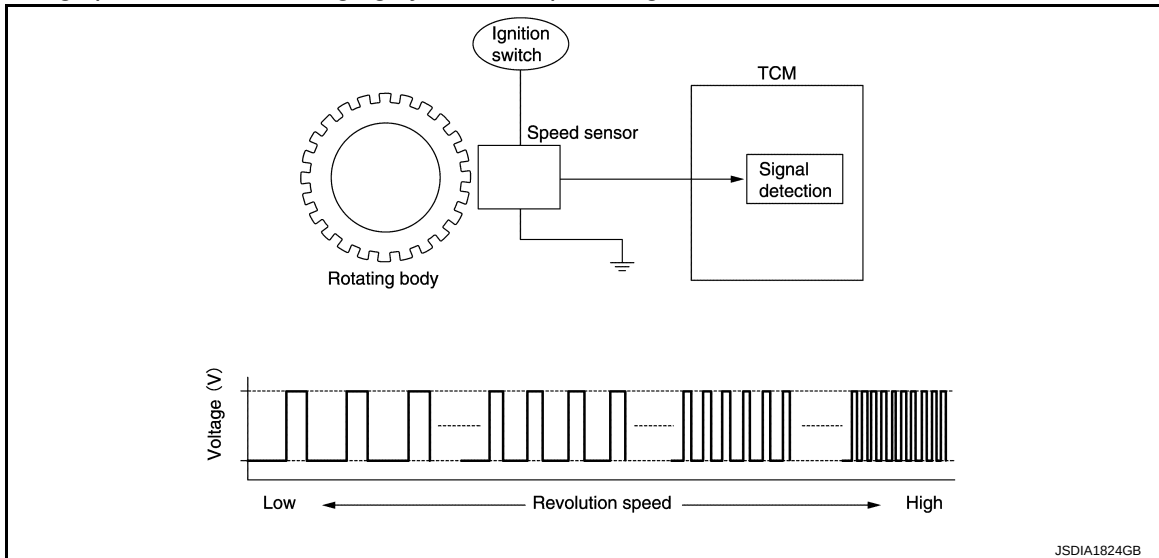

### CVT CONTROL SYSTEM : CVT Fluid Temperature Sensor

INFOID:0000000011463674

- The CVT fluid temperature sensor is installed to control valve.
- The CVT fluid temperature sensor detects CVT fluid temperature in oil pan.
- The fluid temperature sensor uses a thermistor, and changes the signal voltage by converting changes in the CVT fluid temperature to a resistance value. TCM evaluates the CVT fluid temperature from the signal voltage value.

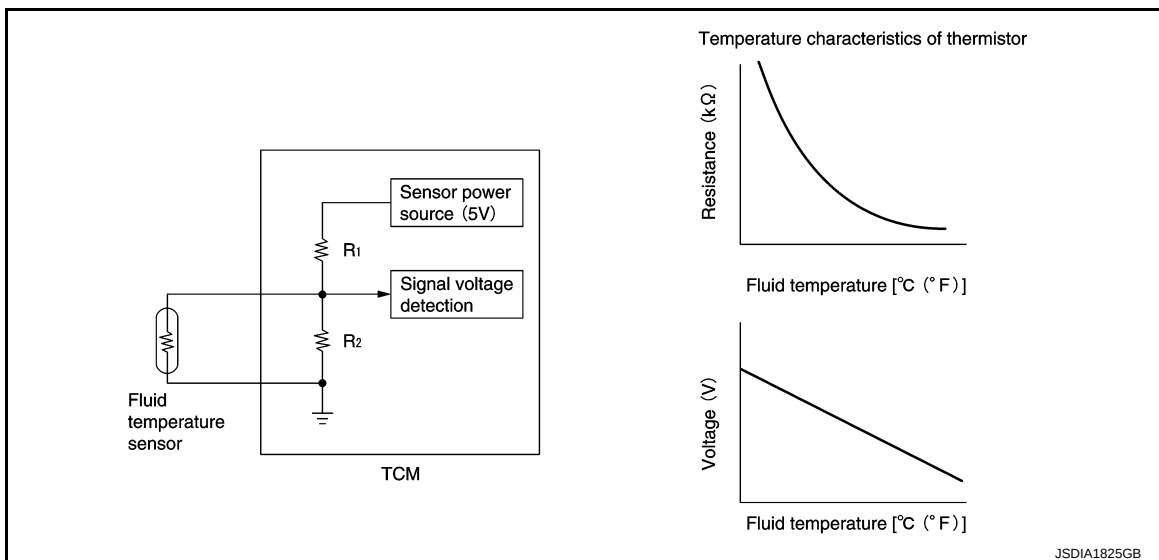

### CVT CONTROL SYSTEM : Secondary Pressure Sensor

INFOID:0000000011463675


- The secondary pressure sensor is installed to control valve.
- The secondary pressure sensor detects the pressure applied to the secondary pulley.

## COMPONENT PARTS

### < SYSTEM DESCRIPTION >

[CVT: RE0F10B]

- When pressure is applied to the ceramic device in the secondary pressure sensor, the ceramic device is deformed, resulting in voltage change. TCM evaluates the secondary pressure from its voltage change. Voltage is increased along with pressure increase.

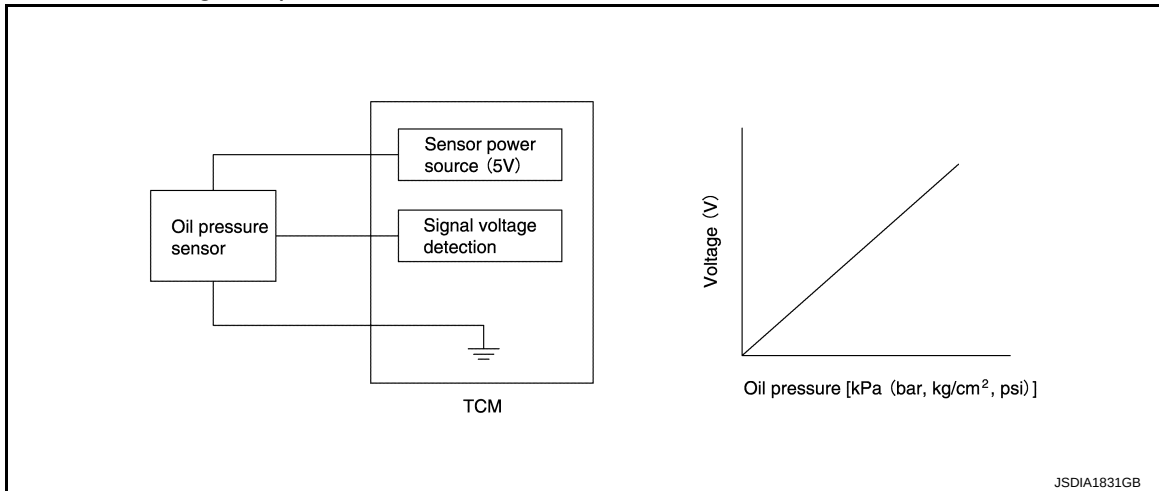

### CVT CONTROL SYSTEM : Line Pressure Solenoid Valve

INFOID:0000000011463676

- The line pressure solenoid valve is installed to control valve.
- The line pressure solenoid valve controls the pressure regulator valve. For information about the pressure regulator valve, refer to [TM-171, "MECHANICAL SYSTEM : Component Description"](#).
- The line pressure solenoid valve uses the linear solenoid valve [N/H (normal high) type].

#### NOTE:

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

### CVT CONTROL SYSTEM : Secondary Pressure Solenoid Valve

INFOID:0000000011463677

- The secondary pressure solenoid valve is installed to control valve.
- The secondary pressure solenoid valve controls the secondary valve. For information about the secondary valve, refer to [TM-171, "MECHANICAL SYSTEM : Component Description"](#).
- The secondary pressure solenoid valve uses the linear solenoid valve [N/H (normal high) type].

#### NOTE:

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

### CVT CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve

INFOID:0000000011463678

- The torque converter clutch solenoid valve is installed to control valve.
- The torque converter clutch solenoid valve controls the torque converter clutch control valve. For information about the torque converter clutch control valve, refer to [TM-171, "MECHANICAL SYSTEM : Component Description"](#).
- The torque converter clutch solenoid valve utilizes a linear solenoid valve [N/L (normal low) type].

#### NOTE:

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/L (normal low) type does not produce hydraulic control when the coil is not energized.

### CVT CONTROL SYSTEM : Lock-up Select Solenoid Valve

INFOID:0000000011463679

- The lock-up select solenoid valve is installed to control valve.
- The lock-up select solenoid valve controls the select switch valve. For information about the select switch valve, refer to [TM-171, "MECHANICAL SYSTEM : Component Description"](#).
- The lock-up select solenoid valve utilizes an ON-OFF solenoid valve.

## COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F10B]

### NOTE:

- The only operations of the valve spool installed inside the coil are pressing or not pressing the ball which seals the hydraulic supply section into the seat. This A/T uses N/L (normal low) type.
- When voltage is not applied to the coil, the force of the pilot pressure presses the ball against the seat, stopping the pilot pressure at that point.
- When voltage is applied to the coil, the valve is pulled in the direction of the coil, disengaging the hydraulic seal which the ball creates. This supplies pilot pressure to the operating locations.

### CVT CONTROL SYSTEM : Step Motor

INFOID:0000000011463680

The step motor changes the step with turning 4 coils ON/OFF according to the signal from TCM. As a result, the flow of line pressure to primary pulley is changed and pulley ratio is controlled.

### CVT CONTROL SYSTEM : Manual Mode Switch

INFOID:0000000011463681

- The manual mode switch [mode select switch and position select switch (shift-up/shift-down)] is installed in the CVT shift selector assembly.
- The mode select switch detects the position (the main shift gate side or manual shift gate side) of the selector lever and transmits a manual mode signal or a not manual mode signal to the combination meter. Then, the TCM receives a manual mode signal or non-manual mode signal from the combination meter.
- The position select switch (shift-up) detects that the selector lever is shifted to the shift-up side of the manual shift gate and transmits a manual mode shift up signal to the combination meter. Then, the TCM receives a manual mode shift up signal from the combination meter.
- The position select switch (shift-down) detects that the selector lever is shifted to the shift-down side of the manual shift gate and transmits a manual mode shift down signal to the combination meter. Then, the TCM receives a manual mode shift down signal from the combination meter.

### CVT CONTROL SYSTEM : CVT Indicator

INFOID:0000000011463682

- CVT indicator is positioned on the combination meter.
- CVT indicator turns on for a certain period of time when the ignition switch turns ON, and then turns OFF.

| Condition (status)   | CVT indicator      |
|----------------------|--------------------|
| Ignition switch OFF. | OFF                |
| Ignition switch ON.  | ON (Approx. 2sec.) |

### CVT CONTROL SYSTEM : Shift Position Indicator

INFOID:0000000011463683


TCM transmits shift position signal to combination meter via CAN communication. The actual shift position is displayed on combination meter according to the signal.

### CVT CONTROL SYSTEM : Manual Mode Indicator

INFOID:0000000011463684

- Manual mode indicator (A) is positioned on the combination meter.
- The manual mode indicator illuminates when the selector lever is operated to the manual shift gate side. It also displays the gear position (M1↔M8) when the selector lever is operated to the + side or – side. (Operates only during driving.)
- The manual mode indicator turns off when the selector lever is operated to the main shift gate side.

| Condition (status)                                        | Manual mode indicator |
|-----------------------------------------------------------|-----------------------|
| Selector lever is operated to the manual shift gate side. | Display               |
| Selector lever is operated to the + side or – side.       | M1↔M8                 |
| Selector lever is operated to the main shift gate side.   | Nothing displayed.    |

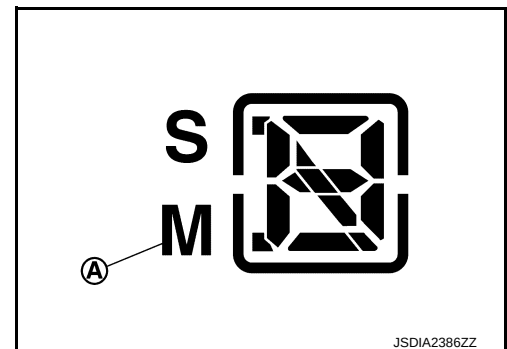

## COMPONENT PARTS


< SYSTEM DESCRIPTION >

[CVT: RE0F10B]

### CVT CONTROL SYSTEM : Paddle Shifter

INFOID:000000011463685


- The paddle shifter is installed to the steering column.
- The paddle shifter transmits shift up and shift down signals to combination meter. Then TCM receives signals from the combination meter via CAN communication.

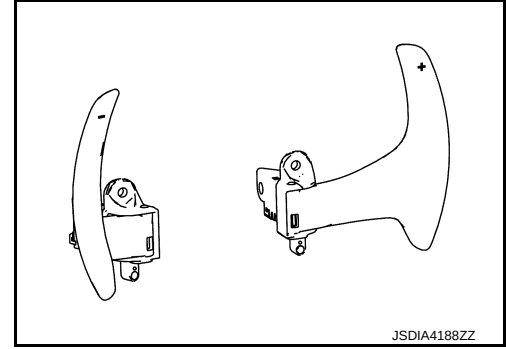

### SHIFT LOCK SYSTEM

#### SHIFT LOCK SYSTEM : Component Parts Location

INFOID:000000011463686

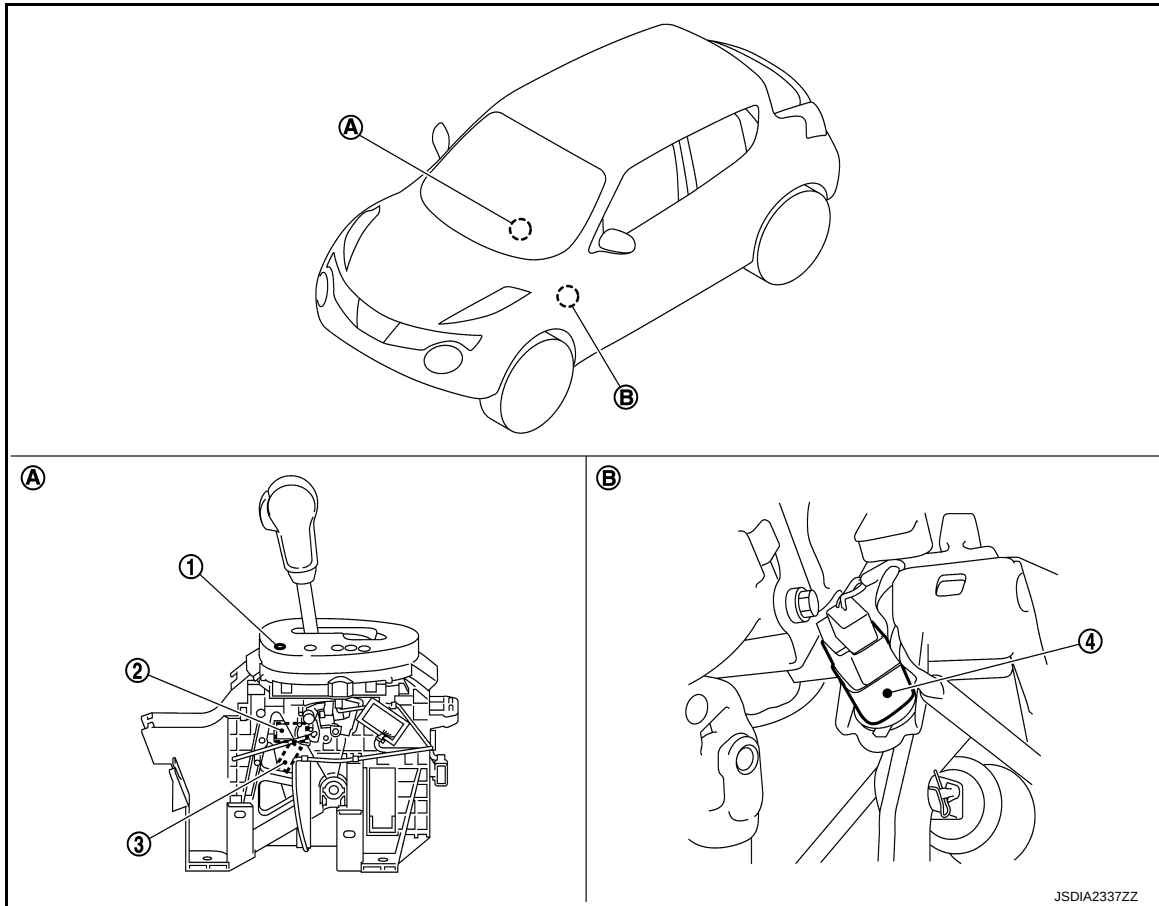

- |                                     |                        |                         |
|-------------------------------------|------------------------|-------------------------|
| 1. Shift lock release button cover* | 2. Shift lock solenoid | 3. Park position switch |
| 4. Stop lamp switch                 |                        |                         |

A: CVT shift selector assembly      B: Brake pedal, upper

\*: Shift lock release button becomes operative by removing shift lock cover.

#### SHIFT LOCK SYSTEM : Component Description

INFOID:000000011463687

## COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F10B]

| Component                 | Function                                                                                                                                                                                                                                                                           |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Shift lock solenoid       | It operates according to the signal from the stop lamp switch and moves the lock lever.                                                                                                                                                                                            |
| Lock lever                | <ul style="list-style-type: none"><li>Rotates according to shift lock solenoid activation and releases the shift lock.</li><li>If shift lock solenoid does not activate, lock lever can be rotated when shift lock release button is pressed and shift lock is released.</li></ul> |
| Detent rod                | It links with the selector button and restricts the selector lever movement.                                                                                                                                                                                                       |
| Park position switch      | It detects that the selector lever is in "P" position.                                                                                                                                                                                                                             |
| Shift lock release button | Forcibly releases the shift lock when pressed.                                                                                                                                                                                                                                     |
| Stop lamp switch          | <ul style="list-style-type: none"><li>The stop lamp switch turns ON when the brake pedal is depressed.</li><li>When the stop lamp switch turns ON, the shift lock solenoid is energized.</li></ul>                                                                                 |

A

B

C

TM

E

F

G

H

I

J

K

L

M

N


O

P

## STRUCTURE AND OPERATION TRANSAXLE

### TRANSAXLE : Cross-Sectional View

INFOID:0000000011463688

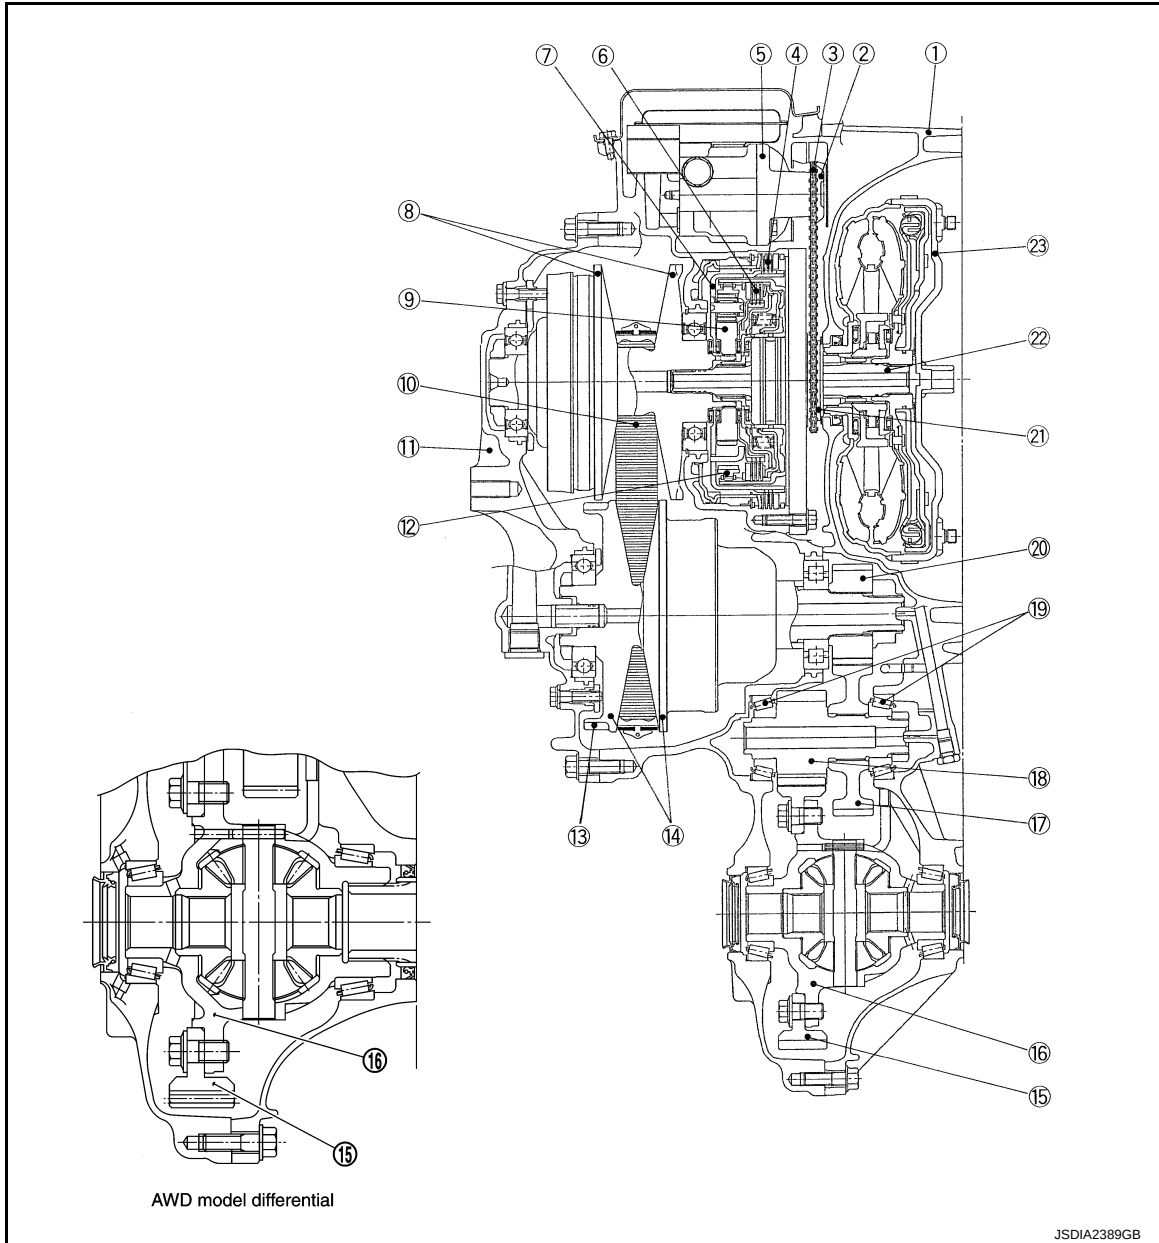

- |                          |                      |                    |
|--------------------------|----------------------|--------------------|
| 1. Converter housing     | 2. Driven sprocket   | 3. Chain           |
| 4. Reverse brake         | 5. Oil pump          | 6. Forward clutch  |
| 7. Planetary carrier     | 8. Primary pulley    | 9. Sun gear        |
| 10. Steel belt           | 11. Side cover       | 12. Internal gear  |
| 13. Parking gear         | 14. Secondary pulley | 15. Final gear     |
| 16. Differential case    | 17. Idler gear       | 18. Reduction gear |
| 19. Taper roller bearing | 20. Output gear      | 21. Drive sprocket |
| 22. Input shaft          | 23. Torque converter |                    |

## TRANSAXLE : Main Component Elements

INFOID:0000000011463689

### TORQUE CONVERTER (WITH LOCK-UP FUNCTION)


In the same way as a conventional A/T, the torque converter is a system that increases the engine torque and transmits the torque to the transaxle. A symmetrical 3-element, 1-stage, 2-phase type is used here.

### OIL PUMP

Utilizes a vane-type oil pump that is driven by the engine through the oil pump drive chain in order to increase efficiency of pump discharge volume in low-speed zone and optimize pump discharge volume in high-speed zone. Discharged oil from oil pump is transmitted to control valve. It is used as the oil of primary and secondary pulley operation, the oil of clutch operation, and the lubricant for each part.

### FORWARD/REVERSE SELECTION UNIT


- A planetary gear type of forward/reverse selector mechanism is installed between the torque converter and primary pulley.
- The power from the torque converter is input via the input shaft, operating a wet multi-plate clutch by means of hydraulic pressure to switch between forward and reverse driving.

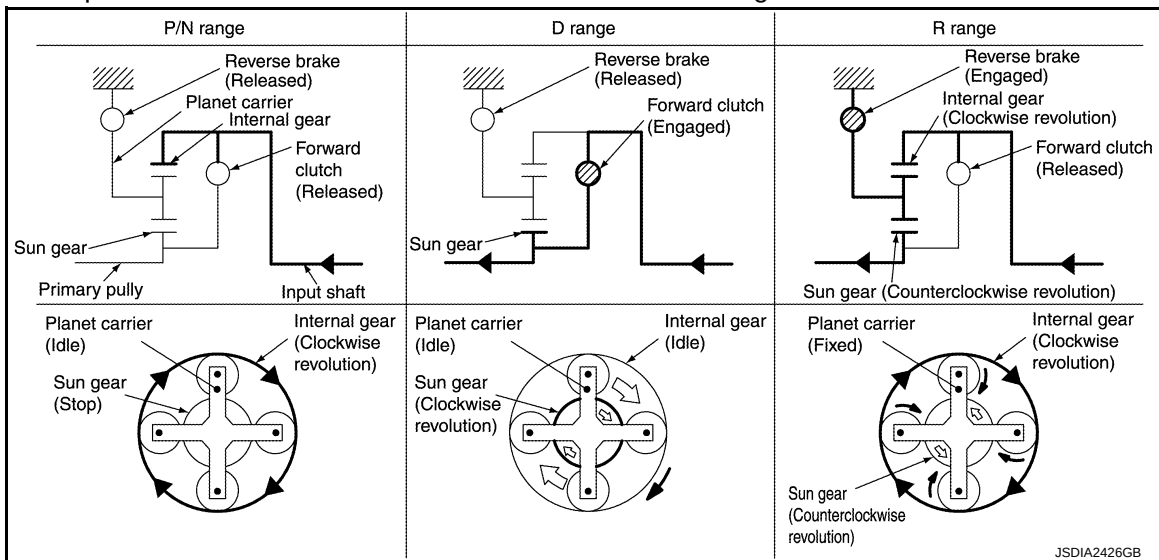

### FINAL DRIVE AND DIFFERENTIAL

The deceleration gears are composed of 2 stages: primary deceleration (output gear, idler gear pair) and secondary deceleration (reduction gear, final gear pair). All of these gears are helical gears.

The lubrication oil is the same as the fluid (Genuine CVT fluid) which lubricates the entire transaxle.

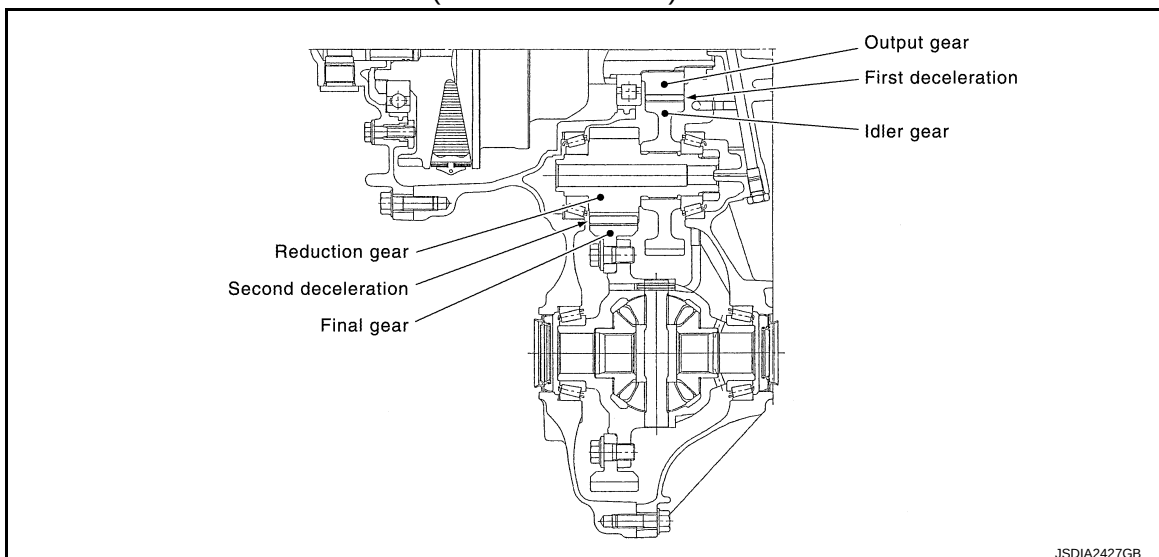


JSDIA2427GB

## TRANSAXLE : Belt & Pulley

INFOID:000000011463690

### STRUCTURE

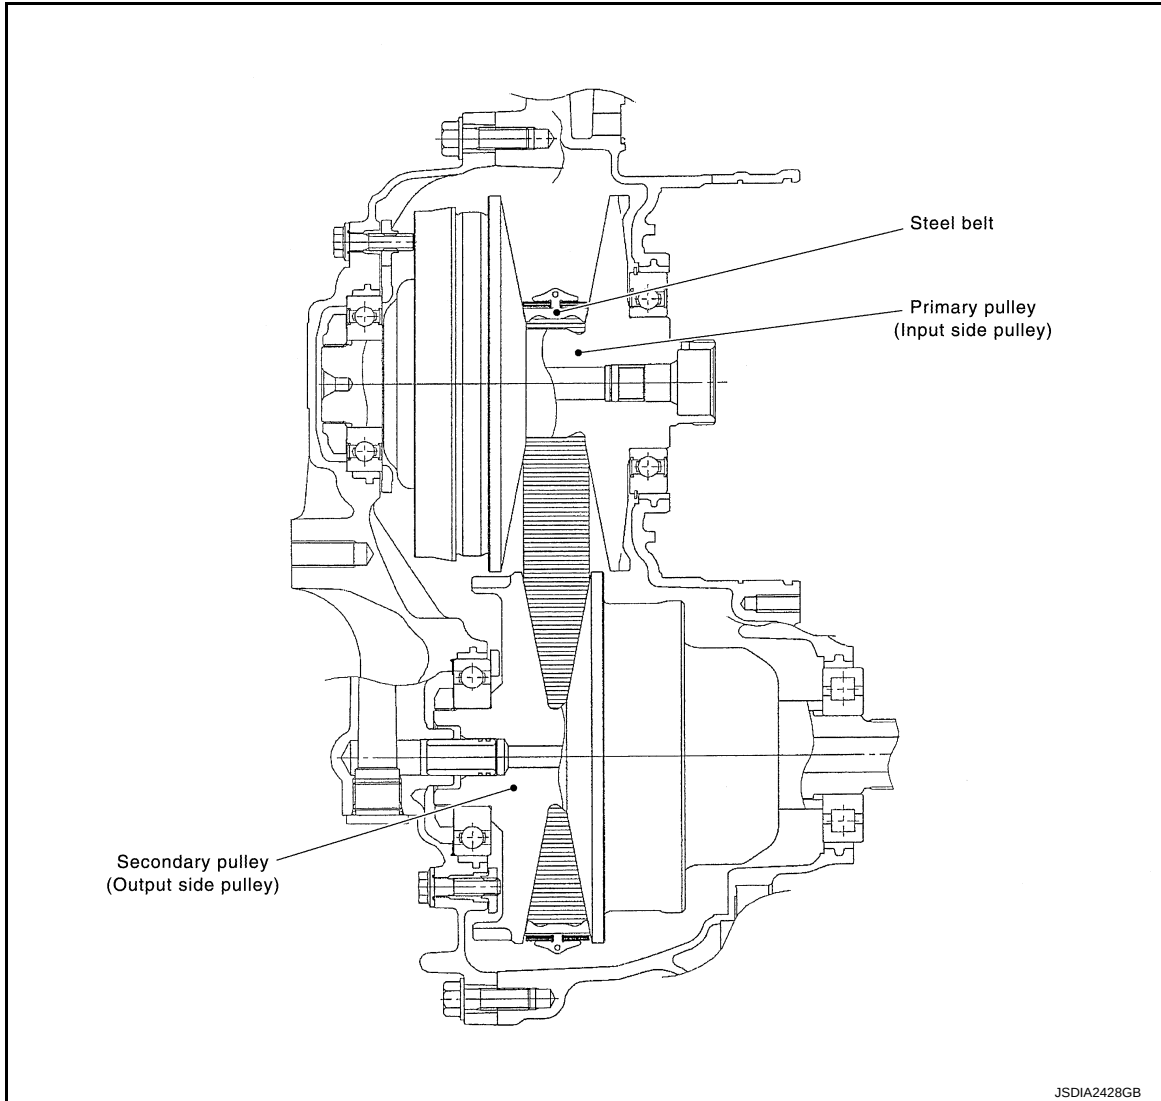

### MECHANISM


It is composed of a pair of pulleys (the groove width is changed freely in the axial direction) and the steel belt (the steel plates are placed continuously and the belt is guided with the multilayer steel rings on both sides). The groove width changes according to wrapping radius of steel belt and pulley from low status to overdrive status continuously with non-step. It is controlled with the oil pressures of primary pulley and secondary pulley.

### STEEL BELT

It is composed of multiple steel plates (A) and two steel rings (B) stacked to a several number. The feature of this steel belt transmits power with compression of the steel plate in contrast with transmission of power in pulling with a rubber belt. Friction force is required with the pulley slope to transmit power from the steel plate. The force is generated with the following mechanism:

Oil pressure applies to the secondary pulley to nip the plate. ⇒The plate is pushed and extended outward. ⇒The steel ring shows with-stands. ⇒Pulling force is generated on the steel ring. ⇒The plate of the primary pulley is nipped between the pulley. ⇒Friction force is generated between the steel belt and the pulley.

Therefore, responsibilities are divided by the steel plate that transmits the power with compression and the steel ring that maintains necessary friction force. In this way, the

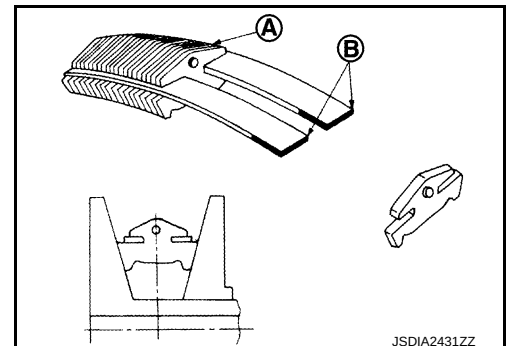



# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >


[CVT: RE0F10B]

tension of the steel ring is distributed on the entire surface and stress variation is limited, resulting in good durability.

## PULLEY

The primary pulley (input shaft side) and the secondary pulley (output shaft side) have the shaft with slope (fixed cone surface), movable sheave (movable cone surface that can move in the axial direction) and oil pressure chamber at the back of the movable sheave.

The movable sheave slides on the shaft to change the groove width of the pulley. Input signals of engine load (accelerator pedal opening), primary pulley speed and secondary pulley speed change the operation pressures of the primary pulley and the secondary pulley, and controls the pulley groove width.

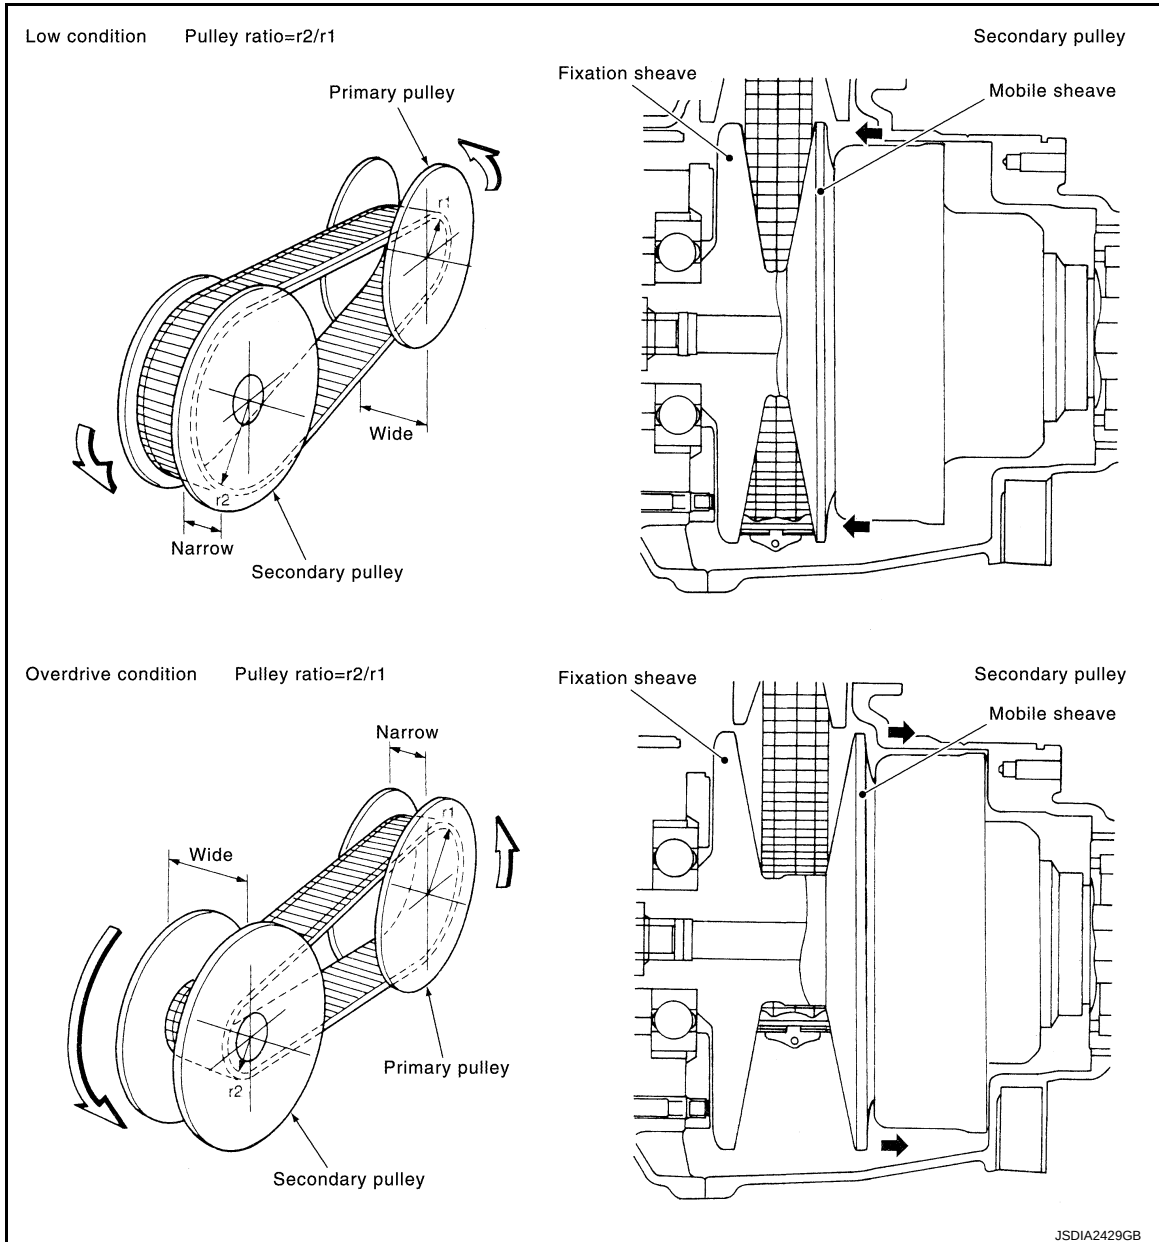


## FLUID COOLER & FLUID WARMER SYSTEM

## FLUID COOLER & FLUID WARMER SYSTEM : System Description

INFOID:000000011463691


## CVT FLUID COOLER SCHEMATIC

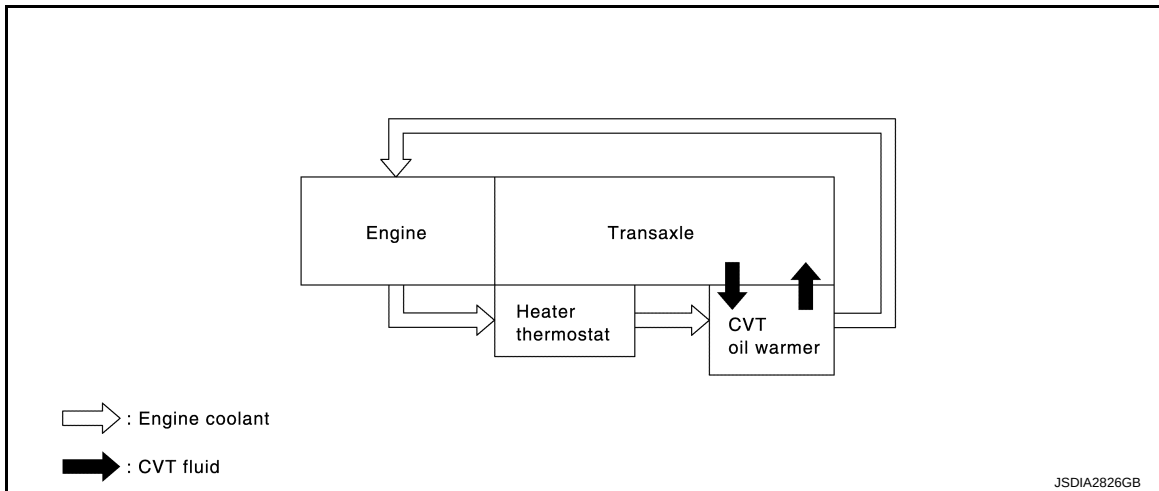

## COMPONENT DESCRIPTION


### CVT Oil Warmer

- The CVT oil warmer (1) is installed on the front part of transaxle assembly.
- When engine is started while engine and CVT are cold, engine coolant temperature rises more quickly than CVT fluid temperature. CVT oil warmer is provided with two circuits for CVT and engine coolant respectively so that warmed engine coolant warms CVT quickly. This helps shorten CVT warming up time, improving fuel economy.
- A cooling effect is obtained when A/T fluid temperature is high.

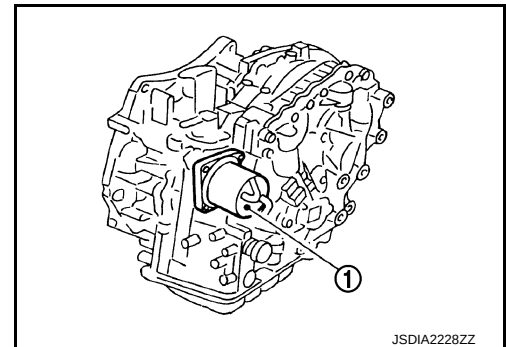

### Heater Thermostat

The heater thermostat (1) is installed on the front part of transaxle assembly.

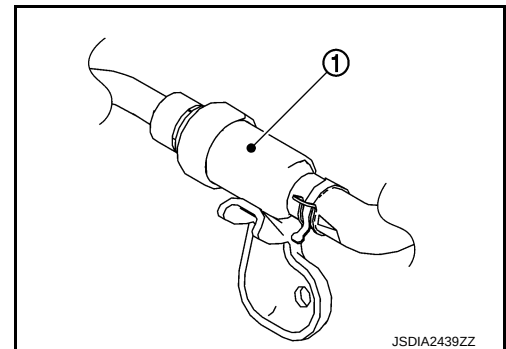

## MECHANICAL SYSTEM


# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10B]

## MECHANICAL SYSTEM : System Diagram

INFOID:0000000011463692

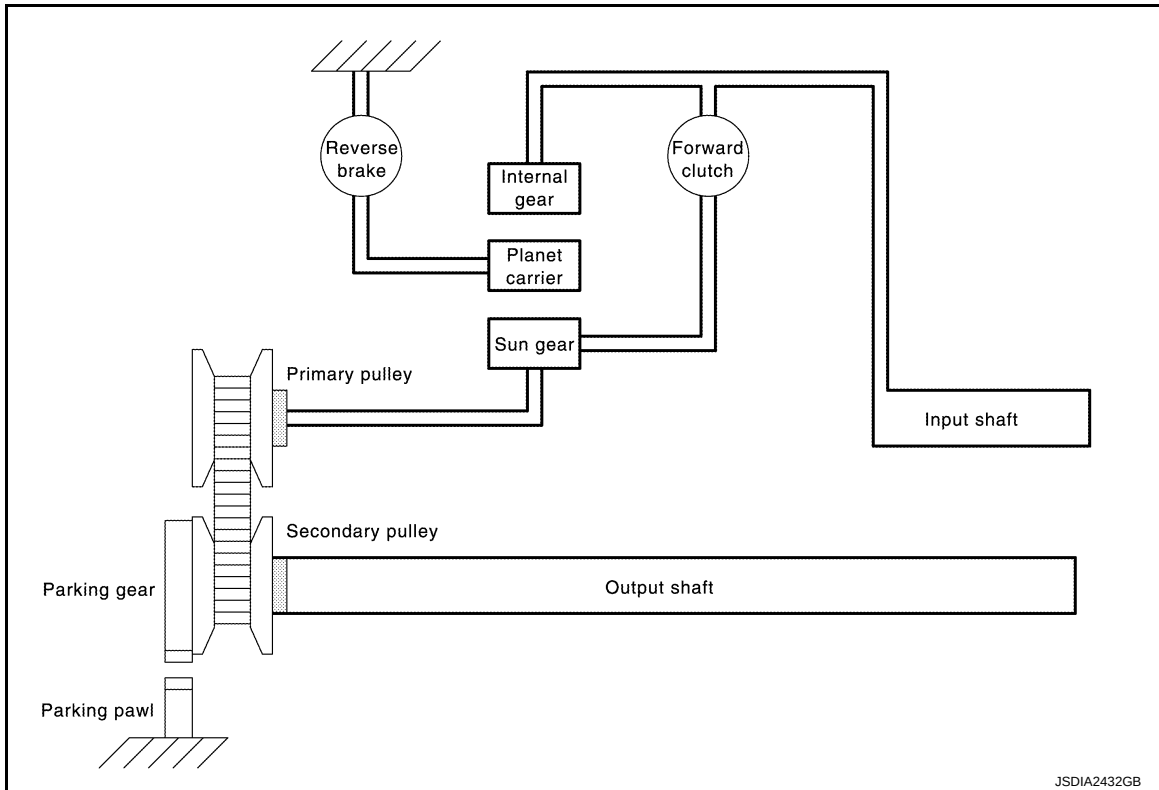

## MECHANICAL SYSTEM : System Description

INFOID:0000000011463693

Traction force of engine is transmitted to wheel via torque converter, planetary gear, belt, pulley, differential gear, and others. Also includes a parking mechanism that mechanically fixes secondary pulley when selector lever is shifted to the “P” position.

## ACTIVATION STATE ACCORDING TO EACH SHIFTING

×: Operates

| Selector lever position | Secondary pressure sensor | Solenoid valve               |                                   |                                 |                               | Step motor |
|-------------------------|---------------------------|------------------------------|-----------------------------------|---------------------------------|-------------------------------|------------|
|                         |                           | Line pressure solenoid valve | Secondary pressure solenoid valve | Torque converter solenoid valve | Lock-up select solenoid valve |            |
| P                       | ×                         | ×                            | ×                                 |                                 | ×                             |            |
| R                       | ×                         | ×                            | ×                                 |                                 | ×                             | ×          |
| N                       | ×                         | ×                            | ×                                 |                                 | ×                             | ×          |
| D (Low)                 | ×                         | ×                            | ×                                 | ×                               |                               | ×          |
| D (High)                | ×                         | ×                            | ×                                 | ×                               |                               | ×          |
| D (Lock-up)             | ×                         | ×                            | ×                                 | ×                               |                               | ×          |

## POWER TRANSMISSION


“P” position

- Traction force from input shaft is not transmitted to primary pulley because forward clutch and reverse brake are not engaged and run idle.
- Torque from the wheels is not transmitted to secondary pulley because secondary pulley is mechanically fixed when parking pole that is linked with selector lever is engaged with parking gear that is integrated with secondary pulley.

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10B]

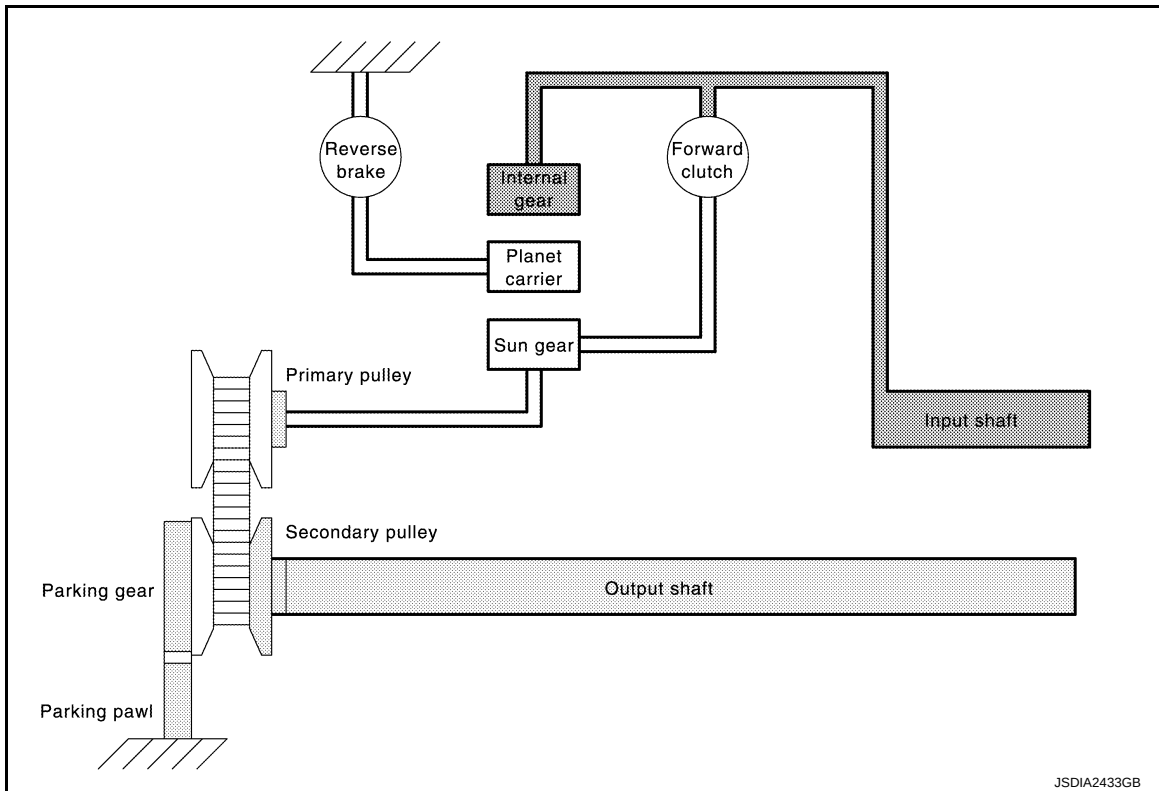

Planetary gear

| Name                  | Sun gear | Planet carrier | Internal gear        |
|-----------------------|----------|----------------|----------------------|
| Condition             | Stop     | Idled          | Input                |
| Direction of rotation | —        | —              | Clockwise revolution |


“R” position

- Traction force from input shaft rotates sun gear in opposite direction of input shaft rotation because reverse brake is engaged and planetary gear is fixed.
- Therefore primary pulley rotates in opposite direction of input shaft rotation and traction force output is in opposite direction rotation.

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10B]

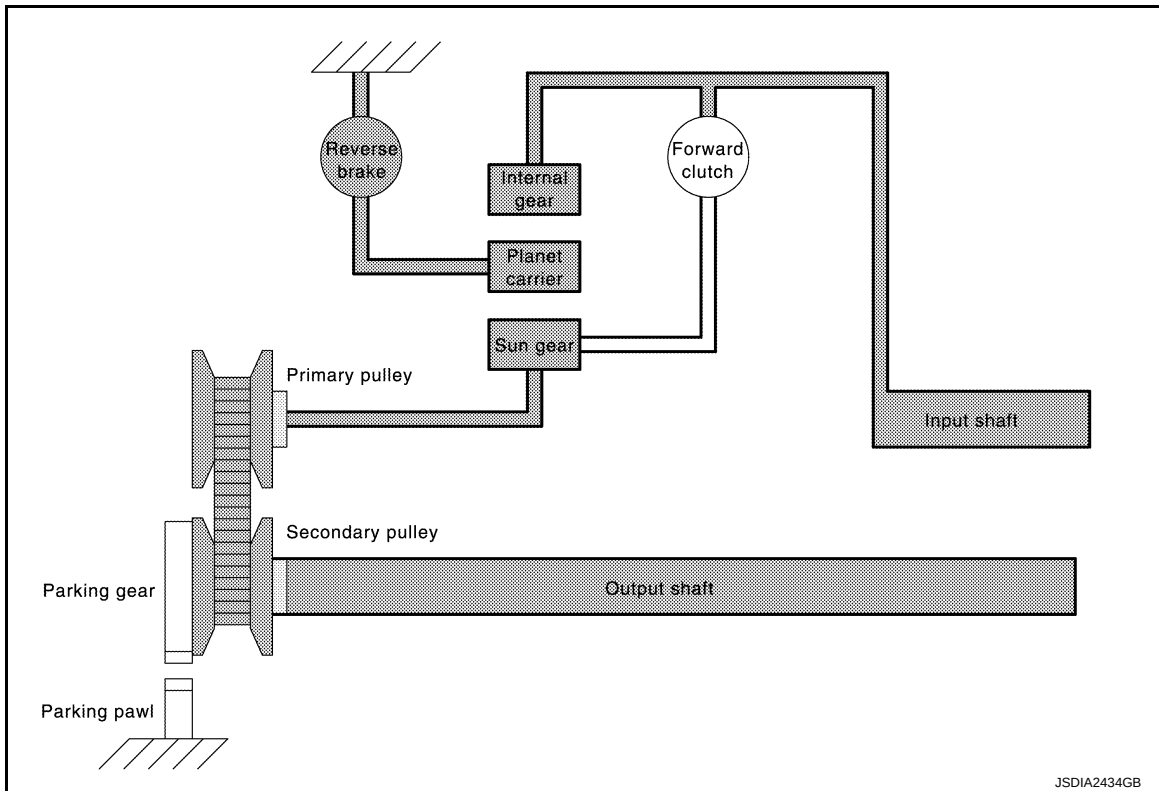

Planetary gear

| Name                  | Sun gear                    | Planet carrier | Internal gear        |
|-----------------------|-----------------------------|----------------|----------------------|
| Condition             | Output                      | Fixed          | Input                |
| Direction of rotation | Counterclockwise revolution | —              | Clockwise revolution |


“N” position

- Traction force from input shaft is not transmitted to primary pulley because forward clutch and reverse brake are not engaged and run idle.
- Torque from wheel is not transmitted to input shaft because forward clutch and reverse brake are not engaged and planetary carrier runs idle.

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10B]

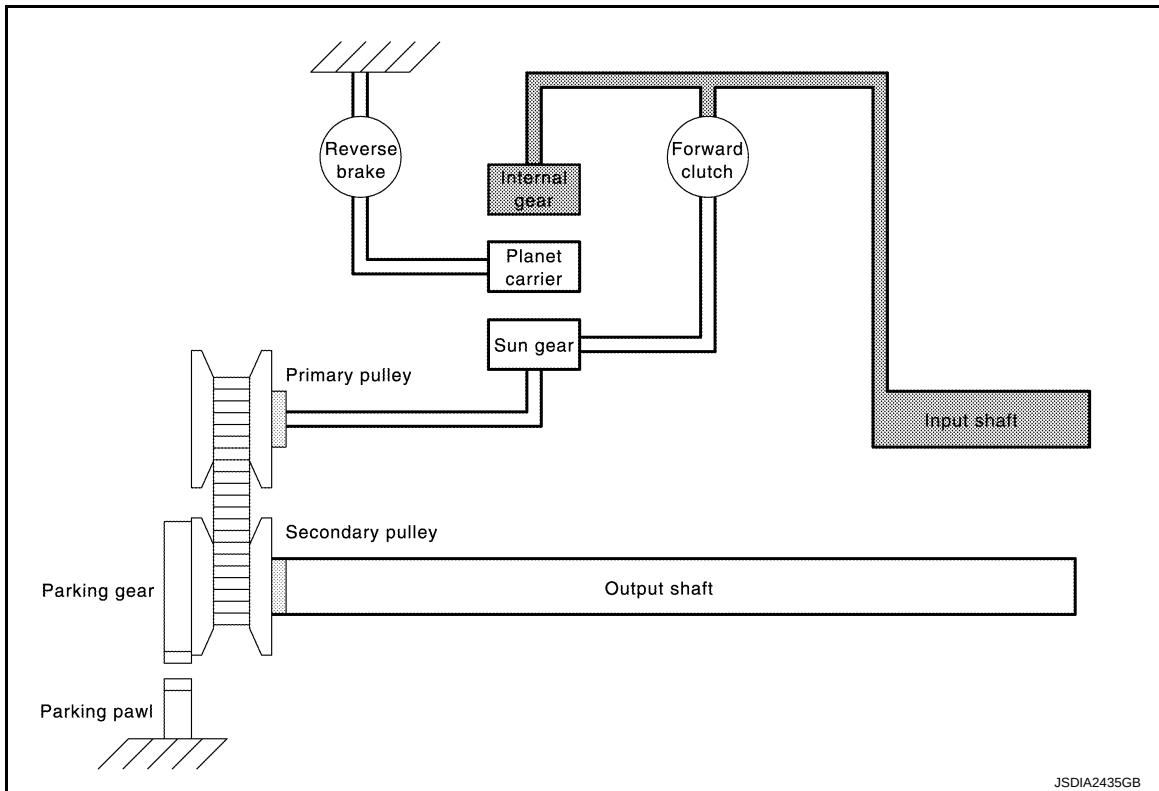

Planetary gear

| Name                  | Sun gear | Planet carrier | Internal gear        |
|-----------------------|----------|----------------|----------------------|
| Condition             | Stop     | Idle           | Input                |
| Direction of rotation | —        | —              | Clockwise revolution |


“D” position

- Traction force from input shaft rotates sun gear via forward clutch in the same direction of input shaft because forward clutch is engaged.
- Therefore primary pulley rotates in the same direction of input shaft rotation and traction force output is in the same direction rotation.

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10B]

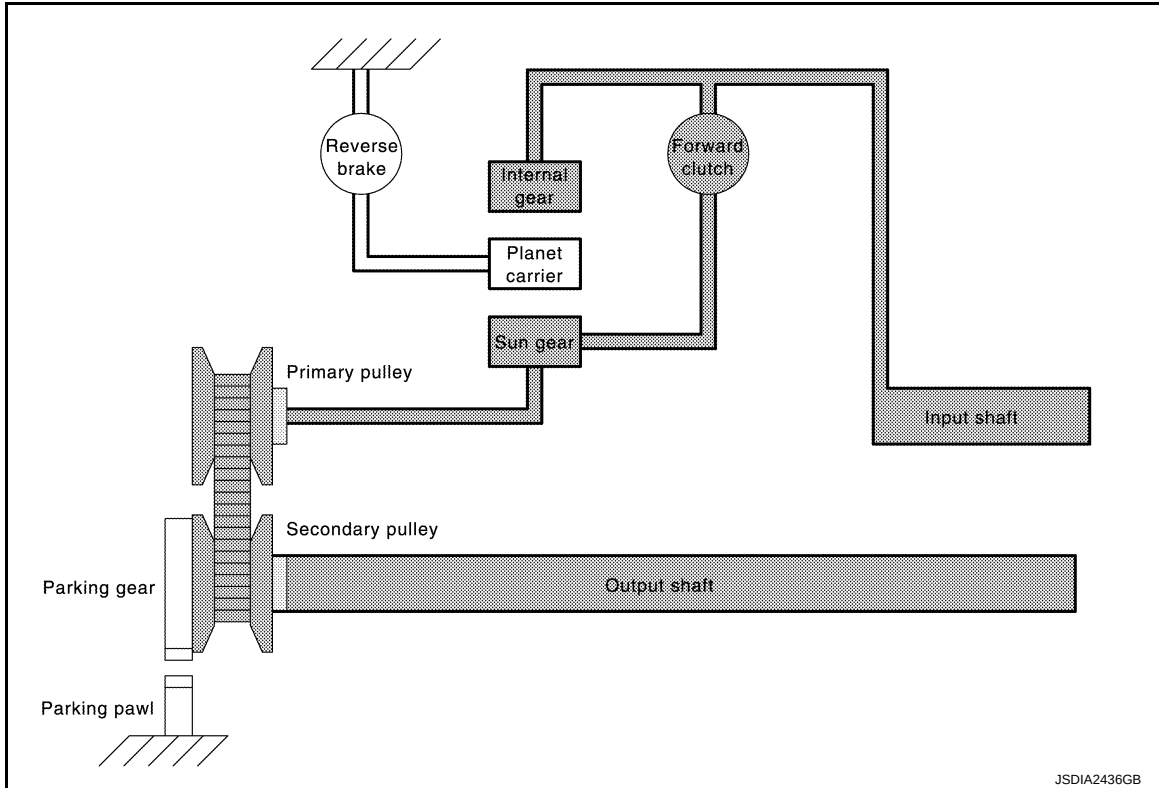

Planetary gear

| Name                  | Sun gear             | Planet carrier | Internal gear        |
|-----------------------|----------------------|----------------|----------------------|
| Condition             | Input/output         | Idle           | Input                |
| Direction of rotation | Clockwise revolution | —              | Clockwise revolution |

## MECHANICAL SYSTEM : Component Description

INFOID:000000011463694

| Part name        | Function                                                                                                                                                                                                                                                                                                                                                                                                                   |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Torque converter | Increases engine torque and transmits it to the transaxle.                                                                                                                                                                                                                                                                                                                                                                 |
| Oil pump         | Utilizes a vane-type oil pump that is driven by the engine through the oil pump drive chain in order to increase efficiency of pump discharge volume in low-speed zone and optimize pump discharge volume in high-speed zone. Discharged oil from oil pump is transmitted to control valve. It is used as the oil of primary and secondary pulley operation, the oil of clutch operation, and the lubricant for each part. |
| Forward clutch   | The forward clutch is wet and multiple plate type clutch that consists of clutch drum, piston, drive plate, and driven plate. It is a clutch to move the vehicle forward by activating piston hydraulically, engaging plates, and directly connecting sun gear and input shaft.                                                                                                                                            |
| Reverse brake    | The reverse brake is a wet multiple-plate type brake that consists of transaxle case, piston, drive plate, and driven plate. It is a brake to move the vehicle in reverse by activating piston hydraulically, engaging plates, and fixing planetary gear.                                                                                                                                                                  |
| Internal gear    | The internal gear is directly connected to forward clutch drum. It is a gear that moves the outer edge of pinion planet of planet carrier. It transmits power to move the vehicle in reverse when the planet carrier is fixed.                                                                                                                                                                                             |
| Planet carrier   | Composed of a carrier, pinion planet, and pinion shaft. This gear fixes and releases the planet carrier in order to switch between forward and reverse driving.                                                                                                                                                                                                                                                            |
| Sun gear         | Sun gear is a set part with planet carrier and internal gear. It transmits transmitted force to primary fixed sheave. It rotates in forward or reverse direction according to activation of either forward clutch or reverse brake.                                                                                                                                                                                        |
| Input shaft      | The input shaft is directly connected to forward clutch drum and transmits traction force from torque converter. In shaft center, there are holes for hydraulic distribution to primary pulley and hydraulic distribution for lockup ON/OFF.                                                                                                                                                                               |

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10B]

| Part name                             | Function                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Primary pulley                        | It is composed of a pair of pulleys (the groove width is changed freely in the axial direction) and the steel belt (the steel plates are placed continuously and the belt is guided with the multilayer steel rings on both sides). The groove width changes according to wrapping radius of steel belt and pulley from low status to overdrive status continuously with non-step. It is controlled with the oil pressures of primary pulley and secondary pulley. |
| Secondary pulley                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Steel belt                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Manual shaft                          | When the manual shaft is in the P position, the parking rod that is linked to the manual shaft rotates the parking pole. When the parking pole rotates, it engages with the parking gear, fixing the parking gear. As a result, the secondary pulley that is integrated with the parking gear is fixed.                                                                                                                                                            |
| Parking rod                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Parking pawl                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Parking gear                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Output gear                           | The deceleration gears are composed of 2 stages: primary deceleration (output gear, idler gear pair) and secondary deceleration (reduction gear, final gear pair). All of these gears are helical gears.                                                                                                                                                                                                                                                           |
| Idler gear                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Reduction gear                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Differential                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Torque converter regulator valve      | Adjusts the feed pressure to the torque converter to the optimum pressure corresponding to the driving condition.                                                                                                                                                                                                                                                                                                                                                  |
| Pressure regulator valve              | Adjusts the discharge pressure from the oil pump to the optimum pressure (line pressure) corresponding to the driving condition.                                                                                                                                                                                                                                                                                                                                   |
| Torque converter clutch control valve | Adjusts the torque converter engage and disengage pressures.                                                                                                                                                                                                                                                                                                                                                                                                       |
| Shift control valve                   | Controls the line pressure that is applied to the primary pulley according to the stroke difference between the step motor and primary pulley.                                                                                                                                                                                                                                                                                                                     |
| Secondary valve                       | Reduces the line pressure and adjusts the secondary pressure.                                                                                                                                                                                                                                                                                                                                                                                                      |
| Clutch regulator valve                | Adjusts the clutch operating pressure according to the driving conditions.                                                                                                                                                                                                                                                                                                                                                                                         |
| Manual valve                          | Distributes the clutch operation pressure to each circuit according to the selector lever position.                                                                                                                                                                                                                                                                                                                                                                |
| Select control valve                  | Engages when selected. Adjusts the forward clutch pressure and reverse brake pressure.                                                                                                                                                                                                                                                                                                                                                                             |
| Select switch valve                   | Performs switching control of the torque converter clutch solenoid valve control pressure when lock-up is engaged/disengaged, and when the forward/reverse clutches (forward clutch and reverse brake) are engaged/disengaged.                                                                                                                                                                                                                                     |
| Step motor                            | <ul style="list-style-type: none"> <li>• Step motor changes step by turning 4 coils ON or OFF according to signal from TCM.</li> <li>• By changing step, step motor controls outward flow and inward flow of line pressure to primary pulley, determines the primary pulley position, and controls gear ratio.</li> </ul>                                                                                                                                          |




## SYSTEM

## CVT CONTROL SYSTEM

## CVT CONTROL SYSTEM : System Description


INFOID:0000000011463695

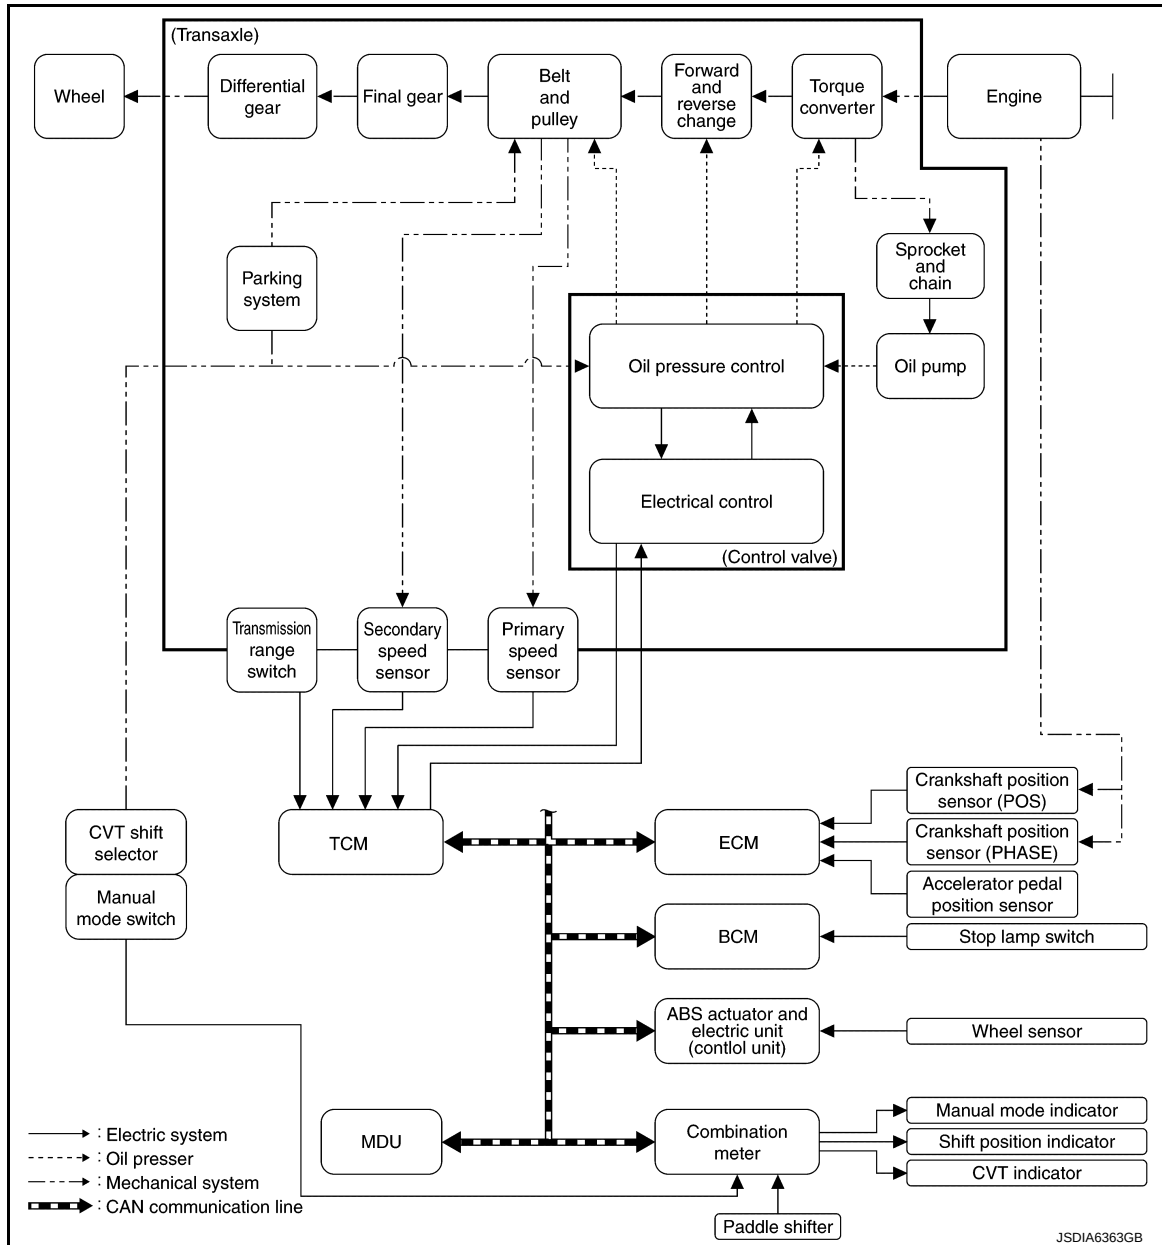

JSDIA6363GB

## CVT CONTROL SYSTEM : System Diagram

INFOID:000000011463696

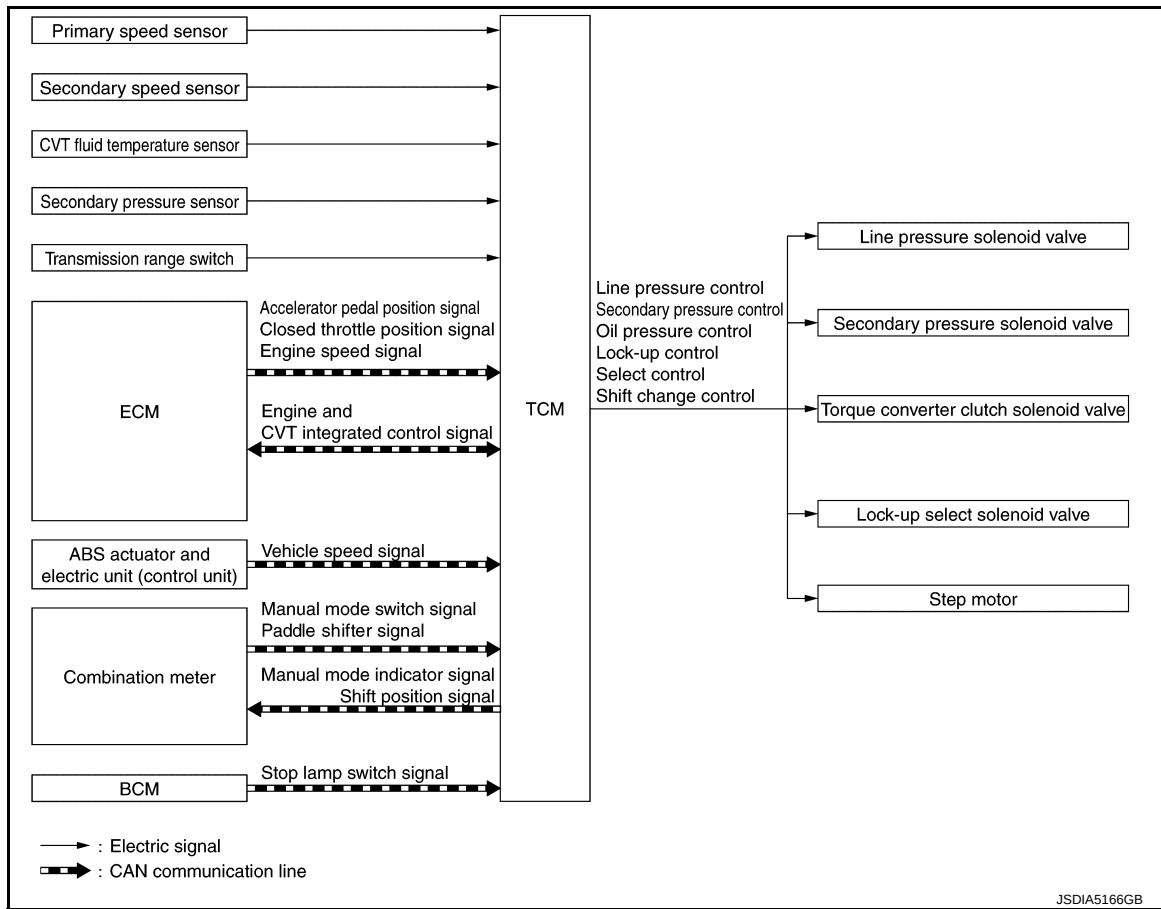

## CVT CONTROL SYSTEM : Fail-Safe

INFOID:000000011463697

The TCM has an electrical fail-safe mode. In this mode TCM is operator even if there is an error in a main electronic control input/output signal circuit.

### DESCRIPTION

When a malfunction is detected in each sensor, switch, solenoid or others, this function provides control to minimize reduction of drivability so that durability of transmission assembly can be acquired.

| DTC   | Condition                                                              | Vehicle behavior                                                                                                                                                                                                                                                                            |
|-------|------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0703 | —                                                                      | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                                                                                                               |
| P0705 | —                                                                      | <ul style="list-style-type: none"> <li>Position indicator on combination meter is not displayed</li> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration at high load state is slow</li> <li>Manual mode is not activated</li> <li>Lock-up is not performed</li> </ul> |
| P0710 | Engine coolant temperature when engine starts is 10°C (50°F) or more   | Start is slow                                                                                                                                                                                                                                                                               |
|       | Engine coolant temperature when engine starts is 10°C (50°F) or less   | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Vehicle speed is not increased</li> </ul>                                                                                                                                                       |
|       | Engine coolant temperature when engine starts is -35°C (-31°F) or less | Vehicle speed is not increased                                                                                                                                                                                                                                                              |

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10B]

| DTC   | Condition                                                       | Vehicle behavior                                                                                                                                                                                                                             |
|-------|-----------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0715 | —                                                               | <ul style="list-style-type: none"> <li>Acceleration is slow</li> <li>Re-start is slow after vehicle is stop by strong deceleration</li> <li>Manual mode is not activated</li> <li>Lock-up is not performed</li> </ul>                        |
| P0720 | —                                                               | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Re-start is slow after vehicle is stop by strong deceleration</li> <li>Manual mode is not activated</li> <li>Lock-up is not performed</li> </ul> |
| P0725 | —                                                               | Lock-up is not performed                                                                                                                                                                                                                     |
| P0740 | —                                                               | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Lock-up is not performed</li> </ul>                                                                                                                                  |
| P0744 | —                                                               | Lock-up is not performed                                                                                                                                                                                                                     |
| P0746 | A malfunction is detected                                       | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                                                                                              |
|       | Function is excessively reduced after a malfunction is detected | <ul style="list-style-type: none"> <li>Start is difficult</li> <li>Drive is difficult</li> <li>Lock-up is not performed</li> </ul>                                                                                                           |
| P0778 | —                                                               | Vehicle speed is not increased                                                                                                                                                                                                               |
| P0826 | —                                                               | Manual mode is not activated                                                                                                                                                                                                                 |
| P0840 | —                                                               | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                                                                |
| P0841 | —                                                               | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                                                                |
| P0845 | —                                                               | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                                                                |
| P0868 | —                                                               | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                                                                |
| P1701 | —                                                               | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                                                                |
| P1705 | —                                                               | <ul style="list-style-type: none"> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                                                                                                                     |
| P1709 | —                                                               | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Shift position indicator (P, N) is not displayed, or is displayed with delay.</li> </ul>                                                         |
| P1722 | —                                                               | Lock-up is not activated in coast state                                                                                                                                                                                                      |
| P1723 | A malfunction is detected in primary pulley speed sensor side   | <ul style="list-style-type: none"> <li>Acceleration is slow</li> <li>Re-start is slow after vehicle is stop by strong deceleration</li> <li>Manual mode is not activated</li> <li>Lock-up is not performed</li> </ul>                        |
|       | A malfunction is detected in secondary pulley speed sensor      | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Re-start is slow after vehicle is stop by strong deceleration</li> <li>Manual mode is not activated</li> <li>Lock-up is not performed</li> </ul> |
| P1726 | —                                                               | Acceleration is slow                                                                                                                                                                                                                         |
| P1740 | —                                                               | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Lock-up is not performed</li> </ul>                                                                                                                                  |

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# SYSTEM

< SYSTEM DESCRIPTION >


[CVT: RE0F10B]

| DTC   | Condition                                                       | Vehicle behavior                                                                                                                      |
|-------|-----------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| P1777 | A malfunction is detected in low side (when vehicle is stopped) | <ul style="list-style-type: none"> <li>Vehicle speed is not increased</li> <li>Lock-up is not performed</li> </ul>                    |
|       | A malfunction is detected in high side (during driving)         | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>       |
| U0100 | —                                                               | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Vehicle speed is not increased</li> </ul> |
| U1000 | —                                                               | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Vehicle speed is not increased</li> </ul> |
| U1010 | —                                                               | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Vehicle speed is not increased</li> </ul> |

## OIL PRESSURE CONTROL SYSTEM

### OIL PRESSURE CONTROL SYSTEM : System Diagram

INFOID:0000000011463698

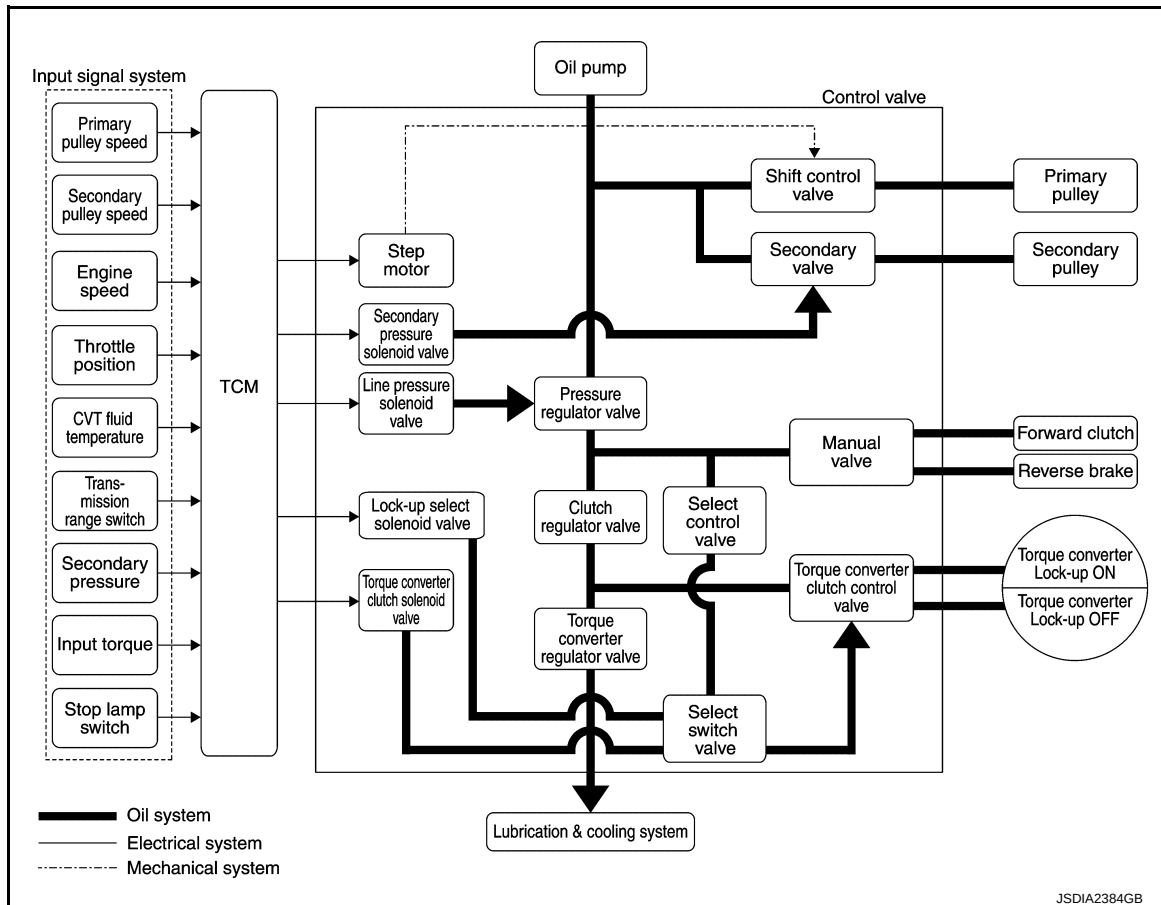

### OIL PRESSURE CONTROL SYSTEM : System Description

INFOID:0000000011463699

The hydraulic control mechanism consists of the oil pump directly driven by the engine, the hydraulic control valve that controls line pressure and transmission, and the input signal line.

#### LINE PRESSURE AND SECONDARY PRESSURE CONTROL


- When an input torque signal equivalent to the engine driving force is transmitted from the ECM to the TCM, the TCM controls the line pressure solenoid valve and secondary pressure solenoid valve.

# SYSTEM

## < SYSTEM DESCRIPTION >

[CVT: RE0F10B]

- Highly accurate line pressure control and secondary pressure control reduces friction for improvement of fuel economy.

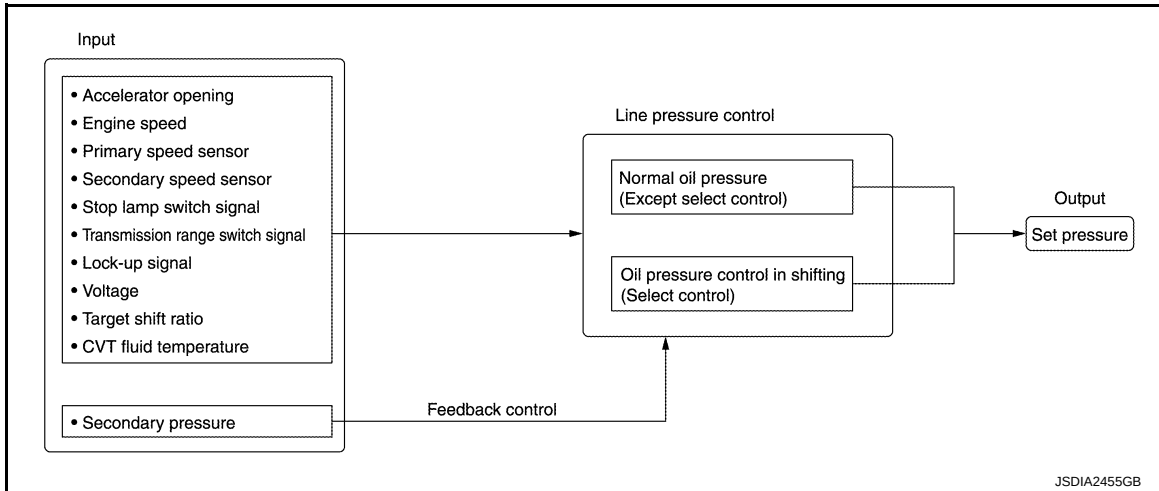

### Normal Oil Pressure Control

Appropriate line pressure and secondary pressure suitable for driving condition are determined based on the accelerator pedal position, engine speed, primary pulley (input) speed, secondary pulley (output) speed, input torque, stop lamp switch signal, transmission range switch signal, lock-up signal, power voltage, target shift ratio, oil temperature and oil pressure.


### Secondary Pressure Feedback Control

In normal oil pressure control and oil pressure control in shifting, highly accurate secondary pressure is determined by detecting the secondary pressure using an oil pressure sensor and by feedback control.

## CONTROL SYSTEM

### CONTROL SYSTEM : System Diagram

INFOID:0000000011463700

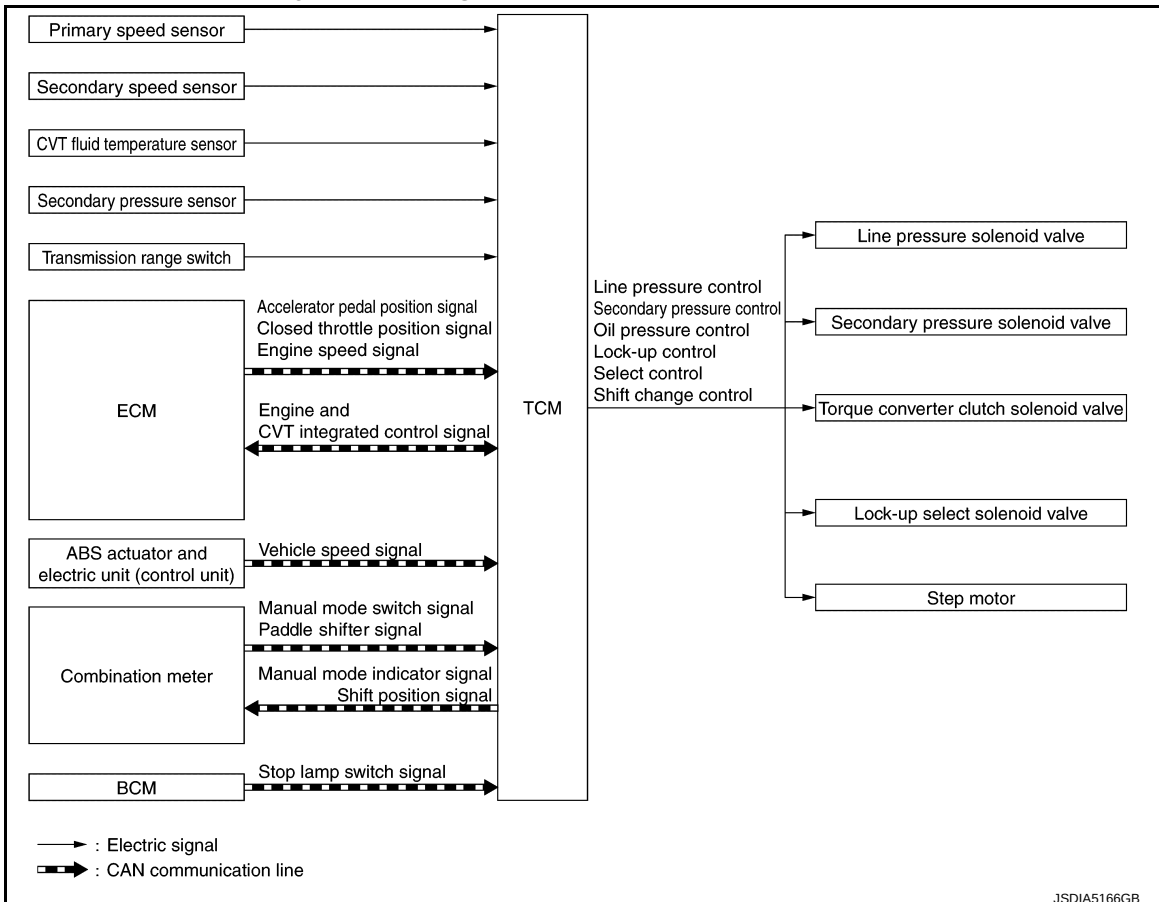

## CONTROL SYSTEM : System Description

INFOID:000000011463701

The TCM senses vehicle operating conditions through various sensors or signals. It always controls the optimum shift position and reduces shifting and lock-up shocks.

## TCM FUNCTION

The function of the TCM is to:

- Receive input signals transmitted from various switches and sensors.
- Determine required line pressure, shifting point, lock-up operation, etc.
- Transmit required output signals to the respective solenoids.

| Sensor (or signal)                                                                                                                                                                                                                                                                                                      | ⇒ | TCM function                                                                                                                                                                                                                                                                                                                   | ⇒ | Actuator                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Transmission range switch<br>CVT fluid temperature sensor<br>Secondary pressure sensor<br>Primary speed sensor<br>Secondary speed sensor<br>Engine speed signal<br>Accelerator pedal position signal<br>Closed throttle position signal<br>Stop lamp switch signal<br>Manual mode switch signal<br>Vehicle speed signal |   | Shift control<br>Line pressure control<br>Primary oil pressure control<br>Secondary oil pressure control<br>Lock-up control<br>Engine brake control<br>Vehicle speed control<br>Integrated Control System<br>Fail-safe function<br>Self-diagnosis function<br>Communication function with CONSULT<br>CAN communication control |   | Line pressure solenoid valve<br>Secondary pressure solenoid valve<br>Torque converter clutch solenoid valve<br>Lock-up select solenoid valve<br>Step motor<br>Shift position indicator<br>Manual mode indicator |

## TCM INPUT/OUTPUT SIGNAL

| Control item |                                     | Line pressure control | Select control | Shift control | Lock-up control | CAN communication control | Fail-safe function*2 |
|--------------|-------------------------------------|-----------------------|----------------|---------------|-----------------|---------------------------|----------------------|
| Input        | Transmission range switch           | ×                     | ×              | ×             | ×               | ×                         | ×                    |
|              | CVT fluid temperature sensor        | ×                     | ×              | ×             | ×               |                           | ×                    |
|              | Secondary pressure sensor           | ×                     |                | ×             |                 |                           | ×                    |
|              | Primary speed sensor                | ×                     |                | ×             | ×               | ×                         | ×                    |
|              | Secondary speed sensor              | ×                     | ×              | ×             | ×               | ×                         | ×                    |
|              | Engine speed signal*1               | ×                     | ×              |               | ×               | ×                         | ×                    |
|              | Accelerator pedal position signal*1 | ×                     | ×              | ×             | ×               | ×                         | ×                    |
|              | Closed throttle position signal*1   | ×                     |                | ×             | ×               | ×                         |                      |
|              | Stop lamp switch signal*1           | ×                     |                | ×             | ×               | ×                         |                      |
|              | Manual mode signal*1                | ×                     |                | ×             | ×               | ×                         | ×                    |
|              | Paddle shifter*1                    | ×                     |                | ×             | ×               | ×                         |                      |
|              | TCM power supply                    | ×                     | ×              | ×             | ×               | ×                         | ×                    |
| Output       | Line pressure solenoid              | ×                     | ×              | ×             |                 |                           | ×                    |
|              | Secondary pressure solenoid         | ×                     |                | ×             |                 |                           | ×                    |
|              | Torque converter clutch solenoid    |                       | ×              |               | ×               |                           | ×                    |
|              | Lock-up select solenoid valve       |                       | ×              |               | ×               |                           | ×                    |
|              | Step motor                          |                       |                | ×             |                 |                           | ×                    |

\*1: Input by CAN communications.

\*2: If these input/output signals show errors, TCM activates the fail-safe function.

## CONTROL SYSTEM : CAN Communication

INFOID:000000011463702

- CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability.

ity. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H and CAN-L) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

- For a list of CAN communication signals, refer to [LAN-30, "CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart"](#).

### CONTROL SYSTEM : Engine and CVT Integrated Control (CAN Communication Control)

INFOID:0000000011463703

- For purposes including improving the feeling when shifting speeds and preventing drops in engine speed, engine output control signals are exchanged between the ECM and TCM, and real-time cooperative control is performed according to the vehicle driving conditions.
- TCM sends the sudden deceleration signal, lock-up engaged signal, torque-down request signal, and other information to ECM, and also receives the torque-down permission/prohibit signals, lock-up permission/prohibit signals, accelerator position, and other information from ECM.

### CONTROL SYSTEM : Control between CVT and Combination Meter (CAN Communication Control)

INFOID:0000000011463704

TCM sends the manual mode display request, shift position indicator signal, and other information to the combination meter, and also receives the manual mode signal and other information from the combination meter.

### CONTROL SYSTEM : Control between CVT and BCM (CAN Communication Control)


INFOID:0000000011463705

TCM receives signals from the stop lamp switch via BCM.

### LOCK-UP AND SELECT CONTROL SYSTEM

#### LOCK-UP AND SELECT CONTROL SYSTEM : System Diagram

INFOID:0000000011463706

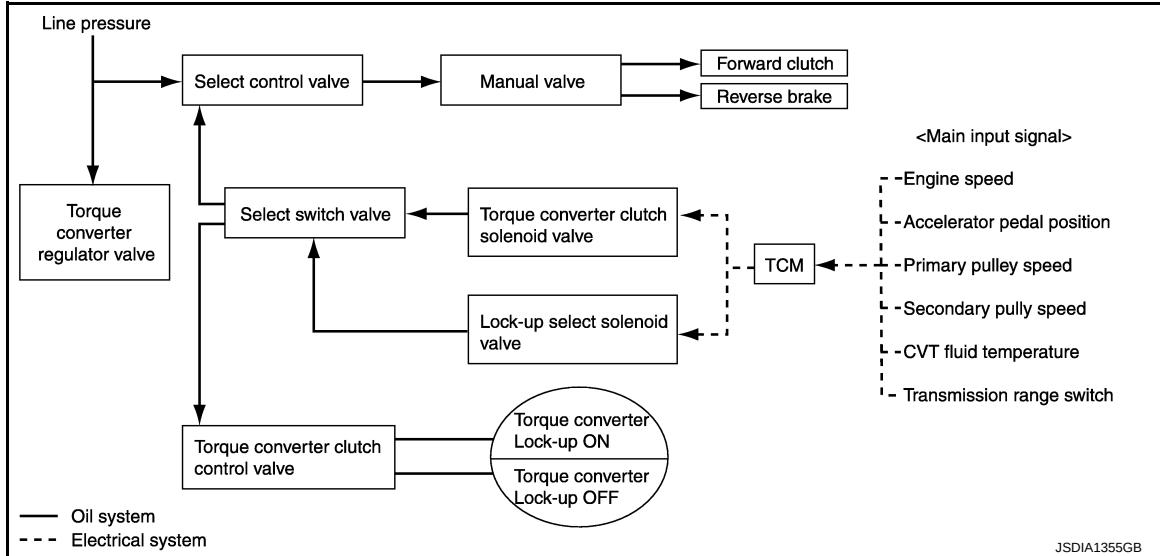

#### LOCK-UP AND SELECT CONTROL SYSTEM : System Description

INFOID:0000000011463707


- The torque converter clutch piston in the torque converter is engaged to eliminate torque converter slip to increase power transmission efficiency.
- The torque converter clutch control valve operation is controlled by the torque converter clutch solenoid valve, which is controlled by a signal from TCM. The torque converter clutch control valve engages or releases the torque converter clutch piston.
- When shifting between "N" ("P") ⇒ "D" ("R"), torque converter clutch solenoid valve controls engagement power of forward clutch and reverse brake.

# SYSTEM

## < SYSTEM DESCRIPTION >

[CVT: RE0F10B]

- The lock-up applied gear range was expanded by locking up the torque converter at a lower vehicle speed than conventional A/T models.
- If the CVT fluid temperature is low or the vehicle is in fail-safe mode due to malfunction, lock-up control is prohibited.

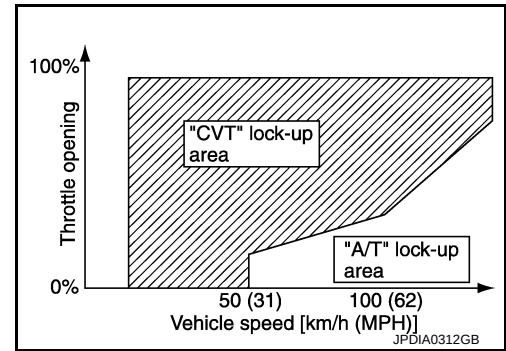

## TORQUE CONVERTER CLUTCH AND SELECT CONTROL VALVE CONTROL

### Lock-up Released

In the lock-up released state, the torque converter clutch control valve is set into the unlocked state by the torque converter clutch solenoid valve and the lock-up apply pressure is drained. In this way, the torque converter clutch piston is not coupled.

### Lock-up Applied

In the lock-up applied state, the torque converter clutch control valve is set into the locked state by the torque converter clutch solenoid valve and lock-up apply pressure is generated. In this way, the torque converter clutch piston is pressed and coupled.


### Select Control

When shifting between "N" ("P") ⇒ "D" ("R"), optimize the operating pressure on the basis of the throttle position, the engine speed, and the secondary pulley (output) revolution speed to lessen the shift shock.

## SHIFT CONTROL SYSTEM

### SHIFT CONTROL SYSTEM : System Diagram

INFOID:0000000011463708

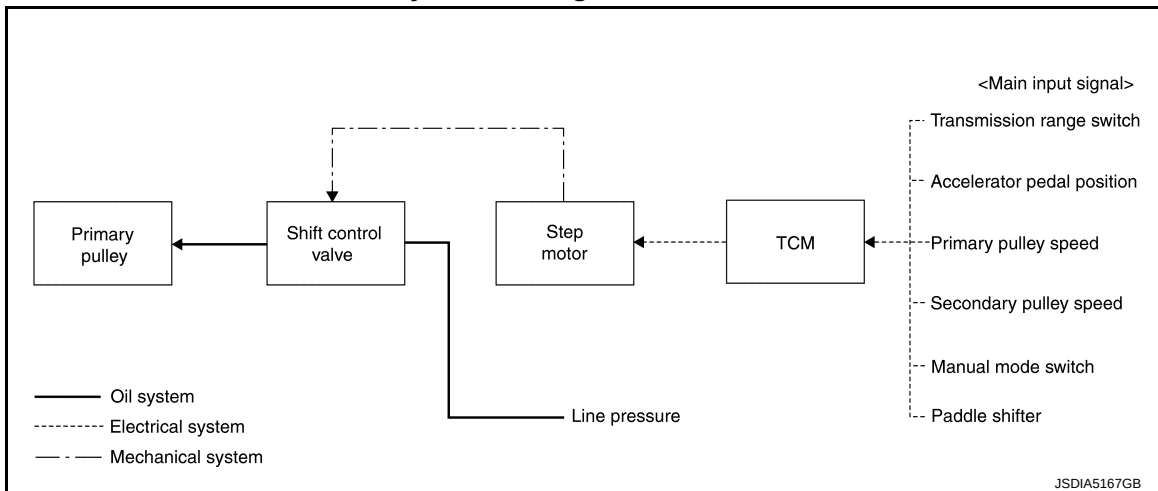

### NOTE:

The gear ratio is set for each position separately.

### SHIFT CONTROL SYSTEM : System Description

INFOID:0000000011463709

- To select the gear ratio that can give the driving force to meet driver's intent or vehicle situation, the vehicle driving condition such as vehicle speed or accelerator pedal position is detected and the most appropriate gear ratio is selected and the shifting method before reaching the speed is determined. The information is




# SYSTEM

## < SYSTEM DESCRIPTION >

[CVT: RE0F10B]


output to the primary pressure solenoid valve to control the line pressure input/output to the primary pulley, to determine the primary pulley (movable pulley) position and to control the gear position.

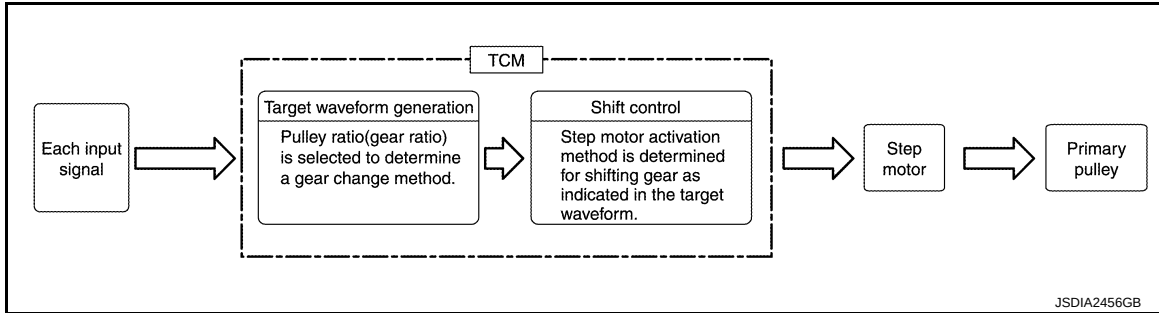

- The gear ratio is set for each position separately.


### “D” POSITION

Gear shifting is performed in all shifting ranges from the lowest to the highest gear ratio.

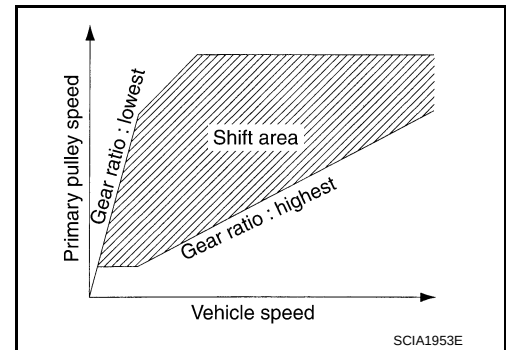

### “M” POSITION

When the selector lever or paddle shifter is put in the manual shift gate side, the fixed changing gear line is set. By moving the selector lever to + side or - side, the manual mode switch is changed over, and shift change like M/T becomes possible following the changing gear set line step by step.

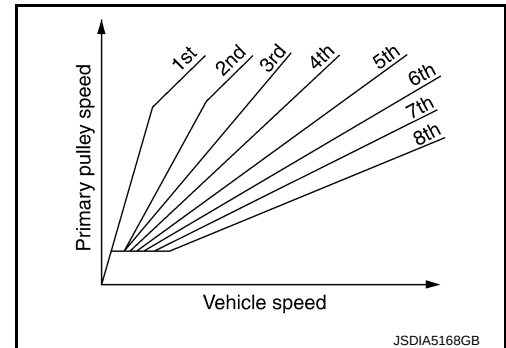

### Manual Mode Information

The TCM transmits the manual mode shift refusal signal to the combination meter if the TCM refuses the transaxle from the driving status of vehicle when the selector lever shifts to “UP (+ side)” or “DOWN (– side)” side. The combination meter blinks shift position indicator on the combination meter and sounds the buzzer to indicate the driver that the shifting is not performed when receiving this signal. However, the TCM does not transmit the manual mode shift refusal signal in the conditions as per the following.

- When the selector lever or the paddle shifter shifts to “DOWN (– side)” side while driving in M1.
- When the selector lever or the paddle shifter shifts to “UP (+ side)” side while driving in M8.

### BLIPPING CONTROL

Using engine torque, the blipping control enables a faster and more responsive gear shifting by compensating inertia torque generated from the rotational change during gear shifting in real time.

### Operation


- The blipping control is activated when the driver shifts up/down the transaxle in manual mode or when the transaxle is shifted up/down in “D” position SPORT mode.

#### NOTE:

The blipping control is not activated when the vehicle is in the following conditions:

- When CAN communication is abnormal.
- During the retard inhibit signal transmission from ECM within the engine-CVT integrated control.
- Engine coolant temperature is less than 20°C (68°F).
- CVT fluid temperature is more than 120°C (248°F).

- Vehicle speed is less than 20 km/h (12 MPH).
- When ABS, TCS or VDC is active.
- During wheel spin.
- ECM selects blipping control or normal shift control according to the gear position, the selector lever position, etc.
- The blipping control is activated when ECM judges it controllable after receiving a control permit signal from TCM.
- ECM controls engine torque, based on generated inertia torque.

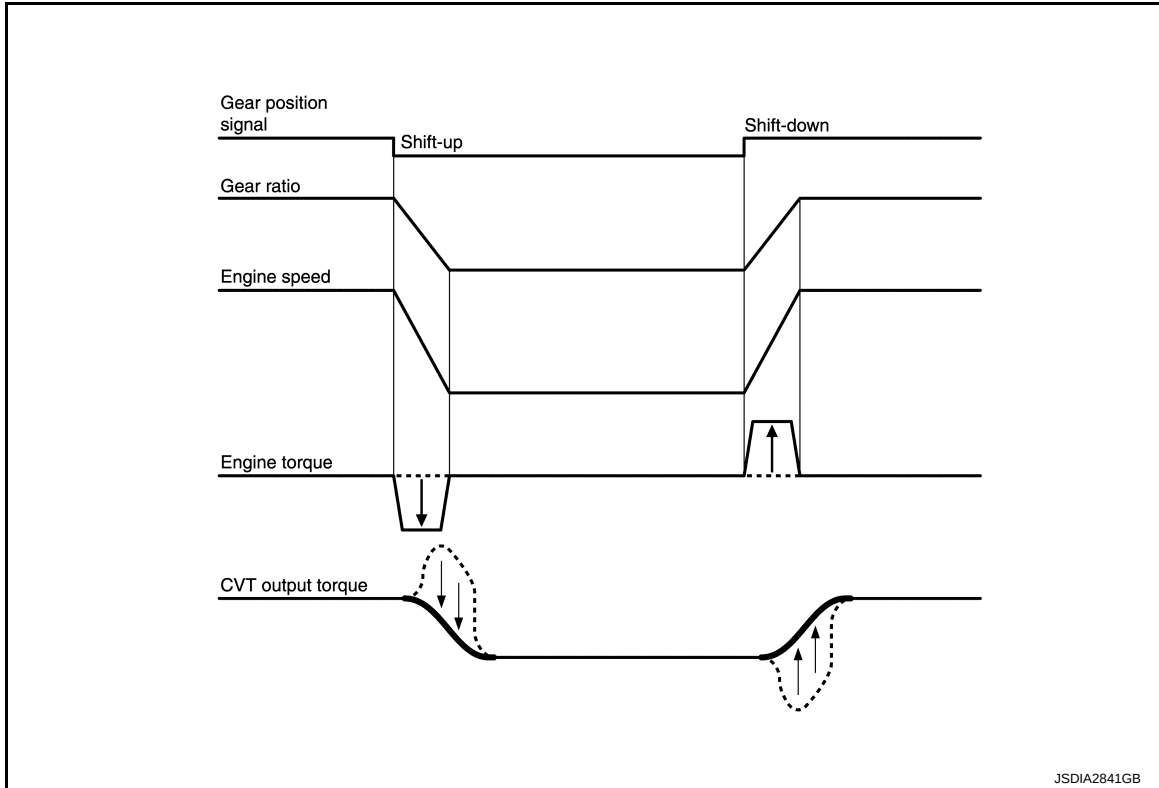


### HILL CLIMBING AND DESCENDING CONTROL

If a downhill is detected with the accelerator pedal is released, the system performs downshift to increase the engine brake force so that vehicle may not be accelerated more than necessary. If a climbing hill is detected, the system improves the acceleration performance in re-acceleration by limiting the gear shift range on the high side.

#### NOTE:

For engine brake control on a downhill, the control can be stopped with CONSULT.

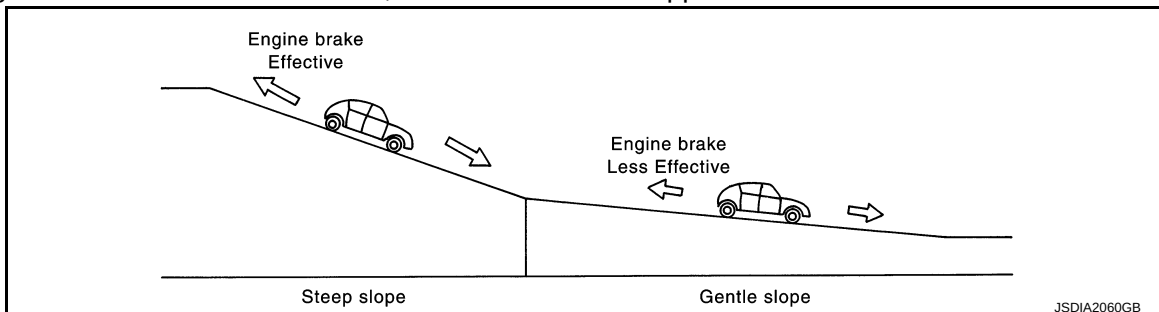


### CONTROL IN ACCELERATION

From change of the vehicle speed or accelerator pedal position, the acceleration request level of the driver or driving scene is evaluated. In start or acceleration during driving, the gear shift characteristics with linearity of revolution increase and vehicle speed increase are gained to improve the acceleration feel.

### INTEGRATED CONTROL SYSTEM

# INTEGRATED CONTROL SYSTEM : System Diagram

INFOID:0000000011463710

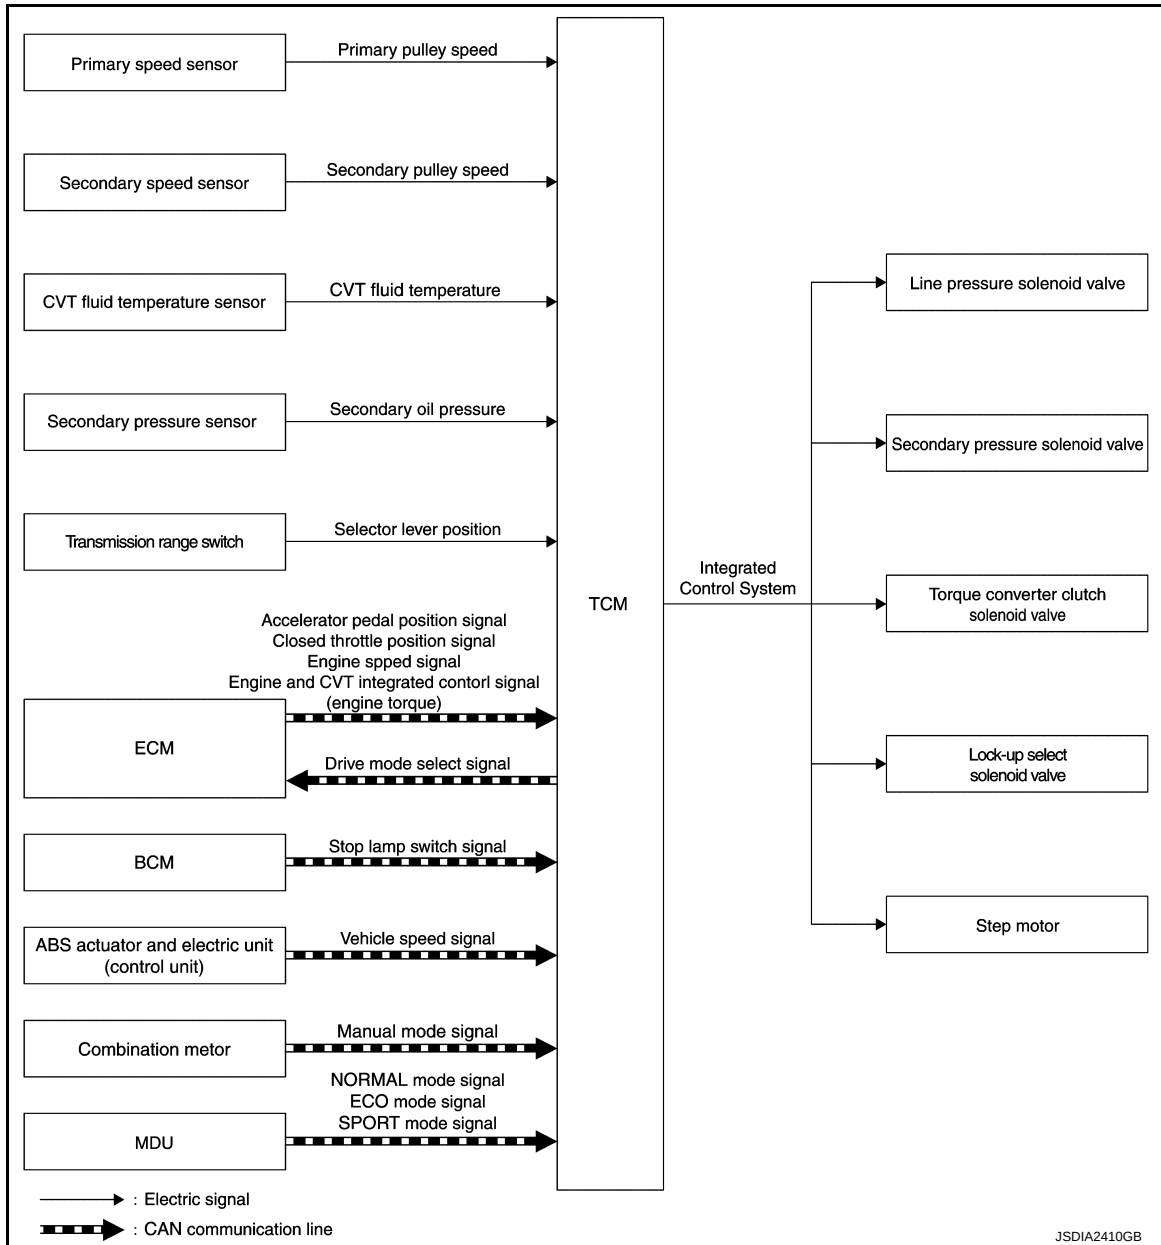

## INTEGRATED CONTROL SYSTEM : System Description

INFOID:0000000011463711

- TCM receives the NORMAL mode signal, ECO mode signal or SPORT mode signal from the multi display unit through CAN communication.
- TCM sends the recognized control mode to ECM through CAN communication (drive mode select signal).
- With operation on the multi display unit, the mode is changed on the display, but the mode is actually not changed due to CAN communication malfunction.
- When the selector lever is in any position other than D position, the gear shift line is not changed according to changes in the control mode.

### CONTROL DETAILS OF EACH MODE

| Control mode | Control                                                                                                                                                                                                                           |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| NORMAL mode  | Driving mode that automatically selects the shift schedule considering the balance of fuel economy and driving performance based on the driving condition and driving trend.                                                      |
| SPORT mode   | Keeps high engine speed and provides direct feel and acceleration performance suitable for driving on winding road. This driving mode also provides a rhythmical feel obtained by A/T like shifting, and produces sporty driving. |
| ECO mode     | Driving mode that selects the shift schedule with priority on fuel economy which gives low engine revolution.                                                                                                                     |

### FAIL-SAFE

If CAN communication malfunction occurs between TCM and the multi display unit, the mode when the malfunction occurs is maintained for approximately 30 seconds and the mode is changed to NORMAL mode when the accelerator pedal is released.

## SHIFT LOCK SYSTEM

### SHIFT LOCK SYSTEM : System Description

INFOID:000000011463712


- The shift lock is the mechanism provided to prevent quick start of a vehicle by incorrect operation of a drive when the selector lever is in P position.
- Selector lever can be shifted from the P position to another position when the following conditions are satisfied.
  - Ignition switch is ON.
  - Stop lamp switch ON (brake pedal is depressed)
  - Press the selector button.

### SHIFT LOCK OPERATION AT P POSITION

When brake pedal is not depressed (no selector operation allowed)


When the brake pedal is not depressed with the ignition switch ON, the shift lock solenoid (A) is OFF (not energized) and the solenoid rod (B) is extended with spring.

The connecting lock lever (C) is located at the position shown in the figure when the solenoid rod is extended. It prevents the movement of the detent rod (D). The selector lever cannot be shifted from the P position for this reason.

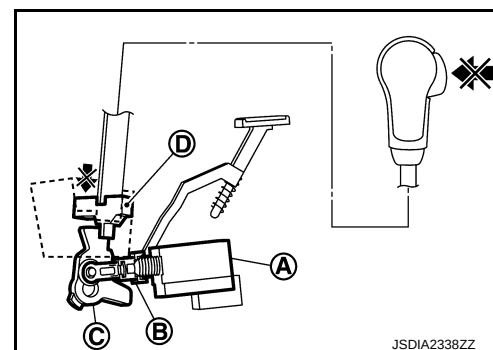

When brake pedal is depressed (selector lever operation allowed)

The shift lock solenoid (A) is turned ON (energized) when the brake pedal is depressed with the ignition switch ON. The solenoid rod (B) is compressed with the electromagnetic force. The connecting lock lever (C) rotates when the solenoid rod is compressed. Therefore, the detent rod (D) can be moved. The selector lever can be shifted to other positions for this reason.

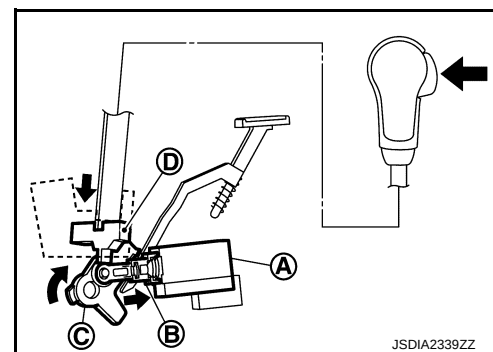

### P POSITION HOLD MECHANISM (IGNITION SWITCH LOCK)

# SYSTEM

## < SYSTEM DESCRIPTION >

[CVT: RE0F10B]

The shift lock solenoid (A) is not energized when the ignition switch is in any position other than ON. The shift mechanism is locked and P position is held. The operation cannot be performed from P position if the brake pedal is depressed with the ignition switch ON when the operation system of shift lock solenoid is malfunctioning. However, the lock lever (B) is forcibly rotated and the shift lock is released when the shift lock release button (C) is pressed from above. The selector operation from P position can be performed.

D : Detent rod

### CAUTION:

Use the shift lock release button only when the selector lever cannot be operated even if the brake pedal is depressed with the ignition switch ON.

## KEY LOCK SYSTEM

### KEY LOCK SYSTEM : System Description


INFOID:0000000011463713

#### KEY LOCK MECHANISM

The key is not set to LOCK when the selector lever is not selected to P position. This prevents the key from being removed from the key cylinder.



##### Key lock status

The slider (B) in the key cylinder (A) is moved to the left side of the figure when the selector lever is in any position other than P position. The rotator (D) that rotates together with the key (C) cannot be rotated for this reason. The key cannot be removed from the key cylinder because it cannot be turned to LOCK (E).

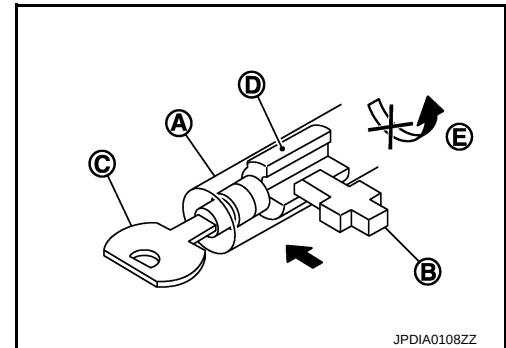

##### Key unlock status

The slider (B) in the key cylinder (A) is moved to the right side of the figure when the selector lever is in P position and the finger is removed from the selector button. The rotator (C) can be rotated for this reason. The key (D) can be removed from the key cylinder because it can be turned to LOCK (E).

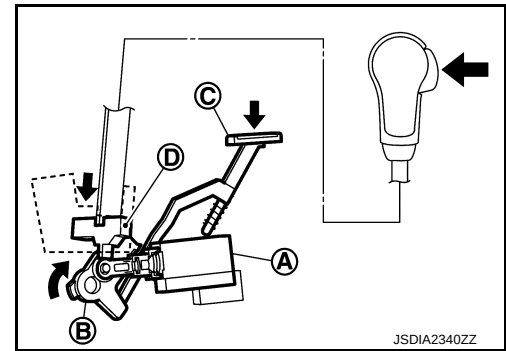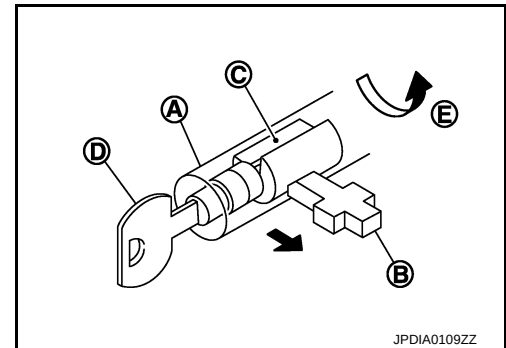

## ON BOARD DIAGNOSTIC (OBD) SYSTEM

## Diagnosis Description

INFOID:000000011463714

## DESCRIPTION

The CVT system has two self-diagnostic systems.

The first is the emission-related on board diagnostic system (OBD-II) performed by the TCM in combination with the ECM. The malfunction is indicated by the MIL (malfunction indicator lamp) and is stored as a DTC in the ECM memory, and the TCM memory.

The second is the TCM original self-diagnosis performed by the TCM. The malfunction is stored in the TCM memory. The detected items are overlapped with OBD-II self-diagnostic items. For detail, refer to [TM-188, "CONSULT Function"](#).

## OBD-II FUNCTION

The ECM provides emission-related on board diagnostic (OBD-II) functions for the CVT system. One function is to receive a signal from the TCM used with OBD-related parts of the CVT system. The signal is sent to the ECM when a malfunction occurs in the corresponding OBD-related part. The other function is to indicate a diagnostic result by means of the MIL (malfunction indicator lamp) on the instrument panel. Sensors, switches and solenoid valves are used as sensing elements.

The MIL automatically illuminates in "One or Two Trip Detection Logic" when a malfunction is sensed in relation to CVT system parts.

## ONE OR TWO TRIP DETECTION LOGIC OF OBD-II

## One Trip Detection Logic

If a malfunction is sensed during the first test drive, the MIL will illuminate and the malfunction will be stored in the ECM memory as a DTC. The TCM is not provided with such a memory function.

## Two Trip Detection Logic

When a malfunction is sensed during the first test drive, it is stored in the ECM memory as a 1st trip DTC (diagnostic trouble code) or 1st trip freeze frame data. At this point, the MIL will not illuminate. — 1st trip

If the same malfunction as that experienced during the first test drive is sensed during the second test drive, the MIL will illuminate. — 2nd trip

The "trip" in the "One or Two Trip Detection Logic" means a driving mode in which self-diagnosis is performed during vehicle operation.

## OBD-II DIAGNOSTIC TROUBLE CODE (DTC)

## How to Read DTC and 1st Trip DTC

DTC and 1st trip DTC can be read by the following methods.

( with **CONSULT** or ( **GST**) CONSULT or GST (Generic Scan Tool) Examples: P0705, P0720 etc.

These DTC are prescribed by SAE J2012.

(CONSULT also displays the malfunctioning component or system.)

- **1st trip DTC No. is the same as DTC No.**
- **Output of the diagnostic trouble code indicates that the indicated circuit has a malfunction. However, in case of the Mode II and GST, they do not indicate whether the malfunction is still occurring or occurred in the past and returned to normal.**

**CONSULT can identify them as shown below, therefore, CONSULT (if available) is recommended.**

- DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode for "ENGINE" with CONSULT. Time data indicates how many times the vehicle was driven after the last detection of a DTC.
- If the DTC is being detected currently, the time data will be "0".
- If a 1st trip DTC is stored in the ECM, the time data will be "1t".

## Freeze Frame Data and 1st Trip Freeze Frame Data

- The ECM has a memory function, which stores the driving condition such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed and vehicle speed at the moment the ECM detects a malfunction.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data, and the data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT or GST. The 1st trip freeze frame data can only be displayed on the CONSULT screen, not on the GST. For details, refer to [EC-83, "CONSULT Function"](#).

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority

# ON BOARD DIAGNOSTIC (OBD) SYSTEM

## < SYSTEM DESCRIPTION >

[CVT: RE0F10B]

for 1st trip freeze frame data, and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

| Priority | Items                      |                                                                                    |
|----------|----------------------------|------------------------------------------------------------------------------------|
| 1        | Freeze frame data          | Misfire — DTC: P0300 - P0304<br>Fuel Injection System Function — DTC: P0171, P0172 |
| 2        |                            | Except the above items (Includes CVT related items)                                |
| 3        | 1st trip freeze frame data |                                                                                    |

Both 1st trip freeze frame data and freeze frame data (along with the DTC) are cleared when the ECM memory is erased.

### How to Erase DTC

- The diagnostic trouble code can be erased by CONSULT, GST or ECM DIAGNOSTIC TEST MODE as described following.
- **If the battery cable is disconnected, the diagnostic trouble code will be lost within 24 hours.**
- **When you erase the DTC, using CONSULT or GST is easier and quicker than switching the mode selector on the ECM.**
- The following emission-related diagnostic information is cleared from the ECM memory when erasing DTC related to OBD-II. For details, refer to [EC-113, "DTC Index"](#).
- **Diagnostic trouble codes (DTC)**
- **1st trip diagnostic trouble codes (1st trip DTC)**
- **Freeze frame data**
- **1st trip freeze frame data**
- **System readiness test (SRT) codes**
- **Test values**

### How to Erase DTC (With CONSULT)

The emission related diagnostic information in the TCM and ECM can be erased by selecting "ALL Erase" in the "Description" of "FINAL CHECK" mode with CONSULT.

### How to Erase DTC (With GST)


1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
2. Select Mode 4 with GST (Generic Scan Tool).

## MALFUNCTION INDICATOR LAMP (MIL)

### Description

The MIL is located on the instrument panel.

1. The MIL will light up when the ignition switch is turned ON without the engine running. This is a bulb check.
  - If the MIL does not light up, refer to [EC-563, "Component Function Check"](#).
2. When the engine is started, the MIL should go off. If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.

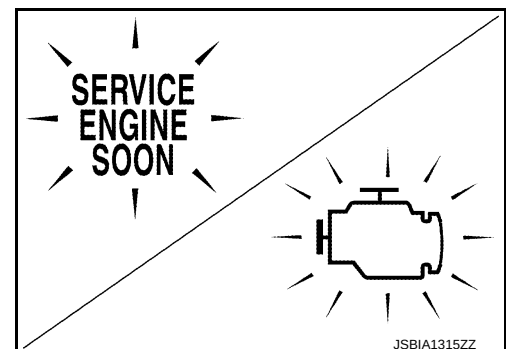

## DIAGNOSIS SYSTEM (TCM)

### CONSULT Function

INFOID:000000011463715

### APPLICATION ITEMS

| Conditions                    | Function                                                                          |
|-------------------------------|-----------------------------------------------------------------------------------|
| All DTC Reading               | Display all DTCs or diagnostic items that all ECUs are recording and judging.     |
| Work Support                  | This mode enables a technician to adjust some devices faster and more accurately. |
| Self Diagnostic Results       | Retrieve DTC from ECU and display diagnostic items.                               |
| Data Monitor                  | Monitor the input/output signal of the control unit in real time.                 |
| CAN Diagnosis                 | This mode displays a network diagnosis result about CAN by a diagram.             |
| CAN Diagnosis Support Monitor | It monitors the status of CAN communication.                                      |
| ECU Identification            | Display the ECU identification number (part number etc.) of the selected system.  |
| CALIB DATA                    | The calibration data status of TCM can be checked.                                |

### SELF DIAGNOSTIC RESULTS

Refer to [TM-201, "DTC Index"](#).

### DATA MONITOR

#### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

X: Application ▼: Optional selection

| Monitored item (Unit) | (Unit)        | Monitor item selection |                   | Remarks                                                                                                                                                       |
|-----------------------|---------------|------------------------|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       |               | MAIN SIGNALS           | ECU INPUT SIGNALS |                                                                                                                                                               |
| VSP SENSOR            | (km/h or mph) | ▼                      | X                 | Displays the vehicle speed calculated from the CVT output shaft speed.                                                                                        |
| ESTM VSP SIG          | (km/h or mph) | ▼                      | X                 | Displays the vehicle speed signal (ABS) received through CAN communication.                                                                                   |
| PRI SPEED SEN         | (rpm)         | ▼                      | X                 | Displays the primary pulley speed calculated from the pulse signal of the primary speed sensor.                                                               |
| ENG SPEED SIG         | (rpm)         | ▼                      | X                 | Displays the engine speed received through CAN communication.                                                                                                 |
| SEC HYDR SEN          | (V)           | ▼                      | X                 | Displays the signal voltage of the secondary pressure sensor.                                                                                                 |
| PRI HYDR SEN          | (V)           | ▼                      | X                 | <ul style="list-style-type: none"> <li>Displays the signal voltage of the primary pressure sensor.</li> <li>It is displayed although not equipped.</li> </ul> |
| ATF TEMP SEN          | (V)           | ▼                      | X                 | Displays the signal voltage of the CVT fluid temperature sensor.                                                                                              |
| VIGN SEN              | (V)           | ▼                      | X                 | Displays the battery voltage applied to TCM.                                                                                                                  |
| VEHICLE SPEED         | (km/h or mph) | X                      | ▼                 | Vehicle speed recognized by the TCM.                                                                                                                          |
| PRI SPEED             | (rpm)         | X                      | ▼                 | Displays the primary pulley speed recognized by TCM.                                                                                                          |
| SEC SPEED             | (rpm)         | ▼                      | ▼                 | Displays the secondary pulley speed recognized by TCM.                                                                                                        |
| ENG SPEED             | (rpm)         | X                      | ▼                 | Displays the engine speed recognized by TCM.                                                                                                                  |
| SLIP REV              | (rpm)         | X                      | ▼                 | Displays the speed difference between the input shaft speed of CVT and the engine speed.                                                                      |



# DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10B]

| Monitored item (Unit) | (Unit)   | Monitor item selection |                   | Remarks                                                                                                                                                                                                       |
|-----------------------|----------|------------------------|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       |          | MAIN SIGNALS           | ECU INPUT SIGNALS |                                                                                                                                                                                                               |
| GEAR RATIO            |          | X                      | ▼                 | Displays the pulley gear ratio calculated from primary pulley speed/secondary pulley speed.                                                                                                                   |
| G SPEED               | (G)      | ▼                      | ▼                 | Displays the acceleration and deceleration speed of the vehicle calculated from vehicle speed change.                                                                                                         |
| ACC PEDAL OPEN        | (0.0/8)  | X                      | X                 | Displays the estimated throttle position received through CAN communication.                                                                                                                                  |
| SEC PRESS             | (MPa)    | X                      | ▼                 | Displays the secondary pressure calculated from the signal voltage of the secondary pressure sensor.                                                                                                          |
| PRI PRESS             | (MPa)    | X                      | ▼                 | <ul style="list-style-type: none"> <li>Displays the primary pressure calculated from the signal voltage of the primary pressure sensor.</li> <li>It is displayed although not equipped.</li> </ul>            |
| ATFTEMP COUNT         |          | X                      | ▼                 | Means CVT fluid temperature. Actual oil temperature (° numeric value is converted. Refer to <a href="#">TM-192</a>                                                                                            |
| DSR REV               | (rpm)    | ▼                      | ▼                 | Displays the target primary pulley speed calculated from processing of gear shift control.                                                                                                                    |
| DGEAR RATIO           |          | ▼                      | ▼                 | Displays the target gear ratio.                                                                                                                                                                               |
| DSTM STEP             | (step)   | ▼                      | ▼                 | Displays the target number of steps of the step motor, calculated from processing of gear shift control.                                                                                                      |
| STM STEP              | (step)   | X                      | ▼                 | Displays the actual number of steps of the step motor, calculated from processing of gear shift control.                                                                                                      |
| LU PRS                | (MPa)    | ▼                      | ▼                 | Displays the target oil pressure of the torque converter clutch solenoid valve calculated from oil pressure processing of gear shift control.                                                                 |
| LINE PRS              | (MPa)    | ▼                      | ▼                 | Displays the target oil pressure of the line pressure solenoid valve calculated from oil pressure processing of gear shift control.                                                                           |
| TGT SEC PRESS         | (MPa)    | ▼                      | ▼                 | Displays the target oil pressure of the secondary pressure solenoid valve calculated from oil pressure processing of gear shift control.                                                                      |
| ISOLT1                | (A)      | X                      | ▼                 | Displays the command current from TCM to the torque converter clutch solenoid valve.                                                                                                                          |
| ISOLT2                | (A)      | X                      | ▼                 | Displays the command current from TCM to the line pressure solenoid valve.                                                                                                                                    |
| ISOLT3                | (A)      | X                      | ▼                 | Display the command current from TCM to the secondary pressure solenoid valve.                                                                                                                                |
| SOLMON1               | (A)      | X                      | X                 | Monitors the command current from TCM to the torque converter clutch solenoid valve and displays the monitored value.                                                                                         |
| SOLMON2               | (A)      | X                      | X                 | Monitors the command current from TCM to the line pressure solenoid valve and displays the monitored value.                                                                                                   |
| SOLMON3               | (A)      | X                      | X                 | Monitors the command current from TCM to the secondary pressure solenoid valve and displays the monitored value.                                                                                              |
| BRAKE SW              | (On/Off) | X                      | X                 | Displays the reception status of the stop lamp switch signal received through CAN communication.                                                                                                              |
| FULL SW               | (On/Off) | X                      | X                 | <ul style="list-style-type: none"> <li>Displays the reception status of the wide open throttle position signal received through CAN communication.</li> <li>It is displayed although not equipped.</li> </ul> |
| IDLE SW               | (On/Off) | X                      | X                 | Displays the reception status of the closed throttle position signal received through CAN communication.                                                                                                      |

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10B]

| Monitored item (Unit) | (Unit)   | Monitor item selection |                   | Remarks                                                                                                                                                                                                             |
|-----------------------|----------|------------------------|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       |          | MAIN SIGNALS           | ECU INPUT SIGNALS |                                                                                                                                                                                                                     |
| SPORT MODE SW         | (On/Off) | X                      | X                 | <ul style="list-style-type: none"> <li>Displays the reception status of the sport mode switch signal received through CAN communication.</li> <li>It is displayed although not equipped.</li> </ul>                 |
| STRDWNSW              | (On/Off) | ▼                      | X                 | Displays the operation status of the paddle shifter (down switch).                                                                                                                                                  |
| STRUPSW               | (On/Off) | ▼                      | X                 | Displays the operation status of the paddle shifter (up switch).                                                                                                                                                    |
| DOWNLVR               | (On/Off) | ▼                      | X                 | Displays the operation status of the selector lever (down switch).                                                                                                                                                  |
| UPLVR                 | (On/Off) | ▼                      | X                 | Displays the operation status of the selector lever (up switch).                                                                                                                                                    |
| NONMMODE              | (On/Off) | ▼                      | X                 | Displays if the selector lever position is not at the manual shift gate.                                                                                                                                            |
| MMODE                 | (On/Off) | ▼                      | X                 | Displays if the selector lever position is at the manual shift gate.                                                                                                                                                |
| INDLRNG               | (On/Off) | ▼                      | ▼                 | <ul style="list-style-type: none"> <li>Displays the transmission status of the shift position (L position) signal transmitted through CAN communication.</li> <li>It is displayed although not equipped.</li> </ul> |
| INDDRNG               | (On/Off) | ▼                      | ▼                 | Displays the transmission status of the shift position (D position) signal transmitted through CAN communication.                                                                                                   |
| INDNRNG               | (On/Off) | ▼                      | ▼                 | Displays the transmission status of the shift position (N position) signal transmitted through CAN communication.                                                                                                   |
| INDRRNG               | (On/Off) | ▼                      | ▼                 | Displays the transmission status of the shift position (R position) signal transmitted through CAN communication.                                                                                                   |
| INDPRNG               | (On/Off) | ▼                      | ▼                 | Displays the transmission status of the shift position (P position) signal transmitted through CAN communication.                                                                                                   |
| CVT LAMP              | (On/Off) | ▼                      | ▼                 | Displays the transmission status of the CVT indicator signal transmitted through CAN communication.                                                                                                                 |
| SPORT MODE IND        | (On/Off) | ▼                      | ▼                 | <ul style="list-style-type: none"> <li>Displays the transmission status of the S mode indicator signal transmitted through CAN communication.</li> <li>It is displayed although not equipped.</li> </ul>            |
| MMODE IND             | (On/Off) | ▼                      | ▼                 | Displays the transmission status of the manual mode signal transmitted through CAN communication.                                                                                                                   |
| SMCOIL D              | (On/Off) | ▼                      | ▼                 | Displays the energizing status of step motor coil "D".                                                                                                                                                              |
| SMCOIL C              | (On/Off) | ▼                      | ▼                 | Displays the energizing status of step motor coil "C".                                                                                                                                                              |
| SMCOIL B              | (On/Off) | ▼                      | ▼                 | Displays the energizing status of step motor coil "B".                                                                                                                                                              |
| SMCOIL A              | (On/Off) | ▼                      | ▼                 | Displays the energizing status of step motor coil "A".                                                                                                                                                              |
| LUSEL SOL OUT         | (On/Off) | ▼                      | ▼                 | Displays the command value from TCM to the lock-up select solenoid valve.                                                                                                                                           |
| LUSEL SOL MON         | (On/Off) | ▼                      | ▼                 | Monitors the command value from TCM to the lock-up select solenoid valve and displays the monitored value.                                                                                                          |
| VDC ON                | (On/Off) | ▼                      | X                 | Displays the reception status of the VDC operation signal received through CAN communication.                                                                                                                       |
| TCS ON                | (On/Off) | ▼                      | X                 | Displays the reception status of the TCS operation signal received through CAN communication.                                                                                                                       |

# DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10B]

| Monitored item (Unit) | (Unit)   | Monitor item selection |                   | Remarks                                                                                                                                                                                                                                                                            |
|-----------------------|----------|------------------------|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                       |          | MAIN SIGNALS           | ECU INPUT SIGNALS |                                                                                                                                                                                                                                                                                    |
| ABS ON                | (On/Off) | ▼                      | X                 | Displays the reception status of the ABS operation signal received through CAN communication.                                                                                                                                                                                      |
| ACC ON                | (On/Off) | ▼                      | X                 | It is displayed although not equipped.                                                                                                                                                                                                                                             |
| RANGE                 |          | X                      | ▼                 | Displays the gear position recognized by TCM.                                                                                                                                                                                                                                      |
| M GEAR POS            |          | X                      | ▼                 | Display the target gear of manual mode                                                                                                                                                                                                                                             |
| D POSITION SW         | (On/Off) | ▼                      | X                 | Displays the operation status of the transmission range switch (D position).                                                                                                                                                                                                       |
| N POSITION SW         | (On/Off) | ▼                      | X                 | Displays the operation status of the transmission range switch (N position).                                                                                                                                                                                                       |
| L POSITION SW         | (On/Off) | ▼                      | X                 | Displays the operation status of the transmission range switch (L position).                                                                                                                                                                                                       |
| P POSITION SW         | (On/Off) | ▼                      | X                 | Displays the operation status of the transmission range switch (P position).                                                                                                                                                                                                       |
| R POSITION SW         | (On/Off) | ▼                      | X                 | Displays the operation status of the transmission range switch (R position).                                                                                                                                                                                                       |
| DRIVE MODE STATS      | (On/Off) | ▼                      | ▼                 | <ul style="list-style-type: none"> <li>Displays the drive mode status recognized by TCM.</li> <li>Only vehicle with Integrated Control System are displayed.</li> </ul>                                                                                                            |
| SNOW MODE             | (On/Off) | ▼                      | ▼                 | <ul style="list-style-type: none"> <li>Display the drive mode (SNOW switch status) of Integrated Control System received through CAN communication.</li> <li>Only vehicle with Integrated Control System are displayed.</li> <li>It is displayed although not equipped.</li> </ul> |
| ECO MODE              | (On/Off) | ▼                      | ▼                 | <ul style="list-style-type: none"> <li>Display the driving mode (ECO switch status) of Integrated Control System received through CAN communication.</li> <li>Only vehicle with Integrated Control System are displayed.</li> </ul>                                                |
| NORMAL MODE           | (On/Off) | ▼                      | ▼                 | <ul style="list-style-type: none"> <li>Display the driving mode (AUTO switch status) of Integrated Control System received through CAN communication.</li> <li>Only vehicle with Integrated Control System are displayed.</li> </ul>                                               |
| SPORT MODE            | (On/Off) | ▼                      | ▼                 | <ul style="list-style-type: none"> <li>Display the driving mode (SPORT switch status) of Integrated Control System received through CAN communication.</li> <li>Only vehicle with Integrated Control System are displayed.</li> </ul>                                              |
| CVT-A                 | (On/Off) | —                      | —                 | This monitor item does not use.                                                                                                                                                                                                                                                    |
| CVT-B                 | (On/Off) | —                      | —                 | This monitor item does not use.                                                                                                                                                                                                                                                    |

## WORK SUPPORT

| Item name               | Description                                       |
|-------------------------|---------------------------------------------------|
| ENGINE BRAKE ADJ.       | The engine brake level setting can be canceled.   |
| CONFORM CVTF DETERIORTN | The CVT fluid deterioration level can be checked. |

Engine Brake Adjustment

**“ENGINE BRAKE LEVEL”**

# DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10B]

**0:** Initial set value (Engine brake level control is activated)

**OFF:** Engine brake level control is deactivated.

## CAUTION:

Mode of “+1” “0” “-1” “-2” “OFF” can be selected by pressing the “UP” “DOWN” on CONSULT screen. However, do not select mode other than “0” and “OFF”. If the “+1” or “-1” or “-2” is selected, that might cause the irregular driveability.

Check CVT Fluid Deterioration Date

“CVTF DETERIORATION DATE”

210000 or more:

It is necessary to change CVT fluid.

Less than 210000:

It is not necessary to change CVT fluid.

## CAUTION:

Touch “CLEAR” after changing CVT fluid, and then erase “CVTF DETERIORATION DATE”.

## ATFTEMP COUNT Conversion Table

INFOID:0000000011463716

| ATFTEMP COUNT | Temperature °C (°F) | ATFTEMP COUNT | Temperature °C (°F) |
|---------------|---------------------|---------------|---------------------|
| 4             | -30 (-22)           | 177           | 90 (194)            |
| 8             | -20 (-4)            | 183           | 95 (203)            |
| 13            | -10 (14)            | 190           | 100 (212)           |
| 17            | -5 (23)             | 196           | 105 (221)           |
| 21            | 0 (32)              | 201           | 110 (230)           |
| 27            | 5 (41)              | 206           | 115 (239)           |
| 32            | 10 (50)             | 210           | 120 (248)           |
| 39            | 15 (59)             | 214           | 125 (257)           |
| 47            | 20 (68)             | 218           | 130 (266)           |
| 55            | 25 (77)             | 221           | 135 (275)           |
| 64            | 30 (86)             | 224           | 140 (284)           |
| 73            | 35 (95)             | 227           | 145 (293)           |
| 83            | 40 (104)            | 229           | 150 (302)           |
| 93            | 45 (113)            | 231           | 155 (311)           |
| 104           | 50 (122)            | 233           | 160 (320)           |
| 114           | 55 (131)            | 235           | 165 (329)           |
| 124           | 60 (140)            | 236           | 170 (338)           |
| 134           | 65 (149)            | 238           | 175 (347)           |
| 143           | 70 (158)            | 239           | 180 (356)           |
| 152           | 75 (167)            | 241           | 190 (374)           |
| 161           | 80 (176)            | 243           | 200 (392)           |
| 169           | 85 (185)            | —             | —                   |

## Diagnostic Tool Function

INFOID:0000000011463717

 OBD-II SELF-DIAGNOSTIC PROCEDURE (WITH GST)

Refer to [EC-72, "GST \(Generic Scan Tool\)"](#).

# ECU DIAGNOSIS INFORMATION

## TCM

### Reference Value

INFOID:0000000011463718

### VALUES ON THE DIAGNOSIS TOOL

#### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Item name      | Condition                                                                                                                     | Display value (Approx.)                                         |
|----------------|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------|
| VSP SENSOR     | During driving                                                                                                                | Approximately matches the speedometer reading.                  |
| ESTM VSP SIG   | During driving                                                                                                                | Approximately matches the speedometer reading.                  |
| PRI SPEED SEN  | During driving (lock-up ON)                                                                                                   | Approximately matches the engine speed.                         |
| ENG SPEED SIG  | Engine running                                                                                                                | Closely matches the tachometer reading.                         |
| SEC HYDR SEN   | <ul style="list-style-type: none"> <li>After engine warm up</li> <li>Selector lever: "N" position</li> <li>At idle</li> </ul> | 0.8 V                                                           |
| ATF TEMP SEN   | CVT fluid: Approx. 20°C (68°F)                                                                                                | 2.01 – 2.05 V                                                   |
|                | CVT fluid: Approx. 50°C (122°F)                                                                                               | 1.45 – 1.50 V                                                   |
|                | CVT fluid: Approx. 80°C (176°F)                                                                                               | 0.90 – 0.94 V                                                   |
| VIGN SEN       | Ignition switch: ON                                                                                                           | 10 – 16 V                                                       |
| VEHICLE SPEED  | During driving                                                                                                                | Approximately matches the speedometer reading.                  |
| PRI SPEED      | During driving (lock-up ON)                                                                                                   | Approximately matches the engine speed.                         |
| SEC SPEED      | During driving                                                                                                                | 48 X Approximately matches the speedometer reading.             |
| ENG SPEED      | Engine running                                                                                                                | Closely matches the tachometer reading.                         |
| SLIP REV       | During driving                                                                                                                | engine speed – primary speed                                    |
| GEAR RATIO     | During driving                                                                                                                | 2.349 – 0.394                                                   |
| G SPEED        | Vehicle stopped                                                                                                               | 0.00 G                                                          |
|                | During acceleration                                                                                                           | The value changes to the positive side along with acceleration. |
|                | During deceleration                                                                                                           | The value changes to the positive side along with deceleration. |
| ACC PEDAL OPEN | Released accelerator pedal - Fully depressed accelerator pedal                                                                | 0.0/8 – 8.0/8                                                   |
| SEC PRESS      | <ul style="list-style-type: none"> <li>After engine warm up</li> <li>Selector lever: "N" position</li> <li>At idle</li> </ul> | 1.6 MPa                                                         |
| ATFTEMP COUNT* | CVT fluid: Approx. 20°C (68°F)                                                                                                | 47                                                              |
|                | CVT fluid: Approx. 50°C (122°F)                                                                                               | 104                                                             |
|                | CVT fluid: Approx. 80°C (176°F)                                                                                               | 161                                                             |
| DSR REV        | During driving                                                                                                                | The value changes to the positive side along with deceleration. |
| DGEAR RATIO    | During driving                                                                                                                | The value changes to the positive side along with deceleration. |
| DSTM STEP      | During driving                                                                                                                | 0 step – 182 step                                               |
| STM STEP       | During driving                                                                                                                | 0 step – 182 step                                               |

# TCM

## < ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10B]

| Item name     | Condition                                                                                                                                                                        | Display value (Approx.) |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| LU PRS        | <ul style="list-style-type: none"> <li>Engine started</li> <li>Vehicle is stopped.</li> </ul>                                                                                    | -0.400 MPa              |
|               | <ul style="list-style-type: none"> <li>Selector lever: "D" position</li> <li>Accelerator pedal position: 1/8 or less</li> <li>Vehicle speed: 20 km/h (12 MPH) or more</li> </ul> | 0.400 MPa               |
| LINE PRS      | <ul style="list-style-type: none"> <li>After engine warm up</li> <li>Selector lever: "N" position</li> <li>At idle</li> </ul>                                                    | 0.750 MPa               |
|               | <ul style="list-style-type: none"> <li>After engine warm up</li> <li>Selector lever: "N" position</li> <li>Depress the accelerator pedal fully</li> </ul>                        | 4.930 – 5.430 MPa       |
| TGT SEC PRESS | <ul style="list-style-type: none"> <li>After engine warm up</li> <li>Selector lever: "N" position</li> <li>At idle</li> </ul>                                                    | 0.700 MPa               |
| ISOLT1        | —                                                                                                                                                                                | —                       |
| ISOLT2        | —                                                                                                                                                                                | —                       |
| ISOLT3        | —                                                                                                                                                                                | —                       |
| SOLMON1       | —                                                                                                                                                                                | —                       |
| SOLMON2       | —                                                                                                                                                                                | —                       |
| SOLMON3       | —                                                                                                                                                                                | —                       |
| BRAKE SW      | Depressed brake pedal                                                                                                                                                            | On                      |
|               | Released brake pedal                                                                                                                                                             | Off                     |
| FULL SW       | Always                                                                                                                                                                           | Off                     |
| IDLE SW       | Released accelerator pedal                                                                                                                                                       | On                      |
|               | Fully depressed accelerator pedal                                                                                                                                                | Off                     |
| SPORT MODE SW | Always                                                                                                                                                                           | Off                     |
| STRDWNSW      | Paddle shifter (Down) is pulled                                                                                                                                                  | On                      |
|               | Other than the above                                                                                                                                                             | Off                     |
| STRUPSW       | Paddle shifter (Up) is pulled                                                                                                                                                    | On                      |
|               | Other than the above                                                                                                                                                             | Off                     |
| DOWNLVR       | Selector lever: - side                                                                                                                                                           | On                      |
|               | Other than the above                                                                                                                                                             | Off                     |
| UPLVR         | Selector lever: + side                                                                                                                                                           | On                      |
|               | Other than the above                                                                                                                                                             | Off                     |
| NONMMODE      | Manual shift gate position (neutral, +side, -side)                                                                                                                               | Off                     |
|               | Other than the above                                                                                                                                                             | On                      |
| MMODE         | Manual shift gate position (neutral)                                                                                                                                             | On                      |
|               | Other than the above                                                                                                                                                             | Off                     |
| INDLRNG       | Always                                                                                                                                                                           | Off                     |
| INDDRNG       | Selector lever in "D" position                                                                                                                                                   | On                      |
|               | When setting selector lever to other positions                                                                                                                                   | Off                     |
| INDNRNG       | Selector lever in "N" position                                                                                                                                                   | On                      |
|               | When setting selector lever to other positions                                                                                                                                   | Off                     |
| INDRRNG       | Selector lever in "R" position                                                                                                                                                   | On                      |
|               | When setting selector lever to other positions                                                                                                                                   | Off                     |
| INDPRNG       | Selector lever in "P" position                                                                                                                                                   | On                      |
|               | When setting selector lever to other positions                                                                                                                                   | Off                     |

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10B]

| Item name        | Condition                                                                 | Display value (Approx.) |
|------------------|---------------------------------------------------------------------------|-------------------------|
| CVT LAMP         | Approx. 2 seconds after ignition switch ON                                | On                      |
|                  | Other conditions                                                          | Off                     |
| SPORT MODE IND   | Always                                                                    | Off                     |
| MMODE IND        | In manual mode                                                            | On                      |
|                  | Other conditions                                                          | Off                     |
| SMCOIL D         | During driving                                                            | Changes On ⇄ Off        |
| SMCOIL C         | During driving                                                            | Changes On ⇄ Off        |
| SMCOIL B         | During driving                                                            | Changes On ⇄ Off        |
| SMCOIL A         | During driving                                                            | Changes On ⇄ Off        |
| LUSEL SOL OUT    | Selector lever: "P", "N" positions                                        | On                      |
|                  | Wait at least for 5 seconds with the selector lever in "R", "D" positions | Off                     |
| LUSEL SOL MON    | Selector lever: "P", "N" positions                                        | On                      |
|                  | Wait at least for 5 seconds with the selector lever in "R", "D" positions | Off                     |
| VDC ON           | ESP is activated                                                          | On                      |
|                  | Other conditions                                                          | Off                     |
| TCS ON           | TCS is activated                                                          | On                      |
|                  | Other conditions                                                          | Off                     |
| ABS ON           | ABS is activated                                                          | On                      |
|                  | Other conditions                                                          | Off                     |
| ACC ON           | Always                                                                    | Off                     |
| RANGE            | Selector lever in "N" or "P" position                                     | N·P                     |
|                  | Selector lever in "R" position                                            | R                       |
|                  | Selector lever in "D" position                                            | D                       |
| M GEAR POS       | Gear position: M1                                                         | 1                       |
|                  | Gear position: M2                                                         | 2                       |
|                  | Gear position: M3                                                         | 3                       |
|                  | Gear position: M4                                                         | 4                       |
|                  | Gear position: M5                                                         | 5                       |
|                  | Gear position: M6                                                         | 6                       |
|                  | Gear position: M7                                                         | 7                       |
|                  | Gear position: M8                                                         | 8                       |
| D POSITION SW    | Selector lever in "D" position                                            | On                      |
|                  | Other than the above position                                             | Off                     |
| N POSITION SW    | Selector lever in "N" position                                            | On                      |
|                  | Other than the above position                                             | Off                     |
| L POSITION SW    | Always                                                                    | Off                     |
| P POSITION SW    | Selector lever in "P" position                                            | On                      |
|                  | Other than the above position                                             | Off                     |
| R POSITION SW    | Selector lever in "R" position                                            | On                      |
|                  | Other than the above position                                             | Off                     |
| DRIVE MODE STATS | Integrated Control System: NORMAL mode                                    | NORMAL                  |
|                  | Integrated Control System: ECO mode                                       | ECO                     |
|                  | Integrated Control System: SPORT mode                                     | SPORT                   |

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# TCM


## < ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10B]

| Item name   | Condition                              | Display value (Approx.) |
|-------------|----------------------------------------|-------------------------|
| SPORT MODE  | Integrated Control System: SPORT mode  | On                      |
|             | Other conditions                       | Off                     |
| NORMAL MODE | Integrated Control System: NORMAL mode | On                      |
|             | Other conditions                       | Off                     |
| ECO MODE    | Integrated Control System: ECO mode    | On                      |
|             | Other conditions                       | Off                     |
| SNOW MODE   | Always                                 | Off                     |
| CVT-A       | —                                      | —                       |
| CVT-B       | —                                      | —                       |

\*: Means CVT fluid temperature. Convert numerical values for actual fluid temperature °C (°F). Refer to [TM-192, "ATFTEMP COUNT Conversion Table"](#).

## TERMINAL LAYOUT

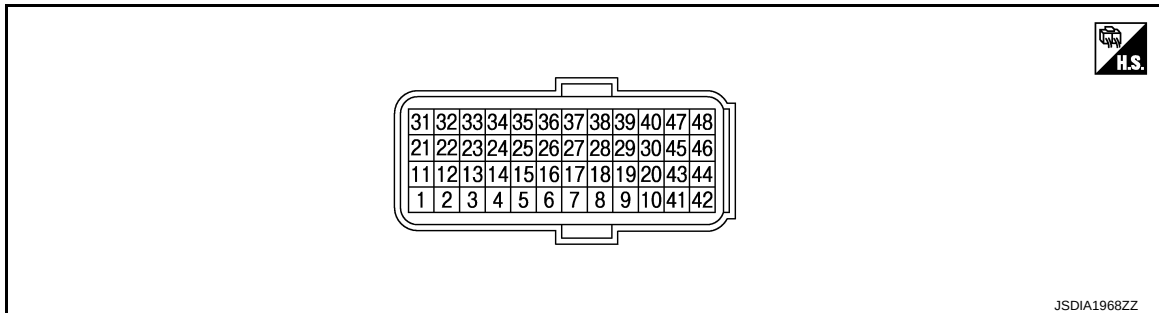

## PHYSICAL VALUES



| Terminal No.<br>(wire color) |        | Description           |              | Condition             |                                    | Value (Approx.) |
|------------------------------|--------|-----------------------|--------------|-----------------------|------------------------------------|-----------------|
| +                            | —      | Signal name           | Input/Output |                       |                                    |                 |
| 1<br>(G)                     | Ground | R RANGE SW            | Input        | Ignition<br>switch ON | Selector lever in “R”<br>position  | 10 – 16 V       |
|                              |        |                       |              |                       | Other than the above<br>position   | 0 V             |
| 2<br>(Y)                     | Ground | N RANGE SW            | Input        |                       | Selector lever in “N”<br>position  | 10 – 16 V       |
|                              |        |                       |              |                       | Other than the above<br>position   | 0 V             |
| 3<br>(W)                     | Ground | D RANGE SW            | Input        |                       | Selector lever in “D”<br>positions | 10 – 16 V       |
|                              |        |                       |              |                       | Other than the above<br>position   | 0 V             |
| 4*1<br>(V)                   | —      | —                     | —            | —                     | —                                  |                 |
| 5<br>(B)                     | Ground | Ground                | Output       | Always                | 0 V                                |                 |
| 8<br>(BR)                    | —      | CLOCK (SEL2)          | —            | —                     | —                                  |                 |
| 9<br>(G)                     | —      | CHIP SELECT<br>(SEL1) | —            | —                     | —                                  |                 |
| 10<br>(W)                    | —      | DATA I/O (SEL3)       | —            | —                     | —                                  |                 |



# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10B]
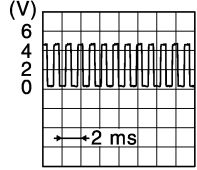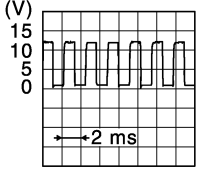
| Terminal No.<br>(wire color) |        | Description                   |              | Condition                                                                                                                                                                                                                                          |                                                                              | Value (Approx.)                                                                                                |
|------------------------------|--------|-------------------------------|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| +                            | –      | Signal name                   | Input/Output |                                                                                                                                                                                                                                                    |                                                                              |                                                                                                                |
| 11<br>(L)                    | Ground | P RANGE SW                    | Input        | Ignition switch ON                                                                                                                                                                                                                                 | Selector lever in "P" position                                               | 10 – 16 V                                                                                                      |
|                              |        |                               |              |                                                                                                                                                                                                                                                    | Other than the above position                                                | 0 V                                                                                                            |
| 13<br>(SB)                   | Ground | CVT fluid temperature sensor  | Input        | Ignition switch ON                                                                                                                                                                                                                                 | When CVT fluid temperature is 20°C (68°F)                                    | 2.01 – 2.05 V                                                                                                  |
|                              |        |                               |              |                                                                                                                                                                                                                                                    | When CVT fluid temperature is 50°C (122°F)                                   | 1.45 – 1.50 V                                                                                                  |
|                              |        |                               |              |                                                                                                                                                                                                                                                    | When CVT fluid temperature is 80°C (176°F)                                   | 0.90 – 0.94 V                                                                                                  |
| 15<br>(P)                    | Ground | Secondary pressure sensor     | Input        | <ul style="list-style-type: none"> <li>Selector lever: "N" position</li> <li>Idle speed</li> </ul>                                                                                                                                                 |                                                                              | 0.8 V                                                                                                          |
| 25<br>(Y)                    | Ground | Sensor ground                 | Input        | Always                                                                                                                                                                                                                                             |                                                                              | 0 V                                                                                                            |
| 26<br>(LG)                   | Ground | Sensor power supply           | Output       | Ignition switch ON                                                                                                                                                                                                                                 |                                                                              | 5.0 V                                                                                                          |
|                              |        |                               |              | Ignition switch OFF                                                                                                                                                                                                                                |                                                                              | 0 V                                                                                                            |
| 27<br>(GR)                   | Ground | Step motor D                  | Output       | Within 2 seconds after ignition switch ON, the time measurement by using the pulse width measurement function (Hi level) of CONSULT. <sup>*2</sup><br><b>CAUTION:</b><br>Connect the diagnosis data link cable to the vehicle diagnosis connector. |                                                                              | 10.0 msec                                                                                                      |
| 28<br>(V)                    | Ground | Step motor C                  | Output       |                                                                                                                                                                                                                                                    |                                                                              | 30.0 msec                                                                                                      |
| 29<br>(BG)                   | Ground | Step motor B                  | Output       |                                                                                                                                                                                                                                                    |                                                                              | 10.0 msec                                                                                                      |
| 30<br>(R)                    | Ground | Step motor A                  | Output       |                                                                                                                                                                                                                                                    |                                                                              | 30.0 msec                                                                                                      |
| 31<br>(P)                    | —      | CAN-L                         | Input/Output | —                                                                                                                                                                                                                                                  |                                                                              | —                                                                                                              |
| 32<br>(L)                    | —      | CAN-H                         | Input/Output | —                                                                                                                                                                                                                                                  |                                                                              | —                                                                                                              |
| 33<br>(BG)                   | Ground | Primary speed sensor          | Input        | <ul style="list-style-type: none"> <li>Selector lever: "M<sup>1</sup>" position</li> <li>While driving at 20 km/h (12 MPH)</li> </ul>                                                                                                              |                                                                              | 720 Hz<br><br>JPDIA0819ZZ |
| 34<br>(R)                    | Ground | Secondary speed sensor        | Input        | <ul style="list-style-type: none"> <li>Selector lever: "M<sup>1</sup>" position</li> <li>While driving at 20 km/h (12 MPH)</li> </ul>                                                                                                              |                                                                              | 480 Hz<br><br>JPDIA0901ZZ |
| 37<br>(L)                    | Ground | Lock-up select solenoid valve | Output       | Ignition switch ON                                                                                                                                                                                                                                 | Selector lever in "P" or "N" positions                                       | 10 – 16 V                                                                                                      |
|                              |        |                               |              |                                                                                                                                                                                                                                                    | Wait at least for 5 seconds with the selector lever in "R" or "D" positions. | 0 V                                                                                                            |

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10B]

| Terminal No.<br>(wire color) |        | Description                            |              | Condition                            |                                               | Value (Approx.) |
|------------------------------|--------|----------------------------------------|--------------|--------------------------------------|-----------------------------------------------|-----------------|
| +                            | –      | Signal name                            | Input/Output |                                      |                                               |                 |
| 38<br>(G)                    | Ground | Torque converter clutch solenoid valve | Output       | When vehicle cruises in “D” position | When CVT performs lock-up                     | 6.0 V           |
|                              |        |                                        |              |                                      | When CVT does not perform lock-up             | 1.5 V           |
| 39<br>(W)                    | Ground | Secondary pressure solenoid valve      | Output       | “P” or “N” position idle             | Release your foot from the accelerator pedal. | 5.0 – 7.0 V     |
|                              |        |                                        |              |                                      | Press the accelerator pedal all the way down. | 3.0 – 4.0 V     |
| 40<br>(Y)                    | Ground | Line pressure solenoid valve           | Output       |                                      | Release your foot from the accelerator pedal. | 5.0 – 7.0 V     |
|                              |        |                                        |              |                                      | Press the accelerator pedal all the way down. | 1.0 V           |
| 42<br>(B)                    | Ground | Ground                                 | Output       | Always                               |                                               | 0 V             |
| 46<br>(LG)                   | Ground | Ignition power supply                  | Input        | Ignition switch ON                   | —                                             | 10 – 16 V       |
|                              |        |                                        |              | Ignition switch OFF                  | —                                             | 0 V             |
| 47<br>(BG)                   | Ground | Battery power supply (memory back-up)  | Input        | Always                               |                                               | 10 – 16 V       |
| 48<br>(Y)                    | Ground | Ignition power supply                  | Input        | Ignition switch ON                   | —                                             | 10 – 16 V       |
|                              |        |                                        |              | Ignition switch OFF                  | —                                             | 0 V             |

\*1: This harness is not used.

\*2: A circuit tester cannot be used to test this item.

## Fail-Safe

INFOID:0000000011463719

The TCM has an electrical fail-safe mode. In this mode TCM is operator even if there is an error in a main electronic control input/output signal circuit.

## DESCRIPTION

When a malfunction is detected in each sensor, switch, solenoid or others, this function provides control to minimize reduction of drivability so that durability of transmission assembly can be acquired.

| DTC   | Condition | Vehicle behavior                                                                                                                                                                                                                                                                            |
|-------|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0703 | —         | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                                                                                                               |
| P0705 | —         | <ul style="list-style-type: none"> <li>Position indicator on combination meter is not displayed</li> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration at high load state is slow</li> <li>Manual mode is not activated</li> <li>Lock-up is not performed</li> </ul> |

| DTC   | Condition                                                              | Vehicle behavior                                                                                                                                                                                                                             |
|-------|------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0710 | Engine coolant temperature when engine starts is 10°C (50°F) or more   | Start is slow                                                                                                                                                                                                                                |
|       | Engine coolant temperature when engine starts is 10°C (50°F) or less   | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Vehicle speed is not increased</li> </ul>                                                                                                        |
|       | Engine coolant temperature when engine starts is -35°C (-31°F) or less | Vehicle speed is not increased                                                                                                                                                                                                               |
| P0715 | —                                                                      | <ul style="list-style-type: none"> <li>Acceleration is slow</li> <li>Re-start is slow after vehicle is stop by strong deceleration</li> <li>Manual mode is not activated</li> <li>Lock-up is not performed</li> </ul>                        |
| P0720 | —                                                                      | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Re-start is slow after vehicle is stop by strong deceleration</li> <li>Manual mode is not activated</li> <li>Lock-up is not performed</li> </ul> |
| P0725 | —                                                                      | Lock-up is not performed                                                                                                                                                                                                                     |
| P0740 | —                                                                      | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Lock-up is not performed</li> </ul>                                                                                                                                  |
| P0744 | —                                                                      | Lock-up is not performed                                                                                                                                                                                                                     |
| P0746 | A malfunction is detected                                              | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                                                                                              |
|       | Function is excessively reduced after a malfunction is detected        | <ul style="list-style-type: none"> <li>Start is difficult</li> <li>Drive is difficult</li> <li>Lock-up is not performed</li> </ul>                                                                                                           |
| P0778 | —                                                                      | Vehicle speed is not increased                                                                                                                                                                                                               |
| P0826 | —                                                                      | Manual mode is not activated                                                                                                                                                                                                                 |
| P0840 | —                                                                      | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                                                                |
| P0841 | —                                                                      | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                                                                |
| P0845 | —                                                                      | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                                                                |
| P0868 | —                                                                      | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                                                                |
| P1701 | —                                                                      | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                                                                |
| P1705 | —                                                                      | <ul style="list-style-type: none"> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                                                                                                                     |
| P1709 | —                                                                      | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Shift position indicator (P, N) is not displayed, or is displayed with delay.</li> </ul>                                                         |
| P1722 | —                                                                      | Lock-up is not activated in coast state                                                                                                                                                                                                      |

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

| DTC   | Condition                                                       | Vehicle behavior                                                                                                                                                                                                                             |
|-------|-----------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P1723 | A malfunction is detected in primary pulley speed sensor side   | <ul style="list-style-type: none"> <li>Acceleration is slow</li> <li>Re-start is slow after vehicle is stop by strong deceleration</li> <li>Manual mode is not activated</li> <li>Lock-up is not performed</li> </ul>                        |
|       | A malfunction is detected in secondary pulley speed sensor      | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Re-start is slow after vehicle is stop by strong deceleration</li> <li>Manual mode is not activated</li> <li>Lock-up is not performed</li> </ul> |
| P1726 | —                                                               | Acceleration is slow                                                                                                                                                                                                                         |
| P1740 | —                                                               | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Lock-up is not performed</li> </ul>                                                                                                                                  |
| P1777 | A malfunction is detected in low side (when vehicle is stopped) | <ul style="list-style-type: none"> <li>Vehicle speed is not increased</li> <li>Lock-up is not performed</li> </ul>                                                                                                                           |
|       | A malfunction is detected in high side (during driving)         | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                                                                                              |
| U0100 | —                                                               | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Vehicle speed is not increased</li> </ul>                                                                                                        |
| U1000 | —                                                               | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Vehicle speed is not increased</li> </ul>                                                                                                        |
| U1010 | —                                                               | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Vehicle speed is not increased</li> </ul>                                                                                                        |

## DTC Inspection Priority Chart

INFOID:0000000011463720

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

| Priority | Detected items (DTC)           | Reference                           |
|----------|--------------------------------|-------------------------------------|
| 1        | P1709 INCOMPLETED DATA WRITING | <a href="#">TM-282, "DTC Logic"</a> |
|          | U0100 LOST COMM (ECM A)        | <a href="#">TM-232, "DTC Logic"</a> |
|          | U1000 CAN COMM CIRCUIT         | <a href="#">TM-233, "DTC Logic"</a> |
|          | U1010 CONTROL UNIT (CAN)       | <a href="#">TM-234, "DTC Logic"</a> |
| 2        | P0725 ENGINE SPEED             | <a href="#">TM-251, "DTC Logic"</a> |
|          | P1705 TP SENSOR                | <a href="#">TM-281, "DTC Logic"</a> |
|          | P1726 THROTTLE CONTROL SIG     | <a href="#">TM-287, "DTC Logic"</a> |

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10B]

| Priority | Detected items (DTC)       | Reference                           |
|----------|----------------------------|-------------------------------------|
| 3        | P0703 BRAKE SWITCH B       | <a href="#">TM-235, "DTC Logic"</a> |
|          | P0705 T/M RANGE SENSOR A   | <a href="#">TM-238, "DTC Logic"</a> |
|          | P0710 FLUID TEMP SENSOR A  | <a href="#">TM-241, "DTC Logic"</a> |
|          | P0715 INPUT SPEED SENSOR A | <a href="#">TM-245, "DTC Logic"</a> |
|          | P0720 OUTPUT SPEED SENSOR  | <a href="#">TM-248, "DTC Logic"</a> |
|          | P0740 TORQUE CONVERTER     | <a href="#">TM-252, "DTC Logic"</a> |
|          | P0745 PC SOLENOID A        | <a href="#">TM-257, "DTC Logic"</a> |
|          | P0778 PC SOLENOID B        | <a href="#">TM-263, "DTC Logic"</a> |
|          | P0826 UP/DOWN SHIFT SWITCH | <a href="#">TM-265, "DTC Logic"</a> |
|          | P0840 FLUID PRESS SEN/SW A | <a href="#">TM-271, "DTC Logic"</a> |
|          | P1701 TCM                  | <a href="#">TM-278, "DTC Logic"</a> |
|          | P1722 VEHICLE SPEED        | <a href="#">TM-284, "DTC Logic"</a> |
|          | P1740 SLCT SOLENOID        | <a href="#">TM-288, "DTC Logic"</a> |
|          | P1777 STEP MOTOR           | <a href="#">TM-290, "DTC Logic"</a> |
|          | P0744 TORQUE CONVERTER     | <a href="#">TM-255, "DTC Logic"</a> |
| 4        | P0746 PC SOLENOID A        | <a href="#">TM-259, "DTC Logic"</a> |
|          | P0776 PC SOLENOID B        | <a href="#">TM-261, "DTC Logic"</a> |
|          | P0841 FLUID PRESS SEN/SW A | <a href="#">TM-274, "DTC Logic"</a> |
|          | P0868 FLUID PRESS LOW      | <a href="#">TM-276, "DTC Logic"</a> |
|          | P1723 SPEED SENSOR         | <a href="#">TM-285, "DTC Logic"</a> |
|          | P1778 STEP MOTOR           | <a href="#">TM-293, "DTC Logic"</a> |
|          |                            |                                     |

## DTC Index

INFOID:0000000011463721

### NOTE:

If multiple malfunction codes are detected at the same time, check each code according to the "DTC check priority list". [TM-200, "DTC Inspection Priority Chart"](#).

| DTC                           |                             | Items<br>(CONSULT screen terms) | Reference              |
|-------------------------------|-----------------------------|---------------------------------|------------------------|
| "ENGINE" with CONSULT or GST* | "TRANSMISSION" with CONSULT |                                 |                        |
| —                             | P0703                       | BRAKE SWITCH B                  | <a href="#">TM-235</a> |
| P0705                         | P0705                       | T/M RANGE SENSOR A              | <a href="#">TM-238</a> |
| P0710                         | P0710                       | FLUID TEMP SENSOR A             | <a href="#">TM-241</a> |
| P0715                         | P0715                       | INPUT SPEED SENSOR A            | <a href="#">TM-245</a> |
| P0720                         | P0720                       | OUTPUT SPEED SENSOR             | <a href="#">TM-248</a> |
| —                             | P0725                       | ENGINE SPEED                    | <a href="#">TM-251</a> |
| P0740                         | P0740                       | TORQUE CONVERTER                | <a href="#">TM-252</a> |
| P0744                         | P0744                       | TORQUE CONVERTER                | <a href="#">TM-255</a> |
| P0745                         | P0745                       | PC SOLENOID A                   | <a href="#">TM-257</a> |
| P0746                         | P0746                       | PC SOLENOID A                   | <a href="#">TM-259</a> |
| P0776                         | P0776                       | PC SOLENOID B                   | <a href="#">TM-261</a> |
| P0778                         | P0778                       | PC SOLENOID B                   | <a href="#">TM-263</a> |
| —                             | P0826                       | UP/DOWN SHIFT SWITCH            | <a href="#">TM-265</a> |
| P0840                         | P0840                       | FLUID PRESS SEN/SW A            | <a href="#">TM-271</a> |
| —                             | P0841                       | FLUID PRESS SEN/SW A            | <a href="#">TM-274</a> |

# TCM

< ECU DIAGNOSIS INFORMATION >


[CVT: RE0F10B]

| DTC                              |                                | Items<br>(CONSULT screen terms) | Reference              |
|----------------------------------|--------------------------------|---------------------------------|------------------------|
| "ENGINE" with CONSULT or<br>GST* | "TRANSMISSION" with<br>CONSULT |                                 |                        |
| —                                | P0868                          | FLUID PRESS LOW                 | <a href="#">TM-276</a> |
| —                                | P1701                          | TCM                             | <a href="#">TM-278</a> |
| —                                | P1705                          | TP SENSOR                       | <a href="#">TM-281</a> |
| —                                | P1709                          | INCOMPLETED DATA WRITING        | <a href="#">TM-282</a> |
| —                                | P1722                          | VEHICLE SPEED                   | <a href="#">TM-284</a> |
| —                                | P1723                          | SPEED SENSOR                    | <a href="#">TM-285</a> |
| —                                | P1726                          | THROTTLE CONTROL SIG            | <a href="#">TM-287</a> |
| P1740                            | P1740                          | SLCT SOLENOID                   | <a href="#">TM-288</a> |
| P1777                            | P1777                          | STEP MOTOR                      | <a href="#">TM-290</a> |
| P1778                            | P1778                          | STEP MOTOR                      | <a href="#">TM-293</a> |
| U0100                            | U0100                          | LOST COMM (ECM A)               | <a href="#">TM-232</a> |
| —                                | U1000                          | CAN COMM CIRCUIT                | <a href="#">TM-233</a> |
| —                                | U1010                          | CONTROL UNIT (CAN)              | <a href="#">TM-234</a> |


\*: These numbers are prescribed by SAE J2012.

## Wiring Diagram

INFOID:0000000011463722

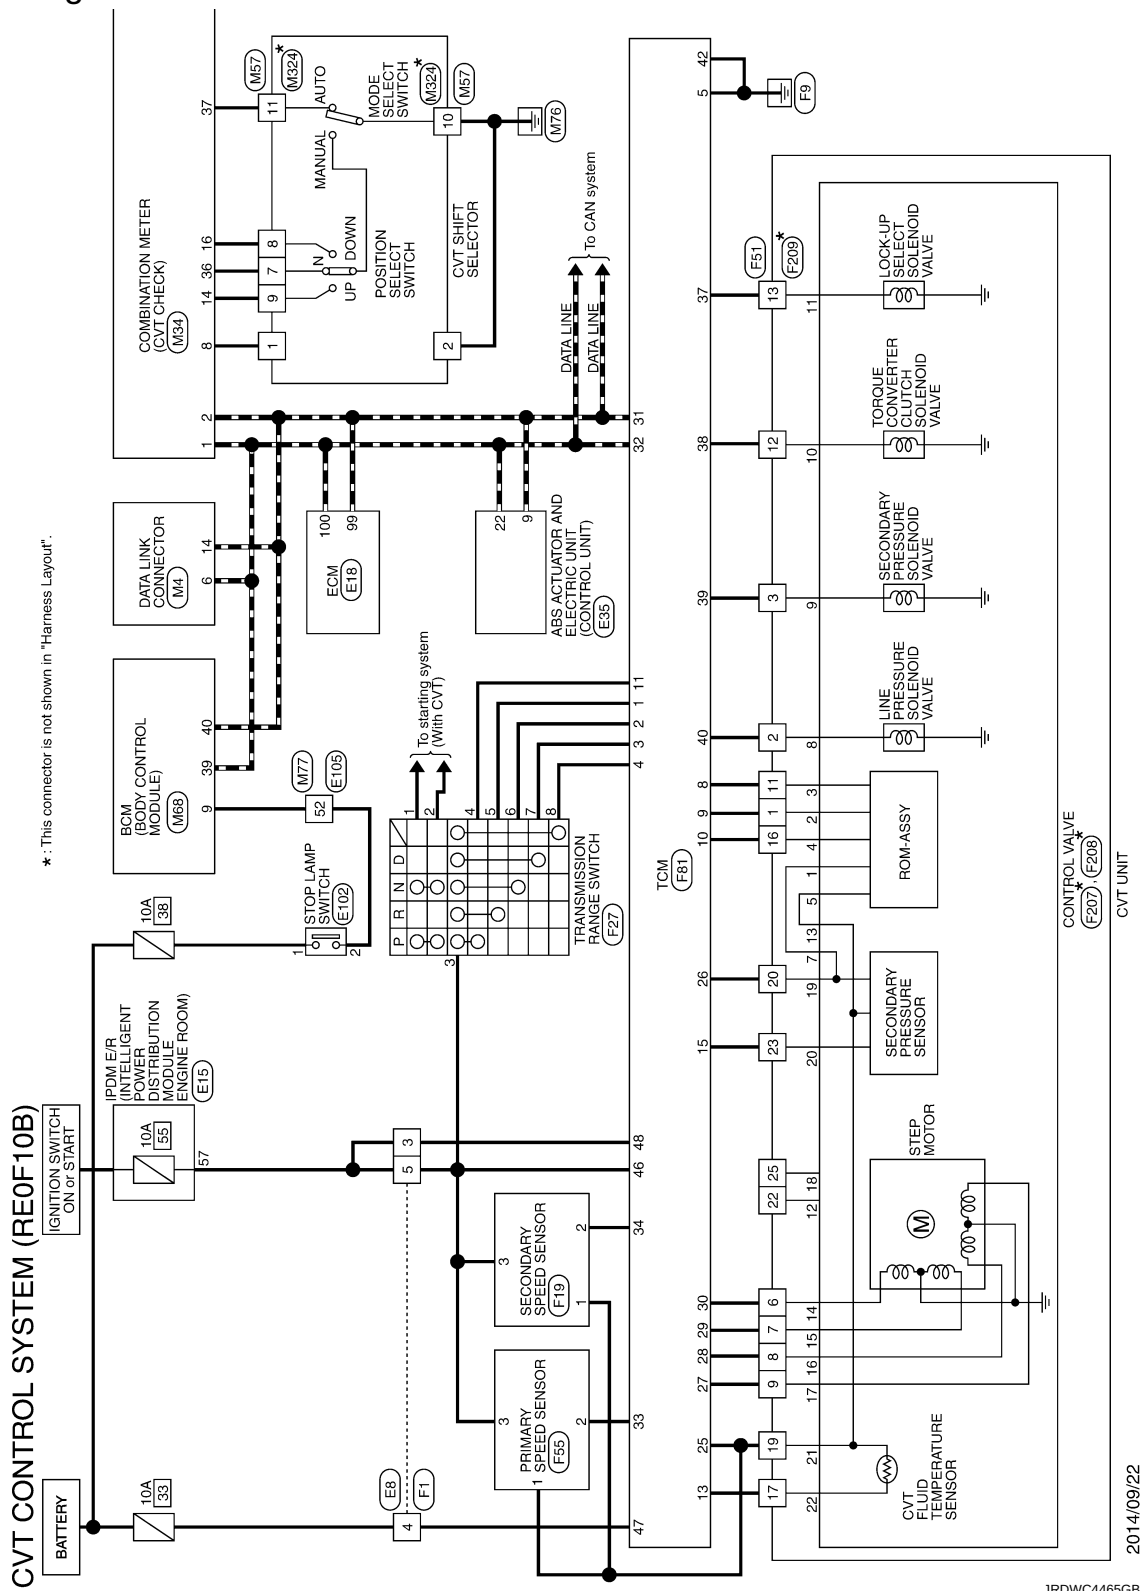

JRDWC4465GB

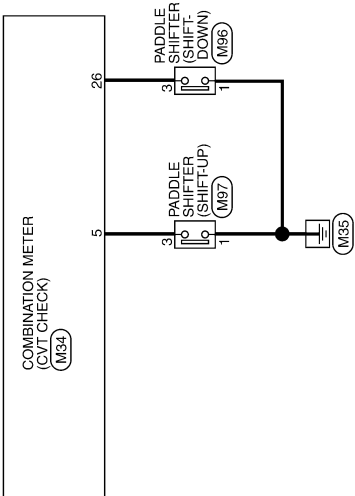

JRDWC4466GB




# CVT CONTROL SYSTEM
 
< WIRING DIAGRAM >

[CVT: RE0F10B]

## CVT CONTROL SYSTEM (RE0F10B)


|                |                   |
|----------------|-------------------|
| Connector No.  | E3                |
| Connector Name | WIRE TO WIRE      |
| Connector Type | S4438MB-RS10-SJZ2 |



| Terminal No. | Color Of Wire | Signal Name [Specification]       |
|--------------|---------------|-----------------------------------|
| 1            | P             | -                                 |
| 2            | P             | -                                 |
| 3            | O             | -                                 |
| 4            | LG            | - [MR engine for NISMO RS]        |
| 5            | O             | - [MR engine except for NISMO RS] |
| 7            | BR            | -                                 |
| 10           | R             | -                                 |
| 11           | G             | - [MR engine except for NISMO RS] |
| 12           | G             | - [MR engine for NISMO RS]        |
| 13           | B             | - [MR engine except for NISMO RS] |
| 14           | L             | - [MR engine for NISMO RS]        |
| 15           | LG            | - [MR engine except for NISMO RS] |
| 16           | LG            | -                                 |
| 17           | GR            | -                                 |
| 18           | W             | -                                 |
| 19           | L/B           | -                                 |
| 20           | L/W           | -                                 |
| 21           | G             | -                                 |
| 22           | G             | - [MR engine for NISMO RS]        |
| 23           | B             | - [MR engine except for NISMO RS] |
| 24           | P             | - [MR engine for NISMO RS]        |
| 25           | R             | -                                 |
| 26           | B             | -                                 |
| 27           | B             | -                                 |
| 28           | LG            | -                                 |
| 29           | G             | -                                 |
| 30           | P             | - [MR engine except for NISMO RS] |
| 31           | G             | - [MR engine for NISMO RS]        |

|    |    |                                   |
|----|----|-----------------------------------|
| 32 | Y  | -                                 |
| 33 | BR | -                                 |
| 34 | P  | - [MR engine except for NISMO RS] |
| 35 | W  | - [MR engine for NISMO RS]        |
| 37 | L  | - [Without Intelligent Key]       |
| 38 | LG | - [With Intelligent Key]          |
| 39 | B  | -                                 |
| 40 | P  | -                                 |
| 41 | V  | -                                 |
| 42 | L  | -                                 |
| 43 | BR | - [MR engine for NISMO RS]        |
| 44 | W  | - [MR engine except for NISMO RS] |
| 45 | GR | - [MR engine for NISMO RS]        |
| 46 | Y  | -                                 |
| 47 | SB | -                                 |
| 48 | LG | - [With Intelligent Key]          |
| 49 | Y  | - [Without Intelligent Key]       |

|                |                                                            |
|----------------|------------------------------------------------------------|
| Connector No.  | E15                                                        |
| Connector Name | FROM L/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM |
| Connector Type | NS16FW-C5                                                  |

 

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 48           | BR            | -                           |
| 49           | Y             | -                           |
| 50           | G             | -                           |
| 51           | L             | -                           |
| 52           | P             | -                           |
| 54           | P             | -                           |
| 55           | SB            | -                           |
| 56           | LG            | -                           |
| 58           | V             | -                           |
| 60           | SB            | -                           |
| 61           | LG            | -                           |

|    |    |   |
|----|----|---|
| 62 | BE | - |
|----|----|---|



| Terminal No. | Color Of Wire | Signal Name [Specification]         |
|--------------|---------------|-------------------------------------|
| 98           | P             | CAN COMMUNICATION LINE (CAN-L)      |
| 99           | L             | CAN COMMUNICATION LINE (CAN-H)      |
| 100          | L             | SENSOR POWER SUPPLY                 |
| 101          | V             | ACCELERATOR PEDAL POSITION SENSOR 1 |
| 102          | R             | PMP SIGNAL                          |
| 103          | BR            | DATA LINK CONNECTOR                 |
| 104          | R             | SENSOR GROUND                       |
| 105          | GR            | POWER SUPPLY FOR ECM (BACKUP)       |
| 106          | GR            | CLUTCH PEDAL POSITION SWITCH        |
| 109          | O             | IGNITION SWITCH                     |
| 110          | P             | ASC/D STEERING SWITCH               |
| 111          | B             | SENSOR GROUND                       |
| 112          | BR            | ECM (STOP AMP OFF)                  |
| 115          | R             | STOP AMP SWITCH                     |
| 116          | G             | BRAKE PEDAL POSITION SWITCH         |
| 117          | Y             | FUEL PUMP RELAY                     |
| 118          | O             | SENSOR POWER SUPPLY                 |
| 119          | W             | ACCELERATOR PEDAL POSITION SENSOR 2 |
| 120          | Y             | SENSOR GROUND                       |
| 121          | G             | POWER SUPPLY FOR ECM                |
| 122          | G             | THROTTLE CONTROL MOTOR POWER SUPPLY |
| 123          | GR            | ECM GROUND                          |
| 124          | GR            | ECM GROUND                          |
| 125          | L             | A/F SENSOR 1 HEATER                 |
| 126          | W             | HEATED OXYGEN SENSOR 2 HEATER       |
| 127          | GR            | ECM GROUND                          |

|                |                                               |
|----------------|-----------------------------------------------|
| Connector No.  | E35                                           |
| Connector Name | ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) |
| Connector Type | RH20EP-NL4-UH                                 |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | BAT (MTR)                   |
| 2            | W             | BAT (MTR)                   |
| 3            | B             | GND (SO)                    |
| 4            | B             | GND (MTR)                   |
| 5            | R             | VDC OFF SW                  |
| 6            | R             | ASC/D CANCEL SW             |
| 8            | R             | STOP LAMP SW                |
| 9            | P             | CAN-L                       |
| 11           | BR            | DP RR                       |
| 12           | W             | DS RR                       |
| 13           | G             | VCC                         |
| 14           | R             | SERIAL*                     |
| 15           | Y             | DS RR                       |
| 16           | V             | IGN                         |
| 17           | W             | REVERSE SIGNAL              |
| 21           | L             | REVERSE SIGNAL              |
| 22           | L             | CAN-H                       |
| 23           | LG            | DP FL                       |
| 26           | G             | RR LH SENS VB               |
| 27           | BR            | DS FL                       |
| 28           | B             | GND                         |
| 29           | W             | SERIAL*                     |
| 30           | BE            | RR LH SENS SIG              |

JRDWC4467GB

# CVT CONTROL SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10B]

## CVT CONTROL SYSTEM (RE0F10B)

|                |                  |
|----------------|------------------|
| Connector No.  | E102             |
| Connector Name | STOP LAMP SWITCH |
| Connector Type | M44FW-LC         |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | -                           |
| 2            | R             | -                           |
| 3            | BE            | -                           |
| 4            | P             | -                           |

|                |                 |
|----------------|-----------------|
| Connector No.  | E105            |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH8DMP-GS16-TM4 |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | L             | -                           |
| 4            | Y             | -                           |
| 6            | P             | -                           |
| 10           | R             | -                           |
| 11           | W             | -                           |
| 12           | B             | -                           |
| 13           | R             | -                           |
| 14           | SHIELD        | -                           |
| 35           | BE            | -                           |
| 36           | B             | -                           |
| 37           | P             | -                           |
| 52           | R             | -                           |
| 53           | BR            | -                           |
| 54           | V             | -                           |
| 55           | BE            | -                           |

|    |    |                                   |
|----|----|-----------------------------------|
| 4  | BR | - [MR engine for NISMO RS]        |
| 5  | GR | - [MR engine except for NISMO RS] |
| 4  | LG | -                                 |
| 7  | R  | -                                 |
| 10 | R  | - [MR engine except for NISMO RS] |
| 11 | G  | - [MR engine for NISMO RS]        |
| 11 | Y  | - [MR engine except for NISMO RS] |
| 12 | G  | -                                 |
| 13 | B  | - [MR engine except for NISMO RS] |
| 13 | BR | - [MR engine for NISMO RS]        |
| 14 | L  | - [MR engine except for NISMO RS] |
| 14 | V  | - [MR engine for NISMO RS]        |
| 15 | BR | -                                 |
| 17 | SG | -                                 |
| 18 | G  | -                                 |
| 19 | G  | -                                 |
| 20 | BR | -                                 |
| 21 | G  | -                                 |
| 22 | BR | - [MR engine for NISMO RS]        |
| 22 | Y  | - [MR engine except for NISMO RS] |
| 23 | B  | -                                 |
| 24 | R  | -                                 |
| 25 | R  | -                                 |
| 26 | B  | -                                 |
| 27 | B  | -                                 |
| 28 | W  | -                                 |
| 28 | X  | -                                 |
| 30 | GR | - [MR engine except for NISMO RS] |
| 30 | R  | - [MR engine for NISMO RS]        |
| 31 | BR | -                                 |
| 32 | LG | -                                 |
| 33 | BR | -                                 |
| 34 | G  | - [MR engine for NISMO RS]        |
| 34 | P  | - [MR engine except for NISMO RS] |
| 37 | G  | - [Without Intelligent Key]       |
| 37 | GR | - [With Intelligent Key]          |
| 38 | R  | -                                 |
| 39 | GR | -                                 |
| 40 | P  | -                                 |
| 41 | BR | - [MR engine for NISMO RS]        |
| 41 | Y  | - [MR engine except for NISMO RS] |
| 42 | Y  | - [MR engine for NISMO RS]        |
| 42 | W  | - [MR engine for NISMO RS]        |
| 43 | L  | - [MR engine except for NISMO RS] |
| 43 | W  | - [MR engine for NISMO RS]        |
| 44 | BR | -                                 |
| 44 | G  | -                                 |
| 45 | BR | -                                 |

|    |    |                             |
|----|----|-----------------------------|
| 46 | R  | -                           |
| 47 | Y  | -                           |
| 48 | GR | - [With Intelligent Key]    |
| 48 | Y  | - [Without Intelligent Key] |

|                |                        |
|----------------|------------------------|
| Connector No.  | F19                    |
| Connector Name | SECONDARY SPEED SENSOR |
| Connector Type | RN03FB                 |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | Y             | -                           |
| 2            | R             | -                           |
| 3            | LG            | -                           |

|                |                           |
|----------------|---------------------------|
| Connector No.  | P27                       |
| Connector Name | TRANSMISSION RANGE SWITCH |
| Connector Type | RN08FG                    |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | GR            | -                           |
| 2            | BR            | -                           |
| 3            | LG            | -                           |
| 5            | G             | -                           |
| 6            | Y             | -                           |
| 7            | W             | -                           |
| 8            | V             | -                           |

JRDWC4468GB

# CVT CONTROL SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10B]

## CVT CONTROL SYSTEM (RE0F10B)

|                |                     |
|----------------|---------------------|
| Connector No.  | F51                 |
| Connector Name | CVT UNIT            |
| Connector Type | Xazaki 1283-8750-30 |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | G             | -                           |
| 2            | W             | -                           |
| 3            | W             | -                           |
| 4            | R             | -                           |
| 5            | EG            | -                           |
| 6            | V             | -                           |
| 7            | GR            | -                           |
| 8            | GR            | -                           |
| 9            | GR            | -                           |
| 10           | W             | -                           |
| 11           | BR            | -                           |
| 12           | G             | -                           |
| 13           | L             | -                           |
| 14           | W             | -                           |
| 15           | SB            | -                           |
| 16           | Y             | -                           |
| 17           | Y             | -                           |
| 18           | LG            | -                           |
| 19           | P             | -                           |
| 20           | P             | -                           |
| 21           | P             | -                           |
| 22           | P             | -                           |
| 23           | P             | -                           |

|                |                      |
|----------------|----------------------|
| Connector No.  | F55                  |
| Connector Name | PRIMARY SPEED SENSOR |
| Connector Type | RKD0FE               |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | B             | -                           |
| 2            | EG            | -                           |
| 3            | LG            | -                           |

|                |                 |
|----------------|-----------------|
| Connector No.  | F81             |
| Connector Name | TCM             |
| Connector Type | RH40FB-R28-L-RH |



 
| Terminal No. | Color Of Wire | Signal Name [Specification]            |
|--------------|---------------|----------------------------------------|
| 1            | G             | R RANGE SW                             |
| 2            | W             | D RANGE SW                             |
| 3            | W             | D RANGE SW                             |
| 4            | V             | -                                      |
| 5            | B             | GROUND                                 |
| 6            | BR            | GLOCK (SEL 2)                          |
| 7            | G             | CHP SELECT (SEL 1)                     |
| 8            | W             | DATE I/O (SEL 3)                       |
| 9            | L             | P RANGE SW                             |
| 10           | SB            | CVT FLUID TEMPERATURE SENSOR           |
| 11           | P             | SECONDARY PRESSURE SENSOR              |
| 12           | Y             | SENSOR GROUND                          |
| 13           | LG            | SENSOR POWER SUPPLY                    |
| 14           | GR            | STEP MOTOR D                           |
| 15           | GR            | STEP MOTOR G                           |
| 16           | EG            | STEP MOTOR B                           |
| 17           | R             | CAN-L                                  |
| 18           | P             | CAN-H                                  |
| 19           | L             | PRIMARY SPEED SENSOR                   |
| 20           | EG            | SECONDARY SPEED SENSOR                 |
| 21           | R             | LOCK-UP SELECT SOLENOID VALVE          |
| 22           | G             | TORQUE CONVERTER CLUTCH SOLENOID VALVE |
| 23           | W             | SECONDARY PRESSURE SOLENOID VALVE      |
| 24           | Y             | LINE PRESSURE SOLENOID VALVE           |
| 25           | B             | GROUND                                 |
| 26           | LG            | IGNITION POWER SUPPLY                  |
| 27           | EG            | BATTERY POWER SUPPLY (MEMORY BACK-UP)  |
| 28           | Y             | IGNITION POWER SUPPLY                  |
| 29           | Y             | IGNITION POWER SUPPLY                  |
| 30           | Y             | IGNITION POWER SUPPLY                  |
| 31           | Y             | IGNITION POWER SUPPLY                  |
| 32           | Y             | IGNITION POWER SUPPLY                  |
| 33           | Y             | IGNITION POWER SUPPLY                  |
| 34           | Y             | IGNITION POWER SUPPLY                  |
| 35           | Y             | IGNITION POWER SUPPLY                  |
| 36           | Y             | IGNITION POWER SUPPLY                  |
| 37           | Y             | IGNITION POWER SUPPLY                  |
| 38           | Y             | IGNITION POWER SUPPLY                  |
| 39           | Y             | IGNITION POWER SUPPLY                  |
| 40           | Y             | IGNITION POWER SUPPLY                  |
| 41           | Y             | IGNITION POWER SUPPLY                  |
| 42           | Y             | IGNITION POWER SUPPLY                  |
| 43           | Y             | IGNITION POWER SUPPLY                  |
| 44           | Y             | IGNITION POWER SUPPLY                  |
| 45           | Y             | IGNITION POWER SUPPLY                  |
| 46           | Y             | IGNITION POWER SUPPLY                  |
| 47           | Y             | IGNITION POWER SUPPLY                  |
| 48           | Y             | IGNITION POWER SUPPLY                  |

|                |               |
|----------------|---------------|
| Connector No.  | F207          |
| Connector Name | CONTROL VALVE |
| Connector Type | A08FW         |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | BR            | -                           |
| 2            | W/R           | -                           |
| 3            | EG            | -                           |
| 4            | G/W           | -                           |
| 5            | B             | -                           |

|                |               |
|----------------|---------------|
| Connector No.  | F208          |
| Connector Name | CONTROL VALVE |
| Connector Type | PI18F-1       |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 7            | BR            | -                           |
| 8            | R             | -                           |
| 9            | G             | -                           |
| 10           | Y/R           | -                           |
| 11           | P             | -                           |
| 12           | R/W           | -                           |
| 13           | B             | -                           |
| 14           | L             | -                           |
| 15           | LG            | -                           |
| 16           | W             | -                           |
| 17           | Q/B           | -                           |
| 18           | W             | -                           |
| 19           | Q/B           | -                           |
| 20           | B/Y           | -                           |
| 21           | G/R           | -                           |

|                |           |
|----------------|-----------|
| Connector No.  | F209      |
| Connector Name | CVT UNIT  |
| Connector Type | RK22MGV-X |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W/R           | -                           |
| 2            | R             | -                           |
| 3            | G             | -                           |
| 4            | L             | -                           |
| 5            | O             | -                           |
| 6            | L/Y           | -                           |
| 7            | R/B           | -                           |
| 8            | Y/R           | -                           |
| 9            | P             | -                           |
| 10           | G/W           | -                           |
| 11           | G/B           | -                           |
| 12           | B/Y           | -                           |
| 13           | W             | -                           |
| 14           | W             | -                           |
| 15           | W             | -                           |
| 16           | W             | -                           |
| 17           | W             | -                           |
| 18           | W             | -                           |
| 19           | W             | -                           |
| 20           | W             | -                           |
| 21           | W             | -                           |
| 22           | W             | -                           |
| 23           | W             | -                           |
| 24           | W             | -                           |
| 25           | W             | -                           |

JRDWC4469GB


# CVT CONTROL SYSTEM
 
< WIRING DIAGRAM >

[CVT: RE0F10B]


## CVT CONTROL SYSTEM (RE0F10B)

|                |                     |
|----------------|---------------------|
| Connector No.  | M4                  |
| Connector Name | DATA LINK CONNECTOR |
| Connector Type | BD16FW              |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | B             | —                           |
| 2            | B             | —                           |
| 3            | B             | —                           |
| 4            | B             | —                           |
| 5            | B             | —                           |
| 6            | B             | —                           |
| 7            | W             | —                           |
| 8            | LG            | —                           |
| 9            | P             | —                           |
| 10           | Y             | —                           |
| 11           | Y             | —                           |
| 12           | Y             | —                           |
| 13           | Y             | —                           |
| 14           | Y             | —                           |
| 15           | Y             | —                           |
| 16           | Y             | —                           |


|                |                   |
|----------------|-------------------|
| Connector No.  | M34               |
| Connector Name | COMBINATION METER |
| Connector Type | TH46FW-NH         |

 

| Terminal No. | Color Of Wire | Signal Name [Specification]                     |
|--------------|---------------|-------------------------------------------------|
| 1            | L             | CAN-H                                           |
| 2            | P             | CAN-L                                           |
| 3            | Y             | VEHICLE SPEED SIGNAL (8-PULSE)                  |
| 4            | Y             | PADDER SHIFTER UP SWITCH SIGNAL                 |
| 5            | G             | FUEL LEVEL SENSOR SIGNAL                        |
| 6            | BR            | AIR BAG SIGNAL                                  |
| 7            | R             | SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)    |
| 8            | P             | PARKING BRAKE SWITCH SIGNAL                     |
| 9            | W             | SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE) |
| 10           | SB            | ILLUMINATION CONTROL SIGNAL                     |
| 11           | G             | ILLUMINATION CONTROL SIGNAL                     |
| 12           | GR            | ILLUMINATION CONTROL SIGNAL                     |
| 13           | GR            | ILLUMINATION CONTROL SIGNAL                     |
| 14           | R             | MANUAL MODE SHIFT UP SIGNAL                     |
| 15           | L             | ACC POWER SUPPLY                                |


|    |    |                                    |
|----|----|------------------------------------|
| 16 | W  | MANUAL MODE SHIFT DOWN SIGNAL      |
| 17 | G  | WASHER LEVEL SWITCH SIGNAL         |
| 18 | R  | SECURITY SIGNAL                    |
| 19 | GR | AMBIENT SENSOR SIGNAL              |
| 20 | R  | AMBIENT SENSOR GROUND              |
| 21 | B  | GROUND                             |
| 22 | B  | GROUND                             |
| 23 | B  | GROUND                             |
| 24 | L  | FUEL LEVEL SENSOR GROUND           |
| 25 | B  | VDC GROUND                         |
| 26 | V  | PADDER SHIFTER DOWN SWITCH SIGNAL  |
| 27 | LG | BATTERY POWER SUPPLY               |
| 28 | GR | IGNITION SIGNAL                    |
| 29 | V  | PASSENGER SEAT BELT WARNING SIGNAL |
| 30 | Y  | A/C AUTO AMBIENT SENSOR SIGNAL     |
| 31 | Y  | MANUAL MODE SIGNAL                 |
| 32 | Y  | MANUAL MODE SIGNAL                 |
| 33 | G  | NON-MANUAL MODE SIGNAL             |
| 34 | P  | ALTERNATOR SIGNAL                  |

|                |                    |
|----------------|--------------------|
| Connector No.  | M57                |
| Connector Name | CVT SHIFT SELECTOR |
| Connector Type | TH16FW-NH          |

 


| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | P             | —                           |
| 2            | BR            | —                           |
| 3            | BR            | —                           |
| 4            | B             | —                           |
| 5            | V             | —                           |
| 6            | GR            | —                           |
| 7            | Y             | —                           |
| 8            | W             | —                           |
| 9            | R             | —                           |
| 10           | B             | —                           |
| 11           | G             | —                           |
| 12           | SB            | —                           |
| 13           | G             | —                           |

|                |                  |
|----------------|------------------|
| Connector No.  | M77              |
| Connector Name | WIRE TO WIRE     |
| Connector Type | TH80FW-CSI-E-TM4 |

 

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | —                           |
| 2            | V             | —                           |
| 3            | P             | —                           |
| 4            | P             | —                           |
| 5            | R             | —                           |
| 6            | R             | —                           |
| 7            | R             | —                           |
| 8            | R             | —                           |
| 9            | R             | —                           |
| 10           | R             | —                           |
| 11           | R             | —                           |
| 12           | LG            | —                           |
| 13           | V             | —                           |
| 14           | SHIELD        | —                           |
| 15           | LG            | —                           |
| 16           | LG            | —                           |
| 17           | SB            | —                           |
| 18           | B             | —                           |
| 19           | P             | —                           |
| 20           | P             | —                           |
| 21           | R             | —                           |
| 22           | L             | —                           |
| 23           | L             | —                           |
| 24           | L             | —                           |
| 25           | L             | —                           |
| 26           | L             | —                           |
| 27           | L             | —                           |
| 28           | L             | —                           |
| 29           | L             | —                           |
| 30           | L             | —                           |
| 31           | L             | —                           |
| 32           | L             | —                           |
| 33           | L             | —                           |
| 34           | L             | —                           |
| 35           | L             | —                           |
| 36           | L             | —                           |
| 37           | L             | —                           |
| 38           | L             | —                           |
| 39           | L             | —                           |
| 40           | L             | —                           |
| 41           | L             | —                           |
| 42           | L             | —                           |
| 43           | L             | —                           |
| 44           | L             | —                           |
| 45           | L             | —                           |
| 46           | L             | —                           |
| 47           | L             | —                           |
| 48           | L             | —                           |
| 49           | L             | —                           |
| 50           | L             | —                           |
| 51           | L             | —                           |
| 52           | L             | —                           |
| 53           | L             | —                           |
| 54           | L             | —                           |
| 55           | L             | —                           |
| 56           | L             | —                           |
| 57           | L             | —                           |
| 58           | L             | —                           |
| 59           | L             | —                           |
| 60           | L             | —                           |
| 61           | L             | —                           |
| 62           | L             | —                           |
| 63           | L             | —                           |
| 64           | L             | —                           |
| 65           | L             | —                           |
| 66           | L             | —                           |
| 67           | L             | —                           |
| 68           | L             | —                           |
| 69           | L             | —                           |
| 70           | L             | —                           |
| 71           | L             | —                           |
| 72           | L             | —                           |
| 73           | L             | —                           |
| 74           | L             | —                           |
| 75           | L             | —                           |
| 76           | L             | —                           |
| 77           | L             | —                           |
| 78           | L             | —                           |
| 79           | L             | —                           |
| 80           | L             | —                           |
| 81           | L             | —                           |
| 82           | L             | —                           |
| 83           | L             | —                           |
| 84           | L             | —                           |
| 85           | L             | —                           |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M68                       |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FB-NH                 |

 

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | COMBI SW INPUT 5            |
| 2            | GR            | COMBI SW INPUT 4            |
| 3            | GR            | COMBI SW INPUT 3            |
| 4            | BR            | COMBI SW INPUT 2            |
| 5            | G             | COMBI SW INPUT 1            |
| 6            | W             | KEY CYL UNLOCK SW           |
| 7            | L             | KEY CYL LOCK SW             |
| 8            | R             | STOP LAMP SW 1              |
| 9            | R             | —                           |
| 10           | W             | —                           |
| 11           | GR            | DOOR LK & UNLK SW LOCK      |
| 12           | GR            | DOOR LK & UNLK SW UNLOCK    |
| 13           | BR            | DOOR LK & UNLK SW UNLOCK    |
| 14           | SB            | OPTICAL SENS                |
| 15           | W             | REAR WINDOW DEF SW          |
| 16           | Y             | OPTICAL SENS PWR SPLY       |
| 17           | Y             | REAR WINDOW DEF SW          |
| 18           | Y             | NATS ANT AMP                |
| 19           | P             | SECURITY INCLAMP CONT       |
| 20           | R             | DONGLE UNLK                 |
| 21           | SB            | NATS ANT AMP                |
| 22           | LG            | THIRMO AMP                  |
| 23           | BR            | THIRMO AMP                  |
| 24           | Y             | A/C SW                      |
| 25           | LG            | BLOWER FAN SW               |
| 26           | BR            | HAZARD SW                   |
| 27           | Y             | HAZARD SW                   |
| 28           | LG            | BK DOOR OPENER SW           |
| 29           | SB            | DR DOOR UNLK SENS           |
| 30           | L             | COMBI SW OUTPUT 5           |
| 31           | GR            | COMBI SW OUTPUT 4           |
| 32           | LG            | COMBI SW OUTPUT 3           |
| 33           | Y             | COMBI SW OUTPUT 2           |
| 34           | W             | COMBI SW OUTPUT 1           |
| 35           | G             | DEFENT SW                   |
| 36           | P             | RECEIVER COMM               |
| 37           | G             | CAN-H                       |
| 38           | SB            | CAN-L                       |
| 39           | L             | —                           |
| 40           | P             | —                           |

JRDWC4470GB

CVT CONTROL SYSTEM


< WIRING DIAGRAM >

[CVT: RE0F10B]

CVT CONTROL SYSTEM (RE0F10B)

|     |        |   |
|-----|--------|---|
| 86  | LG     | - |
| 89  | SHIELD | - |
| 91  | Y      | - |
| 92  | BR     | - |
| 95  | Y      | - |
| 96  | L      | - |
| 97  | GR     | - |
| 98  | G      | - |
| 99  | R      | - |
| 100 | LG     | - |

|                |                    |
|----------------|--------------------|
| Connector No.  | M24                |
| Connector Name | CVT SHIFT SELECTOR |
| Connector Type | TH16MM-NH          |

 

|                |                             |
|----------------|-----------------------------|
| Connector No.  | M86                         |
| Connector Name | PADDER SHIFTER (SHIFT-DOWN) |
| Connector Type | A03FW                       |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | Y             | -                           |
| 2            | Y             | -                           |
| 3            | W             | -                           |
| 4            | P             | -                           |
| 5            | G             | -                           |
| 6            | G             | -                           |
| 7            | BR            | -                           |
| 8            | G             | -                           |
| 9            | GR            | -                           |
| 10           | Y             | -                           |
| 11           | L/W           | -                           |
| 12           | O             | -                           |
| 13           | LG            | -                           |

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | B             | -                           |
| 2            | B             | -                           |
| 3            | V             | -                           |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M87                       |
| Connector Name | PADDER SHIFTER (SHIFT-UP) |
| Connector Type | A04FW                     |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | -                           |
| 2            | G             | -                           |
| 3            | G             | -                           |

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

JRDWC4471GB

# CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >


[CVT: RE0F10B]

## CVT SHIFT LOCK SYSTEM

### Wiring Diagram

INFOID:000000011463723

★: This connector is not shown in "Harness Layout".

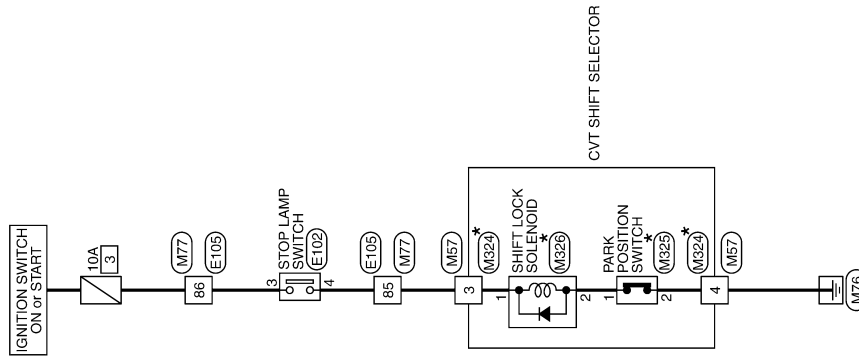

SHIFT LOCK SYSTEM

2014/09/22

JRDWC4478GB

# CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10B]

## SHIFT LOCK SYSTEM

|                |                  |
|----------------|------------------|
| Connector No.  | E102             |
| Connector Name | STOP LAMP SWITCH |
| Connector Type | M04FW-LC         |

 


| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | -                           |
| 2            | W             | -                           |
| 3            | BE            | -                           |
| 4            | P             | -                           |

|                |                 |
|----------------|-----------------|
| Connector No.  | E105            |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80FW-CS16-TM4 |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | L             | -                           |
| 4            | Y             | -                           |
| 6            | P             | -                           |
| 10           | R             | -                           |
| 11           | W             | -                           |
| 12           | B             | -                           |
| 13           | R             | -                           |
| 14           | SHIELD        | -                           |
| 34           | BE            | -                           |
| 35           | R             | -                           |
| 36           | P             | -                           |
| 37           | P             | -                           |
| 52           | R             | -                           |
| 53           | ER            | -                           |
| 54           | V             | -                           |



|                |                    |
|----------------|--------------------|
| Connector No.  | M57                |
| Connector Name | CVT SHIFT SELECTOR |
| Connector Type | TH16FW-NH          |

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | -                           |
| 2            | B             | -                           |
| 3            | BR            | -                           |
| 4            | B             | -                           |
| 5            | V             | -                           |
| 6            | GR            | -                           |
| 7            | Y             | -                           |
| 8            | W             | -                           |
| 9            | R             | -                           |
| 10           | B             | -                           |
| 11           | G             | -                           |
| 12           | SH            | -                           |
| 13           | G             | -                           |

|                |                 |
|----------------|-----------------|
| Connector No.  | M77             |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80FW-CS16-TM4 |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | L             | -                           |
| 4            | V             | -                           |
| 6            | P             | -                           |
| 10           | R             | -                           |
| 11           | R             | -                           |
| 12           | LG            | -                           |
| 13           | V             | -                           |
| 14           | SHIELD        | -                           |
| 34           | LG            | -                           |
| 35           | SH            | -                           |
| 36           | B             | -                           |
| 37           | P             | -                           |
| 52           | L             | -                           |
| 53           | L             | -                           |
| 54           | SH            | -                           |
| 55           | P             | -                           |
| 56           | LG            | -                           |
| 58           | LG            | -                           |
| 59           | G             | -                           |

|     |        |   |
|-----|--------|---|
| 62  | Y      | - |
| 63  | W      | - |
| 64  | G      | - |
| 65  | GR     | - |
| 66  | Y      | - |
| 67  | V      | - |
| 68  | R      | - |
| 70  | V      | - |
| 71  | R      | - |
| 72  | GR     | - |
| 73  | G      | - |
| 76  | W      | - |
| 78  | LG     | - |
| 79  | V      | - |
| 80  | LG     | - |
| 81  | P      | - |
| 84  | G      | - |
| 85  | BR     | - |
| 86  | LG     | - |
| 90  | SHIELD | - |
| 91  | Y      | - |
| 92  | BR     | - |
| 95  | Y      | - |
| 96  | L      | - |
| 97  | GR     | - |
| 98  | G      | - |
| 99  | R      | - |
| 100 | LG     | - |

|                |                    |
|----------------|--------------------|
| Connector No.  | M224               |
| Connector Name | CVT SHIFT SELECTOR |
| Connector Type | TH16MW-NH          |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | -                           |
| 2            | Y             | -                           |
| 3            | W             | -                           |
| 4            | P             | -                           |
| 5            | G             | -                           |

JRDWC4479GB

CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10B]

|                   |     |   |
|-------------------|-----|---|
| SHIFT LOCK SYSTEM |     |   |
| 8                 | LG  | - |
| 7                 | BR  | - |
| 6                 | CG  | - |
| 5                 | GR  | - |
| 10                | Y   | - |
| 11                | L/W | - |
| 12                | O   | - |
| 13                | LG  | - |

|                |                      |
|----------------|----------------------|
| Connector No.  | M325                 |
| Connector Name | PARK POSITION SWITCH |
| Connector Type | TK02FW               |



|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color Of Wire | Signal Name [Specification] |
| 1            | -             | -                           |
| 2            | -             | -                           |

|                |                     |
|----------------|---------------------|
| Connector No.  | M326                |
| Connector Name | SHIFT LOCK SOLENOID |
| Connector Type | Yazaki 7283-5845    |



|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color Of Wire | Signal Name [Specification] |
| 2            | B             | -                           |



## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

#### Work Flow


INFOID:0000000011463724

#### INTRODUCTION

The TCM receives a signal from the vehicle speed sensor, transmission range switch and provides shift control or lock-up control via CVT solenoid valves.


The TCM also communicates with the ECM by means of a signal sent from sensing elements used with the OBD-related parts of the CVT system for malfunction-diagnostic purposes. The TCM is capable of diagnosing malfunctioning parts while the ECM can store malfunctions in its memory.

Input and output signals must always be correct and stable in the operation of the CVT system. The CVT system must be in good operating condition and be free of valve seizure, solenoid valve malfunction, etc.

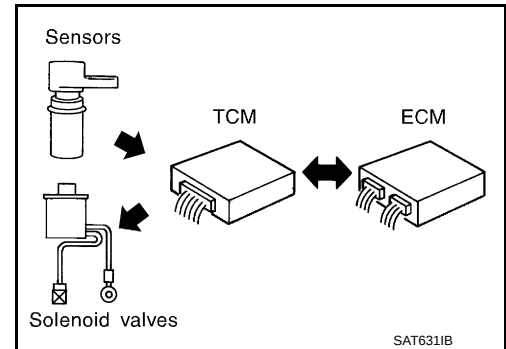

It is much more difficult to diagnose an error that occurs intermittently rather than continuously. Most intermittent errors are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.


A visual check only may not find the cause of the errors. A road test with CONSULT (or GST) or a circuit tester connected should be performed. Follow the "DETAILED FLOW".

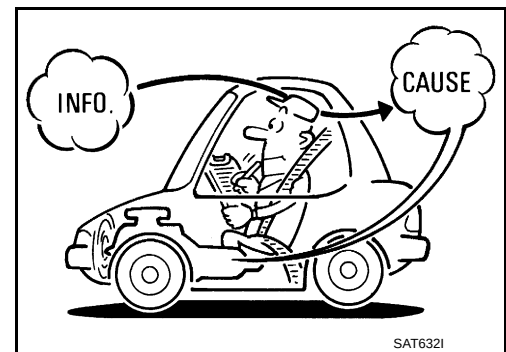

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such errors, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "Diagnostic Work Sheet" as shown on the example (Refer to [TM-214](#)) should be used.

Start your diagnosis by looking for "conventional" errors first. This will help troubleshoot driveability errors on an electronically controlled engine vehicle.

Also check related Service bulletins.

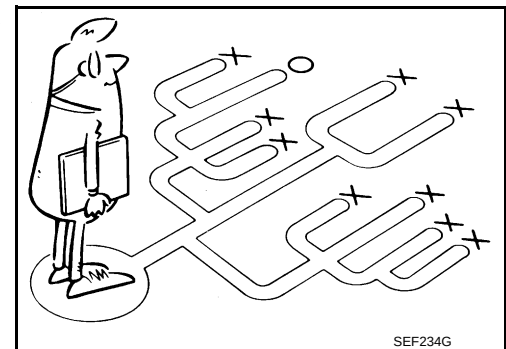

#### DETAILED FLOW

##### 1.COLLECT THE INFORMATION FROM THE CUSTOMER

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using diagnosis worksheet. Refer to [TM-214, "Diagnostic Work Sheet"](#).

>> GO TO 2.

##### 2.CHECK SYMPTOM 1

Check the following items based on the information obtained from the customer.

- Fail-safe. Refer to [TM-198, "Fail-Safe"](#).
- CVT fluid inspection. Refer to [TM-311, "Inspection"](#).
- Line pressure test. Refer to [TM-225, "Inspection and Judgment"](#).

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CVT: RE0F10B]

- Stall test. Refer to [TM-223, "Inspection and Judgment"](#).

>> GO TO 3.

## 3.CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
  - Record DTC.
  - Erase DTC. Refer to [TM-186, "Diagnosis Description"](#).

Is any DTC detected?

YES >> GO TO 4.

NO >> GO TO 5.

## 4.PERFORM DIAGNOSTIC PROCEDURE

Perform "Diagnostic Procedure" for the displayed DTC.

>> GO TO 5.

## 5.PERFORM DTC CONFIRMATION PROCEDURE

Perform "DTC CONFIRMATION PROCEDURE" for the displayed DTC.

Is DTC detected?

YES >> GO TO 4.

NO >> GO TO 6.

## 6.CHECK SYMPTOM 2

Confirm the symptom described by the customer.

Is any malfunction present?

YES >> GO TO 7.

NO >> **INSPECTION END**

## 7.RODE TEST

Perform "RODE TEST". Refer to [TM-227, "Description"](#).

>> GO TO 8.

## 8.CHECK SYMPTOM 3

Confirm the symptom described by the customer.

Is any malfunction present?

YES >> GO TO 2.

NO >> **INSPECTION END**

## Diagnostic Work Sheet

INFOID:0000000011463725

### INFORMATION FROM CUSTOMER

#### KEY POINTS

- **WHAT**..... Vehicle & CVT model
- **WHEN**..... Date, Frequencies
- **WHERE**..... Road conditions
- **HOW**..... Operating conditions, Symptoms

|                     |                                                                                          |                 |
|---------------------|------------------------------------------------------------------------------------------|-----------------|
| Customer name MR/MS | Model & Year                                                                             | VIN             |
| Trans. Model        | Engine                                                                                   | Mileage         |
| Malfunction Date    | Manuf. Date                                                                              | In Service Date |
| Frequency           | <input type="checkbox"/> Continuous <input type="checkbox"/> Intermittent ( times a day) |                 |

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CVT: RE0F10B]

|                                  |                                                                                                                                                                                            |                                  |
|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|
| Symptoms                         | <input type="checkbox"/> Vehicle does not move. ( <input type="checkbox"/> Any position <input type="checkbox"/> Particular position)                                                      |                                  |
|                                  | <input type="checkbox"/> No shift                                                                                                                                                          |                                  |
|                                  | <input type="checkbox"/> Lock-up malfunction                                                                                                                                               |                                  |
|                                  | <input type="checkbox"/> Shift shock or slip ( <input type="checkbox"/> N → D <input type="checkbox"/> N → R <input type="checkbox"/> Lock-up <input type="checkbox"/> Any drive position) |                                  |
|                                  | <input type="checkbox"/> Noise or vibration                                                                                                                                                |                                  |
|                                  | <input type="checkbox"/> No pattern select                                                                                                                                                 |                                  |
|                                  | <input type="checkbox"/> Others<br>( )                                                                                                                                                     |                                  |
| Malfunction indicator lamp (MIL) | <input type="checkbox"/> Continuously lit                                                                                                                                                  | <input type="checkbox"/> Not lit |

## DIAGNOSTIC WORKSHEET

|                                                                     |                                                                                                                                                                                   |                                                                                                                                                                                      |                                                    |
|---------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------|
| 1                                                                   | <input type="checkbox"/> Read the item on cautions concerning fail-safe and understand the customer's complaint.                                                                  |                                                                                                                                                                                      | <a href="#">TM-198</a>                             |
| 2                                                                   | <input type="checkbox"/> CVT fluid inspection, stall test and line pressure test                                                                                                  |                                                                                                                                                                                      |                                                    |
|                                                                     |                                                                                                                                                                                   | <input type="checkbox"/> CVT fluid inspection                                                                                                                                        | <a href="#">TM-311</a>                             |
|                                                                     |                                                                                                                                                                                   | <input type="checkbox"/> Leak (Repair leak location.)<br><input type="checkbox"/> State<br><input type="checkbox"/> Amount                                                           |                                                    |
|                                                                     |                                                                                                                                                                                   | <input type="checkbox"/> Stall test                                                                                                                                                  |                                                    |
|                                                                     |                                                                                                                                                                                   | <input type="checkbox"/> Torque converter one-way clutch<br><input type="checkbox"/> Reverse brake<br><input type="checkbox"/> Forward clutch<br><input type="checkbox"/> Steel belt |                                                    |
| <input type="checkbox"/> Line pressure inspection - Suspected part: |                                                                                                                                                                                   |                                                                                                                                                                                      |                                                    |
| 3                                                                   | <input type="checkbox"/> Perform self-diagnosis.                                                                                                                                  |                                                                                                                                                                                      | <a href="#">TM-188</a>                             |
|                                                                     | Enter checks for detected items.                                                                                                                                                  |                                                                                                                                                                                      |                                                    |
| 4                                                                   | <input type="checkbox"/> Perform road test.                                                                                                                                       |                                                                                                                                                                                      | <a href="#">TM-227</a>                             |
|                                                                     | 4-1.                                                                                                                                                                              | Check before engine is started                                                                                                                                                       | <a href="#">TM-227</a>                             |
|                                                                     | 4-2.                                                                                                                                                                              | Check at idle                                                                                                                                                                        | <a href="#">TM-227</a>                             |
|                                                                     | 4-3.                                                                                                                                                                              | Cruise test                                                                                                                                                                          | <a href="#">TM-228</a>                             |
|                                                                     | <input type="checkbox"/> After completing all road test, check malfunction phenomena to repair or replace malfunctioning part. Refer to <a href="#">TM-300</a> , "Symptom Table". |                                                                                                                                                                                      |                                                    |
| 5                                                                   | <input type="checkbox"/> Drive vehicle to check that the malfunction phenomenon has been resolved.                                                                                |                                                                                                                                                                                      |                                                    |
| 6                                                                   | <input type="checkbox"/> Erase the results of the self-diagnosis from the TCM and the ECM.                                                                                        |                                                                                                                                                                                      | <a href="#">TM-186</a> ,<br><a href="#">TM-188</a> |

## ADDITIONAL SERVICE WHEN REPLACING TCM

< BASIC INSPECTION >

[CVT: RE0F10B]

### ADDITIONAL SERVICE WHEN REPLACING TCM

#### Description

INFOID:0000000011463726

When replacing the TCM, perform the following work. For work procedure, refer to [TM-216, "Work Procedure"](#).

#### TCM PROGRAMMING

- Since vehicle specifications are not yet written in a new TCM, it is necessary to write them with CONSULT.

#### CAUTION:

**When replacing TCM, save TCM data on CONSULT before removing TCM.**

#### LOADING AND STORING OF CALIBRATION DATA

- The TCM acquires calibration data (individual characteristic value) of each solenoid that is stored in the ROM assembly (in the control valve). This enables the TCM to perform accurate control. After the TCM is replaced, check that the calibration data is correctly loaded and stored.

#### CAUTION:

**When replacing TCM and transaxle assembly simultaneously, replace transaxle assembly first and then replace TCM.**

#### Work Procedure

INFOID:0000000011463727

#### CAUTION:

**Immediately after TCM is replaced or after control valve or transaxle assembly is replaced (after TCM initialization is complete), self-diagnosis result of "P1701", "P1709" may be displayed. In this case, erase self-diagnosis result using CONSULT. After erasing self-diagnosis result, perform DTC "P1701", "P1709" reproduction procedure and check that malfunction is not detected. Refer to [TM-278, "DTC Logic"](#) (P1701), [TM-282, "DTC Logic"](#) (P1709).**

#### 1. CHECK NEW TCM PART NUMBER

Check new TCM part number to see whether it is blank TCM or not.

#### NOTE:

- Part number of blank TCM is 310F6-XXXXX.
- Check the part number when ordering TCM or with the one included in the label on the container box.

#### Is new TCM a blank TCM?

YES >> GO TO 2.

NO >> GO TO 3.

#### 2. SAVE TCM DATA (VEHICLE SPECIFICATIONS)

#### NOTE:

Save necessary data stored in TCM in CONSULT according to the following instructions:

#### Ⓑ With CONSULT

- Turn ignition switch OFF.
- Connect all of disconnected connectors.
- Turn ignition switch ON.
- Select "Re/programming, Configuration".
- Select "AT/CVT".

#### NOTE:

If "AT/CVT" is not displayed and TCM data cannot be saved on CONSULT, GO TO 3.

- Select "Programming".
- Save TCM data on CONSULT according to the CONSULT display.

>> GO TO 3.

#### 3. REPLACE THE TCM

- Turn ignition switch OFF and wait for 10 seconds.
- Replace the TCM. Refer to [TM-325, "Removal and Installation"](#).

>> GO TO 4.

#### 4. LOAD CALIBRATION DATA

## ADDITIONAL SERVICE WHEN REPLACING TCM

### < BASIC INSPECTION >

[CVT: RE0F10B]

1. Shift the selector lever to the "P" position.
2. Turn ignition switch ON.
3. Check that "P" is displayed on shift position indicator on combination meter.

**NOTE:**

Displayed approximately 1 – 2 seconds after the selector lever is moved to the "P" position.

Does the shift position indicator display "P"?

YES >> GO TO 6.

NO >> GO TO 5.

### 5.DETECT MALFUNCTIONING ITEM

Check the following items:

- Harness between the TCM and the ROM assembly inside the transaxle assembly is open or shorted.
- Disconnected, loose, bent, collapsed, or otherwise abnormal connector housing terminals

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

### 6.STORE CALIBRATION DATA

1. Turn ignition switch OFF and wait for 5 seconds.
2. Turn ignition switch ON.

**CAUTION:**

**Never start the engine.**

Does the shift position indicator display "P" at the same time when turning ON the ignition switch?

YES -1 (TCM is blank)>>GO TO 7.

YES -2 (TCM is not blank)>>WORK END

NO >> Check harness between battery and TCM harness connector terminal. Refer to [TM-278, "Diagnosis Procedure"](#).

### 7.WRITE TCM DATA (VEHICLE SPECIFICATIONS)

**NOTE:**

Write data saved in CONSULT into a new TCM according to the following instructions:

 **With CONSULT**

1. Select "Programming".
2. Perform programming according to the CONSULT display.

>> WORK END

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# ADDITIONAL SERVICE WHEN REPLACING CONTROL VALVE OR TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F10B]

## ADDITIONAL SERVICE WHEN REPLACING CONTROL VALVE OR TRANSAXLE ASSEMBLY

### Description

INFOID:0000000011463728

When replacing the transaxle assembly/control valve, perform the following work. For work procedure, refer to [.TM-216, "Work Procedure"](#).

#### ERASING, LOADING AND STORING OF CALIBRATION DATA

- The TCM acquires calibration data (individual characteristic value) of each solenoid that is stored in the ROM assembly (in the control valve). This enables the TCM to perform accurate control. For this reason, after the transaxle assembly/control valve is replaced, it is necessary to erase the calibration data previously stored in TCM, to load new calibration data, and to store them.

#### ERASING OF CVT FLUID DEGRADATION LEVEL DATA

- TCM records the degradation level of the CVT fluid calculated from the vehicle driving status. Therefore, if the transaxle assembly/control valve is replaced, it is necessary to erase the CVT fluid degradation level data recorded by TCM.

### Work Procedure

INFOID:0000000011463729

#### CAUTION:

Immediately after TCM is replaced or after control valve or transaxle assembly is replaced (after TCM initialization is complete), self-diagnosis result of "P1701", "P1709" may be displayed. In this case, erase self-diagnosis result using CONSULT. After erasing self-diagnosis result, perform DTC "P1701", "P1709" reproduction procedure and check that malfunction is not detected. Refer to [TM-278, "DTC Logic"](#) (P1701), [TM-282, "DTC Logic"](#) (P1709).

### 1. PREPARATION BEFORE WORK

#### Ⓔ With CONSULT

1. Start the engine.

#### CAUTION:

**Never drive the vehicle.**

2. Select "Data Monitor" in "TRANSMISSION".
3. Select "ATFTEMP COUNT".

Is "ATFTEMP COUNT" 47 [equivalent to 20°C (68°F)] or more?

YES >> GO TO 2.

NO >> 1. Warm up the transaxle assembly until "ATFTEMP COUNT" reaches "47" [equivalent to 20°C (68°F)] or more.  
2. GO TO 2.

### 2. PERFORM TCM INITIALIZATION

#### Ⓔ With CONSULT

1. Turn ignition switch OFF.
  2. Turn ignition switch ON.
- CAUTION:**  
**Never start the engine.**
3. Select "Self Diagnostic Results" in "TRANSMISSION".
  4. Shift selector lever to "R" position.
  5. Depress slightly the accelerator pedal (Pedal angle: 2.0/8) while depressing the brake pedal.
  6. Select "Erase" with step 5.
  7. Release brake pedal and accelerator pedal.
  8. Select "CALIB DATA" in "TRANSMISSION".
  9. Check that "CALIB DATA" value is as shown as in the following table.

| Item name     | Display value |
|---------------|---------------|
| UNIT CLB ID 1 | 00            |
| UNIT CLB ID 2 | 00            |
| UNIT CLB ID 3 | 00            |

# ADDITIONAL SERVICE WHEN REPLACING CONTROL VALVE OR TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F10B]

| Item name     | Display value |
|---------------|---------------|
| UNIT CLB ID 4 | 00            |
| UNIT CLB ID 5 | 00            |
| UNIT CLB ID 6 | 00            |

Is "CALIB DATA" value it?

YES >> GO TO 3.

NO >> GO TO 1.

## 3. LOAD CALIBRATION DATA

- Shift selector lever to "P" position.
- Check that "P" is displayed on shift position indicator on combination meter.

### NOTE:

It indicates approximately 1 – 2 seconds after shifting the selector lever to "P" position.

Does shift position indicator display "P"?

YES >> GO TO 5.

NO >> GO TO 4.

## 4. DETECT MALFUNCTIONING ITEM

Check the following items:

- Harness between the TCM and the ROM assembly inside the transaxle assembly is open or shorted.
- Disconnected, loose, bent, collapsed, or otherwise abnormal connector housing terminals
- Power supply and ground of TCM. (Refer to [TM-278, "Diagnosis Procedure"](#).)

Is the inspection result normal?

YES >> GO TO 1.

NO >> Repair or replace the malfunctioning parts.

## 5. STORE CALIBRATION DATA

- Turn ignition switch OFF and wait for 5 seconds.
- Turn ignition switch ON.

Does the shift position indicator display "P" at the same time when turning ON the ignition switch?

YES >> GO TO 6.

NO >> Check harness between battery and TCM harness connector terminal. Refer to [TM-278, "Diagnosis Procedure"](#).

## 6. ERASE CVT FLUID DEGRADATION LEVEL DATA

### With CONSULT

- Select "WORK SUPPORT" in "TRANSMISSION".
- Select "CONFORM CVTF DETERIORATION".
- Touch "Clear".

>> WORK END

## CVT FLUID COOLER SYSTEM

### Cleaning

INFOID:000000011463730

Whenever an automatic transaxle is repaired, overhauled, or replaced, the CVT fluid cooler mounted in the radiator must be inspected and cleaned.

Metal debris and friction material, if present, can be trapped or be deposited in the CVT fluid cooler. This debris can contaminate the newly serviced CVT or, in severe cases, can block or restrict the flow of CVT fluid. In either case, malfunction of the newly serviced CVT may occur.

Debris, if present, may deposit as CVT fluid enters the cooler inlet. It will be necessary to back flush the cooler through the cooler outlet in order to flush out any built up debris.


### CVT FLUID COOLER CLEANING PROCEDURE

1. Position an oil pan under the transaxle's inlet and outlet cooler hoses.
2. Identify the inlet and outlet fluid cooler hoses.
3. Disconnect the fluid cooler inlet and outlet rubber hoses from the steel cooler tubes or bypass valve.

**NOTE:**

Replace the cooler hoses if rubber material from the hose remains on the tube fitting.

4. Allow any CVT fluid that remains in the cooler hoses to drain into the oil pan.

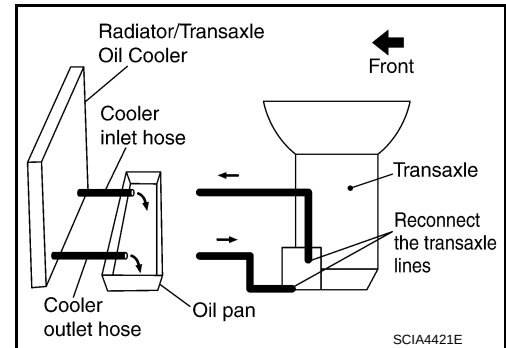


5. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

**CAUTION:**

- **Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.**
- **Spray Transmission Cooler Cleaner only with adequate ventilation.**
- **Avoid contact with eyes and skin.**
- **Never breath vapors or spray mist.**

6. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until CVT fluid flows out of the cooler inlet hose for 5 seconds.

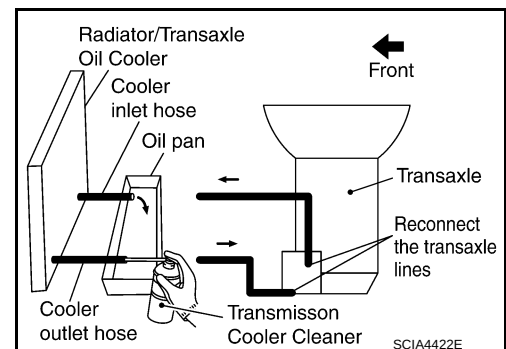

7. Insert the tip of an air gun into the end of the cooler outlet hose.
8. Wrap a shop rag around the air gun tip and end of the cooler outlet hose.

9. Blow compressed air regulated to 5 to 9 kg/cm<sup>2</sup> (70 to 130 psi) through the cooler outlet hose for 10 seconds to force out any remaining CVT fluid.

10. Repeat steps 5 through 9 three additional times.

11. Position an oil pan under the banjo bolts that connect the CVT fluid cooler steel lines to the transaxle.


12. Remove the banjo bolts.

13. Flush each steel line from the cooler side back toward the transaxle by spraying Transmission Cooler Cleaner in a continuous stream for 5 seconds.

14. Blow compressed air regulated to 5 to 9 kg/cm<sup>2</sup> (70 to 130 psi) through each steel line from the cooler side back toward the transaxle for 10 seconds to force out any remaining CVT fluid.

15. Ensure all debris is removed from the steel cooler lines.

16. Ensure all debris is removed from the banjo bolts and fittings.

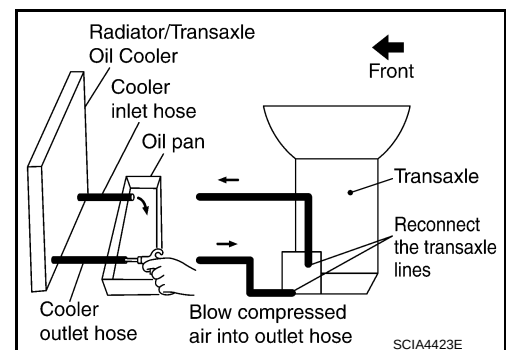



# CVT FLUID COOLER SYSTEM

< BASIC INSPECTION >

[CVT: RE0F10B]

17. Perform "CVT FLUID COOLER DIAGNOSIS PROCEDURE".

## CVT FLUID COOLER DIAGNOSIS PROCEDURE



### NOTE:

Insufficient cleaning of the cooler inlet hose exterior may lead to inaccurate debris identification.


1. Position an oil pan under the transaxle's inlet and outlet cooler hoses.
2. Clean the exterior and tip of the cooler inlet hose.
3. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

### CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
  - Spray Transmission Cooler Cleaner only with adequate ventilation.
  - Avoid contact with eyes and skin.
  - Never breath vapors or spray mist.
4. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until CVT fluid flows out of the cooler inlet hose for 5 seconds.
  5. Tie a common white, basket-type coffee filter to the end of the cooler inlet hose.

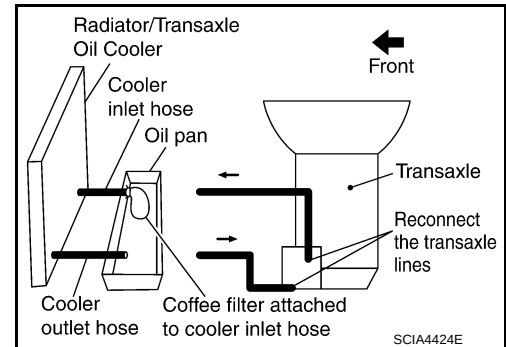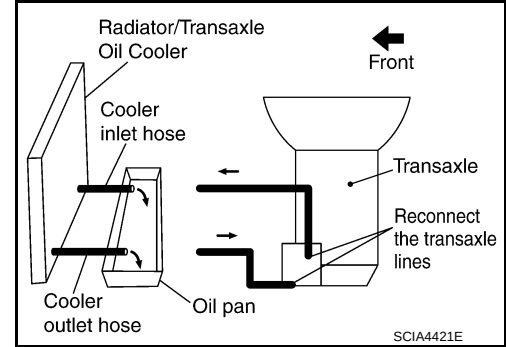


6. Insert the tip of an air gun into the end of the cooler outlet hose.
7. Wrap a shop rag around the air gun tip and end of cooler outlet hose.
8. Blow compressed air regulated to 5 to 9 kg/cm<sup>2</sup> (70 to 130 psi) through the cooler outlet hose to force any remaining CVT fluid into the coffee filter.
9. Remove the coffee filter from the end of the cooler inlet hose.
10. Perform "CVT FLUID COOLER INSPECTION PROCEDURE".

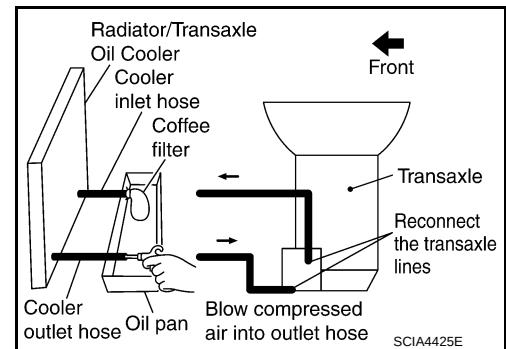

## CVT FLUID COOLER INSPECTION PROCEDURE

1. Inspect the coffee filter for debris.
  - a. If small metal debris less than 1 mm (0.040 in) in size or metal powder is found in the coffee filter, this is normal. If normal debris is found, the CVT fluid cooler/radiator can be reused and the procedure is ended.

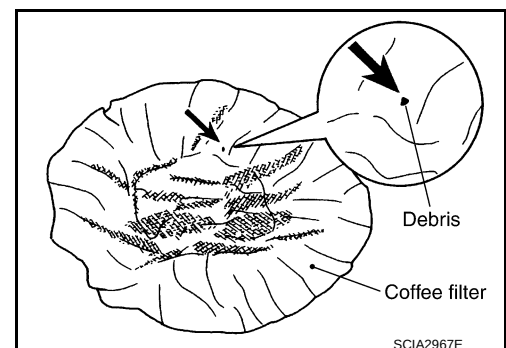


## CVT FLUID COOLER SYSTEM

### < BASIC INSPECTION >

[CVT: RE0F10B]

- b. If one or more pieces of debris are found that are over 1 mm (0.040 in) in size and/or peeled clutch facing material is found in the coffee filter, the fluid cooler is not serviceable. The radiator/ fluid cooler must be replaced and the inspection procedure is ended.

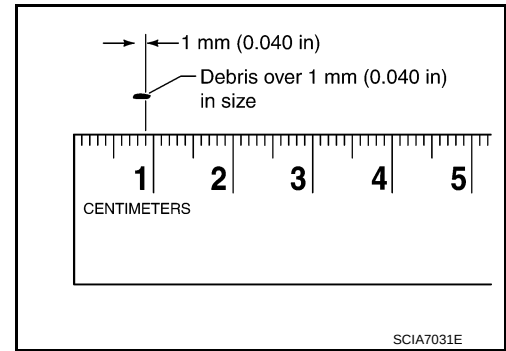

### CVT FLUID COOLER FINAL INSPECTION

After performing all procedures, ensure that all remaining oil is cleaned from all components.

# STALL TEST

< BASIC INSPECTION >

[CVT: RE0F10B]


## STALL TEST

### Inspection and Judgment


INFOID:0000000011463731

#### INSPECTION


1. Inspect the amount of engine oil. Replenish the engine oil if necessary.
2. Drive for about 10 minutes to warm up the vehicle so that the CVT fluid temperature is 50 to 80°C (122 to 176°F). Inspect the amount of CVT fluid. Replenish if necessary.

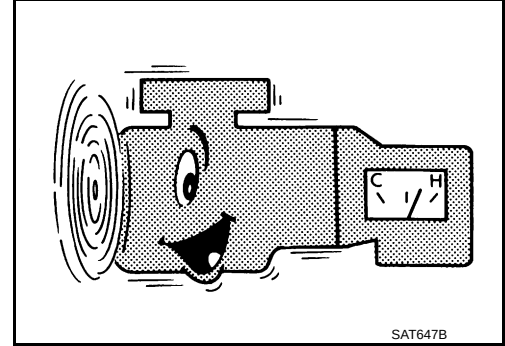

3. Securely engage the parking brake so that the tires do not turn.
4. Install a tachometer where it can be seen by driver during test.  
**NOTE:**  
It is good practice to mark the point of specified engine rpm on indicator.
5. Start engine, apply foot brake, and place selector lever in "D" position.

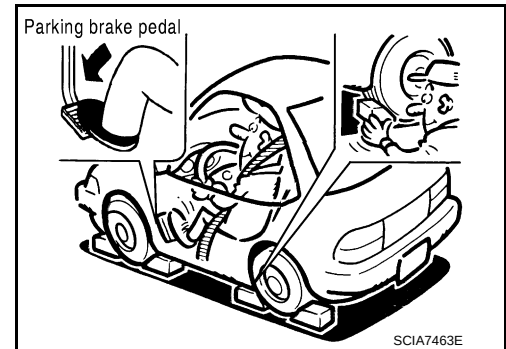

6. While holding down the foot brake, gradually press down the accelerator pedal.
7. Quickly read off the stall speed, and then quickly remove your foot from the accelerator pedal.  
**CAUTION:**  
Never hold down the accelerator pedal for more than 5 seconds during this test.

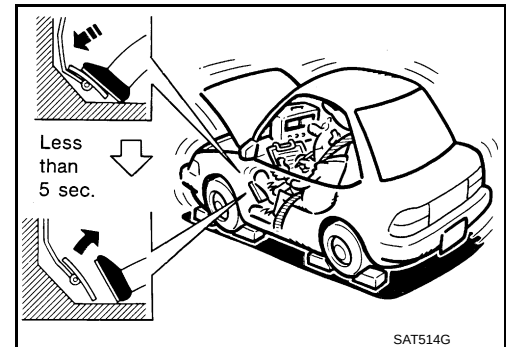

**Stall speed** : Refer to [TM-350, "Stall Speed"](#).

8. Move the selector lever to the "N" position.
9. Cool down the CVT fluid.  
**CAUTION:**  
Run the engine at idle for at least 1 minute.
10. Repeat steps 6 through 9 with selector lever in "R" position.

#### JUDGMENT

## STALL TEST

< BASIC INSPECTION >

[CVT: RE0F10B]

|                | Selector lever position |     | Expected problem location                                                     |
|----------------|-------------------------|-----|-------------------------------------------------------------------------------|
|                | "D"                     | "R" |                                                                               |
| Stall rotation | H                       | O   | • Forward clutch                                                              |
|                | O                       | H   | • Reverse brake                                                               |
|                | L                       | L   | • Engine and torque converter one-way clutch                                  |
|                | H                       | H   | • Line pressure low<br>• Primary pulley<br>• Secondary pulley<br>• Steel belt |

O: Stall speed within standard value position.

H: Stall speed is higher than standard value.

L: Stall speed is lower than standard value.

# LINE PRESSURE TEST

< BASIC INSPECTION >

[CVT: RE0F10B]

## LINE PRESSURE TEST


### Inspection and Judgment

INFOID:0000000011463732

#### INSPECTION

##### Line Pressure Test Port

A : Line pressure test port

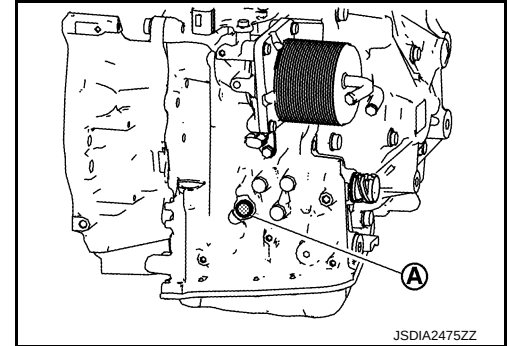

##### Line Pressure Test Procedure

1. Inspect the amount of engine oil and replenish if necessary.
2. Drive the car for about 10 minutes to warm it up so that the CVT fluid reaches in the range of 50 to 80°C (122 to 176°F), then inspect the amount of CVT fluid and replenish if necessary.


##### NOTE:

**The CVT fluid temperature rises in the range of 50 to 80°C (122 to 176°F) during 10 minutes of driving.**


3. After warming up CVT, remove the oil pressure detection plug and install the joint pipe adapter (SST: KV31103600) (A), adapter (SST: 25054000) (B), oil pressure gauge set (commercial service tool) (C).

##### CAUTION:

**When using the oil pressure gauge, be sure to use the O-ring attached to the oil pressure detection plug.**

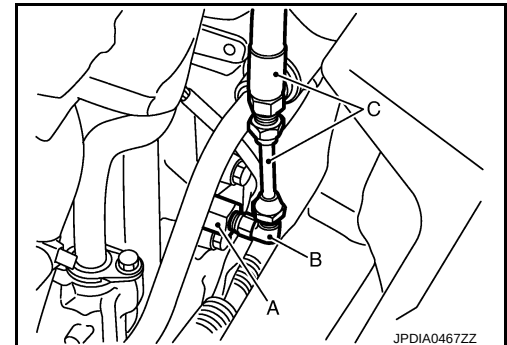

4. Securely engage the parking brake so that the tires do not turn.

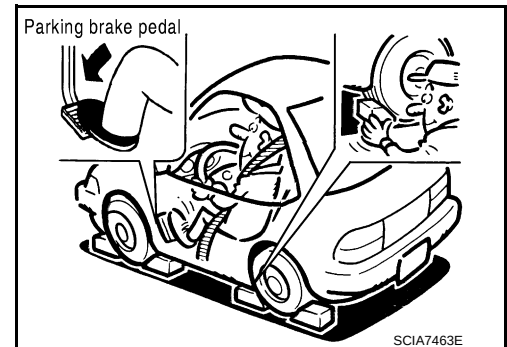

# LINE PRESSURE TEST

< BASIC INSPECTION >

[CVT: RE0F10B]

5. Start the engine, and then measure the line pressure at both idle and the stall speed.

**CAUTION:**

- Keep the brake pedal pressed all the way down during measurement.
- When measuring the line pressure at the stall speed, refer to [TM-223, "Inspection and Judgment"](#).


Line pressure : Refer to [TM-350, "Line Pressure"](#).

6. After the measurements are complete, install the oil pressure detection plug and tighten to the specified torque below.

 : 7.5 N·m (0.77 kg-m, 66 in-lb)

**CAUTION:**

- Never reuse O-ring.
- Apply CVT fluid to O-ring.

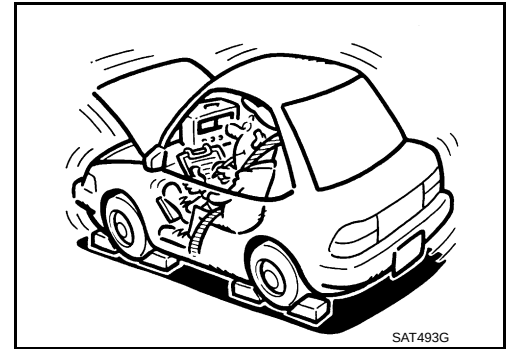

## JUDGMENT

| Judgment    |                                                                     | Possible cause                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------|---------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Idle speed  | Low for all positions ("P", "R", "N", "D")                          | Possible causes include malfunctions in the pressure supply system and low oil pump output.<br>For example <ul style="list-style-type: none"> <li>• Oil pump wear</li> <li>• Pressure regulator valve or plug sticking or spring fatigue</li> <li>• Oil strainer ⇒ oil pump ⇒ pressure regulator valve passage oil leak</li> <li>• Engine idle speed too low</li> </ul>                                                      |
|             | Only low for a specific position                                    | Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.                                                                                                                                                                                                                                                                           |
|             | High                                                                | Possible causes include a sensor malfunction or malfunction in the line pressure adjustment function.<br>For example <ul style="list-style-type: none"> <li>• Accelerator pedal position signal malfunction</li> <li>• CVT fluid temperature sensor malfunction</li> <li>• Line pressure solenoid malfunction (sticking in OFF state, filter clog, cut line)</li> <li>• Pressure regulator valve or plug sticking</li> </ul> |
| Stall speed | Line pressure does not rise higher than the line pressure for idle. | Possible causes include a sensor malfunction or malfunction in the pressure adjustment function.<br>For example <ul style="list-style-type: none"> <li>• Accelerator pedal position signal malfunction</li> <li>• TCM malfunction</li> <li>• Line pressure solenoid malfunction (shorting, sticking in ON state)</li> <li>• Pressure regulator valve or plug sticking</li> </ul>                                             |
|             | The pressure rises, but does not enter the standard position.       | Possible causes include malfunctions in the pressure supply system and malfunction in the pressure adjustment function.<br>For example <ul style="list-style-type: none"> <li>• Accelerator pedal position signal malfunction</li> <li>• Line pressure solenoid malfunction (sticking, filter clog)</li> <li>• Pressure regulator valve or plug sticking</li> </ul>                                                          |
|             | Only low for a specific position                                    | Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.                                                                                                                                                                                                                                                                           |

## ROAD TEST

## Description

INFOID:0000000011463733

## DESCRIPTION

- The purpose of the test is to determine overall performance of CVT and analyze causes of problems.
- The road test consists of the following three parts:
  1. "Check Before Engine Is Started" [TM-227](#).
  2. "Check at Idle" [TM-227](#).
  3. "Cruise Test" [TM-228](#).

## ROAD TEST PROCEDURE

1. Check before engine is started.



2. Check at idle.



3. Cruise test.

SAT786A

- Before road test, familiarize yourself with all test procedures and items to check.
- Perform tests on all items until specified symptom is found. Troubleshoot items the malfunctioning items after road test.



SAT496G

## Check before Engine Is Started

INFOID:0000000011463734

## 1.CHECK CVT INDICATOR LAMP

1. Park vehicle on flat surface.
2. Move selector lever to "P" position.
3. Turn ignition switch OFF. Wait at least 5 seconds.
4. Turn ignition switch ON. (Do not start engine.)

Is shift position indicator activated for about 2 seconds?

- YES >> 1. Turn ignition switch OFF.  
 2. Perform self-diagnosis and note NG items.  
 Refer to [TM-188, "CONSULT Function"](#).  
 3. Go to [TM-227, "Check at Idle"](#).
- NO >> Stop "Road Test". Refer to [TM-300, "Symptom Table"](#).

## Check at Idle

INFOID:0000000011463735

## 1.CHECK STARTING THE ENGINE

1. Park vehicle on flat surface.
2. Move selector lever to "P" or "N" position.
3. Turn ignition switch OFF.
4. Turn ignition switch to "START" position.

Is engine started?

- YES >> GO TO 2.
- NO >> Stop "Road Test". Refer to [TM-300, "Symptom Table"](#).

## 2.CHECK STARTING THE ENGINE

1. Turn ignition switch ON.
2. Move selector lever to "D", "M" or "R" position.
3. Turn ignition switch to "START" position.

# ROAD TEST

[CVT: RE0F10B]

## < BASIC INSPECTION >

### Is engine started?

- YES >> Stop "Road Test". Refer to [TM-300, "Symptom Table"](#).  
NO >> GO TO 3.

### 3.CHECK "P" POSITION FUNCTION

1. Move selector lever to "P" position.
2. Turn ignition switch OFF.
3. Release parking brake.
4. Push vehicle forward or backward.
5. Apply parking brake.

### Does vehicle move forward or backward?

- YES >> Refer to [TM-300, "Symptom Table"](#). Continue "Road Test".  
NO >> GO TO 4.

### 4.CHECK "N" POSITION FUNCTION

1. Start engine.
2. Move selector lever to "N" position.
3. Release parking brake.

### Does vehicle move forward or backward?

- YES >> Refer to [TM-300, "Symptom Table"](#). Continue "Road Test".  
NO >> GO TO 5.

### 5.CHECK SHIFT SHOCK

1. Apply foot brake.
2. Move selector lever to "R" position.

### Is there large shock when changing from "N" to "R" position?

- YES >> Refer to [TM-300, "Symptom Table"](#). Continue "Road Test".  
NO >> GO TO 6.

### 6.CHECK "R" POSITION FUNCTION

Release foot brake for several seconds.

### Does vehicle creep backward when foot brake is released?

- YES >> GO TO 7.  
NO >> Refer to [TM-300, "Symptom Table"](#). Continue "Road Test".

### 7.CHECK "D" POSITION FUNCTION

Move selector lever to "D" position and check if vehicle creeps forward.

### Does vehicle creep forward in all positions?

- YES >> Go to [TM-228, "Cruise Test"](#).  
NO >> Stop "Road Test". Refer to [TM-300, "Symptom Table"](#).

## Cruise Test

INFOID:000000011463736

### 1.CHECK VEHICLE SPEED WHEN SHIFTING GEARS — PART 1

1. Drive vehicle for approximately 10 minutes to warm engine oil and CVT fluid up to operating temperature.

**CVT fluid operating temperature: 50 – 80°C (122 – 176°F)**

2. Park vehicle on flat surface.
3. Move selector lever to "P" position.
4. Start engine.
5. Move selector lever to "D" position.



# ROAD TEST

< BASIC INSPECTION >

[CVT: RE0F10B]


6. Accelerate vehicle to 2/8-way throttle depressing accelerator pedal constantly.

 **Read vehicle speed and engine speed. Refer to [TM-350, "Shift Characteristics"](#).**

OK or NG

OK >> GO TO 2.

NG >> Refer to [TM-300, "Symptom Table"](#). Continue "Road Test".

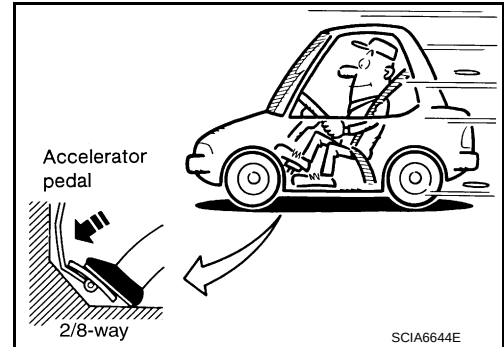

## 2.CHECK VEHICLE SPEED WHEN SHIFTING GEARS — PART 2


1. Park vehicle on flat surface.
2. Move selector lever to "D" position.
3. Accelerate vehicle to full depression depressing accelerator pedal constantly.

 **Read vehicle speed and engine speed. Refer to [TM-350, "Shift Characteristics"](#).**

OK or NG

OK >> GO TO 3.

NG >> Refer to [TM-300, "Symptom Table"](#). Continue "Road Test".

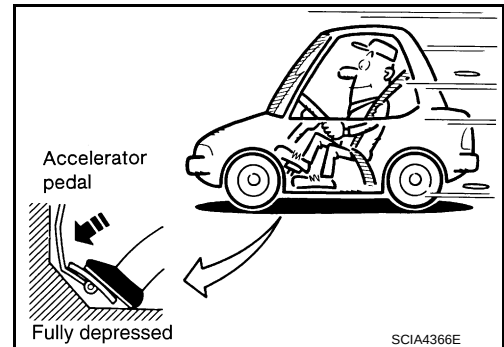

## 3.CHECK MANUAL MODE FUNCTION

Move to manual mode from "D" position.

Does it switch to manual mode?

YES >> GO TO 4.

NO >> Refer to [TM-300, "Symptom Table"](#). Continue "Road Test".

## 4.CHECK SHIFT-UP FUNCTION

During manual mode driving, is upshift from M1 → M2 → M3 → M4 → M5 → M6 performed?

 **Read the gear position. Refer to [TM-188, "CONSULT Function"](#).**

Is upshifting correctly performed?

YES >> GO TO 5.

NO >> Refer to [TM-300, "Symptom Table"](#). Continue "Road Test".

## 5.CHECK SHIFT-DOWN FUNCTION

During manual mode driving, is downshift from M6 → M5 → M4 → M3 → M2 → M1 performed?

 **Read the gear position. Refer to [TM-188, "CONSULT Function"](#).**

Is downshifting correctly performed?

YES >> GO TO 6.

NO >> Refer to [TM-300, "Symptom Table"](#). Continue "Road Test".

## 6.CHECK ENGINE BRAKE FUNCTION

Check engine brake.

Does engine braking effectively reduce speed in M1 position?

YES >> 1. Stop the vehicle.

2. Perform self-diagnosis. Refer to [TM-188, "CONSULT Function"](#).

NO >> Refer to [TM-300, "Symptom Table"](#). Then continue trouble diagnosis.


## CVT POSITION

## Inspection and Adjustment

INFOID:000000011463737


## INSPECTION

1. Place selector lever in "P" position, and turn ignition switch ON (engine stop).
2. Make sure that selector lever can be shifted to other than "P" position when brake pedal is depressed. Also make sure that selector lever can be shifted from "P" position only when brake pedal is depressed.
3. Move the selector lever and check for excessive effort, sticking, noise or rattle.
4. Confirm the selector lever stops at each position with the feel of engagement when it is moved through all the positions. Check that the actual position of the selector lever matches the position shown by the shift position indicator and the manual lever on the transaxle.
5. The method of operating the selector lever to individual positions correctly should be as shown.
6. When selector button is pressed in "P", "R" or "N" position without applying forward/backward force to selector lever, check button operation for sticking.
7. Confirm the back-up lamps illuminate only when selector lever is placed in the "R" position. Confirm the back-up lamps do not illuminate when the selector lever is pushed toward the "R" position when in the "P" or "N" position.
8. Confirm the engine can only be started with the selector lever in the "P" and "N" positions.
9. Make sure transaxle is locked completely in "P" position.
10. When selector lever is set to manual shift gate, make sure that manual mode is displayed on combination meter.  
Shift selector lever to "+" and "-" sides, and check that set shift position changes.

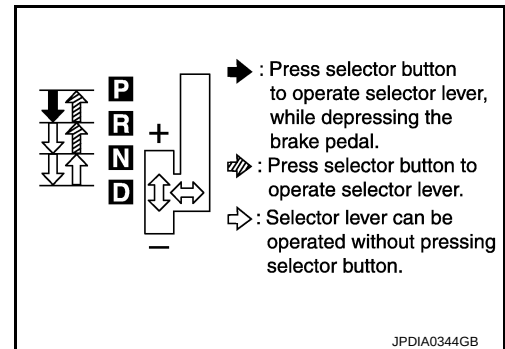

## ADJUSTMENT

1. Place selector lever in "P" position.  
**CAUTION:**  
**Turn wheels more than 1/4 rotations and apply the park lock.**
2. Loosen nut (A) and place manual lever (B) in "P" position.  
**CAUTION:**  
**Never apply any force to the manual lever.**
3. Tighten nut. Refer to [TM-316, "Removal and Installation"](#).  
**CAUTION:**  
**Fix the manual lever when tightening.**

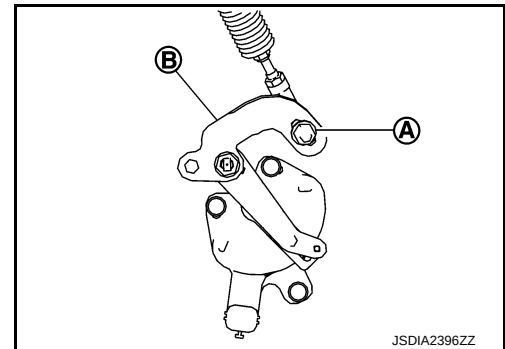

## CVT FLUID

## Changing

INFOID:0000000011463825

**CAUTION:****Replace drain plug gasket with new ones at the final stage of the operation when installing.**

1. Remove drain plug from oil pan.
2. Remove drain plug gasket from drain plug.
3. Install drain plug gasket to drain plug.

**CAUTION:****Never reuse drain plug gasket.**

4. Install drain plug to oil pan.

**Drain plug – tightening torque** : Refer to [TM-327, "Exploded View"](#).

5. Fill CVT fluid from CVT fluid charging pipe to the specified level.

**Recommended fluid and fluid capacity** : Refer to [MA-11, "Fluids and Lubricants"](#).**CAUTION:**

- Use only recommended CVT fluid. Never mix with other fluid.
- Using CVT fluid other than recommended CVT fluid will deteriorate in driveability and CVT durability, and may damage the CVT, which is not covered by the warranty.
- When filling CVT fluid, take care not to scatter heat generating parts such as exhaust.
- Sufficiently shake the container of CVT fluid before using.
- Delete CVT fluid deterioration date with CONSULT after changing CVT fluid.

6. With the engine warmed up, drive the vehicle in an urban area.

**NOTE:**

When ambient temperature is 20°C (68°F), it takes about 10 minutes for the CVT fluid to warm up to 50 to 80°C (122 to 176°F).

7. Check CVT fluid level and condition.
8. Repeat steps 1 to 5 if CVT fluid has been contaminated.
9. Select "Data Monitor" in "TRANSMISSION" using CONSULT.
10. Select "CONFORM CVTF DETERIORTN".
11. Select "Erase".

## U0100 LOST COMMUNICATION (ECM A)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

### DTC/CIRCUIT DIAGNOSIS

#### U0100 LOST COMMUNICATION (ECM A)

##### DTC Logic

INFOID:0000000011463738

##### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name            | DTC detection condition                                                                                                             | Possible causes                                                                                                                  |
|-------|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| U0100 | Lost Communication With ECM/PCM A | When the ignition switch is ON, TCM is unable to receive the CAN communications signal from ECM continuously for 2 seconds or more. | <ul style="list-style-type: none"><li>• ECM</li><li>• Harness or connector (CAN communication line is open or shorted)</li></ul> |

##### DTC CONFIRMATION PROCEDURE

###### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

###### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait for at least 5 seconds.
2. Check the first trip DTC.

Is "U0100" detected?

YES >> Go to [TM-232, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

##### Diagnosis Procedure

INFOID:0000000011463739

For the diagnosis procedure, refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).

## U1000 CAN COMM CIRCUIT

### Description

INFOID:0000000011463740

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H and CAN-L) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

### DTC Logic

INFOID:0000000011463741

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name | DTC detection condition                                                                                          | Possible causes                                                  |
|-------|------------------------|------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------|
| U1000 | CAN Communication Line | When the ignition switch is ON, TCM cannot send the CAN communication signal continuously for 2 seconds or more. | Harness or connector (CAN communication line is open or shorted) |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Run engine for at least 2 consecutive seconds at idle speed.
3. Select "Self Diagnostic Results" in "TRANSMISSION".

Is "U1000" detected?

- YES >> Go to [TM-233, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463742

For the diagnosis procedure, refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).

## U1010 CONTROL UNIT (CAN)

## Description

INFOID:0000000011463743

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H and CAN-L) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

## DTC Logic

INFOID:0000000011463744

## DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name        | DTC detection condition                                                     | Possible causes |
|-------|-------------------------------|-----------------------------------------------------------------------------|-----------------|
| U1010 | TCM Communication Malfunction | When detecting error during the initial diagnosis of CAN controller to TCM. | TCM             |

## DTC CONFIRMATION PROCEDURE

## 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

&gt;&gt; GO TO 2.

## 2. CHECK DTC DETECTION

 With CONSULT

1. Start the engine.
2. Run engine for at least 6 consecutive seconds at idle speed.
3. Select "Self Diagnostic Results" in "TRANSMISSION".

 With GST

Follow the procedure "With CONSULT".

Is "U1010" detected?

- YES >> Go to [TM-234, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000011463745

## 1. CHECK INTERMITTENT INCIDENT

Refer to [GI-44, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace the TCM. Refer to [TM-325, "Removal and Installation"](#).  
 NO >> Repair or replace damaged parts.

# P0703 BRAKE SWITCH B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0703 BRAKE SWITCH B

### Description

INFOID:0000000011463746

BCM detects ON/OFF state of the stop lamp switch and transmits the data to the CVT control unit via CAN communication by converting the data to a signal.

### DTC Logic

INFOID:0000000011463747

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name | DTC detection condition                                                                                                                                                                       | Possible causes                                                                                                                                                                                                                                                         |
|-------|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0703 | Brake Switch B Circuit | <ul style="list-style-type: none"><li>TCM detects malfunction in CAN communication between BCM.</li><li>TCM detects a state that ON/OFF of stop lamp switch signal is not switched.</li></ul> | <ul style="list-style-type: none"><li>Harness or connectors<ul style="list-style-type: none"><li>(Stop lamp switch, and BCM circuit are open or shorted.)</li><li>(CAN communication line is open or shorted.)</li></ul></li><li>Stop lamp switch</li><li>BCM</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "VEHICLE SPEED".
- Drive the vehicle.
- Maintain the following condition for 10 seconds or more.

VEHICLE SPEED : 30 km/h (19 MPH)

- Stop the vehicle.
- Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P0703" detected?

- YES >> Go to [TM-235, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463748

#### 1. CHECK STOP LAMP SWITCH CIRCUIT

- Turn ignition switch OFF.
- Disconnect stop lamp switch connector.
- Check voltage between stop lamp switch harness connector terminal and ground.

| +                |          | -      | Voltage         |
|------------------|----------|--------|-----------------|
| Stop lamp switch |          |        |                 |
| Connector        | Terminal |        |                 |
| E102             | 1        | Ground | Battery voltage |

Is the inspection result normal?

## P0703 BRAKE SWITCH B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

- YES >> GO TO 2.  
NO >> GO TO 6.

### 2.CHECK CIRCUIT BETWEEN STOP LAMP SWITCH AND BCM (PART 1)

1. Disconnect BCM connector.
2. Check continuity between stop lamp switch harness connector terminal and BCM harness connector terminal.

| Stop lamp switch |          | BCM       |          | Continuity |
|------------------|----------|-----------|----------|------------|
| Connector        | Terminal | Connector | Terminal |            |
| E102             | 2        | M68       | 9        | Existed    |

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace damaged parts.

### 3.CHECK CIRCUIT BETWEEN STOP LAMP SWITCH AND BCM (PART 2)

Check short circuit in harness between stop lamp switch harness connector terminal 2 and BCM harness connector terminal 9.

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Repair or replace damaged parts.

### 4.CHECK INSTALLATION POSITION OF STOP LAMP SWITCH

Check stop lamp switch mounting position. Refer to [BR-9, "Inspection and Adjustment"](#).

Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Adjust stop lamp switch mounting position.

### 5.CHECK STOP LAMP SWITCH

Check stop lamp switch. Refer to [TM-236, "Component Inspection \(Stop Lamp Switch\)"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).  
NO >> Repair or replace stop lamp switch.

### 6.DETECT MALFUNCTIONING ITEM

Check the following items:

- Open circuit or short circuit in harness between battery and stop lamp switch connector terminal 1. Refer to [PG-11, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).
- Battery
- 10A fuse [No.38, located in fuse block (J/B)]. Refer to [PG-78, "Fuse, Connector and Terminal Arrangement"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).  
NO >> Repair or replace damaged parts.

### Component Inspection (Stop Lamp Switch)

INFOID:0000000011463749

#### 1.CHECK STOP LAMP SWITCH

Check continuity between stop lamp switch connector terminals.

| Stop lamp switch |                       | Condition | Continuity  |
|------------------|-----------------------|-----------|-------------|
| Terminal         |                       |           |             |
| 1 - 2            | Depressed brake pedal |           | Existed     |
|                  | Released brake pedal  |           | Not existed |

Is the inspection result normal?

- YES >> INSPECTION END



## P0703 BRAKE SWITCH B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

NO >> Replace the stop lamp switch. Refer to [BR-20, "Exploded View"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0705 TRANSMISSION RANGE SENSOR A

### DTC Logic

INFOID:000000011463750

#### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name                            | DTC detection condition                                                                                                                | Possible causes                                                                                                                                                   |
|-------|---------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0705 | Transmission Range Sensor A Circuit (PRNDL Input) | <ul style="list-style-type: none"><li>Range signal is not input to TCM.</li><li>2 or more position signals are input to TCM.</li></ul> | <ul style="list-style-type: none"><li>Harness or connectors (Transmission range switches circuit is open or shorted.)</li><li>Transmission range switch</li></ul> |

#### DTC CONFIRMATION PROCEDURE

##### CAUTION:

Always drive vehicle at a safe speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PREPARATION BEFORE WORK (PART 2)

Perform function check of combination meter. Refer to [MWI-20, "On Board Diagnosis Function"](#).

>> GO TO 3.

#### 3. PERFORM FUNCTION CHECK

##### NOTE:

DTC cannot be identified through this inspection.

- Turn ignition switch ON.
- Check that the shift position indicator on the combination meter is displayed correctly when the selector lever is shifted to each position ("P", "R", "N", "D").

Is the check result normal?

YES >> Go to [TM-238, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011463751

#### 1. CHECK TRANSMISSION RANGE SWITCH POWER CIRCUIT

- Turn ignition switch OFF.
- Disconnect transmission range switch connector.
- Turn ignition switch ON.
- Check voltage between transmission range switch harness connector terminal and ground.

| +                         |          | –      | Condition            | Voltage     |
|---------------------------|----------|--------|----------------------|-------------|
| Transmission range switch |          |        |                      |             |
| Connector                 | Terminal |        |                      |             |
| F27                       | 3        | Ground | Ignition switch: ON  | 10 – 16 V   |
|                           |          |        | Ignition switch: OFF | Approx. 0 V |

Is the check result normal?

YES >> GO TO 2.

NO >> GO TO 6.

#### 2. CHECK HARNESS BETWEEN TCM AND TRANSMISSION RANGE SWITCH (PART 1)

- Turn ignition switch OFF.

# P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals and transmission range switch harness connector terminals.

| TCM       |          | Transmission range switch |          | Continuity |
|-----------|----------|---------------------------|----------|------------|
| Connector | Terminal | Connector                 | Terminal |            |
| F81       | 1        | F27                       | 5        | Existed    |
|           | 2        |                           | 6        |            |
|           | 3        |                           | 7        |            |
|           | 11       |                           | 4        |            |

Is the check result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

## 3.CHECK HARNESS BETWEEN TCM AND TRANSMISSION RANGE SWITCH (PART 2)

Check continuity between TCM harness connector terminals and ground.

| TCM       |          | —      | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F81       | 1        | Ground | Not existed |
|           | 2        |        |             |
|           | 3        |        |             |
|           | 11       |        |             |

Is the check result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

## 4.CHECK TRANSMISSION RANGE SWITCH MOUNTING POSITION

1. Remove control cable from manual lever. Refer to [TM-316, "Exploded View"](#).
2. Check transmission range switch mounting position. Refer to [TM-323, "Inspection and Adjustment"](#).

Is the check result normal?

YES >> GO TO 5.

NO >> Adjust transmission range switch mounting position.

## 5.CHECK TRANSMISSION RANGE SWITCH

1. Install control cable to manual lever. Refer to [TM-316, "Exploded View"](#).
2. Check transmission range switch. Refer to [TM-240, "Component Inspection \(Transmission Range Switch\)"](#).

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Replace transmission range switch.

## 6.CHECK HARNESS BETWEEN TRANSMISSION RANGE SWITCH AND IPDM E/R

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between transmission range switch harness connector terminal and IPDM E/R harness connector terminal.

| IPDM E/R  |          | Transmission range switch |          | Continuity |
|-----------|----------|---------------------------|----------|------------|
| Connector | Terminal | Connector                 | Terminal |            |
| E15       | 57       | F27                       | 3        | Existed    |

Is the check result normal?

YES >> GO TO 7.

# P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

NO >> Repair or replace damaged parts.

## 7.DETECT MALFUNCTIONING ITEM

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-42. "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Short circuit in harness between IPDM E/R harness connector terminal 57 and transmission range switch harness connector terminal 5.
- 10A fuse (No.55, IPDM E/R). Refer to [PG-80. "Fuse, Connector and Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-44. "Intermittent Incident"](#).

NO >> Repair or replace damaged parts.

## Component Inspection (Transmission Range Switch)

INFOID:0000000011463752

## 1.CHECK TRANSMISSION RANGE SWITCH

Check continuity between transmission range switch connector terminals.

| Transmission range switch | Condition                          | Continuity  |
|---------------------------|------------------------------------|-------------|
| Terminal                  |                                    |             |
| 1 – 2                     | Manual lever: "P" and "N" position | Existed     |
|                           | Other than the above               | Not existed |
| 3 – 4                     | Manual lever: "P" position         | Existed     |
|                           | Other than the above               | Not existed |
| 3 – 5                     | Manual lever: "R" position         | Existed     |
|                           | Other than the above               | Not existed |
| 3 – 6                     | Manual lever: "N" position         | Existed     |
|                           | Other than the above               | Not existed |
| 3 – 7                     | Manual lever: "D" position         | Existed     |
|                           | Other than the above               | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace transmission range switch. Refer to [TM-323. "Removal and Installation"](#).

# P0710 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0710 TRANSMISSION FLUID TEMPERATURE SENSOR A

### DTC Logic

INFOID:0000000011463753

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name                          | DTC detection condition                                                                                                                                                                                                                                                                                                      | Possible causes                                                                                                                                 |
|-------|-------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| P0710 | Transmission Fluid Temperature Sensor A Circuit | <ul style="list-style-type: none"><li>Detected value from CVT fluid temperature sensor received by TCM is less than 20°C (68°F) for a certain length of time.</li><li>CVT Fluid temperature sensor value that TCM receives is more than 180°C (356°F).</li></ul>                                                             | <ul style="list-style-type: none"><li>Harness or connectors (Sensor circuit is open or shorted.)</li><li>CVT fluid temperature sensor</li></ul> |
|       |                                                 | A/T fluid temperature does not rise to the specified temperature after driving for a certain period of time with the TCM-received fluid temperature sensor value between -40°C (-40°F) and 9°C (48.2°F).                                                                                                                     | <ul style="list-style-type: none"><li>Harness or connectors (Sensor circuit is stuck.)</li><li>A/T fluid temperature sensor</li></ul>           |
|       |                                                 | The following conditions are maintained for 5 minutes after the completion of engine diagnosis P0111, P0116, and P0196: <ul style="list-style-type: none"><li>A/T fluid temperature – Engine coolant temperature &gt; 53°C (127°F)</li><li>A/T fluid temperature – Engine coolant temperature &lt; -27°C (-16.6°F)</li></ul> | A/T fluid temperature sensor                                                                                                                    |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Always drive vehicle at a safe speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION (PART 1)

##### With CONSULT

- Start the engine.
- Maintain the following condition for 10 seconds or more.

Vehicle speed : 10 km/h (7 MPH) or more

- Stop the vehicle.
- Select "Self Diagnostic Results" in "TRANSMISSION".

##### With GST

Follow the procedure "With CONSULT".

##### Is "P0710" detected?

YES >> Go to [TM-242, "Diagnosis Procedure"](#).

NO >> GO TO 3.

#### 3. CHECK CVT FLUID TEMPERATURE SENSOR

- Turn ignition switch OFF.
- Disconnect CVT unit connector.
- Check resistance between CVT unit connector terminals.

# P0710 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

| CVT unit  |          | Condition                           | Resistance             |
|-----------|----------|-------------------------------------|------------------------|
| Connector | Terminal |                                     |                        |
| F209      | 17 – 19  | CVT fluid temperature: 20°C (68°F)  | Approx. 6.83 – 6.29 kΩ |
|           |          | CVT fluid temperature: 50°C (122°F) | Approx. 2.25 – 2.10 kΩ |
|           |          | CVT fluid temperature: 80°C (176°F) | Approx. 0.90 – 0.85 kΩ |

Is the inspection result normal?

YES (With CONSULT)>>GO TO 4.

YES (With GST)>>GO TO 5.

NO >> There is a malfunction of the CVT fluid temperature sensor. Replace the control valve. Refer to [TM-327, "Removal and Installation"](#).

## 4.CONFIRM CVT FLUID TEMPERATURE

### With CONSULT

1. Turn ignition switch OFF and cool the engine.
2. Turn ignition switch ON.

#### **CAUTION:**

**Never start the engine.**

3. Select "Data Monitor" in "TRANSMISSION".
4. Select "ATFTEMP COUNT".

Is the value of "ATFTEMP COUNT" 32 or more?

YES >> INSPECTION END

NO >> GO TO 5.

## 5.CHECK DTC DETECTION (PART 2)

### With CONSULT

1. Start the engine and wait for at least 4 minutes.
2. Drive the vehicle and maintain the following conditions for at least 10 minutes or more.

|                            |                           |
|----------------------------|---------------------------|
| Selector lever             | : "D" position            |
| Accelerator pedal position | : 1.0/8 or more           |
| Vehicle speed              | : 10 km/h (7 MPH) or more |

3. Stop the vehicle.
4. Select "Self Diagnostic Results" in "TRANSMISSION".

### With GST

1. Turn ignition switch OFF and cool the engine.
2. Start the engine and wait for at least 4 minutes.
3. Drive the vehicle and maintain the following conditions for at least 10 minutes or more.

|                            |                           |
|----------------------------|---------------------------|
| Selector lever             | : "D" position            |
| Accelerator pedal position | : 1.0/8 or more           |
| Vehicle speed              | : 10 km/h (7 MPH) or more |

4. Stop the vehicle.
5. Check the DTC.

Is "P0710" detected?

YES >> Go to [TM-242, "Diagnosis Procedure"](#).

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000011463754

## 1.CHECK CVT FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Disconnect CVT unit connector.
3. Check resistance between CVT unit connector terminals.

# P0710 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

| CVT unit  |          | Condition                           | Resistance             |
|-----------|----------|-------------------------------------|------------------------|
| Connector | Terminal |                                     |                        |
| F209      | 17 – 19  | CVT fluid temperature: 20°C (68°F)  | Approx. 6.83 – 6.29 kΩ |
|           |          | CVT fluid temperature: 50°C (122°F) | Approx. 2.25 – 2.10 kΩ |
|           |          | CVT fluid temperature: 80°C (176°F) | Approx. 0.90 – 0.85 kΩ |

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

## 2. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (CVT FLUID TEMPERATURE SENSOR) (PART 1)

1. Disconnect the TCM connector.
2. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F81       | 13       | F51       | 17       | Existed    |
|           | 25       |           | 19       |            |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

## 3. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (CVT FLUID TEMPERATURE SENSOR) (PART 2)

Check continuity between TCM harness connector terminals and ground.

| TCM       |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F81       | 13       | Ground | Not existed |
|           | 25       |        |             |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44. "Intermittent Incident"](#).

NO >> Repair or replace damaged parts.

## 4. CHECK TERMINAL CORD ASSEMBLY (PART 1)

1. Remove terminal cord assembly. Refer to [TM-327. "Exploded View"](#).
2. Check continuity between CVT unit harness connector terminals and control valve harness connector terminals.

| CVT unit  |          | Control valve |          | Continuity |
|-----------|----------|---------------|----------|------------|
| Connector | Terminal | Connector     | Terminal |            |
| F209      | 17       | F208          | 22       | Existed    |
|           | 19       |               | 21       |            |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

## 5. CHECK TERMINAL CORD ASSEMBLY (PART 2)

Check terminal cord assembly harness cladding for damage.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts.

## P0710 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

### 6. CHECK DTC (TCM)

#### With CONSULT

1. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-241, "DTC Logic"](#).
2. Select "Self Diagnostic Results" in "TRANSMISSION".

#### Is "P0710" detected?

YES-1 ("P0710" only)>>There is a malfunction of the CVT fluid temperature sensor. Replace the control valve. Refer to [TM-327, "Removal and Installation"](#).

YES-2 ("P0710" and other DTC)>>Replace the transaxle assembly. Refer to [TM-344, "Removal and Installation"](#).

NO >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).



# P0715 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0715 INPUT SPEED SENSOR A

### DTC Logic

INFOID:0000000011463755

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name               | DTC detection condition                                                                                                                                                                                 | Possible causes                                                                                                                         |
|-------|--------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| P0715 | Input/Turbine Speed Sensor A Circuit | <ul style="list-style-type: none"><li>Primary speed signal is not input to TCM</li><li>Primary pulley speed sensor value is less than 150 rpm while secondary pulley speed is 500 rpm or more</li></ul> | <ul style="list-style-type: none"><li>Harness or connectors (Sensor circuit is open or shorted.)</li><li>Primary speed sensor</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Always drive vehicle at a safe speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "SEC SPEED" and "VEHICLE SPEED".
- Drive the vehicle.
- Maintain the following conditions for 5 seconds or more.

|               |                           |
|---------------|---------------------------|
| SEC SPEED     | : 500 rpm or more         |
| VEHICLE SPEED | : 10 km/h (7 MPH) or more |

- Stop the vehicle.
- Select "Self Diagnostic Results" in "TRANSMISSION".

##### With GST

Follow the procedure "With CONSULT".

Is "P0715" detected?

- YES >> Go to [TM-245, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463756

#### 1. CHECK PRIMARY SPEED SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect primary speed sensor connector.
- Turn ignition switch ON.
- Check voltage between primary speed sensor harness connector terminal and ground.

| +                    |          | –      | Voltage     |
|----------------------|----------|--------|-------------|
| Primary speed sensor |          |        |             |
| Connector            | Terminal |        |             |
| F55                  | 3        | Ground | 10 V – 16 V |

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 5.


# P0715 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## 2. CHECK TCM INPUT SIGNAL

1. Turn ignition switch OFF.
2. Connect primary speed sensor connector.
3. Lift up the vehicle.
4. Start the engine.
5. Check frequency of primary speed sensor.
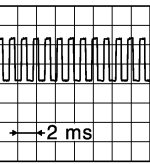
| TCM       |          |    | Condition                                                                                                                            | Frequency (Approx.)                                                                                                                                                            |
|-----------|----------|----|--------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Connector | +        | —  |                                                                                                                                      |                                                                                                                                                                                |
|           | Terminal |    |                                                                                                                                      |                                                                                                                                                                                |
| F81       | 33       | 25 | <ul style="list-style-type: none"><li>• Selector lever: “M<sup>1</sup>” position</li><li>• Vehicle speed: 20 km/h (12 MPH)</li></ul> | <div>720 Hz</div> <div>(V)<br/>6<br/>4<br/>2<br/>0</div> <div></div> <div>JPDIA0819ZZ</div> |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> GO TO 3.

## 3. CHECK CIRCUIT BETWEEN TCM AND PRIMARY SPEED SENSOR (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and primary speed sensor connector.
3. Check continuity between TCM harness connector terminals and primary speed sensor harness connector terminals.

| TCM       |          | Primary speed sensor |          | Continuity |
|-----------|----------|----------------------|----------|------------|
| Connector | Terminal | Connector            | Terminal |            |
| F81       | 25       | F55                  | 1        | Existed    |
|           | 33       |                      | 2        |            |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

## 4. CHECK CIRCUIT BETWEEN TCM AND PRIMARY SPEED SENSOR (PART 2)

Check continuity between TCM harness connector terminals and ground.

| TCM       |          | —      | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F81       | 25       | Ground | Not existed |
|           | 33       |        |             |

Is the inspection result normal?

YES >> Replace primary speed sensor. Refer to [TM-334, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

## 5. CHECK CIRCUIT BETWEEN PRIMARY SPEED SENSOR AND IPDM E/R

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between primary speed sensor harness connector terminal and IPDM E/R harness connector terminal.

## P0715 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

| Primary speed sensor |          | IPDM E/R  |          | Continuity |
|----------------------|----------|-----------|----------|------------|
| Connector            | Terminal | Connector | Terminal |            |
| F55                  | 3        | E15       | 57       | Existed    |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts.

### 6.DETECT MALFUNCTIONING ITEM

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-42. "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Short circuit in harness between IPDM E/R harness connector terminal 57 and primary speed sensor harness connector terminal 3.
- 10A fuse (No.55, located in IPDM E/R). Refer to [PG-80. "Fuse, Connector and Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-44. "Intermittent Incident"](#).

NO >> Repair or replace damaged parts.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# P0720 OUTPUT SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0720 OUTPUT SPEED SENSOR

### DTC Logic

INFOID:0000000011463757

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name      | DTC detection condition                                                                                                                                                                                              | Possible causes                                                                                                                        |
|-------|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| P0720 | Output Speed Sensor Circuit | <ul style="list-style-type: none"><li>Secondary speed sensor signal is not input to TCM.</li><li>Secondary pulley speed sensor value is less than 150 rpm while primary pulley speed is 1,000 rpm or more.</li></ul> | <ul style="list-style-type: none"><li>Harness or connectors (Sensor circuit is open or shorted.)</li><li>Output speed sensor</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "PRI SPEED" and "VEHICLE SPEED".
4. Drive the vehicle.
5. Maintain the following conditions for 5 seconds or more.

|               |                           |
|---------------|---------------------------|
| PRI SPEED     | : 1,000 rpm or more       |
| VEHICLE SPEED | : 10 km/h (7 MPH) or more |

6. Stop the vehicle.
7. Select "Self Diagnostic Results" in "TRANSMISSION".

##### With GST

Follow the procedure "With CONSULT".

Is "P0720" detected?

YES >> Go to [TM-248, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463758

#### 1. CHECK SECONDARY SPEED SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect secondary speed sensor connector.
3. Turn ignition switch ON.
4. Check voltage between secondary speed sensor harness connector terminal and ground.

| +                      |          | –      | Voltage     |
|------------------------|----------|--------|-------------|
| Secondary speed sensor |          |        |             |
| Connector              | Terminal |        |             |
| F19                    | 3        | Ground | 10 V – 16 V |

Is the inspection result normal?

YES >> GO TO 2.  
NO >> GO TO 5.


# P0720 OUTPUT SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## 2. CHECK TCM INPUT SIGNAL

1. Turn ignition switch OFF.
2. Connect secondary speed sensor connector.
3. Lift up the vehicle.
4. Start the engine.
5. Check frequency of secondary speed sensor.
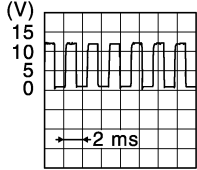
| TCM       |          |    | Condition                                                                                                                            | Frequency (Approx.)                                                                                                                                                                                          |
|-----------|----------|----|--------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Connector | +        | −  |                                                                                                                                      |                                                                                                                                                                                                              |
|           | Terminal |    |                                                                                                                                      |                                                                                                                                                                                                              |
| F81       | 34       | 25 | <ul style="list-style-type: none"><li>• Selector lever: “M<sup>1</sup>” position</li><li>• Vehicle speed: 20 km/h (12 MPH)</li></ul> | <div>480 Hz</div> <div><div>(V)</div><div>15</div><div>10</div><div>5</div><div>0</div><div></div><div>→ 2 ms</div></div> |

JPDIA0901ZZ

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> GO TO 3.

## 3. CHECK CIRCUIT BETWEEN TCM AND SECONDARY SPEED SENSOR (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and secondary speed sensor connector.
3. Check continuity between TCM harness connector terminals and secondary speed sensor harness connector terminals.

| TCM       |          | Secondary speed sensor |          | Continuity |
|-----------|----------|------------------------|----------|------------|
| Connector | Terminal | Connector              | Terminal |            |
| F81       | 25       | F19                    | 1        | Existed    |
|           | 34       |                        | 2        |            |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

## 4. CHECK CIRCUIT BETWEEN TCM AND SECONDARY SPEED SENSOR (PART 2)

Check continuity between TCM harness connector terminals and ground.

| TCM       |          | —      | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F81       | 25       | Ground | Not existed |
|           | 34       |        |             |

Is the inspection result normal?

YES >> Replace secondary speed sensor. Refer to [TM-334, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

## 5. CHECK CIRCUIT BETWEEN SECONDARY SPEED SENSOR AND IPDM E/R

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between secondary speed sensor harness connector terminal and IPDM E/R harness connector terminal.

## P0720 OUTPUT SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

| Secondary speed sensor |          | IPDM E/R  |          | Continuity |
|------------------------|----------|-----------|----------|------------|
| Connector              | Terminal | Connector | Terminal |            |
| F19                    | 3        | E15       | 57       | Existed    |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts.

### 6.DETECT MALFUNCTIONING ITEM

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-42. "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Short circuit in harness between IPDM E/R harness connector terminal 57 and secondary speed sensor harness connector terminal 3.
- 10A fuse (No.55, located in IPDM E/R). Refer to [PG-80. "Fuse, Connector and Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-44. "Intermittent Incident"](#).

NO >> Repair or replace damaged parts.

# P0725 ENGINE SPEED

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0725 ENGINE SPEED

### Description

INFOID:0000000011463759

The engine speed signal is transmitted from ECM to TCM by CAN communication line.

### DTC Logic

INFOID:0000000011463760

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name     | DTC detection condition                                                                                                                                                                                                                           | Possible causes                                                                                                                    |
|-------|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| P0725 | Engine Speed Input Circuit | <ul style="list-style-type: none"><li>TCM detects a malfunction of CAN communication between ECM.</li><li>A DTC is set if the engine speed (CAN communication) is less than 450 rpm when the primary pulley speed is 1,000 rpm or more.</li></ul> | <ul style="list-style-type: none"><li>Harness or connectors (The ECM to the TCM circuit is open or shorted.)</li><li>ECM</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "PRI SPEED".
- Drive the vehicle.
- Maintain the following condition for 10 seconds or more.

PRI SPEED : 1,000 rpm or more

- Stop the vehicle.
- Select "Self Diagnostic Results" in "TRANSMISSION".

##### Is "P0725" detected?

- YES >> Go to [TM-251, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463761

#### 1. CHECK DTC (ECM)

##### With CONSULT

- Turn ignition switch ON.
- Select "Self Diagnostic Results" in "ENGINE".

##### Is any DTC detected?

- YES >> Check DTC detected item. Refer to [EC-113, "DTC Index"](#).  
NO >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

# P0740 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0740 TORQUE CONVERTER

### DTC Logic

INFOID:000000011463762

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name               | DTC detection condition                                                                                                                                                                                                                                                                                                                                                                                  | Possible causes                                                                                                                                             |
|-------|--------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0740 | Torque Converter Clutch Circuit/Open | <ul style="list-style-type: none"><li>TCM monitor voltage value for torque converter clutch solenoid valve is less than 70% of target voltage value for torque converter clutch solenoid valve.</li><li>There is a large difference between TCM monitor current command value for torque converter clutch solenoid valve and current monitor value for torque converter clutch solenoid valve.</li></ul> | <ul style="list-style-type: none"><li>Harness or connectors (Solenoid circuit is open or shorted.)</li><li>Torque converter clutch solenoid valve</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK (PART 1)

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PREPARATION BEFORE WORK (PART 2)

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "ATF TEMP SEN".

Is the value of "ATF TEMP SEN" 2.17 V or less?

YES >> GO TO 3.

NO >> 1. Warm the transaxle.  
2. GO TO 3.

#### 3. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "VEHICLE SPEED".
- Drive the vehicle.
- Maintain the following condition for 5 seconds or more.

VEHICLE SPEED : 40 km/h (25 MPH) or more

- Stop the vehicle.
- Select "Self Diagnostic Results" in "TRANSMISSION".

##### With GST

Follow the procedure "With CONSULT".

Is "P0740" detected?

YES >> Go to [TM-252, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011463763

#### 1. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

- Turn ignition switch OFF.



# P0740 TORQUE CONVERTER

[CVT: RE0F10B]

## < DTC/CIRCUIT DIAGNOSIS >

2. Disconnect CVT unit connector.
3. Check continuity between CVT unit harness connector terminal and ground.

| CVT unit  |          | Ground | Condition                           | Resistance            |
|-----------|----------|--------|-------------------------------------|-----------------------|
| Connector | Terminal |        |                                     |                       |
| F209      | 12       | Ground | CVT fluid temperature: 20°C (68°F)  | Approx. 5.60 – 6.60 Ω |
|           |          |        | CVT fluid temperature: 50°C (122°F) | Approx. 6.76 – 6.87 Ω |
|           |          |        | CVT fluid temperature: 80°C (176°F) | Approx. 7.47 – 7.59 Ω |

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 4.

## 2. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (TORQUE CONVERTER CLUTCH SOLENOID VALVE) (PART 1)

1. Disconnect TCM harness connector.
2. Check continuity between TCM harness connector terminal and CVT unit harness connector terminal.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F81       | 38       | F51       | 12       | Existed    |

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace damaged parts.

## 3. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (TORQUE CONVERTER CLUTCH SOLENOID VALVE) (PART 2)

Check continuity between TCM harness connector terminal and ground.

| TCM       |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F81       | 38       | Ground | Not existed |

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).  
NO >> Repair or replace damaged parts.

## 4. CHECK TERMINAL CORD ASSEMBLY (PART 1)

1. Remove terminal cord assembly. Refer to [TM-327, "Exploded View"](#).
2. Check continuity between CVT unit harness connector terminals and control valve harness connector terminals.

| CVT unit  |          | Control valve |          | Continuity |
|-----------|----------|---------------|----------|------------|
| Connector | Terminal | Connector     | Terminal |            |
| F209      | 12       | F208          | 10       | Existed    |

Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Repair or replace damaged parts.

## 5. CHECK TERMINAL CORD ASSEMBLY (PART 2)

Check terminal cord assembly harness cladding for damage.

Is the inspection result normal?

- YES >> GO TO 6.  
NO >> Repair or replace damaged parts.

## P0740 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

### 6. CHECK DTC (TCM)

#### With CONSULT

1. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-252, "DTC Logic"](#).
2. Select "Self Diagnostic Results" in "TRANSMISSION".

#### Is "P0740" detected?

YES-1 (Only "P0740" is detected)>>There is a malfunction of the torque converter clutch solenoid valve.  
Replace the control valve. Refer to [TM-327, "Removal and Installation"](#).

YES-2 ("P0740" and other than "P0740" are detected)>>Replace the transaxle assembly. Refer to [TM-344, "Removal and Installation"](#).

NO >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

# P0744 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0744 TORQUE CONVERTER

### Description

INFOID:0000000011463764

This malfunction is detected when the torque converter clutch does not lock-up as instructed by the TCM. This is not only caused by electrical malfunction (circuits open or shorted), but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

### DTC Logic

INFOID:0000000011463765

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name                       | DTC detection condition                                                                                                       | Possible causes                                                                                                                                                |
|-------|----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0744 | Torque Converter Clutch Circuit Intermittent | Torque converter slip speed is more than a certain value (40 rpm + Vehicle speed × 0.8) while TCM is in lock-up command state | <ul style="list-style-type: none"><li>Hydraulic control circuit</li><li>Torque converter clutch solenoid valve</li><li>Lock-up select solenoid valve</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Always drive vehicle at a safe speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "RANGE", "ATF TEMP SEN", "ACC PEDAL OPEN" and "VEHICLE SPEED".
- Drive the vehicle.
- Maintain the following condition for 30 seconds or more.

|                |                    |
|----------------|--------------------|
| RANGE          | : D position       |
| ATF TEMP SEN   | : 2.03 V or less   |
| ACC PEDAL OPEN | : 0.0/8 – 1.0/8    |
| VEHICLE SPEED  | : 40 km/h (25 MPH) |

- Stop the vehicle.
- Select "Self Diagnostic Results" in "TRANSMISSION".

##### With GST

Follow the procedure "With CONSULT".

Is "P0744" detected?

- YES >> Go to [TM-255, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463766

#### 1. CHECK LINE PRESSURE

Perform line pressure test. Refer to [TM-225, "Inspection and Judgment"](#).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace damaged parts. Refer to [TM-225, "Inspection and Judgment"](#).

#### 2. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE

Check torque converter clutch solenoid valve. Refer to [TM-252, "DTC Logic"](#).

## P0744 TORQUE CONVERTER

[CVT: RE0F10B]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> GO TO 6.

### 3.CHECK LOCK-UP SELECT SOLENOID VALVE

Check lock-up select solenoid valve. Refer to [TM-288, "DTC Logic"](#).

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair or replace damaged parts.

### 4.CHECK PRIMARY SPEED SENSOR SYSTEM

Check primary speed sensor system. Refer to [TM-245, "DTC Logic"](#).

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair or replace damaged parts.

### 5.CHECK SECONDARY SPEED SENSOR SYSTEM

Check secondary speed sensor system. Refer to [TM-248, "DTC Logic"](#).

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair or replace damaged parts.

### 6.CHECK DTC (TCM)

#### With CONSULT

1. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-255, "DTC Logic"](#).
2. Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P0744" detected?

- YES-1 (Only "P0744" is detected)>>There is a malfunction of the torque converter clutch solenoid valve.  
Replace the control valve. Refer to [TM-327, "Removal and Installation"](#).
- YES-2 ("P0744" and other than "P0744" are detected)>>Replace the transaxle assembly. Refer to [TM-344, "Removal and Installation"](#).
- NO >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

# P0745 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0745 PRESSURE CONTROL SOLENOID A

### DTC Logic

INFOID:0000000011463767

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name      | DTC detection condition                                                                                                                                                                                                                                                                                                                                                              | Possible causes                                                                                                                                   |
|-------|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| P0745 | Pressure Control Solenoid A | <ul style="list-style-type: none"><li>TCM monitor voltage value for torque converter clutch solenoid valve is less than 70% of target voltage value for torque converter clutch solenoid valve.</li><li>There is a large difference between TCM current monitor command value for line pressure solenoid valve and current monitor value for line pressure solenoid valve.</li></ul> | <ul style="list-style-type: none"><li>Harness or connectors (Solenoid circuit is open or shorted.)</li><li>Line pressure solenoid valve</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Always drive vehicle at a safe speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Drive the vehicle for 10 seconds or more.
- Stop the vehicle.
- Select "Self Diagnostic Results" in "TRANSMISSION".

##### With GST

Follow the procedure "With CONSULT".

##### Is "P0745" detected?

YES >> Go to [TM-257, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463768

#### 1. CHECK LINE PRESSURE SOLENOID VALVE

- Turn ignition switch OFF.
- Disconnect CVT unit connector.
- Check resistance between CVT unit connector terminal and ground.

| CVT unit  |          | Ground | Condition                           | Resistance            |
|-----------|----------|--------|-------------------------------------|-----------------------|
| Connector | Terminal |        |                                     |                       |
| F209      | 2        | Ground | CVT fluid temperature: 20°C (68°F)  | Approx. 5.60 – 6.60 Ω |
|           |          |        | CVT fluid temperature: 50°C (122°F) | Approx. 6.76 – 6.87 Ω |
|           |          |        | CVT fluid temperature: 80°C (176°F) | Approx. 7.47 – 7.59 Ω |

##### Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

#### 2. CHECK CIRCUIT BETWEEN TCM AND LINE PRESSURE SOLENOID VALVE (PART 1)

- Disconnect TCM connector.
- Check continuity between TCM harness connector terminal and CVT unit harness connector terminal.

## P0745 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F81       | 40       | F51       | 2        | Existed    |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

### 3. CHECK CIRCUIT BETWEEN TCM AND LINE PRESSURE SOLENOID VALVE (PART 2)

Check continuity between TCM harness connector terminal and ground.

| TCM       |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F81       | 40       | Ground | Not existed |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace damaged parts.

### 4. CHECK TERMINAL CORD ASSEMBLY (PART 1)

1. Remove terminal cord assembly. Refer to [TM-327, "Exploded View"](#).
2. Check continuity between CVT unit harness connector terminal and control valve harness connector terminal.

| CVT unit  |          | Control valve |          | Continuity |
|-----------|----------|---------------|----------|------------|
| Connector | Terminal | Connector     | Terminal |            |
| F209      | 2        | F208          | 8        | Existed    |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

### 5. CHECK TERMINAL CORD ASSEMBLY (PART 2)

Check terminal cord assembly harness cladding for damage.

Is the inspection result normal?

YES >> Replace the transaxle assembly. Refer to [TM-344, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

# P0746 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0746 PRESSURE CONTROL SOLENOID A

### Description

INFOID:0000000011463769

The line pressure solenoid valve regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

### DTC Logic

INFOID:0000000011463770

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name                            | DTC detection condition                              | Possible causes                                                                                                                                                                       |
|-------|---------------------------------------------------|------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0746 | Pressure Control Solenoid A Performance/Stuck Off | TCM detects a state that gear ratio is more than 2.7 | <ul style="list-style-type: none"><li>Line pressure solenoid fluid circuit</li><li>Line pressure solenoid valve</li><li>Primary speed sensor</li><li>Secondary speed sensor</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Always drive vehicle at a safe speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "ENG SPEED SIG", "PRI SPEED" and "VEHICLE SPEED".
- Drive the vehicle.
- Maintain the following condition for 1 second or more.

|               |                           |
|---------------|---------------------------|
| ENG SPEED SIG | : 600 rpm or more         |
| PRI SPEED     | : 500 rpm or more         |
| VEHICLE SPEED | : 10 km/h (7 MPH) or more |

- Stop the vehicle.
- Select "Self Diagnostic Results" in "TRANSMISSION".

##### With GST

Follow the procedure "With CONSULT".

##### Is "P0746" detected?

- YES >> Go to [TM-259, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463771

#### 1. CHECK LINE PRESSURE

Perform line pressure test. Refer to [TM-225, "Inspection and Judgment"](#).

##### Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace damaged parts. Refer to [TM-225, "Inspection and Judgment"](#).

#### 2. CHECK LINE PRESSURE SOLENOID VALVE

Check line pressure solenoid valve. Refer to [TM-257, "DTC Logic"](#).

##### Is the inspection result normal?

## P0746 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

- YES >> GO TO 3.  
NO >> Repair or replace damaged parts.

### 3.CHECK PRIMARY SPEED SENSOR SYSTEM

---

Check primary speed sensor system. Refer to [TM-245, "DTC Logic"](#).

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Repair or replace damaged parts.

### 4.CHECK SECONDARY SPEED SENSOR SYSTEM

---

Check secondary speed sensor system. Refer to [TM-248, "DTC Logic"](#).

Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Repair or replace damaged parts.

### 5.CHECK INTERMITTENT INCIDENT

---

Refer to [GI-44, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace transaxle assembly. Refer to [TM-344, "Removal and Installation"](#).  
NO >> Repair or replace damaged parts.



# P0776 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0776 PRESSURE CONTROL SOLENOID B

### Description

INFOID:0000000011463772

The secondary pressure solenoid valve regulates the secondary pressure to suit the driving condition in response to a signal sent from the TCM.

### DTC Logic

INFOID:0000000011463773

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name                            | DTC detection condition                                                                                       | Possible causes                                                                                                                                                                                                            |
|-------|---------------------------------------------------|---------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0776 | Pressure Control Solenoid B Performance/Stuck Off | Difference of secondary pressure target value of TCM and secondary pressure actual value is more than 1.2 MPa | <ul style="list-style-type: none"><li>Secondary pressure solenoid valve</li><li>Secondary pressure sensor</li><li>Secondary pressure solenoid valve oil circuit</li><li>Line pressure solenoid valve oil circuit</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "RANGE", "VIGN SEN", "ATF TEMP SEN", "ACC PEDAL OPEN" and "VEHICLE SPEED".
- Drive the vehicle.
- Maintain the following condition for 5 seconds or more.

|                |                           |
|----------------|---------------------------|
| RANGE          | : "D" position            |
| VING SEN       | : 10 V or more            |
| ATF TEMP SEN   | : 2.03 – 0.16 V           |
| ACC PEDAL OPEN | : 1.0/8 or more           |
| VEHICLE SPEED  | : 10 km/h (7 MPH) or more |

- Stop the vehicle.
- Select "Self Diagnostic Results" in "TRANSMISSION".

##### With GST

Follow the procedure "With CONSULT".

#### Is "P0776" detected?

- YES >> Go to [TM-261. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463774

#### 1. CHECK LINE PRESSURE

Perform line pressure test. Refer to [TM-225. "Inspection and Judgment"](#).

#### Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace damaged parts. Refer to [TM-225. "Inspection and Judgment"](#).

#### 2. CHECK SECONDARY PRESSURE SOLENOID VALVE

## P0776 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

Check secondary pressure solenoid valve. Refer to [TM-263, "DTC Logic"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

### 3.CHECK SECONDARY PRESSURE SENSOR SYSTEM

Check secondary pressure sensor system. Refer to [TM-271, "DTC Logic"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

### 4.CHECK INTERMITTENT INCIDENT

Refer to [GI-44, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace transaxle assembly. Refer to [TM-344, "Removal and Installation"](#)

NO >> Repair or replace damaged parts.

# P0778 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0778 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:0000000011463775

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name                 | DTC detection condition                                                                                                                                                                                                                                                                                                                                                                     | Possible causes                                                                                                                                      |
|-------|----------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0778 | Pressure Control Solenoid B Electrical | <ul style="list-style-type: none"><li>TCM monitor voltage value for torque secondary pressure solenoid valve is less than 70% of target voltage value for secondary pressure solenoid valve.</li><li>There is a large difference between TCM current monitor command value for secondary pressure solenoid valve and current monitor value for secondary pressure solenoid valve.</li></ul> | <ul style="list-style-type: none"><li>Harness or connectors (Sensor circuit is open or shorted.)</li><li>Secondary pressure solenoid valve</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Always drive vehicle at a safe speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Drive the vehicle for 10 seconds or more.
- Stop the vehicle.
- Select "Self Diagnostic Results" in "TRANSMISSION".

##### With GST

Follow the procedure "With CONSULT".

Is "P0778" detected?

- YES >> Go to [TM-263, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463776

#### 1. CHECK SECONDARY PRESSURE SOLENOID VALVE

- Turn ignition switch OFF.
- Disconnect CVT unit connector.
- Check resistance between CVT unit connector terminal and ground.

| CVT unit  |          | Ground | Condition                           | Resistance            |
|-----------|----------|--------|-------------------------------------|-----------------------|
| Connector | Terminal |        |                                     |                       |
| F209      | 3        | Ground | CVT fluid temperature: 20°C (68°F)  | Approx. 5.60 – 6.60 Ω |
|           |          |        | CVT fluid temperature: 50°C (122°F) | Approx. 6.76 – 6.87 Ω |
|           |          |        | CVT fluid temperature: 80°C (176°F) | Approx. 7.47 – 7.59 Ω |

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 4.

#### 2. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (SECONDARY PRESSURE SOLENOID VALVE) (PART 1)

## P0778 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

1. Disconnect TCM connector.
2. Check continuity between TCM harness connector terminal and CVT unit harness connector terminal.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F81       | 39       | F51       | 3        | Existed    |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

### 3. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (SECONDARY PRESSURE SOLENOID VALVE) (PART 2)

Check continuity between TCM harness connector terminal and ground.

| TCM       |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F81       | 39       | Ground | Not existed |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace damaged parts.

### 4. CHECK TERMINAL CORD ASSEMBLY (PART 1)

1. Remove terminal cord assembly. Refer to [TM-327, "Exploded View"](#).
2. Check continuity between CVT unit harness connector terminal and control valve harness connector terminal.

| CVT unit  |          | Control valve |          | Continuity |
|-----------|----------|---------------|----------|------------|
| Connector | Terminal | Connector     | Terminal |            |
| F209      | 3        | F208          | 9        | Existed    |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

### 5. CHECK TERMINAL CORD ASSEMBLY (PART 2)

Check terminal cord assembly harness cladding for damage.

Is the inspection result normal?

YES >> Replace the transaxle assembly. Refer to [TM-344, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

# P0826 UP AND DOWN SHIFT SW

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0826 UP AND DOWN SHIFT SW

### DTC Logic

INFOID:0000000011463777

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name           | DTC detection condition                                                                                                                                                                                                          | Possible causes                                                                                                                                                                                                                                                                                                                                                                 |
|-------|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0826 | Up and Down Shift Switch Circuit | <ul style="list-style-type: none"><li>When an impossible pattern of switch signals is detected, a malfunction is detected.</li><li>When shift up/down signal of paddle shifter continuously remains ON for 60 seconds.</li></ul> | <ul style="list-style-type: none"><li>Manual mode select switch</li><li>Manual mode position select switch</li><li>Combination meter</li><li>Harness or connectors</li><li>(Manual mode switch circuit are open or shorted.)</li><li>(Paddle shifter switch circuit are open or shorted.)</li><li>(CAN communication line is open or shorted.)</li><li>Paddle shifter</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION (PART 1)

##### With CONSULT

- Start the engine.
- Shift the selector lever to "D" position and wait for 60 seconds or more.
- Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P0826" detected?

- YES >> Go to [TM-266, "Diagnosis Procedure"](#).  
NO >> GO TO 3.

#### 3. CHECK DTC DETECTION (PART 2)

##### With CONSULT

- Shift the selector lever to manual shift gate and wait for 1 second or more.
- Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P0826" detected?

- YES >> Go to [TM-266, "Diagnosis Procedure"](#).  
NO >> GO TO 4.

#### 4. CHECK DTC DETECTION (PART 3)

##### With CONSULT

- Shift the selector lever to "UP side (+ side)" and wait for 1 second or more.
- Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P0826" detected?

- YES >> Go to [TM-266, "Diagnosis Procedure"](#).  
NO >> GO TO 5.

#### 5. CHECK DTC DETECTION (PART 4)

##### With CONSULT

- Shift the selector lever to "DOWN side (- side)" and wait for 1 second or more.
- Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P0826" detected?

- YES >> Go to [TM-266, "Diagnosis Procedure"](#).

NO &gt;&gt; INSPECTION END

## Diagnosis Procedure

INFOID:0000000011463778

## 1. CHECK DTC (COMBINATION METER)

 With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Results" in "METER/M&A".

Is any DTC detected?YES >> Check DTC detected item. Refer to [MWI-32, "DTC Index"](#).

NO &gt;&gt; GO TO 2.

## 2. CHECK MANUAL MODE SWITCH SIGNALS

 With CONSULT

1. Turn ignition switch ON.
2. Select "Data Monitor" in "TRANSMISSION".
3. Check the On/Off operations of each monitor item.

| Item name          | Monitor item | Condition                           | Status |
|--------------------|--------------|-------------------------------------|--------|
| Manual mode switch | MMODE        | Manual shift gate position          | On     |
|                    |              | Other than the above                | Off    |
|                    | NONMMODE     | Manual shift gate position          | Off    |
|                    |              | Other than the above                | On     |
|                    | UPLVR        | Selector lever: UP (+ side)         | On     |
|                    |              | Other than the above                | Off    |
|                    | DOWNLVR      | Selector lever: DOWN (– side)       | On     |
|                    |              | Other than the above                | Off    |
| Paddle shifter     | STRDWNSW     | Pressed paddle shifter (shift-down) | On     |
|                    |              | Released paddle shifter             | Off    |
|                    | STRUPSW      | Pressed paddle shifter (shift-up)   | On     |
|                    |              | Released paddle shifter             | Off    |

 Without CONSULT

Drive vehicle in the manual mode, and confirm that the actual gear position and the meter's indication of the position mutually coincide when the selector lever and paddle shifter\* are shifted to the "+" (up)" or "– (down)" side [1st ⇔ 8th gear].

Is the inspection result normal?YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO-1 (Manual mode switch is abnormal)&gt;&gt;GO TO 3.

NO-2 (Paddle shifter is abnormal)&gt;&gt;GO TO 8.

## 3. CHECK MANUAL MODE SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect CVT shift selector connector.
3. Turn ignition switch ON.
4. Check voltage between CVT shift selector harness connector terminal and ground.

## P0826 UP AND DOWN SHIFT SW

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

| +                  |          | -      | Condition            | Voltage<br>(Approx.) |
|--------------------|----------|--------|----------------------|----------------------|
| CVT shift selector |          |        |                      |                      |
| Connector          | Terminal |        |                      |                      |
| M57                | 7        | Ground | Ignition switch: ON  | 12 V                 |
|                    |          |        | Ignition switch: OFF | 0 V                  |
|                    | 8        |        | Ignition switch: ON  | 12 V                 |
|                    |          |        | Ignition switch: OFF | 0 V                  |
|                    | 9        |        | Ignition switch: ON  | 12 V                 |
|                    |          |        | Ignition switch: OFF | 0 V                  |
|                    | 11       |        | Ignition switch: ON  | 12 V                 |
|                    |          |        | Ignition switch: OFF | 0 V                  |

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 5.

### 4.CHECK MANUAL MODE SWITCH

1. Turn ignition switch OFF.
2. Check manual mode switch. Refer to [TM-269, "Component Inspection \(Manual Mode Switch\)"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace damaged parts.

### 5.CHECK CIRCUIT BETWEEN CVT SHIFT SELECTOR AND COMBINATION METER (PART 1)

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between CVT shift selector harness connector terminals and combination meter harness connector terminals.

| CVT shift selector |          | Combination meter |          | Continuity |
|--------------------|----------|-------------------|----------|------------|
| Connector          | Terminal | Connector         | Terminal |            |
| M57                | 7        | M34               | 36       | Existed    |
|                    | 8        |                   | 16       |            |
|                    | 9        |                   | 14       |            |
|                    | 11       |                   | 37       |            |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts.

### 6.CHECK CIRCUIT BETWEEN CVT SHIFT SELECTOR AND COMBINATION METER (PART 2)

Check continuity between CVT shift selector harness connector terminals and ground.

| CVT shift selector |          | —      | Continuity  |
|--------------------|----------|--------|-------------|
| Connector          | Terminal |        |             |
| M57                | 7        | Ground | Not existed |
|                    | 8        |        |             |
|                    | 9        |        |             |
|                    | 11       |        |             |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

## P0826 UP AND DOWN SHIFT SW

[CVT: RE0F10B]

### < DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace damaged parts.

### 7.CHECK GROUND CIRCUIT

Check continuity between CVT shift selector harness connector terminal and ground.

| CVT shift selector |          | —      | Continuity |
|--------------------|----------|--------|------------|
| Connector          | Terminal |        |            |
| M57                | 10       | Ground | Existed    |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace damaged parts.

### 8.CHECK PADDLE SHIFTER

1. Turn ignition switch OFF.
2. Disconnect paddle shifter connector.
3. Turn ignition switch ON.
4. Check voltage between paddle shifter side harness connector terminals.

| Paddle shifter |          |   | Voltage (Approx.) |
|----------------|----------|---|-------------------|
| Connector      | Terminal |   |                   |
| M96            | 3        | 1 | Battery voltage   |
| M97            | 3        | 1 |                   |

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 11.

### 9.CHECK PADDLE SHIFTER

Check paddle shifter. Refer to [TM-270, "Component Inspection \(Paddle Shifter\)"](#).

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair or replace damaged parts.

### 10.CHECK GROUND CIRCUIT

Check continuity between paddle shifter vehicle side harness connector terminal and ground.

| Paddle shifter |          | Ground | Continuity |
|----------------|----------|--------|------------|
| Connector      | Terminal |        |            |
| M96            | 1        |        | Existed    |
| M97            | 1        |        |            |

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace damaged parts.

### 11.CHECK POWER SOURCE CIRCUIT

Check voltage between paddle shifter vehicle side harness connector terminal and ground.

| Paddle shifter |          | Ground | Voltage (Approx.) |
|----------------|----------|--------|-------------------|
| Connector      | Terminal |        |                   |
| M96            | 3        |        | 0 V               |
| M97            | 3        |        |                   |

Is the inspection result normal?

YES >> GO TO 12.



## P0826 UP AND DOWN SHIFT SW

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

NO >> Repair or replace damaged parts.

### 12. CHECK HARNESS BETWEEN PADDLE SHIFTER AND COMBINATION METER (PART 1)

1. Disconnect combination meter connector.
2. Check continuity between paddle shifter vehicle side harness connector terminals and combination meter vehicle side harness connector terminals.

| Paddle shifter |          | Combination meter |          | Continuity |
|----------------|----------|-------------------|----------|------------|
| Connector      | Terminal | Connector         | Terminal |            |
| M96            | 3        | M34               | 26       | Existed    |
| M97            | 3        |                   | 5        |            |

Is the inspection result normal?

YES >> GO TO 13.

NO >> Repair or replace damaged parts.

### 13. CHECK HARNESS BETWEEN PADDLE SHIFTER AND COMBINATION METER (PART 2)

Check continuity between paddle shifter vehicle side harness connector terminals and ground.

| Paddle shifter |          | Ground | Continuity  |
|----------------|----------|--------|-------------|
| Connector      | Terminal |        |             |
| M96            | 3        |        | Not existed |
| M97            | 3        |        |             |

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair or replace damaged parts.

### 14. DETECT MALFUNCTIONING ITEMS

Check TCM connector pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace TCM. Refer to [TM-325, "Exploded View"](#).

NO >> Repair or replace damaged parts.

## Component Inspection (Manual Mode Switch)

INFOID:0000000011463779

### MANUAL MODE SWITCH

#### 1. MANUAL MODE SWITCH

Check continuity between CVT shift selector connector terminals.

| CVT shift selector | Condition                            | Continuity  |
|--------------------|--------------------------------------|-------------|
| Terminal           |                                      |             |
| 7 – 10             | Manual shift gate position (neutral) | Existed     |
|                    | Other than the above                 | Not existed |
| 8 – 10             | Selector lever: DOWN (– side)        | Existed     |
|                    | Other than the above                 | Not existed |
| 9 – 10             | Selector lever: UP (+ side)          | Existed     |
|                    | Other than the above                 | Not existed |
| 11 – 10            | Manual shift gate position           | Not existed |
|                    | Other than the above                 | Existed     |

Is the inspection result normal?

YES >> INSPECTION END

## P0826 UP AND DOWN SHIFT SW

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

NO >> There is a malfunction of the manual mode switch. Replace the CVT shift selector assembly.  
Refer to [TM-313, "Removal and Installation"](#).

### Component Inspection (Paddle Shifter)

INFOID:0000000011463780

#### 1.CHECK PADDLE SHIFTER

Check continuity between paddle shifter connector terminals.

| Paddle shifter<br>Terminal |   | Condition                           | Continuity  |
|----------------------------|---|-------------------------------------|-------------|
| 1                          | 3 | Pressed paddle shifter (shift-up)   | Existed     |
|                            |   | Released paddle shifter             | Not existed |
| 1                          | 3 | Pressed paddle shifter (shift-down) | Existed     |
|                            |   | Released paddle shifter             | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace damaged parts.

# P0840 TRANSMISSION FLUID PRESSURE SEN/SW A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0840 TRANSMISSION FLUID PRESSURE SEN/SW A

### DTC Logic

INFOID:0000000011463781

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name                              | DTC detection condition                                                                                                                                                                               | Possible causes                                                                                                                                                 |
|-------|-----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0840 | Transmission Fluid Pressure Sensor/Switch A Circuit | <ul style="list-style-type: none"><li>Secondary pressure sensor voltage that TCM receives is more than 4.7 V</li><li>Secondary pressure sensor voltage that TCM receives is less than 0.9 V</li></ul> | <ul style="list-style-type: none"><li>Harness or connectors (Secondary pressure sensor circuit is open or shorted.)</li><li>Secondary pressure sensor</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "ATF TEMP SEN".
- Maintain the following condition for 5 seconds or more.

ATF TEMP SEN : 2.41 V or less

- Select "Self Diagnostic Results" in "TRANSMISSION".

##### With GST

Follow the procedure "With CONSULT".

Is "P0840" detected?

YES >> Go to [TM-271, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463782

#### 1. CHECK TCM INPUT SIGNAL

- Start the engine.
- Check voltage between TCM connector terminals.

| TCM       |          |    | Condition                                                                                         | Voltage<br>(Approx.) |
|-----------|----------|----|---------------------------------------------------------------------------------------------------|----------------------|
| Connector | +        | —  |                                                                                                   |                      |
|           | Terminal |    |                                                                                                   |                      |
| F81       | 15       | 25 | <ul style="list-style-type: none"><li>• Selector lever : “N” position</li><li>• At idle</li></ul> | 1.0 V                |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> GO TO 2.

#### 2. CHECK SENSOR POWER AND SENSOR GROUND

Check voltage between TCM connector terminals.

# P0840 TRANSMISSION FLUID PRESSURE SEN/SW A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

| TCM       |          |    | Condition            | Voltage<br>(Approx.) |
|-----------|----------|----|----------------------|----------------------|
| Connector | +        | –  |                      |                      |
|           | Terminal |    |                      |                      |
| F81       | 26       | 25 | Ignition switch: ON  | 5.0 V                |
|           |          |    | Ignition switch: OFF | 0 V                  |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Go to [TM-278, "Diagnosis Procedure"](#).

## 3.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (SECONDARY PRESSURE SENSOR) (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F81       | 15       | F51       | 23       | Existed    |
|           | 25       |           | 19       |            |
|           | 26       |           | 20       |            |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

## 4.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (SECONDARY PRESSURE SENSOR) (PART 2)

Check continuity between TCM harness connector terminals and ground.

| TCM       |          | —      | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F81       | 15       | Ground | Not existed |
|           | 25       |        |             |
|           | 26       |        |             |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

## 5.CHECK TERMINAL CORD ASSEMBLY (PART 1)

1. Remove terminal cord assembly. Refer to [TM-327, "Exploded View"](#).
2. Check continuity between CVT unit harness connector terminals and control valve harness connector terminals.

| CVT unit  |          | Control valve |          | Continuity |
|-----------|----------|---------------|----------|------------|
| Connector | Terminal | Connector     | Terminal |            |
| F209      | 19       | F208          | 21       | Existed    |
|           | 20       |               | 19       |            |
|           | 23       |               | 20       |            |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts.

## 6.CHECK TERMINAL CORD ASSEMBLY (PART 2)

## P0840 TRANSMISSION FLUID PRESSURE SEN/SW A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

Check terminal cord assembly harness cladding for damage.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace damaged parts.

### 7. CHECK DTC (TCM)

#### With CONSULT

1. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-271, "DTC Logic"](#).

2. Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P0840" detected?

YES-1 (Only "P0840" is detected)>>There is a malfunction of the secondary pressure sensor. Replace the control valve. Refer to [TM-327, "Removal and Installation"](#).

YES-2 ("P0840" and other than "P0840" are detected)>>Replace the transaxle assembly. Refer to [TM-344, "Removal and Installation"](#).

NO >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# P0841 TRANSMISSION FLUID PRESSURE SEN/SW A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0841 TRANSMISSION FLUID PRESSURE SEN/SW A

### Description

INFOID:0000000011463783

Using the engine load (throttle position), the primary pulley revolution speed, and the secondary pulley revolution speed as input signal, TCM changes the operating pressure of the primary pulley and the secondary pulley and changes the groove width of the pulley to control the gear ratio.

### DTC Logic

INFOID:0000000011463784

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name                                                | DTC detection condition                                     | Possible causes                                                                                                                                  |
|-------|-----------------------------------------------------------------------|-------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| P0841 | Transmission Fluid Pressure Sensor/Switch A Circuit Range/Performance | Secondary pressure sensor value exceeds line pressure value | <ul style="list-style-type: none"><li>• Harness or connectors (Sensor circuit is open or shorted.)</li><li>• Secondary pressure sensor</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "VEHICLE SPEED".
4. Drive the vehicle.
5. Maintain the following condition for 5 seconds or more.

VEHICLE SPEED : 30 km/h (19 MPH) or more

6. Stop the vehicle.
7. Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P0841" detected?

- YES >> Go to [TM-274, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463785

#### 1. CHECK LINE PRESSURE

Perform line pressure test. Refer to [TM-225, "Inspection and Judgment"](#).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace damaged parts. Refer to [TM-225, "Inspection and Judgment"](#).

#### 2. CHECK SECONDARY PRESSURE SENSOR SYSTEM

Check secondary pressure sensor system. Refer to [TM-271, "DTC Logic"](#).

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace damaged parts.

#### 3. CHECK LINE PRESSURE SOLENOID VALVE

Check line pressure solenoid valve. Refer to [TM-257, "DTC Logic"](#).

## P0841 TRANSMISSION FLUID PRESSURE SEN/SW A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

### 4.CHECK SECONDARY PRESSURE SOLENOID VALVE

Check secondary pressure solenoid valve. Refer to [TM-263, "DTC Logic"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

### 5.CHECK STEP MOTOR SYSTEM

Check step motor system. Refer to [TM-290, "DTC Logic"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts.

### 6.CHECK INTERMITTENT INCIDENT

Refer to [GI-44, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace the transaxle assembly. Refer to [TM-344, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# P0868 TRANSMISSION FLUID PRESSURE

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P0868 TRANSMISSION FLUID PRESSURE

### Description

INFOID:0000000011463786

The secondary pressure solenoid valve regulates the secondary pressure to suit the driving condition in response to a signal sent from the TCM.

### DTC Logic

INFOID:0000000011463787

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name          | DTC detection condition                                                                                   | Possible causes                                                                                                                                                                                                                            |
|-------|---------------------------------|-----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0868 | Transmission Fluid Pressure Low | Secondary pressure is abnormally low compared with the target secondary pressure during ordinary driving. | <ul style="list-style-type: none"><li>• Harness or connectors (Sensor circuit is open or shorted.)</li><li>• Line pressure control system</li><li>• Secondary pressure solenoid valve system</li><li>• Secondary pressure sensor</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "RANGE", "ATF TEMP SEN", "ACC PEDAL OPEN", "BRAKE SW" and "VEHICLE SPEED".
4. Drive the vehicle.
5. Maintain the following condition for 30 seconds or more.

|                |                            |
|----------------|----------------------------|
| RANGE          | : "D" position             |
| ATF TEMP SEN   | : 2.41 V or less           |
| ACC PEDAL OPEN | : 0.5/8 – 1.0/8            |
| BRAKE SW       | : Off                      |
| VEHICLE SPEED  | : 40 km/h (25 MPH) or more |

6. Stop the vehicle.
7. Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P0868" detected?

- YES >> Go to [TM-276, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463788

#### 1. CHECK LINE PRESSURE

Perform line pressure test. Refer to [TM-225, "Inspection and Judgment"](#).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace damaged parts. Refer to [TM-225, "Inspection and Judgment"](#).

#### 2. CHECK LINE PRESSURE SOLENOID VALVE

Check line pressure solenoid valve. Refer to [TM-257, "DTC Logic"](#).



## P0868 TRANSMISSION FLUID PRESSURE

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

### 3.CHECK SECONDARY PRESSURE SOLENOID VALVE

Check secondary pressure solenoid valve. Refer to [TM-263, "DTC Logic"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

### 4.CHECK SECONDARY PRESSURE SENSOR SYSTEM

Check secondary pressure sensor system. Refer to [TM-271, "DTC Logic"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

### 5.CHECK INTERMITTENT INCIDENT

Refer to [GI-44, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace the transaxle assembly. Refer to [TM-344, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

## P1701 TCM

## Description

INFOID:0000000011463789

When the power supply to the TCM is cut OFF, for example because the battery is removed, and the self-diagnosis memory function stops, malfunction is detected.

**CAUTION:**

**Immediately after TCM is replaced or after control valve or transaxle assembly is replaced (after TCM initialization is complete), self-diagnosis result of "P1701" may be displayed. In this case, erase self-diagnosis result using CONSULT. After erasing self-diagnosis result, perform DTC P1701 reproduction procedure and check that malfunction is not detected.**

## DTC Logic

INFOID:0000000011463790

## DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name | DTC detection condition                                                  | Possible causes                                                                                                        |
|-------|------------------------|--------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| P1701 | Power Supply Circuit   | Power supply (backup) of TCM is not supplied and learning function stops | <ul style="list-style-type: none"> <li>Harness or connectors (TCM power supply circuit is open or shorted.)</li> </ul> |

## DTC CONFIRMATION PROCEDURE

**CAUTION:**

**Always drive vehicle at a safe speed.**

**1. PREPARATION BEFORE WORK**

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

**2. CHECK DTC DETECTION****With CONSULT**

1. Start the engine.
2. Run engine for 10 seconds or more at idle speed.
3. Drive the vehicle for 10 seconds or more.
4. Select "Data Monitor" in "TRANSMISSION".
5. Stop the vehicle.
6. Turn ignition switch OFF and wait for 2 seconds or more.
7. Start the engine.
8. Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P1701" detected?

YES >> Go to [TM-278, "Diagnosis Procedure"](#).

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000011463791

**1. CHECK TCM POWER SUPPLY CIRCUIT (PART 1)**

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Turn ignition switch ON.
4. Check voltage between TCM harness connector terminals and ground.

| +         |          | –      | Condition            | Voltage     |
|-----------|----------|--------|----------------------|-------------|
| TCM       |          |        |                      |             |
| Connector | Terminal |        |                      |             |
| F81       | 46       | Ground | Ignition switch: ON  | 10 V – 16 V |
|           |          |        | Ignition switch: OFF | Approx. 0 V |
|           | 48       |        | Ignition switch: ON  | 10 V – 16 V |
|           |          |        | Ignition switch: OFF | Approx. 0 V |

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 3.

## 2.CHECK TCM POWER SUPPLY CIRCUIT (PART 2)

1. Turn ignition switch OFF.
2. Check voltage between TCM harness connector terminal and ground.

| +         |          | –      | Voltage     |
|-----------|----------|--------|-------------|
| TCM       |          |        |             |
| Connector | Terminal |        |             |
| F81       | 47       | Ground | 10 V – 16 V |

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

## 3.CHECK CIRCUIT BETWEEN TCM AND IPDM E/R

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between TCM harness connector terminals and IPDM E/R harness connector terminal.

| TCM       |          | IPDM E/R  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F81       | 46       | E15       | 57       | Existed    |
|           | 48       |           |          |            |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

## 4.DETECT MALFUNCTIONING ITEM

Check the following:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-42, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Short circuit in harness between IPDM E/R harness connector terminal 57 and TCM harness connector terminal 46, and 48.
- 10A fuse (No. 55, located in IPDM E/R). Refer to [PG-80, "Fuse, Connector and Terminal Arrangement"](#).
- IPDM E/R
- Ignition switch

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace damaged parts.

## 5.DETECT MALFUNCTIONING ITEM

Check the following:

## P1701 TCM

### < DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

- Open circuit or short circuit in harness between battery and TCM harness connector terminal 47. Refer to [PG-11, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).
- 10A fuse (No. 33, located in fuse and fusible link block). Refer to [PG-79, "Fuse and Fusible Link Arrangement"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace damaged parts.

### 6. CHECK CIRCUIT BETWEEN TCM AND GROUND

Check continuity between TCM harness connector terminals and ground.

| TCM       |          | —      | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal |        |            |
| F81       | 5        | Ground | Existed    |
|           | 42       |        |            |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace damaged parts.

# P1705 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P1705 TP SENSOR

### Description

INFOID:0000000011463792

Electric throttle control actuator consists of throttle control motor, accelerator pedal position sensor, throttle position sensor etc. The actuator sends a signal to the ECM, and ECM sends the signal to TCM with CAN communication.

### DTC Logic

INFOID:0000000011463793

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name                           | DTC detection condition                                                                                                  | Possible causes                                                                                                                                                                                    |
|-------|--------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P1705 | Accelerator Pedal Position Sensor Signal Circuit | TCM detects that difference between the 2 accelerator pedal position signals (CAN communication) from ECM is 1/8 or more | <ul style="list-style-type: none"><li>• Harness or connectors (CAN communication line is open or shorted.) (Accelerator pedal position sensor circuit is open or shorted.)</li><li>• ECM</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine.
2. Apply the parking brake.
3. Depress the accelerator pedal gradually.
4. Release your foot from the accelerator pedal.
5. Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P1705" detected?

- YES >> Go to [TM-281, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463794

#### 1. CHECK DTC (ECM)

##### With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic results" in "ENGINE".

Is any DTC detected?

- YES >> Check DTC detected item. Refer to [EC-113, "DTC Index"](#).  
NO >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

# P1709 INCOMPLETED DATA WRITING

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P1709 INCOMPLETED DATA WRITING

### Description

INFOID:0000000011463795

When TCM does not store calibration data (individual characteristic value) of each solenoid valve that is stored in the ROM assembly (in the control valve), a malfunction is detected.

#### CAUTION:

Immediately after TCM is replaced or after control valve or transaxle assembly is replaced (after TCM initialization is complete), self-diagnosis result of "P1709" may be displayed. In this case, erase self-diagnosis result using CONSULT. After erasing self-diagnosis result, perform DTC P1701 reproduction procedure and check that malfunction is not detected.

### DTC Logic

INFOID:0000000011463796

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name   | DTC is detected if...                                                                                                                                        | Possible cause                                                                                                                                                                 |
|-------|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P1709 | Incompleted Data Writing | When TCM does not store calibration data (individual characteristic value) of each solenoid valve that is stored in the ROM assembly (in the control valve). | <ul style="list-style-type: none"><li>• Harness or connectors (ROM assembly circuit is open or shorted.)</li><li>• TCM</li><li>• ROM assembly (in the control valve)</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### NOTE:

Immediately after performing any "DTC CONFIRMATION PROCEDURE", always turn ignition switch OFF. Then wait at least 10 seconds before performing the next test.

#### 1. CHECK DTC DETECTION

##### Ⓑ With CONSULT

1. Turn ignition switch OFF.
2. Wait for at least 10 consecutive seconds.
3. Turn ignition switch ON.
4. Perform "Self Diagnostic Results" in "TRANSMISSION".

#### Is "P1709" detected?

YES >> Go to [TM-282, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463797

#### 1. CHECK HARNESS BETWEEN TCM AND CVT UNIT HARNESS CONNECTOR (ROM ASSEMBLY) (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM vehicle side harness connector terminals and CVT unit vehicle side harness connector terminals.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F81       | 8        | F51       | 11       | Existed    |
|           | 9        |           | 1        |            |
|           | 10       |           | 16       |            |
|           | 25       |           | 19       |            |
|           | 26       |           | 20       |            |

#### Is the inspection result normal?

YES >> GO TO 2.  
NO >> Repair or replace damaged parts.

# P1709 INCOMPLETED DATA WRITING

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## 2. CHECK HARNESS BETWEEN TCM AND CVT UNIT HARNESS CONNECTOR (ROM ASSEMBLY) (PART 2)

Check continuity between TCM vehicle side harness connector terminals and ground.

| TCM       |          | —      | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F81       | 8        | Ground | Not existed |
|           | 9        |        |             |
|           | 10       |        |             |
|           | 25       |        |             |
|           | 26       |        |             |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

## 3. CHECK TERMINAL CORD ASSEMBLY

1. Remove terminal cord assembly. Refer to [TM-327, "Exploded View"](#).
2. Check continuity between CVT unit harness terminals and control valve harness connector terminals.

| CVT unit  |          | Control valve |          | Continuity |
|-----------|----------|---------------|----------|------------|
| Connector | Terminal | Connector     | Terminal |            |
| F209      | 1        | F207          | 2        | Existed    |
|           | 11       |               | 3        |            |
|           | 16       |               | 4        |            |
|           | 19       |               | 5        |            |
|           | 20       |               | 1        |            |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

## 4. CHECK TCM POWER SUPPLY AND GROUND CIRCUIT

Check TCM power supply and ground circuit. Refer to [TM-278, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

## 5. REPLACE TCM

1. Replace TCM. Refer to [TM-325, "Removal and Installation"](#).
2. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-282, "DTC Logic"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace transaxle assembly. Refer to [TM-344, "Removal and Installation"](#).

# P1722 VEHICLE SPEED

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P1722 VEHICLE SPEED

### Description

INFOID:0000000011463798

The vehicle speed signal is transmitted from ABS actuator and electric unit (control unit) to TCM by CAN communication line.

### DTC Logic

INFOID:0000000011463799

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name       | DTC detection condition                                                                                                                                                                                                                                                                                                                                                                                                                                      | Possible causes                                                                                                                                                                                                                 |
|-------|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P1722 | Vehicle Speed Signal Circuit | <ul style="list-style-type: none"><li>• TCM detects malfunction in CAN communication with ABS actuator and electric unit (control unit).</li><li>• When vehicle speed that TCM detects is 10 km/h (7 MPH) or more, vehicle speed signal (CAN communication) that is received from ABS actuator and electric unit (control unit) is 2 km/h (2 MPH) or less.</li><li>• Change of vehicle speed signal (CAN communication) that TCM receives is large</li></ul> | <ul style="list-style-type: none"><li>• Harness or connectors (CAN communication line is open or shorted.) (Vehicle speed signal circuit is open or shorted.)</li><li>• ABS actuator and electric unit (control unit)</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Always drive vehicle at a safe speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "VSP SENSOR".
4. Drive the vehicle.
5. Maintain the following condition for 10 seconds or more.

VSP SENSOR : 10 km/h (7 MPH) or more

6. Stop the vehicle.
7. Select "Self Diagnostic Results" in "TRANSMISSION".

##### Is "P1722" detected?

- YES >> Go to [TM-284, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463800

#### 1. CHECK DTC [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

##### With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Results" in "ABS".

##### Is any DTC detected?

- YES >> Check DTC detected item. Refer to [BRC-50, "DTC Index"](#)  
NO >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).



# P1723 SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P1723 SPEED SENSOR

### Description

INFOID:0000000011463801

The secondary speed sensor detects the revolution of parking gear and generates a pulse signal. The pulse signal is sent to the TCM, which converts it into vehicle speed.  
The primary speed sensor detects the primary pulley revolution speed and sends a signal to the TCM.

### DTC Logic

INFOID:0000000011463802

#### DTC DETECTION LOGIC

##### CAUTION:

One of the "P0715", or the "P0720" is displayed with the DTC at the same time.

| DTC   | Trouble diagnosis name | DTC detection condition                                                                                                                   | Possible causes                                                                                                                                                                       |
|-------|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P1723 | Speed Sensor Circuit   | TCM detects that high frequency components that are extracted from primary pulley speed and secondary pulley speed exceed a certain value | <ul style="list-style-type: none"><li>Harness or connectors<br/>(Primary speed sensor circuit is open or shorted.)<br/>(Secondary speed sensor circuit is open or shorted.)</li></ul> |

#### DTC CONFIRMATION PROCEDURE

##### CAUTION:

Always drive vehicle at a safe speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "RANGE" and "VEHICLE SPEED".
- Drive the vehicle.
- Maintain the following condition for 1 second or more.

RANGE : "D" position  
VEHICLE SPEED : 20 km/h (13 MPH) or more

- Stop the vehicle.
- Select "Self Diagnostic Results" in "TRANSMISSION".

##### Is "P1723" detected?

YES >> Go to [TM-285, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463803

#### 1. CHECK SECONDARY SPEED SENSOR SYSTEM

Check secondary speed sensor system. Refer to [TM-248, "DTC Logic"](#).

##### Is the inspection result normal?

YES >> GO TO 2.  
NO >> Repair or replace damaged parts.

#### 2. CHECK PRIMARY SPEED SENSOR SYSTEM

Check primary speed sensor system. Refer to [TM-245, "DTC Logic"](#).

##### Is the inspection result normal?

## P1723 SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

---

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).  
NO >> Repair or replace damaged parts.

# P1726 THROTTLE CONTROL SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P1726 THROTTLE CONTROL SIGNAL

### Description

INFOID:0000000011463804

Electric throttle control actuator consists of throttle control motor, accelerator pedal position sensor, throttle position sensor etc. The actuator sends a signal to the ECM, and ECM sends the signal to TCM with CAN communication.

### DTC Logic

INFOID:0000000011463805

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name          | DTC detection condition                                     | Possible causes                                                                                         |
|-------|---------------------------------|-------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| P1726 | Throttle Control Signal Circuit | TCM receives a malfunction signal of engine system from ECM | Harness or connectors<br>(Electronically controlled throttle sensor signal circuit is open or shorted.) |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine.
2. Run engine for at least 10 consecutive seconds at idle speed.
3. Select "Self Diagnostic Results" in "TRANSMISSION".

##### Is "P1726" detected?

- YES >> Go to [TM-287, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011463806

#### 1. CHECK DTC (ECM)

##### With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Results" in "ENGINE".

##### Is any DTC detected?

- YES >> Check DTC detected item. Refer to [EC-113, "DTC Index"](#).  
NO >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

# P1740 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P1740 SELECT SOLENOID

### DTC Logic

INFOID:000000011463807

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name                | DTC detection condition                                                                                                                                                                                                                                                                               | Possible causes                                                                                                                                                   |
|-------|---------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P1740 | Lock-up Select Solenoid Valve Circuit | <ul style="list-style-type: none"><li>Monitor value for lock-up select solenoid valve is OFF when TCM command value for lock-up select solenoid valve is ON.</li><li>Monitor value for lock-up select solenoid valve is ON when TCM command value for lock-up select solenoid valve is OFF.</li></ul> | <ul style="list-style-type: none"><li>Harness or connectors (Lock-up select solenoid circuit is open or shorted.)</li><li>Lock-up select solenoid valve</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Always drive vehicle at a safe speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION (PART 1)

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "RANGE".
- Maintain the following condition for 1 second or more.

RANGE : "P" or "N" position

- Select "Self Diagnostic Results" in "TRANSMISSION".

##### With GST

Follow the procedure "With CONSULT".

Is "P1740" detected?

- YES >> Go to [TM-288, "Diagnosis Procedure"](#).  
NO >> GO TO 3.

#### 3. CHECK DTC DETECTION (PART 2)

##### With CONSULT

- Select "Data Monitor" in "TRANSMISSION".
- Select "RANGE".
- Maintain the following condition for 1 second or more.

RANGE : "R" or "D" position

- Select "Self Diagnostic Results" in "TRANSMISSION".

##### With GST

Follow the procedure "With CONSULT".

Is "P1740" detected?

- YES >> Go to [TM-288, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011463808

#### 1. CHECK LOCK-UP SELECT SOLENOID VALVE

- Turn ignition switch OFF.

# P1740 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

2. Disconnect CVT unit connector.
3. Check resistance between CVT unit connector terminal and ground.

| CVT unit  |          | Ground | Condition                           | Resistance            |
|-----------|----------|--------|-------------------------------------|-----------------------|
| Connector | Terminal |        |                                     |                       |
| F209      | 13       | Ground | CVT fluid temperature: 20°C (68°F)  | Approx. 26.0 – 30.0 Ω |
|           |          |        | CVT fluid temperature: 50°C (122°F) | Approx. 29.0 – 34.0 Ω |
|           |          |        | CVT fluid temperature: 80°C (176°F) | Approx. 32.0 – 37.0 Ω |

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 4.

## 2.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (LOCK-UP SELECT SOLENOID VALVE) (PART 1)

1. Disconnect TCM connector.
2. Check continuity between TCM harness connector terminal and CVT unit harness connector terminal.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F81       | 37       | F51       | 13       | Existed    |

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace damaged parts.

## 3.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (LOCK-UP SELECT SOLENOID VALVE) (PART 2)

Check continuity between TCM harness connector terminal and ground.

| TCM       |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F81       | 37       | Ground | Not existed |

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).  
NO >> Repair or replace damaged parts.

## 4.CHECK TERMINAL CORD ASSEMBLY (PART 1)

1. Remove terminal cord assembly. Refer to [TM-327, "Removal and Installation"](#).
2. Check continuity between CVT unit harness connector terminal and control valve harness connector terminal.

| CVT unit  |          | Control valve |          | Continuity |
|-----------|----------|---------------|----------|------------|
| Connector | Terminal | Connector     | Terminal |            |
| F209      | 13       | F208          | 11       | Existed    |

Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Repair or replace damaged parts.

## 5.CHECK TERMINAL CORD ASSEMBLY (PART 2)

Check terminal cord assembly harness cladding for damage.

Is the inspection result normal?

- YES >> Replace the transaxle assembly. Refer to [TM-344, "Removal and Installation"](#).  
NO >> Repair or replace damaged parts.

# P1777 STEP MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P1777 STEP MOTOR

### DTC Logic

INFOID:000000011463809

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name | DTC detection condition                                                                                                                                                                                       | Possible causes                                                                                                                   |
|-------|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| P1777 | Step Motor Circuit     | <ul style="list-style-type: none"><li>Step motor monitor value is OFF when step motor command value of TCM is ON</li><li>Step motor monitor value is ON when step motor command value of TCM is OFF</li></ul> | <ul style="list-style-type: none"><li>Harness or connectors (Step motor circuit is open or shorted.)</li><li>Step motor</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Always drive vehicle at a safe speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "RANGE" and "VEHICLE SPEED".
- Drive the vehicle.
- Maintain the following condition for 1 second or more.

|               |                            |
|---------------|----------------------------|
| RANGE         | : "D" position             |
| VEHICLE SPEED | : 20 km/h (13 MPH) or more |

- Stop the vehicle.
- Select "Self Diagnostic Results" in "TRANSMISSION".

##### With GST

Follow the procedure "With CONSULT".

Is "P1777" detected?

YES >> Go to [TM-290, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011463810

#### 1. CHECK STEP MOTOR CIRCUIT (PART 1)

- Turn ignition switch OFF.
- Disconnect TCM connector.
- Check resistance between TCM harness connector terminals.

| TCM       |          | Resistance     |
|-----------|----------|----------------|
| Connector | Terminal |                |
| F81       | 27 – 28  | Approx. 30.0 Ω |
|           | 29 – 30  |                |

Is the inspection result normal?

YES >> GO TO 2.  
NO >> GO TO 3.

#### 2. CHECK STEP MOTOR CIRCUIT (PART 2)

# P1777 STEP MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

Check resistance between TCM harness connector terminals and ground.

| TCM       |          | Ground | Resistance     |
|-----------|----------|--------|----------------|
| Connector | Terminal |        |                |
| F81       | 27       | Ground | Approx. 15.0 Ω |
|           | 28       |        |                |
|           | 29       |        |                |
|           | 30       |        |                |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> GO TO 3.

## 3.CHECK STEP MOTOR

1. Disconnect CVT unit connector.
2. Check resistance between CVT unit connector terminals.

| CVT unit  |          | Resistance     |
|-----------|----------|----------------|
| Connector | Terminal |                |
| F209      | 6 – 7    | Approx. 30.0 Ω |
|           | 8 – 9    |                |

3. Check resistance between CVT unit connector terminals and ground.

| CVT unit  |          | Ground | Resistance     |
|-----------|----------|--------|----------------|
| Connector | Terminal |        |                |
| F209      | 6        | Ground | Approx. 15.0 Ω |
|           | 7        |        |                |
|           | 8        |        |                |
|           | 9        |        |                |

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 6.

## 4.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (STEP MOTOR) (PART 1)

Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F81       | 27       | F51       | 9        | Existed    |
|           | 28       |           | 8        |            |
|           | 29       |           | 7        |            |
|           | 30       |           | 6        |            |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

## 5.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (STEP MOTOR) (PART 2)

Check continuity between TCM harness connector terminals and ground.

# P1777 STEP MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

| TCM       |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F81       | 27       | Ground | Not existed |
|           | 28       |        |             |
|           | 29       |        |             |
|           | 30       |        |             |

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).  
NO >> Repair or replace damaged parts.

## 6. CHECK TERMINAL CORD ASSEMBLY (PART 1)

1. Remove terminal cord assembly. Refer to [TM-327, "Exploded View"](#).
2. Check continuity between CVT unit harness connector terminals and control valve harness connector terminals.

| CVT unit  |          | Control valve |          | Continuity |
|-----------|----------|---------------|----------|------------|
| Connector | Terminal | Connector     | Terminal |            |
| F209      | 6        | F208          | 14       | Existed    |
|           | 7        |               | 15       |            |
|           | 8        |               | 16       |            |
|           | 9        |               | 17       |            |

Is the inspection result normal?

- YES >> GO TO 7.  
NO >> Repair or replace damaged parts.

## 7. CHECK TERMINAL CORD ASSEMBLY (PART 2)

Check terminal cord assembly harness cladding for damage.

Is the inspection result normal?

- YES >> GO TO 8.  
NO >> Repair or replace damaged parts.

## 8. CHECK DTC (TCM)

### Ⓔ With CONSULT

1. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-290, "DTC Logic"](#).
2. Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P1777" detected?

- YES-1 (Only "P1777" is detected)>>There is a malfunction of the step motor. Replace the control valve.  
Refer to [TM-327, "Removal and Installation"](#).  
YES-2 ("P1777" and "P0725"/"P1777" and "U1000"/"P1777", "P0725" and "U1000" are detected)>>Replace the control valve. Refer to [TM-327, "Removal and Installation"](#).  
YES-3 (Other than YES-1 and YES-2)>>Replace the transaxle assembly. Refer to [TM-344, "Removal and Installation"](#).  
NO >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).



# P1778 STEP MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## P1778 STEP MOTOR

### Description

INFOID:0000000011463811

- The step motor's 4 aspects of ON/OFF change according to the signal from TCM. As a result, the flow of line pressure to primary pulley is changed and pulley ratio is controlled.
- This diagnosis item is detected when electrical system is OK, but mechanical system is NG.
- This diagnosis item is detected when the state of the changing the speed mechanism in unit does not operate normally.

### DTC Logic

INFOID:0000000011463812

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name          | DTC detection condition                                                                                                                                                                                                                         | Possible causes |
|-------|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| P1778 | Step Motor Circuit Intermittent | There is a large difference between the primary pulley speed sensor value and the primary pulley speed estimated from the secondary speed sensor value, or there is a large difference between the target pulley ratio and actual pulley ratio. | Step motor      |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

- Always drive vehicle at a safe speed.
- Before starting "DTC CONFIRMATION PROCEDURE", confirm "Hi" or "Mid" or "Low" fixation by "PRI SPEED" and "VEHICLE SPEED" on "DATA MONITOR MODE".
- If hi-gear fixation occurred, go to [TM-294, "Diagnosis Procedure"](#).

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "RANGE", "ATF TEMP SEN", "ACC PEDAL OPEN", "PRI SPEED" and "VEHICLE SPEED".
4. Drive the vehicle.
5. Maintain the following condition for 5 seconds or more.

|                |                           |
|----------------|---------------------------|
| RANGE          | : "D" position            |
| ATF TEMP SEN   | : 2.03 – 0.16 V           |
| ACC PEDAL OPEN | : 1.0/8 or more           |
| PRI SPEED      | : 1,000 rpm or more       |
| VEHICLE SPEED  | : 10 km/h (7 MPH) or more |

6. Stop the vehicle.
7. Select "Self Diagnostic Results" in "TRANSMISSION".

##### With GST

Follow the procedure "With CONSULT".

#### Is "P1778" detected?

- YES >> Go to [TM-294, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000011463813

**1.CHECK STEP MOTOR SYSTEM**

---

Check step motor system. Refer to [TM-290, "DTC Logic"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts. Refer to [TM-225, "Inspection and Judgment"](#).

**2.CHECK PRIMARY SPEED SENSOR SYSTEM**

---

Check primary speed sensor system. Refer to [TM-245, "DTC Logic"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

**3.CHECK SECONDARY SPEED SENSOR SYSTEM**

---

Check secondary speed sensor system. Refer to [TM-248, "DTC Logic"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

**4.CHECK INTERMITTENT INCIDENT**

---

Refer to [GI-44, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace transaxle assembly. Refer to [TM-344, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

# SHIFT POSITION INDICATOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## SHIFT POSITION INDICATOR CIRCUIT

### Description

INFOID:0000000011463814

- TCM sends position indicator signals to combination meter by CAN communication line.
- Manual mode switch position is indicated on shift position indicator.

### Component Function Check

INFOID:0000000011463815

#### 1.CHECK SHIFT POSITION INDICATOR

##### CAUTION:

**Always drive vehicle at a safe speed.**

1. Start engine.
2. Check if correct selector lever position ("P", "N", "R" or "D") is displayed as selector lever is moved into each position.
3. Drive vehicle in the manual mode, and confirm that the actual gear position and the meter's indication of the position mutually coincide when the selector lever is shifted to the "UP (+ side)" or "DOWN (- side)" side (1st ⇔ 8th gear).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to [TM-295, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000011463816

#### 1.CHECK INPUT SIGNALS

##### With CONSULT

1. Start engine.
2. Check if correct selector lever position ("P", "N", "R" or "D") is displayed as selector lever is moved into each position.
3. Select "RENGE" on "DATA MONITOR" and read out the value.
4. Drive vehicle in the manual mode, and confirm that the actual gear position and the meter's indication of the position mutually coincide when the selector lever is shifted to the "UP (+ side)" or "DOWN (- side)" side (1st ⇔ 8th gear).

Is the inspection result normal?

YES >> INSPECTION END

NO - 1 >> The actual gear position does not change, or shifting into the manual mode is not possible (no gear shifting in the manual mode possible). Or the shift position indicator is not indicated.

- Check manual mode switch. Refer to [TM-269, "Component Inspection \(Manual Mode Switch\)"](#).
- Check CVT main system (Fail-safe function actuated).
- Perform "SELF-DIAG RESULTS" mode for "TRANSMISSION". Refer to [TM-188, "CONSULT Function"](#).

NO - 2 >> The actual gear position changes, but the shift position indicator is not indicated.

- Perform "SELF-DIAG RESULTS" mode for "TRANSMISSION". Refer to [TM-188, "CONSULT Function"](#).

NO - 3 >> The actual gear position and the indication on the shift position indicator do not coincide.

- Perform "SELF-DIAG RESULTS" mode for "TRANSMISSION". Refer to [TM-188, "CONSULT Function"](#).

NO - 4 >> Only a specific position or positions is/are not indicated on the shift position indicator.

- Check the combination meter. Refer to [MWI-42, "Work flow"](#).

# SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

## SHIFT LOCK SYSTEM

### Component Function Check

INFOID:000000011463817

#### 1.CHECK SHIFT LOCK OPERATION (PART 1)

1. Turn ignition switch ON.
2. Shift the selector lever to "P" position.
3. Attempt to shift the selector lever to any other than position with the brake pedal released.

Can the selector lever be shifted to any other position?

- YES >> Go to [TM-296, "Diagnosis Procedure"](#).  
NO >> GO TO 2.

#### 2.CHECK SHIFT LOCK OPERATION (PART 2)

Attempt to shift the selector lever to any other than position with the brake pedal depressed.

Can the selector lever be shifted to any other position?

- YES >> INSPECTION END  
NO >> Go to [TM-296, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000011463818

#### 1.CHECK POWER SOURCE

1. Turn ignition switch OFF.
2. Disconnect stop lamp switch connector
3. Turn ignition switch ON.
4. Check the voltage between the stop lamp switch harness connector terminal and ground.

| +                |          | -      | Voltage         |
|------------------|----------|--------|-----------------|
| Stop lamp switch |          |        |                 |
| Connector        | Terminal |        |                 |
| E102             | 3        | Ground | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 9.

#### 2.CHECK STOP LAMP SWITCH (PART 1)

Check stop lamp switch. Refer to [TM-299, "Component Inspection \(Stop Lamp Switch\)"](#).

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 10.

#### 3.CHECK CIRCUIT BETWEEN STOP LAMP SWITCH AND CVT SHIFT SELECTOR (PART 1)

1. Disconnect CVT shift selector connector
2. Check the continuity between the stop lamp switch harness connector terminal and the CVT shift selector harness connector terminal.

| Stop lamp switch |          | CVT shift selector |          | Continuity |
|------------------|----------|--------------------|----------|------------|
| Connector        | Terminal | Connector          | Terminal |            |
| E102             | 4        | M57                | 3        | Existed    |

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Repair or replace the malfunctioning parts.

#### 4.CHECK CIRCUIT BETWEEN STOP LAMP SWITCH AND CVT SHIFT SELECTOR (PART 2)

Check the continuity between the stop lamp switch harness connector terminal and ground.

# SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

| Stop lamp switch |          | —      | Continuity  |
|------------------|----------|--------|-------------|
| Connector        | Terminal |        |             |
| E102             | 4        | Ground | Not existed |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace the malfunctioning parts.

## 5.CHECK GROUND CIRCUIT

Check the continuity between the CVT shift selector harness connector terminal and ground.

| CVT shift selector |          | —      | Continuity |
|--------------------|----------|--------|------------|
| Connector          | Terminal |        |            |
| M57                | 4        | Ground | Existed    |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace the malfunctioning parts.

## 6.CHECK PART POSITION SWITCH

1. Disconnect park position switch connector.
2. Check park position switch. Refer to [TM-298, "Component Inspection \(Park Position Switch\)"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace the malfunctioning parts.

## 7.CHECK SHIFT LOCK SOLENOID

1. Disconnect shift lock solenoid connector.
2. Check shift lock solenoid. Refer to [TM-298, "Component Inspection \(Shift Lock Solenoid\)"](#).

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace the malfunctioning parts.

## 8.CHECK CVT SHIFT SELECTOR HARNESS

Check CVT shift selector harness. Refer to [TM-298, "Component Inspection \(CVT Shift Selector Harness\)"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

## 9.DETECT MALFUNCTIONING ITEM

Check the following items:

- Open or short circuit in harness between ignition switch and stop lamp switch connector terminal 3. Refer to [PG-42, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Ignition switch
- 10A fuse [No.3, fuse block (J/B)]. Refer to [PG-78, "Fuse, Connector and Terminal Arrangement"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace the malfunctioning parts.

## 10.CHECK INSTALLATION POSITION OF STOP LAMP SWITCH

Adjust stop lamp switch position. Refer to [BR-9, "Inspection and Adjustment"](#).

>> GO TO 11.

## 11.CHECK STOP LAMP SWITCH (PART 2)

Check stop lamp switch. Refer to [TM-299, "Component Inspection \(Stop Lamp Switch\)"](#).

# SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace the malfunctioning parts.

## Component Inspection (Shift Lock Solenoid)

INFOID:0000000011463819

### 1.CHECK SHIFT LOCK SOLENOID

Apply voltage to terminals of shift lock solenoid connector and check that shift lock solenoid is activated.

#### CAUTION:

- Connect the fuse between the terminals when applying the voltage.
- Never cause shorting between terminals.

| Shift lock solenoid |   | Condition                                        | Status                       |
|---------------------|---|--------------------------------------------------|------------------------------|
| + (fuse)            | – |                                                  |                              |
| Terminal            |   |                                                  |                              |
| 1                   | 2 | Apply battery voltage between terminals 1 and 2. | Shift lock solenoid operates |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the shift lock unit. Refer to [TM-314, "Disassembly and Assembly"](#).

## Component Inspection (Park Position Switch)

INFOID:0000000011463820

### 1.CHECK PARK POSITION SWITCH

Check the continuity between park position switch connector terminals.

#### CAUTION:

- Connect the fuse between the terminals when applying the voltage.
- Never cause shorting between terminals.

| Park position switch | Condition                                 | Continuity  |
|----------------------|-------------------------------------------|-------------|
| Terminal             |                                           |             |
| 1 – 2                | Shift the selector lever to “P” position. | Existed     |
|                      | Other than above                          | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the park position switch. Refer to [TM-314, "Disassembly and Assembly"](#).

## Component Inspection (CVT Shift Selector Harness)

INFOID:0000000011463821

### 1.CHECK CVT SHIFT SELECTOR HARNESS (PART 1)

Check the continuity between the CVT shift selector harness connector terminal and the shift lock solenoid harness connector terminal.

| CVT shift selector |          | Shift lock solenoid |          | Continuity |
|--------------------|----------|---------------------|----------|------------|
| Connector          | Terminal | Connector           | Terminal |            |
| M324               | 3        | M326                | 1        | Existed    |

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the CVT shift selector harness. Refer to [TM-314, "Disassembly and Assembly"](#).

### 2.CHECK CVT SHIFT SELECTOR HARNESS (PART 2)

Check the continuity between the shift lock solenoid harness connector terminal and the park position switch harness connector terminal.

# SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10B]

| Shift lock solenoid |          | Park position switch |          | Continuity |
|---------------------|----------|----------------------|----------|------------|
| Connector           | Terminal | Connector            | Terminal |            |
| M326                | 2        | M325                 | 1        | Existed    |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the CVT shift selector harness. Refer to [TM-314, "Disassembly and Assembly"](#).

## 3.CHECK CVT SHIFT SELECTOR HARNESS (PART 3)

Check the continuity between the park switch harness connector terminal and the CVT shift selector harness connector terminal.

| Park switch |          | CVT shift selector |          | Continuity |
|-------------|----------|--------------------|----------|------------|
| Connector   | Terminal | Connector          | Terminal |            |
| M325        | 2        | M324               | 4        | Existed    |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the CVT shift selector harness. Refer to [TM-314, "Disassembly and Assembly"](#).

## 4.CHECK CVT SHIFT SELECTOR HARNESS (PART 4)

Check harness cladding CVT shift selector harness for damage.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the CVT shift selector harness. Refer to [TM-314, "Disassembly and Assembly"](#).

## Component Inspection (Stop Lamp Switch)

INFOID:0000000011463822

### 1.CHECK STOP LAMP SWITCH

Check the continuity between the stop lamp switch connector terminals.

| Stop lamp switch | Condition             | Continuity  |
|------------------|-----------------------|-------------|
| Terminal         |                       |             |
| 3 – 4            | Depressed brake pedal | Existed     |
|                  | Released brake pedal  | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace stop lamp switch. Refer to [BR-20, "Exploded View"](#).

## SYMPTOM DIAGNOSIS

### SYSTEM SYMPTOM

#### Symptom Table

INFOID:000000011463823

The diagnostics item numbers show the sequence for inspection. Inspect in order from item 1.

| No. | Item        | Symptom                             | Condition   | Diagnostic Item                           | Reference              |
|-----|-------------|-------------------------------------|-------------|-------------------------------------------|------------------------|
| 1   | Shift Shock | Large shock. ("N"→<br>"D" position) | ON vehicle  | 1. Engine idle speed                      | <a href="#">EC-149</a> |
|     |             |                                     |             | 2. Engine speed signal                    | <a href="#">TM-251</a> |
|     |             |                                     |             | 3. Accelerator pedal position sensor      | <a href="#">TM-281</a> |
|     |             |                                     |             | 4. CVT position                           | <a href="#">TM-230</a> |
|     |             |                                     |             | 5. CVT fluid temperature sensor           | <a href="#">TM-241</a> |
|     |             |                                     |             | 6. CAN communication line                 | <a href="#">TM-233</a> |
|     |             |                                     |             | 7. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |             |                                     |             | 8. Line pressure test                     | <a href="#">TM-225</a> |
|     |             |                                     |             | 9. Torque converter clutch solenoid valve | <a href="#">TM-252</a> |
|     |             |                                     |             | 10. Lock-up select solenoid valve         | <a href="#">TM-288</a> |
|     |             |                                     |             | 11. Transmission range switch             | <a href="#">TM-238</a> |
|     |             |                                     |             | 12. Control valve                         | <a href="#">TM-327</a> |
|     |             |                                     | OFF vehicle | 13. Forward clutch                        | <a href="#">TM-344</a> |
| 2   | Shift Shock | Large shock. ("N"→<br>"R" position) | ON vehicle  | 1. Engine idle speed                      | <a href="#">EC-149</a> |
|     |             |                                     |             | 2. Engine speed signal                    | <a href="#">TM-251</a> |
|     |             |                                     |             | 3. Accelerator pedal position sensor      | <a href="#">TM-281</a> |
|     |             |                                     |             | 4. CVT position                           | <a href="#">TM-230</a> |
|     |             |                                     |             | 5. CVT fluid temperature sensor           | <a href="#">TM-241</a> |
|     |             |                                     |             | 6. CAN communication line                 | <a href="#">TM-233</a> |
|     |             |                                     |             | 7. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |             |                                     |             | 8. Line pressure test                     | <a href="#">TM-225</a> |
|     |             |                                     |             | 9. Torque converter clutch solenoid valve | <a href="#">TM-252</a> |
|     |             |                                     |             | 10. Lock-up select solenoid valve         | <a href="#">TM-288</a> |
|     |             |                                     |             | 11. Transmission range switch             | <a href="#">TM-238</a> |
|     |             |                                     |             | 12. Control valve                         | <a href="#">TM-327</a> |
|     |             |                                     | OFF vehicle | 13. Reverse brake                         | <a href="#">TM-344</a> |
| 3   | Shift Shock | Shock is too large for<br>lock-up.  | ON vehicle  | 1. CVT position                           | <a href="#">TM-230</a> |
|     |             |                                     |             | 2. Engine speed signal                    | <a href="#">TM-251</a> |
|     |             |                                     |             | 3. CAN communication line                 | <a href="#">TM-233</a> |
|     |             |                                     |             | 4. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |             |                                     |             | 5. Control valve                          | <a href="#">TM-327</a> |
|     |             |                                     | OFF vehicle | 6. Torque converter                       | <a href="#">TM-348</a> |



# SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10B]

| No. | Item                  | Symptom                                      | Condition   | Diagnostic Item                      | Reference              |
|-----|-----------------------|----------------------------------------------|-------------|--------------------------------------|------------------------|
| 4   | Slips/Will Not Engage | Vehicle cannot be started from "D" position. | ON vehicle  | 1. CVT fluid level and state         | <a href="#">TM-311</a> |
|     |                       |                                              |             | 2. CVT position                      | <a href="#">TM-230</a> |
|     |                       |                                              |             | 3. CAN communication line            | <a href="#">TM-233</a> |
|     |                       |                                              |             | 4. Line pressure test                | <a href="#">TM-225</a> |
|     |                       |                                              |             | 5. Stall test                        | <a href="#">TM-223</a> |
|     |                       |                                              |             | 6. Step motor                        | <a href="#">TM-290</a> |
|     |                       |                                              |             | 7. Primary speed sensor              | <a href="#">TM-245</a> |
|     |                       |                                              |             | 8. Secondary speed sensor            | <a href="#">TM-248</a> |
|     |                       |                                              |             | 9. Accelerator pedal position sensor | <a href="#">TM-281</a> |
|     |                       |                                              |             | 10. CVT fluid temperature sensor     | <a href="#">TM-241</a> |
|     |                       |                                              |             | 11. Secondary pressure sensor        | <a href="#">TM-271</a> |
|     |                       |                                              |             | 12. Power supply                     | <a href="#">TM-278</a> |
|     |                       |                                              |             | 13. Control valve                    | <a href="#">TM-327</a> |
|     |                       |                                              | OFF vehicle | 14. Oil pump assembly                | <a href="#">TM-344</a> |
|     |                       |                                              |             | 15. Forward clutch                   |                        |
|     |                       |                                              |             | 16. Parking components               |                        |
| 5   | Slips/Will Not Engage | Vehicle cannot be started from "R" position. | ON vehicle  | 1. CVT fluid level and state         | <a href="#">TM-311</a> |
|     |                       |                                              |             | 2. CVT position                      | <a href="#">TM-230</a> |
|     |                       |                                              |             | 3. CAN communication line            | <a href="#">TM-233</a> |
|     |                       |                                              |             | 4. Line pressure test                | <a href="#">TM-225</a> |
|     |                       |                                              |             | 5. Stall test                        | <a href="#">TM-223</a> |
|     |                       |                                              |             | 6. Step motor                        | <a href="#">TM-290</a> |
|     |                       |                                              |             | 7. Primary speed sensor              | <a href="#">TM-245</a> |
|     |                       |                                              |             | 8. Secondary speed sensor            | <a href="#">TM-248</a> |
|     |                       |                                              |             | 9. Accelerator pedal position sensor | <a href="#">TM-281</a> |
|     |                       |                                              |             | 10. CVT fluid temperature sensor     | <a href="#">TM-241</a> |
|     |                       |                                              |             | 11. Secondary pressure sensor        | <a href="#">TM-271</a> |
|     |                       |                                              |             | 12. Power supply                     | <a href="#">TM-278</a> |
|     |                       |                                              |             | 13. Control valve                    | <a href="#">TM-327</a> |
|     |                       |                                              | OFF vehicle | 14. Oil pump assembly                | <a href="#">TM-344</a> |
|     |                       |                                              |             | 15. Reverse brake                    |                        |
|     |                       |                                              |             | 16. Parking components               |                        |

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10B]

| No. | Item                             | Symptom | Condition   | Diagnostic Item                           | Reference              |
|-----|----------------------------------|---------|-------------|-------------------------------------------|------------------------|
| 6   | Does not lock-up.                |         | ON vehicle  | 1. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |                                  |         |             | 2. Line pressure test                     | <a href="#">TM-225</a> |
|     |                                  |         |             | 3. Engine speed signal                    | <a href="#">TM-251</a> |
|     |                                  |         |             | 4. Primary speed sensor                   | <a href="#">TM-245</a> |
|     |                                  |         |             | 5. Torque converter clutch solenoid valve | <a href="#">TM-252</a> |
|     |                                  |         |             | 6. CAN communication line                 | <a href="#">TM-233</a> |
|     |                                  |         |             | 7. Stall test                             | <a href="#">TM-223</a> |
|     |                                  |         |             | 8. Step motor                             | <a href="#">TM-290</a> |
|     |                                  |         |             | 9. Transmission range switch              | <a href="#">TM-238</a> |
|     |                                  |         |             | 10. Lock-up select solenoid valve         | <a href="#">TM-288</a> |
|     |                                  |         |             | 11. CVT fluid temperature sensor          | <a href="#">TM-241</a> |
|     |                                  |         |             | 12. Secondary speed sensor                | <a href="#">TM-248</a> |
|     |                                  |         |             | 13. Secondary pressure sensor             | <a href="#">TM-271</a> |
|     |                                  |         |             | 14. Control valve                         | <a href="#">TM-327</a> |
|     | Slips/Will Not Engage            |         | OFF vehicle | 15. Torque converter                      | <a href="#">TM-348</a> |
|     |                                  |         |             | 16. Oil pump assembly                     | <a href="#">TM-344</a> |
| 7   | Does not hold lock-up condition. |         | ON vehicle  | 1. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |                                  |         |             | 2. Line pressure test                     | <a href="#">TM-225</a> |
|     |                                  |         |             | 3. Engine speed signal                    | <a href="#">TM-251</a> |
|     |                                  |         |             | 4. Primary speed sensor                   | <a href="#">TM-245</a> |
|     |                                  |         |             | 5. Torque converter clutch solenoid valve | <a href="#">TM-252</a> |
|     |                                  |         |             | 6. CAN communication line                 | <a href="#">TM-233</a> |
|     |                                  |         |             | 7. Stall test                             | <a href="#">TM-223</a> |
|     |                                  |         |             | 8. Step motor                             | <a href="#">TM-290</a> |
|     |                                  |         |             | 9. Transmission range switch              | <a href="#">TM-238</a> |
|     |                                  |         |             | 10. Lock-up select solenoid valve         | <a href="#">TM-288</a> |
|     |                                  |         |             | 11. CVT fluid temperature sensor          | <a href="#">TM-241</a> |
|     |                                  |         |             | 12. Secondary speed sensor                | <a href="#">TM-248</a> |
|     |                                  |         |             | 13. Secondary pressure sensor             | <a href="#">TM-271</a> |
|     |                                  |         |             | 14. Control valve                         | <a href="#">TM-327</a> |
|     |                                  |         | OFF vehicle | 15. Torque converter                      | <a href="#">TM-348</a> |
|     |                                  |         |             | 16. Oil pump assembly                     | <a href="#">TM-344</a> |

# SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10B]

| No. | Item                  | Symptom                                                              | Condition   | Diagnostic Item                           | Reference              |
|-----|-----------------------|----------------------------------------------------------------------|-------------|-------------------------------------------|------------------------|
| 8   |                       | Lock-up is not released.                                             | ON vehicle  | 1. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |                       |                                                                      |             | 2. Line pressure test                     | <a href="#">TM-225</a> |
|     |                       |                                                                      |             | 3. Engine speed signal                    | <a href="#">TM-251</a> |
|     |                       |                                                                      |             | 4. Primary speed sensor                   | <a href="#">TM-245</a> |
|     |                       |                                                                      |             | 5. Torque converter clutch solenoid valve | <a href="#">TM-252</a> |
|     |                       |                                                                      |             | 6. CAN communication line                 | <a href="#">TM-233</a> |
|     |                       |                                                                      |             | 7. Stall test                             | <a href="#">TM-223</a> |
|     |                       |                                                                      |             | 8. Control valve                          | <a href="#">TM-327</a> |
|     |                       |                                                                      | OFF vehicle | 9. Torque converter                       | <a href="#">TM-348</a> |
|     |                       |                                                                      |             | 10. Oil pump assembly                     | <a href="#">TM-344</a> |
| 9   | Slips/Will Not Engage | With selector lever in "D" position, acceleration is extremely poor. | ON vehicle  | 1. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |                       |                                                                      |             | 2. Line pressure test                     | <a href="#">TM-225</a> |
|     |                       |                                                                      |             | 3. Stall test                             | <a href="#">TM-223</a> |
|     |                       |                                                                      |             | 4. Accelerator pedal position sensor      | <a href="#">TM-281</a> |
|     |                       |                                                                      |             | 5. CAN communication line                 | <a href="#">TM-233</a> |
|     |                       |                                                                      |             | 6. Transmission range switch              | <a href="#">TM-238</a> |
|     |                       |                                                                      |             | 7. CVT position                           | <a href="#">TM-230</a> |
|     |                       |                                                                      |             | 8. Step motor                             | <a href="#">TM-290</a> |
|     |                       |                                                                      |             | 9. Primary speed sensor                   | <a href="#">TM-245</a> |
|     |                       |                                                                      |             | 10. Secondary speed sensor                | <a href="#">TM-248</a> |
|     |                       |                                                                      |             | 11. Accelerator pedal position sensor     | <a href="#">TM-281</a> |
|     |                       |                                                                      |             | 12. Secondary pressure sensor             | <a href="#">TM-271</a> |
|     |                       |                                                                      |             | 13. CVT fluid temperature sensor          | <a href="#">TM-241</a> |
|     |                       |                                                                      |             | 14. Power supply                          | <a href="#">TM-278</a> |
|     |                       |                                                                      |             | 15. Control valve                         | <a href="#">TM-327</a> |
|     |                       |                                                                      | OFF vehicle | 16. Torque converter                      | <a href="#">TM-348</a> |
|     |                       |                                                                      |             | 17. Oil pump assembly                     | <a href="#">TM-344</a> |
|     |                       |                                                                      |             | 18. Forward clutch                        |                        |

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10B]

| No. | Item                  | Symptom                                                              | Condition   | Diagnostic Item                           | Reference              |
|-----|-----------------------|----------------------------------------------------------------------|-------------|-------------------------------------------|------------------------|
| 10  | Slips/Will Not Engage | With selector lever in "R" position, acceleration is extremely poor. | ON vehicle  | 1. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |                       |                                                                      |             | 2. Line pressure test                     | <a href="#">TM-225</a> |
|     |                       |                                                                      |             | 3. Stall test                             | <a href="#">TM-223</a> |
|     |                       |                                                                      |             | 4. Accelerator pedal position sensor      | <a href="#">TM-281</a> |
|     |                       |                                                                      |             | 5. CAN communication line                 | <a href="#">TM-233</a> |
|     |                       |                                                                      |             | 6. Transmission range switch              | <a href="#">TM-238</a> |
|     |                       |                                                                      |             | 7. CVT position                           | <a href="#">TM-230</a> |
|     |                       |                                                                      |             | 8. Step motor                             | <a href="#">TM-290</a> |
|     |                       |                                                                      |             | 9. Primary speed sensor                   | <a href="#">TM-245</a> |
|     |                       |                                                                      |             | 10. Secondary speed sensor                | <a href="#">TM-248</a> |
|     |                       |                                                                      |             | 11. Accelerator pedal position sensor     | <a href="#">TM-281</a> |
|     |                       |                                                                      |             | 12. Secondary pressure sensor             | <a href="#">TM-271</a> |
|     |                       |                                                                      |             | 13. CVT fluid temperature sensor          | <a href="#">TM-241</a> |
|     |                       |                                                                      |             | 14. Power supply                          | <a href="#">TM-278</a> |
|     |                       |                                                                      |             | 15. Control valve                         | <a href="#">TM-327</a> |
|     |                       |                                                                      | OFF vehicle | 16. Torque converter                      | <a href="#">TM-348</a> |
|     |                       |                                                                      |             | 17. Oil pump assembly                     | <a href="#">TM-344</a> |
|     |                       |                                                                      |             | 18. Reverse brake                         |                        |
| 11  |                       | Slips at lock-up.                                                    | ON vehicle  | 1. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |                       |                                                                      |             | 2. Line pressure test                     | <a href="#">TM-225</a> |
|     |                       |                                                                      |             | 3. Engine speed signal                    | <a href="#">TM-251</a> |
|     |                       |                                                                      |             | 4. Primary speed sensor                   | <a href="#">TM-245</a> |
|     |                       |                                                                      |             | 5. Torque converter clutch solenoid valve | <a href="#">TM-252</a> |
|     |                       |                                                                      |             | 6. CAN communication line                 | <a href="#">TM-233</a> |
|     |                       |                                                                      |             | 7. Stall test                             | <a href="#">TM-223</a> |
|     |                       |                                                                      |             | 8. Step motor                             | <a href="#">TM-290</a> |
|     |                       |                                                                      |             | 9. Transmission range switch              | <a href="#">TM-238</a> |
|     |                       |                                                                      |             | 10. Lock-up select solenoid valve         | <a href="#">TM-288</a> |
|     |                       |                                                                      |             | 11. CVT fluid temperature sensor          | <a href="#">TM-241</a> |
|     |                       |                                                                      |             | 12. Secondary speed sensor                | <a href="#">TM-248</a> |
|     |                       |                                                                      |             | 13. Secondary pressure sensor             | <a href="#">TM-271</a> |
|     |                       |                                                                      |             | 14. Control valve                         | <a href="#">TM-327</a> |
|     |                       |                                                                      | OFF vehicle | 15. Torque converter                      | <a href="#">TM-348</a> |
|     |                       |                                                                      |             | 16. Oil pump assembly                     | <a href="#">TM-344</a> |

# SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10B]

| No. | Item  | Symptom                              | Condition   | Diagnostic Item                       | Reference              |
|-----|-------|--------------------------------------|-------------|---------------------------------------|------------------------|
| 12  | Other | No creep at all.                     | ON vehicle  | 1. CVT fluid level and state          | <a href="#">TM-311</a> |
|     |       |                                      |             | 2. Line pressure test                 | <a href="#">TM-225</a> |
|     |       |                                      |             | 3. Accelerator pedal position sensor  | <a href="#">TM-281</a> |
|     |       |                                      |             | 4. Transmission range switch          | <a href="#">TM-238</a> |
|     |       |                                      |             | 5. CAN communication line             | <a href="#">TM-233</a> |
|     |       |                                      |             | 6. Stall test                         | <a href="#">TM-223</a> |
|     |       |                                      |             | 7. CVT position                       | <a href="#">TM-230</a> |
|     |       |                                      |             | 8. Step motor                         | <a href="#">TM-290</a> |
|     |       |                                      |             | 9. Primary speed sensor               | <a href="#">TM-245</a> |
|     |       |                                      |             | 10. Secondary speed sensor            | <a href="#">TM-248</a> |
|     |       |                                      |             | 11. Accelerator pedal position sensor | <a href="#">TM-281</a> |
|     |       |                                      |             | 12. CVT fluid temperature sensor      | <a href="#">TM-241</a> |
|     |       |                                      |             | 13. Secondary pressure sensor         | <a href="#">TM-271</a> |
|     |       |                                      |             | 14. Power supply                      | <a href="#">TM-278</a> |
|     |       |                                      |             | 15. Control valve                     | <a href="#">TM-327</a> |
|     |       |                                      | OFF vehicle | 16. Torque converter                  | <a href="#">TM-348</a> |
|     |       |                                      |             | 17. Oil pump assembly                 | <a href="#">TM-344</a> |
|     |       |                                      |             | 18. Gear system                       |                        |
|     |       |                                      |             | 19. Forward clutch                    |                        |
|     |       |                                      |             | 20. Reverse brake                     |                        |
| 13  | Other | Vehicle cannot run in all positions. | ON vehicle  | 1. CVT fluid level and state          | <a href="#">TM-311</a> |
|     |       |                                      |             | 2. Line pressure test                 | <a href="#">TM-225</a> |
|     |       |                                      |             | 3. Transmission range switch          | <a href="#">TM-238</a> |
|     |       |                                      |             | 4. Stall test                         | <a href="#">TM-223</a> |
|     |       |                                      |             | 5. CVT position                       | <a href="#">TM-230</a> |
|     |       |                                      |             | 6. Step motor                         | <a href="#">TM-290</a> |
|     |       |                                      |             | 7. Primary speed sensor               | <a href="#">TM-245</a> |
|     |       |                                      |             | 8. Secondary speed sensor             | <a href="#">TM-248</a> |
|     |       |                                      |             | 9. Accelerator pedal position sensor  | <a href="#">TM-281</a> |
|     |       |                                      |             | 10. CVT fluid temperature sensor      | <a href="#">TM-241</a> |
|     |       |                                      |             | 11. Secondary pressure sensor         | <a href="#">TM-271</a> |
|     |       |                                      |             | 12. Power supply                      | <a href="#">TM-278</a> |
|     |       |                                      |             | 13. Control valve                     | <a href="#">TM-327</a> |
|     |       |                                      | OFF vehicle | 14. Torque converter                  | <a href="#">TM-348</a> |
|     |       |                                      |             | 15. Oil pump assembly                 | <a href="#">TM-344</a> |
|     |       |                                      |             | 16. Gear system                       |                        |
|     |       |                                      |             | 17. Forward clutch                    |                        |
|     |       |                                      |             | 18. Reverse brake                     |                        |
|     |       |                                      |             | 19. Parking components                |                        |

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10B]

| No. | Item  | Symptom                                                       | Condition   | Diagnostic Item                      | Reference              |
|-----|-------|---------------------------------------------------------------|-------------|--------------------------------------|------------------------|
| 14  | Other | With selector lever in "D" position, driving is not possible. | ON vehicle  | 1. CVT fluid level and state         | <a href="#">TM-311</a> |
|     |       |                                                               |             | 2. Line pressure test                | <a href="#">TM-225</a> |
|     |       |                                                               |             | 3. Transmission range switch         | <a href="#">TM-238</a> |
|     |       |                                                               |             | 4. Stall test                        | <a href="#">TM-223</a> |
|     |       |                                                               |             | 5. CVT position                      | <a href="#">TM-230</a> |
|     |       |                                                               |             | 6. Step motor                        | <a href="#">TM-290</a> |
|     |       |                                                               |             | 7. Primary speed sensor              | <a href="#">TM-245</a> |
|     |       |                                                               |             | 8. Secondary speed sensor            | <a href="#">TM-248</a> |
|     |       |                                                               |             | 9. Accelerator pedal position sensor | <a href="#">TM-281</a> |
|     |       |                                                               |             | 10. CVT fluid temperature sensor     | <a href="#">TM-241</a> |
|     |       |                                                               |             | 11. Secondary pressure sensor        | <a href="#">TM-271</a> |
|     |       |                                                               |             | 12. Power supply                     | <a href="#">TM-278</a> |
|     |       |                                                               |             | 13. Control valve                    | <a href="#">TM-327</a> |
|     |       |                                                               | OFF vehicle | 14. Torque converter                 | <a href="#">TM-348</a> |
|     |       |                                                               |             | 15. Oil pump assembly                | <a href="#">TM-344</a> |
|     |       |                                                               |             | 16. Gear system                      |                        |
|     |       |                                                               |             | 17. Forward clutch                   |                        |
|     |       |                                                               |             | 18. Parking components               |                        |
| 15  | Other | With selector lever in "R" position, driving is not possible. | ON vehicle  | 1. CVT fluid level and state         | <a href="#">TM-311</a> |
|     |       |                                                               |             | 2. Line pressure test                | <a href="#">TM-225</a> |
|     |       |                                                               |             | 3. Transmission range switch         | <a href="#">TM-238</a> |
|     |       |                                                               |             | 4. Stall test                        | <a href="#">TM-223</a> |
|     |       |                                                               |             | 5. CVT position                      | <a href="#">TM-230</a> |
|     |       |                                                               |             | 6. Step motor                        | <a href="#">TM-290</a> |
|     |       |                                                               |             | 7. Primary speed sensor              | <a href="#">TM-245</a> |
|     |       |                                                               |             | 8. Secondary speed sensor            | <a href="#">TM-248</a> |
|     |       |                                                               |             | 9. Accelerator pedal position sensor | <a href="#">TM-281</a> |
|     |       |                                                               |             | 10. CVT fluid temperature sensor     | <a href="#">TM-241</a> |
|     |       |                                                               |             | 11. Secondary pressure sensor        | <a href="#">TM-271</a> |
|     |       |                                                               |             | 12. Power supply                     | <a href="#">TM-278</a> |
|     |       |                                                               |             | 13. Control valve                    | <a href="#">TM-327</a> |
|     |       |                                                               | OFF vehicle | 14. Torque converter                 | <a href="#">TM-348</a> |
|     |       |                                                               |             | 15. Oil pump assembly                | <a href="#">TM-344</a> |
|     |       |                                                               |             | 16. Gear system                      |                        |
|     |       |                                                               |             | 17. Reverse brake                    |                        |
|     |       |                                                               |             | 18. Parking components               |                        |

# SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10B]

| No. | Item  | Symptom                        | Condition   | Diagnostic Item                           | Reference              |
|-----|-------|--------------------------------|-------------|-------------------------------------------|------------------------|
| 16  | Other | Judder occurs during lock-up.  | ON vehicle  | 1. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |       |                                |             | 2. Engine speed signal                    | <a href="#">TM-251</a> |
|     |       |                                |             | 3. Primary speed sensor                   | <a href="#">TM-245</a> |
|     |       |                                |             | 4. Secondary speed sensor                 | <a href="#">TM-248</a> |
|     |       |                                |             | 5. Accelerator pedal position sensor      | <a href="#">TM-281</a> |
|     |       |                                |             | 6. CAN communication line                 | <a href="#">TM-233</a> |
|     |       |                                |             | 7. Torque converter clutch solenoid valve | <a href="#">TM-252</a> |
|     |       |                                |             | 8. Control valve                          | <a href="#">TM-327</a> |
|     |       |                                | OFF vehicle | 9. Torque converter                       | <a href="#">TM-348</a> |
| 17  | Other | Strange noise in "D" position. | ON vehicle  | 1. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |       |                                |             | 2. Engine speed signal                    | <a href="#">TM-251</a> |
|     |       |                                |             | 3. CAN communication line                 | <a href="#">TM-233</a> |
|     |       |                                |             | 4. Control valve                          | <a href="#">TM-327</a> |
|     |       |                                | OFF vehicle | 5. Torque converter                       | <a href="#">TM-348</a> |
|     |       |                                |             | 6. Oil pump assembly                      | <a href="#">TM-344</a> |
|     |       |                                |             | 7. Gear system                            |                        |
|     |       |                                |             | 8. Forward clutch                         |                        |
|     |       |                                |             | 9. Bearing                                |                        |
| 18  | Other | Strange noise in "R" position. | ON vehicle  | 1. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |       |                                |             | 2. Engine speed signal                    | <a href="#">TM-251</a> |
|     |       |                                |             | 3. CAN communication line                 | <a href="#">TM-233</a> |
|     |       |                                |             | 4. Control valve                          | <a href="#">TM-327</a> |
|     |       |                                | OFF vehicle | 5. Torque converter                       | <a href="#">TM-348</a> |
|     |       |                                |             | 6. Oil pump assembly                      | <a href="#">TM-344</a> |
|     |       |                                |             | 7. Gear system                            |                        |
|     |       |                                |             | 8. Reverse brake                          |                        |
| 19  | Other | Strange noise in "N" position. | ON vehicle  | 1. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |       |                                |             | 2. Engine speed signal                    | <a href="#">TM-251</a> |
|     |       |                                |             | 3. CAN communication line                 | <a href="#">TM-233</a> |
|     |       |                                |             | 4. Control valve                          | <a href="#">TM-327</a> |
|     |       |                                | OFF vehicle | 5. Torque converter                       | <a href="#">TM-348</a> |
|     |       |                                |             | 6. Oil pump assembly                      | <a href="#">TM-344</a> |
|     |       |                                |             | 7. Gear system                            |                        |

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10B]

| No. | Item  | Symptom                                                                                                                                                                                   | Condition   | Diagnostic Item                      | Reference              |
|-----|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|--------------------------------------|------------------------|
| 20  | Other | Vehicle does not de-<br>celerate by engine<br>brake.                                                                                                                                      | ON vehicle  | 1. CVT fluid level and state         | <a href="#">TM-311</a> |
|     |       |                                                                                                                                                                                           |             | 2. CVT position                      | <a href="#">TM-230</a> |
|     |       |                                                                                                                                                                                           |             | 3. CAN communication line            | <a href="#">TM-233</a> |
|     |       |                                                                                                                                                                                           |             | 4. Step motor                        | <a href="#">TM-290</a> |
|     |       |                                                                                                                                                                                           |             | 5. Primary speed sensor              | <a href="#">TM-245</a> |
|     |       |                                                                                                                                                                                           |             | 6. Secondary speed sensor            | <a href="#">TM-248</a> |
|     |       |                                                                                                                                                                                           |             | 7. Line pressure test                | <a href="#">TM-225</a> |
|     |       |                                                                                                                                                                                           |             | 8. Engine speed signal               | <a href="#">TM-251</a> |
|     |       |                                                                                                                                                                                           |             | 9. Accelerator pedal position sensor | <a href="#">TM-281</a> |
|     |       |                                                                                                                                                                                           |             | 10. Control valve                    | <a href="#">TM-344</a> |
| 21  |       | Maximum speed low.                                                                                                                                                                        | ON vehicle  | 1. CVT fluid level and state         | <a href="#">TM-311</a> |
|     |       |                                                                                                                                                                                           |             | 2. Line pressure test                | <a href="#">TM-225</a> |
|     |       |                                                                                                                                                                                           |             | 3. Accelerator pedal position sensor | <a href="#">TM-281</a> |
|     |       |                                                                                                                                                                                           |             | 4. CAN communication line            | <a href="#">TM-233</a> |
|     |       |                                                                                                                                                                                           |             | 5. Stall test                        | <a href="#">TM-223</a> |
|     |       |                                                                                                                                                                                           |             | 6. Step motor                        | <a href="#">TM-290</a> |
|     |       |                                                                                                                                                                                           |             | 7. Primary speed sensor              | <a href="#">TM-245</a> |
|     |       |                                                                                                                                                                                           |             | 8. Secondary speed sensor            | <a href="#">TM-248</a> |
|     |       |                                                                                                                                                                                           |             | 9. Secondary pressure sensor         | <a href="#">TM-271</a> |
|     |       |                                                                                                                                                                                           |             | 10. CVT fluid temperature sensor     | <a href="#">TM-241</a> |
|     |       |                                                                                                                                                                                           |             | 11. Control valve                    | <a href="#">TM-327</a> |
|     |       |                                                                                                                                                                                           | OFF vehicle | 12. Torque converter                 | <a href="#">TM-348</a> |
|     |       |                                                                                                                                                                                           |             | 13. Oil pump assembly                | <a href="#">TM-344</a> |
|     |       |                                                                                                                                                                                           |             | 14. Gear system                      |                        |
|     |       |                                                                                                                                                                                           |             | 15. Forward clutch                   |                        |
| 22  |       | With selector lever in<br>“P” position, vehicle<br>does not enter park-<br>ing condition or, with<br>selector lever in an-<br>other position, park-<br>ing condition is not<br>cancelled. | ON vehicle  | 1. Transmission range switch         | <a href="#">TM-238</a> |
|     |       |                                                                                                                                                                                           |             | 2. CVT position                      | <a href="#">TM-230</a> |
|     |       |                                                                                                                                                                                           | OFF vehicle | 3. Parking components                | <a href="#">TM-344</a> |
| 23  |       | Vehicle runs with CVT<br>in “P” position.                                                                                                                                                 | ON vehicle  | 1. Transmission range switch         | <a href="#">TM-238</a> |
|     |       |                                                                                                                                                                                           |             | 2. CVT fluid level and state         | <a href="#">TM-311</a> |
|     |       |                                                                                                                                                                                           |             | 3. CVT position                      | <a href="#">TM-230</a> |
|     |       |                                                                                                                                                                                           |             | 4. Control valve                     | <a href="#">TM-327</a> |
|     |       |                                                                                                                                                                                           | OFF vehicle | 5. Parking components                | <a href="#">TM-344</a> |
|     |       |                                                                                                                                                                                           |             | 6. Gear system                       |                        |



# SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10B]

| No. | Item  | Symptom                                                   | Condition   | Diagnostic Item                           | Reference              |
|-----|-------|-----------------------------------------------------------|-------------|-------------------------------------------|------------------------|
| 24  | Other | Vehicle runs with CVT in "N" position.                    | ON vehicle  | 1. Transmission range switch              | <a href="#">TM-238</a> |
|     |       |                                                           |             | 2. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |       |                                                           |             | 3. CVT position                           | <a href="#">TM-230</a> |
|     |       |                                                           |             | 4. Control valve                          | <a href="#">TM-327</a> |
|     |       |                                                           | OFF vehicle | 5. Gear system                            | <a href="#">TM-344</a> |
|     |       |                                                           |             | 6. Forward clutch                         |                        |
|     |       |                                                           |             | 7. Reverse brake                          |                        |
| 25  | Other | Engine stall.                                             | ON vehicle  | 1. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |       |                                                           |             | 2. Engine speed signal                    | <a href="#">TM-251</a> |
|     |       |                                                           |             | 3. Primary speed sensor                   | <a href="#">TM-245</a> |
|     |       |                                                           |             | 4. Torque converter clutch solenoid valve | <a href="#">TM-252</a> |
|     |       |                                                           |             | 5. CAN communication line                 | <a href="#">TM-233</a> |
|     |       |                                                           |             | 6. Stall test                             | <a href="#">TM-223</a> |
|     |       |                                                           |             | 7. Secondary pressure sensor              | <a href="#">TM-271</a> |
|     |       |                                                           |             | 8. Control valve                          | <a href="#">TM-327</a> |
|     |       |                                                           | OFF vehicle | 9. Torque converter                       | <a href="#">TM-348</a> |
| 26  | Other | Engine stalls when selector lever shifted "N"→"D" or "R". | ON vehicle  | 1. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |       |                                                           |             | 2. Engine speed signal                    | <a href="#">TM-251</a> |
|     |       |                                                           |             | 3. Primary speed sensor                   | <a href="#">TM-245</a> |
|     |       |                                                           |             | 4. Torque converter clutch solenoid valve | <a href="#">TM-252</a> |
|     |       |                                                           |             | 5. CAN communication line                 | <a href="#">TM-233</a> |
|     |       |                                                           |             | 6. Stall test                             | <a href="#">TM-223</a> |
|     |       |                                                           |             | 7. Control valve                          | <a href="#">TM-327</a> |
|     |       |                                                           | OFF vehicle | 8. Torque converter                       | <a href="#">TM-348</a> |
| 27  | Other | Engine speed does not return to idle.                     | ON vehicle  | 1. CVT fluid level and state              | <a href="#">TM-311</a> |
|     |       |                                                           |             | 2. Accelerator pedal position sensor      | <a href="#">TM-281</a> |
|     |       |                                                           |             | 3. Secondary speed sensor                 | <a href="#">TM-248</a> |
|     |       |                                                           |             | 4. CAN communication line                 | <a href="#">TM-233</a> |
|     |       |                                                           |             | 5. Control valve                          | <a href="#">TM-344</a> |

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10B]

| No. | Item                                 | Symptom                                                                                                                       | Condition                      | Diagnostic Item                      | Reference                     |
|-----|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|--------------------------------|--------------------------------------|-------------------------------|
| 28  | Other                                | CVT does not shift                                                                                                            | ON vehicle                     | 1. CVT fluid level and state         | <a href="#">TM-311</a>        |
|     |                                      |                                                                                                                               |                                | 2. CVT position                      | <a href="#">TM-230</a>        |
|     |                                      |                                                                                                                               |                                | 3. Line pressure test                | <a href="#">TM-225</a>        |
|     |                                      |                                                                                                                               |                                | 4. Engine speed signal               | <a href="#">TM-251</a>        |
|     |                                      |                                                                                                                               |                                | 5. Accelerator pedal position sensor | <a href="#">TM-281</a>        |
|     |                                      |                                                                                                                               |                                | 6. CAN communication line            | <a href="#">TM-233</a>        |
|     |                                      |                                                                                                                               |                                | 7. Primary speed sensor              | <a href="#">TM-245</a>        |
|     |                                      |                                                                                                                               |                                | 8. Secondary speed sensor            | <a href="#">TM-248</a>        |
|     |                                      |                                                                                                                               |                                | 9. Step motor                        | <a href="#">TM-290</a>        |
|     |                                      |                                                                                                                               |                                | 10. Control valve                    | <a href="#">TM-327</a>        |
|     |                                      | OFF vehicle                                                                                                                   | 11. Oil pump assembly          | <a href="#">TM-344</a>               |                               |
| 29  |                                      | Engine does not start in “N” or “P” position.                                                                                 | ON vehicle                     | 1. Ignition switch and starter       | <a href="#">PG-42, STR-24</a> |
|     |                                      |                                                                                                                               |                                | 2. CVT position                      | <a href="#">TM-230</a>        |
|     |                                      |                                                                                                                               |                                | 3. Transmission range switch         | <a href="#">TM-238</a>        |
| 30  |                                      | Engine starts in positions other than “N” or “P”.                                                                             | ON vehicle                     | 1. Ignition switch and starter       | <a href="#">PG-42, STR-24</a> |
|     |                                      |                                                                                                                               |                                | 2. CVT position                      | <a href="#">TM-230</a>        |
|     |                                      |                                                                                                                               |                                | 3. Transmission range switch         | <a href="#">TM-238</a>        |
| 31  |                                      | When brake pedal is depressed with ignition switch ON, selector lever cannot be shifted from “P” position to other position.  | ON vehicle                     | 1. Stop lamp switch                  | <a href="#">TM-296</a>        |
|     |                                      |                                                                                                                               |                                | 2. Shift lock solenoid               |                               |
|     |                                      |                                                                                                                               |                                | 3. CVT shift selector                |                               |
| 32  |                                      | When brake pedal is not depressed with ignition switch ON, selector lever can be shifted from “P” position to other position. | ON vehicle                     | 1. Stop lamp switch                  | <a href="#">TM-296</a>        |
|     | 2. Shift lock solenoid               |                                                                                                                               |                                |                                      |                               |
|     | 3. CVT shift selector                |                                                                                                                               |                                |                                      |                               |
| 33  | Cannot be changed to manual mode.    | ON vehicle                                                                                                                    | 1. Manual mode switch          | <a href="#">TM-265</a>               |                               |
|     |                                      |                                                                                                                               | 2. CAN communication line      | <a href="#">TM-233</a>               |                               |
|     |                                      |                                                                                                                               | 3. Combination meters          | <a href="#">MWI-49</a>               |                               |
| 34  | CVT indicator lamp does not come on. | ON vehicle                                                                                                                    | 1. CAN communication line      | <a href="#">TM-233</a>               |                               |
|     |                                      |                                                                                                                               | 2. Combination meters          | <a href="#">MWI-49</a>               |                               |
|     |                                      |                                                                                                                               | 3. TCM power supply and ground | <a href="#">TM-278</a>               |                               |

# PERIODIC MAINTENANCE

## CVT FLUID


### Inspection

INFOID:0000000011463824


#### CHECKING CVT FLUID

The fluid level should be checked with the fluid warmed up to 50 to 80°C (122 to 176°F). The fluid level check procedure is as follows:

1. Check for fluid leakage.
2. With the engine warmed up, drive the vehicle in an urban area. When ambient temperature is 20°C (68°F), it takes about 10 minutes for the CVT fluid to warm up to 50 to 80°C (122 to 176°F).
3. Park the vehicle on a level surface.
4. Apply parking brake firmly.
5. With engine at idle, while depressing brake pedal, move shift selector throughout the entire shift range.

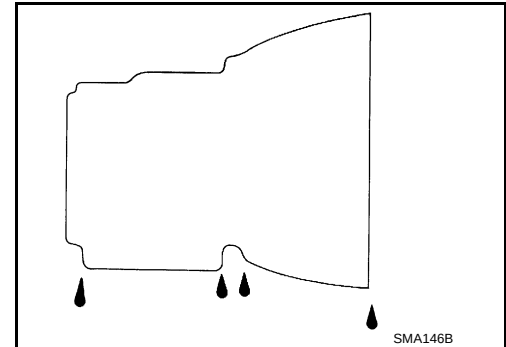


6. Pull out the CVT fluid level gauge from the CVT fluid charging pipe after pressing the tab on the CVT fluid level gauge to release the lock.

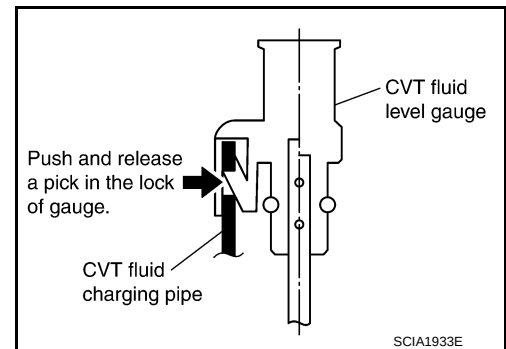

7. Wipe fluid off the CVT fluid level gauge. Insert the CVT fluid level gauge rotating 180° from the originally installed position, then securely push the CVT fluid level gauge until it meets the top end of the CVT fluid charging pipe.

**CAUTION:**


**When wiping away the CVT fluid level gauge, always use lint-free paper, not a cloth rag.**

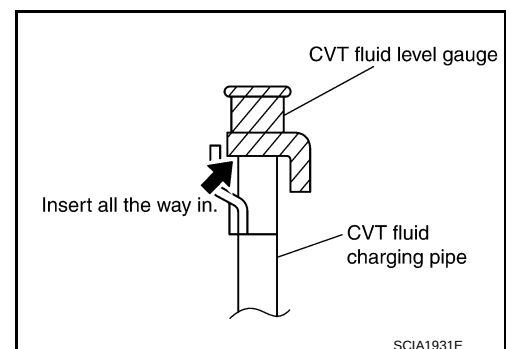

8. Place the selector lever in "P" or "N" and check that the fluid level is within the specified range.

**CAUTION:**

**When reinstalling CVT fluid level gauge, insert it into the CVT fluid charging pipe and rotate it to the original installation position until securely locked.**

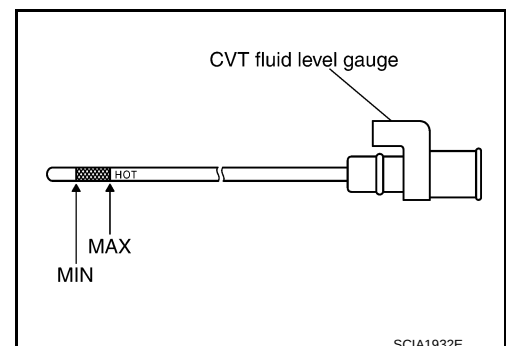

#### CVT FLUID CONDITION

## CVT FLUID


### < PERIODIC MAINTENANCE >

[CVT: RE0F10B]

Check CVT fluid condition.

- If CVT fluid is very dark or smells burned, check operation of CVT. Flush cooling system after repair of CVT.
- If CVT fluid contains frictional material (clutches, brakes, etc.), replace radiator and flush cooler line using cleaning solvent and compressed air after repair of CVT. Refer to [TM-220, "Cleaning"](#).

| Fluid status                          | Conceivable cause                                   | Required operation                                                                                                      |
|---------------------------------------|-----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| Varnished (viscous varnish state)     | CVT fluid become degraded due to high temperatures. | Replace the CVT fluid and check the CVT main unit and the vehicle for malfunctions (wire harnesses, cooler pipes, etc.) |
| Milky white or cloudy                 | Water in the fluid                                  | Replace the CVT fluid and check for places where water is getting in.                                                   |
| Large amount of metal powder mixed in | Unusual wear of sliding parts within CVT            | Replace the CVT fluid and check for improper operation of the CVT.                                                      |

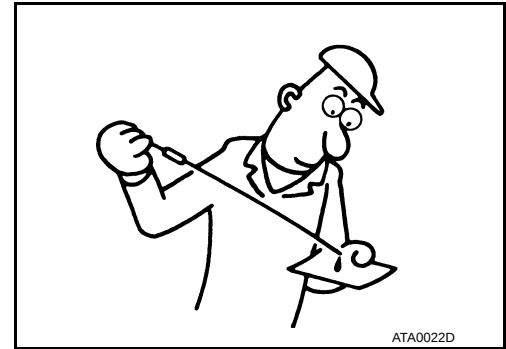

# CVT SHIFT SELECTOR

< REMOVAL AND INSTALLATION >


[CVT: RE0F10B]

## REMOVAL AND INSTALLATION

### CVT SHIFT SELECTOR

#### Exploded View

INFOID:0000000011463826

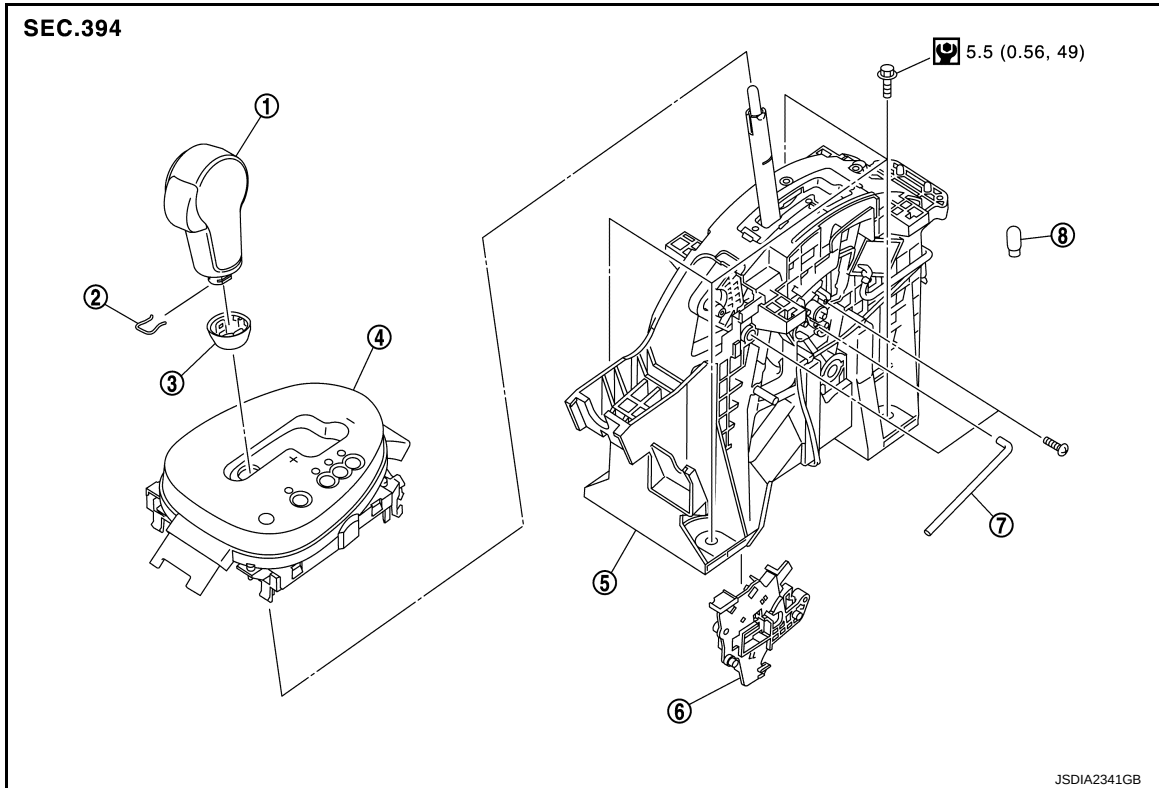

- |                              |                                |                    |
|------------------------------|--------------------------------|--------------------|
| 1. Selector lever knob       | 2. Lock pin                    | 3. Knob cover      |
| 4. Position indication panel | 5. CVT shift selector assembly | 6. Shift lock unit |
| 7. Key interlock rod*        | 8. Position indicator bulb     |                    |



:N·m (kg-m, in-lb)

\*: Without push engine starter

### Removal and Installation

INFOID:0000000011463827

#### REMOVAL

##### CAUTION:

**Always apply the parking brake before performing removal and installation.**

1. Disconnect battery cable from negative terminal. Refer to [PG-116, "Removal and Installation"](#).
2. Shift the selector lever to "N" position.
3. Remove the center console. Refer to [IP-24, "Removal and Installation"](#).
4. Disconnect the CVT shift selector connector.
5. Shift the selector lever to "P" position.
6. Remove the key interlock cable from the CVT shift selector assembly. Refer to [TM-321, "Removal and Installation"](#) (Without push starter system).
7. Remove the control cable from the CVT shift selector assembly. Refer to [TM-316, "Removal and Installation"](#).
8. Remove the CVT shift selector assembly.

#### INSTALLATION


Note the following, and install in the reverse order of removal.

# CVT SHIFT SELECTOR

## < REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

- When connecting the control cable (1) to the CVT shift selector assembly (2), face the grooved surface of the rib (A) up and insert the control cable until it stops.

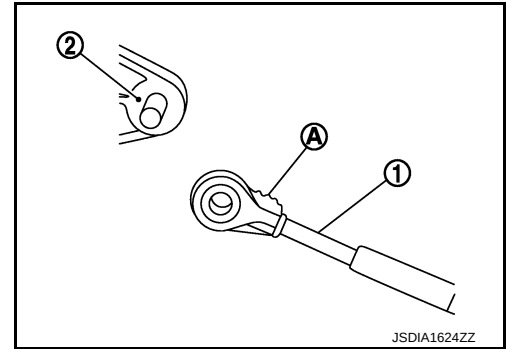


## Disassembly and Assembly


INFOID:000000011463828

### DISASSEMBLY

- Slide the selector lever knob cover (1) down.  
**CAUTION:**  
**Never damage the knob cover.**
- Pull out the lock pin (2).
- Pull the selector lever knob (3) and knob cover upwards to remove them.
- Remove the position lamp.

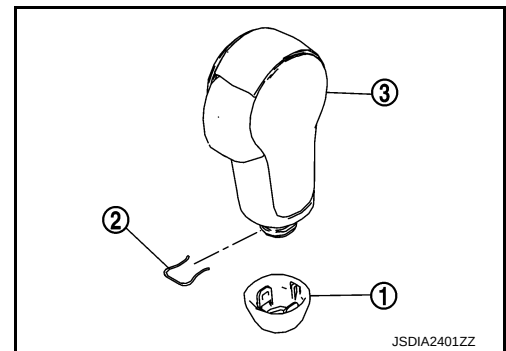

- Disengage the hooks (A) (4 locations), and lift up the position indication panel (1) to separate it from the CVT shift selector assembly (2).  
**CAUTION:**  
**Never damage the CVT shift selector assembly.**
- Remove the shift lock unit from the CVT shift selector assembly.
- Disconnect the park position switch connector, detent switch connector, and shift lock solenoid connector from the shift lock unit.

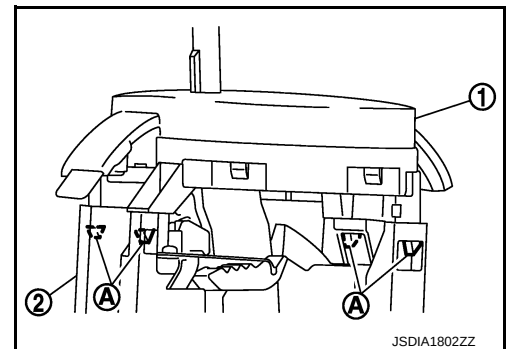

### ASSEMBLY


Note the following, and assemble in the reverse order of disassembly.

- Follow the procedure below and place the selector knob onto the CVT shift selector.

- Install the lock pin (2) onto the selector lever knob (3).
- Install the knob cover (1) onto the selector lever knob.
- Press the selector lever knob onto the selector lever until it clicks.

#### **CAUTION:**

- When pressing the selector lever knob onto the selector lever, never press the selector lever knob button.
- Never strike the selector lever knob to press it into place.

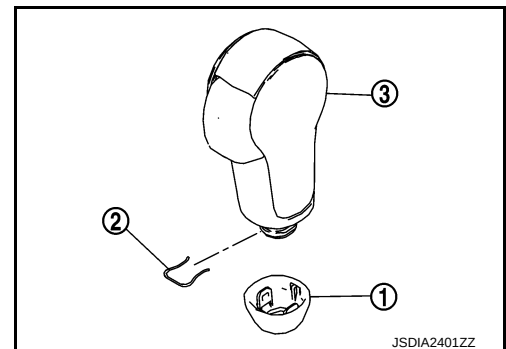

## Inspection

INFOID:000000011463829

### INSPECTION AFTER INSTALLATION

- Check the CVT position. If a malfunction is found, adjust the CVT position. Refer to [TM-230, "Inspection and Adjustment"](#).

## CVT SHIFT SELECTOR

< REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

- The key can be removed only when the selector lever is in the “P” position. (With key interlock)
- It must not be possible to turn the ignition switch to LOCK when the selector lever is not in the “P” position. (With key interlock)

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# CONTROL CABLE


< REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

## CONTROL CABLE

### Exploded View

INFOID:000000011463830

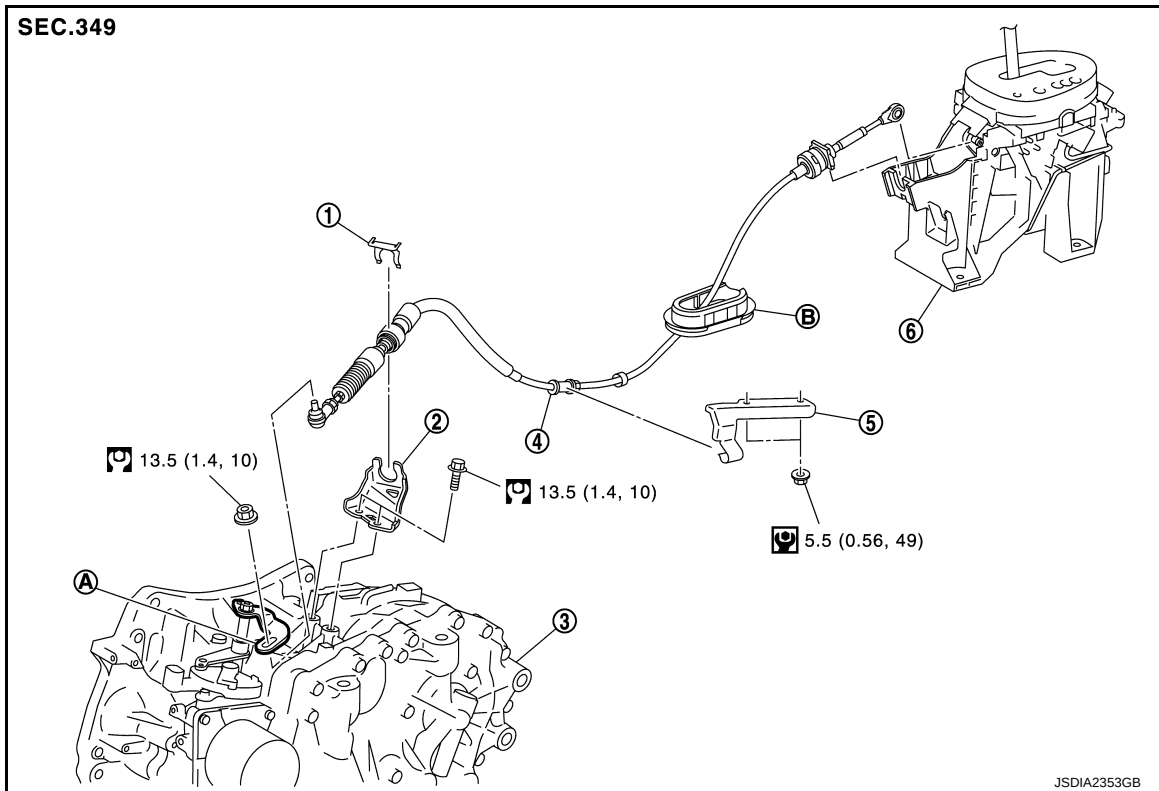

- |                  |              |                                |
|------------------|--------------|--------------------------------|
| 1. Lock plate    | 2. Bracket A | 3. Transaxle assembly          |
| 4. Control cable | 5. Bracket B | 6. CVT shift selector assembly |
| A: Manual lever  | B: Grommet   |                                |

: N·m (kg-m, ft-lb)

: N·m (kg-m, in-lb)

## Removal and Installation


INFOID:000000011463831

### REMOVAL

#### CAUTION:

**Always apply the parking brake before performing removal and installation.**

1. Remove the battery. Refer to [PG-116, "Removal and Installation"](#).
2. Remove the control cable from the CVT shift selector assembly. Refer to [TM-313, "Removal and Installation"](#).
3. Disengage the pawls (B) of the grommet (A), and pull downwards to remove.
4. Remove the control cable installation nut from the manual lever.

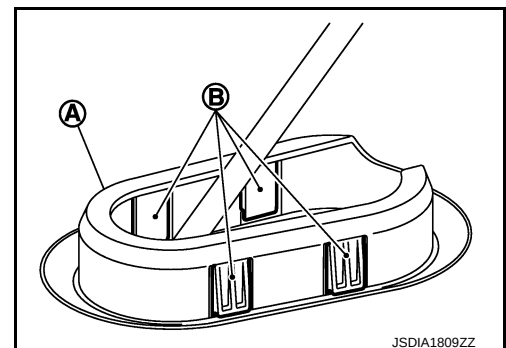




# CONTROL CABLE

## < REMOVAL AND INSTALLATION >

[CVT: RE0F10B]


5. Remove the lock plate (1).
6. Remove center muffler from the mounting rubber and lower the center muffler downward. Refer to [EX-10. "Removal and Installation"](#).
7. Lift up the heat plate.

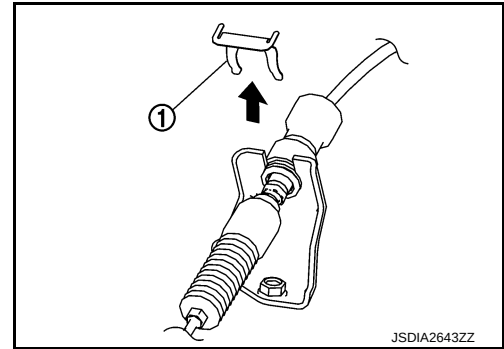

8. Remove the control cable (1) from the bracket (2).

↶ :Vehicle front

9. Remove the control cable from the vehicle.
10. Remove bracket.

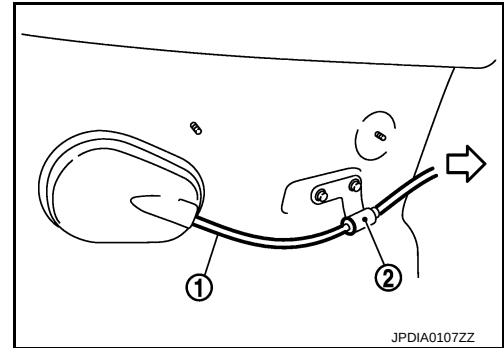


## INSTALLATION

Note the following, and install in the reverse order of removal.

- From below the vehicle, press the grommet (A) into place until the pawls (B) make a click sound.


### CAUTION:

- Place the grommet on the floor, then fasten it in place from below the vehicle.
- Check that pulling down on the grommet does not disconnect it.

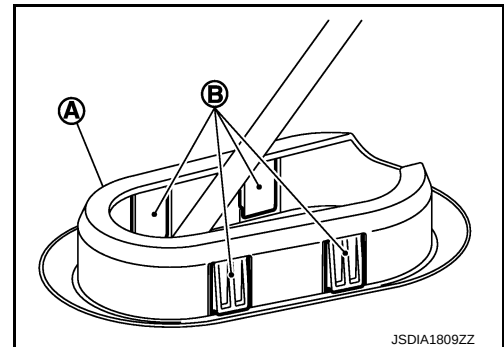

- Pay attention to the following when connecting the control cable to the CVT shift selector.

1. When connecting the control cable (1) to the CVT shift selector assembly (2), face the grooved surface of the rib (A) up and insert the control cable until it stops.

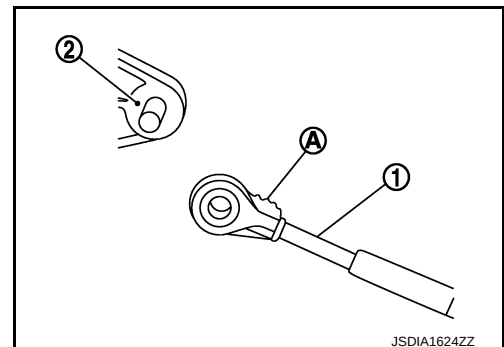

## CONTROL CABLE


### < REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

2. Install the socket (A) onto the CVT shift selector.

**CAUTION:**

- Place the socket onto the CVT shift lever, then fasten it in place from above.
- Check that the pulling on the socket does not disconnect it.

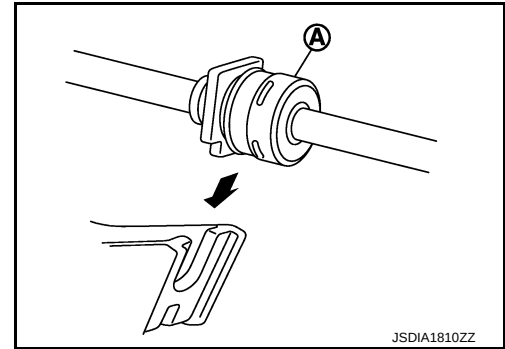

### Inspection

INFOID:0000000011463832

#### INSPECTION AFTER INSTALLATION

Check the CVT position. If a malfunction is found, adjust the CVT position. Refer to [TM-230. "Inspection and Adjustment"](#).

# PADDLE SHIFTER


< REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

## PADDLE SHIFTER

### Exploded View

INFOID:0000000011463833

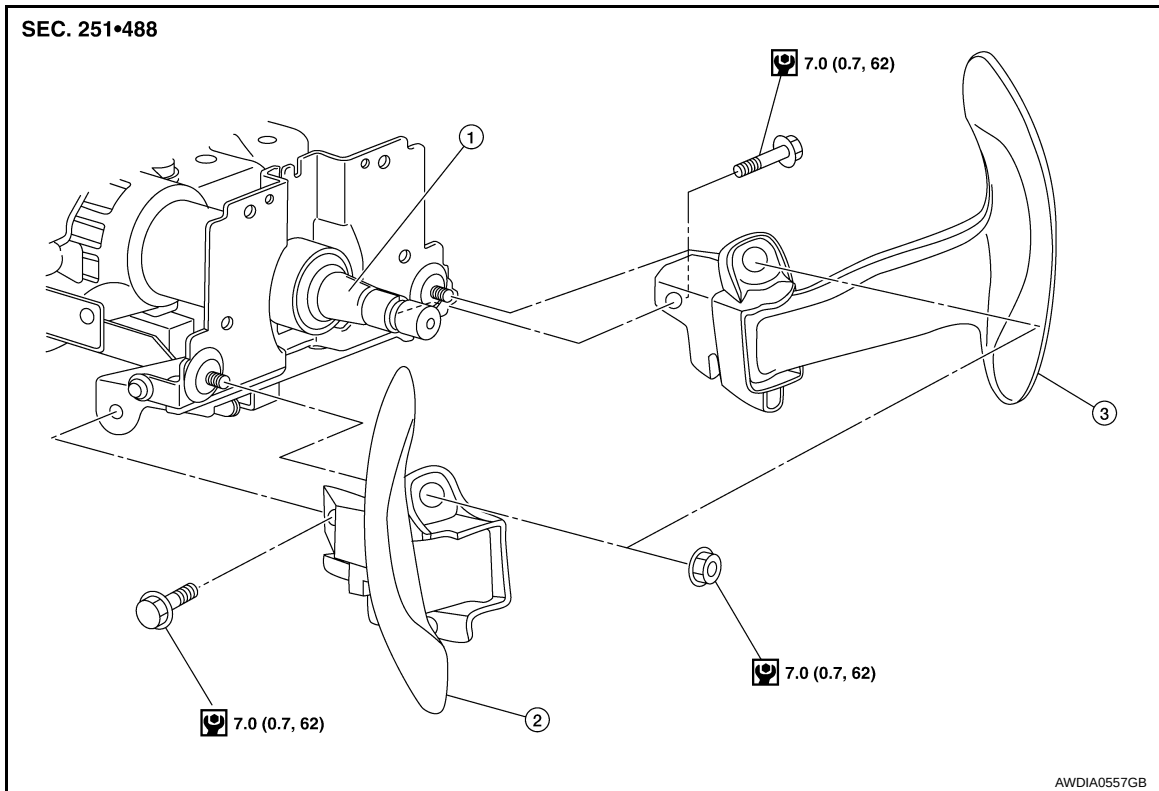

1. Steering column assembly      2. Paddle shifter (shift-down switch)      3. Paddle shifter (shift-up switch)

 : N·m (kg-m, in-lb)

## Removal and Installation

INFOID:0000000011463834

### REMOVAL

1. Park the vehicle on a level surface.
2. Remove the driver air bag module. Refer to [SR-11, "Removal and Installation"](#).
3. Remove the steering wheel. Refer to [ST-9, "Removal and Installation"](#).
4. Remove the column cover. Refer to [IP-13, "Removal and Installation"](#).

## PADDLE SHIFTER

### < REMOVAL AND INSTALLATION >


[CVT: RE0F10B]

5. Remove the paddle shifter connector (C) and (D) from paddle shifter.

A : Side of paddle shifter (shift-down switch)

B : Side of paddle shifter (shift-up switch)

6. Remove the paddle shifter mounting bolts (E) and nuts (F).
7. Remove the paddle shifter from the steering column assembly.

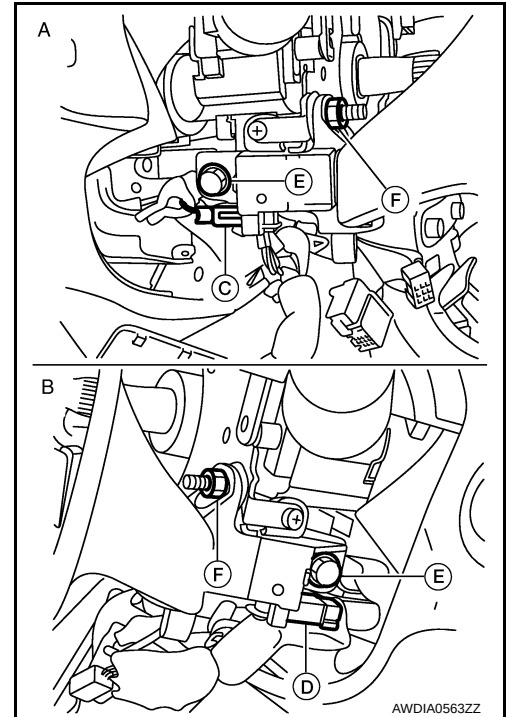

### INSTALLATION

Installation is in the reverse order of removal.

# KEY INTERLOCK CABLE


< REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

## KEY INTERLOCK CABLE

### Exploded View

INFOID:0000000011463835

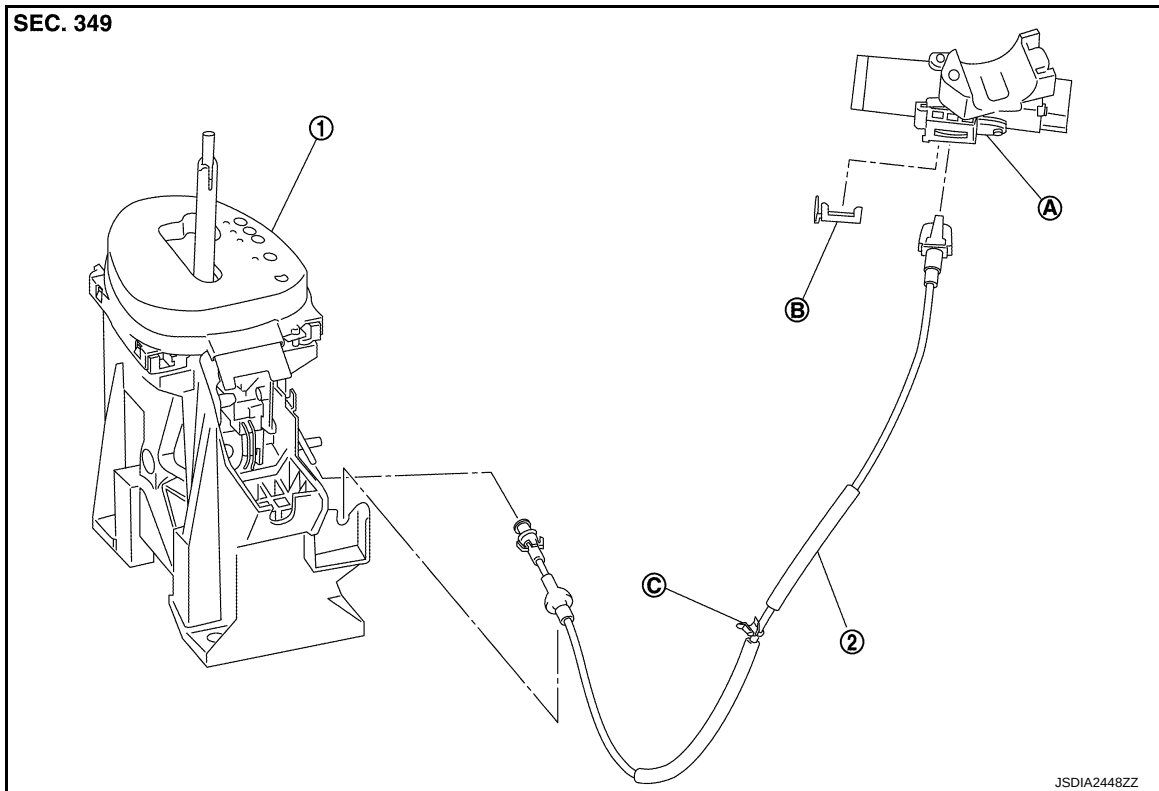

- |                                |                        |         |
|--------------------------------|------------------------|---------|
| 1. CVT shift selector assembly | 2. Key interlock cable |         |
| A: Key cylinder                | B: Clip                | C: Clip |

### Removal and Installation

INFOID:0000000011463836

#### REMOVAL


##### CAUTION:

**Always apply the parking brake before performing removal and installation.**

- Shift the selector lever to the "N" position.
- Remove the selector lever knob. Refer to [TM-314, "Disassembly and Assembly"](#).
- Shift the selector lever to the "P" position.
- Remove the center console. Refer to [IP-24, "Removal and Installation"](#).
- Press the pawls (B) of the key interlock cable slider (A) while sliding it in the direction of the casing cap (C), and separate the adjusting holder (D) and slider.

E :Key interlock rod

- Remove the key interlock cable from the CVT shift selector.
- Remove the steering column lower cover and driver instrument lower panel. Refer to [IP-13, "Removal and Installation"](#).

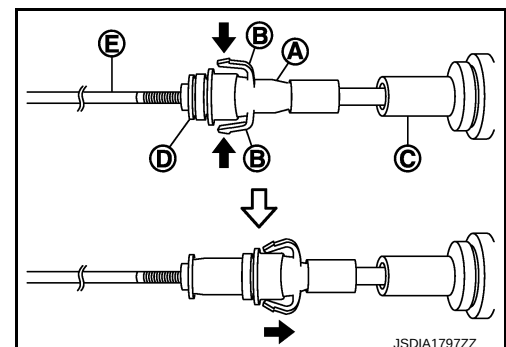

## KEY INTERLOCK CABLE


### < REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

8. Lift clip (A) in the direction of the arrow (←C) and remove in the direction of the arrow (←D).

- 1 :Key interlock cable  
B :Key cylinder

9. Disconnect the key interlock cable from the key cylinder.  
10. Disengage the clip and disconnect the key interlock cable from the vehicle.

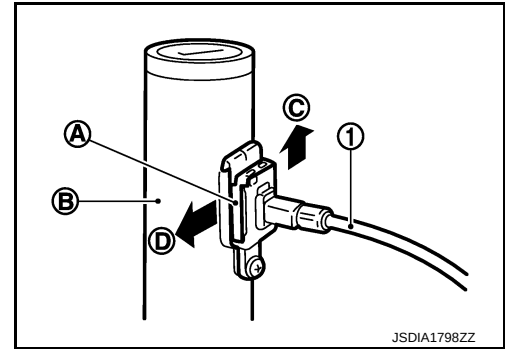


### INSTALLATION

Note the following, and install in the reverse order of removal.

- Install the adjusting holder (A) onto the key interlock rod (B), then install the casing cap (C) onto the CVT shift selector cable bracket (D).

#### CAUTION:


- When installing the key interlock cable, never bend or twist the cable forcefully.
- After connecting the key interlock cable to the CVT shift selector cable bracket, be sure to check that the casing cap is completely fastened to the cable bracket. If the casing cap is easily displaced, replace the key interlock cable.

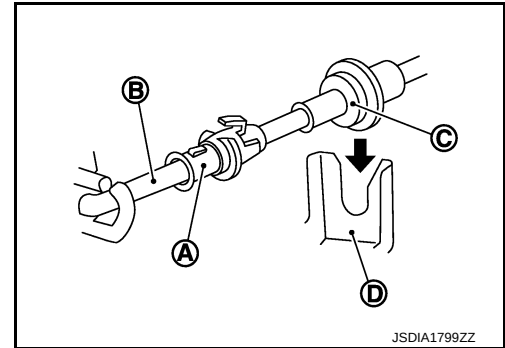

- While pressing the detent rod (B) down, slide the key interlock cable slider (A) toward the key interlock rod (D) side, and install the adjusting holder (C) and key interlock rod.

#### CAUTION:

- Never squeeze the pawls on the key interlock cable slider when holding the slider.
- Never apply force in a perpendicular direction to the key interlock rod when sliding the slider.

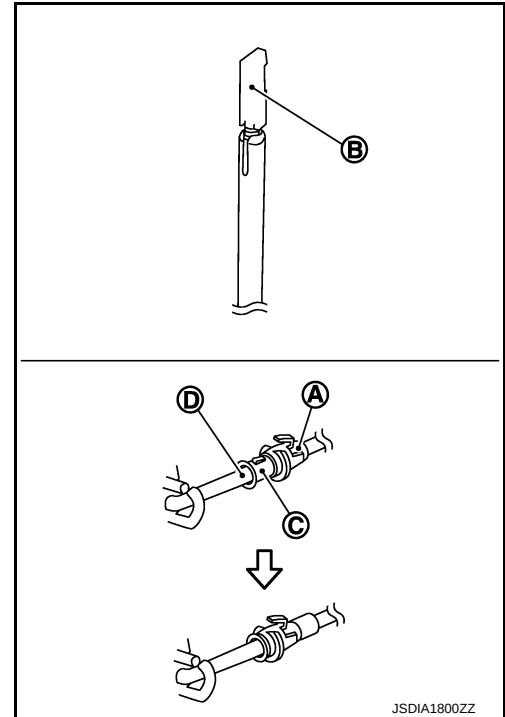

### Inspection

INFOID:000000011463837

### INSPECTION AFTER INSTALLATION

- Check the CVT position. If a malfunction is found, adjust the CVT position. Refer to [TM-230, "Inspection and Adjustment"](#).
- The key can be removed only when the selector lever is in the "P" position.
- It must not be possible to turn the ignition switch to LOCK when the selector lever is not in the "P" position.

# TRANSMISSION RANGE SWITCH


< REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

## TRANSMISSION RANGE SWITCH

Exploded View

INFOID:0000000011463838

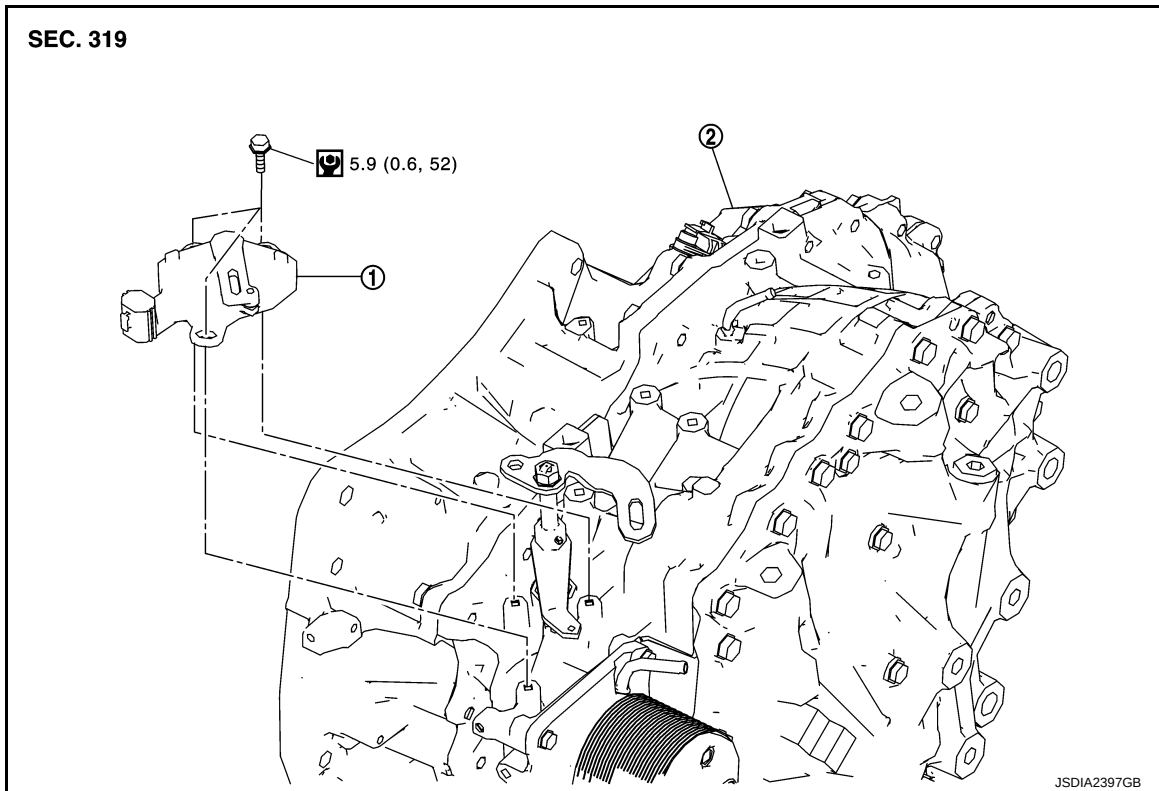

1. Transmission range switch
2. Transaxle assembly

: N·m (kg-m, in-lb)

## Removal and Installation

INFOID:0000000011463839

### REMOVAL

1. Remove battery. Refer to [PG-116, "Removal and Installation"](#).
2. Remove transmission range switch connector.
3. Remove control cable. Refer to [TM-316, "Removal and Installation"](#).
4. Remove transmission range switch from transaxle assembly.

### INSTALLATION

Install in the reverse order of removal.

## Inspection and Adjustment

INFOID:0000000011463840

### ADJUSTMENT OF TRANSMISSION RANGE SWITCH


1. Move selector lever to "N" position.
2. Remove control cable from manual lever.

## TRANSMISSION RANGE SWITCH

### < REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

3. Loosen mounting bolts (↔) of transmission range switch. Insert a pin ( $\phi 4$  mm) into the adjusting holes (A) on both transmission range switch and manual lever for adjusting the position.
4. Tighten mounting bolts of transmission range switch.
5. Connect control cable on manual lever. Refer to [TM-230, "Inspection and Adjustment"](#).

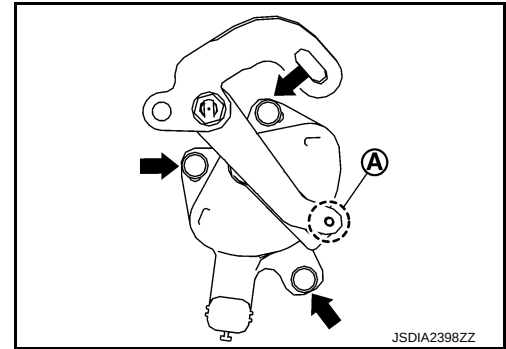

### ADJUSTMENT AFTER INSTALLATION

Adjust the CVT positions after installing the CVT shift selector. Refer to [TM-230, "Inspection and Adjustment"](#).

### INSPECTION AFTER INSTALLATION


Check the CVT positions after adjusting the CVT positions. Refer to [TM-230, "Inspection and Adjustment"](#).



## TCM

## Exploded View

INFOID:0000000011463841

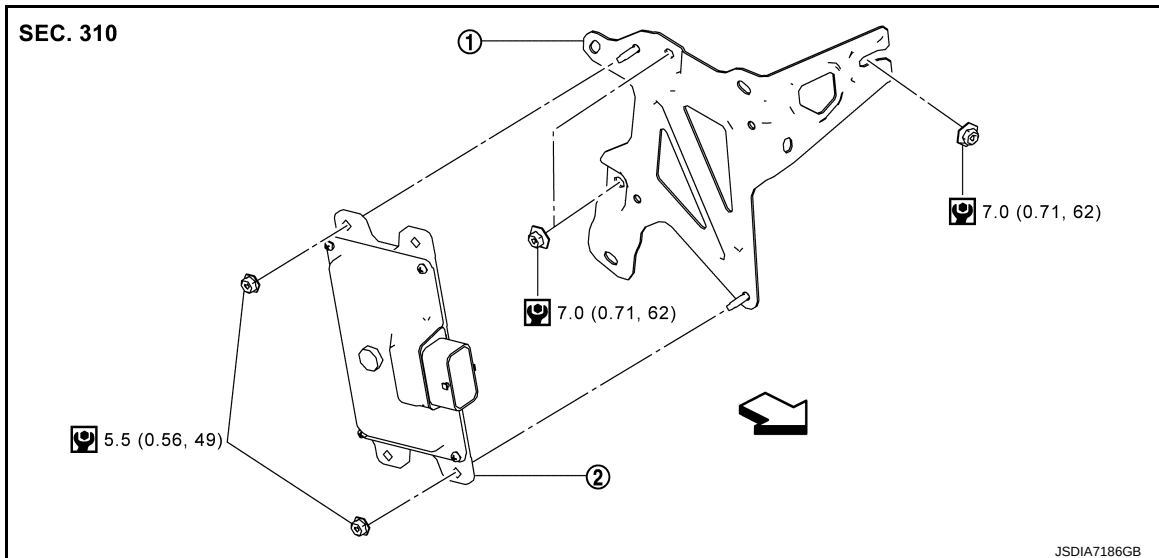

1. Bracket

2. TCM

:Vehicle front

: N·m (kg-m, in-lb)

## Removal and Installation

INFOID:0000000011463842

**CAUTION:**

- Never impact on TCM when removing or installing TCM.
- When replacing TCM, note the "CVTF DETERIORATION DATE" value displayed on CONSULT "CONFORM CVTF DETERIORATION" in MAINTENANCE BOOKLET, before start the operation.
- When replacing TCM and transaxle assembly simultaneously, replace transaxle assembly first and then replace TCM. Refer to [TM-344, "Removal and Installation"](#).
- Before replacing TCM, perform "ADDITIONAL SERVICE WHEN REPLACING TCM". Refer to [TM-216, "Work Procedure"](#).

## REMOVAL

1. Remove the battery. Refer to [PG-116, "Removal and Installation"](#).
2. Remove air duct (inlet) and air cleaner case. Refer to [EM-27, "Removal and Installation"](#).
3. Disconnect the TCM connector.
4. Remove the TCM.
5. Remove the bracket.

## INSTALLATION

Installation is the reverse order of removal.

## Adjustment

INFOID:0000000011463843

## ADJUSTMENT AFTER INSTALLATION

Perform "ADDITIONAL SERVICE WHEN REPLACING TCM". Refer to [TM-216, "Work Procedure"](#).

# AIR BREATHER HOSE

< REMOVAL AND INSTALLATION >

[CVT: RE0F10B]


## AIR BREATHER HOSE

### Removal and Installation

INFOID:000000011463844

#### REMOVAL

1. Remove air cleaner case. Refer to [EM-27, "Removal and Installation"](#).
2. Remove clip (A) from bracket.
3. Remove air breather hose (1) from transaxle assembly.

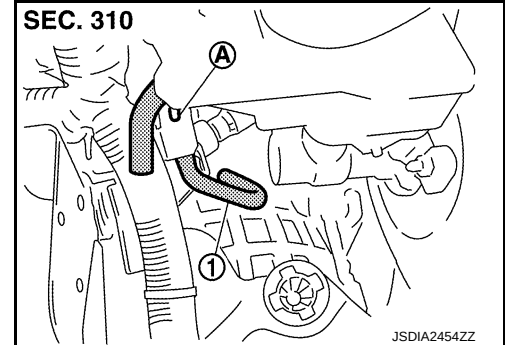


#### INSTALLATION


Note the following, and install in the reverse order of removal.

#### CAUTION:

- Never bend the air breather hose to prevent damage to the hose.
- Install air breather hose (1) to transaxle tube (A) all the way to the curve of the tube.
- Install air breather hose to transaxle tube so that the paint mark (B) is facing upward.

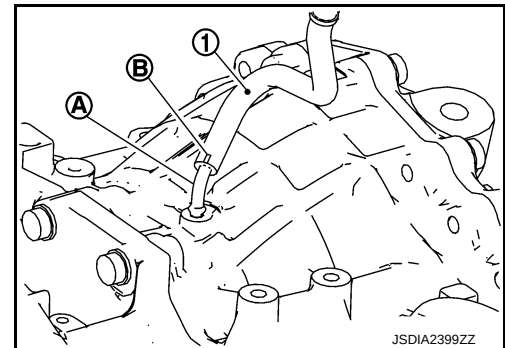

- Securely install the clip (A) to the bracket.

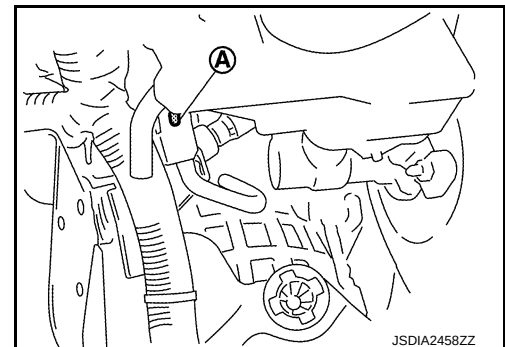

[CVT: RE0F10B]

INFOID:0000000011463845



- 
- : Apply CVT fluid

INFOID:0000000011463846


## 2015 JUKE

## CONTROL VALVE

### < REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

2. Remove drain plug from oil pan and then drain the CVT fluid.
3. Remove drain plug gasket.
4. Disconnect the CVT unit connector. Refer to [TM-149. "Removal and Installation Procedure for CVT Unit Connector"](#).
5. Remove the snap ring (1) from the CVT unit connector (A).

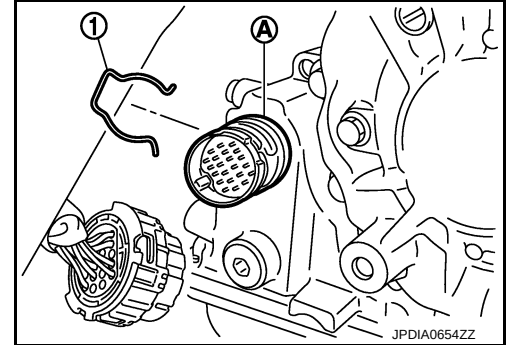


6. Press the CVT unit connector (A) into the transaxle case.

**CAUTION:**

**Never damage the CVT unit connector.**

**NOTE:**

Clean around the connector to prevent foreign materials from entering into the transaxle case.

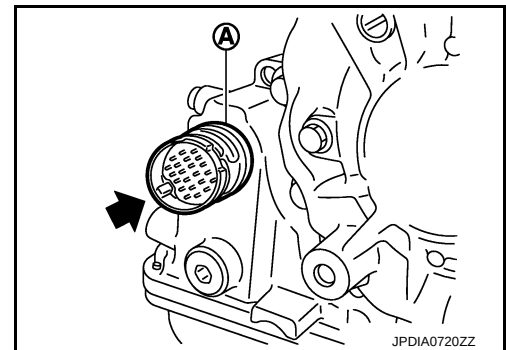


7. Remove the oil pan mounting bolts, and then remove the oil pan and oil pan gasket.
8. Remove the magnets from the oil pan.
9. Remove the lock nut (1) and washer (2), and then remove the manual plate (3).

⇐ : Vehicle front

10. Remove the collar (4) from the manual shaft (A).

**CAUTION:**


**Never drop the collar.**

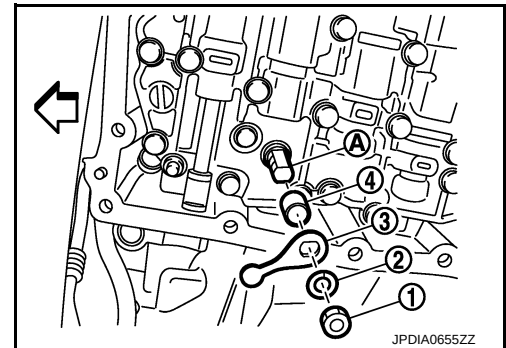

11. Disconnect the control valve connectors (A) and (B).

⇐ : Clip

⇐ : Vehicle front

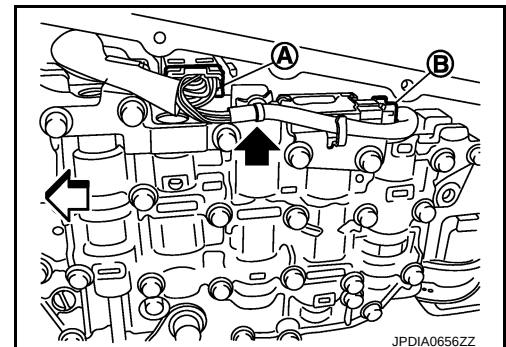

# CONTROL VALVE


## < REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

12. Remove the oil strainer assembly mounting bolts (A) and (B), and then remove the oil strainer assembly (1).

⇐ : Vehicle front


13. Remove O-ring from oil strainer assembly.

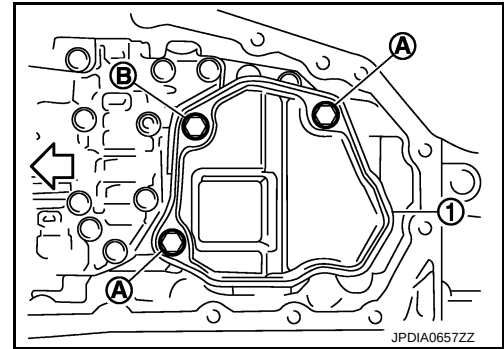

14. Remove the bracket (1).

⬛ : Bolt

⇐ : Vehicle front

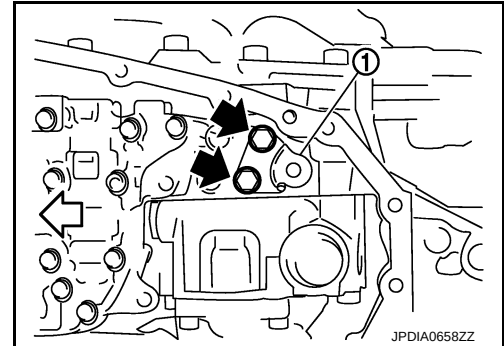


15. Remove the control valve mounting bolts (A) and (B), and then remove the control valve from the transaxle case.


⇐ : Vehicle front

### CAUTION:

Never drop the control valve, ratio control valve and manual shaft.

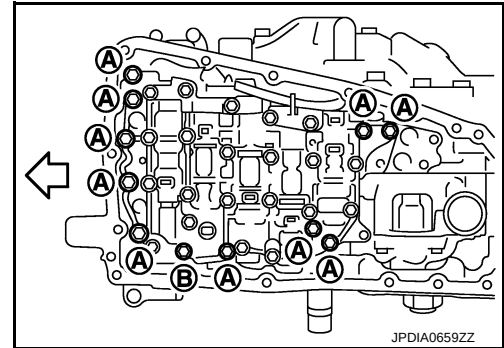


16. Remove terminal cord assembly (1) from the transaxle case inside.

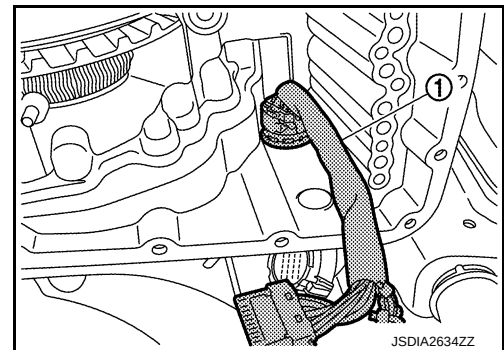

17. Remove the lip seal (1) from the transaxle case.

⇐ : Vehicle front

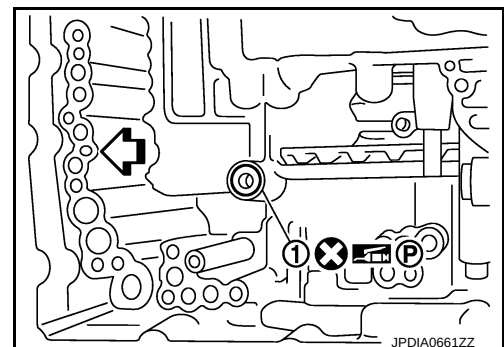

# CONTROL VALVE


< REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

## INSTALLATION

1. Install the lip seal (1) to the transaxle case.


← : Vehicle front

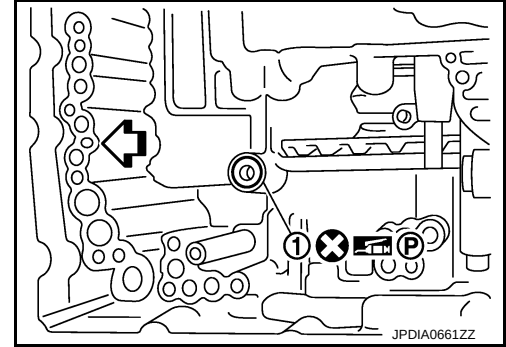

2. Install terminal cord assembly (1) to the transaxle case.

**CAUTION:**


Connect the CVT unit connector with the stopper facing up, and then press in until it clicks.

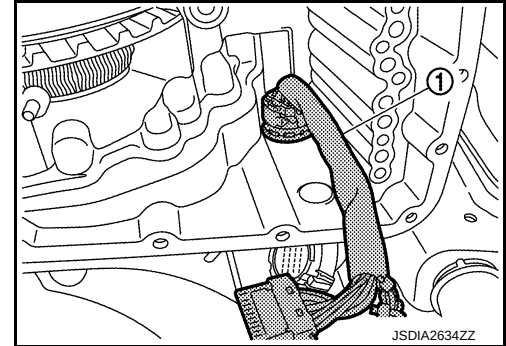

3. Press in the ratio control valve (B) in the (←) direction, and then fix the linkage in the position shown in the figure with the linkage fixing pin (A) from the back of control valve through the hole for fixing.
4. Check that one end of linkage engages with the step motor end (C) and that the linkage is in the direction shown in the figure.
5. Install the control valve to the transaxle case.

**CAUTION:**

- Never drop the linkage fixing pin. If it is dropped, repeat the installation procedure from step 3.
- Never pinch the harness into between the control valve and the transaxle case.
- Never drop the control valve, ratio control valve and manual shaft.

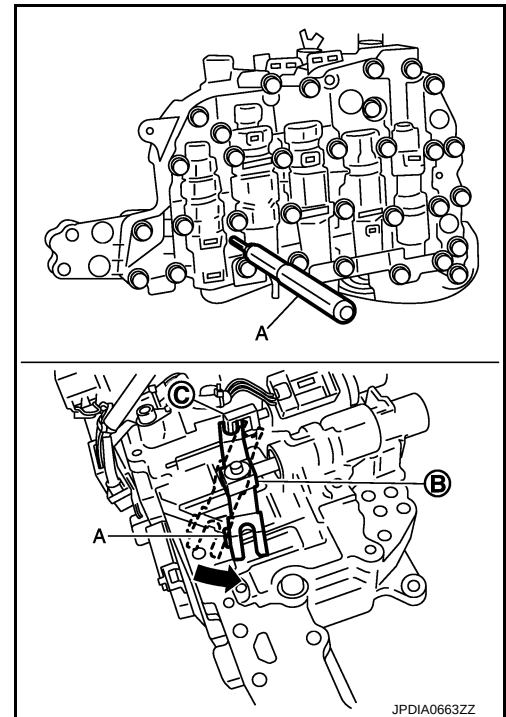

# CONTROL VALVE


## < REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

6. Fix the control valve using the control valve mounting bolts (A) and (B).

↩ : Vehicle front

| Bolt | Bolt length (mm) | Number of bolts |
|------|------------------|-----------------|
| A    | 54               | 10              |
| B    | 44               | 1               |

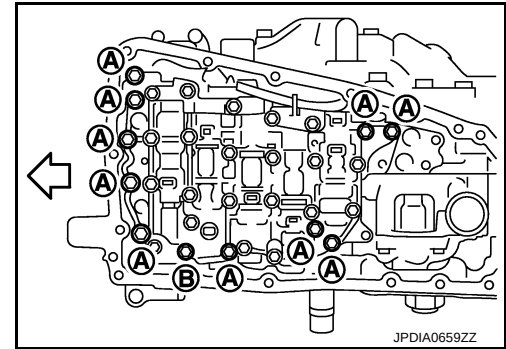


7. Pull the linkage fixing pin out.  
8. Connect the control valve connectors (A) and (B).

➡ : Clip

↩ : Vehicle front

### CAUTION:

- Never pinch the harness into between the control valve and the transaxle case.
- Securely insert the connector until it clicks and locks.

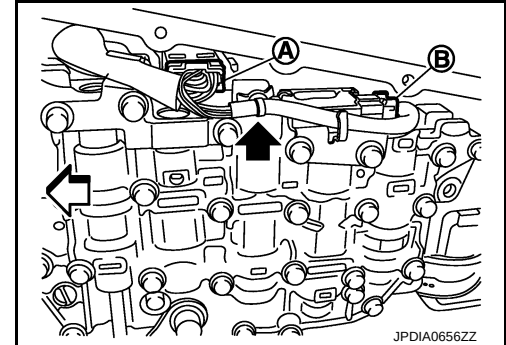

9. Install the bracket (1).


➡ : Bolt

↩ : Vehicle front

10. Install O-ring to oil strainer assembly.

### CAUTION:

- Never reuse O-ring.
- Apply CVT fluid to O-ring.

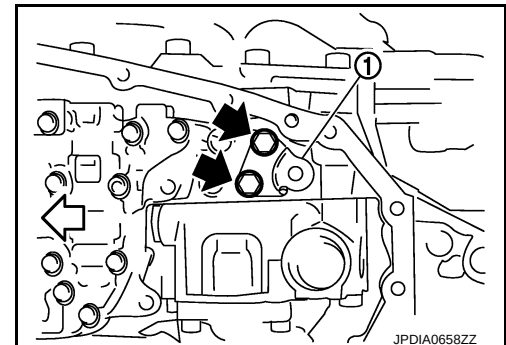

11. Install the oil strainer assembly (1) using the oil strainer assembly mounting bolts (A) and (B).

↩ : Vehicle front

| Bolt | Bolt length (mm) | Number of bolts |
|------|------------------|-----------------|
| A    | 12               | 2               |
| B    | 44               | 1               |


### NOTE:

Remove the bracket and adjust the position again if the bolt hole positions are not aligned.

12. Install the collar to the manual shaft.

### CAUTION:

Never drop the collar.

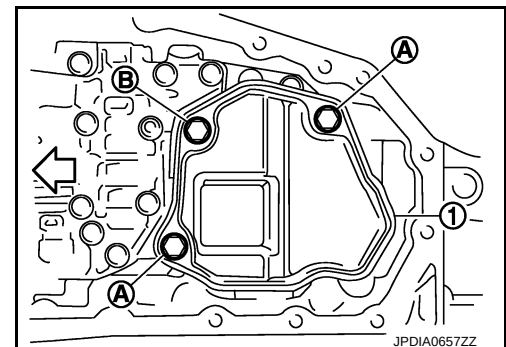

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P



## CONTROL VALVE

### < REMOVAL AND INSTALLATION >

[CVT: RE0F10B]


13. Install the manual plate (1) while aligning with the groove (A) of the manual valve.

**CAUTION:**


Assemble the manual plate while aligning its end with the cutout (↔) of the manual valve.

↔ : Vehicle front

14. Install the washer (2) and the lock-nut (3), and then tighten to the specified torque.

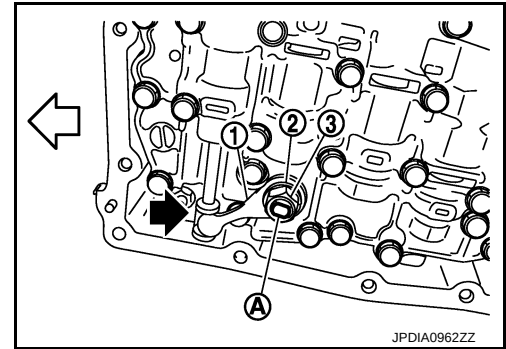

15. Install the snap ring (1) to the CVT unit connector (A).  
16. Connect the CVT unit connector. Refer to [TM-149, "Removal and Installation Procedure for CVT Unit Connector"](#).

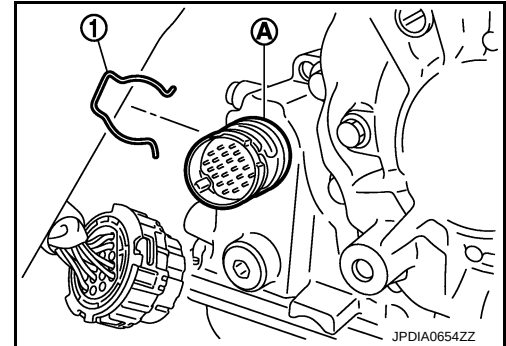

17. Install the magnet while aligning it with the convex side of oil pan.

**CAUTION:**

Completely eliminate the iron powder from the magnet mounting area of oil pan and the magnet.

18. Install the oil pan to the transaxle case with the following procedure.

1. Install the oil pan gasket to the oil pan.

**CAUTION:**

- Completely wipe out any moisture, oil, and old gasket from the oil pan gasket mounting surface and bolt mounting hole of oil pan and transaxle case.
- Never reuse oil pan gasket.

2. Install the oil pan assembly to the transaxle case, and then temporarily tighten the oil pan mounting bolt.

3. Tighten the oil pan mounting bolts in the order shown in the figure to the specified torque.

4. Tighten the oil pan mounting bolts again clockwise from (1) shown in the figure to the specified torque.


19. Install drain plug gasket to drain plug.

**CAUTION:**

Never reuse drain plug gasket.

20. Install drain plug to oil pan.

21. Fill CVT fluid from CVT fluid charging pipe to the specified level.

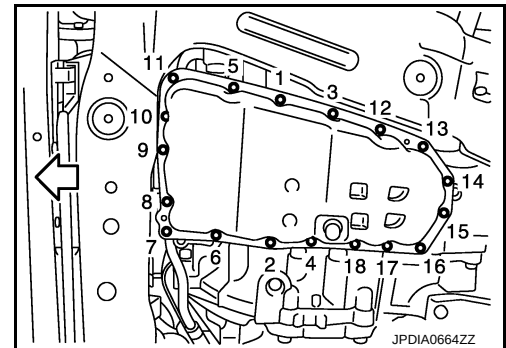

**CVT fluid** : Refer to [MA-11, "Fluids and Lubricants"](#).  
**Fluid capacity**

**CAUTION:**

- Use only Genuine CVT fluid. Never mix with other fluid.
- Using CVT fluid other than Genuine CVT fluid will deteriorate in driveability and CVT durability, and may damage the CVT, which is not covered by the warranty.
- When filling CVT fluid, take care not to scatter heat generating parts such as exhaust.
- Sufficiently shake the container of CVT fluid before using.
- Delete CVT fluid deterioration date with CONSULT after changing CVT fluid. Refer to [TM-188, "CONSULT Function"](#).

22. With the engine warmed up, drive the vehicle in an urban area.

**NOTE:**

When ambient temperature is 20°C (68°F), it takes about 10 minutes for the CVT fluid to warm up to 50 to 80°C (122 to 176°F).

23. Check CVT fluid level and condition. Refer to [TM-311, "Inspection"](#).

24. Connect battery cable to negative terminal. Refer to [PG-116, "Exploded View"](#).



Inspection and Adjustment

INFOID:0000000011463847

INSPECTION AFTER REMOVAL

Check oil pan for foreign material.

- If a large amount of worn material is found, clutch plate may be worn.
  - If iron powder is found, bearings, gears, or clutch plates may be worn.
  - If aluminum powder is found, bushing may be worn, or chips or burrs of aluminum casting parts may enter.
- Check points where wear is found in all cases.

INSPECTION AFTER INSTALLATION

Check the CVT fluid level and leakage. Refer to [TM-311, "Inspection"](#).

ADJUSTMENT AFTER INSTALLATION

Perform "ADDITIONAL SERVICE WHEN REPLACING CONTROL VALVE OR TRANSAXLE ASSEMBLY".  
Refer to [TM-218, "Description"](#).

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# PRIMARY SPEED SENSOR


< REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

## PRIMARY SPEED SENSOR

### Exploded View

INFOID:0000000011463848

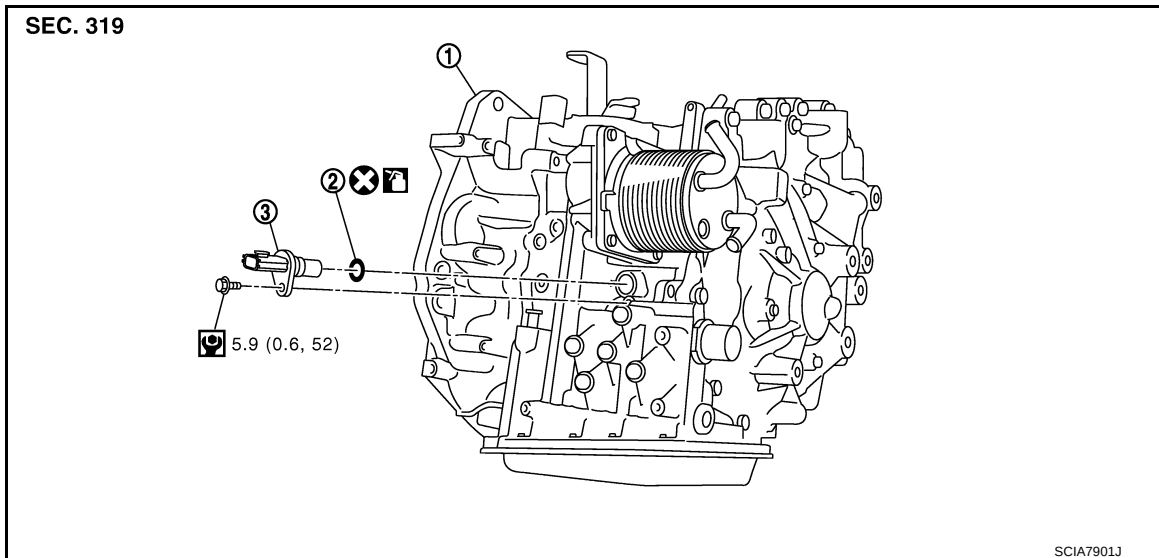

1. Transaxle assembly                      2. O-ring                      3. Primary speed sensor



: Always replace after every disassembly.



: N·m (kg-m, in-lb)



: Apply CVT fluid

## Removal and Installation

INFOID:0000000011463849

### REMOVAL

1. Remove the battery. Refer to [PG-116, "Removal and Installation"](#).
2. Remove ECM and bracket as a set.
3. Remove primary speed sensor connector.
4. Remove primary speed sensor.
5. Remove O-ring from primary speed sensor.

### INSTALLATION

Note the following, and install in the reverse order of removal.

#### CAUTION:

- **Never reuse O-ring.**
- **Apply CVT fluid to O-ring.**

### Inspection

INFOID:0000000011463850

### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage and CVT fluid level. Refer to [TM-311, "Inspection"](#).

# SECONDARY SPEED SENSOR


< REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

## SECONDARY SPEED SENSOR

### Exploded View

INFOID:0000000011463851

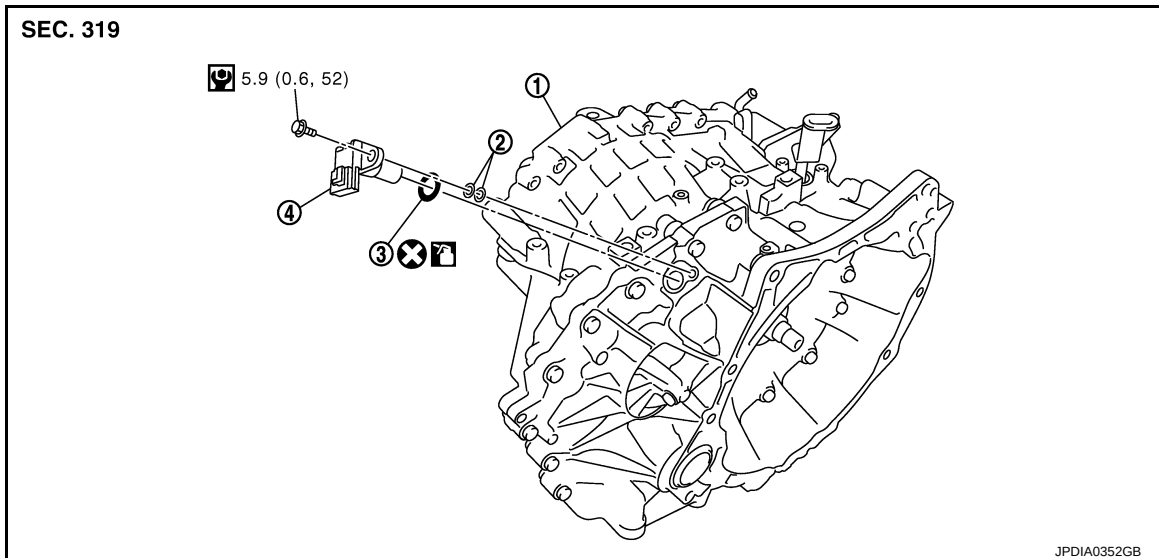

1. Transaxle assembly                      2. Shim                      3. O-ring  
4. Secondary speed sensor

⊗ : Always replace after every disassembly.

Ⓐ : N·m (kg-m, in-lb)


🔧 : Apply CVT fluid

### Removal and Installation

INFOID:0000000011463852

#### REMOVAL

1. Remove air cleaner case. Refer to [EM-27. "Removal and Installation"](#).
2. Remove secondary speed sensor connector.
3. Remove secondary speed sensor (1) and shims (2).
4. Remove O-ring (3) from secondary speed sensor.

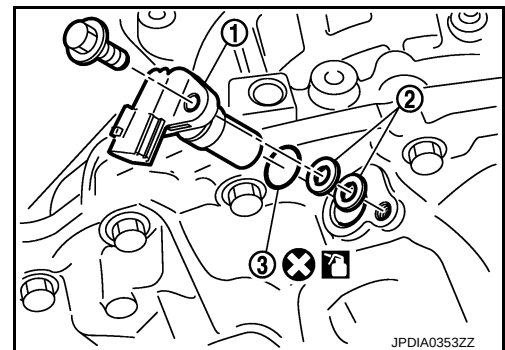

#### INSTALLATION

Note the following, and install in the reverse order of removal.

#### CAUTION:

- Never reuse O-ring.
- Apply CVT fluid to O-ring.
- Install two pieces of shims.

#### Inspection

INFOID:0000000011463853

#### INSPECTION AFTER INSTALLATION

## SECONDARY SPEED SENSOR

< REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

---

Check for CVT fluid leakage and CVT fluid level. Refer to [TM-311, "Inspection"](#).

# DIFFERENTIAL SIDE OIL SEAL


< REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

## DIFFERENTIAL SIDE OIL SEAL

### Exploded View

INFOID:0000000011463857

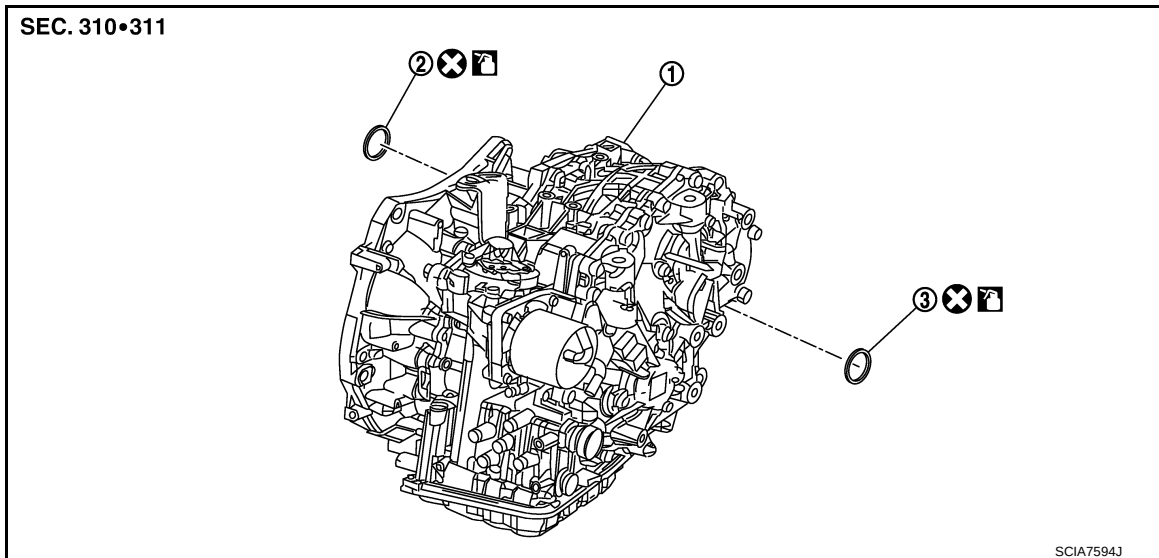

1. Transaxle assembly
2. Differential side oil seal (Converter housing side)
3. Differential side oil seal (Transaxle case side)

⊗ : Always replace after every disassembly.

🛢️ : Genuine CVT fluid

### Removal and Installation

INFOID:0000000011463858


#### REMOVAL

##### Differential Side Oil Seal (Left Side)

1. Remove front drive shaft (left side). Refer to [FAX-43, "AWD : Removal and Installation"](#).
2. Remove differential side oil seal (1) using an oil seal remover (commercial service tool) (A).

#### **CAUTION:**

**Be careful not to scratch transaxle case and converter housing.**

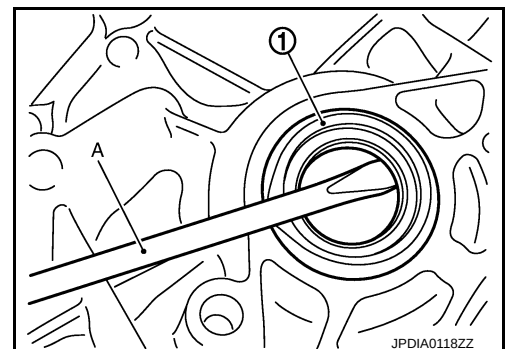

##### Differential Side Oil Seal (Right Side)

1. Remove transfer assembly. Refer to [FAX-43, "AWD : Removal and Installation"](#).

## DIFFERENTIAL SIDE OIL SEAL


### < REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

2. Remove differential side oil seal (1) using an oil seal remover (commercial service tool) (A).

**CAUTION:**

Be careful not to scratch transaxle case and converter housing.

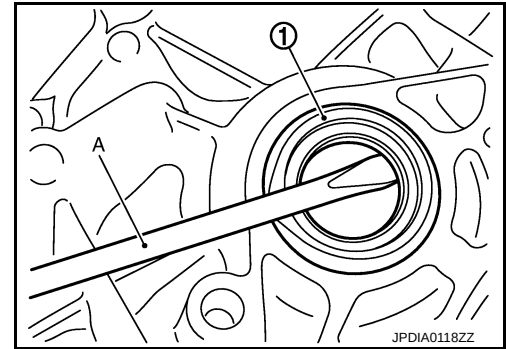

### INSTALLATION

Note the followings and installation is in the reverse order of removal.

Differential Side Oil Seal (Transaxle Case Side)

**CAUTION:**

When inserting the drive shaft, be sure to use protector (SST: KV38107900).


1. Measure height (A) of seal lip. Calculate protrusion (C) of oil seal lip according to measured height (A) of seal lip and reference value (B) of side oil insertion.

(1) : Differential side oil seal

(2) : Transaxle case

**Lip protrusion (C) :  $C=A-B$**

**Differential side oil seal insertion : 1.8 mm (0.071 in)**  
**reference value (B)**

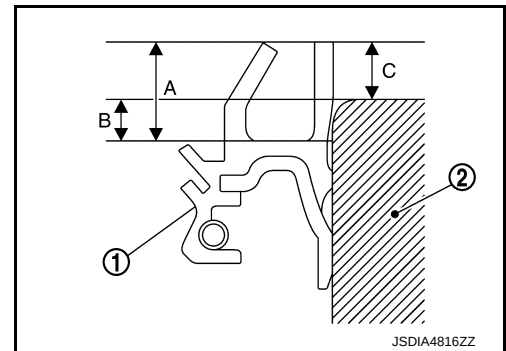

**CAUTION:**

- Never reuse differential side oil seal.
- Put a mark on the measurement area and measure height of seal lip at four points diagonally using suitable tool.

**NOTICE:**

Since seal lips have a tolerance of  $\pm 0.3$  mm ( $\pm 0.012$  in) at maximum due to manufacturing tolerances or packing conditions, it is necessary to measure the seal lip height beforehand to clarify the tolerance.

2. As an indicator of the parallelism and insertion depth, cut a masking tape (1) to specified width [add 1 mm (0.04 in) to the value calculated from the tip of differential side oil seal lip] and affix to the differential side oil seal.
3. Install the differential side oil seal using a drift [outer diameter: 53 mm (2.09 in), inner diameter: 50 mm (1.97 in)] according to the guide of the masking tape.

**CAUTION:**

- If differential side oil seal is inserted deeper than the reference value, use a new differential side oil seal and perform the steps again.
- Apply ATF to the differential side oil seal lip and around the oil seal.


**NOTE:**

A hub cap (Part No. 43234 1HA0A) can be used as a substitute for drift. To use a hub cap, be sure to prepare a new one specifically for patting seal.

4. Remove masking tape.
5. Adjust as instructed below to optimize the protrusion size and parallelism.

**CAUTION:**

If differential side oil seal is inserted deeper than the reference value, use a new differential side oil seal and perform the steps again.

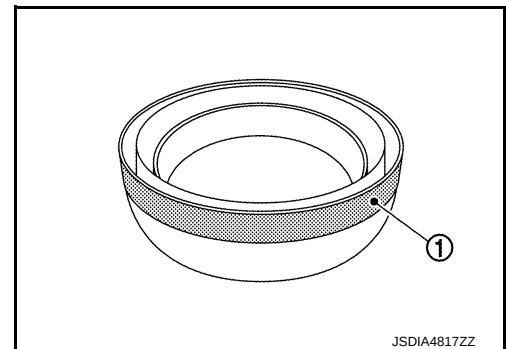

# DIFFERENTIAL SIDE OIL SEAL


< REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

- Protrusion size (A)

**CAUTION:**

Protrusion must fall within  $\pm 0.5\text{mm}$  (0.020 in) of calculated size.

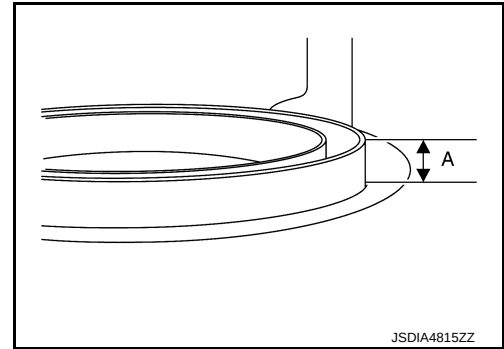


- Parallelism at four diagonal points (➡)

**CAUTION:**

The difference among four diagonal points must be within 0.3 mm (0.012 in).

**NOTE:**

If differential side oil seal is uneven while installing, tilt suitable tool.

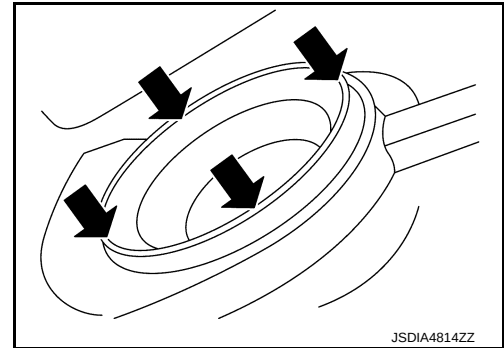

6. Check that the protrusion size and parallelism are adequate.

Differential Side Oil Seal (Converter housing Side)

**CAUTION:**


- Never reuse differential side oil seal.
- Apply ATF to the differential side oil seal lip and around the oil seal.

Install differential side oil seal evenly using a drift [outer diameter: 60 mm (2.36 in)] so that differential side oil seal protrudes by the dimension (A) respectfully.

**Dimension (A) : Height difference from case end surface is within  $1.0 \pm 0.5\text{ mm}$  ( $0.039 \pm 0.020\text{ in}$ ).**

**NOTE:**

The reference is the installation direction of the differential side oil seal.

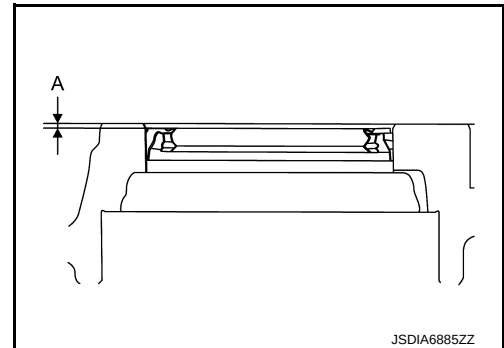

INFOID:000000011463859

## Inspection

### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage and CVT fluid level. Refer to [TM-311, "Inspection"](#).

# OIL PUMP FITTING BOLT

< REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

## OIL PUMP FITTING BOLT


### Description

INFOID:0000000011463860

Replace the oil pump fitting bolt and the O-ring if oil leakage or exudes from the oil pump fitting bolt.

### Exploded View

INFOID:0000000011463861

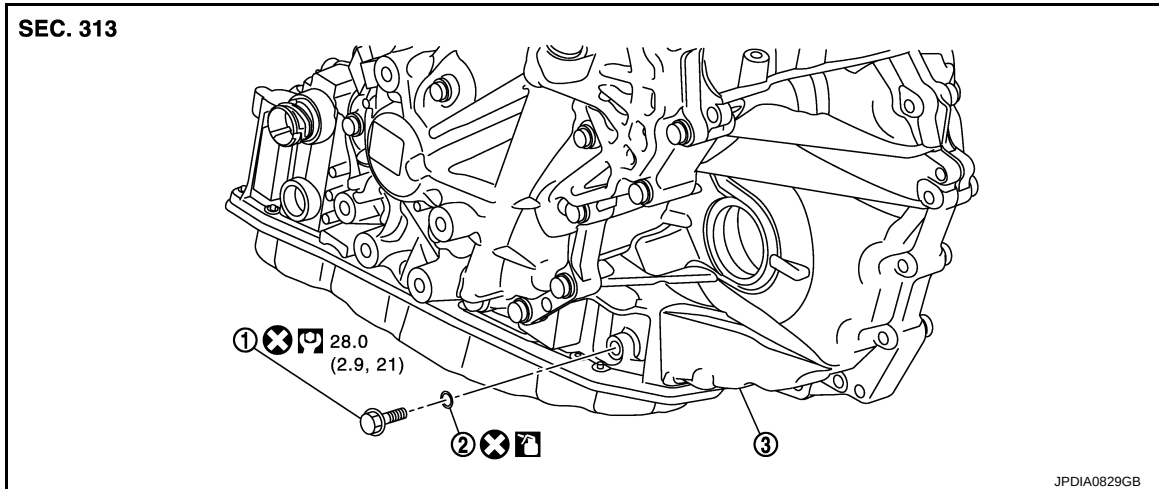

1. Oil pump fitting bolt

2. O-ring

3. Transaxle assembly

⊗ : Always replace after every disassembly.

Ⓐ : N·m (kg-m, ft-lb)


🔧 : Apply CVT fluid

### Removal and Installation

INFOID:0000000011463862

#### REMOVAL

1. Remove Oil pump fitting bolt (1) from transaxle assembly.
2. Remove O-ring from oil pump fitting bolt.

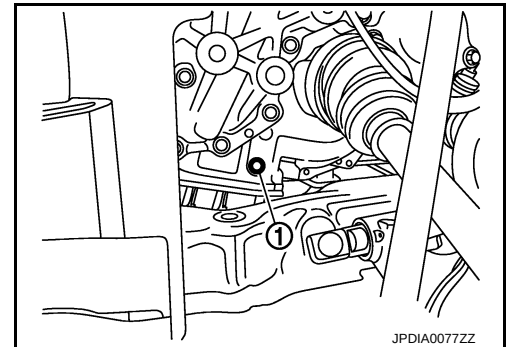

#### INSTALLATION

Note the following, and install in the reverse order of removal.

#### CAUTION:

- Never reuse O-ring.
- Apply CVT fluid to O-ring.

### Inspection

INFOID:0000000011463863

#### INSPECTION AFTER INSTALLATION


Check for CVT fluid leakage and CVT fluid level. Refer to [TM-311, "Inspection"](#).



WATER HOSE

Exploded View

INFOID:0000000011463864

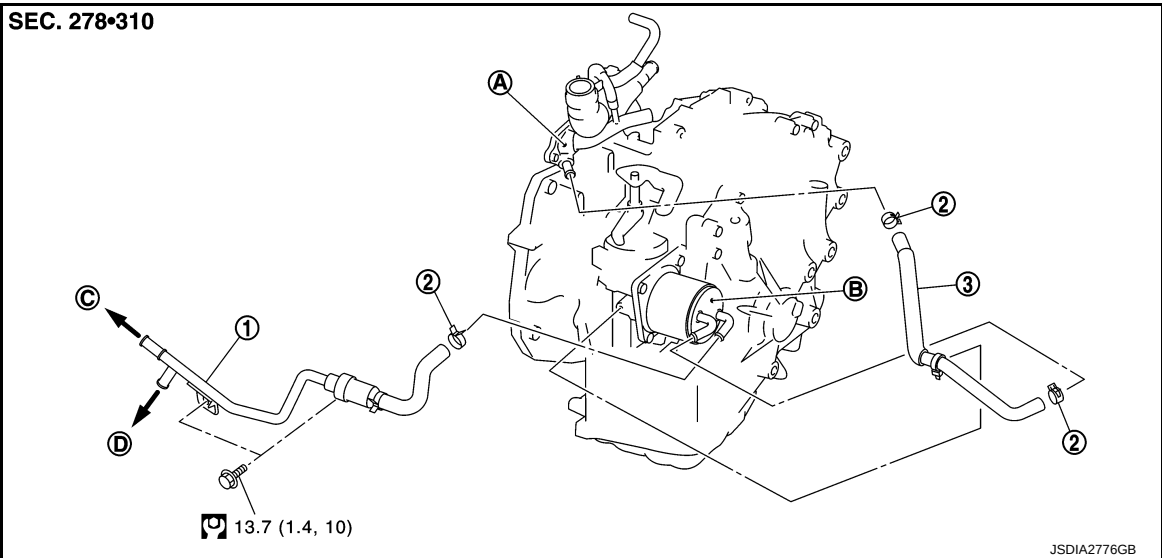

- |                               |                   |                          |
|-------------------------------|-------------------|--------------------------|
| 1. Heater thermostat assembly | 2. Hose clamp     | 3. Water hose            |
| A. Water outlet               | B. CVT oil warmer | C. To thermostat housing |
| D. To oil cooler              |                   |                          |

: N·m (kg-m, ft-lb)

Removal and Installation

INFOID:0000000011463865

REMOVAL

**WARNING:**  
Never remove the radiator cap when the engine is hot. Serious burns could occur from high pressure coolant escaping from the radiator.

**CAUTION:**  
Perform these steps after the coolant temperature has cooled sufficiently.

1. Remove the battery. Refer to [PG-116, "Removal and Installation"](#).
2. Remove the ECM and bracket as a set.
3. Remove the water hose.
4. Remove the heater thermostat.

INSTALLATION

Note the following, and Install in the reverse order of removal.


- Refer to the following when installing water hoses.

| Water hose (1)             | Installation side tube (2) | Direction of paint mark | Hose insertion depth "L"                                    |
|----------------------------|----------------------------|-------------------------|-------------------------------------------------------------|
| Water hose                 | Water outlet               | Upward                  | A: 27 mm (1.06 in) [End reaches the 2-stage bulge.]         |
|                            | CVT oil warmer             | Leftward                | B: 27 mm (1.06 in) [End reaches the tube bend R position].] |
| Heater thermostat assembly | CVT oil warmer             | Leftward                |                                                             |

# WATER HOSE

< REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

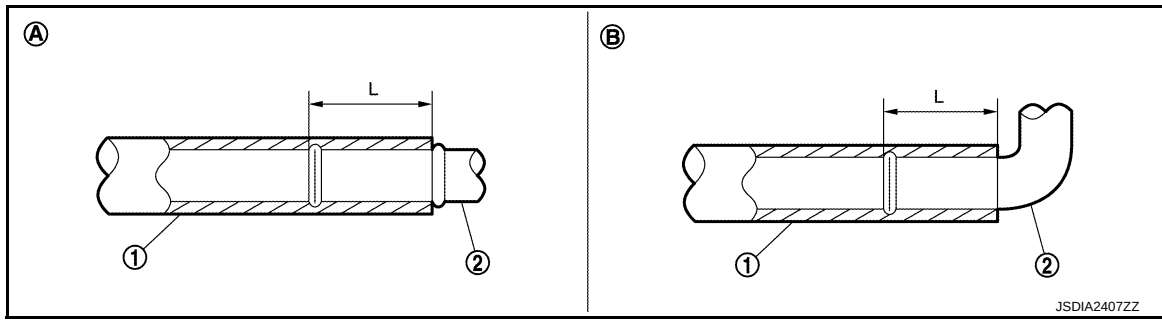


- Refer to the followings when installing hose clamp.

## CAUTION:

Hose clamp should not interfere with the bulge of fluid cooler tube.

| Water hose (1)             | Installation side tube (2) | Hose clamp (3)   |                                                |
|----------------------------|----------------------------|------------------|------------------------------------------------|
|                            |                            | Direction of tab | Clamping position                              |
| Water hose                 | Water outlet               | Backward         | A: 5 – 7 mm (0.20 – 0.28 in) (L) from hose end |
|                            | CVT oil warmer             | Upward           |                                                |
| Heater thermostat assembly | CVT oil warmer             | Upward           | B: Align with the end of paint mark (C)        |

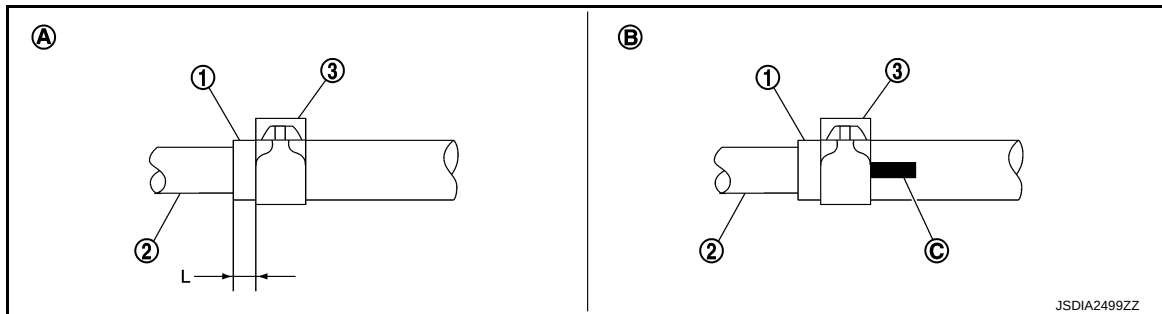


## Inspection

INFOID:000000011463866

## INSPECTION AFTER REMOVAL

### Heater Thermostat

- Fully immerse the heater thermostat (1) in a container (A) filled with water. Continue heating the water while stirring.
- Continue heating the heater thermostat for 5 minutes or more after bringing the water to a boil.
- Quickly take the heater thermostat out of the hot water, measure the heater thermostat within 10 seconds.

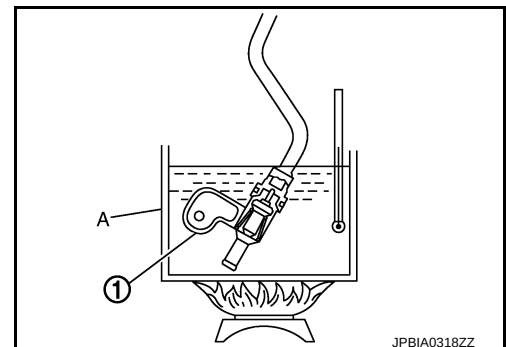

## WATER HOSE


### < REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

- Place dial indicator (A) on the pellet (B) and measure the elongation from the initial state.

**Standard** : Refer to [TM-350, "Heater Thermostat"](#).

- If out of standard, replace heater thermostat.

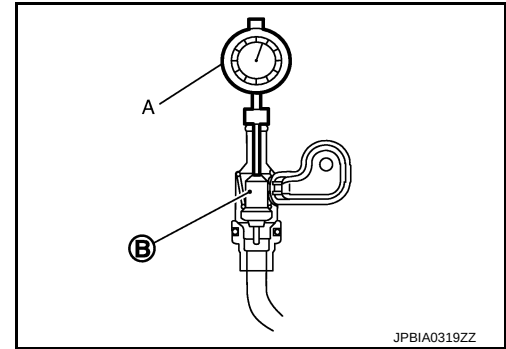

### INSPECTION AFTER INSTALLATION

Start the engine, and check the joints for coolant leakage. Refer to [TM-311, "Inspection"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M


N

O

P

## Exploded View

INFOID:0000000011463870

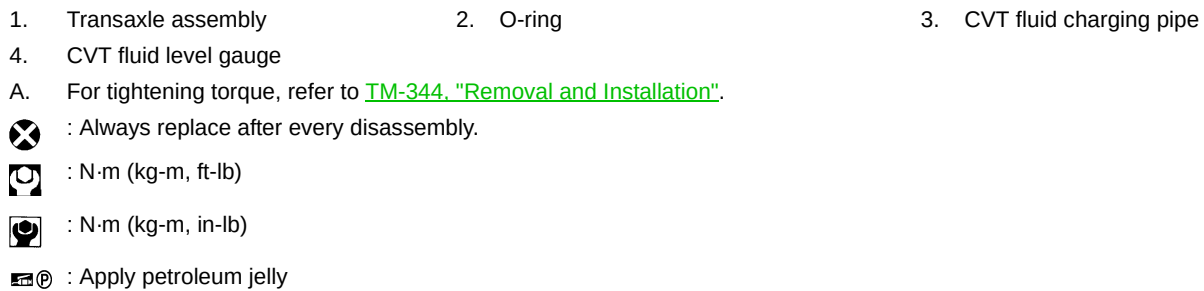

INFOID:0000000011463871

Cap or cover any transaxle openings to prevent transaxle fluid from spilling.

# TRANSAXLE ASSEMBLY

## < UNIT REMOVAL AND INSTALLATION >

[CVT: RE0F10B]



1. Remove the battery. Refer to [PG-116, "Removal and Installation"](#).
2. Drain engine coolant. Refer to [CO-9, "Draining"](#).
3. Remove the air duct and air cleaner case. Refer to [EM-27, "Removal and Installation"](#).
4. Remove air breather hose. Refer to [TM-326, "Removal and Installation"](#).
5. Remove the ECM and bracket as a set.
6. Remove CVT fluid level gauge.
7. Remove CVT fluid charging pipe from transaxle assembly.
8. Remove O-ring from CVT fluid charging pipe.
9. Disconnect following harness connector and wire harness.
  - CVT unit harness connector (A).
  - Primary speed sensor harness connector (B).
  - Secondary speed sensor harness connector (C).
  - Transmission range switch connector (D).
10. Remove harness and clip from the transaxle assembly.
11. Remove water hose. Refer to [TM-341, "Removal and Installation"](#).
12. Remove control cable from transaxle assembly. Refer to [TM-316, "Removal and Installation"](#).
13. Remove starter motor. Refer to [STR-26, "MR16DDT : Removal and Installation"](#).
14. Turn crankshaft, and remove the four tightening nuts (↻) for drive plate and torque converter.

**CAUTION:**  
**When turning crankshaft, turn it clockwise as viewed from the front of the engine.**
15. Remove exhaust front tube. Refer to [EX-5, "Exploded View"](#).
16. Separate the propeller shaft. Refer to [DLN-124, "Removal and Installation"](#).
17. Remove front drive shafts. Refer to [FAX-43, "AWD : Removal and Installation"](#).
18. Remove front suspension member from vehicle. Refer to [FSU-17, "Removal and Installation"](#).
19. Remove transfer assembly from transaxle assembly with power tool. Refer to [DLN-94, "Removal and Installation"](#).
20. Support transaxle assembly with a transmission jack.

**CAUTION:**  
**When setting the transmission jack, be careful not to collide against the drain plug.**
21. Support engine assembly with a transmission jack.

**CAUTION:**  
**When setting the transmission jack, be careful not to collide against the drain plug.**
22. Remove engine mounting insulator (LH). Refer to [EM-67, "AWD : Exploded View"](#).
23. Remove bolts fixing transaxle assembly to engine assembly.
24. Remove transaxle assembly from vehicle.

**CAUTION:**
  - Secure torque converter to prevent it from dropping.
  - Secure transaxle assembly to a transmission jack.
25. Remove heater thermostat. Refer to [TM-341, "Removal and Installation"](#).

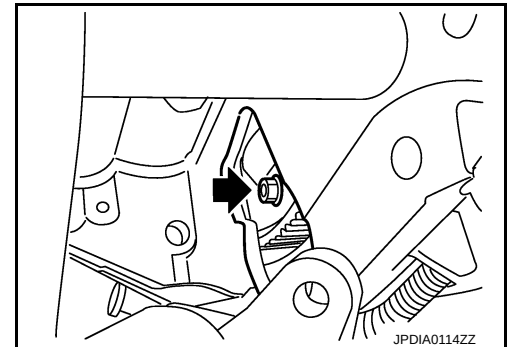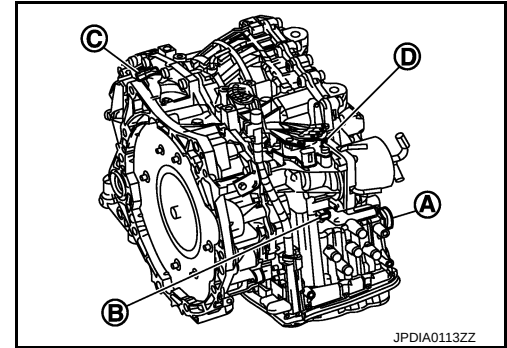

## INSTALLATION

Note following, and install in the reverse order of removal.


**CAUTION:**

# TRANSAXLE ASSEMBLY

## < UNIT REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

- Check fitting of dowel pin (↔) when installing transaxle assembly to engine assembly.

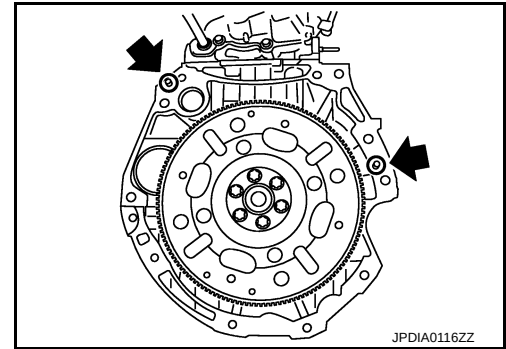


- When installing transaxle assembly to the engine assembly, attach the fixing bolts in accordance with the following.
  1. Rotate torque converter to align a torque converter stud bolt with the mounting position of starter motor.
  2. Rotate drive plate to align a torque converter stud bolt insertion hole of drive plate with service hole.
  3. Install transaxle to engine.

### CAUTION:

**Be careful not to strike the drive plate when inserting torque converter stud bolts to drive plate holes.**

4. Tighten the fixing bolts in accordance with the following.


| Bolt position                          | A                   | B                   |
|----------------------------------------|---------------------|---------------------|
| Insertion direction                    | Transaxle to engine | Engine to transaxle |
| Number of bolts                        | 2                   | 6                   |
| Bolt length mm (in)                    | 55 (2.17)           | 50 (1.97)           |
| Tightening torque N·m<br>(kg-m, ft-lb) | 62 (6.3, 46)        |                     |

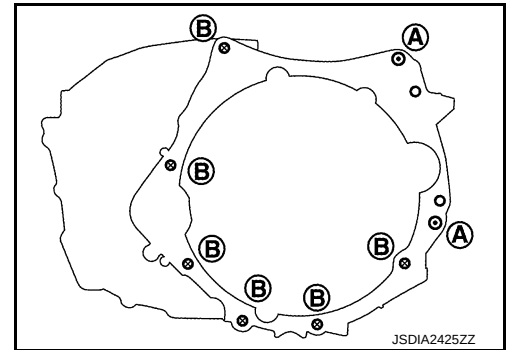

5. After tighten the torque converter nuts (↔) temporarily, tighten the torque converter nuts to the specified torque.

### CAUTION:

- When turning crankshaft, turn it clockwise as viewed from the crankshaft pulley side.
- When tightening the torque converter nuts after fixing the crankshaft pulley bolts, confirm the tightening torque of the crankshaft pulley mounting bolts. Refer to [EM-75, "Exploded View"](#).
- Rotate crankshaft several turns and check that transaxle rotates freely without binding after converter is installed to drive plate.

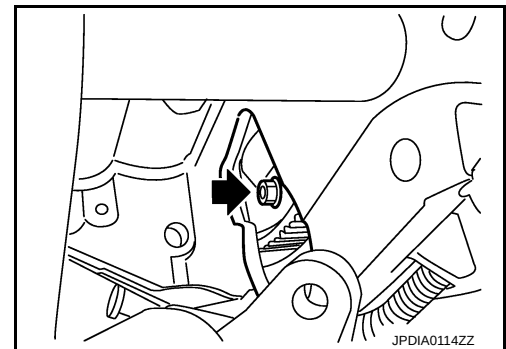

## Inspection and Adjustment


INFOID:0000000011463872

### INSPECTION BEFORE INSTALLATION

After inserting a torque converter to the CVT, check dimension (A) with in the reference value limit.

- B : Scale  
C : Straightedge

**Dimension (A) : Refer to [TM-350, "Torque Converter"](#).**

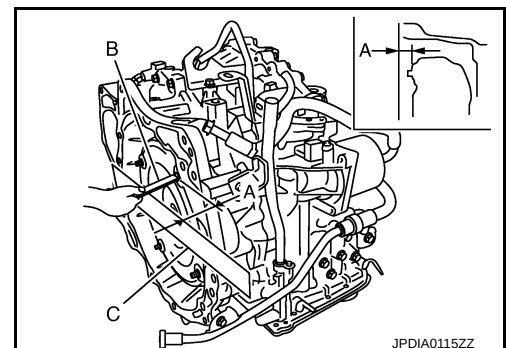

# TRANSAXLE ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[CVT: RE0F10B]

## INSPECTION AFTER INSTALLATION

- Check for CVT fluid leakage and check CVT fluid level. Refer to [TM-311, "Inspection"](#).
- Check CVT position. Refer to [TM-230, "Inspection and Adjustment"](#).
- Start and warm up the engine. Visually check that there is no leakage of engine coolant and CVT fluid.

## ADJUSTMENT AFTER INSTALLATION

Perform "ADDITIONAL SERVICE WHEN REPLACE CONTROL VALVE OR TRANSAXLE ASSEMBLY". Refer to [TM-218, "Description"](#).

A  
B  
C  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


TM

## UNIT DISASSEMBLY AND ASSEMBLY

### TORQUE CONVERTER AND CONVERTER HOUSING OIL SEAL

Exploded View

INFOID:000000011463873

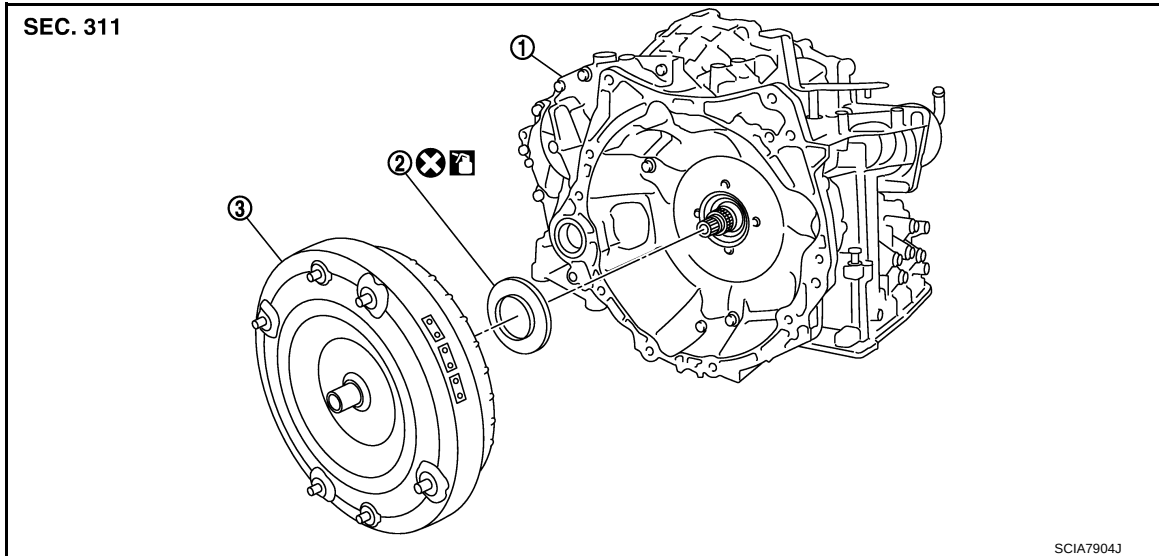

1. Transaxle assembly      2. Converter housing oil seal      3. Torque converter

⊗ : Always replace after every disassembly.

🔧 : Apply CVT fluid

### Disassembly

INFOID:000000011463874

1. Remove transaxle assembly. Refer to [TM-344, "Removal and Installation"](#).
2. Remove torque converter from transaxle assembly.

#### CAUTION:

**Never damage bush on the inside of torque converter sleeve when removing torque converter.**

3. Remove converter housing oil seal using a flat-bladed screwdriver.

#### CAUTION:

**Be careful not to scratch converter housing.**

### Assembly

INFOID:000000011463875


Note the following, and install in the reverse order of removal.

- Drive converter housing oil seal (1) evenly using a drift (A) (commercial service tool) so that converter housing oil seal protrudes by the dimension (B) respectively.

Unit: mm (in)

|                            |                           |
|----------------------------|---------------------------|
| Commercial service tool: A | Outer diameter: 65 (2.56) |
|                            | Inner diameter: 60 (2.36) |

- 2 : Transaxle assembly

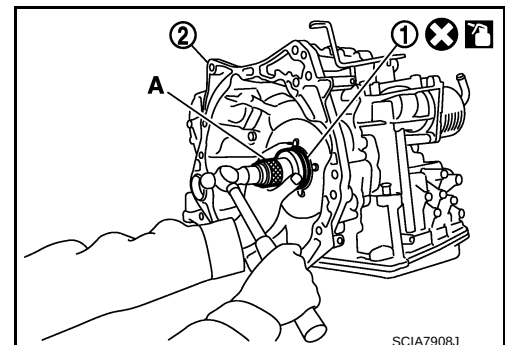



# TORQUE CONVERTER AND CONVERTER HOUSING OIL SEAL

< UNIT DISASSEMBLY AND ASSEMBLY >


[CVT: RE0F10B]

| Unit: mm (in) |                                     |
|---------------|-------------------------------------|
| Dimension B   | $1.0 \pm 0.5$ ( $0.039 \pm 0.020$ ) |

## NOTE:

Converter housing oil seal pulling direction is used as the reference.


- After completing installation, check for CVT fluid leakage and CVT fluid level. Refer to [TM-311, "Inspection"](#).

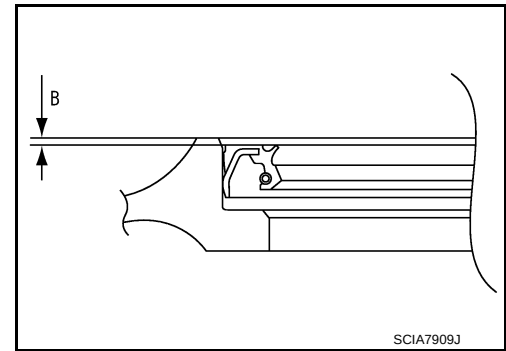

- Attach the pawl (A) of the torque converter to the drive sprocket hole (B) on the transaxle assembly side.

## CAUTION:

- Rotate the torque converter for installing torque converter.
- Never damage the bushing inside the torque converter sleeve when installing the converter housing oil seal.

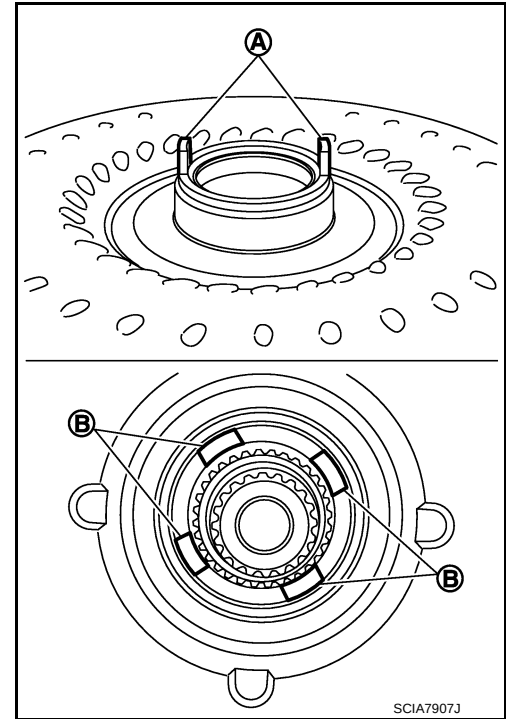

## Inspection


INFOID:0000000011463876

## INSPECTION AFTER INSTALLATION

- After inserting a torque converter to the CVT, check dimension (A) with in the reference value limit.

- B : Scale  
C : Straightedge

Dimension (A) : Refer to [TM-350, "Torque Converter"](#).

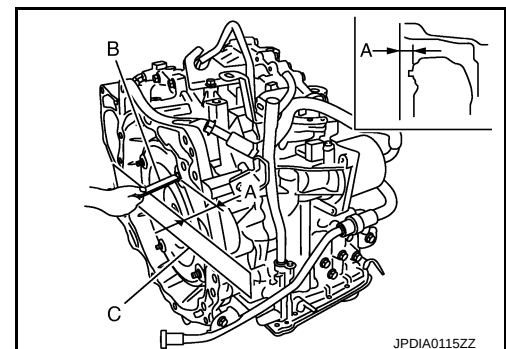

## SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[CVT: RE0F10B]

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### General Specification

INFOID:0000000011463877

|                                      |             |                                                           |
|--------------------------------------|-------------|-----------------------------------------------------------|
| Applied model                        | Engine      | MR16DDT                                                   |
|                                      | Axle        | AWD                                                       |
| Transaxle model                      |             | RE0F10B                                                   |
| Transmission gear ratio              | D range     | 2.349 – 0.394                                             |
|                                      | Reverse     | 1.750                                                     |
|                                      | Final drive | 5.798                                                     |
| Recommended fluid and fluid capacity |             | Refer to <a href="#">MA-11, "Fluids and Lubricants"</a> . |

#### Shift Characteristics

INFOID:0000000011463878

Numerical value data are reference values.

Unit: rpm

| Throttle position | Shift pattern | CVT input speed     |                     |
|-------------------|---------------|---------------------|---------------------|
|                   |               | At 40 km/h (25 MPH) | At 60 km/h (37 MPH) |
| 2/8               | "D" position  | 1,500 – 3,100       | 1,600 – 3,400       |
|                   | ECO mode*     | 1,500 – 2,400       | 1,600 – 2,500       |
| 8/8               | "D" position  | 3,300 – 4,200       | 4,300 – 5,200       |
|                   | ECO mode*     | 3,300 – 4,200       | 4,300 – 5,200       |

\*: With Integrated Control System

#### NOTE:

Lock-up clutch is engaged when vehicle speed is approximately 18 km/h (11 MPH) to 90 km/h (56 MPH).

#### Stall Speed

INFOID:0000000011463879

|             |                   |
|-------------|-------------------|
| Stall speed | 3,000 – 3,500 rpm |
|-------------|-------------------|

#### Line Pressure

INFOID:0000000011463880

Unit: kPa (bar, kg/cm<sup>2</sup>, psi)

| Engine speed | Line pressure                |
|--------------|------------------------------|
|              | "R" and "D" positions        |
| At idle      | 750 (7.50, 7.65, 108.8)      |
| At stall     | 5,700 (57.00, 58.14, 826.5)* |

\*: Reference values

#### Torque Converter

INFOID:0000000011463881

|                                                                 |                    |
|-----------------------------------------------------------------|--------------------|
| Dimension between end of converter housing and torque converter | 14.4 mm (0.567 in) |
|-----------------------------------------------------------------|--------------------|

#### Heater Thermostat

INFOID:0000000011463882

Standard

|                           |                         |
|---------------------------|-------------------------|
| Valve opening temperature | 69 – 73°C (156 – 163°F) |
|---------------------------|-------------------------|

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[CVT: RE0F10B]

|                           |                              |
|---------------------------|------------------------------|
| Maximum valve lift        | 5.0 mm/85°C (0.197 in/185°F) |
| Valve closing temperature | 65°C (149°F)                 |

A  
B  
C  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

TM

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011773447

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Procedure without Cowl Top Cover

INFOID:000000011773448

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

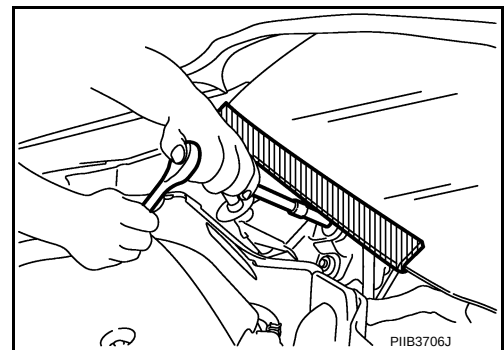

## PRECAUTIONS

< PRECAUTION >

[CVT: RE0F10D]

### Precautions for Removing Battery Terminal

INFOID:0000000011773449

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

**NOTE:**

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


**NOTE:**

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

**NOTE:**

The removal of 12V battery may cause a DTC detection error.

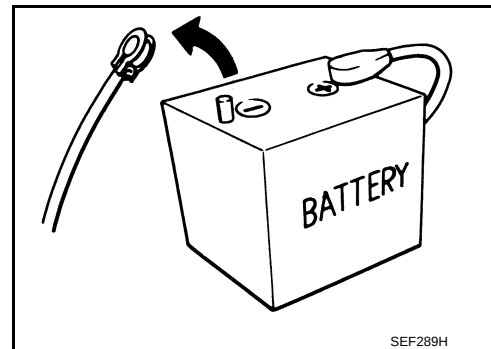

### Precaution for TCM and Transaxle Assembly Replacement

INFOID:0000000011682694


**CAUTION:**

- To replace TCM, refer to [TM-425, "Description"](#).
- To replace transaxle assembly, refer to [TM-427, "Description"](#).


### General Precautions

INFOID:0000000011682696

- Turn ignition switch OFF and disconnect the battery cable from the negative terminal before connecting or disconnecting the CVT assembly harness connector. Because battery voltage is applied to TCM even if ignition switch is turned OFF.

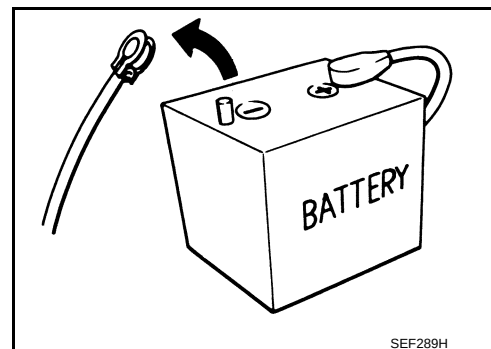

- When connecting or disconnecting pin connectors into or from TCM, do not damage pin terminals (bend or break). Check that there are not any bends or breaks on TCM pin terminal, when connecting pin connectors.

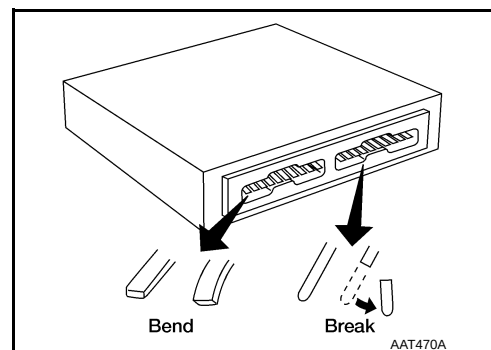


## PRECAUTIONS


< PRECAUTION >

[CVT: RE0F10D]

- Perform TCM input/output signal inspection and check whether TCM functions normally or not before replacing TCM. Refer to [TM-399, "Reference Value"](#).

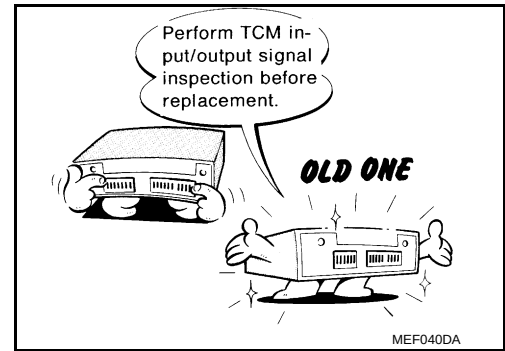

- Perform "DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE".  
If the repair is completed DTC should not be displayed in the "DTC CONFIRMATION PROCEDURE".

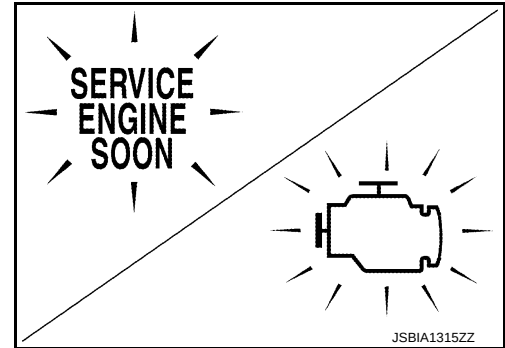

- Always use the specified brand of CVT fluid. Refer to [MA-11, "Fluids and Lubricants"](#).
- Use lint-free paper not cloth rags during work.
- Dispose of the waste oil using the methods prescribed by law, ordinance, etc. after replacing the CVT fluid.

### On Board Diagnosis (OBD) System of CVT and Engine

INFOID:000000011682697

The TCM and ECM have an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

#### **CAUTION:**

- Be sure to turn the ignition switch OFF and disconnect the battery cable from the negative terminal before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to an open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Be sure to route and secure the harnesses properly after work. Interference of the harness with a bracket, etc. may cause the MIL to light up due to a short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to a malfunction of the EGR system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the TCM and ECM before returning the vehicle to the customer.

### Removal and Installation Procedure for CVT Unit Connector

INFOID:000000011682698


#### REMOVAL

## PRECAUTIONS

### < PRECAUTION >


[CVT: RE0F10D]

- Rotate bayonet ring (1) counterclockwise. Pull out CVT unit harness connector (2) upward and remove it.

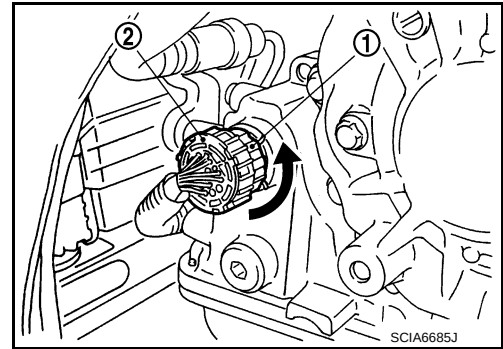


### INSTALLATION

1. Align marking (A) on CVT unit harness connector terminal with marking (B) on bayonet ring. Insert CVT unit harness connector.
2. Rotate bayonet ring clockwise.

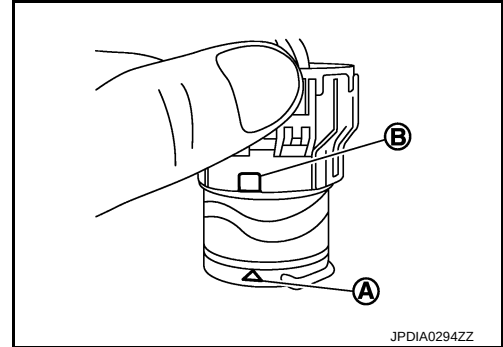


3. Rotate bayonet ring clockwise until marking (A) on CVT unit harness connector terminal body is aligned with the slit (B) on bayonet ring as shown in the figure (correctly fitting condition).

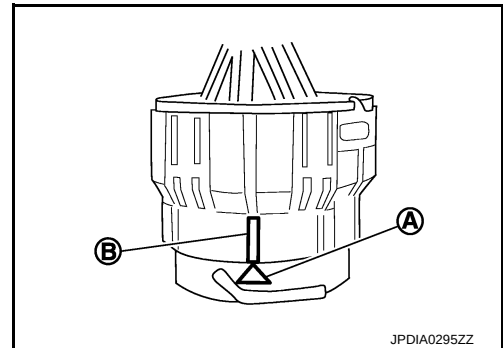

### CAUTION:

- Securely align marking (A) on CVT unit harness connector terminal body with bayonet ring slit (B). Then, be careful not to make a half fit condition as shown in the figure.
- Never mistake the slit of bayonet ring for other dent portion.

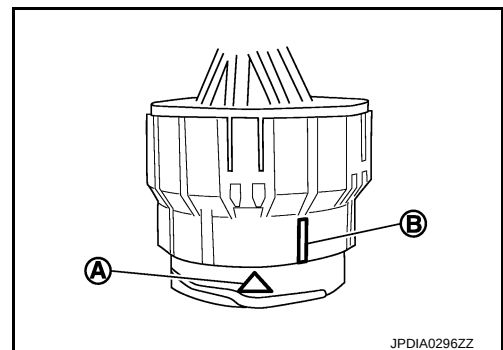

# PREPARATION

< PREPARATION >

[CVT: RE0F10D]



## PREPARATION

### PREPARATION

#### Special Service Tools

INFOID:000000011682699




The actual shape of the tools may differ from those illustrated here.
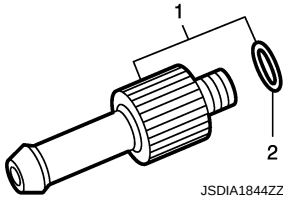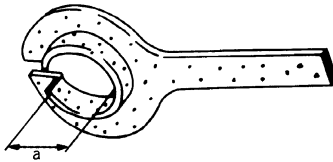
| Tool number<br>(TechMate No.)<br>Tool name                                                       | Description                       |
|--------------------------------------------------------------------------------------------------|-----------------------------------|
| 1. KV311039S0<br>( — )<br>Charging pipe set<br>2. KV31103920*<br>( — )<br>O-ring                 | CVT fluid changing and adjustment |
| <br>JSDIA1844ZZ |                                   |
| KV38107900<br>( — )<br>Protector<br>a: 32 mm (1.26 in) dia.                                      | Installing drive shaft            |
| <br>PDIA1183J  |                                   |

\*: The O-ring as a unit part is set as a SST.

#### Commercial Service Tools

INFOID:000000011682700

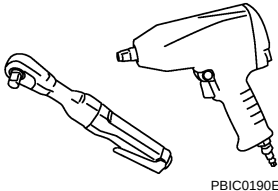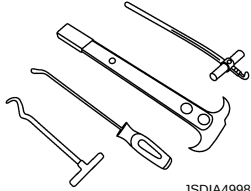
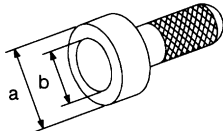
| Tool number<br>Tool name                                                                           | Description                                                                                          |
|----------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| Power tool                                                                                         | Loosening nuts and bolts                                                                             |
| <br>PBIC0190E   |                                                                                                      |
| Oil seal remover                                                                                   | Removing each oil seal                                                                               |
| <br>JSDIA4998ZZ |                                                                                                      |
| Drift<br>a: 53 mm (2.09 in) dia.<br>b: 50 mm (1.97 in) dia.                                        | Installing differential side oil seal [transaxle case side, and converter housing side (2WD models)] |
| <br>NT115       |                                                                                                      |



# PREPARATION

< PREPARATION >

[CVT: RE0F10D]
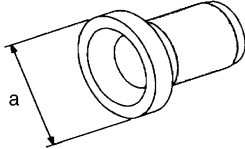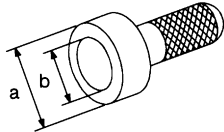
| Tool number<br>Tool name                                                                       | Description                                                                      |    |
|------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|----|
| Drift<br>a: 60 mm (2.36 in) dia.                                                               | Installing differential side oil seal [con-<br>verter housing side (AWD models)] | A  |
| <br>SCIA5338E |                                                                                  | B  |
|                                                                                                |                                                                                  | C  |
| Drift<br>a: 65 mm (2.56 in) dia.<br>b: 60 mm (2.36 in) dia.                                    | Installing converter housing oil seal                                            | TM |
| <br>NT115     |                                                                                  | E  |
|                                                                                                |                                                                                  | F  |
|                                                                                                |                                                                                  | G  |
|                                                                                                |                                                                                  | H  |
|                                                                                                |                                                                                  | I  |
|                                                                                                |                                                                                  | J  |
|                                                                                                |                                                                                  | K  |
|                                                                                                |                                                                                  | L  |
|                                                                                                |                                                                                  | M  |
|                                                                                                |                                                                                  | N  |
|                                                                                                |                                                                                  | O  |
|                                                                                                |                                                                                  | P  |


## SYSTEM DESCRIPTION

### COMPONENT PARTS

#### CVT CONTROL SYSTEM

#### CVT CONTROL SYSTEM : Component Parts Location

INFOID:000000011682701

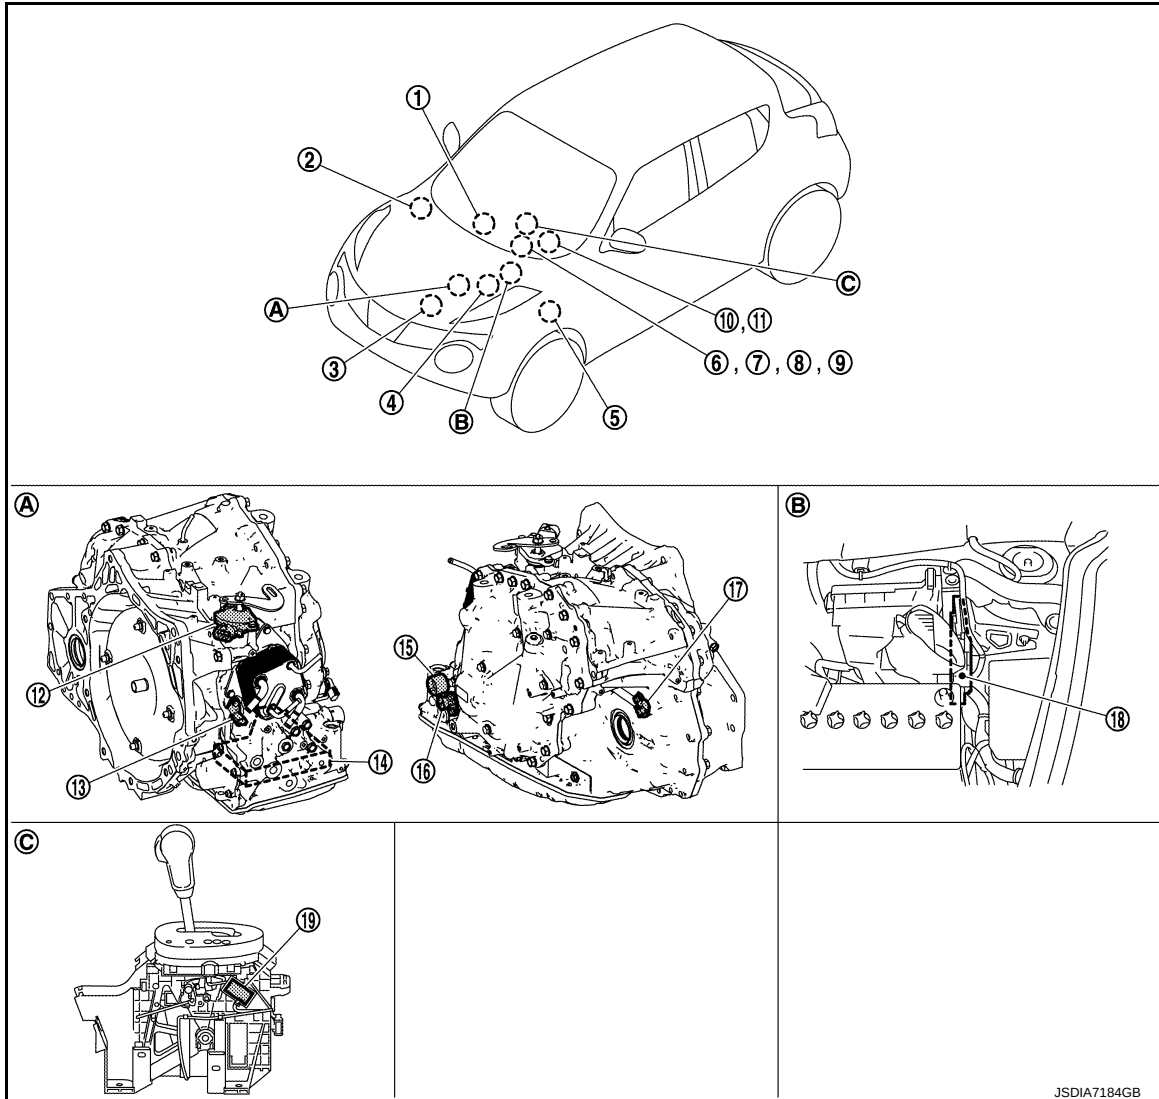

- |                                                                                             |                                                                                                                  |                                                                                                 |
|---------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| 1. Multi display unit (MDU)<br>Refer to <a href="#">DMS-3, "Component Parts Location"</a> . | 2. ABS actuator and electric unit (control unit)<br>Refer to <a href="#">BRC-9, "Component Parts Location"</a> . | 3. ECM<br>Refer to <a href="#">EC-588, "ENGINE CONTROL SYSTEM : Component Parts Location"</a> . |
| 4. IPDM E/R<br>Refer to <a href="#">PCS-4, "Component Parts Location"</a> .                 | 5. BCM<br>Refer to <a href="#">BCS-4, "BODY CONTROL SYSTEM : Component Parts Location"</a> .                     | 6. Combination meter                                                                            |
| 7. Manual mode indicator<br>(On the combination meter)                                      | 8. Shift position indicator<br>(On the combination meter)                                                        | 9. CVT indicator<br>(On the combination meter)                                                  |
| 10. Paddle shifter (shift-down switch)                                                      | 11. Paddle shifter (shift-up switch)                                                                             | 12. Transmission range sensor                                                                   |
| 13. Input speed sensor                                                                      | 14. Control valve                                                                                                | 15. CVT unit connector                                                                          |
| 16. Primary speed sensor                                                                    | 17. Output speed sensor                                                                                          | 18. TCM                                                                                         |
| 19. Manual mode switch                                                                      |                                                                                                                  |                                                                                                 |
| A. Transaxle assembly                                                                       | B. Engine room                                                                                                   | C. CVT shift selector assembly                                                                  |

JSDIA7184GB

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F10D]

## NOTE:

- The following components are included in control valve assembly.
- CVT fluid temperature sensor
- Primary pressure sensor
- Secondary pressure sensor
- Line pressure solenoid valve
- Primary pressure solenoid valve
- Secondary pressure solenoid valve
- Torque converter clutch solenoid valve
- Select solenoid valve

## CVT CONTROL SYSTEM : Component Description

INFOID:0000000011682702

| Name                                          | Function                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TCM                                           | <a href="#">TM-360, "CVT CONTROL SYSTEM : TCM"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Transmission range switch                     | <a href="#">TM-360, "CVT CONTROL SYSTEM : Transmission Range Switch"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Primary speed sensor                          | <a href="#">TM-360, "CVT CONTROL SYSTEM : Primary Speed Sensor"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Output speed sensor                           | <a href="#">TM-361, "CVT CONTROL SYSTEM : Output Speed Sensor"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Input speed sensor                            | <a href="#">TM-362, "CVT CONTROL SYSTEM : Input Speed Sensor"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| CVT fluid temperature sensor                  | <a href="#">TM-362, "CVT CONTROL SYSTEM : CVT Fluid Temperature Sensor"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Primary pressure sensor                       | <a href="#">TM-363, "CVT CONTROL SYSTEM : Primary Pressure Sensor"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Secondary pressure sensor                     | <a href="#">TM-363, "CVT CONTROL SYSTEM : Secondary Pressure Sensor"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Primary pressure solenoid valve               | <a href="#">TM-363, "CVT CONTROL SYSTEM : Primary Pressure Solenoid Valve"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Secondary pressure solenoid valve             | <a href="#">TM-364, "CVT CONTROL SYSTEM : Secondary Pressure Solenoid Valve"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Select solenoid valve                         | <a href="#">TM-364, "CVT CONTROL SYSTEM : Select Solenoid Valve"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Torque converter clutch solenoid valve        | <a href="#">TM-364, "CVT CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Line pressure solenoid valve                  | <a href="#">TM-365, "CVT CONTROL SYSTEM : Line Pressure Solenoid Valve"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Manual mode switch                            | <a href="#">TM-365, "CVT CONTROL SYSTEM : Manual Mode Switch"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Shift position indicator                      | <a href="#">TM-365, "CVT CONTROL SYSTEM : Shift Position Indicator"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Manual mode indicator                         | <a href="#">TM-366, "CVT CONTROL SYSTEM : Manual Mode Indicator"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Paddle shifter                                | <a href="#">TM-366, "CVT CONTROL SYSTEM : Paddle Shifter"</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| ECM                                           | <p>Mainly transmits the following signal to TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Engine and CVT integrated control signal</li> </ul> <p><b>NOTE:</b><br/>General term for the communication (torque-down permission, torque-down request, etc.) exchanged between the ECM and TCM.</p> <ul style="list-style-type: none"> <li>• Engine speed signal</li> <li>• Engine coolant temperature signal</li> <li>• Accelerator pedal position signal</li> <li>• Closed throttle position signal</li> </ul> <p>Mainly receives the following signal from TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Malfunctioning indicator lamp signal</li> </ul> |
| BCM                                           | <p>Mainly transmits the following signal to TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Stop lamp switch signal</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| ABS actuator and electric unit (control unit) | <p>Mainly transmits the following signals to TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• ABS operation signal</li> <li>• TCS operation signal</li> <li>• VDC operation signal</li> <li>• ABS malfunction signal</li> <li>• Vehicle speed signal</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                      |

# COMPONENT PARTS

< SYSTEM DESCRIPTION >


[CVT: RE0F10D]

| Name              | Function                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Combination meter | <p>Mainly transmits the following signal to TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Manual mode signal</li> <li>• Non-manual mode signal</li> <li>• Manual mode shift up signal</li> <li>• Manual mode shift down signal</li> </ul> <p>Mainly receives the following signals from TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• CVT indicator signal</li> <li>• Shift position signal</li> <li>• Manual mode indicator signal</li> <li>• Manual mode shift refusal signal</li> </ul> |
| MDU               | <p>Mainly transmits the following signal to MDU via CAN communication.</p> <ul style="list-style-type: none"> <li>• NORMAL mode signal</li> <li>• ECO mode signal</li> <li>• SPORT mode signal</li> </ul>                                                                                                                                                                                                                                                                                                                                      |

## CVT CONTROL SYSTEM : TCM

INFOID:0000000011682703


- The TCM consists of a microcomputer and connectors for signal input and output and for power supply.
- The vehicle driving status is judged based on the signals from the sensors, switches, and other control units, and the optimal transaxle control is performed.
- For TCM control items, refer to [TM-376. "CVT CONTROL SYSTEM : System Description"](#).

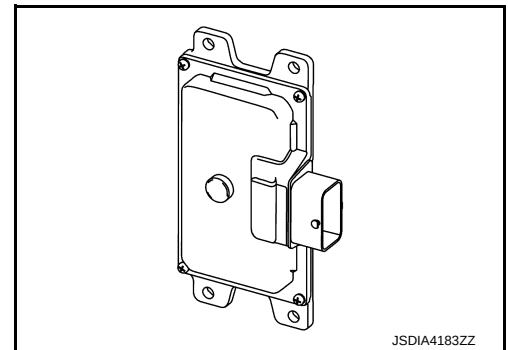

## CVT CONTROL SYSTEM : Transmission Range Switch

INFOID:0000000011682704


- The transmission range switch is installed to upper part of transaxle case.
- The transmission range switch detects the selector lever position.

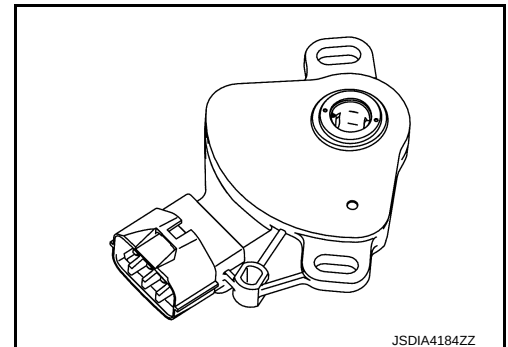

## CVT CONTROL SYSTEM : Primary Speed Sensor

INFOID:0000000011682705

- The primary speed sensor is installed to side cover of transaxle.
- The primary speed sensor detects primary pulley speed.

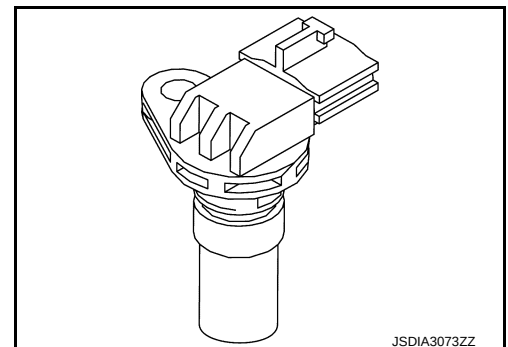


# COMPONENT PARTS

## < SYSTEM DESCRIPTION >

[CVT: RE0F10D]


- The primary speed sensor generates an ON-OFF pulse signal according to the rotating body speed. TCM judges the rotating body speed from the pulse signal.

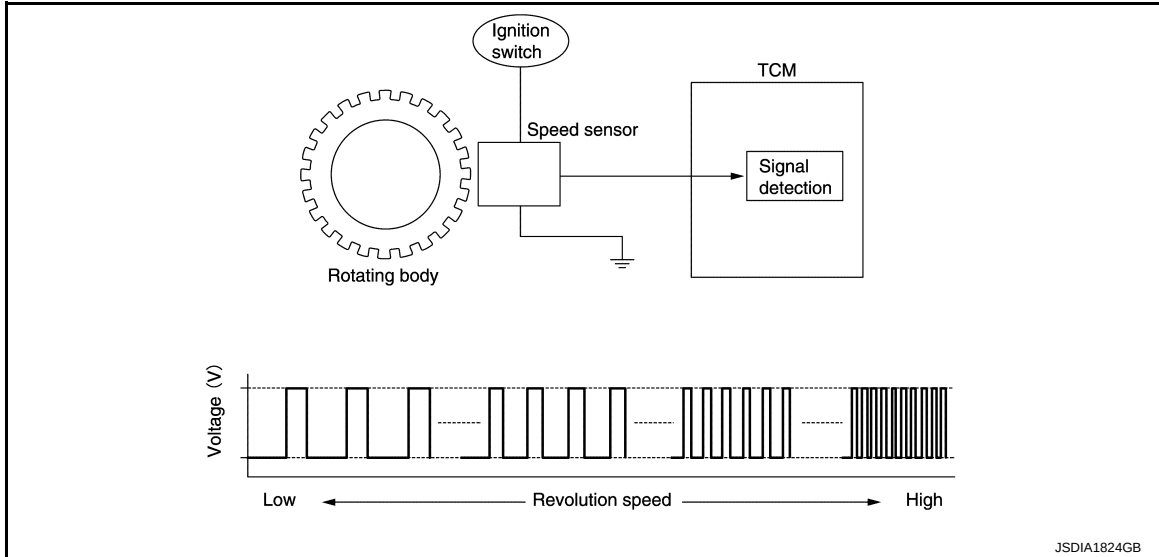


## CVT CONTROL SYSTEM : Output Speed Sensor

INFOID:0000000011682706

- The output speed sensor is installed to back side of transaxle.
- The output speed sensor detects final gear speed.

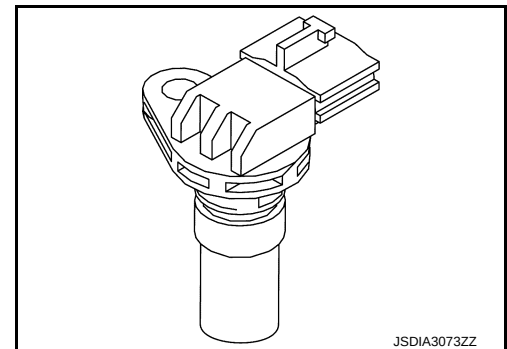

- The output speed sensor generates an ON-OFF pulse signal according to the rotating body speed. TCM judges the rotating body speed from the pulse signal.

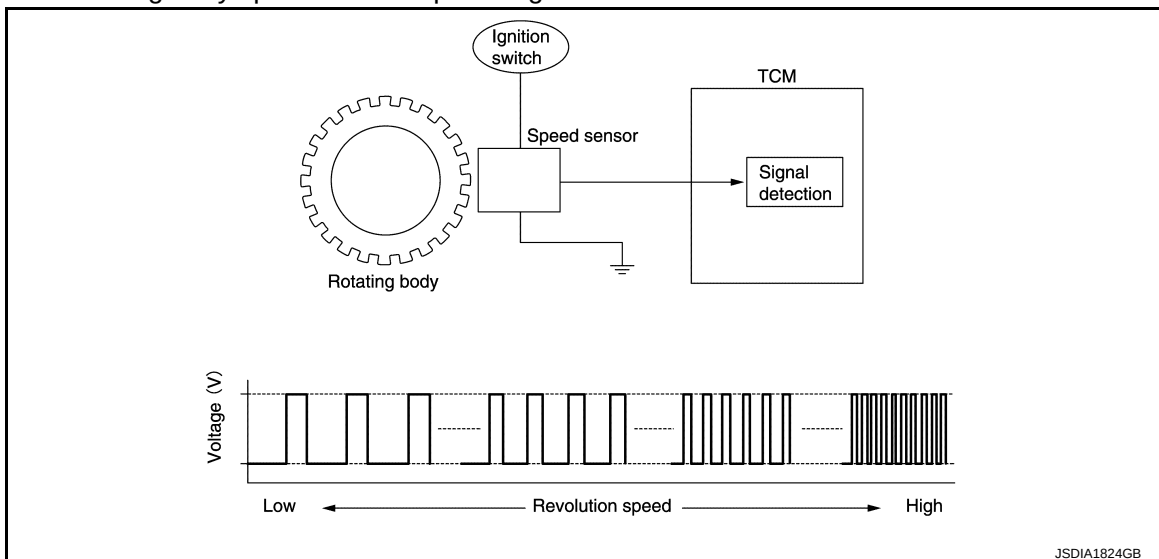

## COMPONENT PARTS


< SYSTEM DESCRIPTION >

[CVT: RE0F10D]


### CVT CONTROL SYSTEM : Input Speed Sensor

INFOID:000000011682707

- The input speed sensor is installed to the front side of transaxle case.
- The input speed sensor detects input shaft speed.

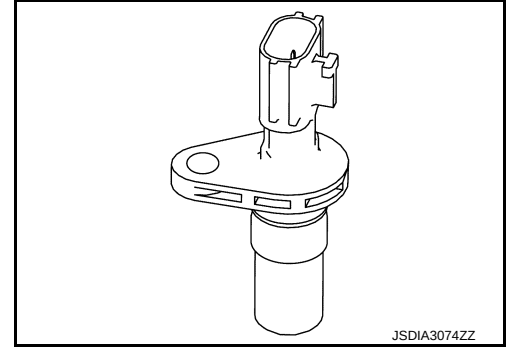


- The input speed sensor generates an ON-OFF pulse signal according to the rotating body speed. TCM judges the rotating body speed from the pulse signal.

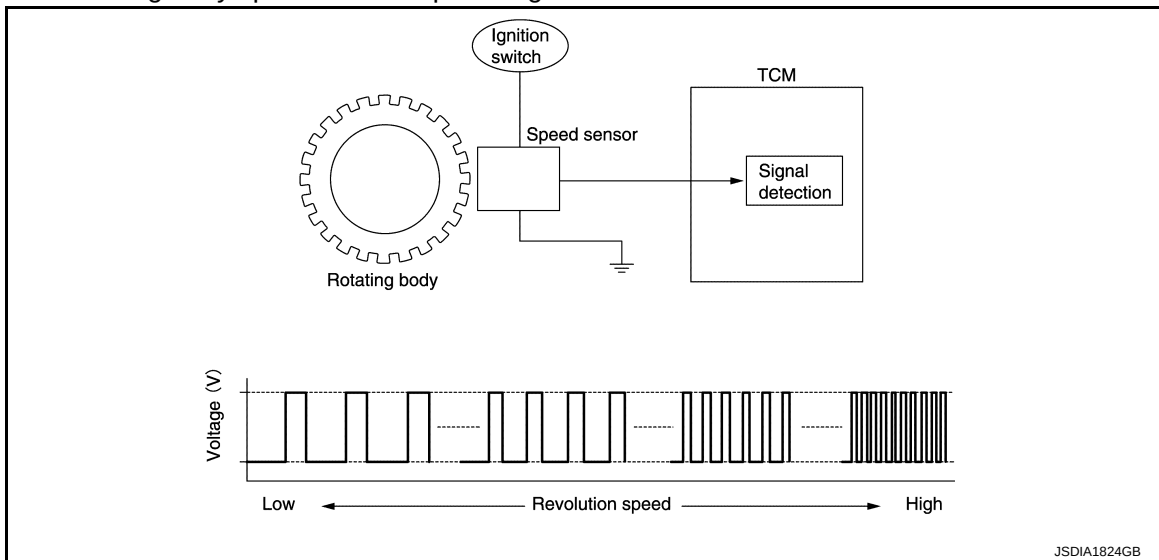

### CVT CONTROL SYSTEM : CVT Fluid Temperature Sensor

INFOID:000000011682708


- The CVT fluid temperature sensor is installed to control valve.
- The CVT fluid temperature sensor detects CVT fluid temperature in oil pan.
- The fluid temperature sensor uses a thermistor, and changes the signal voltage by converting changes in the CVT fluid temperature to a resistance value. TCM evaluates the CVT fluid temperature from the signal voltage value.

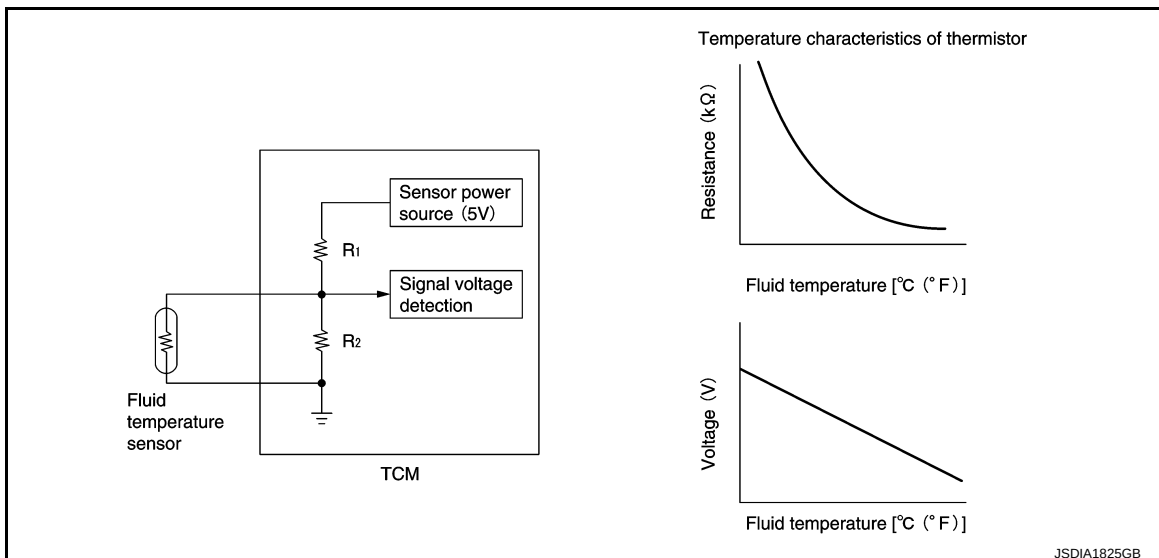

## CVT CONTROL SYSTEM : Primary Pressure Sensor

INFOID:0000000011682709


- The primary pressure sensor is installed to control valve.
- The primary pressure sensor detects the pressure applied to the primary pulley.
- When pressure is applied to the ceramic device in the primary pressure sensor, the ceramic device is deformed, resulting in voltage change. TCM evaluates the primary pressure from its voltage change. Voltage is increased along with pressure increase.

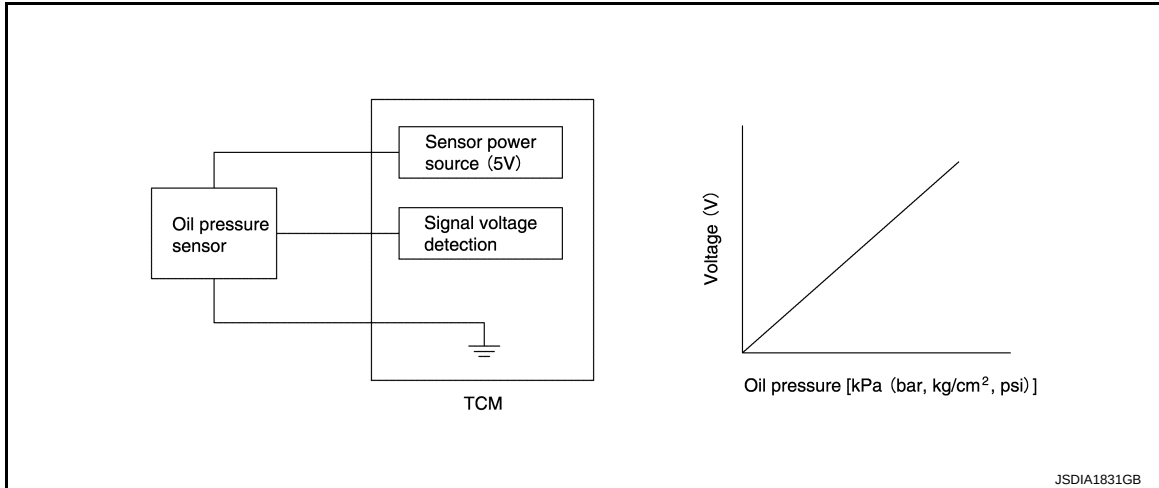

## CVT CONTROL SYSTEM : Secondary Pressure Sensor

INFOID:0000000011682710

- The secondary pressure sensor is installed to control valve.
- The secondary pressure sensor detects the pressure applied to the secondary pulley.
- When pressure is applied to the metal diaphragm in the secondary pressure sensor, the metal diaphragm is deformed, resulting in voltage change. TCM evaluates the secondary pressure from its voltage change. Voltage is increased along with pressure increase.

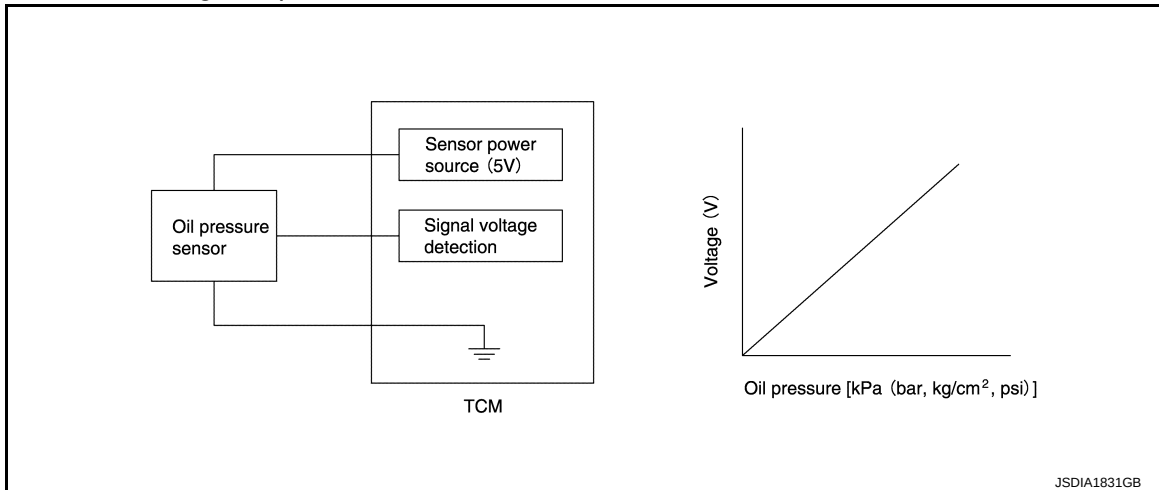

## CVT CONTROL SYSTEM : Primary Pressure Solenoid Valve

INFOID:0000000011682711

- The primary pressure solenoid valve is installed to control valve.
- The primary pressure solenoid valve controls the primary reducing valve. For information about the primary reducing valve, refer to [TM-373, "TRANSAXLE : Component Description"](#).

## COMPONENT PARTS


### < SYSTEM DESCRIPTION >

[CVT: RE0F10D]

- The primary pressure solenoid valve uses the linear solenoid valve [N/H (normal high) type].

**NOTE:**

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

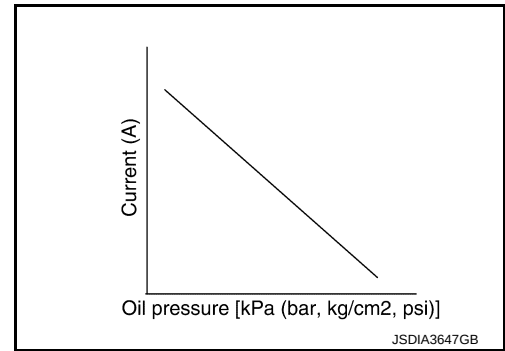


### CVT CONTROL SYSTEM : Secondary Pressure Solenoid Valve

INFOID:000000011682712

- The secondary pressure solenoid valve is installed to control valve.
- The secondary pressure solenoid valve controls the secondary reducing valve. For information about the secondary reducing valve, refer to [TM-373. "TRANSAXLE : Component Description"](#).
- The secondary pressure solenoid valve uses the linear solenoid valve [N/H (normal high) type].

**NOTE:**

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

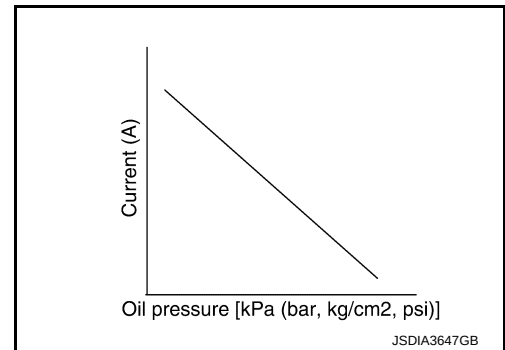


### CVT CONTROL SYSTEM : Select Solenoid Valve

INFOID:000000011682713

- The select solenoid valve is installed to control valve.
- The select solenoid valve adjusts the forward clutch engaging pressure and the reverse brake engaging pressure. For information about the forward clutch and reverse brake, refer to [TM-373. "TRANSAXLE : Component Description"](#).
- The select solenoid valve uses the linear solenoid valve [N/H (normal high) type].

**NOTE:**

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) type produces hydraulic control when the coil is not energized.

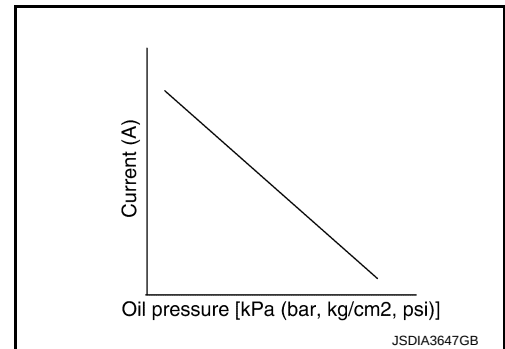

### CVT CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve

INFOID:000000011682714

- The torque converter clutch solenoid valve is installed to control valve.
- The torque converter clutch solenoid valve controls the torque converter clutch control valve. For information about the torque converter clutch control valve, refer to [TM-373. "TRANSAXLE : Component Description"](#).



## COMPONENT PARTS


### < SYSTEM DESCRIPTION >

[CVT: RE0F10D]

- The torque converter clutch solenoid valve utilizes a linear solenoid valve [N/L (normal low) type].

**NOTE:**

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/L (normal low) type does not produce hydraulic control when the coil is not energized.

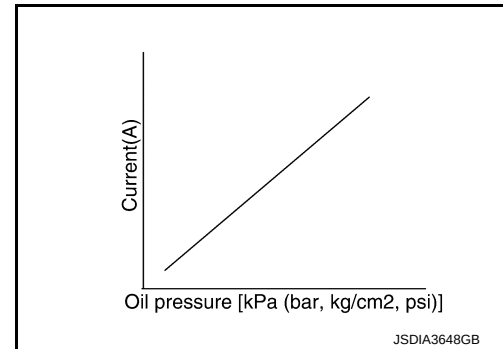


### CVT CONTROL SYSTEM : Line Pressure Solenoid Valve

INFOID:0000000011682715

- The line pressure solenoid valve is installed to control valve.
- The line pressure solenoid valve controls the pressure regulator valve. For information about the pressure regulator valve, refer to [TM-373. "TRANSAXLE : Component Description"](#).
- The line pressure solenoid valve uses the linear solenoid valve [N/H (normal high) type].

**NOTE:**

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

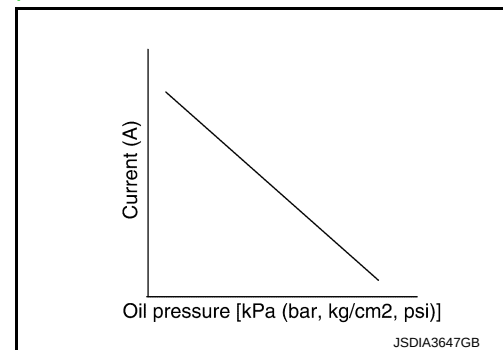

### CVT CONTROL SYSTEM : Manual Mode Switch

INFOID:0000000011682717

- The manual mode switch [mode select switch and position select switch (shift-up/shift-down)] is installed in the CVT shift selector assembly.
- The mode select switch detects the position (the main shift gate side or manual shift gate side) of the selector lever and transmits a manual mode signal or a not manual mode signal to the combination meter. Then, the TCM receives a manual mode signal or non-manual mode signal from the combination meter.
- The position select switch (shift-up) detects that the selector lever is shifted to the shift-up side of the manual shift gate and transmits a manual mode shift up signal to the combination meter. Then, the TCM receives a manual mode shift up signal from the combination meter.
- The position select switch (shift-down) detects that the selector lever is shifted to the shift-down side of the manual shift gate and transmits a manual mode shift down signal to the combination meter. Then, the TCM receives a manual mode shift down signal from the combination meter.

### CVT CONTROL SYSTEM : CVT Indicator lamp

INFOID:0000000011682718

- CVT indicator lamp is positioned on the combination meter.
- CVT indicator lamp turns on for a certain period of time when the ignition switch turns ON, and then turns OFF.

| Condition (status)                         | CVT indicator lamp |
|--------------------------------------------|--------------------|
| Ignition switch OFF.                       | OFF                |
| Ignition switch ON.                        | ON                 |
| Approx. 2 seconds after ignition switch ON | OFF                |

### CVT CONTROL SYSTEM : Shift Position Indicator

INFOID:0000000011682719


TCM transmits shift position signal to combination meter via CAN communication. The actual shift position is displayed on combination meter according to the signal.

## CVT CONTROL SYSTEM : Manual Mode Indicator

INFOID:000000011682720

- Manual mode indicator (A) is positioned on the combination meter.
- The manual mode indicator illuminates when the selector lever is operated to the manual shift gate side. It also displays the gear position (M1↔M7) when the selector lever is operated to the + side or – side. (Operates only during driving.)
- The manual mode indicator turns off when the selector lever is operated to the main shift gate side.


| Condition (status)                                        | Manual mode indicator |
|-----------------------------------------------------------|-----------------------|
| Selector lever is operated to the manual shift gate side. | Display               |
| Selector lever is operated to the + side or – side.       | M1↔M7                 |
| Selector lever is operated to the main shift gate side.   | Nothing displayed.    |

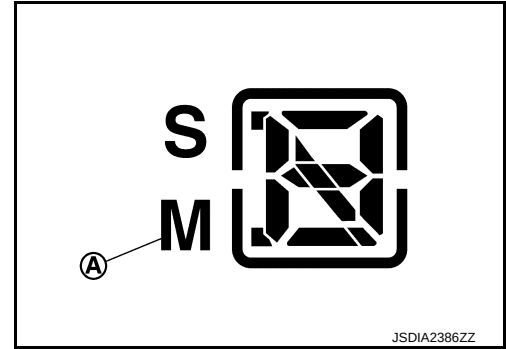

## CVT CONTROL SYSTEM : Paddle Shifter

INFOID:000000011740956


- The paddle shifter is installed to the steering column.
- The paddle shifter transmits shift up and shift down signals to combination meter. Then TCM receives signals from the combination meter via CAN communication.

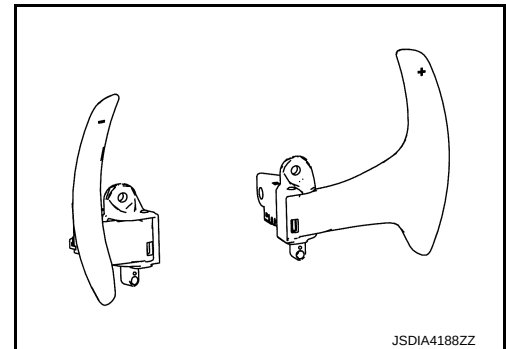

## SHIFT LOCK SYSTEM

## SHIFT LOCK SYSTEM : Component Parts Location

INFOID:0000000011682721

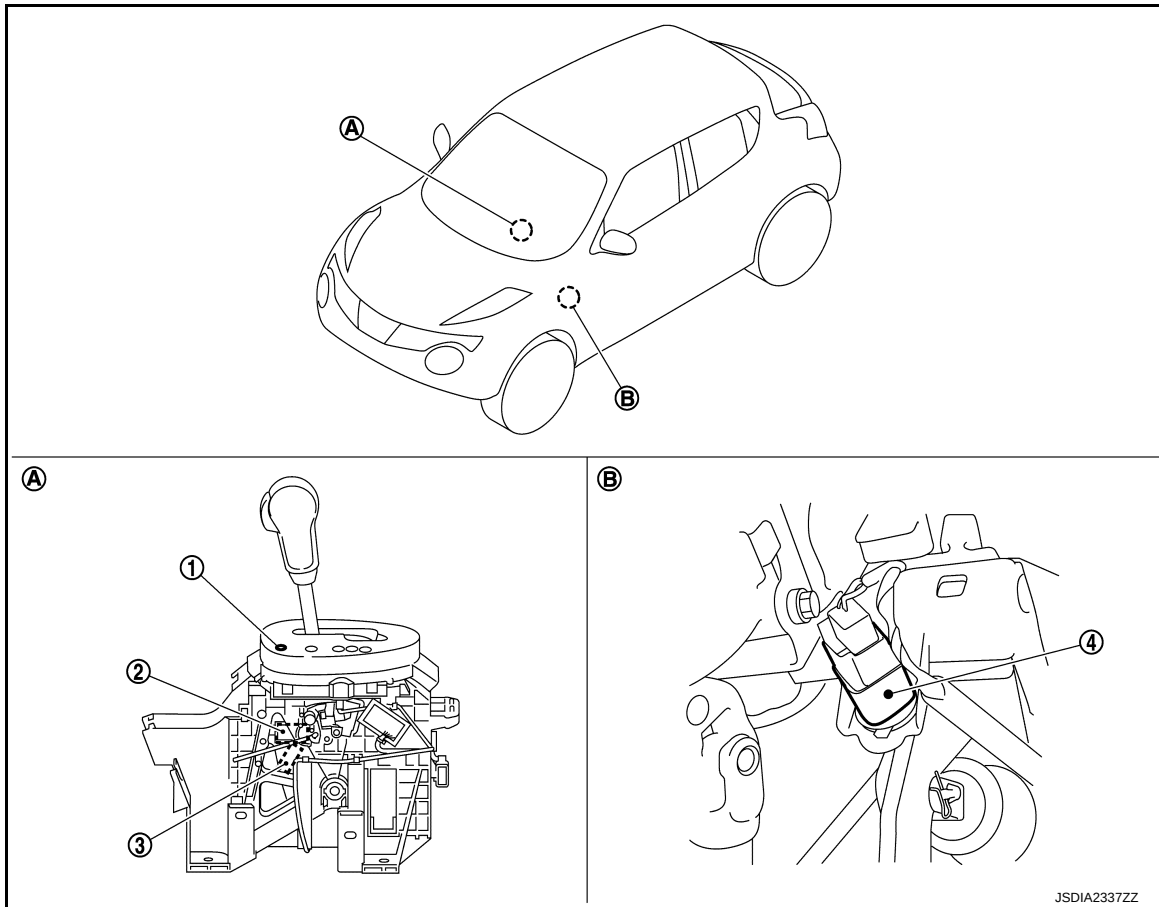

1. Shift lock release button cover\*      2. Shift lock solenoid      3. Park position switch

4. Stop lamp switch

A: CVT shift selector assembly

B: Brake pedal, upper

\*: Shift lock release button becomes operative by removing shift lock cover.

## SHIFT LOCK SYSTEM : Component Description

INFOID:0000000011682722

| Component                 | Function                                                                                                                                                                                                                                                                              |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Shift lock solenoid       | It operates according to the signal from the stop lamp switch and moves the lock lever.                                                                                                                                                                                               |
| Lock lever                | <ul style="list-style-type: none"> <li>Rotates according to shift lock solenoid activation and releases the shift lock.</li> <li>If shift lock solenoid does not activate, lock lever can be rotated when shift lock release button is pressed and shift lock is released.</li> </ul> |
| Detent rod                | It links with the selector button and restricts the selector lever movement.                                                                                                                                                                                                          |
| Park position switch      | It detects that the selector lever is in "P" position.                                                                                                                                                                                                                                |
| Shift lock release button | Forcibly releases the shift lock when pressed.                                                                                                                                                                                                                                        |
| Stop lamp switch          | <ul style="list-style-type: none"> <li>The stop lamp switch turns ON when the brake pedal is depressed.</li> <li>When the stop lamp switch turns ON, the shift lock solenoid is energized.</li> </ul>                                                                                 |

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >


[CVT: RE0F10D]

## STRUCTURE AND OPERATION

### TRANSAXLE

#### TRANSAXLE : Cross-Sectional View

INFOID:0000000011682723

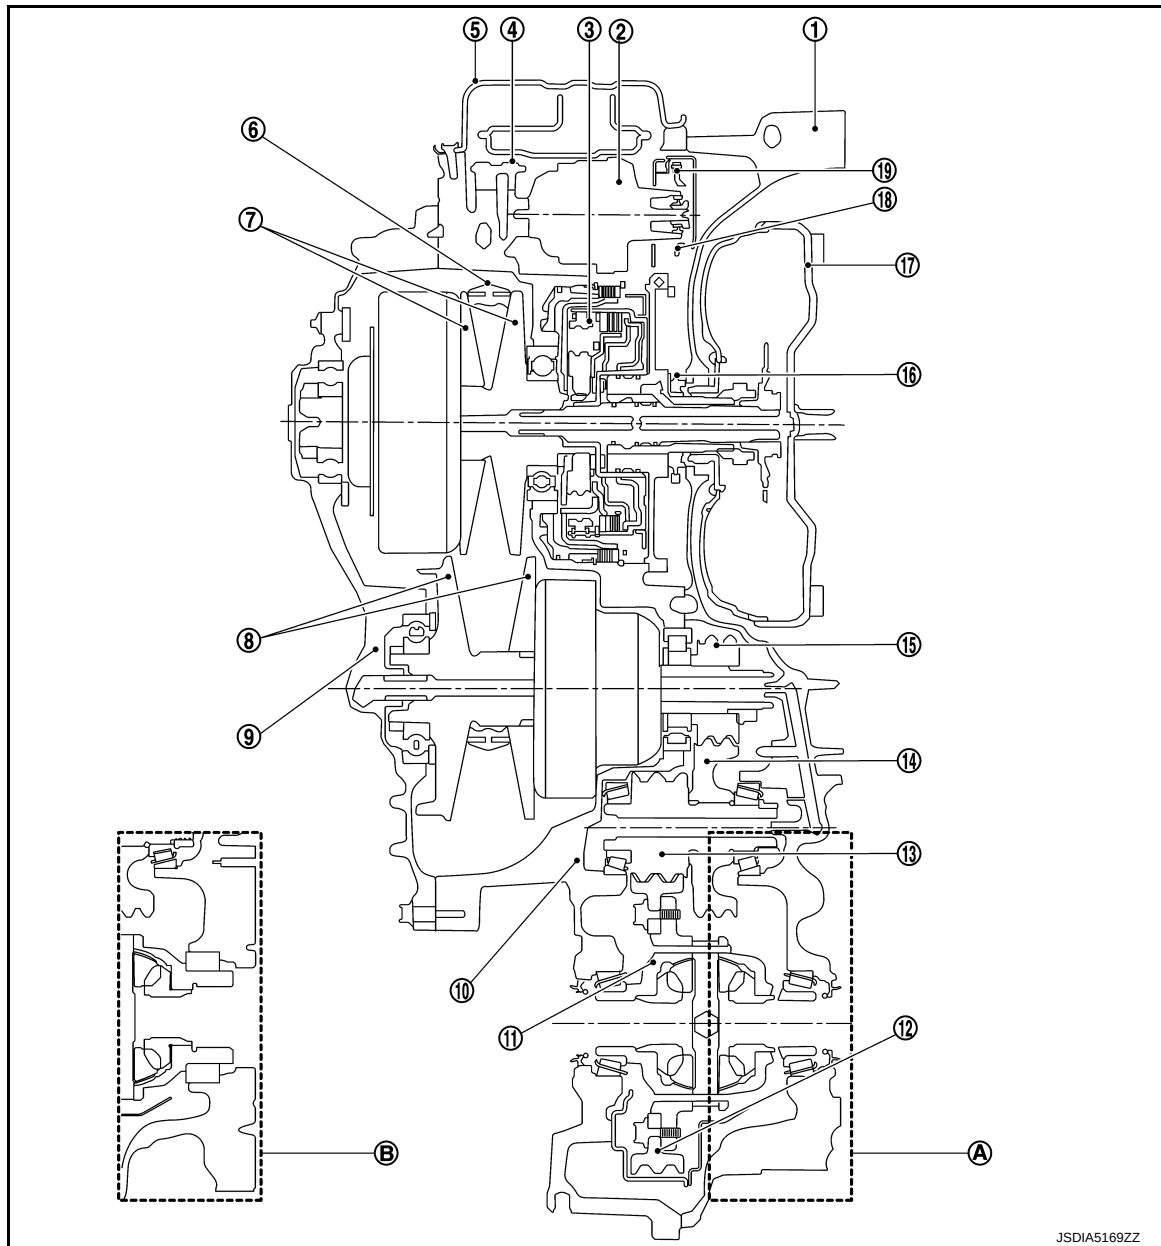

JSDIA5169ZZ

- |                      |                       |                     |
|----------------------|-----------------------|---------------------|
| 1. Converter housing | 2. Oil pump           | 3. Planetary gear   |
| 4. Control valve     | 5. Oil pan            | 6. Steel belt       |
| 7. Primary pulley    | 8. Secondary pulley   | 9. Side cover       |
| 10. Transaxle case   | 11. Differential case | 12. Final gear      |
| 13. Reduction gear   | 14. Idler gear        | 15. Output gear     |
| 16. Drive sprocket   | 17. Torque converter  | 18. Driven sprocket |
| 19. Oil pump chain   |                       |                     |
| A. 2WD models        | B. 4WD models         |                     |

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10D]

## TRANSAXLE : Operation Status

INFOID:0000000011682724

×: Engaged or applied.

| Selector lever position | Parking mechanism | Forward clutch | Reverse brake | Primary pulley | Secondary pulley | Steel belt | Final drive |
|-------------------------|-------------------|----------------|---------------|----------------|------------------|------------|-------------|
| P                       | ×                 |                |               |                |                  |            |             |
| R                       |                   |                | ×             | ×              | ×                | ×          | ×           |
| N                       |                   |                |               |                |                  |            |             |
| D                       |                   | ×              |               | ×              | ×                | ×          | ×           |

## TRANSAXLE : Transaxle Mechanism

INFOID:0000000011682725

### TORQUE CONVERTER (WITH LOCK-UP FUNCTION)

In the same way as a conventional A/T, the torque converter is a system that increases the engine torque and transmits the torque to the transaxle. A symmetrical 3-element, 1-stage, 2-phase type is used here.


### OIL PUMP

Utilizes a vane-type oil pump that is driven by the engine through the oil pump drive chain in order to increase efficiency of pump discharge volume in low-speed zone and optimize pump discharge volume in high-speed zone. Discharged oil from oil pump is transmitted to control valve. It is used as the oil of primary and secondary pulley operation, the oil of clutch operation, and the lubricant for each part.

### PLANETARY GEAR

- A planetary gear type of forward/reverse selector mechanism is installed between the torque converter and primary pulley.
- The power from the torque converter is input via the input shaft, operating a wet multi-plate clutch by means of hydraulic pressure to switch between forward and reverse driving.

#### Operation of Planetary gear

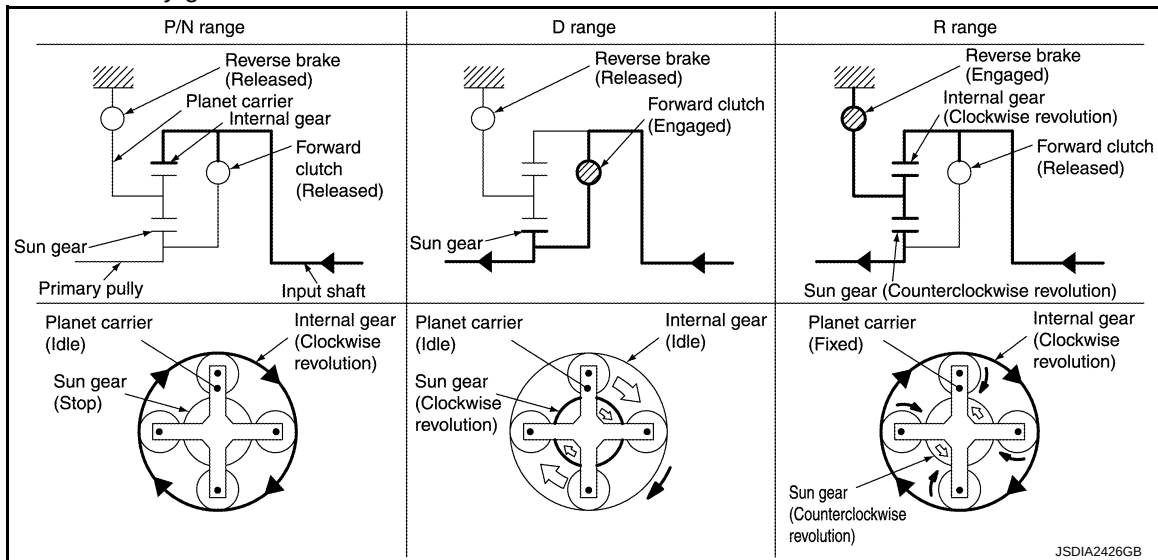

### BELT & PULLEY


It is composed of a pair of pulleys (the groove width is changed freely in the axial direction) and the steel belt (the steel plates are placed continuously and the belt is guided with the multilayer steel rings on both sides).

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10D]

The groove width changes according to wrapping radius of steel belt and pulley from low status to overdrive status continuously with non-step. It is controlled with the oil pressures of primary pulley and secondary pulley.

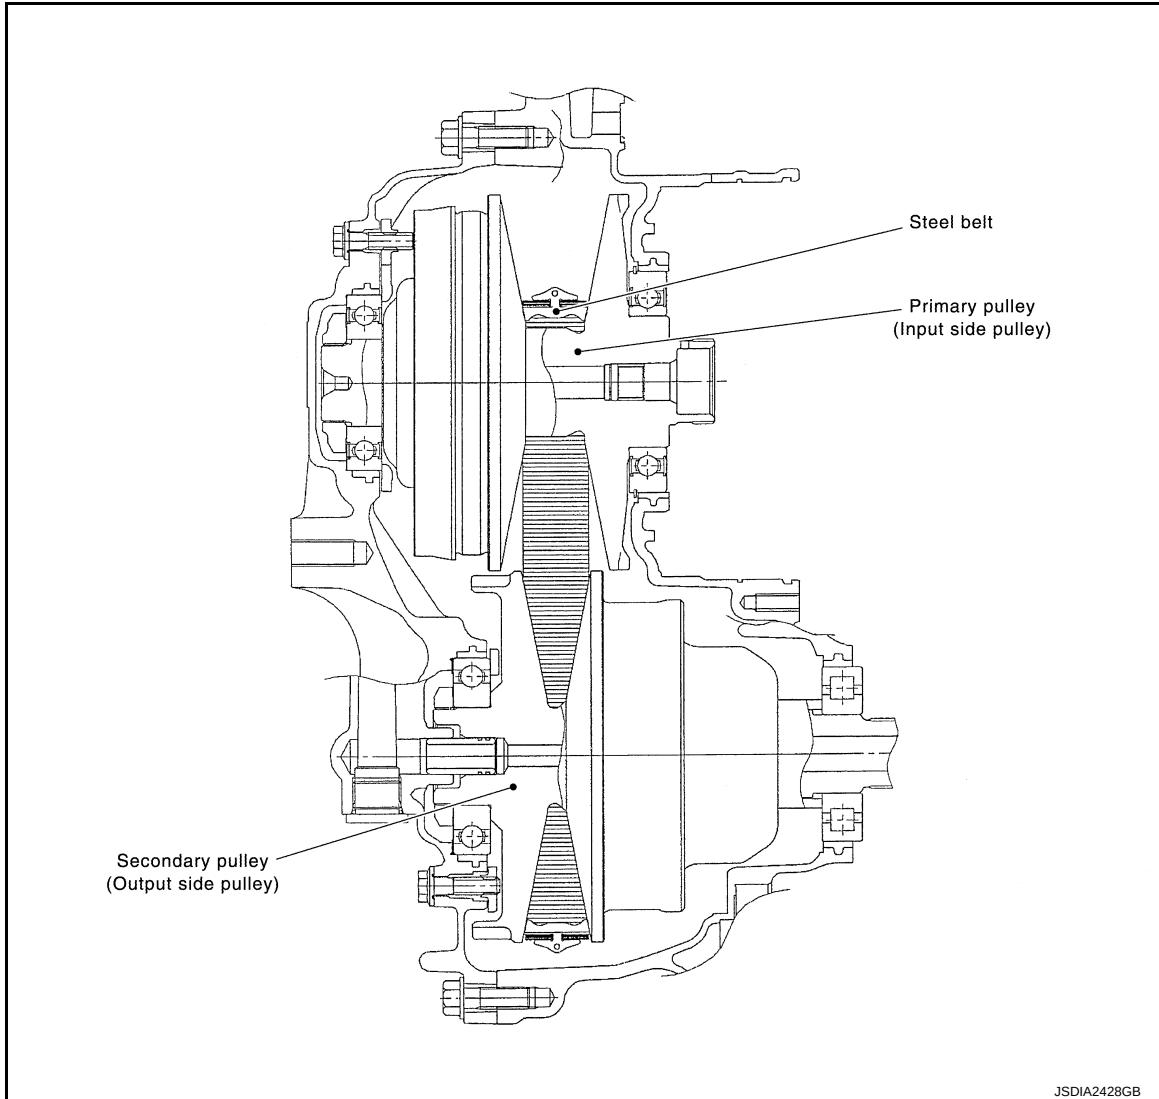

## Steel Belt


It is composed of multiple steel plates (A) and two steel rings (B) stacked to a several number. The feature of this steel belt transmits power with compression of the steel plate in contrast with transmission of power in pulling with a rubber belt. Friction force is required with the pulley slope to transmit power from the steel plate. The force is generated with the following mechanism:

Oil pressure applies to the secondary pulley to nip the plate. ⇒The plate is pushed and extended outward. ⇒The steel ring shows with-stands. ⇒Pulling force is generated on the steel ring. ⇒The plate of the primary pulley is nipped between the pulley. ⇒Friction force is generated between the steel belt and the pulley.

Therefore, responsibilities are divided by the steel plate that transmits the power with compression and the steel ring that maintains necessary friction force. In this way, the tension of the steel ring is distributed on the entire surface and stress variation is limited, resulting in good durability.

## Pulley

The primary pulley (input shaft side) and the secondary pulley (output shaft side) have the shaft with slope (fixed cone surface), movable sheave (movable cone surface that can move in the axial direction) and oil pressure chamber at the back of the movable sheave.

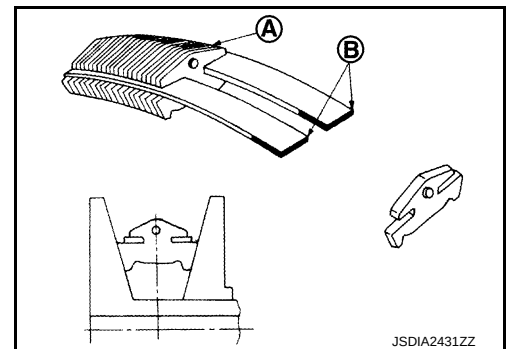


# STRUCTURE AND OPERATION

## < SYSTEM DESCRIPTION >

[CVT: RE0F10D]

The movable sheave slides on the shaft to change the groove width of the pulley. Input signals of engine load (accelerator pedal opening), primary pulley speed and secondary pulley speed change the operation pressures of the primary pulley and the secondary pulley, and controls the pulley groove width.

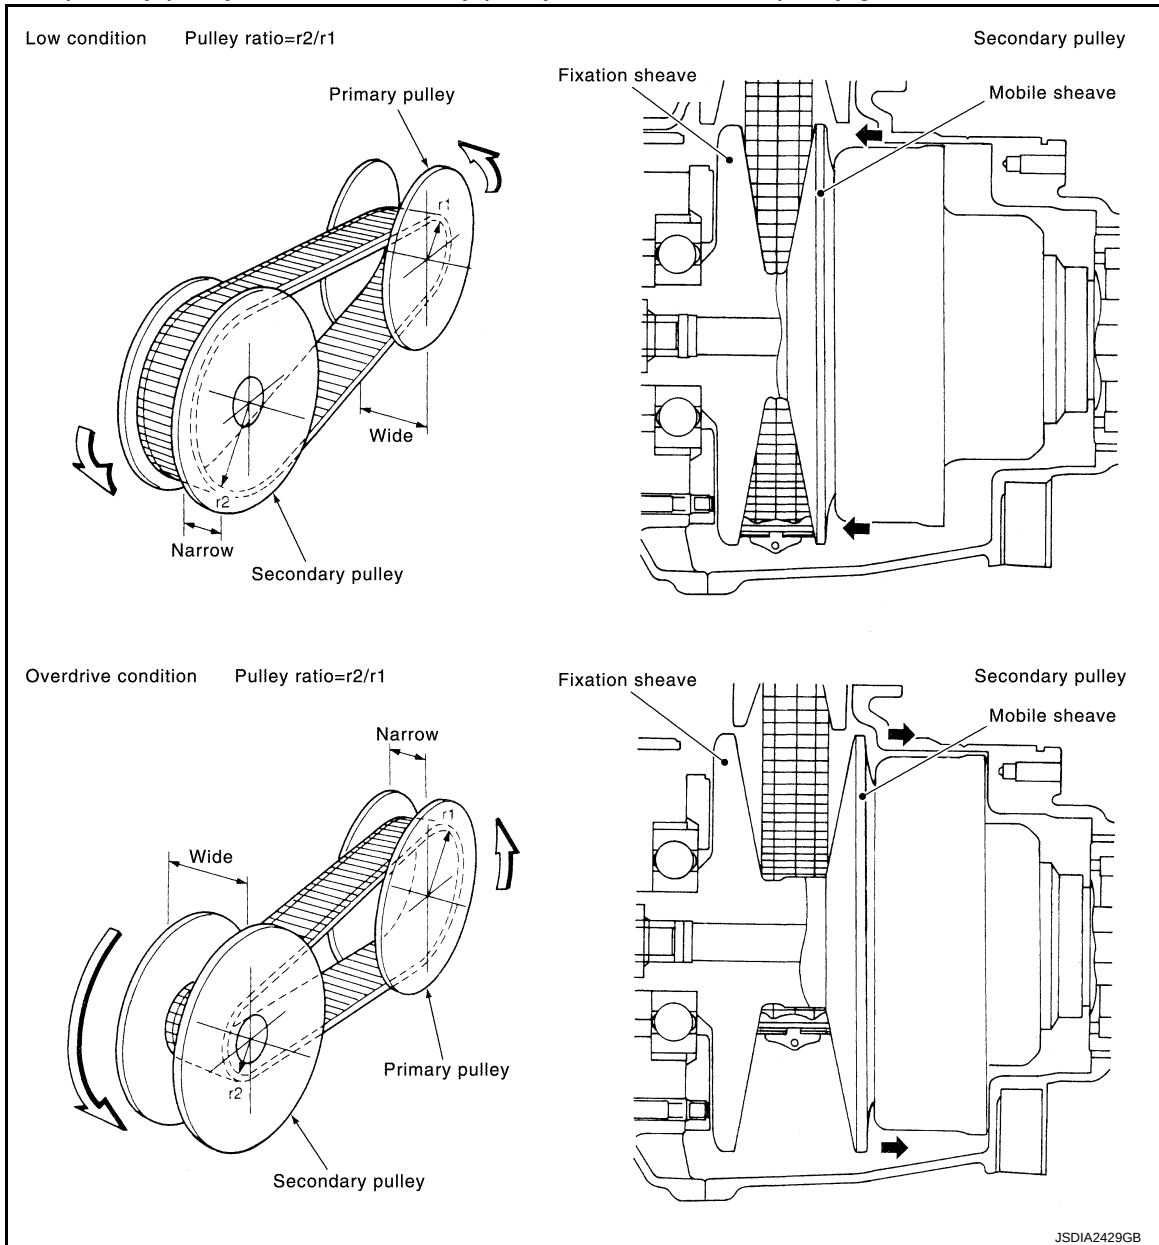

## FINAL DRIVE AND DIFFERENTIAL


The deceleration gears are composed of 2 stages: primary deceleration (output gear, idler gear pair) and secondary deceleration (reduction gear, final gear pair). All of these gears are helical gears.

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10D]

The lubrication oil is the same as the CVT fluid which lubricates the entire transaxle.

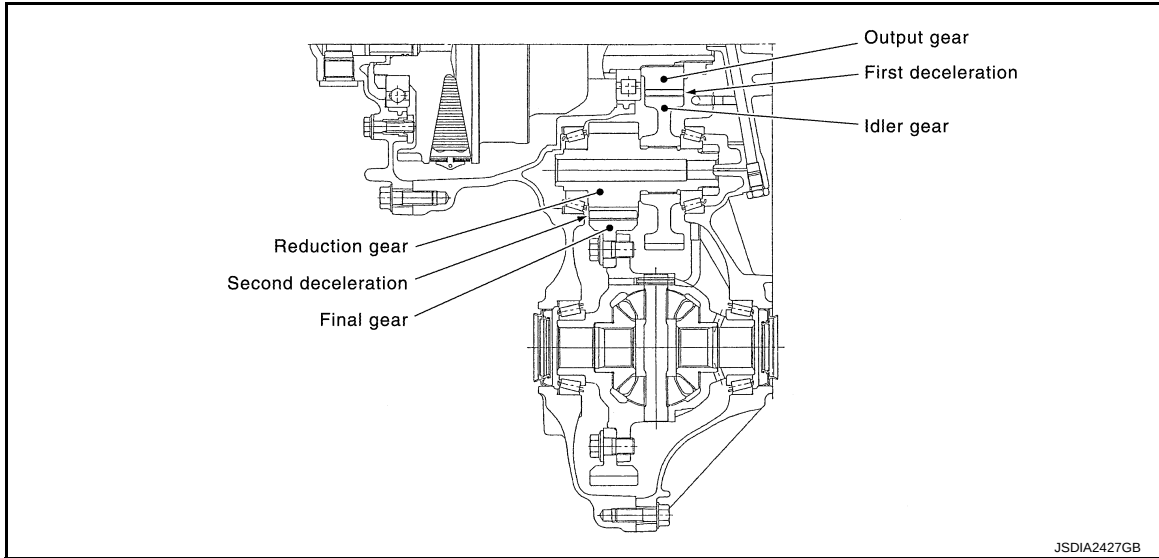


JSDIA2427GB

## TRANSAXLE : Oil Pressure System

INFOID:000000011682726

Oil pressure required for operation of the transaxle transmission mechanism is generated by oil pump, oil pressure control valve, solenoid valve, etc.

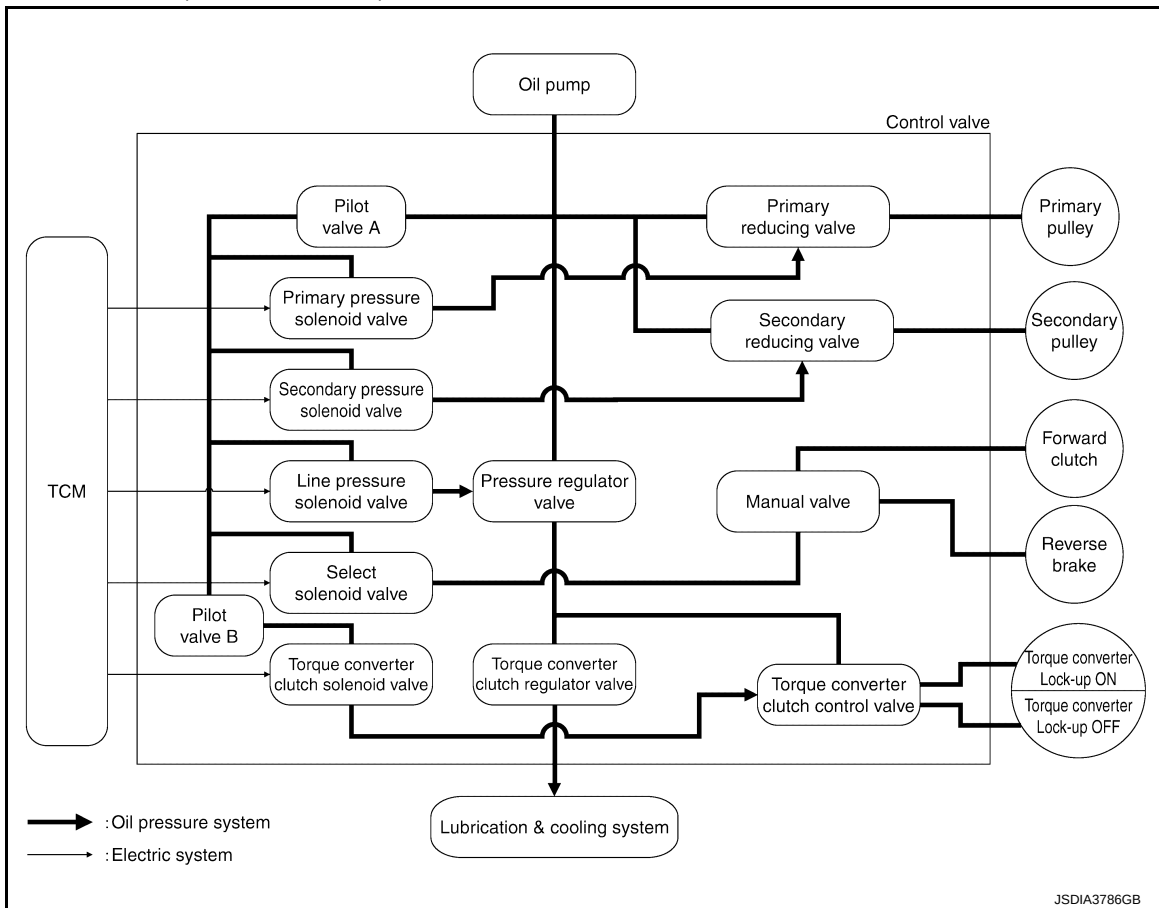

JSDIA3786GB



# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10D]

## TRANSAXLE : Component Description

INFOID:0000000011682727


| Part name                             | Function                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Torque converter                      | Increases engine torque and transmits it to the transaxle.                                                                                                                                                                                                                                                                                                                                                                 |
| Oil pump                              | Utilizes a vane-type oil pump that is driven by the engine through the oil pump drive chain in order to increase efficiency of pump discharge volume in low-speed zone and optimize pump discharge volume in high-speed zone. Discharged oil from oil pump is transmitted to control valve. It is used as the oil of primary and secondary pulley operation, the oil of clutch operation, and the lubricant for each part. |
| Forward clutch                        | The forward clutch is wet and multiple plate type clutch that consists of clutch drum, piston, drive plate, and driven plate. It is a clutch to move the vehicle forward by activating piston hydraulically, engaging plates, and directly connecting sun gear and input shaft.                                                                                                                                            |
| Reverse brake                         | The reverse brake is a wet multiple-plate type brake that consists of transaxle case, piston, drive plate, and driven plate. It is a brake to move the vehicle in reverse by activating piston hydraulically, engaging plates, and fixing planetary gear.                                                                                                                                                                  |
| Internal gear                         | The internal gear is directly connected to forward clutch drum. It is a gear that moves the outer edge of pinion planet of planet carrier. It transmits power to move the vehicle in reverse when the planet carrier is fixed.                                                                                                                                                                                             |
| Planet carrier                        | Composed of a carrier, pinion planet, and pinion shaft. This gear fixes and releases the planet carrier in order to switch between forward and reverse driving.                                                                                                                                                                                                                                                            |
| Sun gear                              | Sun gear is a set part with planet carrier and internal gear. It transmits transmitted force to primary fixed sheave. It rotates in forward or reverse direction according to activation of either forward clutch or reverse brake.                                                                                                                                                                                        |
| Input shaft                           | The input shaft is directly connected to forward clutch drum and transmits traction force from torque converter. In shaft center, there are holes for hydraulic distribution to primary pulley and hydraulic distribution for lockup ON/OFF.                                                                                                                                                                               |
| Primary pulley                        | It is composed of a pair of pulleys (the groove width is changed freely in the axial direction) and the steel belt. The groove width changes according to wrapping radius of steel belt and pulley from low status to overdrive status continuously with non-step. It is controlled with the oil pressures of primary pulley and secondary pulley.                                                                         |
| Secondary pulley                      |                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Steel belt                            |                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Manual shaft                          | When the manual shaft is in the P position, the parking rod that is linked to the manual shaft rotates the parking pole. When the parking pole rotates, it engages with the parking gear, fixing the parking gear. As a result, the secondary pulley that is integrated with the parking gear is fixed.                                                                                                                    |
| Parking rod                           |                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Parking pawl                          |                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Parking gear                          |                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Output gear                           | The deceleration gears are composed of 2 stages: primary deceleration (output gear, idler gear pair) and secondary deceleration (reduction gear, final gear pair). All of these gears are helical gears.                                                                                                                                                                                                                   |
| Idler gear                            |                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Reduction gear                        |                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Differential                          |                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Torque converter regulator valve      | Adjusts the feed pressure to the torque converter to the optimum pressure corresponding to the driving condition.                                                                                                                                                                                                                                                                                                          |
| Pressure regulator valve              | Adjusts the discharge pressure from the oil pump to the optimum pressure (line pressure) corresponding to the driving condition.                                                                                                                                                                                                                                                                                           |
| Torque converter clutch control valve | Adjusts the torque converter engage and disengage pressures.                                                                                                                                                                                                                                                                                                                                                               |
| Manual valve                          | Distributes the clutch operation pressure to each circuit according to the selector lever position.                                                                                                                                                                                                                                                                                                                        |
| Secondary reducing valve              | Reduces line pressure and adjusts secondary pressure.                                                                                                                                                                                                                                                                                                                                                                      |
| Primary reducing valve                | Reduces line pressure and adjusts primary pressure.                                                                                                                                                                                                                                                                                                                                                                        |
| Pilot valve A                         | Reduces line pressure and adjusts pilot pressure to the solenoid valves listed below. <ul style="list-style-type: none"> <li>• Primary pressure solenoid valve</li> <li>• Secondary pressure solenoid valve</li> <li>• Select solenoid valve</li> <li>• Line pressure solenoid valve</li> </ul>                                                                                                                            |
| Pilot valve B                         | Reduces pilot pressure and adjusts pilot pressure to the torque converter clutch solenoid valve.                                                                                                                                                                                                                                                                                                                           |

## FLUID COOLER & FLUID WARMER SYSTEM

## FLUID COOLER & FLUID WARMER SYSTEM : System Description

INFOID:000000011682728


### CVT FLUID COOLER SCHEMATIC

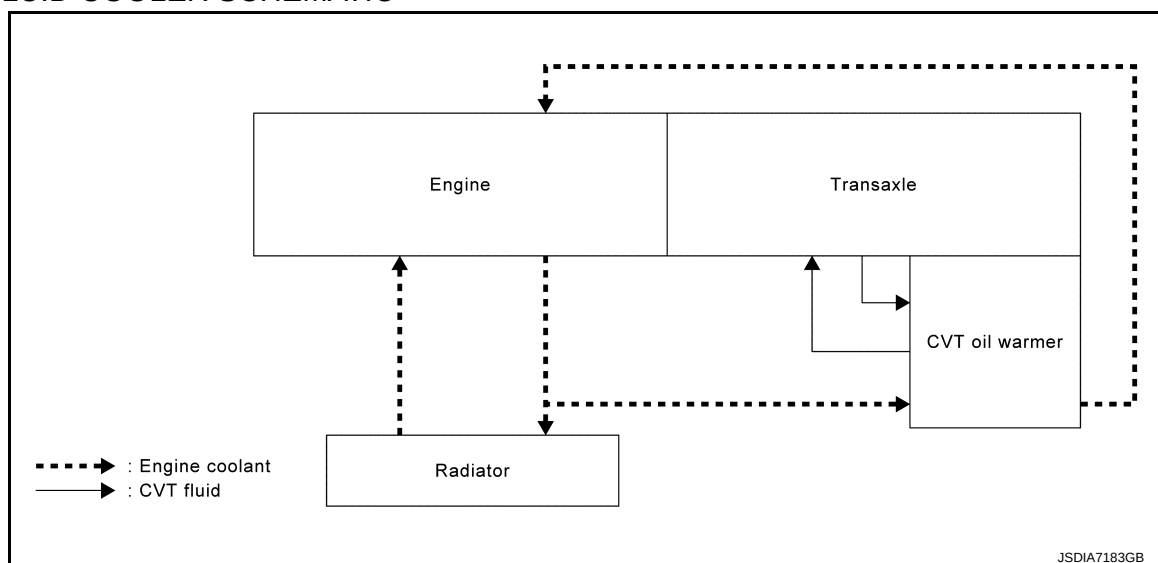

### COMPONENT DESCRIPTION

#### CVT Oil Warmer

- The CVT oil warmer (1) is installed on the front part of transaxle assembly.
- When engine is started while engine and CVT are cold, engine coolant temperature rises more quickly than CVT fluid temperature. CVT oil warmer is provided with two circuits for CVT and engine coolant respectively so that warmed engine coolant warms CVT quickly. This helps shorten CVT warming up time, improving fuel economy.
- A cooling effect is obtained when CVT fluid temperature is high.

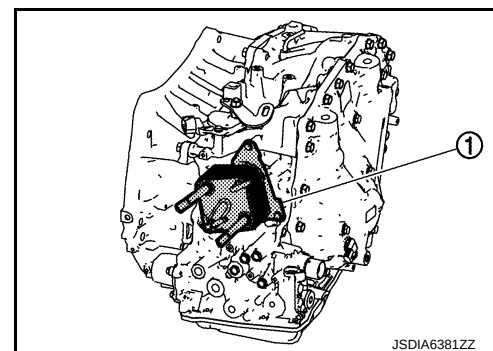

## SHIFT LOCK SYSTEM

### SHIFT LOCK SYSTEM : System Description

INFOID:000000011682729

- The shift lock is the mechanism provided to prevent quick start of a vehicle by incorrect operation of a drive when the selector lever is in P position.
- Selector lever can be shifted from the P position to another position when the following conditions are satisfied.
  - Ignition switch is ON.
  - Stop lamp switch ON (brake pedal is depressed)
  - Press the selector button.

#### SHIFT LOCK OPERATION AT P POSITION

When brake pedal is not depressed (no selector operation allowed)


# STRUCTURE AND OPERATION

## < SYSTEM DESCRIPTION >

[CVT: RE0F10D]


When the brake pedal is not depressed with the ignition switch ON, the shift lock solenoid (A) is OFF (not energized) and the solenoid rod (B) is extended with spring.

The connecting lock lever (C) is located at the position shown in the figure when the solenoid rod is extended. It prevents the movement of the detent rod (D). The selector lever cannot be shifted from the P position for this reason.

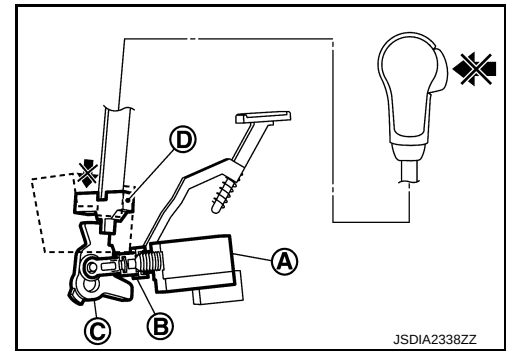

When brake pedal is depressed (selector lever operation allowed)

The shift lock solenoid (A) is turned ON (energized) when the brake pedal is depressed with the ignition switch ON. The solenoid rod (B) is compressed with the electromagnetic force. The connecting lock lever (C) rotates when the solenoid rod is compressed. Therefore, the detent rod (D) can be moved. The selector lever can be shifted to other positions for this reason.

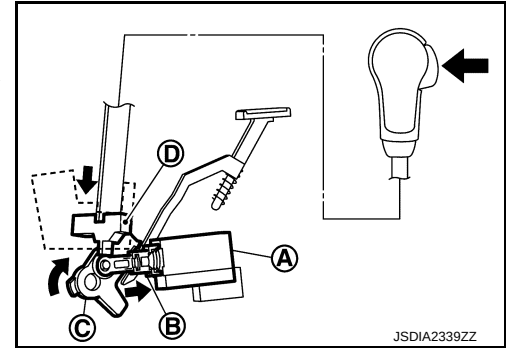


## P POSITION HOLD MECHANISM (IGNITION SWITCH LOCK)

The shift lock solenoid (A) is not energized when the ignition switch is in any position other than ON. The shift mechanism is locked and P position is held. The operation cannot be performed from P position if the brake pedal is depressed with the ignition switch ON when the operation system of shift lock solenoid is malfunctioning. However, the lock lever (B) is forcibly rotated and the shift lock is released when the shift lock release rod (C) is pressed from above. The selector operation from P position can be performed.

D : Detent rod

### CAUTION:

Use the shift lock release button only when the selector lever cannot be operated even if the brake pedal is depressed with the ignition switch ON.

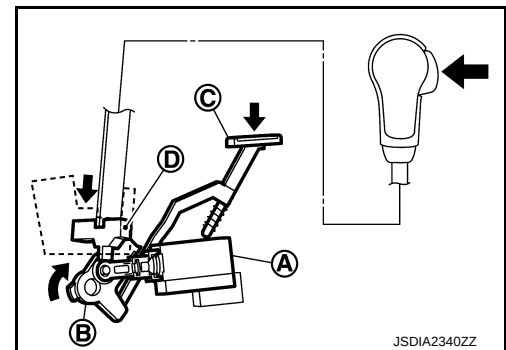

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


## SYSTEM

### CVT CONTROL SYSTEM

#### CVT CONTROL SYSTEM : System Description

INFOID:000000011682730

#### SYSTEM DIAGRAM

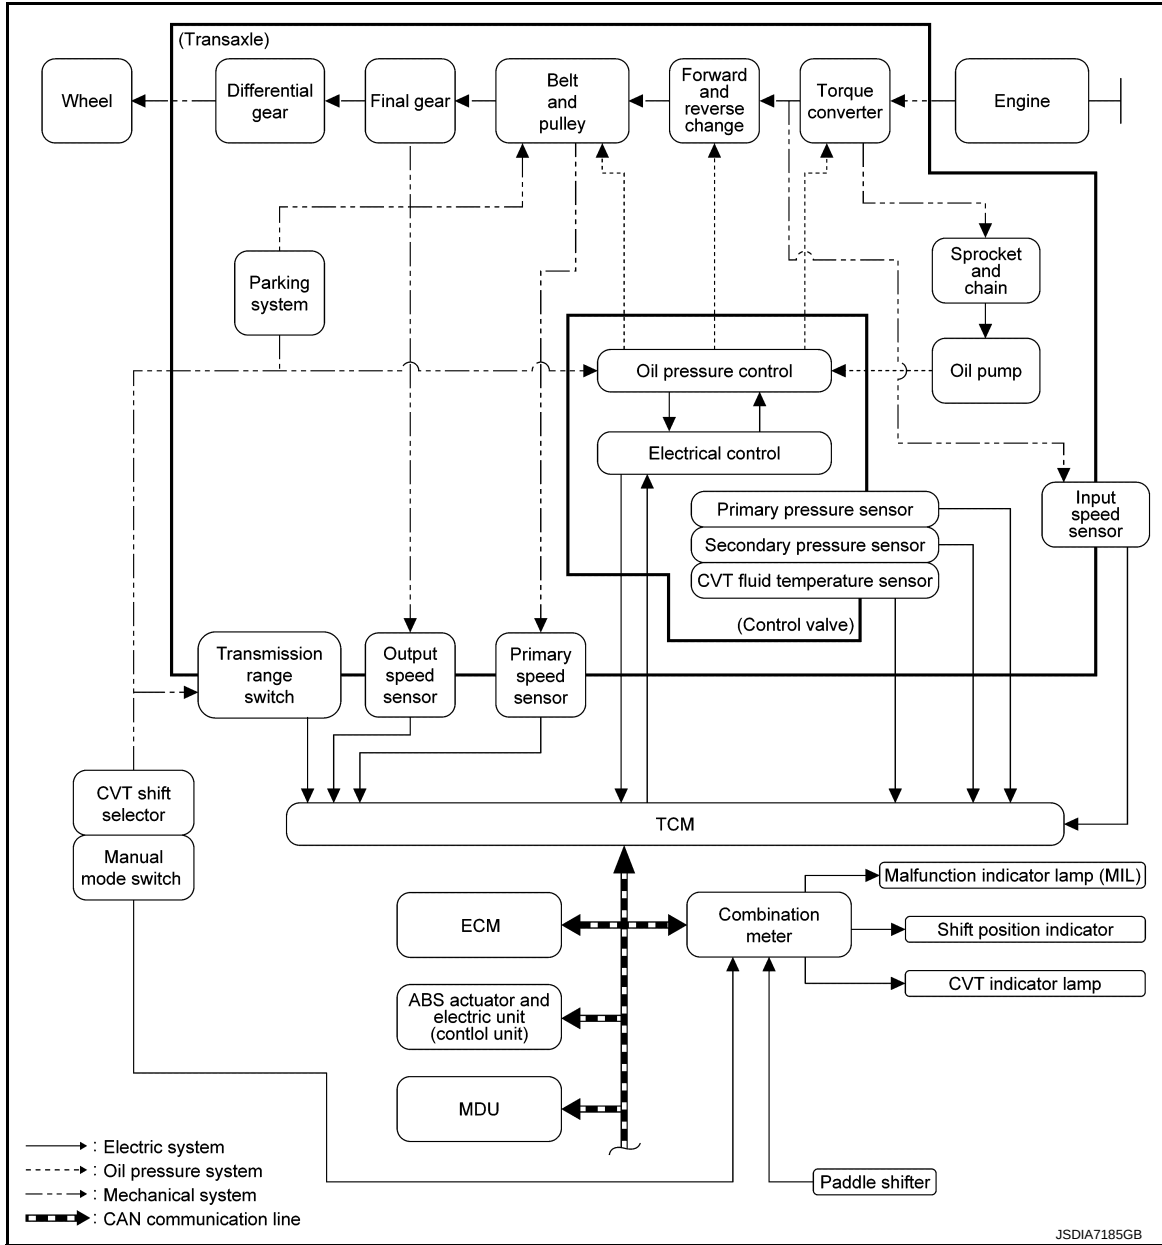

#### MAIN CONTROL CONTENTS OF TCM

| Controls                  | Reference                                                                |
|---------------------------|--------------------------------------------------------------------------|
| Line pressure control     | <a href="#">TM-381, "LINE PRESSURE CONTROL : System Description"</a>     |
| Shift control             | <a href="#">TM-383, "SHIFT CONTROL : System Description"</a>             |
| Select control            | <a href="#">TM-386, "SELECT CONTROL : System Description"</a>            |
| Lock-up control           | <a href="#">TM-387, "LOCK-UP CONTROL : System Description"</a>           |
| Integrated Control System | <a href="#">TM-388, "INTEGRATED CONTROL SYSTEM : System Description"</a> |
| Fail-safe                 | <a href="#">TM-406, "Fail-safe"</a>                                      |

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10D]

|                                     |                            |
|-------------------------------------|----------------------------|
| Self-diagnosis function             | TM-394, "CONSULT Function" |
| Communication function with CONSULT | TM-394, "CONSULT Function" |

## LIST OF CONTROL ITEMS AND INPUT/OUTPUT

| Control Item |                                                                                                                                                        | Line pressure control | Shift control | Select control | Lock-up control | Fail-safe function* |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|---------------|----------------|-----------------|---------------------|
| Input        | Engine torque signal (CAN communication)                                                                                                               | ×                     | ×             | ×              | ×               | ×                   |
|              | Engine speed signal (CAN communication)                                                                                                                | ×                     | ×             | ×              | ×               | ×                   |
|              | Accelerator pedal position signal (CAN communication)                                                                                                  | ×                     | ×             | ×              | ×               |                     |
|              | Closed throttle position signal (CAN communication)                                                                                                    | ×                     | ×             |                | ×               |                     |
|              | Stop lamp switch signal (CAN communication)                                                                                                            | ×                     | ×             | ×              | ×               |                     |
|              | Primary pressure sensor                                                                                                                                |                       |               |                |                 | ×                   |
|              | Secondary pressure sensor                                                                                                                              | ×                     | ×             |                |                 | ×                   |
|              | CVT fluid temperature sensor                                                                                                                           | ×                     | ×             | ×              | ×               | ×                   |
|              | Primary speed sensor                                                                                                                                   | ×                     | ×             | ×              | ×               | ×                   |
|              | Output speed sensor                                                                                                                                    | ×                     | ×             |                | ×               | ×                   |
|              | Input speed sensor                                                                                                                                     | ×                     | ×             | ×              | ×               | ×                   |
|              | Transmission range switch                                                                                                                              | ×                     | ×             | ×              | ×               | ×                   |
|              | Manual mode switch signal (Manual mode signal, non-manual mode signal, manual mode shift up signal, manual mode shift down signal) (CAN communication) | ×                     | ×             |                | ×               |                     |
|              | Paddle shift up signal, Paddle shift down signal (CAN communication)                                                                                   | ×                     | ×             |                | ×               |                     |
|              | Line pressure solenoid valve                                                                                                                           | ×                     | ×             | ×              |                 | ×                   |
| Output       | Primary pressure solenoid valve                                                                                                                        | ×                     | ×             |                |                 | ×                   |
|              | Torque converter clutch solenoid valve                                                                                                                 |                       |               |                | ×               | ×                   |
|              | Secondary pressure solenoid valve                                                                                                                      | ×                     | ×             |                |                 | ×                   |
|              | Select solenoid valve                                                                                                                                  |                       |               | ×              |                 | ×                   |
|              | Shift position indicator (CAN communication)                                                                                                           |                       |               | ×              |                 |                     |
|              |                                                                                                                                                        |                       |               |                |                 |                     |

\*: If these input/output signals show errors, TCM activates the fail-safe function.

## CVT CONTROL SYSTEM : Fail-safe

INFOID:0000000011682731

TCM has a fail-safe mode. The mode functions so that operation can be continued even if the signal circuit of the main electronically controlled input/output parts is damaged.

If the vehicle shows following behaviors including "poor acceleration", a malfunction of the applicable system is detected by TCM and the vehicle may be in a fail-safe mode. At this time, check the DTC code and perform inspection and repair according to the malfunction diagnosis procedures.

### Fail-safe function

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10D]

| DTC   | Vehicle behavior                                                                                                                                                                                                                         | Conditions of vehicle                                                                                                                                         |
|-------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P062F | Not changed from normal driving                                                                                                                                                                                                          | —                                                                                                                                                             |
| P0705 | <ul style="list-style-type: none"> <li>Shift position indicator on combination meter is not displayed</li> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul> | —                                                                                                                                                             |
| P0706 | <ul style="list-style-type: none"> <li>Shift position indicator on combination meter is not displayed</li> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul> | —                                                                                                                                                             |
| P0711 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                                                            | Engine coolant temperature when engine start:<br>Temp. $\geq 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )                                                     |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                           | Engine coolant temperature when engine start:<br>$-35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ ) $\leq$ Temp. $< 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ ) |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                           | Engine coolant temperature when engine start:<br>Temp. $< -35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ )                                                      |
| P0712 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                                                            | Engine coolant temperature when engine start:<br>Temp. $\geq 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )                                                     |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                           | Engine coolant temperature when engine start:<br>$-35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ ) $\leq$ Temp. $< 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ ) |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                           | Engine coolant temperature when engine start:<br>Temp. $< -35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ )                                                      |
| P0713 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                                                            | Engine coolant temperature when engine start:<br>Temp. $\geq 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )                                                     |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                           | Engine coolant temperature when engine start:<br>$-35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ ) $\leq$ Temp. $< 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ ) |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                           | Engine coolant temperature when engine start:<br>Temp. $< -35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ )                                                      |
| P0715 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> <li>Manual mode is not activated</li> </ul>                                                                    | —                                                                                                                                                             |
| P0717 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                                                                                          | —                                                                                                                                                             |
| P0740 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                                                                                          | —                                                                                                                                                             |
| P0743 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                                                                                          | —                                                                                                                                                             |
| P0744 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                                                                                          | —                                                                                                                                                             |

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10D]

| DTC   | Vehicle behavior                                                                                                                                                                                         | Conditions of vehicle                                   |
|-------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
| P0746 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | —                                                       |
| P0776 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> <li>Vehicle speed is not increased</li> </ul> | When a malfunction occurs on the low oil pressure side  |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | When a malfunction occurs on the high oil pressure side |
| P0778 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | —                                                       |
| P0779 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         |                                                         |
| P0826 | Manual mode is not activated                                                                                                                                                                             |                                                         |
| P0841 | Not changed from normal driving                                                                                                                                                                          |                                                         |
| P0847 | Not changed from normal driving                                                                                                                                                                          | —                                                       |
| P0848 | Not changed from normal driving                                                                                                                                                                          | —                                                       |
| P084C | Not changed from normal driving                                                                                                                                                                          |                                                         |
| P084D | Not changed from normal driving                                                                                                                                                                          |                                                         |
| P0863 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | —                                                       |
| P0890 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> <li>Vehicle speed is not increased</li> </ul> |                                                         |
| P0962 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | —                                                       |
| P0963 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | —                                                       |
| P0965 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | When a malfunction occurs on the low oil pressure side  |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Lock-up is not performed</li> </ul>                                                                                              | When a malfunction occurs on the high oil pressure side |
| P0966 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | —                                                       |

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10D]

| DTC   | Vehicle behavior                                                                                                                                                       | Conditions of vehicle                                   |
|-------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
| P0967 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>       | —                                                       |
| P2765 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> <li>Manual mode is not activated</li> </ul>  | —                                                       |
| P2813 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Vehicle speed is not increased</li> </ul> | When a malfunction occurs on the low oil pressure side  |
|       | Selector shock is large                                                                                                                                                | When a malfunction occurs on the high oil pressure side |
| P2814 | Selector shock is large                                                                                                                                                | —                                                       |
| P2815 | Selector shock is large                                                                                                                                                | —                                                       |
| U0073 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>       | —                                                       |
| U0100 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>       | —                                                       |
| U0102 | Not changed from normal driving                                                                                                                                        | —                                                       |
| U0140 | Not changed from normal driving                                                                                                                                        | —                                                       |
| U0141 | Not changed from normal driving                                                                                                                                        | —                                                       |
| U0155 | Not changed from normal driving                                                                                                                                        | —                                                       |
| U0164 | Not changed from normal driving                                                                                                                                        | —                                                       |
| U0300 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>       | —                                                       |
| U1000 | Not changed from normal driving                                                                                                                                        | —                                                       |
| U1117 | Not changed from normal driving                                                                                                                                        | —                                                       |

## CVT CONTROL SYSTEM : Protection Control

INFOID:0000000011682732

The TCM becomes the protection control status temporarily to protect the safety when the safety of TCM and transmission is lost. It automatically returns to the normal status if the safety is secured.

The TCM has the following protection control.

### CONTROL FOR WHEEL SPIN

|                             |                                                                                                                                                                                                      |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Control                     | When a wheel spin is detected, the engine output and gear ratio are limited and the line pressure is increased. Limits engine output when a wheel spin occurs in any of right and left drive wheels. |
| Vehicle behavior in control | If the accelerator is kept depressing during wheel spin, the engine revolution and vehicle speed are limited to a certain degree.                                                                    |
| Normal return condition     | Wheel spin convergence returns the control to the normal control.                                                                                                                                    |

### TORQUE IS REDUCED WHEN DRIVING WITH THE REVERSE GEAR

|         |                                                                                       |
|---------|---------------------------------------------------------------------------------------|
| Control | Engine output is controlled according to a vehicle speed while reversing the vehicle. |
|---------|---------------------------------------------------------------------------------------|



# SYSTEM

## < SYSTEM DESCRIPTION >

[CVT: RE0F10D]

|                             |                                                                                                |
|-----------------------------|------------------------------------------------------------------------------------------------|
| Vehicle behavior in control | Power performance may be lowered while reversing the vehicle.                                  |
| Normal return condition     | Torque returns to normal by positioning the selector lever in a range other than "R" position. |

## CONTROL WHEN FLUID TEMPERATURE IS HIGH

|                             |                                                                                                                                                                                |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Control                     | When the CVT fluid temperature is high, the gear shift permission maximum revolution and the maximum torque are reduced than usual to prevent increase of the oil temperature. |
| Vehicle behavior in control | Power performance may be lowered, compared to normal control.                                                                                                                  |
| Normal return condition     | The control returns to the normal control when CVT fluid temperature is lowered.                                                                                               |

## REVERSE PROHIBIT CONTROL


|                             |                                                                                                                                                                               |
|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Control                     | The reverse brake is controlled to avoid becoming engaged when the selector lever is set in "R" position while driving in forward direction at more than the specified speed. |
| Vehicle behavior in control | If the selector lever is put at "R" position when driving with the forward gear, the gear becomes neutral, not reverse.                                                       |
| Normal return condition     | The control returns to normal control when the vehicle is driven at low speeds. (The reverse brake becomes engaged.)                                                          |

## LINE PRESSURE CONTROL

### LINE PRESSURE CONTROL : System Description

INFOID:0000000011682733

### SYSTEM DIAGRAM

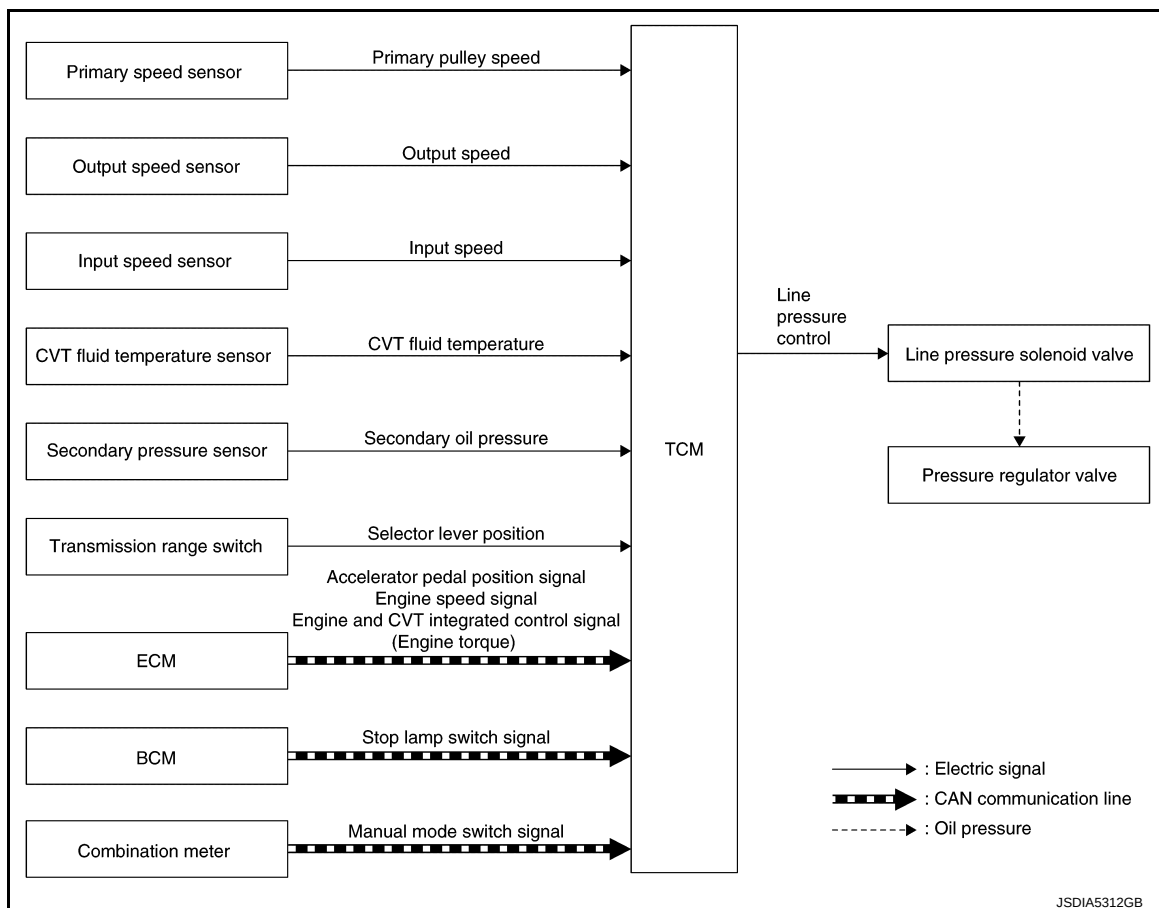

### DESCRIPTION

## SYSTEM

### < SYSTEM DESCRIPTION >

[CVT: RE0F10D]

Highly accurate line pressure control and secondary pressure control reduces friction for improvement of fuel economy.

#### Normal Oil Pressure Control

Appropriate line pressure and secondary pressure suitable for driving condition are determined based on the accelerator pedal position, engine speed, primary pulley (input) speed, secondary pulley (output) speed, vehicle speed, input torque, stop lamp switch signal, transmission range switch signal, lock-up signal, power voltage, target shift ratio, oil temperature, oil pressure, and manual mode switch signal.

#### Secondary Pressure Feedback Control


In normal oil pressure control and oil pressure control in shifting, highly accurate secondary pressure is determined by detecting the secondary pressure using an oil pressure sensor and by feedback control.

### SHIFT CONTROL

## SHIFT CONTROL : System Description

INFOID:0000000011682734

### SYSTEM DIAGRAM

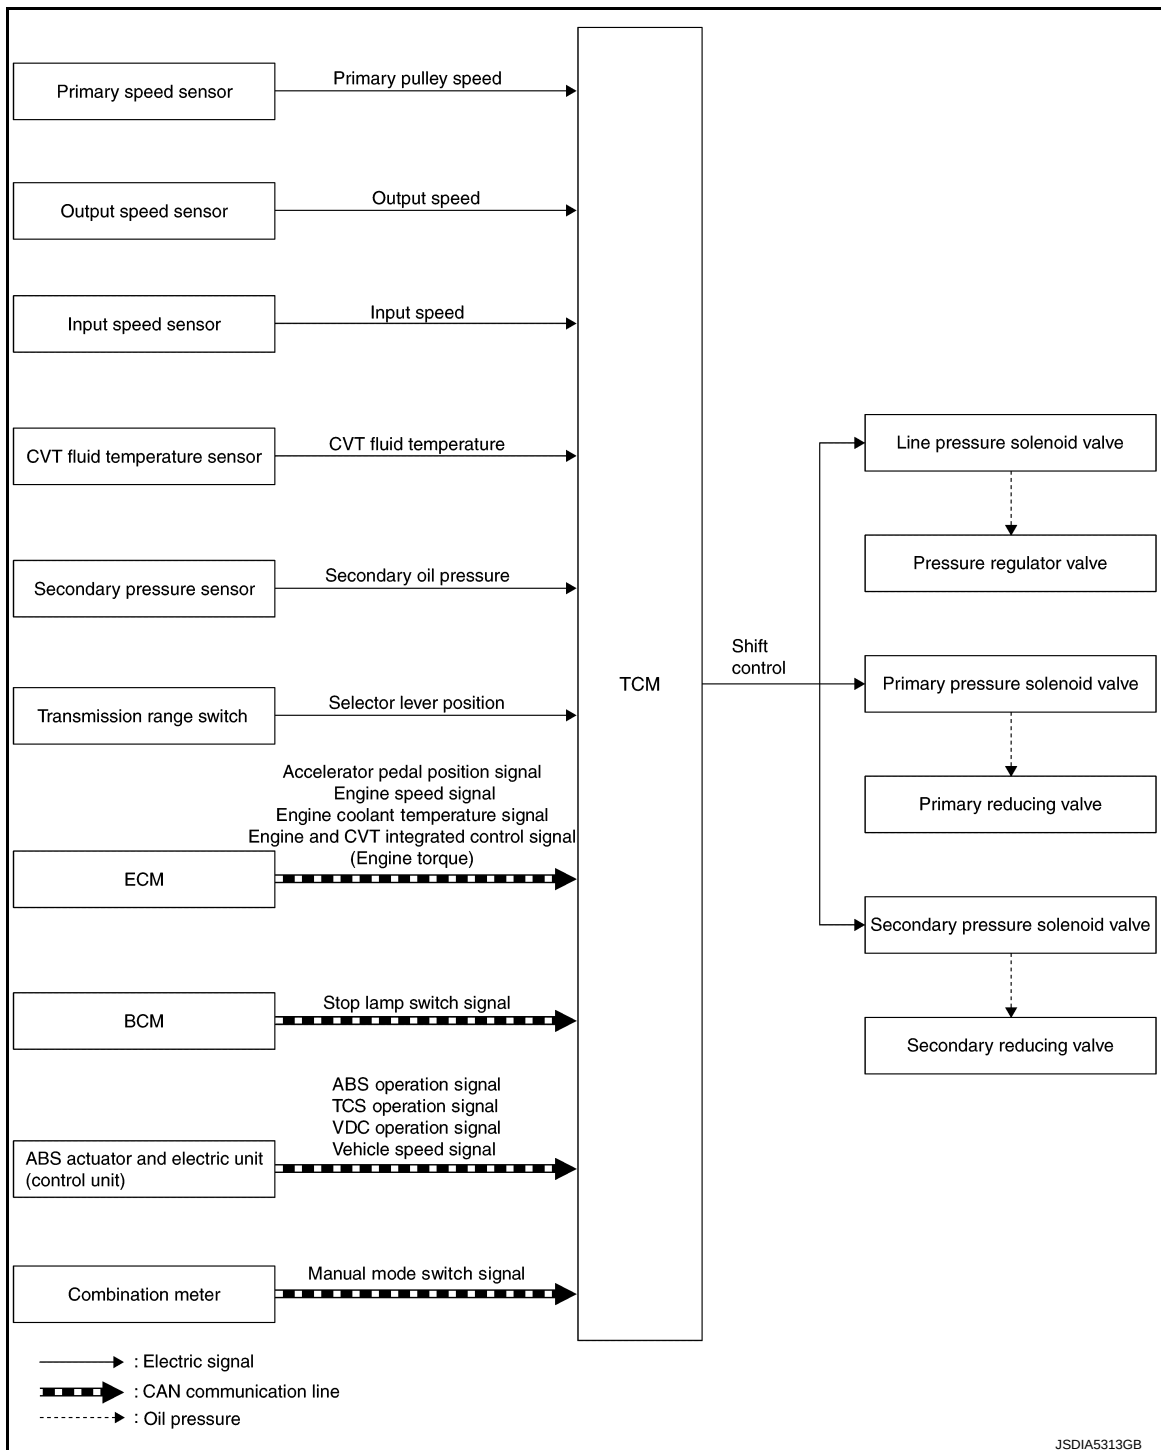


### DESCRIPTION

To select the gear ratio that can give the driving force to meet driver's intent or vehicle situation, the vehicle driving condition such as vehicle speed or accelerator pedal position is detected and the most appropriate gear ratio is selected and the shifting method before reaching the speed is determined. The information is output to the primary pressure solenoid valve and secondary pressure solenoid valve to control the line pressure input/output to the pulley, to determine the pulley (movable pulley) position and to control the gear position.

#### Shift Position Function


- D Position (Normal)

Gear shifting is performed in all shifting ranges from the lowest to the highest gear ratio.

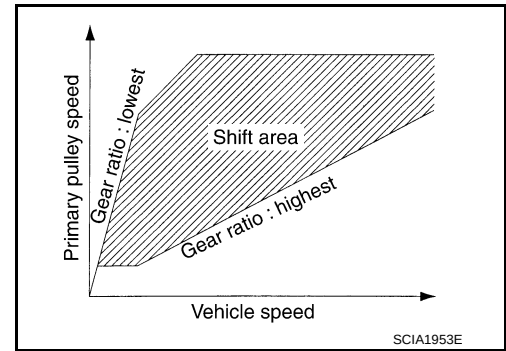

- M Position (Manual Mode)

When the selector lever is put in the manual shift gate side, the fixed changing gear line is set. By moving the selector lever to + side or - side, the manual mode switch is changed over, and shift change like M/T becomes possible following the changing gear set line step by step.

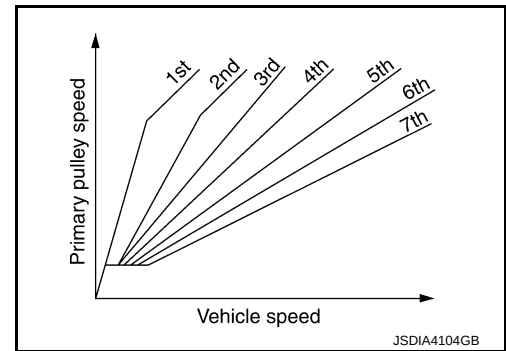

- Manual Mode Information

The TCM transmits the manual mode shift refusal signal to the combination meter if the TCM refuses the transmission from the driving status of vehicle when the selector lever shifts to UP side (+ side) or DOWN side (-side). The combination meter blinks shift indicator on the combination meter and sounds the buzzer to indicate the driver that the shifting is not performed when receiving this signal. However, the TCM does not transmit the manual mode shift refusal signal in the conditions as per the following.

- When the selector lever shifts to DOWN side (- side) while driving in M1.
- When the selector lever shifts to UP (+ side) side while driving in M7.

### Blipping Control

Using engine torque, the blipping control enables a faster and more responsive gear shifting by compensating inertia torque generated from the rotational change during gear shifting in real time.

### Operation


- The blipping control is activated when shifting up/down in manual mode or when shifting up/down in "Ds" position.

#### NOTE:

The blipping control is not activated when the vehicle is in the following conditions:

- When CAN communication is abnormal.
- During the retard inhibit signal transmission from ECM within the engine-CVT integrated control.
- Engine coolant temperature is less than 20°C (68°F).
- CVT fluid temperature is more than 120°C (248°F).
- Vehicle speed is less than 20 km/h (13 MPH).
- When ABS, TCS or VDC is active.
- During wheel spin.
- ECM selects blipping control or normal shift control according to the gear position, the selector lever position, etc.
- The blipping control is activated when ECM judges it controllable after receiving a control permit signal from TCM.

- ECM controls engine torque, based on generated inertia torque.

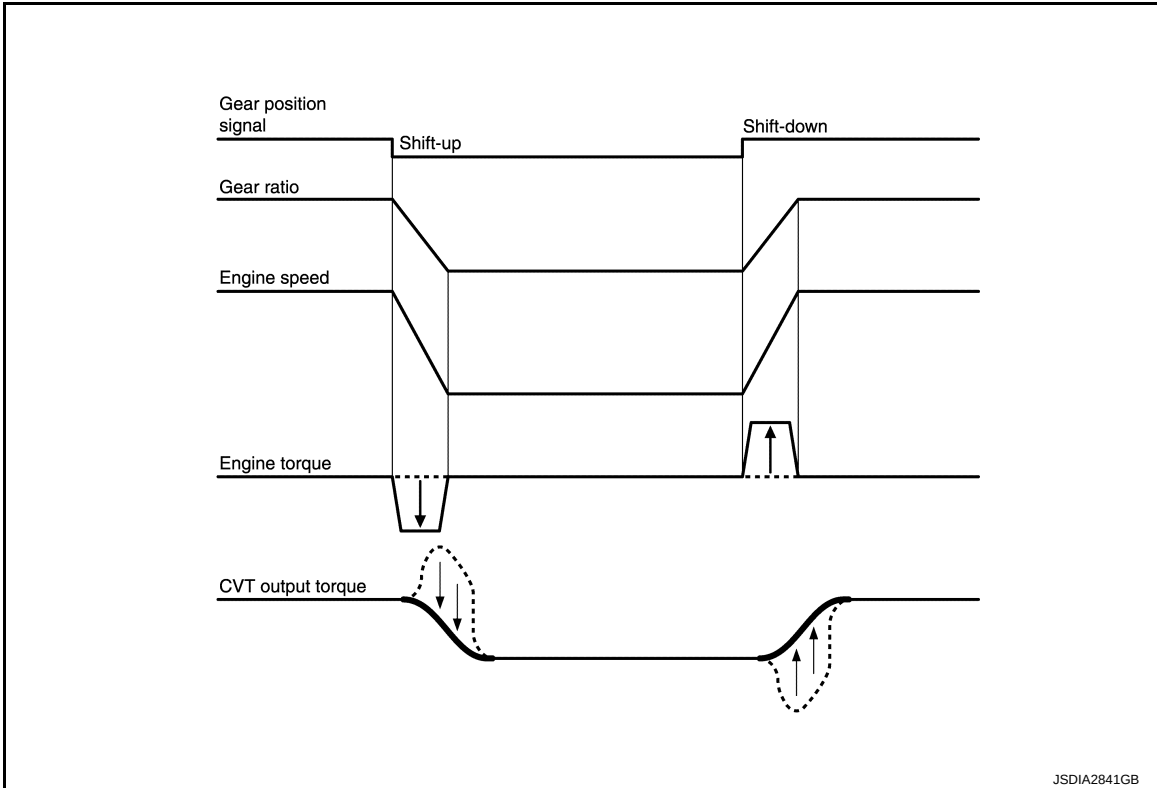


### Hill Climbing And Descending Control

If a downhill is detected with the accelerator pedal is released, the system performs downshift to increase the engine brake force so that vehicle may not be accelerated more than necessary. If a climbing hill is detected, the system improves the acceleration performance in re-acceleration by limiting the gear shift range on the high side.

#### NOTE:

For engine brake control on a downhill, the control can be stopped with CONSULT.

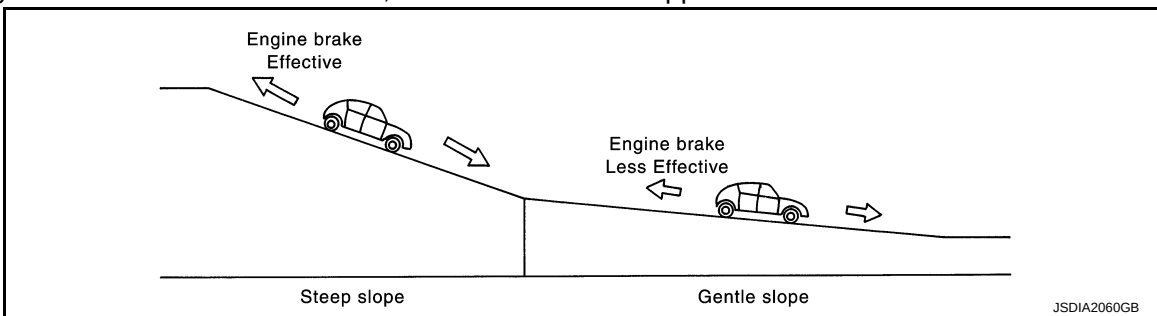


### Control In Acceleration

From change of the vehicle speed or accelerator pedal position, the acceleration request level of the driver or driving scene is evaluated. In start or acceleration during driving, the gear shift characteristics with linearity of revolution increase and vehicle speed increase are gained to improve the acceleration feel.

### Control In Acceleration

From change of the vehicle speed or accelerator pedal position, the acceleration request level of the driver or driving scene is evaluated. In start or acceleration during driving, the gear shift characteristics with linearity of revolution increase and vehicle speed increase are gained to improve the acceleration feel.

- When the accelerator pedal is depressed 4/8 or more in D position, CVT performs step shifting to allow the vehicle speed and engine speed to increase simultaneously. This improves the feel of acceleration and enables the fuel economy by preventing unnecessary rise in engine speed, compared to the conventional shifting.

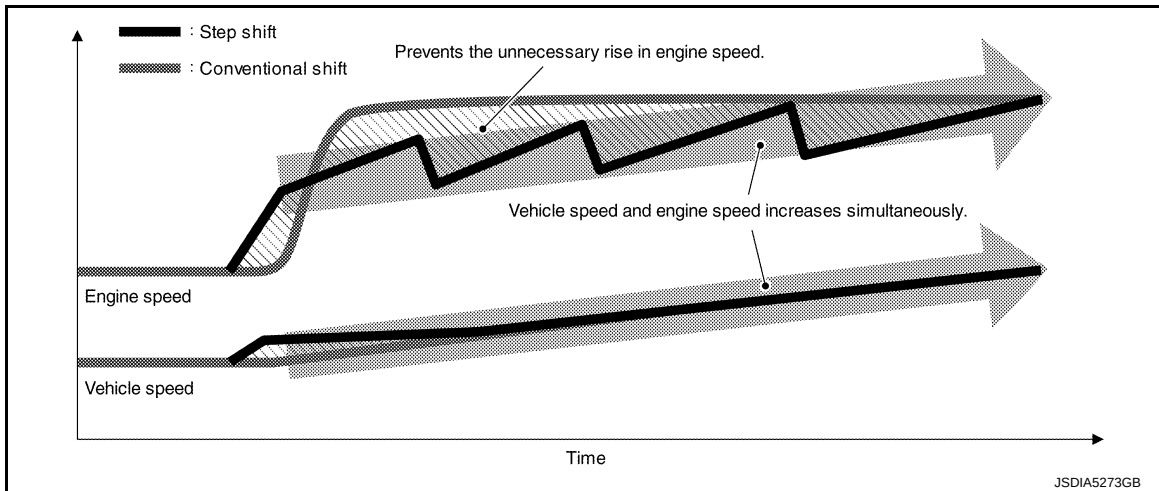


## SELECT CONTROL

### SELECT CONTROL : System Description

INFOID:0000000011682735

## SYSTEM DIAGRAM

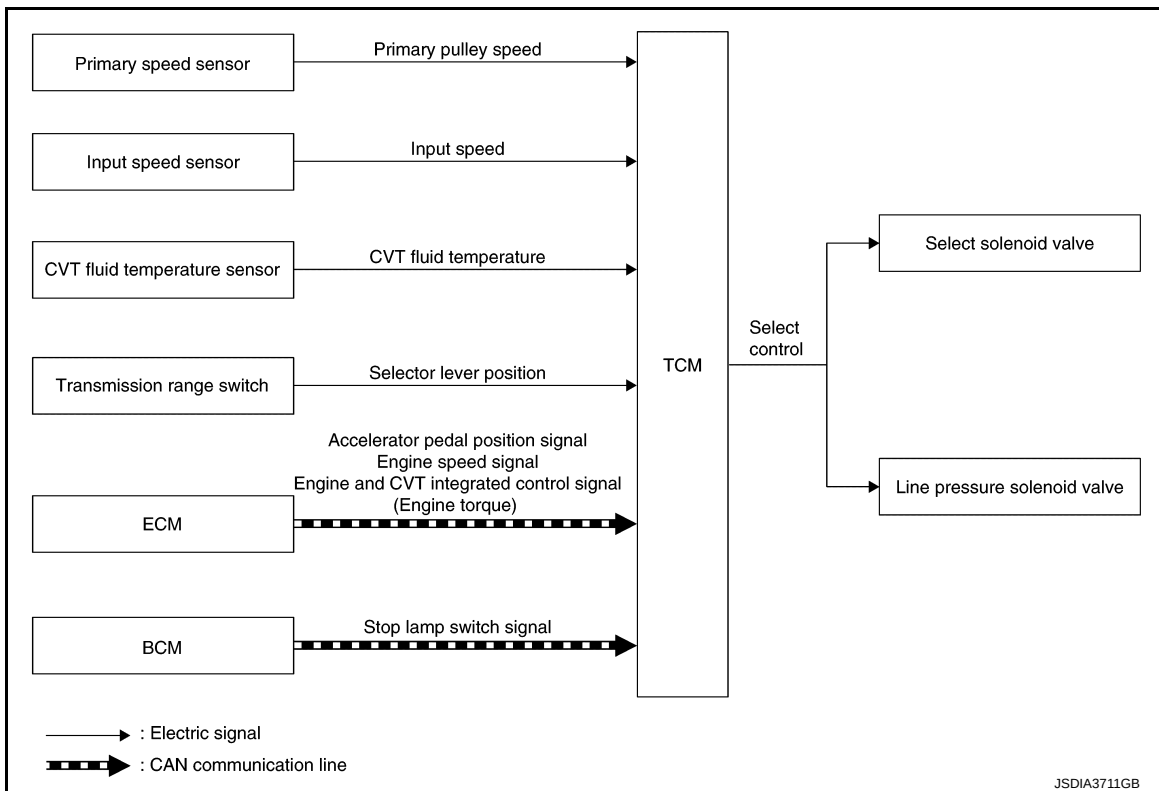

## DESCRIPTION


Based on accelerator pedal angle, engine speed, primary pulley speed, and the input speed, the optimum operating pressure is set to reduce impact of a selector lever operation while shifting from "N" ("P") to "D" ("R") position.

## LOCK-UP CONTROL

## LOCK-UP CONTROL : System Description

INFOID:0000000011682736

### SYSTEM DIAGRAM

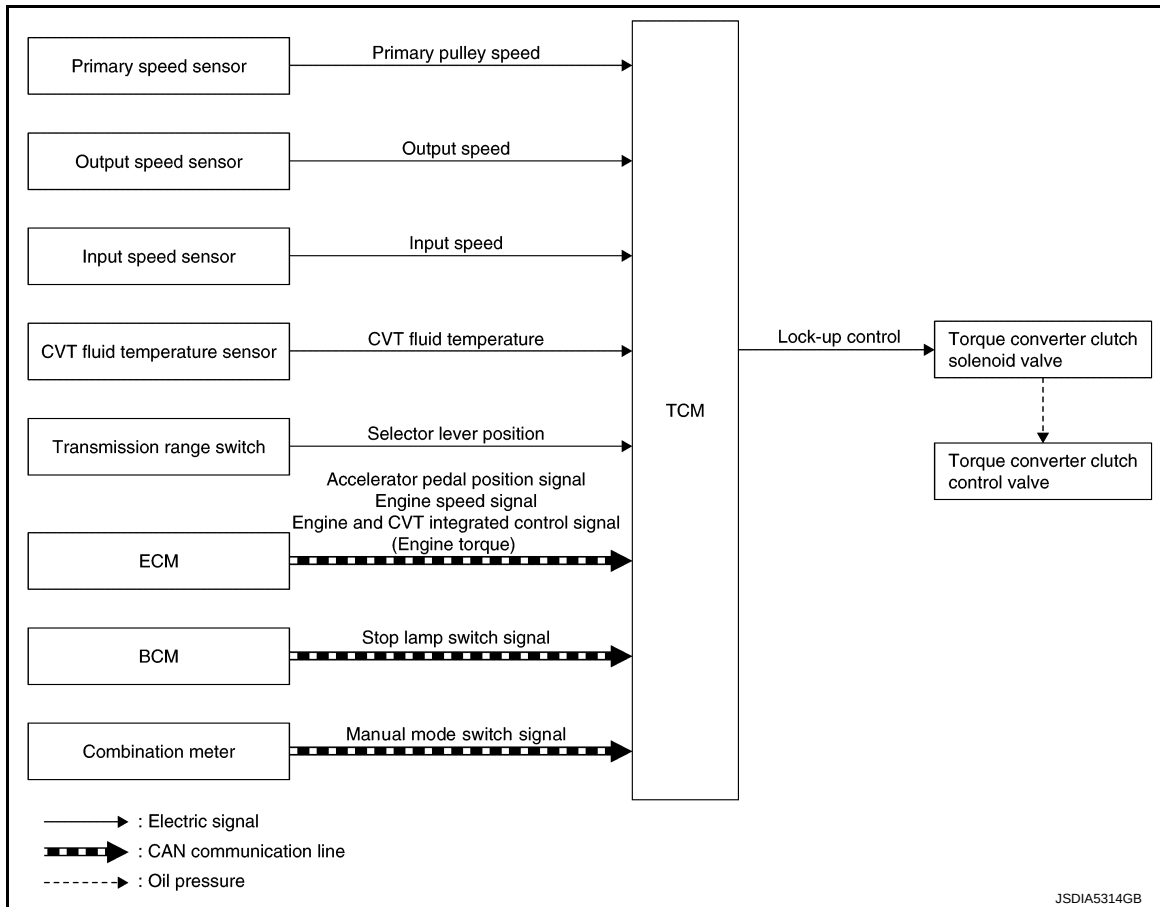

### DESCRIPTION

- Controls for improvement of the transmission efficiency by engaging the torque converter clutch in the torque converter and eliminating slip of the converter. Achieves comfortable driving with slip control of the torque converter clutch.
- The oil pressure feed circuit for the torque converter clutch piston chamber is connected to the torque converter clutch control valve. The torque converter clutch control valve is switched by the torque converter clutch solenoid valve with the signal from TCM. This controls the oil pressure circuit, which is supplied to the torque converter clutch piston chamber, to the release side or engagement side.
- If the CVT fluid temperature is low or the vehicle is in fail-safe mode due to malfunction, lock-up control is prohibited.

#### Lock-up engagement

In lock-up engagement, the torque converter clutch solenoid valve makes the torque converter clutch control valve locked up to generate the lock-up apply pressure. This pushes the torque converter clutch piston for engagement.


#### Lock-up release condition

In lock-up release, the torque converter clutch solenoid valve makes the torque converter clutch control valve non-locked up to drain the lock-up apply pressure. This does not engage the torque converter clutch piston.

### INTEGRATED CONTROL SYSTEM

## INTEGRATED CONTROL SYSTEM : System Diagram

INFOID:000000011682739

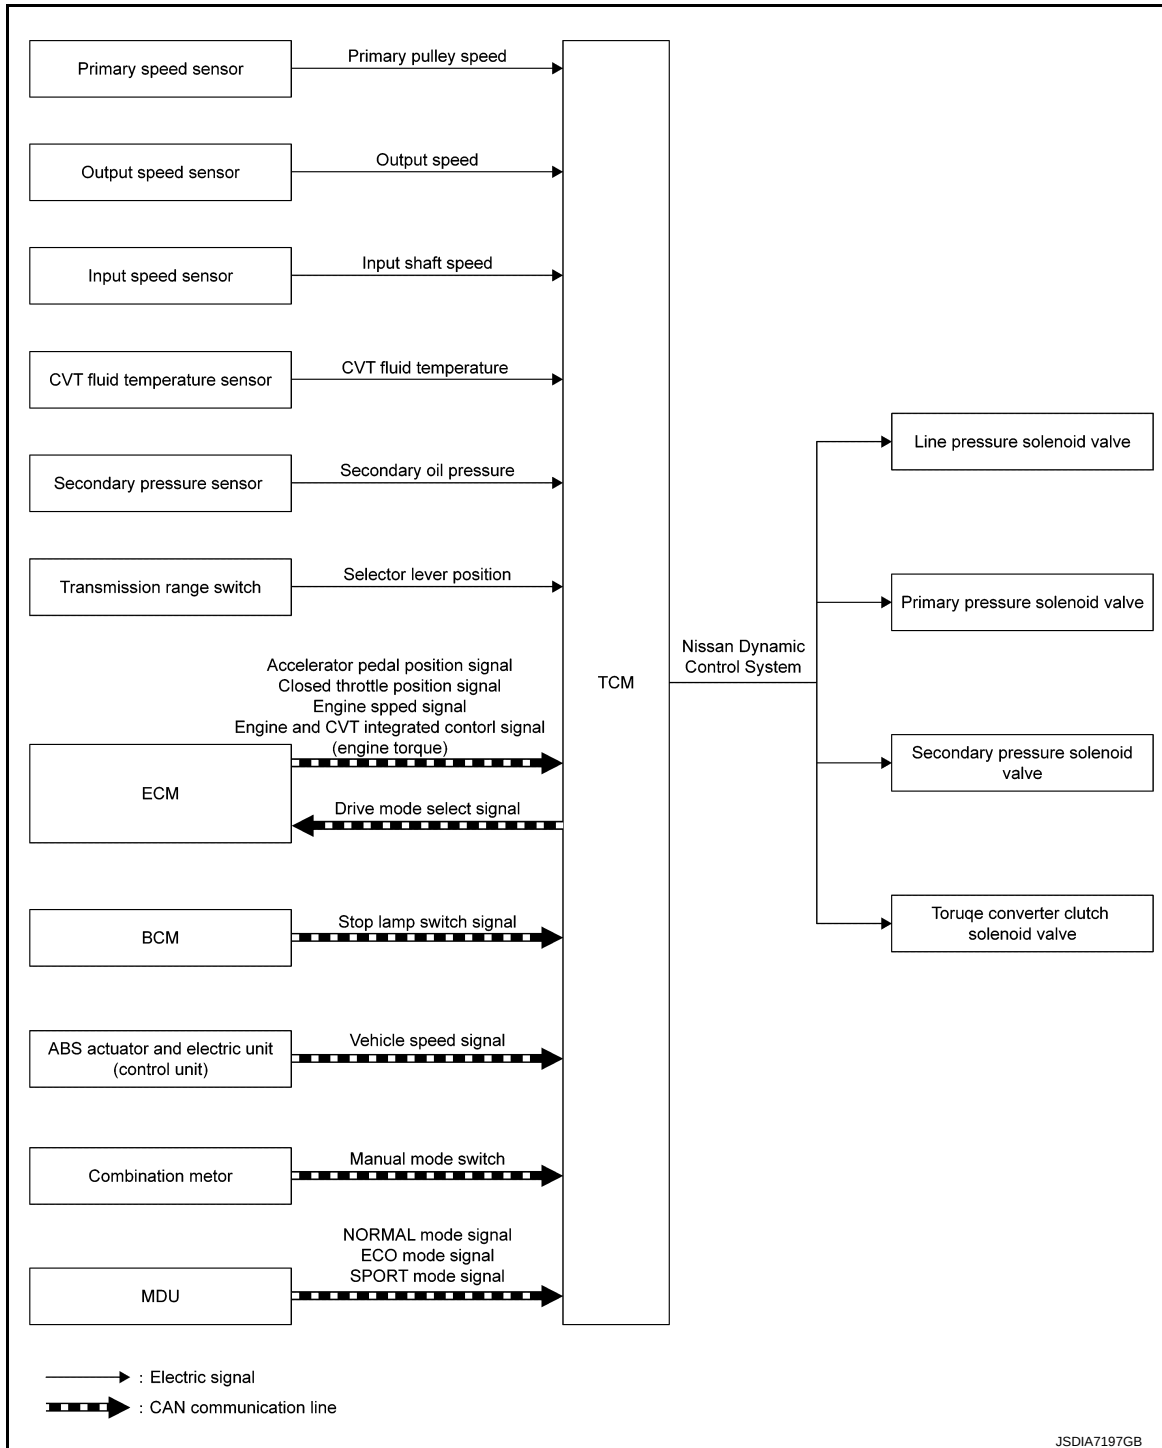

## INTEGRATED CONTROL SYSTEM : System Description

INFOID:000000011682740

- TCM receives the NORMAL mode signal, ECO mode signal or SPORT mode signal from the multi display unit through CAN communication.
- TCM sends the recognized control mode to ECM through CAN communication (drive mode select signal).
- With operation on the multi display unit, the mode is changed on the display, but the mode is actually not changed due to CAN communication malfunction.
- When the selector lever is in any position other than D position, the gear shift line is not changed according to changes in the control mode.

## CONTROL DESCRIPTION



# SYSTEM

< SYSTEM DESCRIPTION >


[CVT: RE0F10D]

| Control mode | Control                                                                                                                                                                                                                                                                                                                                                                |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| NORMAL mode  | Driving mode that automatically selects the shift schedule considering the balance of fuel economy and driving performance based on the driving condition and driving trend.                                                                                                                                                                                           |
| SPORT mode   | Keeps high engine speed and provides direct feel and acceleration performance suitable for driving on winding road.<br>Sport mode performs the following control: <ul style="list-style-type: none"> <li>• High gear ratio limit</li> <li>• Step shift</li> <li>• Braking down shift</li> <li>• Acceleration off ratio hold</li> <li>• Cornering ratio hold</li> </ul> |
| ECO mode     | Driving mode that selects the shift schedule with priority on fuel economy which gives low engine revolution.                                                                                                                                                                                                                                                          |

## Sport Mode Function


### High Gear Ratio Limit

- Engine speed is kept higher than at D position driving, which helps to operate a “sporty” driving.

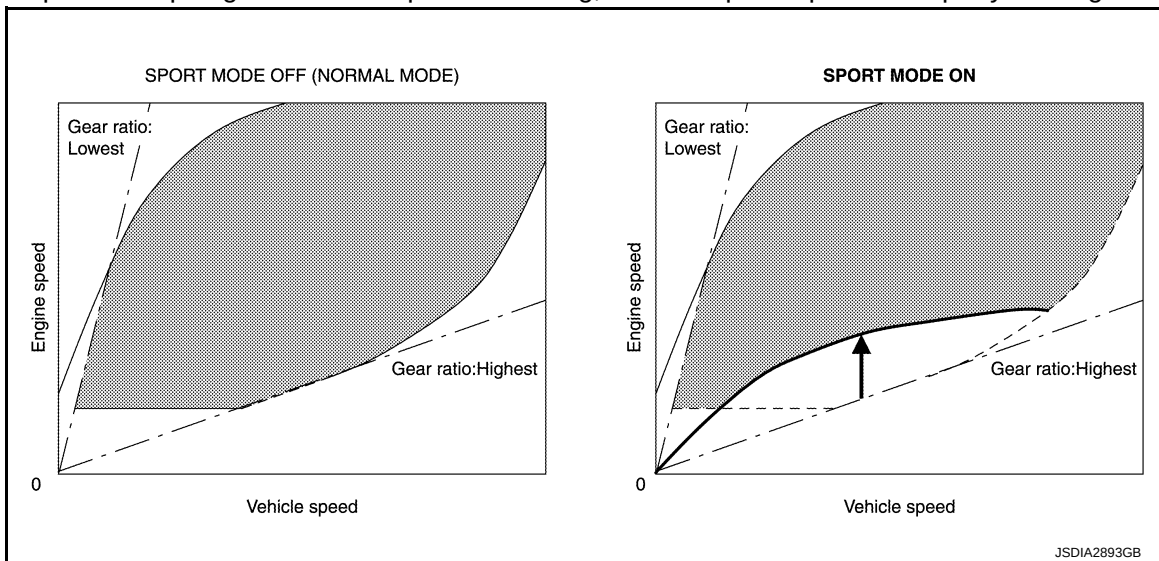

### Step Shift

- Pressing down the accelerator pedal allows to drive the vehicle with a feeling of A/T-like gear shifting.

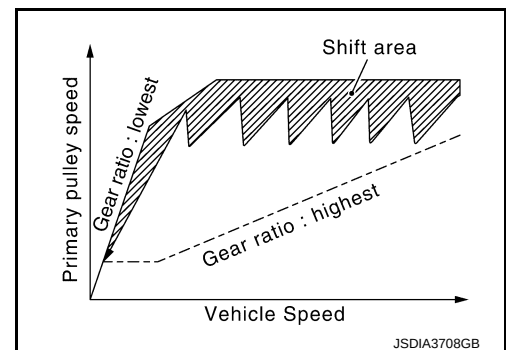


### Braking Down Shift

# SYSTEM

## < SYSTEM DESCRIPTION >


[CVT: RE0F10D]

- At a moderate braking operation before corner etc., the engine speed increases according to the deceleration and the transaxle shifts down automatically, in order to optimize the response at reacceleration while providing an adequate engine braking.

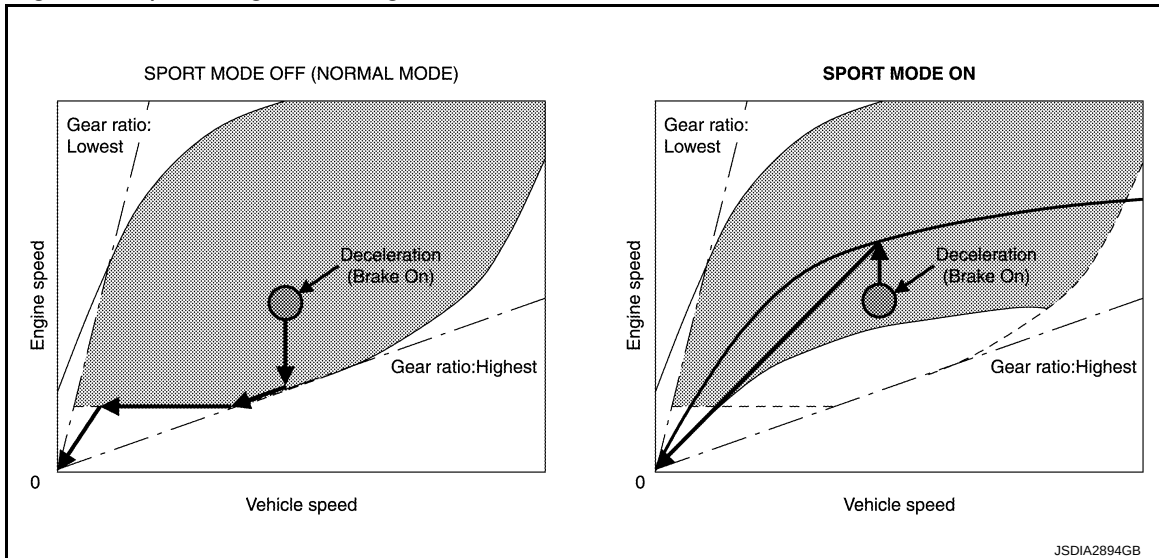

### Acceleration Off Ratio Hold

- When the vehicle is decelerated by quickly releasing the foot from accelerator pedal, transmission does not shift up automatically to keep a constant gear ratio, holding the high engine speed. When the vehicle is decelerated (by accelerator pedal OFF) in upper area of double line in below chart, the engine speed shows a characteristic like "A". On the other hand, when the vehicle is decelerated (by accelerator pedal OFF) in lower area of double line in below chart, the engine speed shows a characteristic like "B".

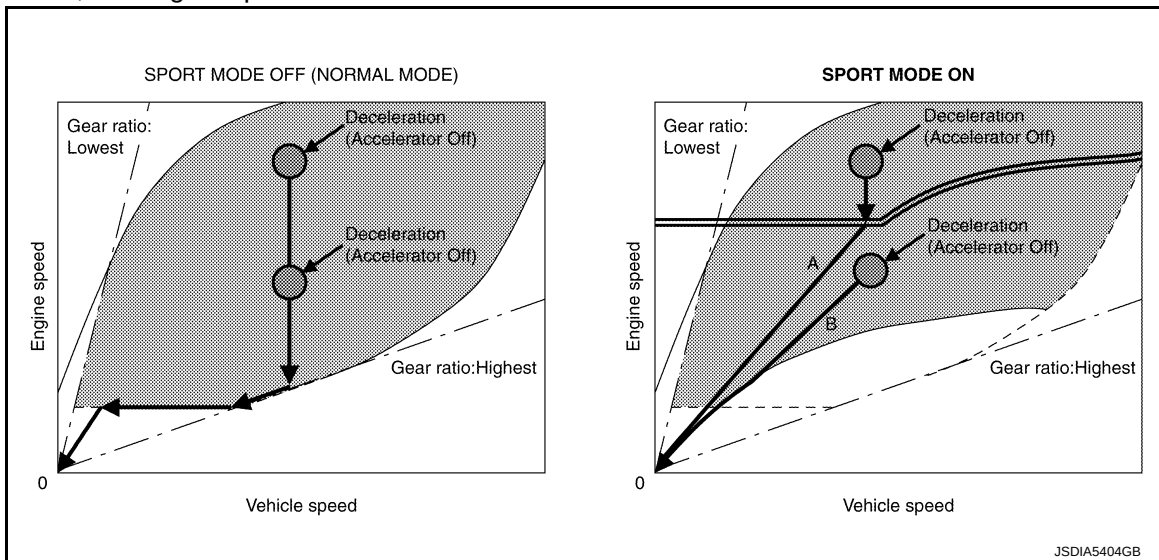

### Cornering Ratio Hold

- Transaxle holds gear ratio in order to keep a smooth vehicle speed during the curve and to give an adequate driving force at the curve end.

### FAIL-SAFE

If CAN communication malfunction occurs between TCM and the multi display unit, the mode when the malfunction occurs is maintained for approximately 30 seconds and the mode is changed to NORMAL mode when the accelerator pedal is released.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

Description

INFOID:0000000011682741

This system is an on board diagnostic system that records exhaust emission-related diagnostic information and detects a sensors/actuator-related malfunction. A malfunction is indicated by the malfunction indicator lamp (MIL) and stored in ECU memory as a DTC. The diagnostic information can be obtained with the diagnostic tool (GST: Generic Scan Tool).

GST (Generic Scan Tool)

INFOID:0000000011682742

When GST is connected with a data link connector equipped on the vehicle side, it will communicate with the control module equipped in the vehicle and then enable various kinds of diagnostic tests. Refer to [GI-52](#), "Description".

NOTE:

Service \$0A is not applied for regions where it is not mandated.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## DIAGNOSIS SYSTEM (TCM)

### DIAGNOSIS DESCRIPTION

#### DIAGNOSIS DESCRIPTION : 1 Trip Detection Diagnosis and 2 Trip Detection Diagnosis

INFOID:0000000011682743

#### NOTE:

"Start the engine and turn OFF the ignition switch after warm-up." This is defined as 1 trip.

#### 1 TRIP DETECTION DIAGNOSIS

When initial malfunction is detected, TCM memorizes DTC. In these diagnoses, some illuminate MIL and some do not. Refer to [TM-411, "DTC Index"](#).

#### 2 TRIP DETECTION DIAGNOSIS

When initial malfunction is detected, TCM memorizes DTC of the 1st trip. MIL does not light at this stage. <1 trip>

If the same malfunction is detected again in next driving, TCM memorizes DTC. When DTC is memorized, MIL lights. <2 trip>

"Trip" of the "2 trip detection diagnosis" indicates the driving mode that executes self-diagnosis during driving.

×: Check possible —: Check not possible

| Item                                                                          | DTC at the 1st trip     |                         | DTC                     |                         | MIL                          |                              |
|-------------------------------------------------------------------------------|-------------------------|-------------------------|-------------------------|-------------------------|------------------------------|------------------------------|
|                                                                               | Display at the 1st trip | Display at the 2nd trip | Display at the 1st trip | Display at the 2nd trip | Illumination at the 1st trip | Illumination at the 2nd trip |
| 1 trip detection diagnosis<br>(Refer to <a href="#">TM-411, "DTC Index"</a> ) | —                       | —                       | ×                       | —                       | ×                            | —                            |
| 2 trip detection diagnosis<br>(Refer to <a href="#">TM-411, "DTC Index"</a> ) | ×                       | —                       | —                       | ×                       | —                            | ×                            |

#### DIAGNOSIS DESCRIPTION : DTC and DTC of 1st Trip

INFOID:0000000011682744

#### 2 TRIP DETECTION DIAGNOSIS THAT ILLUMINATES MIL

- The DTC number of the 1st trip is the same as the DTC number.
- When a malfunction is detected at the 1st trip, TCM memorizes DTC of the 1st trip. MIL does not light at this stage. If the same malfunction is not detected at the 2nd trip (conforming to necessary driving conditions), DTC at the 1st trip is erased from TCM. If the same malfunction is detected at the 2nd trip, TCM memorizes DTC and MIL lights at the same time.
- The DTC of the 1st trip is specified in Service \$01 of SAE J1979/ISO 15031-5. Since detection of DTC at the 1st trip does not illuminate MIL, warning for a problem is not given to a driver.
- For procedure to delete DTC and 1st trip DTC from TCM, refer to [TM-394, "CONSULT Function"](#).
- If DTC of the 1st trip is detected, it is necessary to check the cause according to the "Diagnosis flow". Refer to [TM-422, "Work Flow"](#).

#### DIAGNOSIS DESCRIPTION : Malfunction Indicator Lamp (MIL)

INFOID:0000000011682745

- TCM not only detects DTC, but also sends the MIL signal to ECM through CAN communication. ECM sends the MIL signal to the combination meter through CAN communication according to the signal, and illuminates MIL.
- For malfunction indicator lamp (MIL) description, refer to [EC-655, "DIAGNOSIS DESCRIPTION : Malfunction Indicator Lamp \(MIL\)"](#).

#### DIAGNOSIS DESCRIPTION : Counter System

INFOID:0000000011682746

#### RELATION BETWEEN DTC AT 1ST TRIP/DTC/MIL AND DRIVING CONDITIONS (FOR 2 TRIP DETECTION DIAGNOSIS THAT ILLUMINATES MIL)

- When initial malfunction is detected, TCM memorizes DTC of the 1st trip. MIL does not light at this stage.
- If the same malfunction is detected at the 2nd trip, TCM memorizes DTC and MIL lights at the same time.
- Then, MIL goes after driving the vehicle for 3 trips under "Driving condition B" without malfunction.
- DTC is displayed until 40 trips of "Driving condition A" are satisfied without detecting the same malfunction. DTC is erased when 40 trips are satisfied.

## DIAGNOSIS SYSTEM (TCM)

### < SYSTEM DESCRIPTION >

[CVT: RE0F10D]

- When the self-diagnosis result is acceptable at the 2nd trip (conforming to driving condition B), DTC of the 1st trip is erased.

### COUNTER SYSTEM LIST

| Item                    | Driving condition | Trip |
|-------------------------|-------------------|------|
| MIL (OFF)               | B                 | 3    |
| DTC (clear)             | A                 | 40   |
| DTC at 1st trip (clear) | B                 | 1    |

### DRIVING CONDITION

#### Driving condition A

Driving condition A is the driving condition that provides warm-up.

In specific, count-up is performed when all of the following conditions are satisfied.

- Engine speed is 400 rpm or more.
- After start of the engine, the water temperature increased by 20°C (36°F) or more.
- Water temperature was 70°C (158°F) or more.
- The ignition switch was changed from ON to OFF.

#### NOTE:

- If the same malfunction is detected regardless of the driving condition, reset the A counter.
- When the above is satisfied without detecting the same malfunction, count up the A counter.
- When MIL goes off due to the malfunction and the A counter reaches 40, the DTC is erased.

#### Driving condition B

Driving condition B is the driving condition that performs all diagnoses once.

In specific, count-up is performed when all of the following conditions are satisfied.

- Engine speed is 400 rpm or more.
- Water temperature was 70°C (158°F) or more.
- In closed loop control, vehicle speed of 70 – 120 km/h (43 – 75 MPH) continued for 60 seconds or more.
- In closed loop control, vehicle speed of 30 – 60 km/h (19 – 37 MPH) continued for 10 seconds or more.
- In closed loop control, vehicle speed of 4 km/h (2 MPH) or less and idle determination ON continued for 12 seconds or more.
- After start of the engine, 22 minutes or more have passed.
- The condition that the vehicle speed is 10 km/h (6 MPH) or more continued for 10 seconds or more in total.
- The ignition switch was changed from ON to OFF.

#### NOTE:


- If the same malfunction is detected regardless of the driving condition, reset the B counter.
- When the above is satisfied without detecting the same malfunction, count up the B counter.
- When the B counter reaches 3 without malfunction, MIL goes off.
- When the B counter is counted once without detecting the same malfunction after TCM memorizes DTC of the 1st trip, DTC of the 1st trip is erased.

# DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10D]

## TIME CHART

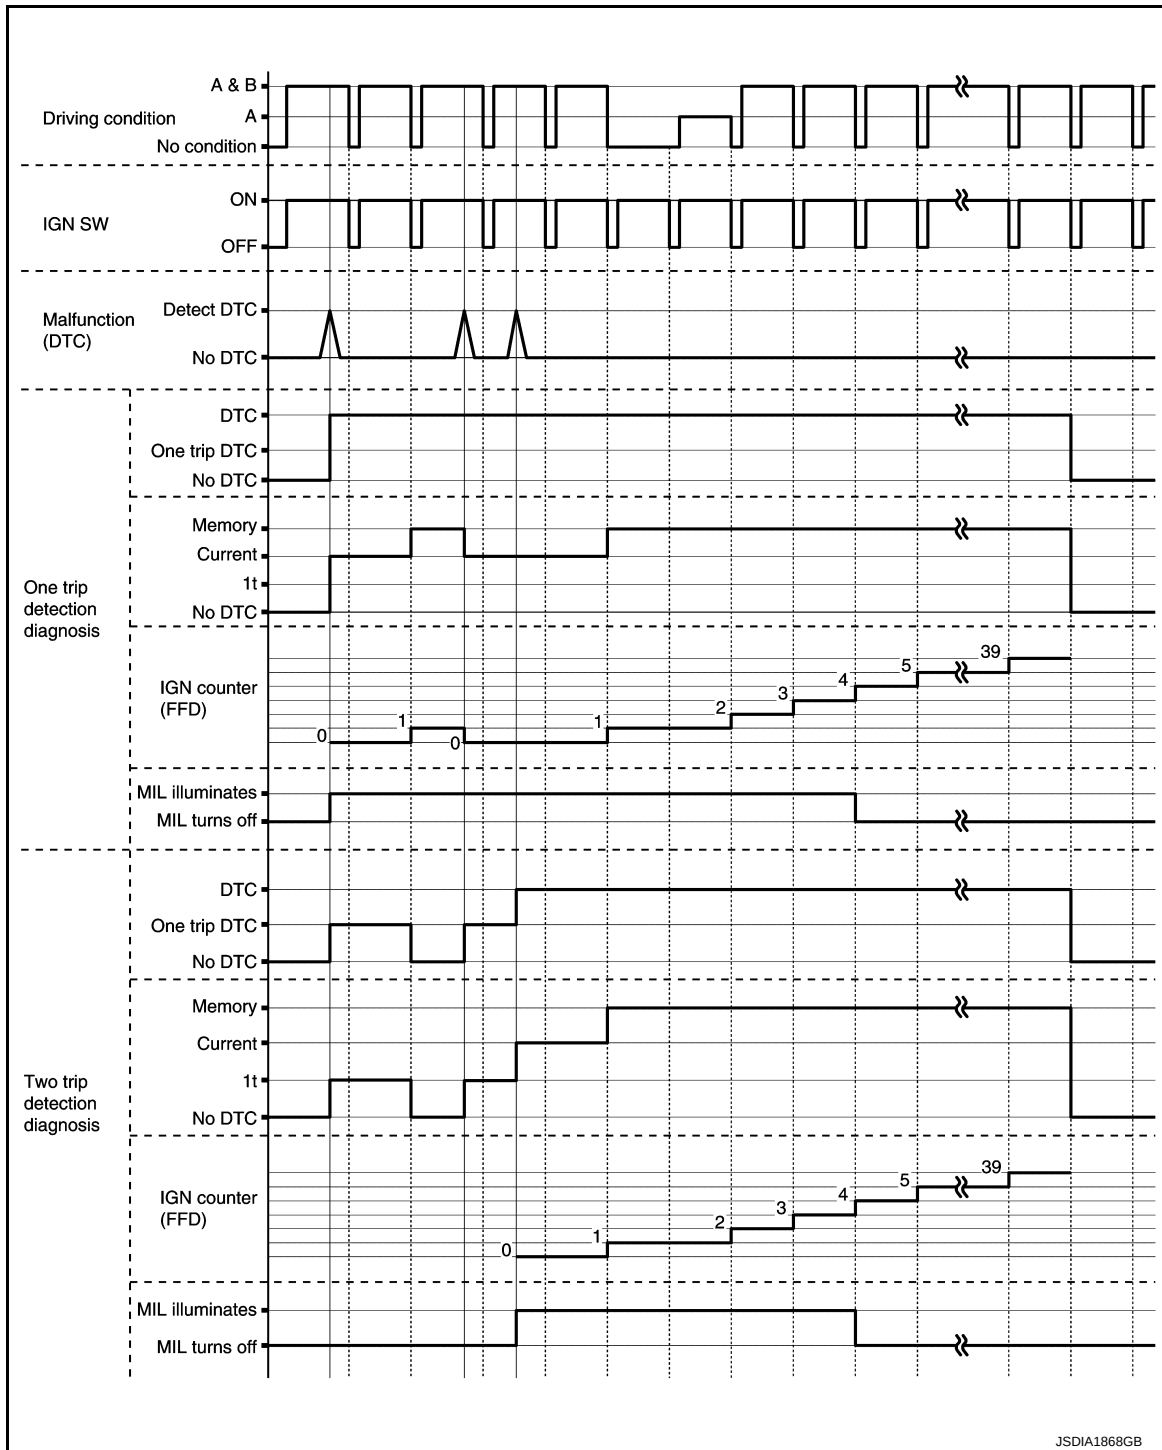

## CONSULT Function

INFOID:0000000011682747

## APPLICABLE ITEM

| Conditions              | Function                                             |
|-------------------------|------------------------------------------------------|
| Work Support            | The settings for ECU functions can be changed.       |
| Self Diagnostic Results | The ECU self diagnostic results are displayed.       |
| Data Monitor            | The ECU input/output data is displayed in real time. |
| ECU Identification      | The ECU part number is displayed.                    |
| CALIB DATA              | The calibration data status of TCM can be checked.   |

## &lt; SYSTEM DESCRIPTION &gt;

## SELF DIAGNOSTIC RESULTS

Refer to [TM-411, "DTC Index"](#).

DTC at 1st trip and method to read DTC

- DTC (P0705, P0712, P0715, etc.) is specified by SAE J2012/ISO 15031-6.
- DTC and DTC at 1st trip are displayed on "Self Diagnostic results" of CONSULT.  
When DTC is currently detected, "CRNT" is displayed. If "PAST" is displayed, it shows a malfunction occurred in the past. The trip number of drive without malfunction of concerned DTC can be confirmed with "IGN counter" inside "FFD".
- When the DTC at the 1st trip is detected, "1t" is displayed.

DTC deletion method

**NOTE:**

If the ignition switch is left ON after repair, turn OFF the ignition switch and wait for 10 seconds or more. Then, turn the ignition ON again. (Engine stop)

1. Touch "TRANSMISSION" of CONSULT.
2. Touch "Self Diagnostic Result".
3. Touch "Erase". (DTC memorized in TCM is erased.)

IGN counter

The ignition counter is displayed in "FFD" and the number of times of satisfied "Driving condition A" is displayed after normal recovery of DTC. Refer to [TM-392, "DIAGNOSIS DESCRIPTION : Counter System"](#).

- If malfunction (DTC) is currently detected, "0" is displayed.
- After normal recovery, every time "Driving condition A" is satisfied, the display value increases from 1 → 2 → 3...38 → 39.
- When MIL turns OFF due to the malfunction and the counter reaches 40, the DTC is erased.

**NOTE:**

The counter display of "40" cannot be checked.

## DATA MONITOR

**NOTE:**

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitored item     | (Unit)        | Remarks                                                                                          |
|--------------------|---------------|--------------------------------------------------------------------------------------------------|
| VSP SENSOR         | (km/h or mph) | Displays the vehicle speed calculated from the CVT output shaft speed.                           |
| ESTM VSP SIG       | (km/h or mph) | Displays the vehicle speed signal (ABS) received through CAN communication.                      |
| INPUT SPEED SENSOR | (rpm)         | Displays the input speed calculated from the pulse signal of the input speed sensor.             |
| PRI SPEED SEN      | (rpm)         | Displays the primary pulley speed calculated from the pulse signal of the primary speed sensor.  |
| SEC REV SENSOR     | (rpm)         | Displays the secondary pulley speed calculated from the pulse signal of the output speed sensor. |
| ENG SPEED SIG      | (rpm)         | Displays the engine speed received through CAN communication.                                    |
| SEC PRESSURE SEN   | (V)           | Displays the signal voltage of the secondary pressure sensor.                                    |
| PRI PRESSURE SEN   | (V)           | Displays the signal voltage of the primary pressure sensor.                                      |
| ATF TEMP SEN       | (V)           | Displays the signal voltage of the CVT fluid temperature sensor.                                 |
| G SENSOR*          | (G)           | Displays the decel G signal received through CAN communication.                                  |
| VIGN SEN           | (V)           | Displays the battery voltage applied to TCM.                                                     |
| PVING VOLT         | (V)           | Displays the backup voltage of TCM.                                                              |
| VEHICLE SPEED      | (km/h or mph) | Displays the vehicle speed recognized by TCM.                                                    |
| INPUT REV          | (rpm)         | Displays the input shaft speed of CVT recognized by TCM.                                         |
| PRI SPEED          | (rpm)         | Displays the primary pulley speed recognized by TCM.                                             |
| SEC SPEED          | (rpm)         | Displays the secondary pulley speed recognized by TCM.                                           |
| ENG SPEED          | (rpm)         | Displays the engine speed recognized by TCM.                                                     |
| SLIP REV           | (rpm)         | Displays the speed difference between the input shaft speed of CVT and the engine speed.         |

# DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10D]

| Monitored item          | (Unit)     | Remarks                                                                                                                                       |
|-------------------------|------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| PULLEY GEAR RATIO       |            | Displays the pulley gear ratio calculated from primary pulley speed/secondary pulley speed.                                                   |
| G SPEED                 | (G)        | Displays the acceleration and deceleration speed of the vehicle calculated from vehicle speed change.                                         |
| ACCEL POSI SEN 1        | (deg)      | Displays the estimated throttle position received through CAN communication.                                                                  |
| VENG TRQ                | (Nm)       | Display the engine torque recognized by TCM.                                                                                                  |
| PRI TRQ                 | (Nm)       | Display the input shaft torque of CVT.                                                                                                        |
| TRQ RTO                 |            | Display the torque ratio of torque converter.                                                                                                 |
| SEC PRESSURE            | (MPa)      | Displays the secondary pressure calculated from the signal voltage of the secondary pressure sensor.                                          |
| PRI PRESSURE            | (MPa)      | Displays the primary pressure calculated from the signal voltage of the primary pressure sensor.                                              |
| FLUID TEMP              | (°C or °F) | Displays the CVT fluid temperature calculated from the signal voltage of the CVT fluid temperature sensor.                                    |
| DSR REV                 | (rpm)      | Displays the target primary pulley speed calculated from processing of gear shift control.                                                    |
| TGT PLY GR RATIO        |            | Displays the target gear ratio of the pulley from processing of gear shift control.                                                           |
| LU PRS                  | (MPa)      | Displays the target oil pressure of the torque converter clutch solenoid valve calculated from oil pressure processing of gear shift control. |
| LINE PRS                | (MPa)      | Displays the target oil pressure of the line pressure solenoid valve calculated from oil pressure processing of gear shift control.           |
| TRGT PRI PRESSURE       | (MPa)      | Displays the target oil pressure of the primary pressure solenoid valve calculated from oil pressure processing of gear shift control.        |
| TRGT SELECT PRESSURE    | (MPa)      | Displays the target oil pressure of the select solenoid valve calculated from oil pressure processing of gear shift control.                  |
| TRGT SEC PRESSURE       | (MPa)      | Displays the target oil pressure of the secondary pressure solenoid valve calculated from oil pressure processing of gear shift control.      |
| ISOLT1                  | (A)        | Displays the command current from TCM to the torque converter clutch solenoid valve.                                                          |
| ISOLT2                  | (A)        | Displays the command current from TCM to the line pressure solenoid valve.                                                                    |
| PRI SOLENOID            | (A)        | Displays the command current from TCM to the primary pressure solenoid valve.                                                                 |
| SEC SOLENOID CURRENT    | (A)        | Displays the command current from TCM to the secondary pressure solenoid valve.                                                               |
| SELECT SOLENOID CURRENT | (A)        | Displays the command current from TCM to the select solenoid valve.                                                                           |
| SOLMON1                 | (A)        | Monitors the command current from TCM to the torque converter clutch solenoid valve and displays the monitored value.                         |
| SOLMON2                 | (A)        | Monitors the command current from TCM to the line pressure solenoid valve and displays the monitored value.                                   |
| PRI SOL MON             | (A)        | Monitors the command current from TCM to the primary pressure solenoid valve and displays the monitored value.                                |
| SEC SOL MON CURRENT     | (A)        | Monitors the command current from TCM to the secondary pressure solenoid valve and displays the monitored value.                              |
| SELECT SOL MON CURRENT  | (A)        | Monitors the command current from TCM to the select solenoid valve and displays the monitored value.                                          |
| D POSITION SW           | (On/Off)   | Displays the operation status of the transmission range switch (D position).                                                                  |
| N POSITION SW           | (On/Off)   | Displays the operation status of the transmission range switch (N position).                                                                  |
| R POSITION SW           | (On/Off)   | Displays the operation status of the transmission range switch (R position).                                                                  |
| P POSITION SW           | (On/Off)   | Displays the operation status of the transmission range switch (P position).                                                                  |
| L POSITION SW*          | (On/Off)   | Displays the operation status of the transmission range switch (L position).                                                                  |
| DS RANGE SW*            | (On/Off)   | Displays the operation status of the transmission range switch (Ds position).                                                                 |



# DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10D]

| Monitored item     | (Unit)        | Remarks                                                                                                  |
|--------------------|---------------|----------------------------------------------------------------------------------------------------------|
| BRAKESW            | (On/Off)      | Displays the reception status of the stop lamp switch signal received through CAN communication.         |
| IDLE SW            | (On/Off)      | Displays the reception status of the closed throttle position signal received through CAN communication. |
| SPORT MODE SW*     | (On/Off)      | Displays the reception status of the sport mode switch signal received through CAN communication.        |
| ECO MODE SW        | (On/Off)      | Displays the reception status of the ECO mode switch signal received through CAN communication.          |
| STRDWSW            | (On/Off)      | Displays the operation status of the paddle shifter (down switch).                                       |
| STRUPSW            | (On/Off)      | Displays the operation status of the paddle shifter (up switch).                                         |
| DOWNLVR            | (On/Off)      | Displays the operation status of the selector lever (down switch).                                       |
| UPLVR              | (On/Off)      | Displays the operation status of the selector lever (up switch).                                         |
| NONMMODE           | (On/Off)      | Displays if the selector lever position is not at the manual shift gate.                                 |
| MMODE              | (On/Off)      | Displays if the selector lever position is at the manual shift gate.                                     |
| TOW MODE SW*       | (On/Off)      | Displays the reception status of the TOW mode switch signal received through CAN communication.          |
| SHIFT IND SIGNAL   |               | Displays the transaxle value of shift position signal transmitted via CAN communication.                 |
| CVT LAMP*          | (On/Off)      | Displays the transaxle status of the CVT warning lamp signal transmitted through CAN communication.      |
| SPORT MODE IND*    | (On/Off)      | Displays the transaxle status of the SPORT indicator lamp signal transmitted through CAN communication.  |
| MANU MODE SIGNAL   | (On/Off)      | Displays the transaxle status of the manual mode signal transmitted through CAN communication.           |
| DS RANGE SIGNAL*   | (On/Off)      | Displays the shift position signal status from transmission range switch (Ds position).                  |
| ECO MODE SIGNAL    | (On/Off)      | Displays the transaxle status of the ECO mode signal transmitted through CAN communication.              |
| VDC ON             | (On/Off)      | Displays the reception status of the VDC operation signal received through CAN communication.            |
| TCS ON             | (On/Off)      | Displays the reception status of the TCS operation signal received through CAN communication.            |
| ABS FAIL SIGNAL    | (On/Off)      | Displays the reception status of the ABS malfunction signal received through CAN communication.          |
| ABS ON             | (On/Off)      | Displays the reception status of the ABS operation signal received through CAN communication.            |
| RANGE              |               | Displays the gear position recognized by TCM.                                                            |
| M GEAR POS         |               | Display the target gear of manual mode                                                                   |
| G SEN SLOPE*       | (%)           | Displays the gradient angle calculated from the G sensor signal voltage.                                 |
| G SEN CALIBRATION* | (YET/DONE)    | Displays the status of "G SENSOR CALIBRATION" in "Work Support".                                         |
| N IDLE STATUS*     | (On/Off)      | Displays idle neutral status.                                                                            |
| ENGBRKLV           | (On/Off)      | Displays the setting of "ENGINE BRAKE ADJ" in "Work Support".                                            |
| DRIVE MODE STATS*  |               | Displays the drive mode status recognized by TCM.                                                        |
| SNOW MODE*         | (On/Off)      | Displays whether it is the SNOW mode.                                                                    |
| ECO MODE*          | (On/Off)      | Displays whether it is the ECO mode.                                                                     |
| NORMAL MODE*       | (On/Off)      | Displays whether it is the NORMAL mode.                                                                  |
| SPORT MODE*        | (On/Off)      | Displays whether it is the SPORT mode.                                                                   |
| AIR BLDING STATE*  | (INCOMP/COMP) | Displays the status of "ELECTRIC O.P. AIR BLEEDING" in "Work Support".                                   |

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10D]

| Monitored item     | (Unit)   | Remarks                                                                                                                          |
|--------------------|----------|----------------------------------------------------------------------------------------------------------------------------------|
| ELECTRIC OP DUTY*  | (%)      | Displays the command signal value (duty) of the electric oil pump transmitted from TCM.                                          |
| E-OP DUTY MON*     | (%)      | Monitors the status signal value (duty) transmitted from the electric oil pump and displays the monitored value.                 |
| ELECTRIC OP RELAY* | (On/Off) | Displays the command status from TCM to the electric oil pump relay.                                                             |
| E-OP RELAY MON*    | (On/Off) | Monitors the command status from TCM to the oil pump relay and displays the monitored value.                                     |
| CVT-B              |          | <ul style="list-style-type: none"> <li>Displays CVT fluid temperature count.</li> <li>This monitor item does not use.</li> </ul> |
| CVT-A              |          | <ul style="list-style-type: none"> <li>Displays CVT fluid temperature count.</li> <li>This monitor item does not use.</li> </ul> |
| G SENSOR*          | (V)      | Displays the signal voltage of the G sensor.                                                                                     |

\*: Not applicable but displayed.

## WORK SUPPORT

| Item name                           | Description                                                                                                                                                                                                                                                       |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CONFORM CVTF DETERIORATION          | Checks the degradation level of the CVT fluid under severe conditions.                                                                                                                                                                                            |
| G SENSOR CALIBRATION*               | Compensates the G sensor.                                                                                                                                                                                                                                         |
| ERASE LEARNING VALUE                | Erases learning value memorized by TCM.                                                                                                                                                                                                                           |
| ENGINE BRAKE ADJ.                   | Although there is no malfunction on the transaxle and the CVT system, if a customer make a complaint like "I do not feel comfortable with automatic operation of the engine brake on downhill", the engine brake may be cancelled with "engine brake adjustment". |
| WRITE IP CHARA - REPLACEMENT AT/CVT | Writes IP characteristics when transaxle assembly is replaced.                                                                                                                                                                                                    |
| READ IP CHARA - REPLACEMENT TCM     | Reads IP characteristics when TCM is replaced.                                                                                                                                                                                                                    |
| WRITE IP CHARA - REPLACEMENT TCM    | Writes IP characteristics when TCM is replaced.                                                                                                                                                                                                                   |

\*: This item does not use.

## Engine brake adjustment

### ENGINE BRAKE LEVEL

- ON : Turn ON the engine brake control.  
 OFF : Turn OFF the engine brake control.

## Check the degradation level of the CVT fluid.

### CVTF degradation level data

- 210,000 or more : Replacement of the CVT fluid is required.  
 Less than 210,000 : Replacement of the CVT fluid is not required.

# ECU DIAGNOSIS INFORMATION

## TCM

### Reference Value

INFOID:0000000011682748

#### CONSULT DATA MONITOR STANDARD VALUE

- In CONSULT, electric shift timing or lock-up timing, i.e. operation timing of each solenoid valve, is displayed. Therefore, if there is an obvious difference between the shift timing estimated from a shift shock (or engine speed variations) and that shown on the CONSULT, the mechanism parts (including the hydraulic circuit) excluding the solenoids and sensors may be malfunctioning. In this case, check the mechanical parts following the appropriate diagnosis procedure.
- Shift point (gear position) displayed on CONSULT slightly differs from shift pattern described in Service Manual. This is due to the following reasons.
  - Actual shift pattern may vary slightly within specified tolerances.
  - While shift pattern described in Service Manual indicates start of each shift, CONSULT shows gear position at end of shift.
  - The solenoid display (ON/OFF) on CONSULT is changed at the start of gear shifting. In contrast, the gear position display is changed at the time when gear shifting calculated in the control unit is completed.

#### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor item       | Condition                                                                                                                           | Value/Status (Approx.)                  |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------|
| VSP SENSOR         | While driving                                                                                                                       | Almost same as the speedometer display. |
| ESTM VSP SIG       | While driving                                                                                                                       | Almost same as the speedometer display. |
| INPUT SPEED SENSOR | In driving (lock-up ON)                                                                                                             | Approximately matches the engine speed. |
| PRI SPEED SEN      | In driving (lock-up ON)                                                                                                             | Approximately matches the engine speed. |
| SEC REV SENSOR     | While driving                                                                                                                       | VSP SENSOR × 45                         |
| ENG SPEED SIG      | Engine running                                                                                                                      | Almost same reading as tachometer       |
| SEC PRESSURE SEN   | <ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul> | 1.2 – 1.3 V                             |
| PRI PRESSURE SEN   | <ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul> | 0.7 – 0.9 V                             |
| ATF TEMP SEN       | CVT fluid: Approx. 20°C (68°F)                                                                                                      | 2.0 – 2.1 V                             |
|                    | CVT fluid: Approx. 50°C (122°F)                                                                                                     | 1.4 – 1.5 V                             |
|                    | CVT fluid: Approx. 80°C (176°F)                                                                                                     | 0.9 – 1.0 V                             |
| G SENSOR           | Always                                                                                                                              | 0 G                                     |
| VIGN SEN           | Ignition switch: ON                                                                                                                 | 10 – 16 V                               |
| PVIGN VOLT         | Ignition switch: ON                                                                                                                 | 10 – 16 V                               |
| VEHICLE SPEED      | While driving                                                                                                                       | Almost same as the speedometer display. |
| INPUT REV          | In driving (lock-up ON)                                                                                                             | Almost same as the engine speed.        |
| PRI SPEED          | In driving (lock-up ON)                                                                                                             | Approximately matches the engine speed. |
| SEC SPEED          | While driving                                                                                                                       | VSP SENSOR × 45                         |
| ENG SPEED          | Engine running                                                                                                                      | Almost same reading as tachometer       |
| SLIP REV           | While driving                                                                                                                       | Engine speed – Input speed              |
| PULLEY GEAR RATIO  | In driving (forward)                                                                                                                | 2.6310 – 0.3780                         |
|                    | In driving (reverse)                                                                                                                | 2.6310                                  |

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10D]

| Monitor item             | Condition                                                                                                                                                                        | Value/Status (Approx.)                                          |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------|
| G SPEED                  | Vehicle stopped                                                                                                                                                                  | 0.00 G                                                          |
|                          | During acceleration                                                                                                                                                              | The value changes to the positive side along with acceleration. |
|                          | During deceleration                                                                                                                                                              | The value changes to the positive side along with deceleration. |
| ACCEL POSI SEN 1         | Accelerator pedal released                                                                                                                                                       | 0.00 deg                                                        |
|                          | Accelerator pedal fully depressed                                                                                                                                                | 80.00 deg                                                       |
| VENG TRQ                 | While driving                                                                                                                                                                    | The value changes along with acceleration/ deceleration.        |
| PRI TRQ                  | While driving                                                                                                                                                                    | The value changes along with acceleration/ deceleration.        |
| TRQ RTO                  | While driving                                                                                                                                                                    | The value changes along with acceleration/ deceleration.        |
| SEC PRESSURE             | <ul style="list-style-type: none"> <li>After engine warm up</li> <li>Selector lever: "N" position</li> <li>At idle</li> </ul>                                                    | 1.1 MPa                                                         |
| PRI PRESSURE             | <ul style="list-style-type: none"> <li>After engine warm up</li> <li>Selector lever: "N" position</li> <li>At idle</li> </ul>                                                    | 0.4 – 0.45 MPa                                                  |
| FLUID TEMP               | Ignition switch ON.                                                                                                                                                              | Displays the CVT fluid temperature.                             |
| DSR REV                  | While driving                                                                                                                                                                    | It varies along with the driving condition.                     |
| TGT PLY GR RATIO         | In driving (forward)                                                                                                                                                             | 2.6310 – 0.3780                                                 |
|                          | In driving (reverse)                                                                                                                                                             | 2.6310                                                          |
| LU PRS                   | <ul style="list-style-type: none"> <li>Engine started</li> <li>Vehicle is stopped.</li> </ul>                                                                                    | –0.50 MPa                                                       |
|                          | <ul style="list-style-type: none"> <li>Selector lever: "D" position</li> <li>Accelerator pedal position: 1/8 or less</li> <li>Vehicle speed: 20 km/h (12 MPH) or more</li> </ul> | 0.45 MPa                                                        |
| LINE PRS                 | <ul style="list-style-type: none"> <li>After engine warm up</li> <li>Selector lever: "N" position</li> <li>At idle</li> </ul>                                                    | 1.1 MPa                                                         |
| TRGT PRI PRESSURE        | <ul style="list-style-type: none"> <li>After engine warm up</li> <li>Selector lever: "N" position</li> <li>At idle</li> </ul>                                                    | 0.4 – 0.5 MPa                                                   |
| TARGET SELECT PRESSURE   | <ul style="list-style-type: none"> <li>After engine warm up</li> <li>Selector lever: "N" position</li> <li>At idle</li> </ul>                                                    | 0 MPa                                                           |
|                          | <ul style="list-style-type: none"> <li>Selector lever: "D" position</li> <li>At idle</li> </ul>                                                                                  | 0.3 – 0.5 MPa                                                   |
| TARGET SEC PRESSURE      | <ul style="list-style-type: none"> <li>After engine warm up</li> <li>Selector lever: "N" position</li> <li>At idle</li> </ul>                                                    | 1.1 MPa                                                         |
| ISOLT1*                  | —                                                                                                                                                                                | —                                                               |
| ISOLT2 *                 | —                                                                                                                                                                                | —                                                               |
| PRI SOLENOID*            | —                                                                                                                                                                                | —                                                               |
| SEC SOLENOID CURRENT*    | —                                                                                                                                                                                | —                                                               |
| SELECT SOLENOID CURRENT* | —                                                                                                                                                                                | —                                                               |
| SOLMON1*                 | —                                                                                                                                                                                | —                                                               |
| SOLMON2*                 | —                                                                                                                                                                                | —                                                               |
| PRI SOL MON*             | —                                                                                                                                                                                | —                                                               |

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10D]

| Monitor item            | Condition                                          | Value/Status (Approx.) |
|-------------------------|----------------------------------------------------|------------------------|
| SEC SOL MON CURRENT*    | —                                                  | —                      |
| SELECT SOL MON CURRENT* | —                                                  | —                      |
| D POSITION SW           | Selector lever: "D" position                       | On                     |
|                         | Other than the above                               | Off                    |
| N POSITION SW           | Selector lever: "N" position                       | On                     |
|                         | Other than the above                               | Off                    |
| R POSITION SW           | Selector lever: "R" position                       | On                     |
|                         | Other than the above                               | Off                    |
| P POSITION SW           | Selector lever: "P" position                       | On                     |
|                         | Other than the above                               | Off                    |
| L POSITION SW           | Always                                             | Off                    |
| DS RANGE SW             | Always                                             | Off                    |
| BRAKESW                 | Brake pedal is depressed                           | On                     |
|                         | Brake pedal is released                            | Off                    |
| IDLE SW                 | Accelerator pedal is released                      | On                     |
|                         | Accelerator pedal is fully depressed               | Off                    |
| SPORT MODE SW           | Always                                             | Off                    |
| ECO MODE SW             | Always                                             | Off                    |
| STRDWN SW               | Paddle shifter (Down) is pulled                    | On                     |
|                         | Other than the above                               | Off                    |
| STRUP SW                | Paddle shifter (Up) is pulled                      | On                     |
|                         | Other than the above                               | Off                    |
| DOWNLVR                 | Selector lever: –side                              | On                     |
|                         | Other than the above                               | Off                    |
| UPLVR                   | Selector lever: +side                              | On                     |
|                         | Other than the above                               | Off                    |
| NONMMODE                | Manual shift gate position (neutral, +side, –side) | Off                    |
|                         | Other than the above                               | On                     |
| MMODE                   | Manual shift gate position (neutral, +side, –side) | On                     |
|                         | Other than the above                               | Off                    |
| TOW MODE SW             | Always                                             | Off                    |

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10D]

| Monitor item      | Condition                                                       | Value/Status (Approx.)                                                                  |
|-------------------|-----------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| SHIFT IND SIGNAL  | When the selector lever is positioned in between each position. | OFF                                                                                     |
|                   | Selector lever: "P" position                                    | P                                                                                       |
|                   | Selector lever: "R" position                                    | R                                                                                       |
|                   | Selector lever: "N" position                                    | N                                                                                       |
|                   | Selector lever: "D" position                                    | D                                                                                       |
|                   | Manual mode: 1st                                                | M1                                                                                      |
|                   | Manual mode: 2nd                                                | M2                                                                                      |
|                   | Manual mode: 3rd                                                | M3                                                                                      |
|                   | Manual mode: 4th                                                | M4                                                                                      |
|                   | Manual mode: 5th                                                | M5                                                                                      |
|                   | Manual mode: 6th                                                | M6                                                                                      |
|                   | Manual mode: 7th                                                | M7                                                                                      |
| CVT LAMP          | Approx. 2 seconds after ignition switch ON                      | On                                                                                      |
|                   | Other than the above                                            | Off                                                                                     |
| SPORT MODE IND    | Always                                                          | Off                                                                                     |
| MANU MODE SIGNAL  | Driving with manual mode                                        | On                                                                                      |
|                   | Other than the above                                            | Off                                                                                     |
| DS RANGE SIGNAL   | Always                                                          | Off                                                                                     |
| ECO MODE SIGNAL   | Always                                                          | Off                                                                                     |
| VDC ON            | When VDC malfunction signal is received                         | On                                                                                      |
|                   | Other than the above                                            | Off                                                                                     |
| TCS ON            | When TCS malfunction signal is received                         | On                                                                                      |
|                   | Other than the above                                            | Off                                                                                     |
| ABS FAIL SIGNAL   | When ABS malfunction signal is received                         | On                                                                                      |
|                   | Other than the above                                            | Off                                                                                     |
| ABS ON            | ABS is activated                                                | On                                                                                      |
|                   | Other than the above                                            | Off                                                                                     |
| RANGE             | Selector lever: "P" and "N" positions                           | N/P                                                                                     |
|                   | Selector lever: "R" position                                    | R                                                                                       |
|                   | Selector lever: "D" position                                    | D                                                                                       |
|                   | Selector lever: "M" position                                    |                                                                                         |
| M GEAR POS        | Manual mode: 1st – 7th                                          | 1 to 7                                                                                  |
| G SEN SLOPE       | Flat road                                                       | 0%                                                                                      |
|                   | Uphill gradient                                                 | The value changes to the positive side along with uphill gradient. (Maximum 40.45%)     |
|                   | Downhill gradient                                               | The value changes to the negative side along with downhill gradient. (Minimum – 40.45%) |
| G SEN CALIBRATION | When G sensor calibration is completed                          | DONE                                                                                    |
|                   | When G sensor calibration is not completed                      | YET                                                                                     |
| N IDLE STATUS     | When idle neutral control is operated                           | On                                                                                      |
|                   | When idle neutral control is not operated                       | Off                                                                                     |

# TCM


< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10D]

| Monitor item      | Condition                                                                                   | Value/Status (Approx.) |
|-------------------|---------------------------------------------------------------------------------------------|------------------------|
| ENGBRKLVL         | When the engine brake level of "ENGINE BRAKE ADJ". in "Work Support" is ON                  | On                     |
|                   | When the engine brake level of "ENGINE BRAKE ADJ". in "Work Support" is OFF                 | Off                    |
| DRIVE MODE STATS  | Integrated Control System: NORMAL mode                                                      | NORMAL                 |
|                   | Integrated Control System: ECO mode                                                         | ECO                    |
|                   | Integrated Control System: SPORT mode                                                       | SPORT                  |
| SNOW MODE         | Always                                                                                      | Off                    |
| ECO MODE          | Integrated Control System: ECO mode                                                         | On                     |
|                   | Other than the above                                                                        | Off                    |
| NORMAL MODE       | Integrated Control System: NORMAL mode                                                      | On                     |
|                   | Other than the above                                                                        | Off                    |
| SPORT MODE        | Integrated Control System: SPORT mode                                                       | On                     |
|                   | Other than the above                                                                        | Off                    |
| AIR BLDING STATE  | Always                                                                                      | INCOMP                 |
| ELECTRIC OP DUTY  | Always                                                                                      | 0%                     |
| E-OP DUTY MON     | Always                                                                                      | 0%                     |
| ELECTRIC OP RELAY | Always                                                                                      | Off                    |
| E-OP RELAY MON    | Always                                                                                      | Off                    |
| CVT-B*            | —                                                                                           | —                      |
| CVT-A*            | —                                                                                           | —                      |
| G SENSOR          | <ul style="list-style-type: none"> <li>Vehicle stopped</li> <li>Vehicle is level</li> </ul> | 2.5 V                  |
|                   | During acceleration                                                                         | Positive value         |
|                   | During deceleration                                                                         | Negative value         |

\*: These monitor items do not use.

## TERMINAL LAYOUT

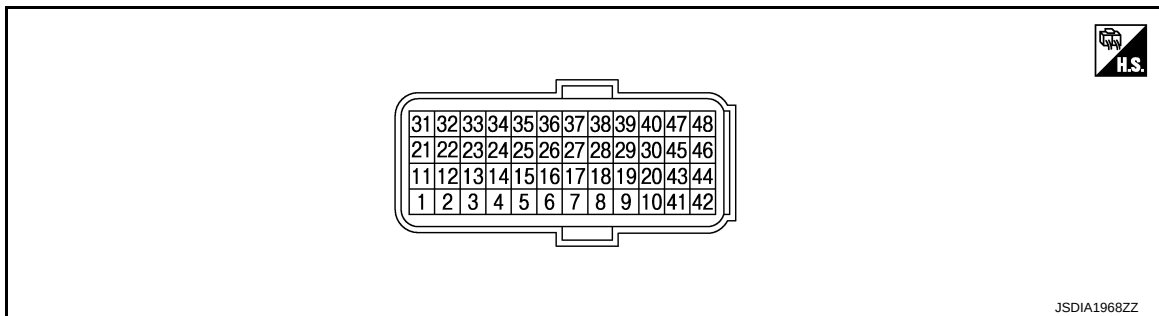




## INPUT/OUTPUT SIGNAL STANDARD

| Terminal No.<br>(Wire color) |   | Description |                  | Condition | Value (Approx.) |
|------------------------------|---|-------------|------------------|-----------|-----------------|
| +                            | — | Signal      | Input/<br>Output |           |                 |
| 2*<br>(BR)                   | — | —           | —                | —         | —               |

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10D]




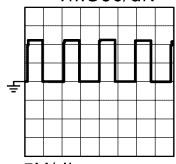
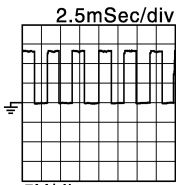
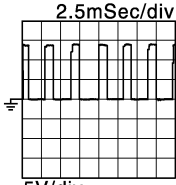
| Terminal No.<br>(Wire color) |        | Description                       |                  | Condition                                                                                            |                                    | Value (Approx.)                                                                                                                       |
|------------------------------|--------|-----------------------------------|------------------|------------------------------------------------------------------------------------------------------|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| +                            | —      | Signal                            | Input/<br>Output |                                                                                                      |                                    |                                                                                                                                       |
| 4<br>(W)                     | Ground | D range switch                    | Input            | Ignition<br>switch<br>ON                                                                             | Selector lever: "D" position       | 10 – 16 V                                                                                                                             |
|                              |        |                                   |                  |                                                                                                      | Other than the above               | 0 V                                                                                                                                   |
| 5<br>(LG)                    | Ground | N range switch                    | Input            |                                                                                                      | Selector lever: "N" position       | 10 – 16 V                                                                                                                             |
|                              |        |                                   |                  |                                                                                                      | Other than the above               | 0 V                                                                                                                                   |
| 6<br>(G)                     | Ground | R range switch                    | Input            |                                                                                                      | Selector lever: "R" position       | 10 – 16 V                                                                                                                             |
|                              |        |                                   |                  |                                                                                                      | Other than the above               | 0 V                                                                                                                                   |
| 7<br>(SB)                    | Ground | P range switch                    | Input            |                                                                                                      | Selector lever: "P" position       | 10 – 16 V                                                                                                                             |
|                              |        |                                   |                  |                                                                                                      | Other than the above               | 0 V                                                                                                                                   |
| 11<br>(Y)                    | Ground | Sensor ground                     | —                | Always                                                                                               | 0 V                                |                                                                                                                                       |
| 12<br>(SB)                   | Ground | CVT fluid tempera-<br>ture sensor | Input            | Ignition<br>switch<br>ON                                                                             | CVT fluid: Approx. 20°C<br>(68°F)  | 2.01 – 2.05 V                                                                                                                         |
|                              |        |                                   |                  |                                                                                                      | CVT fluid: Approx. 50°C<br>(122°F) | 1.45 – 1.50 V                                                                                                                         |
|                              |        |                                   |                  |                                                                                                      | CVT fluid: Approx. 80°C<br>(176°F) | 0.90 – 0.94 V                                                                                                                         |
| 16<br>(P)                    | Ground | Secondary pres-<br>sure sensor    | Input            | • After engine warm up<br>• Selector lever: "N" position<br>• At idle                                |                                    | 1.2 – 1.3 V                                                                                                                           |
| 17<br>(P)                    | Ground | Primary pressure<br>sensor        | Input            | • After engine warm up<br>• Selector lever: "N" position<br>• At idle                                |                                    | 0.7 – 0.85 V                                                                                                                          |
| 23<br>(P)                    | —      | CAN-L                             | Input/<br>Output | —                                                                                                    |                                    | —                                                                                                                                     |
| 24<br>(V)                    | Ground | Input speed sensor                | Input            | • Shift position: "M1" position<br>• Vehicle speed: 20 km/h (12 MPH)                                 |                                    | 880 Hz<br>1mSec/div<br><br>5V/div<br>JSDIA3769GB |
| 26<br>(LG)                   | Ground | Sensor power sup-<br>ply          | Output           | Ignition switch: ON                                                                                  |                                    | 5.0 V                                                                                                                                 |
|                              |        |                                   |                  | Ignition switch: OFF                                                                                 |                                    | 0 V                                                                                                                                   |
| 30<br>(Y)                    | Ground | Line pressure sole-<br>noid valve | Output           | • After engine warming up<br>• Selector lever: "N" position<br>• At idle                             |                                    | 2.5mSec/div<br><br>5V/div<br>JSDIA1897GB         |
|                              |        |                                   |                  | • After engine warming up<br>• Selector lever: "D" position<br>• Depress the accelerator pedal fully |                                    | 2.5mSec/div<br><br>5V/div<br>JSDIA1898GB         |



# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10D]
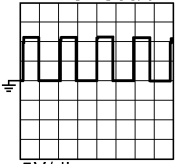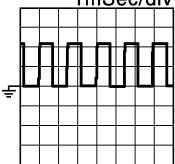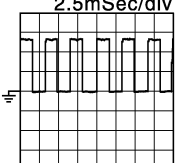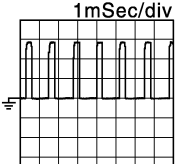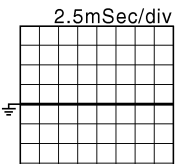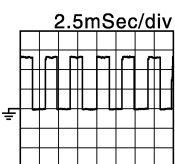
| Terminal No.<br>(Wire color) |        | Description                            |                  | Condition                                                                                                                                                                        | Value (Approx.)                                                                                                                             |
|------------------------------|--------|----------------------------------------|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| +                            | —      | Signal                                 | Input/<br>Output |                                                                                                                                                                                  |                                                                                                                                             |
| 33<br>(L)                    | —      | CAN-H                                  | Input/<br>Output | —                                                                                                                                                                                | —                                                                                                                                           |
| 34<br>(R)                    | Ground | Output speed sensor                    | Input            | <ul style="list-style-type: none"> <li>Shift position: "M1" position</li> <li>Vehicle speed: 20 km/h (12 MPH)</li> </ul>                                                         | <p>200 Hz<br/>2.5mSec/div</p>  <p>5V/div JSDIA1904GB</p> |
| 35<br>(BG)                   | Ground | Primary speed sensor                   | Input            | <ul style="list-style-type: none"> <li>Shift position: "M1" position</li> <li>Vehicle speed: 20 km/h (12 MPH)</li> </ul>                                                         | <p>700 Hz<br/>1mSec/div</p>  <p>5V/div JSDIA1905GB</p>   |
| 37<br>(L)                    | Ground | Select solenoid valve                  | Output           | <ul style="list-style-type: none"> <li>Engine started</li> <li>Vehicle is stopped</li> <li>Selector lever: "N" position</li> </ul>                                               | <p>2.5mSec/div</p>  <p>5V/div JSDIA1897GB</p>           |
| 38<br>(LG)                   | Ground | Torque converter clutch solenoid valve | Output           | <ul style="list-style-type: none"> <li>Selector lever: "D" position</li> <li>Accelerator pedal position: 1/8 or less</li> <li>Vehicle speed: 20 km/h (12 MPH) or more</li> </ul> | <p>1mSec/div</p>  <p>5V/div JSDIA1900GB</p>            |
|                              |        |                                        |                  | <ul style="list-style-type: none"> <li>Engine started</li> <li>Vehicle is stopped</li> </ul>                                                                                     | <p>2.5mSec/div</p>  <p>5V/div JSDIA1903GB</p>          |
| 39<br>(G)                    | Ground | Secondary pressure solenoid valve      | Output           | <ul style="list-style-type: none"> <li>Shift position: "M1" position</li> <li>Vehicle speed: 20 km/h (12 MPH)</li> </ul>                                                         | <p>2.5mSec/div</p>  <p>5V/div JSDIA1897GB</p>          |

A

B

C

TM

E

F

G

H

I

J

K


L

M

N

O

P
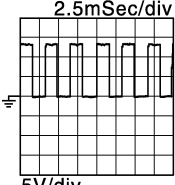
| Terminal No.<br>(Wire color) |        | Description                           |                  | Condition                                                                                                                | Value (Approx.)                                                                                           |
|------------------------------|--------|---------------------------------------|------------------|--------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| +                            | —      | Signal                                | Input/<br>Output |                                                                                                                          |                                                                                                           |
| 40<br>(W)                    | Ground | Primary pressure solenoid valve       | Output           | <ul style="list-style-type: none"> <li>Shift position: "M1" position</li> <li>Vehicle speed: 20 km/h (12 MPH)</li> </ul> | <br>5V/div JSDIA1897GB |
| 41<br>(B)                    | Ground | Ground                                | —                | Always                                                                                                                   | 0 V                                                                                                       |
| 42<br>(B)                    | Ground | Ground                                | —                | Always                                                                                                                   | 0 V                                                                                                       |
| 45<br>(V)                    | Ground | Battery power supply (Memory back-up) | Input            | Always                                                                                                                   | 10 – 16 V                                                                                                 |
| 46<br>(GR)                   | Ground | Battery power supply (Memory back-up) | Input            | Always                                                                                                                   | 10 – 16 V                                                                                                 |
| 47<br>(LG)                   | Ground | Ignition power supply                 | Input            | Ignition switch: ON                                                                                                      | 10 – 16 V                                                                                                 |
|                              |        |                                       |                  | Ignition switch: OFF                                                                                                     | 0 V                                                                                                       |
| 48<br>(W)                    | Ground | Ignition power supply                 | Input            | Ignition switch: ON                                                                                                      | 10 – 16 V                                                                                                 |
|                              |        |                                       |                  | Ignition switch: OFF                                                                                                     | 0 V                                                                                                       |

\*: This harness does not use.

## Fail-safe

INFOID:0000000011682749

TCM has a fail-safe mode. The mode functions so that operation can be continued even if the signal circuit of the main electronically controlled input/output parts is damaged.

If the vehicle shows following behaviors including "poor acceleration", a malfunction of the applicable system is detected by TCM and the vehicle may be in a fail-safe mode. At this time, check the DTC code and perform inspection and repair according to the malfunction diagnosis procedures.

## Fail-safe function

| DTC   | Vehicle behavior                                                                                                                                                                                                                         | Conditions of vehicle |
|-------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|
| P062F | Not changed from normal driving                                                                                                                                                                                                          | —                     |
| P0705 | <ul style="list-style-type: none"> <li>Shift position indicator on combination meter is not displayed</li> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul> | —                     |
| P0706 | <ul style="list-style-type: none"> <li>Shift position indicator on combination meter is not displayed</li> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul> | —                     |

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10D]

| DTC   | Vehicle behavior                                                                                                                                                                                         | Conditions of vehicle                                                                                                                                         |    |
|-------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|----|
| P0711 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                            | Engine coolant temperature when engine start:<br>Temp. $\geq 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )                                                     | A  |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                           | Engine coolant temperature when engine start:<br>$-35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ ) $\leq$ Temp. $< 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ ) | B  |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                           | Engine coolant temperature when engine star:<br>Temp. $< -35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ )                                                       | C  |
| P0712 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                            | Engine coolant temperature when engine start:<br>Temp. $\geq 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )                                                     | TM |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                           | Engine coolant temperature when engine start:<br>$-35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ ) $\leq$ Temp. $< 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ ) | E  |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                           | Engine coolant temperature when engine star:<br>Temp. $< -35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ )                                                       | F  |
| P0713 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                                                            | Engine coolant temperature when engine start:<br>Temp. $\geq 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )                                                     | G  |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                           | Engine coolant temperature when engine start:<br>$-35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ ) $\leq$ Temp. $< 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ ) | H  |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>                                                                           | Engine coolant temperature when engine star:<br>Temp. $< -35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ )                                                       | I  |
| P0715 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> <li>Manual mode is not activated</li> </ul>                                    | —                                                                                                                                                             | J  |
| P0717 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                                                          | —                                                                                                                                                             | K  |
| P0740 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                                                          | —                                                                                                                                                             | L  |
| P0743 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                                                          | —                                                                                                                                                             | M  |
| P0744 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                                                          | —                                                                                                                                                             | N  |
| P0746 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | —                                                                                                                                                             | O  |
| P0776 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> <li>Vehicle speed is not increased</li> </ul> | When a malfunction occurs on the low oil pressure side                                                                                                        | P  |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | When a malfunction occurs on the high oil pressure side                                                                                                       |    |
| P0778 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | —                                                                                                                                                             |    |

| DTC   | Vehicle behavior                                                                                                                                                                                         | Conditions of vehicle                                   |
|-------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------|
| P0779 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         |                                                         |
| P0826 | Manual mode is not activated                                                                                                                                                                             |                                                         |
| P0841 | Not changed from normal driving                                                                                                                                                                          |                                                         |
| P0847 | Not changed from normal driving                                                                                                                                                                          | —                                                       |
| P0848 | Not changed from normal driving                                                                                                                                                                          | —                                                       |
| P084C | Not changed from normal driving                                                                                                                                                                          |                                                         |
| P084D | Not changed from normal driving                                                                                                                                                                          |                                                         |
| P0863 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | —                                                       |
| P0890 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> <li>Vehicle speed is not increased</li> </ul> |                                                         |
| P0962 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | —                                                       |
| P0963 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | —                                                       |
| P0965 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | When a malfunction occurs on the low oil pressure side  |
|       | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Lock-up is not performed</li> </ul>                                                                                              | When a malfunction occurs on the high oil pressure side |
| P0966 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | —                                                       |
| P0967 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | —                                                       |
| P2765 | <ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> <li>Manual mode is not activated</li> </ul>                                    | —                                                       |
| P2813 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Vehicle speed is not increased</li> </ul>                                   | When a malfunction occurs on the low oil pressure side  |
|       | Selector shock is large                                                                                                                                                                                  | When a malfunction occurs on the high oil pressure side |
| P2814 | Selector shock is large                                                                                                                                                                                  | —                                                       |
| P2815 | Selector shock is large                                                                                                                                                                                  | —                                                       |
| U0073 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>                                         | —                                                       |

| DTC   | Vehicle behavior                                                                                                                                                 | Conditions of vehicle |
|-------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|
| U0100 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul> | —                     |
| U0102 | Not changed from normal driving                                                                                                                                  | —                     |
| U0140 | Not changed from normal driving                                                                                                                                  | —                     |
| U0141 | Not changed from normal driving                                                                                                                                  | —                     |
| U0155 | Not changed from normal driving                                                                                                                                  | —                     |
| U0164 | Not changed from normal driving                                                                                                                                  | —                     |
| U0300 | <ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul> | —                     |
| U1000 | Not changed from normal driving                                                                                                                                  | —                     |
| U1117 | Not changed from normal driving                                                                                                                                  | —                     |

## Protection Control

INFOID:0000000011682750

The TCM becomes the protection control status temporarily to protect the safety when the safety of TCM and transmission is lost. It automatically returns to the normal status if the safety is secured.  
The TCM has the following protection control.

### CONTROL FOR WHEEL SPIN

|                             |                                                                                                                                                                                                      |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Control                     | When a wheel spin is detected, the engine output and gear ratio are limited and the line pressure is increased. Limits engine output when a wheel spin occurs in any of right and left drive wheels. |
| Vehicle behavior in control | If the accelerator is kept depressing during wheel spin, the engine revolution and vehicle speed are limited to a certain degree.                                                                    |
| Normal return condition     | Wheel spin convergence returns the control to the normal control.                                                                                                                                    |

### TORQUE IS REDUCED WHEN DRIVING WITH THE REVERSE GEAR

|                             |                                                                                                |
|-----------------------------|------------------------------------------------------------------------------------------------|
| Control                     | Engine output is controlled according to a vehicle speed while reversing the vehicle.          |
| Vehicle behavior in control | Power performance may be lowered while reversing the vehicle.                                  |
| Normal return condition     | Torque returns to normal by positioning the selector lever in a range other than "R" position. |

### CONTROL WHEN FLUID TEMPERATURE IS HIGH

|                             |                                                                                                                                                                                |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Control                     | When the CVT fluid temperature is high, the gear shift permission maximum revolution and the maximum torque are reduced than usual to prevent increase of the oil temperature. |
| Vehicle behavior in control | Power performance may be lowered, compared to normal control.                                                                                                                  |
| Normal return condition     | The control returns to the normal control when CVT fluid temperature is lowered.                                                                                               |

### REVERSE PROHIBIT CONTROL

|                             |                                                                                                                                                                               |
|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Control                     | The reverse brake is controlled to avoid becoming engaged when the selector lever is set in "R" position while driving in forward direction at more than the specified speed. |
| Vehicle behavior in control | If the selector lever is put at "R" position when driving with the forward gear, the gear becomes neutral, not reverse.                                                       |
| Normal return condition     | The control returns to normal control when the vehicle is driven at low speeds. (The reverse brake becomes engaged.)                                                          |

## DTC Inspection Priority Chart

INFOID:000000011682751

If multiple malfunction codes are detected at the same time, check each code according to the DTC check priority list below.

| Priority | DTC   | Items<br>(CONSULT screen terms) | Reference                                 |
|----------|-------|---------------------------------|-------------------------------------------|
| 1        | P0863 | CONTROL UNIT (CAN)              | <a href="#">TM-502, "DTC Logic"</a>       |
|          | U0073 | COMM BUS A OFF                  | <a href="#">TM-440, "DTC Logic"</a>       |
|          | U0100 | LOST COMM (ECM A)               | <a href="#">TM-441, "DTC Logic"</a>       |
|          | U0102 | LOST COMM (TRANSFER)            | <a href="#">TM-442, "DTC Logic"</a>       |
|          | U0140 | LOST COMM (BCM)                 | <a href="#">TM-443, "DTC Logic"</a>       |
|          | U0141 | LOST COMM (BCM A)               | <a href="#">TM-444, "DTC Logic"</a>       |
|          | U0155 | LOST COMM (IPC)                 | <a href="#">TM-445, "DTC Logic"</a>       |
|          | U0164 | LOST COMM (HVAC)                | <a href="#">TM-446, "DTC Logic"</a>       |
|          | U0300 | CAN COMM DATA                   | <a href="#">TM-447, "DTC Logic"</a>       |
|          | U1000 | CAN COMM CIRCUIT                | <a href="#">TM-448, "DTC Logic"</a>       |
|          | U1117 | LOST COMM (ABS)                 | <a href="#">TM-449, "DTC Logic"</a>       |
| 2        | P0740 | TORQUE CONVERTER                | <a href="#">TM-474, "DTC Logic"</a>       |
|          | P0743 | TORQUE CONVERTER                | <a href="#">TM-476, "DTC Logic"</a>       |
|          | P0778 | PC SOLENOID B                   | <a href="#">TM-484, "DTC Logic"</a>       |
|          | P0779 | PC SOLENOID B                   | <a href="#">TM-485, "DTC Logic"</a>       |
|          | P0962 | PC SOLENOID A                   | <a href="#">TM-505, "DTC Logic"</a>       |
|          | P0963 | PC SOLENOID A                   | <a href="#">TM-507, "DTC Logic"</a>       |
|          | P0966 | PC SOLENOID B                   | <a href="#">TM-511, "DTC Logic"</a>       |
|          | P0967 | PC SOLENOID B                   | <a href="#">TM-513, "DTC Logic"</a>       |
|          | P2814 | SELECT SOLENOID                 | <a href="#">TM-521, "DTC Logic"</a>       |
|          | P2815 | SELECT SOLENOID                 | <a href="#">TM-523, "DTC Logic"</a>       |
| 3        | P062F | EEPROM                          | <a href="#">TM-450, "DTC Logic"</a>       |
|          | P0705 | T/M RANGE SENSOR A              | <a href="#">TM-451, "DTC Logic"</a>       |
|          | P0706 | T/M RANGE SENSOR A              | <a href="#">TM-456, "DTC Logic"</a>       |
|          | P0711 | FLUID TEMP SENSOR A             | <a href="#">TM-459, "DTC Description"</a> |
|          | P0712 | FLUID TEMP SENSOR A             | <a href="#">TM-464, "DTC Logic"</a>       |
|          | P0713 | FLUID TEMP SENSOR A             | <a href="#">TM-466, "DTC Logic"</a>       |
|          | P0715 | INPUT SPEED SENSOR A            | <a href="#">TM-468, "DTC Logic"</a>       |
|          | P0717 | INPUT SPEED SENSOR A            | <a href="#">TM-471, "DTC Logic"</a>       |
|          | P0826 | UP/DOWN SHIFT SWITCH            | <a href="#">TM-487, "DTC Logic"</a>       |
|          | P0841 | FLUID PRESS SEN/SW A            | <a href="#">TM-493, "DTC Logic"</a>       |
|          | P0847 | FLUID PRESS SEN/SW B            | <a href="#">TM-494, "DTC Logic"</a>       |
|          | P0848 | FLUID PRESS SEN/SW B            | <a href="#">TM-496, "DTC Logic"</a>       |
|          | P084C | FLUID PRESS SEN/SW H            | <a href="#">TM-498, "DTC Logic"</a>       |
|          | P084D | FLUID PRESS SEN/SW H            | <a href="#">TM-500, "DTC Logic"</a>       |
|          | P0890 | TCM                             | <a href="#">TM-503, "DTC Logic"</a>       |
|          | P2765 | INPUT SPEED SENSOR B            | <a href="#">TM-515, "DTC Logic"</a>       |

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10D]

| Priority | DTC   | Items<br>(CONSULT screen terms) | Reference                           |
|----------|-------|---------------------------------|-------------------------------------|
| 4        | P0744 | TORQUE CONVERTER                | <a href="#">TM-478, "DTC Logic"</a> |
|          | P0746 | PC SOLENOID A                   | <a href="#">TM-480, "DTC Logic"</a> |
|          | P0776 | PC SOLENOID B                   | <a href="#">TM-482, "DTC Logic"</a> |
|          | P0965 | PC SOLENOID B                   | <a href="#">TM-509, "DTC Logic"</a> |
|          | P2813 | SELECT SOLENOID                 | <a href="#">TM-519, "DTC Logic"</a> |

## DTC Index

INFOID:0000000011682752

### NOTE:

- If multiple malfunction codes are detected at the same time, check each code according to the "DTC check priority list". Refer to [TM-410, "DTC Inspection Priority Chart"](#).
- The ignition counter is displayed in "FFD". Refer to [TM-394, "CONSULT Function"](#).

| DTC*1, *2 |                           | Items<br>(CONSULT screen terms) | Trip | MIL*3 | Perma-<br>nent DTC<br>group*4 | Reference              |
|-----------|---------------------------|---------------------------------|------|-------|-------------------------------|------------------------|
| GST       | CONSULT<br>(TRANSMISSION) |                                 |      |       |                               |                        |
| P062F     | P062F                     | EEPROM                          | 1    | ON    | B                             | <a href="#">TM-450</a> |
| P0705     | P0705                     | T/M RANGE SENSOR A              | 2    | ON    | B                             | <a href="#">TM-451</a> |
| P0706     | P0706                     | T/M RANGE SENSOR A              | 2    | ON    | B                             | <a href="#">TM-456</a> |
| P0711     | P0711                     | FLUID TEMP SENSOR A             | 2    | ON    | A                             | <a href="#">TM-459</a> |
| P0712     | P0712                     | FLUID TEMP SENSOR A             | 2    | ON    | B                             | <a href="#">TM-464</a> |
| P0713     | P0713                     | FLUID TEMP SENSOR A             | 2    | ON    | B                             | <a href="#">TM-466</a> |
| P0715     | P0715                     | INPUT SPEED SENSOR A            | 2    | ON    | B                             | <a href="#">TM-468</a> |
| P0717     | P0717                     | INPUT SPEED SENSOR A            | 2    | ON    | B                             | <a href="#">TM-471</a> |
| P0740     | P0740                     | TORQUE CONVERTER                | 2    | ON    | B                             | <a href="#">TM-474</a> |
| P0743     | P0743                     | TORQUE CONVERTER                | 2    | ON    | B                             | <a href="#">TM-476</a> |
| P0744     | P0744                     | TORQUE CONVERTER                | 2    | ON    | B                             | <a href="#">TM-478</a> |
| P0746     | P0746                     | PC SOLENOID A                   | 2    | ON    | B                             | <a href="#">TM-480</a> |
| P0776     | P0776                     | PC SOLENOID B                   | 2    | ON    | B                             | <a href="#">TM-482</a> |
| P0778     | P0778                     | PC SOLENOID B                   | 2    | ON    | B                             | <a href="#">TM-484</a> |
| P0779     | P0779                     | PC SOLENOID B                   | 2    | ON    | B                             | <a href="#">TM-485</a> |
| —         | P0826                     | UP/DOWN SHIFT SWITCH            | 1    | —     | B                             | <a href="#">TM-487</a> |
| P0841     | P0841                     | FLUID PRESS SEN/SW A            | 2    | ON    | B                             | <a href="#">TM-493</a> |
| P0847     | P0847                     | FLUID PRESS SEN/SW B            | 2    | ON    | B                             | <a href="#">TM-494</a> |
| P0848     | P0848                     | FLUID PRESS SEN/SW B            | 2    | ON    | B                             | <a href="#">TM-496</a> |
| P084C     | P084C                     | FLUID PRESS SEN/SW H            | 2    | ON    | B                             | <a href="#">TM-498</a> |
| P084D     | P084D                     | FLUID PRESS SEN/SW H            | 2    | ON    | B                             | <a href="#">TM-500</a> |
| P0863     | P0863                     | CONTROL UNIT (CAN)              | 1    | ON    | B                             | <a href="#">TM-502</a> |
| P0890     | P0890                     | TCM                             | 1    | ON    | B                             | <a href="#">TM-503</a> |
| P0962     | P0962                     | PC SOLENOID A                   | 2    | ON    | B                             | <a href="#">TM-505</a> |
| P0963     | P0963                     | PC SOLENOID A                   | 2    | ON    | B                             | <a href="#">TM-507</a> |
| P0965     | P0965                     | PC SOLENOID B                   | 2    | ON    | B                             | <a href="#">TM-509</a> |
| P0966     | P0966                     | PC SOLENOID B                   | 2    | ON    | B                             | <a href="#">TM-511</a> |
| P0967     | P0967                     | PC SOLENOID B                   | 2    | ON    | B                             | <a href="#">TM-513</a> |
| P2765     | P2765                     | INPUT SPEED SENSOR B            | 2    | ON    | B                             | <a href="#">TM-515</a> |
| P2813     | P2813                     | SELECT SOLENOID                 | 2    | ON    | B                             | <a href="#">TM-519</a> |

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10D]

| DTC*1, *2 |                           | Items<br>(CONSULT screen terms) | Trip | MIL *3 | Perma-<br>nent DTC<br>group*4 | Reference              |
|-----------|---------------------------|---------------------------------|------|--------|-------------------------------|------------------------|
| GST       | CONSULT<br>(TRANSMISSION) |                                 |      |        |                               |                        |
| P2814     | P2814                     | SELECT SOLENOID                 | 2    | ON     | B                             | <a href="#">TM-521</a> |
| P2815     | P2815                     | SELECT SOLENOID                 | 2    | ON     | B                             | <a href="#">TM-523</a> |
| U0073     | U0073                     | COMM BUS A OFF                  | 1    | ON     | B                             | <a href="#">TM-440</a> |
| U0100     | U0100                     | LOST COMM (ECM A)               | 1    | ON     | B                             | <a href="#">TM-441</a> |
| —         | U0102                     | LOST COMM (TRANSFER)            | 1    | —      | —                             | <a href="#">TM-442</a> |
| —         | U0140                     | LOST COMM (BCM)                 | 1    | —      | —                             | <a href="#">TM-443</a> |
| —         | U0141                     | LOST COMM (BCM A)               | 1    | —      | —                             | <a href="#">TM-444</a> |
| —         | U0155                     | LOST COMM (IPC)                 | 1    | —      | —                             | <a href="#">TM-445</a> |
| —         | U0164                     | LOST COMM (HVAC)                | 1    | —      | —                             | <a href="#">TM-446</a> |
| —         | U0300                     | CAN COMM DATA                   | 1    | —      | —                             | <a href="#">TM-447</a> |
| —         | U1000                     | CAN COMM CIRCUIT                | 1    | —      | —                             | <a href="#">TM-448</a> |
| —         | U1117                     | LOST COMM (ABS)                 | 1    | —      | —                             | <a href="#">TM-449</a> |

\*1: These numbers are specified by SAE J2012/ISO 15031-6.

\*2: The DTC number of the 1st trip is the same as the DTC number.

\*3: Refer to [TM-392, "DIAGNOSIS DESCRIPTION : Malfunction Indicator Lamp \(MIL\)"](#).

\*4: Refer to [TM-439, "Description"](#).




## WIRING DIAGRAM

## CVT CONTROL SYSTEM

## Wiring Diagram

INFOID:0000000011682753

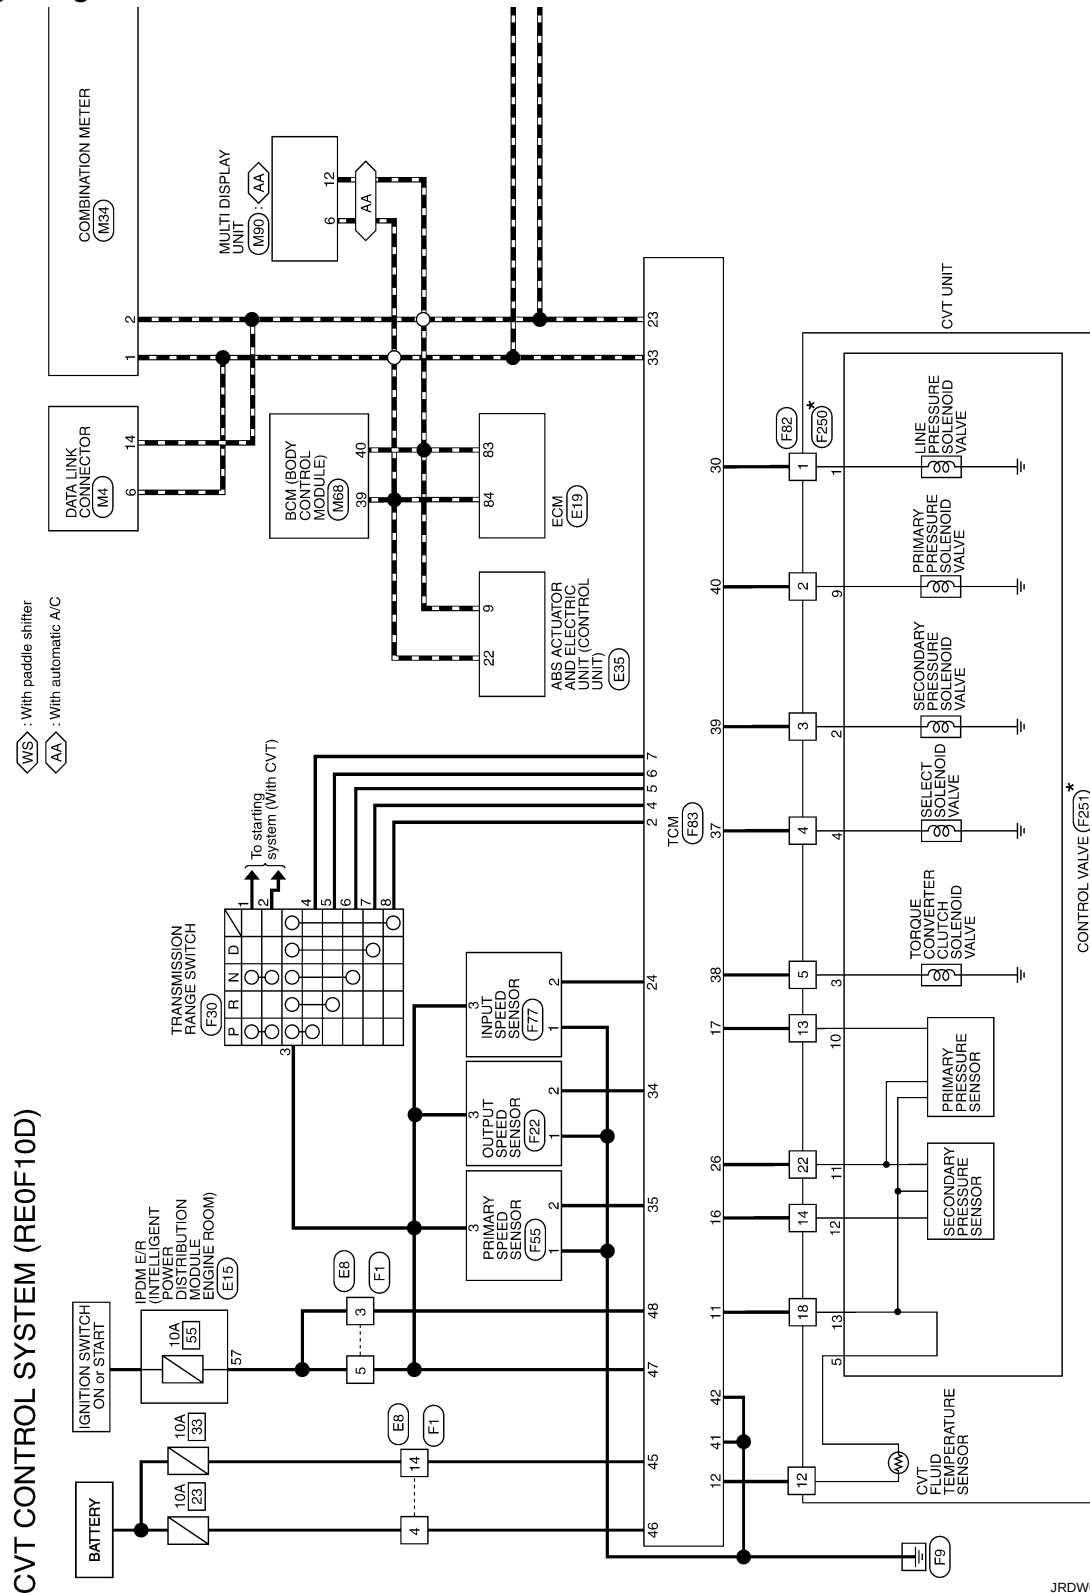

\*: This connector is not shown in "Harness Layout".


2014/09/22

JRDWC4472GB

CVT CONTROL SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10D]

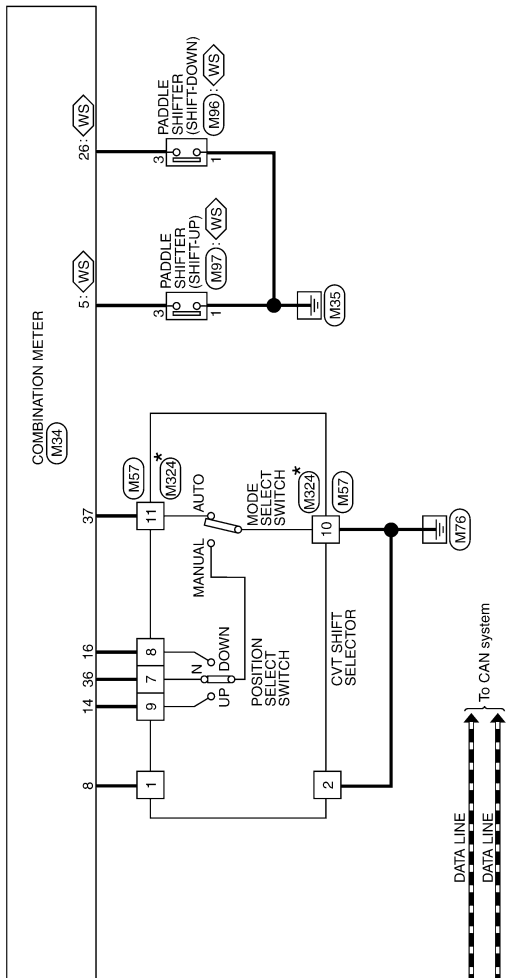

JRDWC4473GB


# CVT CONTROL SYSTEM
 
< WIRING DIAGRAM >

[CVT: RE0F10D]

## CVT CONTROL SYSTEM (RE0F10D)


|                |                   |
|----------------|-------------------|
| Connector No.  | E3                |
| Connector Name | WIRE TO WIRE      |
| Connector Type | S4438MB-RS10-SJ22 |



| Terminal No. | Color Of Wire | Signal Name [Specification]       |
|--------------|---------------|-----------------------------------|
| 1            | P             | -                                 |
| 2            | P             | -                                 |
| 3            | O             | -                                 |
| 4            | LG            | - [MR engine for NISMO RS]        |
| 5            | O             | - [MR engine except for NISMO RS] |
| 7            | BR            | -                                 |
| 10           | R             | -                                 |
| 11           | G             | - [MR engine except for NISMO RS] |
| 12           | G             | - [MR engine for NISMO RS]        |
| 13           | B             | - [MR engine except for NISMO RS] |
| 14           | L             | - [MR engine for NISMO RS]        |
| 15           | LG            | - [MR engine except for NISMO RS] |
| 16           | GR            | -                                 |
| 17           | GR            | -                                 |
| 18           | W             | -                                 |
| 19           | L/B           | -                                 |
| 20           | L/W           | -                                 |
| 21           | G             | -                                 |
| 22           | G             | - [MR engine for NISMO RS]        |
| 23           | B             | - [MR engine except for NISMO RS] |
| 24           | P             | - [MR engine for NISMO RS]        |
| 25           | R             | -                                 |
| 26           | B             | -                                 |
| 27           | B             | -                                 |
| 28           | LG            | -                                 |
| 29           | SB            | -                                 |
| 30           | P             | - [MR engine except for NISMO RS] |
| 31           | G             | - [MR engine for NISMO RS]        |

|    |    |                                   |
|----|----|-----------------------------------|
| 32 | Y  | -                                 |
| 33 | BR | -                                 |
| 34 | P  | - [MR engine except for NISMO RS] |
| 35 | W  | - [MR engine for NISMO RS]        |
| 37 | L  | - [Without Intelligent Key]       |
| 38 | LG | - [With Intelligent Key]          |
| 39 | B  | -                                 |
| 40 | P  | -                                 |
| 41 | V  | -                                 |
| 42 | L  | -                                 |
| 43 | BR | - [MR engine for NISMO RS]        |
| 44 | W  | - [MR engine except for NISMO RS] |
| 45 | GR | - [MR engine for NISMO RS]        |
| 46 | Y  | -                                 |
| 47 | SB | -                                 |
| 48 | LG | - [With Intelligent Key]          |
| 49 | Y  | - [Without Intelligent Key]       |

|                |                                                            |
|----------------|------------------------------------------------------------|
| Connector No.  | E15                                                        |
| Connector Name | FROM L/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM |
| Connector Type | NS16FW-C5                                                  |

 

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 48           | BR            | -                           |
| 49           | Y             | -                           |
| 50           | G             | -                           |
| 51           | L             | -                           |
| 52           | P             | -                           |
| 54           | P             | -                           |
| 55           | SB            | -                           |
| 56           | LG            | -                           |
| 58           | V             | -                           |
| 60           | SB            | -                           |
| 61           | LG            | -                           |

|                |                 |
|----------------|-----------------|
| Connector No.  | E19             |
| Connector Name | ECM             |
| Connector Type | RH24FB-R2E-L-LH |



| Terminal No. | Color Of Wire | Signal Name [Specification]         |
|--------------|---------------|-------------------------------------|
| 121          | L             | EVAP CONTROL SYSTEM PRESSURE SENSOR |
| 122          | L             | CAN COMMUNICATION LINE (CAN-L)      |
| 123          | P             | CAN COMMUNICATION LINE (CAN-H)      |
| 124          | L             | SENSOR POWER SUPPLY                 |
| 125          | G             | FUEL TANK TEMPERATURE SENSOR        |
| 126          | SB            | CLUTCH PEDAL POSITION SWITCH        |
| 132          | GR            | IGNITION SWITCH                     |
| 133          | LG            | ASCAD STEERING SWITCH               |
| 134          | P             | STOP LAMP SWITCH                    |
| 135          | B             | SENSOR GROUND                       |
| 139          | R             | STOP LAMP SWITCH                    |
| 140          | G             | EVAP CANISTER VENT CONTROL VALVE    |
| 141          | L             | ACCELERATOR PEDAL POSITION SENSOR 1 |
| 142          | W             | ACCELERATOR PEDAL POSITION SENSOR 2 |
| 143          | W             | SENSOR GROUND                       |
| 144          | Y             | POWER SUPPLY FOR ECM                |
| 145          | G             | ECM GROUND                          |
| 146          | V             | ECM GROUND                          |
| 147          | GR            | SENSOR GROUND                       |
| 148          | Y             | ECM GROUND                          |
| 149          | GR            | ACCELERATOR PEDAL POSITION SENSOR 1 |
| 150          | R             | ACCELERATOR PEDAL POSITION SENSOR 2 |
| 151          | GR            | SENSOR GROUND                       |
| 152          | GR            | ECM GROUND                          |

|                |                                               |
|----------------|-----------------------------------------------|
| Connector No.  | E35                                           |
| Connector Name | ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) |
| Connector Type | RH28EP-NL4-UH                                 |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | BAT (MTR)                   |
| 2            | W             | BAT (MTR)                   |
| 3            | B             | GND (SO)                    |
| 4            | B             | GND (MTR)                   |
| 5            | R             | VDC OFF SW                  |
| 6            | G             | ASCAD CANCEL SW             |
| 8            | R             | STOP LAMP SW                |
| 9            | P             | CAN-L                       |
| 11           | BR            | DP RR                       |
| 12           | W             | DS RR                       |
| 13           | G             | VCC                         |
| 14           | R             | SERIAL*                     |
| 15           | Y             | DS RR                       |
| 16           | V             | IDN                         |
| 17           | W             | REVERSE SIGNAL              |
| 21           | Y             | DP FL                       |
| 22           | L             | CAN-H                       |
| 23           | LG            | DP FL                       |
| 26           | G             | RR LH SENS VB               |
| 27           | BR            | DS FL                       |
| 28           | B             | GND                         |
| 29           | W             | SERIAL*                     |
| 30           | BE            | RRLH SENS SIG               |

JRDWC4474GB


# CVT CONTROL SYSTEM
 
< WIRING DIAGRAM >

[CVT: RE0F10D]

## CVT CONTROL SYSTEM (RE0F10D)

|                |                   |
|----------------|-------------------|
| Connector No.  | F71               |
| Connector Name | WIRE TO WIRE      |
| Connector Type | SAAS3FB-RS10-SL22 |



| Terminal No. | Color Of Wire | Signal Name [Specification]       |
|--------------|---------------|-----------------------------------|
| 1            | P             | —                                 |
| 2            | Y             | —                                 |
| 3            | W             | — [MR engine except for NISMO RS] |
| 4            | EG            | — [MR engine for NISMO RS]        |
| 5            | LG            | — [MR engine except for NISMO RS] |
| 7            | G             | —                                 |
| 10           | R             | — [MR engine except for NISMO RS] |
| 11           | G             | — [MR engine for NISMO RS]        |
| 12           | Y             | — [MR engine for NISMO RS]        |
| 13           | B             | — [MR engine except for NISMO RS] |
| 14           | EG            | — [MR engine for NISMO RS]        |
| 15           | V             | — [MR engine except for NISMO RS] |
| 16           | P             | —                                 |
| 17           | SB            | —                                 |
| 18           | G             | —                                 |
| 19           | G             | —                                 |
| 20           | BR            | —                                 |
| 21           | G             | —                                 |
| 22           | BR            | — [MR engine for NISMO RS]        |
| 23           | Y             | — [MR engine except for NISMO RS] |
| 24           | R             | —                                 |
| 25           | B             | —                                 |
| 26           | B             | —                                 |
| 27           | B             | —                                 |
| 28           | R             | —                                 |
| 29           | W             | —                                 |
| 30           | GR            | — [MR engine except for NISMO RS] |
| 31           | EG            | — [MR engine for NISMO RS]        |


|    |    |                                   |
|----|----|-----------------------------------|
| 32 | LG | —                                 |
| 33 | BR | —                                 |
| 34 | G  | — [MR engine for NISMO RS]        |
| 35 | W  | — [MR engine except for NISMO RS] |
| 37 | P  | — [Without Intelligent Key]       |
| 38 | GR | — [With Intelligent Key]          |
| 39 | GR | —                                 |
| 40 | P  | —                                 |
| 41 | BR | — [MR engine for NISMO RS]        |
| 42 | L  | — [MR engine except for NISMO RS] |
| 43 | W  | — [MR engine for NISMO RS]        |
| 44 | BR | — [MR engine except for NISMO RS] |
| 45 | G  | — [MR engine for NISMO RS]        |
| 46 | R  | —                                 |
| 47 | Y  | —                                 |
| 48 | GR | — [With Intelligent Key]          |
| 49 | Y  | — [Without Intelligent Key]       |

|                |                     |
|----------------|---------------------|
| Connector No.  | F22                 |
| Connector Name | OUTPUT SPEED SENSOR |
| Connector Type | RK03FB              |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2            | R             | —                           |
| 3            | LG            | —                           |

|                |                           |
|----------------|---------------------------|
| Connector No.  | F30                       |
| Connector Name | TRANSMISSION RANGE SWITCH |
| Connector Type | YD08FB-HS4                |

 

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | —                           |
| 2            | BR            | —                           |
| 3            | LG            | —                           |
| 4            | SB            | —                           |
| 5            | G             | —                           |
| 6            | LG            | —                           |
| 7            | W             | —                           |
| 8            | BR            | —                           |

|                |                      |
|----------------|----------------------|
| Connector No.  | F55                  |
| Connector Name | PRIMARY SPEED SENSOR |
| Connector Type | RK03FB               |



| Terminal No. | Color Of Wire | Signal Name [Specification]       |
|--------------|---------------|-----------------------------------|
| 1            | B             | — [MR engine except for NISMO RS] |
| 2            | Y             | — [MR engine for NISMO RS]        |
| 3            | LG            | —                                 |

|                |                    |
|----------------|--------------------|
| Connector No.  | F77                |
| Connector Name | INPUT SPEED SENSOR |
| Connector Type | RK03FB             |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | —                           |
| 2            | Y             | — SENSOR GND                |
| 3            | LG            | — TURBO SENSOR VGN          |

|                |          |
|----------------|----------|
| Connector No.  | F32      |
| Connector Name | CVT UNIT |
| Connector Type | RN22FGY  |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | Y             | —                           |
| 2            | W             | —                           |
| 3            | G             | —                           |
| 4            | L             | —                           |
| 5            | LG            | —                           |
| 12           | SB            | —                           |
| 13           | P             | —                           |
| 14           | P             | —                           |
| 18           | Y             | —                           |
| 22           | LG            | —                           |

JRDWC4475GB


# CVT CONTROL SYSTEM
 
< WIRING DIAGRAM >

[CVT: RE0F10D]

## CVT CONTROL SYSTEM (RE0F10D)

|                |                 |
|----------------|-----------------|
| Connector No.  | F23             |
| Connector Name | TCM             |
| Connector Type | RH40PB-R28-L-RH |



| Terminal No. | Color | Wire | Signal Name [Specification]            |
|--------------|-------|------|----------------------------------------|
| 2            | BR    | -    | D RANGE SW                             |
| 3            | Y     | -    | N RANGE SW                             |
| 5            | LG    | -    | R RANGE SW                             |
| 6            | G     | -    | P RANGE SW                             |
| 7            | SB    | -    | SENSOR GROUND                          |
| 11           | Y     | -    | CVT FLUID TEMPERATURE SENSOR           |
| 12           | SB    | -    | SECONDARY PRESSURE SENSOR              |
| 16           | P     | -    | PRIMARY PRESSURE SENSOR                |
| 17           | P     | -    | CAN-L                                  |
| 23           | P     | -    | INPUT SPEED SENSOR                     |
| 24           | V     | -    | SENSOR POWER SUPPLY                    |
| 26           | LG    | -    | LINE PRESSURE SOLENOID VALVE           |
| 30           | Y     | -    | CAN-H                                  |
| 33           | L     | -    | OUTPUT SPEED SENSOR                    |
| 34           | R     | -    | PRIMARY PRESSURE SENSOR                |
| 35           | RG    | -    | SELECT SOLENOID VALVE                  |
| 37           | LG    | -    | TORQUE CONVERTER CLUTCH SOLENOID VALVE |
| 38           | G     | -    | SECONDARY PRESSURE SOLENOID VALVE      |
| 39           | G     | -    | PRIMARY PRESSURE SOLENOID VALVE        |
| 40           | W     | -    | GROUND                                 |
| 41           | B     | -    | GROUND                                 |
| 42           | B     | -    | BATTERY POWER SUPPLY                   |
| 45           | V     | -    | BATTERY POWER SUPPLY                   |
| 46           | GR    | -    | IGNITION POWER SUPPLY                  |
| 47           | LG    | -    | IGNITION POWER SUPPLY                  |
| 48           | W     | -    | IGNITION POWER SUPPLY                  |

|                |           |
|----------------|-----------|
| Connector No.  | F250      |
| Connector Name | CVT UNIT  |
| Connector Type | RK22MGY-X |




| Terminal No. | Color | Wire | Signal Name [Specification] |
|--------------|-------|------|-----------------------------|
| 1            | -     | -    | -                           |
| 2            | -     | -    | -                           |
| 3            | -     | -    | -                           |
| 4            | -     | -    | -                           |
| 5            | -     | -    | -                           |
| 12           | -     | -    | -                           |
| 13           | -     | -    | -                           |
| 14           | -     | -    | -                           |
| 18           | -     | -    | -                           |
| 22           | -     | -    | -                           |

|                |               |
|----------------|---------------|
| Connector No.  | F251          |
| Connector Name | CONTROL VALVE |
| Connector Type | RP16GY        |



| Terminal No. | Color | Wire | Signal Name [Specification] |
|--------------|-------|------|-----------------------------|
| 1            | GV    | -    | -                           |
| 2            | BR    | -    | -                           |
| 3            | Y     | -    | -                           |
| 4            | P     | -    | -                           |
| 5            | B     | -    | -                           |
| 8            | O     | -    | -                           |
| 10           | L     | -    | -                           |
| 11           | W     | -    | -                           |
| 12           | R     | -    | -                           |
| 13           | B/Y   | -    | -                           |

|                |                     |
|----------------|---------------------|
| Connector No.  | IM4                 |
| Connector Name | DATA LINK CONNECTOR |
| Connector Type | BD16FW              |

 

| Terminal No. | Color | Wire | Signal Name [Specification] |
|--------------|-------|------|-----------------------------|
| 4            | B     | -    | -                           |
| 5            | B     | -    | -                           |
| 6            | B     | -    | -                           |
| 7            | W     | -    | -                           |
| 8            | LG    | -    | -                           |
| 14           | P     | -    | -                           |
| 16           | Y     | -    | -                           |


|                |                   |
|----------------|-------------------|
| Connector No.  | IM34              |
| Connector Name | COMBINATION METER |
| Connector Type | TH40FW-NH         |



| Terminal No. | Color | Wire | Signal Name [Specification]                  |
|--------------|-------|------|----------------------------------------------|
| 1            | L     | -    | CAN-H                                        |
| 2            | P     | -    | VEHICLE SPEED SIGNAL (8-PULSE)               |
| 4            | Y     | -    | PADDLE SHIFTER UP SWITCH SIGNAL              |
| 5            | G     | -    | FUEL LEVEL SENSOR SIGNAL                     |
| 6            | BR    | -    | APR BAG SIGNAL                               |
| 7            | R     | -    | SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE) |
| 8            | W     | -    | PARKING BRAKE SWITCH SIGNAL                  |
| 9            | SB    | -    | ILLUMINATION CONTROL SIGNAL                  |
| 10           | L     | -    | BRAKE FLUID LEVEL SWITCH SIGNAL              |
| 11           | G     | -    | ILLUMINATION CONTROL SIGNAL                  |
| 13           | GR    | -    | MANUAL MODE SHIFT UP SIGNAL                  |
| 14           | R     | -    | ACC POWER SUPPLY                             |
| 15           | L     | -    | ACC POWER SUPPLY                             |

|    |    |                                          |
|----|----|------------------------------------------|
| 16 | W  | MANUAL MODE SHIFT DOWN SIGNAL            |
| 17 | G  | WASHER FLUID LEVEL SIGNAL                |
| 18 | B  | SECURITY SIGNAL                          |
| 19 | GR | AMBIENT SENSOR SIGNAL                    |
| 20 | R  | AMBIENT SENSOR GROUND                    |
| 21 | B  | GROUND                                   |
| 22 | B  | GROUND                                   |
| 23 | B  | FUEL LEVEL SENSOR GROUND                 |
| 24 | L  | VDC GROUND                               |
| 25 | B  | PADDLE SHIFTER DOWN SWITCH SIGNAL        |
| 26 | V  | BATTERY POWER SUPPLY                     |
| 27 | LG | IGNITION SIGNAL                          |
| 28 | GR | PASSENGER SEAT BELT WARNING SIGNAL       |
| 29 | V  | A/G AUTO AMP CONNECTION/REGULATOR SIGNAL |
| 31 | P  | NON-MANUAL MODE SIGNAL                   |
| 32 | Y  | ALTERNATOR SIGNAL                        |
| 33 | G  | ALTERNATOR SIGNAL                        |
| 37 | G  | ALTERNATOR SIGNAL                        |
| 38 | P  | ALTERNATOR SIGNAL                        |

|                |                    |
|----------------|--------------------|
| Connector No.  | IM57               |
| Connector Name | CVT SHIFT SELECTOR |
| Connector Type | TH16FW-NH          |

 

| Terminal No. | Color | Wire | Signal Name [Specification] |
|--------------|-------|------|-----------------------------|
| 1            | P     | -    | -                           |
| 2            | B     | -    | -                           |
| 3            | BR    | -    | -                           |
| 4            | B     | -    | -                           |
| 5            | V     | -    | -                           |
| 6            | GR    | -    | -                           |
| 7            | Y     | -    | -                           |
| 8            | W     | -    | -                           |
| 9            | R     | -    | -                           |
| 10           | G     | -    | -                           |
| 11           | G     | -    | -                           |
| 12           | SB    | -    | -                           |
| 13           | G     | -    | -                           |

JRDWC4476GB


CVT CONTROL SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10D]

CVT CONTROL SYSTEM (RE0F10D)

|                |                           |
|----------------|---------------------------|
| Connector No.  | M88                       |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH409B-NH                 |

 

| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | Y             | COMBI SW INPUT 5            |
| 2            | GR            | COMBI SW INPUT 4            |
| 4            | BR            | COMBI SW INPUT 3            |
| 5            | G             | COMBI SW INPUT 2            |
| 6            | W             | COMBI SW INPUT 1            |
| 7            | L             | KEY CYL UNLOCK SW           |
| 8            | R             | KEY CYL LOCK SW             |
| 9            | R             | STOP LAMP SW 1              |
| 10           | W             | -                           |
| 12           | GR            | DOOR LK & UNLK SW LOCK      |
| 13           | BR            | DOOR LK & UNLK SW UNLOCK    |
| 14           | SB            | OPTICAL SENS                |
| 15           | W             | REAR WINDOW DEF SW          |
| 17           | Y             | OPTICAL SENS PRR SHLY       |
| 18           | V             | REAR WINDOW DEF SW          |
| 23           | P             | SECURITY IND LAMP CONT      |
| 24           | SB            | DOUBLE LINK                 |
| 25           | LG            | NATS ANT AMP                |
| 26           | BR            | THERMC AMP                  |
| 27           | Y             | A/C SW                      |
| 28           | LG            | BLOWER FAN SW               |
| 29           | SB            | HAZARD SW                   |
| 30           | L             | BK DOOR OPENER SW           |
| 31           | GR            | DR DOOR UNLK SENS           |
| 32           | LG            | COMBI SW OUTPUT 5           |
| 33           | Y             | COMBI SW OUTPUT 4           |
| 34           | V             | COMBI SW OUTPUT 3           |
| 35           | W             | COMBI SW OUTPUT 2           |
| 36           | P             | COMBI SW OUTPUT 1           |
| 37           | G             | DEFANT SW                   |
| 38           | SB            | RECEIVER COMM               |
| 39           | L             | CAN-H                       |
| 40           | P             | CAN-L                       |

|                |                    |
|----------------|--------------------|
| Connector No.  | M89                |
| Connector Name | MULTI DISPLAY UNIT |
| Connector Type | TH12FW-NH          |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | V             | BATTERY POWER SUPPLY        |
| 2            | V             | ILLUMINA TOL SIGNAL         |
| 5            | GR            | ILLUMINATION SIGNAL GROUND  |
| 6            | L             | CAN-H                       |
| 7            | LG            | IGNITION SIGNAL             |
| 10           | B             | GND                         |
| 11           | B             | GND                         |
| 12           | P             | CAN-L                       |

|                |                             |
|----------------|-----------------------------|
| Connector No.  | M88                         |
| Connector Name | PADDLE SHIFTER (SHIFT-DOWN) |
| Connector Type | JA3FW                       |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | B             | -                           |
| 3            | V             | -                           |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M87                       |
| Connector Name | PADDLE SHIFTER (SHIFT-UP) |
| Connector Type | JA4FW                     |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 3            | B             | -                           |
| 3            | G             | -                           |

|                |                    |
|----------------|--------------------|
| Connector No.  | M324               |
| Connector Name | CVT SHIFT SELECTOR |
| Connector Type | TH16MW-NH          |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | Y             | -                           |
| 2            | Y             | -                           |
| 3            | W             | -                           |
| 4            | P             | -                           |
| 5            | G             | -                           |
| 6            | G             | -                           |
| 7            | BR            | -                           |
| 8            | G             | -                           |
| 9            | GR            | -                           |
| 10           | L             | -                           |
| 12           | O             | -                           |
| 13           | LG            | -                           |

# CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >


[CVT: RE0F10D]

## CVT SHIFT LOCK SYSTEM

### Wiring Diagram

INFOID:0000000011682754

\*: This connector is not shown in "Harness Layout".

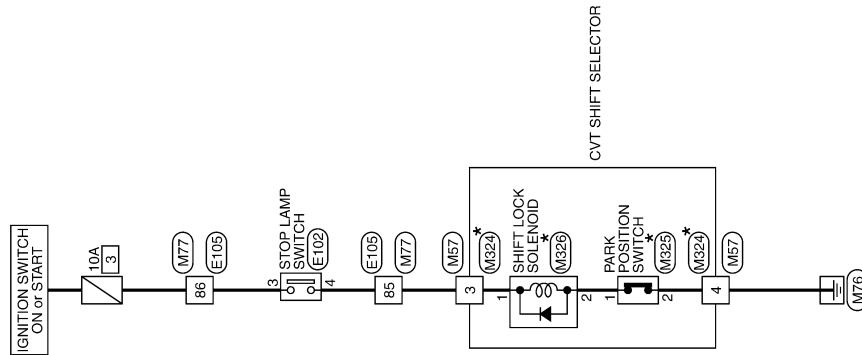

SHIFT LOCK SYSTEM

2014/09/22

JRDWC4478GB

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10D]

## SHIFT LOCK SYSTEM

|                |                  |
|----------------|------------------|
| Connector No.  | E102             |
| Connector Name | STOP LAMP SWITCH |
| Connector Type | M04FW-LC         |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | P             |                             |
| 2            | B             |                             |
| 3            | BR            |                             |
| 4            | V             |                             |

 
|                |                 |
|----------------|-----------------|
| Connector No.  | E105            |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH8DMP-CS16-TM4 |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | L             |                             |
| 4            | Y             |                             |
| 6            | P             |                             |
| 10           | R             |                             |
| 11           | W             |                             |
| 12           | B             |                             |
| 13           | R             |                             |
| 14           | SHIELD        |                             |
| 35           | BE            |                             |
| 36           | B             |                             |
| 37           | P             |                             |
| 52           | R             |                             |
| 53           | BR            |                             |
| 54           | V             |                             |

|     |        |  |
|-----|--------|--|
| 55  | BE     |  |
| 56  | G      |  |
| 58  | Y      |  |
| 62  | Y      |  |
| 63  | V      |  |
| 64  | LG     |  |
| 65  | L      |  |
| 66  | R      |  |
| 67  | W      |  |
| 68  | SB     |  |
| 70  | BR     |  |
| 71  | LG     |  |
| 72  | V      |  |
| 73  | L      |  |
| 74  | R      |  |
| 75  | B      |  |
| 76  | W      |  |
| 80  | L      |  |
| 83  | Y      |  |
| 84  | LG     |  |
| 85  | P      |  |
| 86  | BE     |  |
| 90  | SHIELD |  |
| 91  | G      |  |
| 92  | R      |  |
| 95  | BR     |  |
| 96  | P      |  |
| 97  | GR     |  |
| 98  | W      |  |
| 99  | V      |  |
| 100 | O      |  |

|                |                    |
|----------------|--------------------|
| Connector No.  | M57                |
| Connector Name | CVT SHIFT SELECTOR |
| Connector Type | TH16FW-NH          |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | P             |                             |
| 2            | B             |                             |
| 3            | BR            |                             |
| 4            | V             |                             |
| 5            | V             |                             |
| 6            | GR            |                             |
| 7            | Y             |                             |
| 8            | W             |                             |
| 9            | R             |                             |
| 10           | B             |                             |
| 11           | G             |                             |
| 12           | SB            |                             |
| 13           | G             |                             |

|                |                 |
|----------------|-----------------|
| Connector No.  | M77             |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH8DFW-CS16-TM4 |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | L             |                             |
| 4            | V             |                             |
| 6            | P             |                             |
| 10           | R             |                             |
| 11           | R             |                             |
| 12           | LG            |                             |
| 13           | V             |                             |
| 14           | SHIELD        |                             |
| 34           | LG            |                             |
| 35           | SB            |                             |
| 36           | B             |                             |
| 52           | R             |                             |
| 53           | L             |                             |
| 54           | SB            |                             |
| 55           | P             |                             |
| 56           | LG            |                             |
| 58           | LG            |                             |
| 59           | G             |                             |

|     |        |  |
|-----|--------|--|
| 63  | Y      |  |
| 64  | W      |  |
| 65  | G      |  |
| 66  | GR     |  |
| 67  | Y      |  |
| 68  | R      |  |
| 70  | V      |  |
| 71  | R      |  |
| 72  | GR     |  |
| 73  | G      |  |
| 76  | W      |  |
| 78  | LG     |  |
| 79  | V      |  |
| 80  | GR     |  |
| 82  | LG     |  |
| 84  | G      |  |
| 85  | BR     |  |
| 86  | LG     |  |
| 90  | SHIELD |  |
| 91  | Y      |  |
| 92  | BR     |  |
| 95  | Y      |  |
| 96  | L      |  |
| 97  | GR     |  |
| 98  | G      |  |
| 99  | R      |  |
| 100 | LG     |  |

|                |                    |
|----------------|--------------------|
| Connector No.  | M324               |
| Connector Name | CVT SHIFT SELECTOR |
| Connector Type | TH16MW-NH          |



| Terminal No. | Color Of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | Y             |                             |
| 2            | Y             |                             |
| 3            | W             |                             |
| 4            | P             |                             |
| 5            | G             |                             |

JRDWC4479GB




CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10D]

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

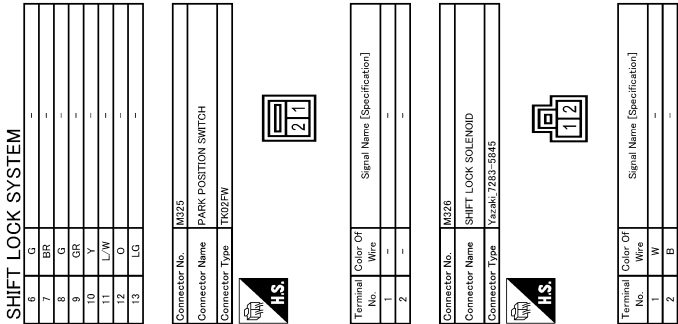

## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORK FLOW

#### Work Flow

INFOID:000000011682755

#### NOTE:

"DTC" includes DTC at the 1st trip.

#### 1.OBTAIN INFORMATION ABOUT SYMPTOM

Refer to [TM-423, "Diagnostic Work Sheet"](#) and interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred) as much as possible when the customer brings in the vehicle.

>> GO TO 2.

#### 2.CHECK DTC

1. Before checking the malfunction, check whether any DTC exists.
2. If DTC exists, perform the following operations.
  - Records the DTCs. (Print out using CONSULT and affix to the Work Order Sheet.)
  - Erase DTCs.
  - Check the relation between the cause found by DTC and the malfunction information from customer. [TM-532, "Symptom Table"](#) can be used effectively.
3. Check the relevant information including STI, etc.

##### Do malfunction information and DTC exists?

Malfunction information and DTC exists.>>GO TO 3.

Malfunction information exists but no DTC.>>GO TO 4.

No malfunction information, but DTC exists.>>GO TO 5.

#### 3.REPRODUCE MALFUCTION SYSTEM

Check the malfunction described by the customer on the vehicle.

Check if the behavior is fail safe or normal operation. Refer to [TM-406, "Fail-safe"](#).

Interview sheet can be used effectively when reproduce malfunction conditions. Refer to [TM-423, "Diagnostic Work Sheet"](#).

Verify the relationship between the symptom and the conditions in which the malfunction described by the customer occurs.

>> GO TO 5.

#### 4.REPRODUCE MALFUNCTION SYMPTOM

Check the malfunction described by the customer on the vehicle.

Check if the behavior is fail safe or normal operation. Refer to [TM-406, "Fail-safe"](#).

Interview sheet can be used effectively when reproduce malfunction conditions. Refer to [TM-423, "Diagnostic Work Sheet"](#).

Verify the relationship between the symptom and the conditions in which the malfunction described by the customer occurs.

>> GO TO 6.

#### 5.PERFORM "DTC CONFIRMATION PROCEDURE"

Perform "DTC CONFIRMATION PROCEDURE" of the appropriate DTC to check if DTC is detected again.

Refer to [TM-410, "DTC Inspection Priority Chart"](#) when multiple DTCs are detected, and then determine the order for performing the diagnosis.

##### Is any DTC detected?

YES >> GO TO 7.

NO >> Follow [GI-44, "Intermittent Incident"](#) to check.

#### 6.IDENTIFY MALFUNCTIONING SYSTEM WITH "DIAGNOSIS CHART BY SYMPTOM"

# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[CVT: RE0F10D]

Use [TM-532, "Symptom Table"](#) from the symptom inspection result in step 4. Then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 8.

## 7. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the detected malfunctioning parts.

Reconnect parts or connector after repairing or replacing, and then erase DTC if necessary.

>> GO TO 8.

## 8. FINAL CHECK

Perform "DTC CONFIRMATION PROCEDURE" again to make sure that the repair is correctly performed. Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 3 or 4.

Is DTC or malfunction symptom reproduced?

YES-1 (DTC is reproduced.)>>GO TO 5.

YES-2 (Malfunction is reproduced.)>>GO TO 6.

NO >> Before delivering the vehicle to the customer, make sure that DTC is erased.

## Diagnostic Work Sheet

INFOID:0000000011682756

### DESCRIPTION

There are many operating conditions that may cause a malfunction of the transmission parts. By understanding those conditions properly, a quick and exact diagnosis can be achieved.

In general, perception of a problem varies depending on individuals. Ask the customer about his/her concerns carefully. It is important to understand the phenomenon or status. To systemize all the information for the diagnosis, prepare the question sheet referring to the question points.

In some cases, multiple conditions that appear simultaneously may cause a DTC to be detected.

### KEY POINTS

**WHAT** ..... Vehicle & engine model  
**WHEN** ..... Date, Frequencies  
**WHERE**..... Road conditions  
**HOW** ..... Operating conditions,  
Weather conditions,  
Symptoms

SEF907L

### Worksheet Sample

| Question sheet          |       |                     |                                                                                                                                                                 |                           |      |           |
|-------------------------|-------|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|------|-----------|
| Customer's name         | MR/MS | Registration number |                                                                                                                                                                 | Initial year registration | Year | Month day |
|                         |       | Vehicle type        |                                                                                                                                                                 | Chassis No.               |      |           |
| Storage date            | Year  | Month day           | Engine                                                                                                                                                          | Mileage                   |      | km/mile   |
| Symptom                 |       |                     | <input type="checkbox"/> Vehicle does not start. ( <input type="checkbox"/> R position <input type="checkbox"/> D position <input type="checkbox"/> M position) |                           |      |           |
|                         |       |                     | <input type="checkbox"/> Upshifting does not occur. <input type="checkbox"/> Downshifting does not occur.                                                       |                           |      |           |
|                         |       |                     | <input type="checkbox"/> Lock-up malfunction                                                                                                                    |                           |      |           |
|                         |       |                     | <input type="checkbox"/> Shift point is too high. <input type="checkbox"/> Shift point is too low.                                                              |                           |      |           |
|                         |       |                     | <input type="checkbox"/> Shift shock ( <input type="checkbox"/> N⇒D <input type="checkbox"/> Lock-up <input type="checkbox"/> R, D, and M position)             |                           |      |           |
|                         |       |                     | <input type="checkbox"/> Slip ( <input type="checkbox"/> N⇒D <input type="checkbox"/> Lock-up <input type="checkbox"/> R, D, and M position)                    |                           |      |           |
|                         |       |                     | <input type="checkbox"/> Noise <input type="checkbox"/> Vibration                                                                                               |                           |      |           |
|                         |       |                     | When selector lever position is shifted, shift pattern does not change.                                                                                         |                           |      |           |
|                         |       |                     | <input type="checkbox"/> Other ( )                                                                                                                              |                           |      |           |
| First occurrence        |       |                     | <input type="checkbox"/> Recently (as from month of year )                                                                                                      |                           |      |           |
| Frequency of occurrence |       |                     | <input type="checkbox"/> Always <input type="checkbox"/> Under certain conditions <input type="checkbox"/> Sometimes ( time(s)/day)                             |                           |      |           |

# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[CVT: RE0F10D]

| Question sheet            |       |                                                                                                                                                                                                                                                                                                                                                              |        |                           |         |           |
|---------------------------|-------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|---------------------------|---------|-----------|
| Customer's name           | MR/MS | Registration number                                                                                                                                                                                                                                                                                                                                          |        | Initial year registration | Year    | Month day |
|                           |       | Vehicle type                                                                                                                                                                                                                                                                                                                                                 |        | Chassis No.               |         |           |
| Storage date              | Year  | Month day                                                                                                                                                                                                                                                                                                                                                    | Engine |                           | Mileage | km/mile   |
| Climate conditions        |       | Irrelevant                                                                                                                                                                                                                                                                                                                                                   |        |                           |         |           |
|                           |       | <input type="checkbox"/> Weather <input type="checkbox"/> Clear <input type="checkbox"/> Cloud <input type="checkbox"/> Rain <input type="checkbox"/> Snow <input type="checkbox"/> Others                 )                                                                                                                                                 |        |                           |         |           |
|                           |       | <input type="checkbox"/> Temperature <input type="checkbox"/> Hot <input type="checkbox"/> Warm <input type="checkbox"/> Cool <input type="checkbox"/> Cold <input type="checkbox"/> Temperature (Approx. °C/°F)                                                                                                                                             |        |                           |         |           |
|                           |       | <input type="checkbox"/> Relative humidity <input type="checkbox"/> High <input type="checkbox"/> Moderate <input type="checkbox"/> Low                                                                                                                                                                                                                      |        |                           |         |           |
| Transaxle condition       |       | <input type="checkbox"/> In cold-start <input type="checkbox"/> During warm-up (approx. °C/°F) <input type="checkbox"/> After warm-up <input type="checkbox"/> Engine speed: rpm                                                                                                                                                                             |        |                           |         |           |
| Road conditions           |       | <input type="checkbox"/> Urban area <input type="checkbox"/> Suburb area <input type="checkbox"/> Highway <input type="checkbox"/> Mountainous road (uphill or downhill)                                                                                                                                                                                     |        |                           |         |           |
| Operating condition, etc. |       | Irrelevant<br><input type="checkbox"/> When engine starts <input type="checkbox"/> During idling <input type="checkbox"/> During driving<br><input type="checkbox"/> During acceleration <input type="checkbox"/> At constant speed driving <input type="checkbox"/> During deceleration<br><input type="checkbox"/> During cornering (RH curve or LH curve) |        |                           |         |           |
| Other conditions          |       |                                                                                                                                                                                                                                                                                                                                                              |        |                           |         |           |

# ADDITIONAL SERVICE WHEN REPLACING TCM

< BASIC INSPECTION >

[CVT: RE0F10D]

## ADDITIONAL SERVICE WHEN REPLACING TCM

### Description

INFOID:0000000011682757

Always perform the following items when the TCM is replaced. For work procedure, refer to [TM-425, "Work Procedure"](#).

#### TCM PROGRAMMING

- Since vehicle specifications are not yet written in a new TCM, it is necessary to write them with CONSULT.

#### CAUTION:

**When replacing TCM, save TCM data on CONSULT before removing TCM.**

#### SAVING AND WRITING OF TCM DATA

- TCM performs accurate control by retrieving data (inherent characteristic value) of each solenoid. For this reason, it is necessary to save data of current TCM in CONSULT before replacing the TCM. After this, the saved data must be written in new TCM.

### Work Procedure

INFOID:0000000011682758

#### 1.CHECK NEW TCM PART NUMBER

Check new TCM part number to see whether it is blank TCM or not.

##### NOTE:

- Part number of blank TCM is 310F6-XXXXX.
- Check the part number when ordering TCM or with the one included in the label on the container box.

Is the new TCM a blank TCM?

YES >> GO TO 2.

NO >> GO TO 3.

#### 2.SAVING TCM DATA (VEHICLE SPECIFICATIONS)

 With CONSULT

1. Turn ignition switch OFF.
2. Turn ignition switch ON.
3. Select "Re/programming, Configuration".
4. Select "AT/CVT".

##### NOTE:

If "AT/CVT" is not displayed and TCM data cannot be saved on CONSULT, GO TO 3.

5. Select "Programming".
6. Save TCM data on CONSULT according to the CONSULT display.

>> GO TO 3.

#### 3.REPLACE TCM

1. Turn ignition switch OFF and wait for 10 seconds.
2. Replace TCM. Refer to [TM-547, "Removal and Installation"](#).

>> GO TO 4.

#### 4.LOAD CALIBRATION DATA

1. Shift the selector lever to the "P" position.
2. Turn ignition switch ON.
3. Check that "P" is displayed on shift position indicator on combination meter.

##### NOTE:

Displayed approximately 4 – 5 seconds after the selector lever is moved to the "P" position.

Does the shift position indicator display "P"?

YES >> GO TO 5.

NO >> GO TO 7.

#### 5.STORE CALIBRATION DATA

1. Turn ignition switch OFF and wait for 5 seconds.

## ADDITIONAL SERVICE WHEN REPLACING TCM

< BASIC INSPECTION >

[CVT: RE0F10D]

2. Turn ignition switch ON.

Does the shift position indicator display "P" at the same time when turning ON the ignition switch?

YES >> GO TO 6.

NO >> Check harness between battery and TCM harness connector terminal. Refer to [TM-503. "Diagnosis Procedure"](#).

### 6. WRITE TCM DATA (VEHICLE SPECIFICATIONS)

 With CONSULT

1. Select "Programming".
2. Perform programming according to the CONSULT display.

>> WORK END

### 7. DETECT MALFUNCTIONING ITEM

Check the following items:

- Harness between the TCM and the ROM assembly inside the transaxle assembly is open or shorted.
- Disconnected, loose, bent, collapsed, or otherwise abnormal connector housing terminals

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

# ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F10D]

## ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY

### Description

INFOID:0000000011682759

Perform the following work after the transaxle assembly is replaced. For work procedure, refer to [TM-427](#), "[Work Procedure](#)".

#### WRITING TCM DATA

- TCM performs accurate control by retrieving data (inherent characteristic value) of each solenoid. For this reason, after replacing transaxle assembly, it is necessary to write new data in TCM.

#### ERASING OF CVT FLUID DEGRADATION LEVEL DATA


- TCM records the degradation level of the CVT fluid calculated from the vehicle driving status. Therefore, if the transaxle assembly is replaced, it is necessary to erase the CVT fluid degradation level data recorded by TCM.

### Work Procedure

INFOID:0000000011682760

#### 1.CHECK THE SERIAL NUMBER

Write down the serial number of new transaxle assembly.

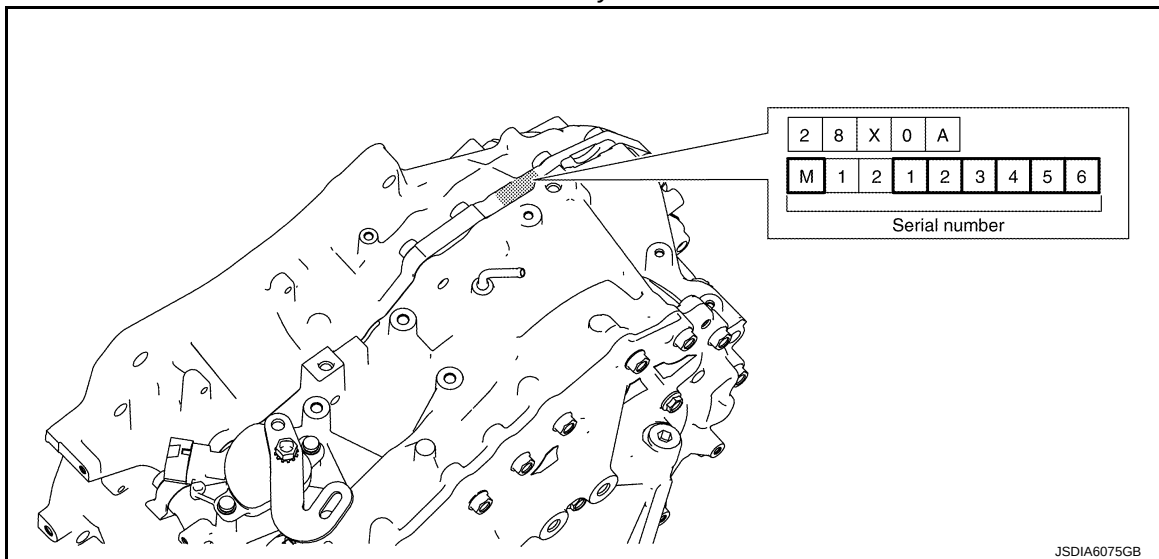

>> GO TO 2.

#### 2.WRITE TCM DATA (IP CHARACTERISTICS VALUE)

##### NOTE:

Write data of new solenoid in TCM according to the following instructions:

With CONSULT

##### CAUTION:

**When the work is interrupted, obtain data again from the supplied CD.**

1. Shift the selector lever to the P position.
2. Turn ignition switch OFF and wait for 10 seconds.
3. Turn ignition switch ON.
4. Insert the supplied CD into CONSULT.
5. Select "Work Support" in "TRANSMISSION".
6. Select "WRITE IP CHARA - REPLACEMENT AT/CVT".
7. Check that the serial number displayed on CONSULT screen and those written in the memo agree.
8. Write data in TCM according to the instructions on the CONSULT screen.

##### NOTE:

When writing is complete, the shift position indicator of the combination meter displays P.

>> GO TO 3.

## ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F10D]

---

### 3. ERASE CVT FLUID DEGRADATION LEVEL DATA

---

#### With CONSULT

1. Select "WORK SUPPORT" in "TRANSMISSION".
2. Select "CONFORM CVTF DETERIORATION".
3. Touch "Clear".

>> WORK END



# ADDITIONAL SERVICE WHEN REPLACING TCM AND TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F10D]

## ADDITIONAL SERVICE WHEN REPLACING TCM AND TRANSAXLE ASSEMBLY

### Description

INFOID:0000000011682761

When replacing TCM and transaxle assembly as a set, perform the following work. For work procedure, refer to [TM-429, "Work Procedure"](#).

#### TCM PROGRAMMING

- Since vehicle specifications are not yet written in a new TCM, it is necessary to write them with CONSULT.

#### CAUTION:

When replacing TCM, save TCM data on CONSULT before removing TCM.

#### WRITING TCM DATA

- TCM performs accurate control by retrieving data (inherent characteristic value) of each solenoid. For this reason, after replacing TCM and transaxle assembly, it is necessary to write new data in TCM.

### Work Procedure

INFOID:0000000011682762

#### 1. SAVE TCM DATA (VEHICLE SPECIFICATIONS)

##### With CONSULT

- Turn ignition switch OFF.
- Connect all of disconnected connectors.
- Turn ignition switch ON.
- Select "Re/programming, Configuration".
- Select "AT/CVT".

#### NOTE:

If "AT/CVT" is not displayed and TCM data cannot be saved on CONSULT, GO TO 2.

- Select "Programming".
- Save TCM data on CONSULT according to the CONSULT display.


>> GO TO 2.

#### 2. REPLACE TCM AND TRANSAXLE ASSEMBLY

- Turn ignition switch OFF and wait for 10 seconds.
- Replace TCM and transaxle assembly. Refer to [TM-547, "Removal and Installation"](#) (TCM), [TM-570, "Removal and Installation"](#) (Transaxle assembly).

#### CAUTION:

Write down the serial number of new transaxle assembly.

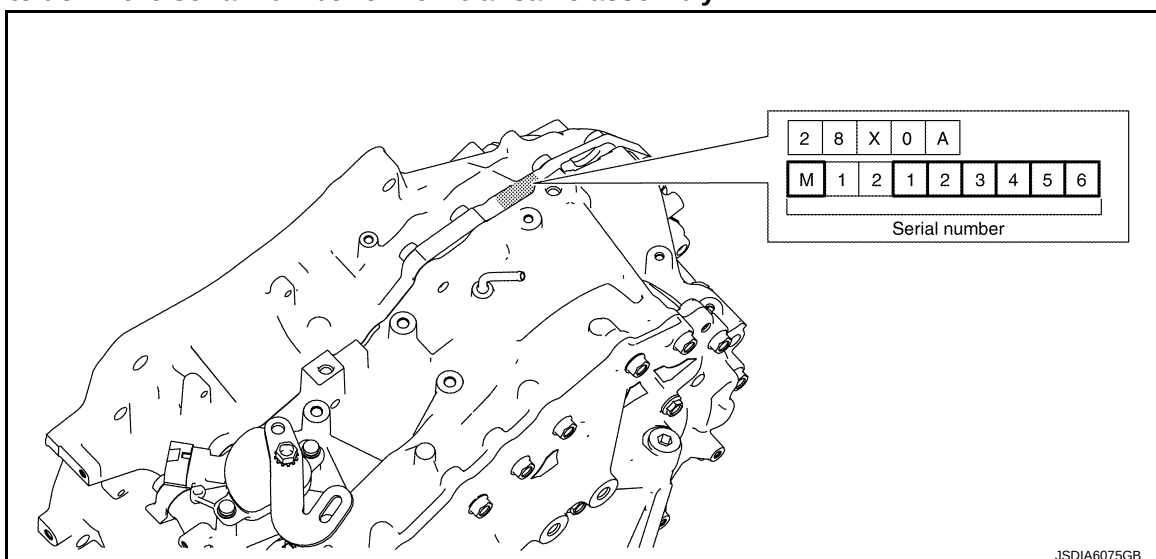

>> GO TO 3.

# ADDITIONAL SERVICE WHEN REPLACING TCM AND TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F10D]

---

## 3. WRITE TCM DATA (VEHICLE SPECIFICATIONS)

---

### NOTE:

Write data saved in CONSULT into a new TCM according to the following instructions:

#### With CONSULT

1. Select "Programming".
2. Perform programming according to the CONSULT display.

>> GO TO 4.

---

## 4. WRITE TCM DATA (IP CHARACTERISTICS VALUE)

---

### NOTE:

Write data of new solenoid in TCM according to the following instructions:

#### With CONSULT

#### CAUTION:

**When the work is interrupted, obtain data again from the supplied CD.**

1. Shift the selector lever to the P position.
2. Turn ignition switch OFF and wait for 10 seconds.
3. Turn ignition switch ON.
4. Insert the supplied CD into CONSULT.
5. Select "Work Support" in "TRANSMISSION".
6. Select "WRITE IP CHARA - REPLACEMENT AT/CVT".
7. Check that the serial number displayed on CONSULT screen and those written in the memo agree.
8. Write data in TCM according to the instructions on the CONSULT screen.

### NOTE:

When writing is complete, the shift position indicator of the combination meter displays P.

>> WORK END

## CVT FLUID COOLER SYSTEM

### Cleaning

INFOID:000000011740958

Whenever an automatic transaxle is repaired, overhauled, or replaced, the CVT fluid cooler mounted in the radiator must be inspected and cleaned.

Metal debris and friction material, if present, can be trapped or be deposited in the CVT fluid cooler. This debris can contaminate the newly serviced CVT or, in severe cases, can block or restrict the flow of CVT fluid. In either case, malfunction of the newly serviced CVT may occur.

Debris, if present, may deposit as CVT fluid enters the cooler inlet. It will be necessary to back flush the cooler through the cooler outlet in order to flush out any built up debris.


### CVT FLUID COOLER CLEANING PROCEDURE

1. Position an oil pan under the transaxle's inlet and outlet cooler hoses.
2. Identify the inlet and outlet fluid cooler hoses.
3. Disconnect the fluid cooler inlet and outlet rubber hoses from the steel cooler tubes or bypass valve.

**NOTE:**

Replace the cooler hoses if rubber material from the hose remains on the tube fitting.

4. Allow any CVT fluid that remains in the cooler hoses to drain into the oil pan.

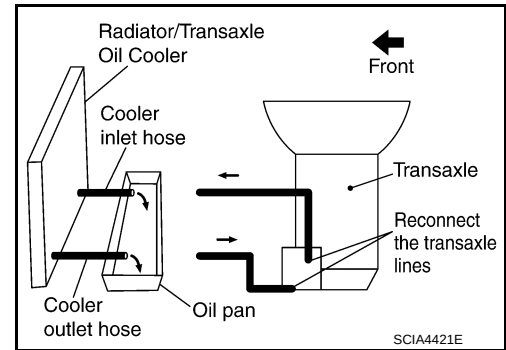


5. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

**CAUTION:**

- **Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.**
- **Spray Transmission Cooler Cleaner only with adequate ventilation.**
- **Avoid contact with eyes and skin.**
- **Never breath vapors or spray mist.**

6. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until CVT fluid flows out of the cooler inlet hose for 5 seconds.

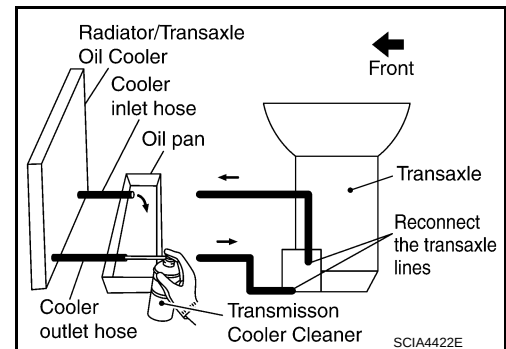

7. Insert the tip of an air gun into the end of the cooler outlet hose.
8. Wrap a shop rag around the air gun tip and end of the cooler outlet hose.

9. Blow compressed air regulated to 5 to 9 kg/cm<sup>2</sup> (70 to 130 psi) through the cooler outlet hose for 10 seconds to force out any remaining CVT fluid.

10. Repeat steps 5 through 9 three additional times.

11. Position an oil pan under the banjo bolts that connect the CVT fluid cooler steel lines to the transaxle.


12. Remove the banjo bolts.

13. Flush each steel line from the cooler side back toward the transaxle by spraying Transmission Cooler Cleaner in a continuous stream for 5 seconds.

14. Blow compressed air regulated to 5 to 9 kg/cm<sup>2</sup> (70 to 130 psi) through each steel line from the cooler side back toward the transaxle for 10 seconds to force out any remaining CVT fluid.

15. Ensure all debris is removed from the steel cooler lines.

16. Ensure all debris is removed from the banjo bolts and fittings.

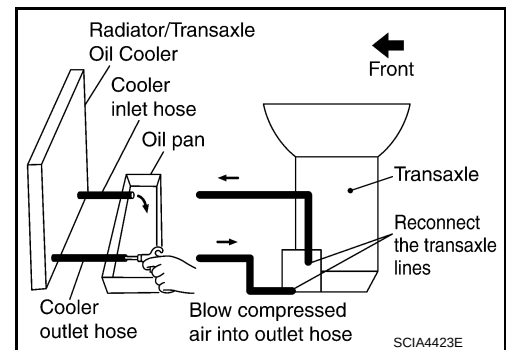

# CVT FLUID COOLER SYSTEM

< BASIC INSPECTION >

[CVT: RE0F10D]

17. Perform "CVT FLUID COOLER DIAGNOSIS PROCEDURE".

## CVT FLUID COOLER DIAGNOSIS PROCEDURE

### NOTE:

Insufficient cleaning of the cooler inlet hose exterior may lead to inaccurate debris identification.



1. Position an oil pan under the transaxle's inlet and outlet cooler hoses.
2. Clean the exterior and tip of the cooler inlet hose.

3. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.


### CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
- Spray Transmission Cooler Cleaner only with adequate ventilation.
- Avoid contact with eyes and skin.
- Never breath vapors or spray mist.

4. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until CVT fluid flows out of the cooler inlet hose for 5 seconds.
5. Tie a common white, basket-type coffee filter to the end of the cooler inlet hose.

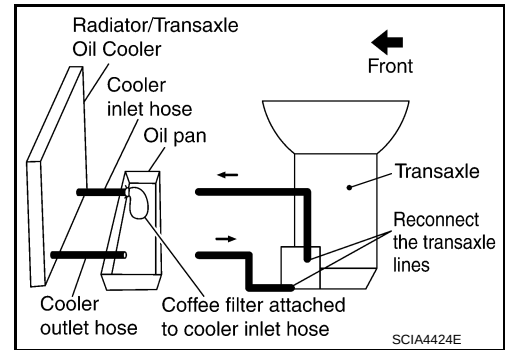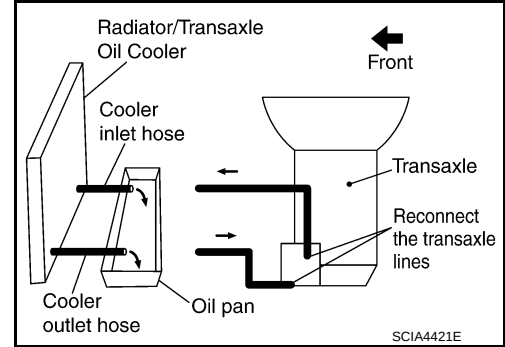


6. Insert the tip of an air gun into the end of the cooler outlet hose.
7. Wrap a shop rag around the air gun tip and end of cooler outlet hose.
8. Blow compressed air regulated to 5 to 9 kg/cm<sup>2</sup> (70 to 130 psi) through the cooler outlet hose to force any remaining CVT fluid into the coffee filter.
9. Remove the coffee filter from the end of the cooler inlet hose.
10. Perform "CVT FLUID COOLER INSPECTION PROCEDURE".

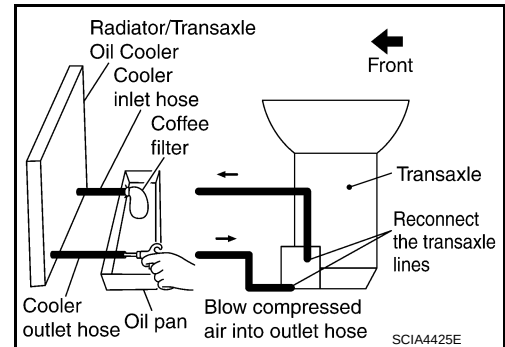

## CVT FLUID COOLER INSPECTION PROCEDURE

1. Inspect the coffee filter for debris.
  - a. If small metal debris less than 1 mm (0.040 in) in size or metal powder is found in the coffee filter, this is normal. If normal debris is found, the CVT fluid cooler/radiator can be reused and the procedure is ended.

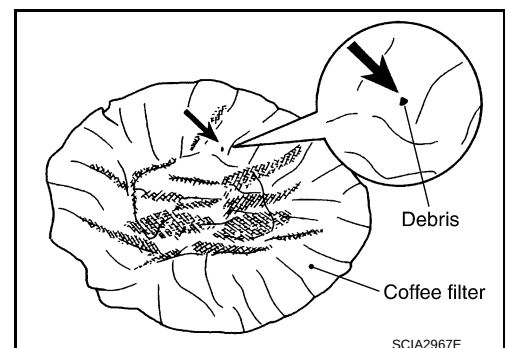


# CVT FLUID COOLER SYSTEM

## < BASIC INSPECTION >

[CVT: RE0F10D]

- b. If one or more pieces of debris are found that are over 1 mm (0.040 in) in size and/or peeled clutch facing material is found in the coffee filter, the fluid cooler is not serviceable. The radiator/ fluid cooler must be replaced and the inspection procedure is ended.

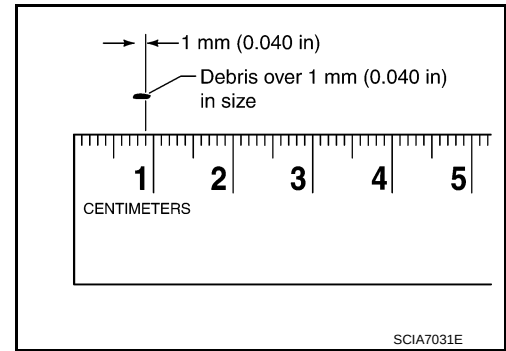

## CVT FLUID COOLER FINAL INSPECTION

After performing all procedures, ensure that all remaining oil is cleaned from all components.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STALL TEST

< BASIC INSPECTION >

[CVT: RE0F10D]

## STALL TEST

### Work Procedure

INFOID:0000000011682767

### INSPECTION

1. Check the engine oil level. Replenish if necessary. Refer to [LU-28, "Inspection"](#).
2. Check for leak of the CVT fluid. Refer to [TM-538, "Inspection"](#).
3. Drive for about 10 minutes to warm up the vehicle so that the CVT fluid temperature is 50 to 80°C (122 to 176°F).
4. Be sure to apply the parking brake and block the tires.
5. Start the engine, depress the brake pedal and put the selector lever to the D position.
6. While depressing the brake pedal, depress the accelerator pedal gradually.
7. Read the stall speed quickly. Then, release your foot from the accelerator pedal quickly.

#### CAUTION:

**Do not depress the accelerator pedal for 5 seconds or more during the test.**

**Stall speed** : Refer to [TM-577, "Stall Speed"](#).

8. Place the selector lever in the N position.
9. Cool the CVT fluid.
- CAUTION:**  
**Run the engine with the idle speed for at least 1 minute.**
10. Put the selector lever to the R position and perform Step 6 to Step 9 again.

### NARROWING-DOWN MALFUNCTIONING PARTS

|             | Selector lever position |   | Possible cause                                                                    |
|-------------|-------------------------|---|-----------------------------------------------------------------------------------|
|             | D                       | R |                                                                                   |
| Stall speed | H                       | O | • Forward clutch                                                                  |
|             | O                       | H | • Reverse brake                                                                   |
|             | L                       | L | • Engine<br>• Torque converter one way clutch                                     |
|             | H                       | H | • Line pressure is low.<br>• Primary pulley<br>• Secondary pulley<br>• Steel belt |

O: Within the stall speed standard value.

H: Stall speed is higher than the standard value.


L: Stall speed is lower than the standard value.

## CVT POSITION

## Inspection

INFOID:0000000011682768


1. Place selector lever in "P" position, and turn ignition switch ON (engine stop).
2. Make sure that selector lever can be shifted to other than "P" position when brake pedal is depressed. Also make sure that selector lever can be shifted from "P" position only when brake pedal is depressed.
3. Move the selector lever and check for excessive effort, sticking, noise or rattle.
4. Confirm the selector lever stops at each position with the feel of engagement when it is moved through all the positions. Check that the actual position of the selector lever matches the position shown by the shift position indicator and the manual lever on the transaxle.
5. The method of operating the selector lever to individual positions correctly should be as shown.
6. When selector button is pressed in "P", "R" or "N" position without applying forward/backward force to selector lever, check button operation for sticking.
7. Confirm the back-up lamps illuminate only when selector lever is placed in the "R" position. Confirm the back-up lamps do not illuminate when the selector lever is pushed toward the "R" position when in the "P" or "N" position.
8. Confirm the engine can only be started with the selector lever in the "P" and "N" positions.
9. Make sure transaxle is locked completely in "P" position.
10. When selector lever is set to manual shift gate, make sure that manual mode is displayed on combination meter.  
Shift selector lever to "+" and "-" sides, and check that set shift position changes.

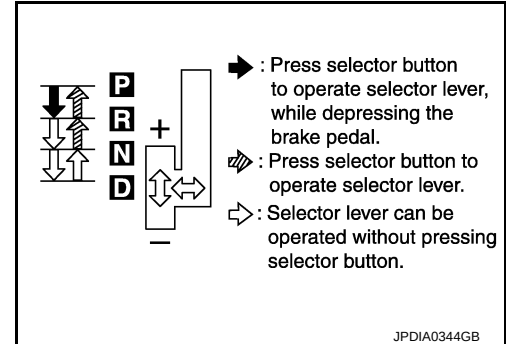

## Adjustment

INFOID:0000000011682769

1. Shift the selector lever to the "P" position.  
**CAUTION:**  
**Rotate the wheels at least a quarter turn and be certain the Park position mechanism is fully engaged.**
2. Loosen nut (A) and set manual lever (1) to the "P" position.  
**CAUTION:**  
**Never apply force to the manual lever.**
3. Tighten the nut to the specified torque. Refer to [TM-542](#).  
**CAUTION:**  
**In tightening, fix the manual lever.**

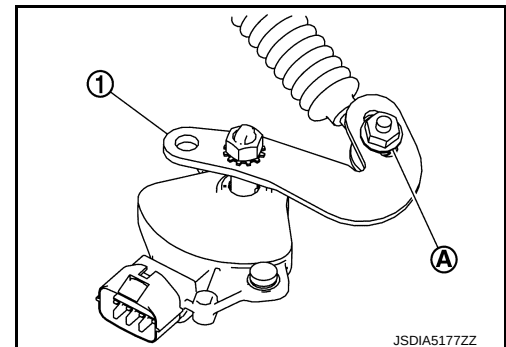

## CVT FLUID

## Replacement

INFOID:000000011682872

**Recommended fluid and fluid capacity** : Refer to [MA-11, "Fluids and Lubricants"](#).

**CAUTION:**

- Always use shop paper. Never use shop cloth.
- Replace a drain plug gasket with new ones at the final stage of the operation when installing.
- Use caution when looking into the drain hole as there is a risk of dripping fluid entering the eye.
- After replacement, always perform CVT fluid leakage check.

1. Select "Data Monitor" in "TRANSMISSION" using CONSULT.
2. Select "FLUID TEMP" and confirm that the CVT fluid temperature is 40°C (104°F) or less.
3. Check that the selector lever is in the "P" position, then completely engage the parking brake.
4. Lift up the vehicle.
5. Remove the drain plug and drain the CVT fluid from the oil pan. Refer to [TM-550, "Exploded View"](#).
6. Install the drain plug to oil pan.


**CAUTION:**

**Drain plug gasket use the old one.**

7. Remove the overflow plug (1) from converter housing.



: Vehicle front

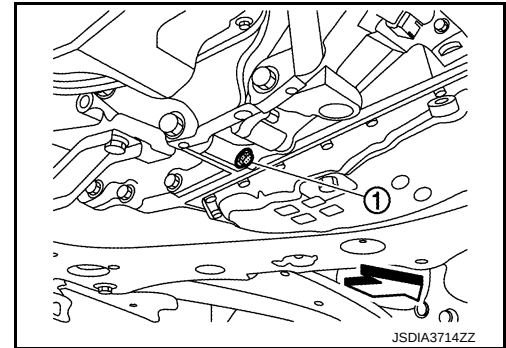

8. Install the charging pipe set (KV311039S0) (A) into the overflow plug hole.

**CAUTION:**

**Tighten the charging pipe by hand.**

9. Install the ATF changer hose (B) to the charging pipe.

**CAUTION:**

**Press the ATF changer hose all the way onto the charging pipe until it stops.**

10. Fill approximately 3 liter (2-5/8 Imp qt) of the CVT fluid.
11. Remove the ATF changer hose and charging pipe, then install the overflow plug.

**NOTE:**


Perform this work quickly because CVT fluid leaks.

12. Lift down the vehicle.
13. Start the engine.
14. While depressing the brake pedal, shift the selector lever to the entire position from "P" to "D", and shift it to the "P" position.

**NOTE:**

Hold the lever at each position for 5 seconds.

15. Check that the CONSULT "Data Monitor" in "FLUID TEMP" is 35°C (95°F) to 45°C (113°F).
16. Stop the engine.
17. Lift up the vehicle.
18. Remove the drain plug, and then drain CVT fluid from oil pan.
19. Repeat steps 6 to 18 (one time).

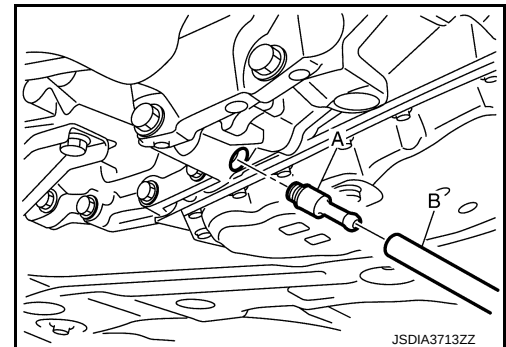



# CVT FLUID

< BASIC INSPECTION >

[CVT: RE0F10D]

20. Tighten the drain plug to the specified torque. Refer to [TM-550, "Exploded View"](#).
21. Remove the overflow plug.
22. Install the charging pipe set (KV311039S0) into the overflow plug hole.  
**CAUTION:**  
**Tighten the charging pipe by hand.**
23. Install the ATF changer hose to the charging pipe.  
**CAUTION:**  
**Press the ATF changer hose all the way onto the charging pipe until it stops.**
24. Fill approximately 3 liter (2-5/8 Imp qt) of the CVT fluid.
25. Remove the ATF changer hose and charging pipe, then install the overflow plug.  
**NOTE:**  
Perform this work quickly because CVT fluid leaks.
26. Lift down the vehicle.
27. Start the engine.
28. While depressing the brake pedal, shift the selector lever to the entire position from "P" to "D", and shift it to the "P" position.  
**NOTE:**  
Hold the lever at each position for 5 seconds.
29. Check that the CONSULT "Data Monitor" in "FLUID TEMP" is 35°C (95°F) to 45°C (113°F).
30. Lift up the vehicle.
31. Remove the overflow plug and confirm that the CVT fluid is drained from the overflow plug hole.  
**CAUTION:**  
**Perform this work with the vehicle idling.**  
**NOTE:**  
If the CVT fluid is not drained, refer to "Adjustment" and refill with the CVT fluid.
32. When the flow of CVT fluid slows to a drip, tighten the overflow plug to the specified torque. Refer to [TM-550, "Exploded View"](#).  
**CAUTION:**  
**Never reuse O-ring.**
33. Lift down the vehicle.
34. Select "Data Monitor" in "TRANSMISSION" using CONSULT.
35. Select "CONFORM CVTF DETERIORATION".
36. Select "Erase".
37. Stop the engine.

## Adjustment

INFOID:0000000011682873

**Recommended fluid and fluid capacity** : Refer to [MA-11, "Fluids and Lubricants"](#).

### CAUTION:

- During adjustment of the CVT fluid level, check CONSULT so that the oil temperature may be maintained from 35 to 45°C (95 to 113°F).
  - Maintain specified engine idle speed during CVT fluid level adjustment. Refer to [EC-1257, "Idle Speed"](#).
  - Use caution when looking into the drain hole as there is a risk of dripping fluid entering the eye.
1. Check that the selector lever is in the "P" position, then completely engage the parking brake.
  2. Start the engine.
  3. Adjust the CVT fluid temperature to be approximately 40°C (104°F).  
**NOTE:**  
The CVT fluid is largely affected by temperature. Therefore be sure to use CONSULT and check the "FLUID TEMP" under "TRANSMISSION" in "Data Monitor" while adjusting.
  4. While depressing the brake pedal, shift the selector lever to the entire position from "P" to "D", and shift it to the "P" position.  
**NOTE:**  
Hold the lever at each position for 5 seconds.


## CVT FLUID

### < BASIC INSPECTION >

[CVT: RE0F10D]

5. Lift up the vehicle.
6. Check that there is no CVT fluid leakage.
7. Remove the overflow plug (1) from converter housing.

← : Vehicle front

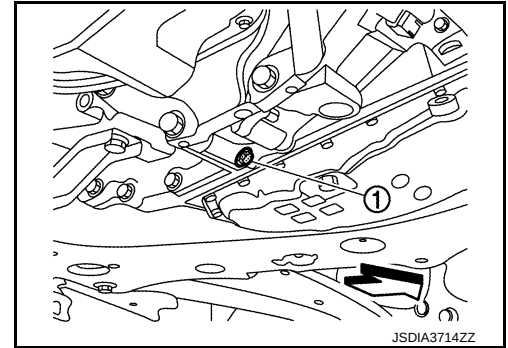

8. Install the charging pipe set (KV311039S0) (A) into the overflow plug hole.

**CAUTION:**

**Tighten the charging pipe by hand.**

9. Install the ATF changer hose (B) to the charging pipe.

**CAUTION:**

**Press the ATF changer hose all the way onto the charging pipe until it stops.**

10. Fill approximately 0.5 liter (1/2 Imp qt) of the CVT fluid.
11. Remove the ATF changer hose from the charging pipe, and check that the CVT fluid drains out from the charging pipe. If it does not drain out, perform charging again.

**CAUTION:**


**Perform this work with the vehicle idling.**

12. When the flow of CVT fluid slows to a drip, remove the charging pipe from the converter housing.
13. Tighten the overflow plug to the specified torque. Refer to [TM-550, "Exploded View"](#).

**CAUTION:**

**Never reuse O-ring.**

14. Lift down the vehicle.
15. Stop the engine.

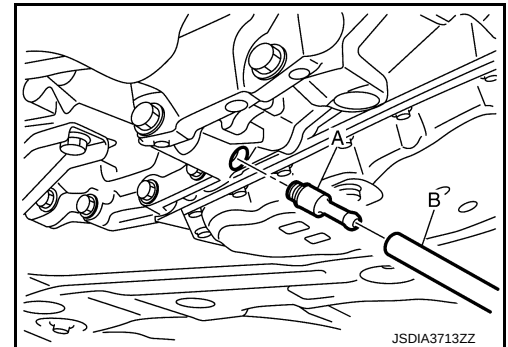

HOW TO ERASE PERMANENT DTC

Description

INFOID:0000000011740960

Permanent DTC can be erased by driving each driving pattern.  
ECM recognizes each driving pattern; it transmits signals to each control module when the driving is complete. Each control module erases permanent DTC based on those signals. For details, refer to [EC-764, "Description"](#).

A  
B  
C  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

TM

# U0073 COMMUNICATION BUS A OFF

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## DTC/CIRCUIT DIAGNOSIS

### U0073 COMMUNICATION BUS A OFF

#### DTC Logic

INFOID:0000000011682770

#### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)        | DTC detection condition                                                                                                      | Possible causes                                           |
|-------|------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|
| U0073 | COMM BUS A OFF<br>(Control Module Communication Bus A Off) | TCM communication blockage lasts for 2 seconds or more when turning ON the ignition switch. (Communication not established.) | Harness or connector<br>(CAN communication line is error) |

#### DTC CONFIRMATION PROCEDURE

##### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

##### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U0073" detected?

- YES >> Go to [TM-440, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

#### Diagnosis Procedure

INFOID:0000000011682771

For the diagnosis procedure, refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).

# U0100 LOST COMMUNICATION (ECM A)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## U0100 LOST COMMUNICATION (ECM A)

### DTC Logic

INFOID:0000000011682772

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)         | DTC detection condition                                                                                                             | Possible causes                                                                                                                  |
|-------|-------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| U0100 | LOST COMM (ECM A)<br>(Lost Communication With<br>ECM/PCM A) | When the ignition switch is ON, TCM is unable to receive the CAN communications signal from ECM continuously for 2 seconds or more. | <ul style="list-style-type: none"><li>ECM</li><li>Harness or connector<br/>(CAN communication line is open or shorted)</li></ul> |

A

B

C

TM

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

- Start the engine and wait for at least 5 seconds.
- Check the DTC.

Is "U0100" detected?

- YES >> Go to [TM-441, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682773

For the diagnosis procedure, refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).

E

F

G

H

I

J

K

L

M

N

O

P

## U0102 LOST COMMUNICATION (TRANSFER)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

### U0102 LOST COMMUNICATION (TRANSFER)

#### DTC Logic

INFOID:0000000011682774

#### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                                    | DTC detection condition                                                                                                                                     | Possible causes                                                                                                                                       |
|-------|----------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| U0102 | LOST COMM (TRANSFER)<br>(Lost Communication With<br>Transfer Case Control Mod-<br>ule) | When the ignition switch is ON, TCM is unable<br>to receive the CAN communications signal<br>from 4WD control unit continuously for 2 sec-<br>onds or more. | <ul style="list-style-type: none"><li>• 4WD control unit</li><li>• Harness or connector<br/>(CAN communication line is open or<br/>shorted)</li></ul> |

#### DTC CONFIRMATION PROCEDURE

##### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

##### 2. PERFORM DTC CONFIRMATION PROCEDURE

###### With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

###### Is "U0102" detected?

- YES >> Go to [TM-442, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

#### Diagnosis Procedure

INFOID:0000000011682775

For the diagnosis procedure, refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).

# U0140 LOST COMMUNICATION (BCM)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## U0140 LOST COMMUNICATION (BCM)

### DTC Logic

INFOID:0000000011682776

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                 | DTC detection condition                                                                                                                   | Possible causes                                                                                                                          |
|-------|---------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| U0140 | LOST COMM (BCM)<br>(Lost Communication With<br>Body Control Module) | When the ignition switch is ON, TCM is unable<br>to receive the CAN communications signal<br>from BCM continuously for 2 seconds or more. | <ul style="list-style-type: none"><li>• BCM</li><li>• Harness or connector<br/>(CAN communication line is open or<br/>shorted)</li></ul> |

A

B

C

TM

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

E

F

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

G

##### With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

H

##### Is "U0140" detected?

- YES >> Go to [TM-443, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

I

### Diagnosis Procedure

INFOID:0000000011682777

For the diagnosis procedure, refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).

J

K

L

M

N

O

P

# U0141 LOST COMMUNICATION (BCM A)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## U0141 LOST COMMUNICATION (BCM A)

### DTC Logic

INFOID:0000000011682778

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                     | DTC detection condition                                                                                                                           | Possible causes                                                                                                                               |
|-------|-------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| U0141 | LOST COMM (BCM A)<br>(Lost Communication With<br>Body Control Module A) | When the ignition switch is turned ON, TCM<br>continues no reception of the CAN communi-<br>cation signal from IPDM E/R for 2 seconds or<br>more. | <ul style="list-style-type: none"><li>• IPDM E/R</li><li>• Harness or connector<br/>(CAN communication line is open or<br/>shorted)</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

##### With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

##### Is "U0141" detected?

- YES >> Go to [TM-444, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682779

For the diagnosis procedure, refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).



# U0155 LOST COMMUNICATION (IPC)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## U0155 LOST COMMUNICATION (IPC)

### DTC Logic

INFOID:0000000011682780

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>[Trouble diagnosis content]                                        | DTC detection condition                                                                                                                               | Possible causes                                                                                                                            |
|-------|--------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| U0155 | LOST COMM (IPC)<br>[Lost Communication With Instrument Panel Cluster (IPC) Control Module] | When the ignition switch is ON, TCM is unable to receive the CAN communications signal from the combination meter continuously for 2 seconds or more. | <ul style="list-style-type: none"><li>Combination meter</li><li>Harness or connector (CAN communication line is open or shorted)</li></ul> |

A  
B  
C  
TM

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

E  
F

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

##### With CONSULT

- Start the engine and wait for at least 5 seconds.
- Check the DTC.

G  
H

##### Is "U0155" detected?

- YES >> Go to [TM-445, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

I

### Diagnosis Procedure

INFOID:0000000011682781

For the diagnosis procedure, refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).

J  
K  
L  
M  
N  
O  
P

# U0164 LOST COMMUNICATION (HVAC)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## U0164 LOST COMMUNICATION (HVAC)

### DTC Logic

INFOID:0000000011682782

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                  | DTC detection condition                                                                                                                       | Possible causes                                                                                                                            |
|-------|----------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| U0164 | LOST COMM (HVAC)<br>(Lost Communication With<br>HVAC Control Module) | When the ignition switch is ON, TCM is unable to receive the CAN communications signal from A/C auto amp. continuously for 2 seconds or more. | <ul style="list-style-type: none"><li>A/C auto amp.</li><li>Harness or connector<br/>(CAN communication line is open or shorted)</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U0164" detected?

YES >> Go to [TM-446, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682783

For the diagnosis procedure, refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).

# U0300 CAN COMMUNICATION DATA

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## U0300 CAN COMMUNICATION DATA

### DTC Logic

INFOID:0000000011682784

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                 | DTC detection condition                                                                                                                                                 | Possible causes             |
|-------|---------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------|
| U0300 | CAN COMM DATA<br>(Internal Control Module Software Incompatibility) | When the ignition switch is ON, the data length transmitted from each control unit is shorter than the specified length and the status continues for 2 seconds or more. | Control unit other than TCM |

A

B

C

TM

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine and wait for 5 seconds or more.
2. Check the DTC.

Is "U0300" detected?

- YES >> Go to [TM-447, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682785

#### 1. CONTROL UNIT CHECK

Check the number of control units replaced before "U0300" is detected.

Is one control unit replaced?

- YES >> The specification of the control unit replaced may be incorrect. Check the part number and the specification.  
NO >> GO TO 2.

#### 2. CONTROL UNIT CHECK

##### With CONSULT

1. Remove one of the control unit replaced.
2. Assemble the old control unit before replacement.
3. Turn ignition switch ON, and wait for 2 seconds or more.
4. Select "Self Diagnostic Results" in "TRANSMISSION".

Is "U0300" detected?

- YES >> Turn OFF the ignition switch and check other control units in the same manner.  
NO >> The specification of the control unit removed may be incorrect. Check the part number and the specification.

P

## U1000 CAN COMM CIRCUIT

### Description

INFOID:0000000011682786

CAN (Controller Area Network) is a serial communication line for real-time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independently). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

### DTC Logic

INFOID:0000000011682787

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content) | DTC detection condition                                                                                          | Possible causes                                                     |
|-------|-----------------------------------------------------|------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------|
| U1000 | CAN COMM CIRCUIT<br>(CAN Communication Line)        | When the ignition switch is ON, TCM cannot send the CAN communication signal continuously for 2 seconds or more. | Harness or connector<br>(CAN communication line is open or shorted) |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U1000" detected?

- YES >> Go to [TM-448, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682788

For the diagnosis procedure, refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).

# U1117 LOST COMMUNICATION (ABS)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## U1117 LOST COMMUNICATION (ABS)

### DTC Logic

INFOID:0000000011682789

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content) | DTC detection condition                                                                                                                                                                | Possible causes                                                                                                                                                                        |
|-------|-----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| U1117 | LOST COMM (ABS)<br>(Lost Communication With<br>ABS) | When the ignition switch is ON, TCM is unable<br>to receive the CAN communications signal<br>from ABS actuator and electric unit (control<br>unit) continuously for 2 seconds or more. | <ul style="list-style-type: none"><li>• ABS actuator and electric unit (control<br/>unit)</li><li>• Harness or connector<br/>(CAN communication line is open or<br/>shorted)</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

##### With CONSULT

1. Start the engine and wait for 5 seconds or more.
2. Check the DTC.

Is "U1117" detected?

- YES >> Go to [TM-449, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682790

For the diagnosis procedure, refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).

## P062F EEPROM

## Description

INFOID:0000000011682791

TCM compares the calculated value stored in the flash ROM with the value stored in TCM. If the calculated value does not agree with the stored value, TCM judges this as a malfunction.

## DTC Logic

INFOID:0000000011682792

## DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content) | DTC detection condition                                          | Possible causes                                                                                                                                         |
|-------|-----------------------------------------------------|------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| P062F | EEPROM<br>(Internal Control Module EEPROM Error)    | Flash ROM error is detected when turning ON the ignition switch. | <ul style="list-style-type: none"> <li>TCM (Flash ROM)</li> <li>Harness or connector [TCM power supply (back-up) circuit is open or shorted]</li> </ul> |

## DTC CONFIRMATION PROCEDURE

## 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

## 2. CHECK DTC DETECTION

1. Start the engine.
2. Check the DTC.

Is "P062F" detected?

- YES >> Go to [TM-450, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000011682793

## 1. CHECK INTERMITTENT INCIDENT

Refer to [GI-44, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace the TCM. Refer to [TM-547, "Removal and Installation"](#).  
 NO >> Repair or replace malfunctioning parts.

# P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0705 TRANSMISSION RANGE SENSOR A

### DTC Logic

INFOID:0000000011682794

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                          | DTC detection condition                                                                                                                                                                                                                                       | Possible causes                                                                                                                                                  |
|-------|------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0705 | T/M RANGE SENSOR A<br>[Transmission Range Sensor<br>A Circuit (PRNDL Input)] | When all of the following conditions are satisfied and this state is maintained for 2 seconds: <ul style="list-style-type: none"><li>Two or more range signals simultaneously stay ON continuously</li><li>TCM power supply voltage: More than 11 V</li></ul> | <ul style="list-style-type: none"><li>Harness or connector (Short circuit between transmission range switch and TCM)</li><li>Transmission range switch</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

- Turn ignition switch ON.
- Shift the selector lever through entire positions from "P" to "D". (Hold the selector lever at each position for 5 seconds or more.)
- Check the first trip DTC.

Is "P0705" detected?

- YES >> Go to [TM-451, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682795

#### 1. CHECK TCM INPUT SIGNALS

##### With CONSULT

- Turn ignition switch ON.
- Select "Data Monitor" in "TRANSMISSION".
- Select "D POSITION SW", "N POSITION SW", "R POSITION SW", and "P POSITION SW".
- Shift the selector lever through entire positions from "P" to "D" and check ON/OFF of each monitor item.

| Monitor item  | Condition                    | Condition |
|---------------|------------------------------|-----------|
| D POSITION SW | Selector lever: "D" position | On        |
|               | Other than the above         | Off       |
| N POSITION SW | Selector lever: "N" position | On        |
|               | Other than the above         | Off       |
| R POSITION SW | Selector lever: "R" position | On        |
|               | Other than the above         | Off       |
| P POSITION SW | Selector lever: "P" position | On        |
|               | Other than the above         | Off       |

##### Without CONSULT

- Turn ignition switch OFF.
- Disconnect TCM connector.
- Turn ignition switch ON.
- Shift the selector lever from "P" to "D" and check voltage between TCM harness connector terminals and ground.

# P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

| +         |          | –      | Condition                    | Voltage     |
|-----------|----------|--------|------------------------------|-------------|
| TCM       |          |        |                              |             |
| Connector | Terminal |        |                              |             |
| F83       | 4        | Ground | Selector lever: “D” position | 10 – 16 V   |
|           |          |        | Other than the above         | Approx. 0 V |
|           | 5        |        | Selector lever: “N” position | 10 – 16 V   |
|           |          |        | Other than the above         | Approx. 0 V |
|           | 6        |        | Selector lever: “R” position | 10 – 16 V   |
|           |          |        | Other than the above         | Approx. 0 V |
|           | 7        |        | Selector lever: “P” position | 10 – 16 V   |
|           |          |        | Other than the above         | Approx. 0 V |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO-1 ["D POSITION SW" is "ON" when selector is not in "D" position. (Or connector terminal 4 is at power voltage.)]>>GO TO 2.

NO-2 ["N POSITION SW" is "ON" when selector is not in "N" position. (Or connector terminal 5 is at power voltage.)]>>GO TO 4.

NO-3 ["R POSITION SW" is "ON" when selector is not in "R" position. (Or connector terminal 6 is at power voltage.)]>>GO TO 6.

NO-4 ["P POSITION SW" is "ON" when selector is not in "P" position. (Or connector terminal 7 is at power voltage.)]>>GO TO 8.

## 2.CHECK D POSITION SW CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

| TCM       |          |   | Continuity  |
|-----------|----------|---|-------------|
| Connector | Terminal |   |             |
| F83       | 4        | 2 | Not existed |
|           |          | 5 |             |
|           |          | 6 |             |
|           |          | 7 |             |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

## 3.CHECK D POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission range switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

| +         |          | -      | Voltage<br>(Approx.) |
|-----------|----------|--------|----------------------|
| TCM       |          |        |                      |
| Connector | Terminal |        |                      |
| F83       | 4        | Ground | 0 V                  |

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair or replace malfunctioning parts.

## 4.CHECK N POSITION SW CIRCUIT (PART 1)



# P0705 TRANSMISSION RANGE SENSOR A

## < DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

| TCM       |          |   | Continuity  |
|-----------|----------|---|-------------|
| Connector | Terminal |   |             |
| F83       | 5        | 2 | Not existed |
|           |          | 4 |             |
|           |          | 6 |             |
|           |          | 7 |             |

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

## 5.CHECK N POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission range switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

| +         |          | -      | Voltage<br>(Approx.) |
|-----------|----------|--------|----------------------|
| TCM       |          |        |                      |
| Connector | Terminal |        |                      |
| F83       | 5        | Ground | 0 V                  |

### Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair or replace malfunctioning parts.

## 6.CHECK P POSITION SW CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

| TCM       |          |   | Continuity  |
|-----------|----------|---|-------------|
| Connector | Terminal |   |             |
| F83       | 7        | 2 | Not existed |
|           |          | 4 |             |
|           |          | 5 |             |
|           |          | 6 |             |

### Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace malfunctioning parts.

## 7.CHECK P POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission range switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

| +         |          | -      | Voltage<br>(Approx.) |
|-----------|----------|--------|----------------------|
| TCM       |          |        |                      |
| Connector | Terminal |        |                      |
| F83       | 7        | Ground | 0 V                  |

## P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair or replace malfunctioning parts.

### 8.CHECK R POSITION SW CIRCUIT (PART1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

| TCM       |          |   | Continuity  |
|-----------|----------|---|-------------|
| Connector | Terminal |   |             |
| F83       | 6        | 2 | Not existed |
|           |          | 4 |             |
|           |          | 5 |             |
|           |          | 7 |             |

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace malfunctioning parts.

### 9.CHECK R POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission range switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

| +         |          | -      | Voltage<br>(Approx.) |
|-----------|----------|--------|----------------------|
| TCM       |          |        |                      |
| Connector | Terminal |        |                      |
| F83       | 6        | Ground | 0 V                  |

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair or replace malfunctioning parts.

### 10.CHECK TRANSMISSION RANGE SWITCH

Check transmission range switch. Refer to [TM-454, "Component Inspection"](#).

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

## Component Inspection

INFOID:0000000011682796

### 1.CHECK TRANSMISSION RANGE SWITCH

Check continuity between transmission range switch connector terminals.

| Transmission range switch | Condition                           | Continuity  |
|---------------------------|-------------------------------------|-------------|
| Terminal                  |                                     |             |
| 1 – 2                     | Manual lever: “P” and “N” positions | Existed     |
|                           | Other than the above                | Not existed |
| 3 – 4                     | Manual lever: “P” position          | Existed     |
|                           | Other than the above                | Not existed |
| 3 – 5                     | Manual lever: “R” position          | Existed     |
|                           | Other than the above                | Not existed |

## P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

| Transmission range switch | Condition                  | Continuity  |
|---------------------------|----------------------------|-------------|
| Terminal                  |                            |             |
| 3 – 6                     | Manual lever: "N" position | Existed     |
|                           | Other than the above       | Not existed |
| 3 – 7                     | Manual lever: "D" position | Existed     |
|                           | Other than the above       | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> There is a malfunction of transmission range switch. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# P0706 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0706 TRANSMISSION RANGE SENSOR A

### DTC Logic

INFOID:0000000011682797

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                              | DTC detection condition                                                                                                                                                                                                         | Possible causes                                                                                                                                                                                                                                                    |
|-------|----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0706 | T/M RANGE SENSOR A<br>(Transmission Range Sensor<br>A Circuit Range/Performance) | When all of the following conditions are satisfied and this state is maintained for 30 seconds: <ul style="list-style-type: none"><li>• All range signals stay OFF</li><li>• TCM power supply voltage: More than 11 V</li></ul> | <ul style="list-style-type: none"><li>• Harness or connector<br/>(Open circuit between ignition switch and transmission range switch/open circuit between transmission range switch and TCM)</li><li>• Transmission range switch</li><li>• Control cable</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Shift the selector lever through entire positions from "P" to "D". (Hold the selector lever at each position for 40 seconds or more.)
3. Check the first trip DTC.

Is "P0706" detected?

- YES >> Go to [TM-456, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682798

#### 1. ADJUSTMENT OF CONTROL CABLE

Adjust control cable. Refer to [TM-435, "Adjustment"](#).

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

 With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Results" in "TRANSMISSION".
3. Touch "Erase".
4. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-456, "DTC Logic"](#).

Is "P0706" detected?

- YES >> GO TO 3.  
NO >> INSPECTION END

#### 3. CHECK POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect transmission range switch connector.
3. Turn ignition switch ON.
4. Check voltage between transmission range switch harness connector terminal and ground.

# P0706 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

| +                         |          | –      | Voltage   |
|---------------------------|----------|--------|-----------|
| Transmission range switch |          |        |           |
| Connector                 | Terminal |        |           |
| F30                       | 3        | Ground | 10 – 16 V |

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 7.

## 4.CHECK CIRCUIT BETWEEN TRANSMISSION RANGE SWITCH AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between transmission range switch harness connector terminals and TCM harness connector terminals.

| Transmission range switch |          | TCM       |          | Continuity |
|---------------------------|----------|-----------|----------|------------|
| Connector                 | Terminal | Connector | Terminal |            |
| F30                       | 4        | F83       | 7        | Existed    |
|                           | 5        |           | 6        |            |
|                           | 6        |           | 5        |            |
|                           | 7        |           | 4        |            |
|                           | 8        |           | 2        |            |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

## 5.CHECK CIRCUIT BETWEEN TRANSMISSION RANGE SWITCH AND TCM (PART 2)

Check continuity between transmission range switch harness connector terminals and ground.

| Transmission range switch |          | —      | Continuity  |
|---------------------------|----------|--------|-------------|
| Connector                 | Terminal |        |             |
| F30                       | 4        | Ground | Not existed |
|                           | 5        |        |             |
|                           | 6        |        |             |
|                           | 7        |        |             |
|                           | 8        |        |             |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace malfunctioning parts.

## 6.CHECK TRANSMISSION RANGE SWITCH

Check transmission range switch. Refer to [TM-458, "Component Inspection"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

## 7.CHECK CIRCUIT BETWEEN IPDM E/R AND TRANSMISSION RANGE SWITCH

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector terminal and transmission range switch harness connector terminal.

# P0706 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

| IPDM E/R  |          | Transmission range switch |          | Continuity |
|-----------|----------|---------------------------|----------|------------|
| Connector | Terminal | Connector                 | Terminal |            |
| E15       | 57       | F30                       | 3        | Existed    |

Is the check result normal?

YES >> GO TO 8.

NO >> Repair or replace malfunctioning parts.

## 8.DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-42. "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Short circuit in harness between IPDM E/R harness connector terminal 57 and transmission range switch harness connector terminal 3.
- 10A fuse (No. 55, located in the IPDM E/R). Refer to [PG-78. "Fuse, Connector and Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-44. "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

## Component Inspection

INFOID:0000000011682799

## 1.CHECK TRANSMISSION RANGE SWITCH

Check continuity between transmission range switch connector terminals.

| Transmission range switch | Condition                           | Continuity  |
|---------------------------|-------------------------------------|-------------|
| Terminal                  |                                     |             |
| 1 – 2                     | Manual lever: “P” and “N” positions | Existed     |
|                           | Other than the above                | Not existed |
| 3 – 4                     | Manual lever: “P” position          | Existed     |
|                           | Other than the above                | Not existed |
| 3 – 5                     | Manual lever: “R” position          | Existed     |
|                           | Other than the above                | Not existed |
| 3 – 6                     | Manual lever: “N” position          | Existed     |
|                           | Other than the above                | Not existed |
| 3 – 7                     | Manual lever: “D” position          | Existed     |
|                           | Other than the above                | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> There is a malfunction of transmission range switch. Replace transaxle assembly. Refer to [TM-570. "Removal and Installation"](#).

# P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

### DTC Description

INFOID:0000000011773002

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                                           | DTC detection condition                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-------|-----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0711 | FLUID TEMP SENSOR A<br>(Transmission Fluid Temperature Sensor A<br>Circuit Range/Performance) | <p>When any of 1 or 2 is satisfied:</p> <ol style="list-style-type: none"><li>Under the following diagnosis conditions, CVT fluid temperature does not rise to 10°C (50°F) after driving for a certain period of time with the TCM-received fluid temperature sensor value between – 40°C (–40°F) and 9°C (48.2°F).<ul style="list-style-type: none"><li>TCM power supply voltage: More than 11 V</li><li>CAN communication is normal</li><li>Engine speed: 450 rpm or more</li><li>Accelerator pedal position: 3 deg. or more</li><li>Vehicle speed: 10 km/h (7 MPH) or more</li><li>U0100, P0705 and P0706 are not detected.</li><li>Selector lever: "D" position</li></ul></li><li>When the condition of the final judgment is satisfied after satisfying that of the provisional judgment:<ul style="list-style-type: none"><li>Provisional judgment: All of the following conditions are satisfied within 2 seconds after the ignition switch is turned ON.<ul style="list-style-type: none"><li>U0073, U0100, P0712 and P0713 are not detected.</li><li>CAN communication is normal.</li><li>TCM power supply voltage: More than 11 V</li><li>The difference between CVT fluid temperature and engine coolant temperature is 55°C (131°F) or more, or –27°C (–16°F) or less.</li></ul></li><li>Final judgment: When all of the following conditions are satisfied and this state is maintained for 300 seconds:<ul style="list-style-type: none"><li>ECM is normal.</li><li>Provisional judgment is satisfied.</li></ul></li></ul></li></ol> |

### POSSIBLE CAUSE

CVT fluid temperature sensor

### FAIL-SAFE

- Engine coolant temperature when engine start: Temp.  $\geq 10^{\circ}\text{C}$  (50°F)
  - Start is slow
  - Acceleration is slow
- Engine coolant temperature when engine start:  $-35^{\circ}\text{C}$  (–31°F)  $\leq$  Temp.  $< 10^{\circ}\text{C}$  (50°F)
  - Selector shock is large
  - Start is slow
  - Acceleration is slow
- Engine coolant temperature when engine start: Temp.  $< -35^{\circ}\text{C}$  (–31°F)
  - Selector shock is large
  - Start is slow
  - Acceleration is slow

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. INSPECTION START

## P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

Is it necessary to erase permanent DTC?

- YES >> GO TO 3.  
NO >> GO TO 7.

### 3. CHECK DTC (ECM AND TCM)

Check the DTC.

Is any DTC other than "P0711" detected?

- YES >> Check DTC detected item. Refer to [EC-694, "DTC Index"](#) (ECM), [TM-411, "DTC Index"](#) (TCM).  
NO >> GO TO 4.

### 4. PERFORM DTC CONFIRMATION PROCEDURE (PART 1)

#### TESTING CONDITION:

- While performing the following procedure, do not add fuel.
- Before performing the following procedure, check that fuel level is between 1/4 and 4/4.
- Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

#### With CONSULT

1. Move the vehicle to a cool place.

##### NOTE:

Cool the vehicle in an environment of ambient air temperature between -10°C (14°F) and 35°C (95°F).

2. Turn ignition switch OFF and leave the vehicle for 12 hours.

##### CAUTION:

**Never turn ignition switch ON during this procedure.**

##### NOTE:

The vehicle must be cooled with the hood open.

3. Turn ignition switch ON.

##### CAUTION:

**Never start the engine.**

4. Select "Data Monitor" in "TRANSMISSION".
5. Select "FLUID TEMP".
6. Record CVT fluid temperature.
7. Start engine and let it idle for 5 minutes or more.

##### CAUTION:

**Never turn ignition switch OFF during idling.**

8. Check 1st trip DTC.

#### With GST

1. Move the vehicle to a cool place.

##### NOTE:

Cool the vehicle in an environment of ambient air temperature between -10°C (14°F) and 35°C (95°F).

2. Turn ignition switch OFF and leave the vehicle for 12 hours.

##### CAUTION:

**Never turn ignition switch ON during this procedure.**

##### NOTE:

The vehicle must be cooled with the hood open.

3. Start engine and let it idle for 5 minutes or more.

##### CAUTION:

**Never turn ignition switch OFF during idling.**

4. Check 1st trip DTC.

Is "P0711" detected?

- YES >> Go to [TM-462, "Diagnosis Procedure"](#).  
NO-1 (With CONSULT) >> GO TO 5.  
NO-2 (With GST) >> GO TO 6.

### 5. CHECK CVT FLUID TEMPERATURE

#### With CONSULT

1. Select "Data Monitor" in "TRANSMISSION".
2. Select "FLUID TEMP".

Is the value of "FLUID TEMP" 10°C (50°F) or more?

- YES >> INSPECTION END  
NO >> GO TO 6.



# P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## 6. PERFORM DTC CONFIRMATION PROCEDURE (PART 2)

### With CONSULT

1. Drive the vehicle for the total minutes specified in the Driving time column below with the following conditions satisfied.

|                            |                           |
|----------------------------|---------------------------|
| Selector lever             | : "D" position            |
| Accelerator pedal position | : 1.0/8 or more           |
| Vehicle speed              | : 10 km/h (7 MPH) or more |

| CVT fluid temperature before engine start | Driving time       |
|-------------------------------------------|--------------------|
| -40°C (-40°F) – -31°C (-23.8°F)           | 20 minutes or more |
| -30°C (-22°F) – -21°C (-5.8°F)            | 18 minutes or more |
| -20°C (-4°F) – -11°C (-12.2°F)            | 14 minutes or more |
| -10°C (14°F) – -1°C (30.2°F)              | 10 minutes or more |
| 0°C (32°F) – 9°C (48.2°F)                 | 7 minutes or more  |

2. Stop the vehicle.
3. Check the first trip DTC.

### With GST

1. Drive the vehicle and maintain the following conditions for 20 minutes or more.

|                            |                           |
|----------------------------|---------------------------|
| Selector lever             | : "D" position            |
| Accelerator pedal position | : 1.0/8 or more           |
| Vehicle speed              | : 10 km/h (7 MPH) or more |

2. Stop the vehicle.
3. Check the first trip DTC.

### Is "P0711" detected?

YES >> Go to [TM-462, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

## 7. PERFORM DTC CONFIRMATION PROCEDURE

### With CONSULT

1. Turn ignition switch OFF and cool the engine.
2. Turn ignition switch ON.

#### **CAUTION:**

**Never start the engine.**

3. Select "Data Monitor" in "TRANSMISSION".
4. Select "FLUID TEMP".
5. Record CVT fluid temperature.
6. Start the engine and wait for at least 2 minutes.
7. Drive the vehicle for the total minutes specified in the Driving time column below with the following conditions satisfied.

|                            |                           |
|----------------------------|---------------------------|
| Selector lever             | : "D" position            |
| Accelerator pedal position | : 1.0/8 or more           |
| Vehicle speed              | : 10 km/h (7 MPH) or more |

| CVT fluid temperature before engine start | Driving time       |
|-------------------------------------------|--------------------|
| -40°C (-40°F) – -31°C (-23.8°F)           | 20 minutes or more |
| -30°C (-22°F) – -21°C (-5.8°F)            | 18 minutes or more |
| -20°C (-4°F) – -11°C (-12.2°F)            | 14 minutes or more |
| -10°C (14°F) – -1°C (30.2°F)              | 10 minutes or more |

# P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

| CVT fluid temperature before engine start | Driving time                                     |
|-------------------------------------------|--------------------------------------------------|
| 0°C (32°F) – 9°C (48.2°F)                 | 7 minutes or more                                |
| Other than the above                      | — (Go to "8.CHECK CVT FLUID TEMPERATURE SENSOR") |

8. Stop the vehicle.
9. Check the first trip DTC.

## ⊗ With GST

1. Turn ignition switch OFF and cool the engine.
2. Start the engine and wait for at least 2 minutes.
3. Drive the vehicle and maintain the following conditions for 20 minutes or more.

|                            |                           |
|----------------------------|---------------------------|
| Selector lever             | : "D" position            |
| Accelerator pedal position | : 1.0/8 or more           |
| Vehicle speed              | : 10 km/h (7 MPH) or more |

4. Stop the vehicle.

## CAUTION:

**Never turn ignition switch OFF**

5. Check the first trip DTC.

Is "P0711" detected?

- YES >> Go to [TM-462, "Diagnosis Procedure"](#).  
NO >> GO TO 8.

## 8.CHECK CVT FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Disconnect CVT unit connector.
3. Check resistance between CVT unit connector terminals.

| CVT unit | Condition                           | Resistance (Approx.) |
|----------|-------------------------------------|----------------------|
| Terminal |                                     |                      |
| 12 – 18  | CVT fluid temperature: 20°C (68°F)  | 6.5 kΩ               |
|          | CVT fluid temperature: 50°C (122°F) | 2.2 kΩ               |
|          | CVT fluid temperature: 80°C (176°F) | 0.87 kΩ              |

Is the inspection result normal?

- YES-1 >> To check malfunction symptom before repair: Refer to [GI-44, "Intermittent Incident"](#).  
YES-2 >> Confirmation after repair: INSPECTION END  
NO >> There is a malfunction of CVT fluid temperature sensor. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).

## Diagnosis Procedure

INFOID:000000011773003

## 1.CHECK CVT FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Disconnect CVT unit connector.
3. Check resistance between CVT unit connector terminals.

| CVT unit  |          | Condition                           | Resistance (Approx.) |
|-----------|----------|-------------------------------------|----------------------|
| Connector | Terminal |                                     |                      |
| F250      | 12 – 18  | CVT fluid temperature: 20°C (68°F)  | 6.5 kΩ               |
|           |          | CVT fluid temperature: 50°C (122°F) | 2.2 kΩ               |
|           |          | CVT fluid temperature: 80°C (176°F) | 0.87 kΩ              |

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 4.

# P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## 2. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (CVT FLUID TEMPERATURE SENSOR) (PART 1)

1. Disconnect the TCM connector.
2. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F83       | 11       | F82       | 18       | Existed    |
|           | 12       |           | 12       |            |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

## 3. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (CVT FLUID TEMPERATURE SENSOR) (PART 2)

Check continuity between TCM harness connector terminals and ground.

| TCM       |          | —      | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F83       | 11       | Ground | Not existed |
|           | 12       |        |             |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace damaged parts.

## 4. CHECK DTC (TCM)

### With CONSULT

1. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-459, "DTC Description"](#).
2. Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P0711" detected?

YES >> There is a malfunction of the CVT fluid temperature sensor. Replace the transaxle assembly.  
Refer to [TM-570, "Removal and Installation"](#).

NO >> INSPECTION END

# P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A

### DTC Logic

INFOID:000000011682800

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                          | DTC detection condition                                                                                                                                                                                                                                        | Possible causes                                                                                                                                                           |
|-------|------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0712 | FLUID TEMP SENSOR A<br>(Transmission Fluid Temperature Sensor A Circuit Low) | When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• Fluid temperature sensor detection voltage: 0.15 V or less</li></ul> | <ul style="list-style-type: none"><li>• Harness or connector (CVT fluid temperature sensor circuit is shorted to ground)</li><li>• CVT fluid temperature sensor</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait for 10 seconds or more.
2. Check the first trip DTC.

Is "P0712" detected?

YES >> Go to [TM-464, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011682801

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

| TCM       |          | —      | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F83       | 12       | Ground | Not existed |

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning part.

#### 2. CHECK CVT UNIT TERMINAL CODE ASSEMBLY

Check continuity between CVT unit connector terminal and ground.

| CVT unit  |          | —      | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F82       | 12       | Ground | Not existed |

Is the inspection result normal?

YES >> GO TO 3.

NO >> There is a malfunction of the CVT unit terminal code assembly. Replace the transaxle assembly.  
Refer to [TM-570, "Removal and Installation"](#).

#### 3. CHECK CVT FLUID TEMPERATURE SENSOR

## P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

Check resistance between CVT unit connector terminals.

| CVT unit  |          | Condition                           | Resistance<br>(Approx.) |
|-----------|----------|-------------------------------------|-------------------------|
| Connector | Terminal |                                     |                         |
| F250      | 12 – 18  | CVT fluid temperature: 20°C (68°F)  | 6.5 kΩ                  |
|           |          | CVT fluid temperature: 50°C (122°F) | 2.2 kΩ                  |
|           |          | CVT fluid temperature: 80°C (176°F) | 0.87 kΩ                 |

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).  
NO >> There is a malfunction of the CVT fluid temperature sensor. Replace the transaxle assembly.  
Refer to [TM-570, "Removal and Installation"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A

### DTC Logic

INFOID:0000000011682802

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                           | DTC detection condition                                                                                                                                                                                                                                                                                           | Possible causes                                                                                                                                                                         |
|-------|-------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0713 | FLUID TEMP SENSOR A<br>(Transmission Fluid Temperature Sensor A Circuit High) | When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• Vehicle speed: More than 10 km/h (7 MPH)</li><li>• Fluid temperature sensor detection voltage: 2.48 V or more</li></ul> | <ul style="list-style-type: none"><li>• Harness or connector (CVT fluid temperature sensor circuit is open or shorted to power supply)</li><li>• CVT fluid temperature sensor</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Be careful of the driving speed.

#### 1.PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2.PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Maintain the following condition for 10 seconds or more.

Vehicle speed : 20 km/h (12 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0713" detected?

YES >> Go to [TM-466, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682803

#### 1.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F83       | 11       | F82       | 18       | Existed    |
|           | 12       |           | 12       |            |

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning parts.

#### 2.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 2)

1. Turn ignition switch ON.
2. Check voltage between TCM harness connector terminal and ground.

## P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

| +         |          | -      | Voltage<br>(Approx.) |
|-----------|----------|--------|----------------------|
| TCM       |          |        |                      |
| Connector | Terminal |        |                      |
| F83       | 12       | Ground | 0 V                  |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

### 3. CHECK CVT FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Check resistance between CVT unit connector terminals.

| CVT unit  |          | Condition                           | Resistance<br>(Approx.) |
|-----------|----------|-------------------------------------|-------------------------|
| Connector | Terminal |                                     |                         |
| F250      | 12 – 18  | CVT fluid temperature: 20°C (68°F)  | 6.5 kΩ                  |
|           |          | CVT fluid temperature: 50°C (122°F) | 2.2 kΩ                  |
|           |          | CVT fluid temperature: 80°C (176°F) | 0.87 kΩ                 |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> There is a malfunction of the CVT fluid temperature sensor. Replace the transaxle assembly.  
Refer to [TM-570, "Removal and Installation"](#).

## P0715 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

### P0715 INPUT SPEED SENSOR A

#### DTC Logic

INFOID:0000000011682804

#### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)            | DTC detection condition                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Possible causes                                                                                                                                         |
|-------|----------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0715 | INPUT SPEED SENSOR A<br>(Input/Turbine Speed Sensor A Circuit) | When 1 is satisfied and any of 2, 3 or 4 is satisfied:<br>1. When the following conditions are satisfied:<br>- TCM power supply voltage: More than 11 V<br>- After range change completion, it spends 2 seconds or more.<br>2. When all of the following conditions are satisfied and this state is maintained for 5 seconds:<br>- Primary pulley speed: Less than 150 rpm<br>- Secondary pulley speed: 500 rpm or more<br>3. When all of the following conditions are satisfied and this state is maintained for 0.5 seconds:<br>- 10-msec-ago primary pulley speed: 1,000 rpm or more<br>- Now primary pulley speed: 0 rpm<br>4. When all of the following conditions are satisfied and this state is maintained for 5 seconds:<br>- Range: D<br>- Engine speed: 450 rpm or more<br>- Input speed: 300 rpm or more<br>- Primary pulley speed: 300 rpm or more<br>- Secondary pulley speed: 300 rpm or more<br>- Differences between engine speed and primary pulley speed: More than 1,000 rpm<br>- Differences between primary pulley speed and input speed: More than 1,000 rpm<br>- Differences between engine speed and input speed: 1,000 rpm or less<br>- Lock-up command is being given (except for slip lock-up)<br>- DTC other than the applicable DTC is not detected. | <ul style="list-style-type: none"><li>• Harness or connector (Primary speed sensor circuit is open or shorted)</li><li>• Primary speed sensor</li></ul> |

#### DTC CONFIRMATION PROCEDURE

##### **CAUTION:**

**Be careful of the driving speed.**

#### **1.** PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### **2.** CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" POSITION  
Engine speed : 1,200 rpm or more  
Vehicle speed : 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0715" detected?



# P0715 INPUT SPEED SENSOR A

[CVT: RE0F10D]

## < DTC/CIRCUIT DIAGNOSIS >

- YES >> Go to [TM-469, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000011682805

### 1.CHECK PRIMARY SPEED SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect primary speed sensor connector.
3. Turn ignition switch ON.
4. Check voltage between primary speed sensor harness connector terminal and ground.

| +                    |          | –      | Voltage   |
|----------------------|----------|--------|-----------|
| Primary speed sensor |          |        |           |
| Connector            | Terminal |        |           |
| F55                  | 3        | Ground | 10 – 16 V |

#### Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 6.

### 2.CHECK PRIMARY SPEED SENSOR GROUND CIRCUIT

Check continuity between primary speed sensor harness connector terminal and ground.

| Primary speed sensor |          | —      | Continuity |
|----------------------|----------|--------|------------|
| Connector            | Terminal |        |            |
| F55                  | 1        | Ground | Existed    |

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace malfunctioning parts.

### 3.CHECK CIRCUIT BETWEEN PRIMARY SPEED SENSOR AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between primary speed sensor harness connector terminal and TCM harness connector terminal.

| Primary speed sensor |          | TCM       |          | Continuity |
|----------------------|----------|-----------|----------|------------|
| Connector            | Terminal | Connector | Terminal |            |
| F55                  | 2        | F83       | 35       | Existed    |

#### Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Repair or replace malfunctioning parts.

### 4.CHECK CIRCUIT BETWEEN PRIMARY SPEED SENSOR AND TCM (PART 2)

Check continuity between primary speed sensor harness connector terminal and ground.

| Primary speed sensor |          | —      | Continuity  |
|----------------------|----------|--------|-------------|
| Connector            | Terminal |        |             |
| F55                  | 2        | Ground | Not existed |

#### Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Repair or replace malfunctioning parts.


### 5.CHECK TCM INPUT SIGNALS

## P0715 INPUT SPEED SENSOR A

### < DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

1. Connect all of disconnected connectors.
2. Lift the vehicle.
3. Start the engine.
4. Check frequency of primary speed sensor.
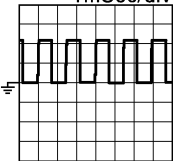
| +         |          | -      | Condition                                                                                                                 | Frequency<br>(Approx.)                                                                                                                                              |
|-----------|----------|--------|---------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TCM       |          |        |                                                                                                                           |                                                                                                                                                                     |
| Connector | Terminal |        |                                                                                                                           |                                                                                                                                                                     |
| F83       | 35       | Ground | <ul style="list-style-type: none"><li>• Shift position: "M1" position</li><li>• Vehicle speed: 20 km/h (12 MPH)</li></ul> | <div>700 Hz</div> <div>1mSec/div</div>  <div>5V/div</div> <div>JSDIA1905GB</div> |

#### Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Replace primary speed sensor. Refer to [TM-555, "Removal and Installation"](#).

### 6.CHECK CIRCUIT BETWEEN IPDM E/R AND PRIMARY SPEED SENSOR

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector terminal and primary speed sensor harness connector terminal.

| IPDM E/R  |          | Primary speed sensor |          | Continuity |
|-----------|----------|----------------------|----------|------------|
| Connector | Terminal | Connector            | Terminal |            |
| E15       | 57       | F55                  | 3        | Existed    |

#### Is the check result normal?

YES >> GO TO 7.

NO >> Repair or replace malfunctioning parts.

### 7.DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-42, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Short circuit in harness between IPDM E/R harness connector terminal 57 and primary speed sensor harness connector terminal 3.
- 10A fuse (No.55, located in the IPDM E/R). Refer to [PG-78, "Fuse, Connector and Terminal Arrangement"](#).
- IPDM E/R

#### Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

# P0717 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0717 INPUT SPEED SENSOR A

### DTC Logic

INFOID:0000000011682806

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                           | DTC detection condition                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Possible cause                                                                                                                                       |
|-------|-------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0717 | INPUT SPEED SENSOR A<br>(Input/Turbine Speed Sensor<br>"A" Circuit No Signal) | <p>When 1 is satisfied and any of 2, 3 or 4 is satisfied:</p> <ol style="list-style-type: none"> <li>When the following conditions are satisfied: <ul style="list-style-type: none"> <li>TCM power supply voltage: More than 11 V</li> <li>After range change completion, it spends 2 seconds or more.</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>Primary pulley speed: 500 rpm or more</li> <li>Input speed: Less than 150 rpm</li> <li>Range: Other than P, N</li> <li>P0715 is not detected</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 0.5 seconds: <ul style="list-style-type: none"> <li>10-msec-ago input speed: 1,000 rpm or more</li> <li>Now input speed: 0 rpm</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>Range: D</li> <li>Engine speed: 450 rpm or more</li> <li>Input speed: 300 rpm or more</li> <li>Primary pulley speed: 300 rpm or more</li> <li>Secondary pulley speed: 300 rpm or more</li> <li>Differences between engine speed and primary pulley speed: 1,000 rpm or less</li> <li>Differences between primary pulley speed and input speed: More than 1,000 rpm</li> <li>Differences between engine speed and input speed: More than 1,000 rpm</li> <li>Lock-up command is being given (except for slip lock-up)</li> <li>DTC other than the applicable DTC is not detected.</li> </ul> </li> </ol> | <ul style="list-style-type: none"> <li>Harness or connectors (Input speed sensor circuit is open or shorted.)</li> <li>Input speed sensor</li> </ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Drive the vehicle.
- Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position

# P0717 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

Engine speed : 1,200 rpm or more  
Vehicle speed : 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0717" detected?

YES >> Go to [TM-472, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000011682807

### 1.CHECK INPUT SPEED SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect input speed sensor connector.
3. Turn ignition switch ON.
4. Check voltage between input speed sensor harness connector terminal and ground.

| +                  |          | –      | Voltage   |
|--------------------|----------|--------|-----------|
| Input speed sensor |          |        |           |
| Connector          | Terminal |        |           |
| F77                | 3        | Ground | 10 – 16 V |

Is the inspection result normal?

YES >> GO TO 2.  
NO >> GO TO 6.

### 2.CHECK INPUT SPEED SENSOR GROUND CIRCUIT

Check continuity between input speed sensor harness connector terminal and ground.

| Input speed sensor |          | —      | Continuity |
|--------------------|----------|--------|------------|
| Connector          | Terminal |        |            |
| F77                | 1        | Ground | Existed    |

Is the inspection result normal?

YES >> GO TO 3.  
NO >> Repair or replace malfunctioning parts.

### 3.CHECK CIRCUIT BETWEEN INPUT SPEED SENSOR AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between input speed sensor harness connector terminal and TCM harness connector terminal.

| Input speed sensor |          | TCM       |          | Continuity |
|--------------------|----------|-----------|----------|------------|
| Connector          | Terminal | Connector | Terminal |            |
| F77                | 2        | F83       | 24       | Existed    |

Is the inspection result normal?

YES >> GO TO 4.  
NO >> Repair or replace malfunctioning parts.

### 4.CHECK CIRCUIT BETWEEN INPUT SPEED SENSOR AND TCM (PART 2)

Check continuity between input speed sensor harness connector terminal and ground.

# P0717 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

| Input speed sensor |          | —      | Continuity  |
|--------------------|----------|--------|-------------|
| Connector          | Terminal |        |             |
| F77                | 2        | Ground | Not existed |


Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

## 5.CHECK TCM INPUT SIGNALS

1. Connect all of disconnected connectors.
2. Lift the vehicle.
3. Start the engine.
4. Check frequency of input speed sensor.
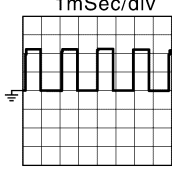
| +         |          | —      | Condition                                                                                                                 | Frequency<br>(Approx.)                                                                                                                                                         |
|-----------|----------|--------|---------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TCM       |          |        |                                                                                                                           |                                                                                                                                                                                |
| Connector | Terminal |        |                                                                                                                           |                                                                                                                                                                                |
| F83       | 24       | Ground | <ul style="list-style-type: none"><li>• Shift position: “M1” position</li><li>• Vehicle speed: 20 km/h (12 MPH)</li></ul> | <div>880 Hz</div> <div>1mSec/div</div> <div></div> <div>5V/div</div> <div>JSDIA3769GB</div> |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Replace input speed sensor. Refer to [TM-553, "Removal and Installation"](#).

## 6.CHECK CIRCUIT BETWEEN IPDM E/R AND INPUT SPEED SENSOR

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector terminal and input speed sensor harness connector terminals.

| IPDM E/R  |          | Input speed sensor |          | Continuity |
|-----------|----------|--------------------|----------|------------|
| Connector | Terminal | Connector          | Terminal |            |
| E15       | 57       | F77                | 3        | Existed    |

Is the check result normal?

YES >> GO TO 7.

NO >> Repair or replace malfunctioning parts.

## 7.DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-42, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Short circuit in harness between IPDM E/R harness connector terminal 57 and input speed sensor harness connector terminal 3.
- 10A fuse (No.55, located in the IPDM E/R). Refer to [PG-79, "Fuse and Fusible Link Arrangement"](#).
- IPDM E/R

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

## P0740 TORQUE CONVERTER

### DTC Logic

INFOID:000000011682808

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)        | DTC detection condition                                                                                                                                                                                                       | Possible causes                                                                                                                                                                                                |
|-------|------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0740 | TORQUE CONVERTER<br>(Torque Converter Clutch Circuit/Open) | When all of the following conditions are satisfied and this state is maintained for 5 seconds:<br>• TCM power supply voltage: More than 11 V<br>• P0743 is not detected.<br>• TCM judges that solenoid valve circuit is open. | <ul style="list-style-type: none"> <li>• Harness or connector (Torque converter clutch solenoid valve circuit is open or shorted to power supply)</li> <li>• Torque converter clutch solenoid valve</li> </ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Be careful of the driving speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PREPARATION BEFORE OPERATION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Confirm that the CVT fluid temperature is in the following range.

FLUID TEMP : 20°C (68°F) or more

##### With GST

1. Start the engine.
2. Set the CVT fluid to 20°C (68°F) or more.

#### NOTE:

When the ambient temperature is 20°C (68°F), the CVT fluid usually increases to 50 to 80°C (122 to 176°F) with driving in an urban area for approximately 10 minutes.

#### Is the CVT fluid 20°C (68°F) or more?

YES >> GO TO 3.

NO >> 1. Warm the transaxle.  
2. GO TO 3.

#### 3. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position

Vehicle speed : 40 km/h (25 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

#### Is "P0740" detected?

YES >> Go to [TM-475, "Diagnosis Procedure"](#).

NO >> INSPECTION END

# P0740 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## Diagnosis Procedure

INFOID:0000000011682809

### 1.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and CVT unit harness connector terminal.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F83       | 38       | F82       | 5        | Existed    |

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning parts.

### 2.CHECK CIRCUIT BETWEEN CVT UNIT AND GROUND

Check resistance between CVT unit harness connector terminal and ground.

| CVT unit  |          | —      | Condition                           | Resistance  |
|-----------|----------|--------|-------------------------------------|-------------|
| Connector | Terminal |        |                                     |             |
| F250      | 5        | Ground | CVT fluid temperature: 20°C (68°F)  | 5.5 – 7.0 Ω |
|           |          |        | CVT fluid temperature: 50°C (122°F) | 6.0 – 8.0 Ω |
|           |          |        | CVT fluid temperature: 80°C (176°F) | 6.5 – 8.5 Ω |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> There is malfunction of torque converter clutch solenoid valve. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).

# P0743 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0743 TORQUE CONVERTER

### DTC Logic

INFOID:0000000011682810

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)              | DTC detection condition                                                                                                                                                                                                                                             | Possible causes                                                                                                                                                                               |
|-------|------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0743 | TORQUE CONVERTER<br>(Torque Converter Clutch Circuit Electrical) | When all of the following conditions are satisfied and this state is maintained for 0.48 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• TCM judges that solenoid valve circuit is shorted to ground.</li></ul> | <ul style="list-style-type: none"><li>• Harness or connector (Torque converter clutch solenoid valve circuit is shorted to ground)</li><li>• Torque converter clutch solenoid valve</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Be careful of the driving speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PREPARATION BEFORE OPERATION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Confirm that the CVT fluid temperature is in the following range.

FLUID TEMP : 20°C (68°F) or more

##### With GST

1. Start the engine.
2. Set the CVT fluid to 20°C (68°F) or more.

##### NOTE:

When the ambient temperature is 20°C (68°F), the CVT fluid usually increases to 50 to 80°C (122 to 176°F) with driving in an urban area for approximately 10 minutes.

Is the CVT fluid 20°C (68°F) or more?

YES >> GO TO 3.

NO >> 1. Warm the transaxle.  
2. GO TO 3.

#### 3. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position

Vehicle speed : 40 km/h (25 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0743" detected?

YES >> Go to [TM-477, "Diagnosis Procedure"](#).

NO >> INSPECTION END



# P0743 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## Diagnosis Procedure

INFOID:0000000011682811

### 1.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

| TCM       |          | —      | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F83       | 38       | Ground | Not existed |

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning parts.

### 2.CHECK CIRCUIT BETWEEN CVT UNIT AND GROUND

Check resistance between CVT unit harness connector terminal and ground.

| CVT unit  |          | —      | Condition                           | Resistance  |
|-----------|----------|--------|-------------------------------------|-------------|
| Connector | Terminal |        |                                     |             |
| F250      | 5        | Ground | CVT fluid temperature: 20°C (68°F)  | 5.5 – 7.0 Ω |
|           |          |        | CVT fluid temperature: 50°C (122°F) | 6.0 – 8.0 Ω |
|           |          |        | CVT fluid temperature: 80°C (176°F) | 6.5 – 8.5 Ω |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> There is malfunction of torque converter clutch solenoid valve. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).

# P0744 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0744 TORQUE CONVERTER

### DTC Logic

INFOID:000000011682812

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                | DTC detection condition                                                                                                                                                                                                                                                                                                                                                    | Possible causes                                                                                                                                      |
|-------|--------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0744 | TORQUE CONVERTER<br>(Torque converter clutch circuit intermittent) | When all of the following conditions are satisfied and this state is maintained for 30 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• P0717 is not detected.</li><li>• CAN communication is normal</li><li>• Torque converter slip speed: (40+vehicle speed/2) rpm</li><li>• LU pressure: More than 0.2 MPa</li></ul> | <ul style="list-style-type: none"><li>• Torque converter clutch solenoid valve</li><li>• Control valve assembly</li><li>• Torque converter</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Be careful of the driving speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PREPARATION BEFORE OPERATION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Confirm that the CVT fluid temperature is in the following range.

FLUID TEMP : 20°C (68°F) or more

##### With GST

1. Start the engine.
2. Set the CVT fluid to 20°C (68°F) or more.

##### NOTE:

When the ambient temperature is 20°C (68°F), the CVT fluid usually increases to 50 to 80°C (122 to 176°F) with driving in an urban area for approximately 10 minutes.

Is the CVT fluid 20°C (68°F) or more?

YES >> GO TO 3.

NO >> 1. Warm the transaxle.  
2. GO TO 3.

#### 3. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 30 seconds or more.

Selector lever : "D" position  
Accelerator pedal position : 0.5/8 or more  
Vehicle speed : 40 km/h (25 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0744" detected?

YES >> Go to [TM-479, "Diagnosis Procedure"](#).

# P0744 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000011682813

### 1.CHECK INTERMITTENT INCIDNT

Refer to [GI-44, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).

NO >> Repair or replace the malfunction items.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# P0746 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0746 PRESSURE CONTROL SOLENOID A

### DTC Logic

INFOID:0000000011682814

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                     | DTC detection condition                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Possible causes                                                                                                 |
|-------|-------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| P0746 | PC SOLENOID A<br>(Pressure Control Solenoid A<br>Performance/Stuck Off) | <p>The detecting condition A or detection condition B is detected twice or more (1 second or more later after detection of the first) in the same DC under the following diagnosis conditions:</p> <ul style="list-style-type: none"><li>• Diagnosis conditions<ul style="list-style-type: none"><li>- Engine speed: More than 600 rpm</li><li>- Primary pulley speed: More than 450 rpm</li><li>- Idle is not being detected.</li><li>- Acceleration/deceleration speed: <math>-0.49 \text{ m/s}^2</math> (<math>-0.05 \text{ G}</math>) or more</li><li>- The primary pulley speed experienced 300 rpm or more and the secondary pulley speed experienced 250 rpm or more at least once.</li><li>- Secondary pulley speed: More than 150 rpm</li><li>- TCM power supply voltage: More than 11 V</li></ul></li><li>• Detection condition A<ul style="list-style-type: none"><li>- Status with the shifting ratio of the primary pulley speed/secondary pulley ratio exceeding 2.981 is 0.2 sec. or more continuously.</li></ul></li><li>• Detection condition B<ul style="list-style-type: none"><li>- Status with the shifting ratio of the primary pulley speed/secondary pulley ratio exceeding 3.781 is 0.1 sec. or more continuously.</li></ul></li></ul> | <ul style="list-style-type: none"><li>• Line pressure solenoid valve</li><li>• Control valve assembly</li></ul> |

#### NOTE:

DC stands for "DRIVING CYCLE" and indicates a series of driving cycle of "Ignition switch OFF → ON → driving → OFF".

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Be careful of the driving speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position  
Accelerator pedal position : 0.5/8 or more  
Vehicle speed : 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0746" detected?

YES >> Go to [TM-481. "Diagnosis Procedure"](#).

# P0746 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000011682815

### 1.CHECK INTERMITTENT INCIDENT

Refer to [GI-44, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).

NO >> Repair or replace the malfunction items.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# P0776 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0776 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:0000000011682816

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                       | DTC detection condition                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Possible cause                    |
|-------|---------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|
| P0776 | PC SOLENOID B<br>(Pressure Control Solenoid<br>"B" Performance/Stuck Off) | <p>When any of 1 or 2 is satisfied and this state is maintained for 10 seconds:</p> <ol style="list-style-type: none"> <li>When all of the following conditions are satisfied: <ul style="list-style-type: none"> <li>- DTC other than the applicable DTC is not detected.</li> <li>- Engine speed: More than 625 rpm</li> <li>- Selector lever: Other than P/N position</li> <li>- CVT fluid temperature: More than -20°C (-4°F)</li> <li>- TCM power supply: More than 11 V</li> <li>- The difference between instruction pressure of secondary pressure and 10-msec-ago instruction secondary pressure is 0 MPa or more</li> <li>- Instruction pressure of secondary pressure: 0 MPa or more</li> <li>- Instruction pressure of secondary pressure - secondary pressure: More than 1.2 MPa</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 1.52 seconds: <ul style="list-style-type: none"> <li>• DTC other than the applicable DTC is not detected.</li> <li>• CVT fluid temperature: More than -20°C (-4°F)</li> <li>• Selector lever: Other than P/N position</li> <li>• Instruction pressure of secondary pressure – secondary pressure: 0.25 MPa or more</li> </ul> </li> </ol> <p>2. When all of the following conditions are satisfied:</p> <ul style="list-style-type: none"> <li>- DTC other than the applicable DTC is not detected.</li> <li>- CVT fluid temperature: More than -20°C (-4°F)</li> <li>- Selector lever: Other than P/N position</li> <li>- TCM power supply: More than 11 V</li> </ul> <p>When all of the following conditions are satisfied and this state is maintained for 5.5 seconds:</p> <ul style="list-style-type: none"> <li>• DTC other than the applicable DTC is not detected.</li> <li>• CVT fluid temperature: More than -20°C (-4°F)</li> <li>• Selector lever: Other than P/N position</li> <li>• Secondary pressure - instruction pressure of secondary pressure: 1.2 MPa or more</li> <li>- The difference between instruction pressure of secondary pressure and 10-msec-ago instruction secondary pressure is 0 MPa or more</li> <li>- Secondary pressure - instruction pressure of secondary pressure: More than 1.2 MPa</li> </ul> | Secondary pressure solenoid valve |

# P0776 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## DTC CONFIRMATION PROCEDURE

### CAUTION:

Always drive vehicle at a safe speed.

### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

### 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following condition for 20 seconds or more.

|                            |                            |
|----------------------------|----------------------------|
| Selector lever             | : "D" position             |
| Vehicle speed              | : 40 km/h (25 MPH) or more |
| Accelerator pedal position | : 1.0/8 or more            |

4. Stop the vehicle.
5. Check the first trip DTC.

#### Is "P0776" detected?

|     |                                                          |
|-----|----------------------------------------------------------|
| YES | >> Go to <a href="#">TM-483, "Diagnosis Procedure"</a> . |
| NO  | >> INSPECTION END                                        |

## Diagnosis Procedure

INFOID:0000000011682817

### 1. CHECK INTERMITTENT INCIDENT

Refer to [GI-44, "Intermittent Incident"](#).

#### Is the inspection result normal?

|     |                                                                                              |
|-----|----------------------------------------------------------------------------------------------|
| YES | >> Replace transaxle assembly. Refer to <a href="#">TM-570, "Removal and Installation"</a> . |
| NO  | >> Repair or replace the malfunction items.                                                  |

# P0778 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0778 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:000000011682818

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)            | DTC detection condition                                                                                                                                                                                                                                             | Possible cause                                                                                                                                                                            |
|-------|----------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0778 | PC SOLENOID B<br>(Pressure Control Solenoid<br>"B" Electrical) | When all of the following conditions are satisfied and this state is maintained for 0.48 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• TCM judges that solenoid valve circuit is shorted to ground.</li></ul> | <ul style="list-style-type: none"><li>• Harness or connectors<br/>(Secondary pressure solenoid valve circuit is shorted to ground.)</li><li>• Secondary pressure solenoid valve</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1.PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2.CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0778" detected?

YES >> Go to [TM-484, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011682819

#### 1.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

| TCM       |          | —      | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F83       | 39       | Ground | Not existed |

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

#### 2.CHECK CIRCUIT BETWEEN CVT UNIT AND GROUND

Check continuity between CVT unit harness connector terminal and ground.

| CVT unit  |          | —      | Condition                           | Resistance  |
|-----------|----------|--------|-------------------------------------|-------------|
| Connector | Terminal |        |                                     |             |
| F250      | 3        | Ground | CVT fluid temperature: 20°C (68°F)  | 5.5 – 7.0 Ω |
|           |          |        | CVT fluid temperature: 50°C (122°F) | 6.0 – 8.0 Ω |
|           |          |        | CVT fluid temperature: 80°C (176°F) | 6.5 – 8.5 Ω |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> There is malfunction of secondary pressure solenoid valve. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).



# P0779 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0779 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:0000000011682820

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name                   | DTC detection condition                                                                                                                                                                                                                                                                                          | Possible causes                                                                                                                                                                                |
|-------|------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0779 | Pressure control solenoid B Intermittent | When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• P0778 is not detected</li><li>• TCM judges that solenoid valve circuit is open or shorted to power supply.</li></ul> | <ul style="list-style-type: none"><li>• Harness or connector (Secondary pressure solenoid valve circuit open or shorted to power supply)</li><li>• Secondary pressure solenoid valve</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Be careful of the driving speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 5 seconds or more.

Selector lever : "D" position

Vehicle speed : 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0779" detected?

YES >> Go to [TM-485, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682821

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and CVT unit harness connector terminal.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F83       | 39       | F82       | 3        | Existed    |

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

#### 2. CHECK CIRCUIT BETWEEN CVT UNIT AND GROUND

Check continuity between CVT unit harness connector terminal and ground.

## P0779 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

| CVT unit  |          | —      | Condition                           | Resistance  |
|-----------|----------|--------|-------------------------------------|-------------|
| Connector | Terminal |        |                                     |             |
| F250      | 3        | Ground | CVT fluid temperature: 20°C (68°F)  | 5.5 – 7.0 Ω |
|           |          |        | CVT fluid temperature: 50°C (122°F) | 6.0 – 8.0 Ω |
|           |          |        | CVT fluid temperature: 80°C (176°F) | 6.5 – 8.5 Ω |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> There is malfunction of secondary pressure solenoid valve. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).

# P0826 UP AND DOWN SHIFT SW

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0826 UP AND DOWN SHIFT SW

### DTC Logic

INFOID:0000000011682822

### DTC DETECTION LOGIC

| DTC   | Trouble diagnosis name           | DTC detection condition                                                                                                                                                                                                                                                                          | Possible causes                                                                                                                                                                                                                                                                                                               |
|-------|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0826 | Up and Down Shift Switch Circuit | <ul style="list-style-type: none"><li>TCM monitors manual mode, non-manual mode, up or down switch signal, and detects as irregular when impossible input pattern occurs 1 second or more.</li><li>When shift up/down signal of paddle shifter continuously remains ON for 60 seconds.</li></ul> | <ul style="list-style-type: none"><li>Manual mode switch</li><li>Combination meter</li><li>Harness or connectors</li><li>(Manual mode switch circuit are open or shorted.)</li><li>(Paddle shifter switch circuit are open or shorted.)</li><li>(CAN communication line is open or shorted.)</li><li>Paddle shifter</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION (PART 1)

##### With CONSULT

- Start the engine.
- Shift the selector lever to "D" position and wait for 60 second or more.
- Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P0826" detected?

YES >> Go to [TM-488, "Diagnosis Procedure"](#).

NO >> GO TO 3.

#### 3. CHECK DTC DETECTION (PART 2)

##### With CONSULT

- Shift the selector lever to manual shift gate and wait for 1 second or more.
- Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P0826" detected?

YES >> Go to [TM-488, "Diagnosis Procedure"](#).

NO >> GO TO 4.

#### 4. CHECK DTC DETECTION (PART 3)

##### With CONSULT

- Shift the selector lever to "UP side (+ side)" and wait for 1 second or more.
- Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P0826" detected?

YES >> Go to [TM-488, "Diagnosis Procedure"](#).

NO >> GO TO 5.

#### 5. CHECK DTC DETECTION (PART 4)

##### With CONSULT

- Shift the selector lever to "DOWN side (- side)" and wait for 1 second or more.
- Select "Self Diagnostic Results" in "TRANSMISSION".

Is "P0826" detected?

YES >> Go to [TM-488, "Diagnosis Procedure"](#).

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:000000011682823

## 1. CHECK DTC (COMBINATION METER)

## ⑧ With CONSULT

1. Turn ignition switch ON.
2. Select "Self Diagnostic Results" in "METER/M&A".

Is any DTC detected?YES >> Check DTC detected item. Refer to [MWI-32, "DTC Index"](#).

NO &gt;&gt; GO TO 2.

## 2. CHECK MANUAL MODE SWITCH SIGNALS

## ⑧ With CONSULT

1. Turn ignition switch ON.
2. Select "Data Monitor" in "TRANSMISSION".
3. Check the On/Off operations of each monitor item.

| Item name          | Monitor item | Condition                           | Status |
|--------------------|--------------|-------------------------------------|--------|
| Manual mode switch | MMODE        | Manual shift gate position          | On     |
|                    |              | Other than the above                | Off    |
|                    | NONMMODE     | Manual shift gate position          | Off    |
|                    |              | Other than the above                | On     |
|                    | UPLVR        | Selector lever: UP (+ side)         | On     |
|                    |              | Other than the above                | Off    |
|                    | DOWNLVR      | Selector lever: DOWN (– side)       | On     |
|                    |              | Other than the above                | Off    |
| Paddle shifter*    | STRDWNSW     | Pressed paddle shifter (shift-down) | On     |
|                    |              | Released paddle shifter             | Off    |
|                    | STRUPSW      | Pressed paddle shifter (shift-up)   | On     |
|                    |              | Released paddle shifter             | Off    |

\*: With paddle shifter

## ⊗ Without CONSULT

Drive vehicle in the manual mode, and confirm that the actual gear position and the meter's indication of the position mutually coincide when the selector lever and paddle shifter\* are shifted to the "+" (up)" or "– (down)" side [1st ⇔ 7th gear].

Is the inspection result normal?YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO-1 (Manual mode switch is abnormal)&gt;&gt;GO TO 3.

NO-2 (Paddle shifter is abnormal)&gt;&gt;GO TO 8.

## 3. CHECK MANUAL MODE SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect CVT shift selector connector.
3. Turn ignition switch ON.
4. Check voltage between CVT shift selector harness connector terminal and ground.

## P0826 UP AND DOWN SHIFT SW

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

| +                  |          | -      | Condition            | Voltage<br>(Approx.) |
|--------------------|----------|--------|----------------------|----------------------|
| CVT shift selector |          |        |                      |                      |
| Connector          | Terminal |        |                      |                      |
| M57                | 7        | Ground | Ignition switch: ON  | 12 V                 |
|                    |          |        | Ignition switch: OFF | 0 V                  |
|                    | 8        |        | Ignition switch: ON  | 12 V                 |
|                    |          |        | Ignition switch: OFF | 0 V                  |
|                    | 9        |        | Ignition switch: ON  | 12 V                 |
|                    |          |        | Ignition switch: OFF | 0 V                  |
|                    | 11       |        | Ignition switch: ON  | 12 V                 |
|                    |          |        | Ignition switch: OFF | 0 V                  |

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 5.

### 4.CHECK MANUAL MODE SWITCH

1. Turn ignition switch OFF.
2. Check manual mode switch. Refer to [TM-491, "Component Inspection \(Manual Mode Switch\)"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace damaged parts.

### 5.CHECK CIRCUIT BETWEEN CVT SHIFT SELECTOR AND COMBINATION METER (PART 1)

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between CVT shift selector harness connector terminals and combination meter harness connector terminals.

| CVT shift selector |          | Combination meter |          | Continuity |
|--------------------|----------|-------------------|----------|------------|
| Connector          | Terminal | Connector         | Terminal |            |
| M57                | 7        | M34               | 36       | Existed    |
|                    | 8        |                   | 16       |            |
|                    | 9        |                   | 14       |            |
|                    | 11       |                   | 37       |            |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts.

### 6.CHECK CIRCUIT BETWEEN CVT SHIFT SELECTOR AND COMBINATION METER (PART 2)

Check continuity between CVT shift selector harness connector terminals and ground.

| CVT shift selector |          | —      | Continuity  |
|--------------------|----------|--------|-------------|
| Connector          | Terminal |        |             |
| M57                | 7        | Ground | Not existed |
|                    | 8        |        |             |
|                    | 9        |        |             |
|                    | 11       |        |             |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

## P0826 UP AND DOWN SHIFT SW

[CVT: RE0F10D]

### < DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace damaged parts.

### 7.CHECK GROUND CIRCUIT

Check continuity between CVT shift selector harness connector terminal and ground.

| CVT shift selector |          | —      | Continuity |
|--------------------|----------|--------|------------|
| Connector          | Terminal |        |            |
| M57                | 10       | Ground | Existed    |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace damaged parts.

### 8.CHECK PADDLE SHIFTER

1. Turn ignition switch OFF.
2. Disconnect paddle shifter connector.
3. Turn ignition switch ON.
4. Check voltage between paddle shifter side harness connector terminals.

| Paddle shifter |          |   | Voltage (Approx.) |
|----------------|----------|---|-------------------|
| Connector      | Terminal |   |                   |
| M96            | 3        | 1 | Battery voltage   |
| M97            | 3        | 1 |                   |

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 11.

### 9.CHECK PADDLE SHIFTER

Check paddle shifter. Refer to [TM-492, "Component Inspection \(Paddle Shifter\)"](#).

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair or replace damaged parts.

### 10.CHECK GROUND CIRCUIT

Check continuity between paddle shifter vehicle side harness connector terminal and ground.

| Paddle shifter |          | Ground | Continuity |
|----------------|----------|--------|------------|
| Connector      | Terminal |        |            |
| M96            | 1        |        | Existed    |
| M97            | 1        |        |            |

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace damaged parts.

### 11.CHECK POWER SOURCE CIRCUIT

Check voltage between paddle shifter vehicle side harness connector terminal and ground.

| Paddle shifter |          | Ground | Voltage (Approx.) |
|----------------|----------|--------|-------------------|
| Connector      | Terminal |        |                   |
| M96            | 3        |        | 0 V               |
| M97            | 3        |        |                   |

Is the inspection result normal?

YES >> GO TO 12.

## P0826 UP AND DOWN SHIFT SW

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

NO >> Repair or replace damaged parts.

### 12. CHECK HARNESS BETWEEN PADDLE SHIFTER AND COMBINATION METER (PART 1)

1. Disconnect combination meter connector.
2. Check continuity between paddle shifter vehicle side harness connector terminals and combination meter vehicle side harness connector terminals.

| Paddle shifter |          | Combination meter |          | Continuity |
|----------------|----------|-------------------|----------|------------|
| Connector      | Terminal | Connector         | Terminal |            |
| M96            | 3        | M34               | 26       | Existed    |
| M97            | 3        |                   | 5        |            |

Is the inspection result normal?

YES >> GO TO 13.

NO >> Repair or replace damaged parts.

### 13. CHECK HARNESS BETWEEN PADDLE SHIFTER AND COMBINATION METER (PART 2)

Check continuity between paddle shifter vehicle side harness connector terminals and ground.

| Paddle shifter |          | Ground | Continuity  |
|----------------|----------|--------|-------------|
| Connector      | Terminal |        |             |
| M96            | 3        |        | Not existed |
| M97            | 3        |        |             |

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair or replace damaged parts.

### 14. DETECT MALFUNCTIONING ITEMS

Check TCM connector pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace TCM. Refer to [TM-547, "Exploded View"](#).

NO >> Repair or replace damaged parts.

## Component Inspection (Manual Mode Switch)

INFOID:0000000011682824

### 1. MANUAL MODE SWITCH

Check continuity between CVT shift selector connector terminals.

| CVT shift selector | Condition                            | Continuity  |
|--------------------|--------------------------------------|-------------|
| Terminal           |                                      |             |
| 7 – 10             | Manual shift gate position (neutral) | Existed     |
|                    | Other than the above                 | Not existed |
| 8 – 10             | Selector lever: DOWN (– side)        | Existed     |
|                    | Other than the above                 | Not existed |
| 9 – 10             | Selector lever: UP (+ side)          | Existed     |
|                    | Other than the above                 | Not existed |
| 10 – 11            | Manual shift gate position           | Not existed |
|                    | Other than the above                 | Existed     |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the CVT shift selector assembly due to malfunction in manual mode switch. Refer to [TM-539, "Removal and Installation"](#).

## P0826 UP AND DOWN SHIFT SW

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

### Component Inspection (Paddle Shifter)

INFOID:000000011740957

#### 1.CHECK PADDLE SHIFTER

Check continuity between paddle shifter connector terminals.

| Paddle shifter |   | Condition                           | Continuity  |
|----------------|---|-------------------------------------|-------------|
| Terminal       |   |                                     |             |
| 1              | 3 | Pressed paddle shifter (shift-up)   | Existed     |
|                |   | Released paddle shifter             | Not existed |
| 1              | 3 | Pressed paddle shifter (shift-down) | Existed     |
|                |   | Released paddle shifter             | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace damaged parts.



# P0841 TRANSMISSION FLUID PRESSURE SEN/SW A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0841 TRANSMISSION FLUID PRESSURE SEN/SW A

### DTC Logic

INFOID:0000000011682825

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                                               | DTC detection condition                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Possible cause                                                                                                                                                                                                                                            |
|-------|---------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0841 | FLUID PRESS SEN/SW A<br>(Transmission Fluid Pressure Sensor/Switch "A" Circuit Range/Performance) | When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• DTC other than the applicable DTC is not detected.</li><li>• Primary pulley speed: 300 rpm or more</li><li>• Secondary pulley speed: 250 rpm or more</li><li>• Target speed for shifting: Less than 0.1 seconds</li><li>• Primary pulley pressure is outside the specified value.</li></ul> | <ul style="list-style-type: none"><li>• Harness or connectors (Secondary pressure sensor circuit is open or shorted.)</li><li>• Harness or connectors (Primary pressure sensor circuit is open or shorted.)</li><li>• Secondary pressure sensor</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following condition for 10 seconds or more.

Selector lever : "D" position

Vehicle speed : Constant speed of 40 km/h (25 MPH)

#### CAUTION:

**Also keep the accelerator pedal position constant.**

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0841" detected?

YES >> Go to [TM-493, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682826

#### 1. CHECK INTERMITTENT INCIDENT

Refer to [GI-44, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace the transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

# P0847 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0847 TRANSMISSION FLUID PRESSURE SEN/SW B

### DTC Logic

INFOID:0000000011682827

#### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                                  | DTC detection condition                                                                                                                                                                                                                                                                                                                                           | Possible causes                                                                                                                                                                                                  |
|-------|--------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0847 | FLUID PRESS SEN/SW B<br>(Transmission Fluid Pressure<br>Sensor/Switch B Circuit Low) | When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"><li>• CVT fluid temperature: More than <math>-20^{\circ}\text{C}</math> (<math>-4^{\circ}\text{F}</math>)</li><li>• TCM power supply voltage: 11 V or more</li><li>• Secondary pressure sensor voltage: 0.09 V or less</li></ul> | <ul style="list-style-type: none"><li>• Harness or connector<br/>(Secondary pressure sensor circuit is open or shorted to ground)</li><li>• Secondary pressure sensor</li><li>• Control valve assembly</li></ul> |

#### DTC CONFIRMATION PROCEDURE

##### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

##### 2. CHECK DTC DETECTION

###### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Maintain the following conditions for 10 seconds or more.

FLUID TEMP :  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ )

5. Check the first trip DTC.

###### With GST

1. Start the engine and wait for at least 10 seconds.

###### **CAUTION:**

**When the ambient temperature is less than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) and the engine is cold, warm up the engine for approximately 5 minutes.**

2. Check the first trip DTC.

Is "P0847" detected?

YES >> Go to [TM-494, "Diagnosis Procedure"](#).

NO >> INSPECTION END

#### Diagnosis Procedure

INFOID:0000000011682828

##### 1. CHECK TCM INPUT SIGNALS

1. Turn ignition switch OFF.
2. Start the engine.
3. Check voltage between TCM harness connector terminals.

| +         |          | –      | Condition                                                                                                                       | Voltage     |
|-----------|----------|--------|---------------------------------------------------------------------------------------------------------------------------------|-------------|
| TCM       |          |        |                                                                                                                                 |             |
| Connector | Terminal |        |                                                                                                                                 |             |
| F83       | 16       | Ground | <ul style="list-style-type: none"><li>• After engine warm up</li><li>• Selector lever: "N" position</li><li>• At idle</li></ul> | 1.2 – 1.3 V |

Is the inspection result normal?

## P0847 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

- YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).  
NO >> GO TO 2.

### 2.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F83       | 11       | F82       | 13       | Existed    |
|           | 16       |           | 14       |            |
|           | 26       |           | 22       |            |

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace malfunctioning parts.

### 3.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 2)

Check continuity between TCM harness connector terminals and ground.

| TCM       |          | —      | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F83       | 16       | Ground | Not existed |
|           | 26       |        |             |

Is the inspection result normal?

- YES >> There is malfunction of secondary pressure sensor. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).  
NO >> Repair or replace malfunctioning parts.

# P0848 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0848 TRANSMISSION FLUID PRESSURE SEN/SW B

### DTC Logic

INFOID:000000011682829

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                                  | DTC detection condition                                                                                                                                                                                                                                                                                                                                                                                                      | Possible causes                                                                                                                                                                                                |
|-------|--------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0848 | FLUID PRESS SEN/SW B<br>(Transmission Fluid Pressure<br>Sensor/Switch B Circuit Low) | When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"><li>• CVT fluid temperature: More than <math>-20^{\circ}\text{C}</math> (<math>-4^{\circ}\text{F}</math>)</li><li>• TCM power supply voltage: More than 11 V</li><li>• Instruction secondary pressure: 5.7 MPa or less</li><li>• Secondary pressure sensor voltage: 4.7 V or more</li></ul> | <ul style="list-style-type: none"><li>• Harness or connector<br/>(Secondary pressure sensor circuit is shorted to power supply)</li><li>• Secondary pressure sensor</li><li>• Control valve assembly</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, the ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Maintain the following conditions for 10 seconds or more.

FLUID TEMP : More than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ )

5. Check the first trip DTC.

##### With GST

1. Start the engine and wait for at least 10 seconds.

##### **CAUTION:**

**When the ambient temperature is less than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) and the engine is cold, warm up the engine for approximately 5 minutes.**

2. Check the first trip DTC.

##### Is "P0848" detected?

YES >> Go to [TM-496, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011682830

#### 1. CHECK TCM INPUT SIGNALS

1. Turn ignition switch OFF.
2. Start the engine.
3. Check voltage between TCM harness connector terminals.

# P0848 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

| +         |          | –      | Condition                                                                                                                       | Voltage     |
|-----------|----------|--------|---------------------------------------------------------------------------------------------------------------------------------|-------------|
| TCM       |          |        |                                                                                                                                 |             |
| Connector | Terminal |        |                                                                                                                                 |             |
| F83       | 16       | Ground | <ul style="list-style-type: none"><li>• After engine warm up</li><li>• Selector lever: “N” position</li><li>• At idle</li></ul> | 1.2 – 1.3 V |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> GO TO 2.

## 2. CHECK SECONDARY PRESSURE SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Connect TCM connector.
3. Disconnect CVT unit connector.
4. Turn ignition switch ON.
5. Check voltage between CVT unit harness connector terminal and ground.

| +         |          | -      | Voltage<br>(Approx.) |
|-----------|----------|--------|----------------------|
| CVT unit  |          |        |                      |
| Connector | Terminal |        |                      |
| F82       | 22       | Ground | 5.0 V                |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

## 3. CHECK SECONDARY PRESSURE SENSOR SIGNAL CIRCUIT

Check voltage between CVT unit harness connector terminal and ground.

| +         |          | -      | Voltage<br>(Approx.) |
|-----------|----------|--------|----------------------|
| CVT unit  |          |        |                      |
| Connector | Terminal |        |                      |
| F82       | 14       | Ground | 0 V                  |

Is the inspection result normal?

YES >> There is malfunction of secondary pressure sensor. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning parts.

# P084C TRANSMISSION FLUID PRESSURE SEN/SW H

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P084C TRANSMISSION FLUID PRESSURE SEN/SW H

### DTC Logic

INFOID:0000000011682831

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                                  | DTC detection condition                                                                                                                                                                                                                                                                                                                                           | Possible causes                                                                                                                                                                                          |
|-------|--------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P084C | FLUID PRESS SEN/SW H<br>(Transmission Fluid Pressure<br>Sensor/Switch H Circuit Low) | When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"><li>• CVT fluid temperature: More than <math>-20^{\circ}\text{C}</math> (<math>-4^{\circ}\text{F}</math>)</li><li>• TCM power supply voltage: More than 11 V</li><li>• Primary pressure sensor voltage: 0.09 V or less</li></ul> | <ul style="list-style-type: none"><li>• Harness or connector (Primary pressure sensor circuit is open or shorted to ground)</li><li>• Primary pressure sensor</li><li>• Control valve assembly</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Maintain the following conditions for 10 seconds or more.

FLUID TEMP : More than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ )

5. Check the first trip DTC.

##### With GST

1. Start the engine and wait for at least 10 seconds.

##### **CAUTION:**

**When the ambient temperature is less than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) and the engine is cold, warm up the engine for approximately 5 minutes.**

2. Check the first trip DTC.

Is "P084C" detected?

YES >> Go to [TM-498, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682832

#### 1. CHECK TCM INPUT SIGNALS

1. Turn ignition switch OFF.
2. Start the engine.
3. Check voltage between TCM harness connector terminals.

| +         |          | –      | Condition                                                                                                                       | Voltage      |
|-----------|----------|--------|---------------------------------------------------------------------------------------------------------------------------------|--------------|
| TCM       |          |        |                                                                                                                                 |              |
| Connector | Terminal |        |                                                                                                                                 |              |
| F83       | 17       | Ground | <ul style="list-style-type: none"><li>• After engine warm up</li><li>• Selector lever: "N" position</li><li>• At idle</li></ul> | 0.7 – 0.85 V |

Is the inspection result normal?

## P084C TRANSMISSION FLUID PRESSURE SEN/SW H

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

- YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).  
NO >> GO TO 2.

### 2.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F83       | 11       | F82       | 18       | Existed    |
|           | 17       |           | 13       |            |
|           | 26       |           | 22       |            |

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace malfunctioning parts.

### 3.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 2)

Check continuity between TCM harness connector terminals and ground.

| TCM       |          | —      | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F83       | 17       | Ground | Not existed |
|           | 26       |        |             |

Is the inspection result normal?

- YES >> There is malfunction of primary pressure sensor. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).  
NO >> Repair or replace malfunctioning parts.

# P084D TRANSMISSION FLUID PRESSURE SEN/SW H

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P084D TRANSMISSION FLUID PRESSURE SEN/SW H

### DTC Logic

INFOID:0000000011682833

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                                        | DTC detection condition                                                                                                                                                                                                                                                                                                                                    | Possible causes                                                                                                                                                                                        |
|-------|--------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P084D | FLUID PRESS SEN/SW H<br>(Transmission Fluid Pressure<br>Sensor/Switch "H" Circuit<br>High) | When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"><li>CVT fluid temperature: More than <math>-20^{\circ}\text{C}</math> (<math>-4^{\circ}\text{F}</math>)</li><li>TCM power supply voltage: More than 11 V</li><li>Primary pressure sensor voltage: 4.7 V or more</li></ul> | <ul style="list-style-type: none"><li>Harness or connector<br/>(Primary pressure sensor circuit is open or shorted to ground)</li><li>Primary pressure sensor</li><li>Control valve assembly</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "FLUID TEMP".
- Maintain the following conditions for 10 seconds or more.

FLUID TEMP : More than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ )

- Check the first trip DTC.

##### With GST

- Start the engine and wait for at least 10 seconds.

##### **CAUTION:**

**When the ambient temperature is less than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) and the engine is cold, warm up the engine for approximately 5 minutes.**

- Check the first trip DTC.

Is "P084D" detected?

YES >> Go to [TM-500, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682834

#### 1. CHECK TCM INPUT SIGNALS

- Turn ignition switch OFF.
- Start the engine.
- Check voltage between TCM harness connector terminals.

| +         |          | –      | Condition                                                                                                                       | Voltage      |
|-----------|----------|--------|---------------------------------------------------------------------------------------------------------------------------------|--------------|
| TCM       |          |        |                                                                                                                                 |              |
| Connector | Terminal |        |                                                                                                                                 |              |
| F83       | 17       | Ground | <ul style="list-style-type: none"><li>• After engine warm up</li><li>• Selector lever: “N” position</li><li>• At idle</li></ul> | 0.7 – 0.85 V |

Is the inspection result normal?



# P084D TRANSMISSION FLUID PRESSURE SEN/SW H

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

- YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).  
NO >> GO TO 2.

## 2.CHECK PRIMARY PRESSURE SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Connect TCM connector.
3. Disconnect CVT unit connector.
4. Turn ignition switch ON.
5. Check voltage between CVT unit harness connector terminal and ground.

| +         |          | -      | Voltage<br>(Approx.) |
|-----------|----------|--------|----------------------|
| CVT unit  |          |        |                      |
| Connector | Terminal |        |                      |
| F82       | 22       | Ground | 5.0 V                |

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace malfunctioning parts.

## 3.CHECK PRIMARY PRESSURE SENSOR SIGNAL CIRCUIT

Check voltage between CVT unit harness connector terminal and ground.

| +         |          | -      | Voltage<br>(Approx.) |
|-----------|----------|--------|----------------------|
| CVT unit  |          |        |                      |
| Connector | Terminal |        |                      |
| F82       | 13       | Ground | 0 V                  |

Is the inspection result normal?

- YES >> There is malfunction of primary pressure sensor. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).  
NO >> Repair or replace malfunctioning parts.

# P0863 TCM COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0863 TCM COMMUNICATION

### DTC Logic

INFOID:000000011682835

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content) | DTC detection condition                                   | Possible causes |
|-------|-----------------------------------------------------|-----------------------------------------------------------|-----------------|
| P0863 | CONTROL UNIT (CAN)<br>(TCM Communication Circuit)   | An error is detected at the initial CAN diagnosis of TCM. | TCM             |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Check the DTC.

Is "P0863" detected?

YES >> Go to [TM-502, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011682836

#### 1. CHECK INTERMITTENT INCIDENT

Refer to [GI-44, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace TCM. Refer to [TM-547, "Removal and Installation"](#).  
NO >> Repair or replace malfunctioning parts.

# P0890 TCM

## DTC Logic

INFOID:0000000011682837

## DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                      | DTC detection condition                                                                                                                                                              | Possible causes                                                                                                                                  |
|-------|--------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| P0890 | TCM<br>(Transmission Control Module<br>Power Relay Sense Circuit<br>Low) | When all of the following conditions are satisfied and this state is maintained for 0.2 seconds:<br>• TCM power supply voltage: More than 11 V<br>• Battery voltage: Less than 8.4 V | <ul style="list-style-type: none"> <li>• Harness or connector (TCM power supply (back-up) circuit is open or shorted.)</li> <li>• TCM</li> </ul> |

## DTC CONFIRMATION PROCEDURE

### 1.PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

### 2.CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the DTC.

Is "P0890" detected?

YES >> Go to [TM-503, "Diagnosis Procedure"](#).

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000011682838

### 1.CHECK TCM POWER SUPPLY (BACK-UP) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check voltage between TCM harness connector terminals and ground.

| +         |          | –      | Voltage   |
|-----------|----------|--------|-----------|
| TCM       |          |        |           |
| Connector | Terminal |        |           |
| F83       | 45       | Ground | 10 – 16 V |
|           | 46       |        |           |

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

### 2.DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open circuit or short circuit in harness between battery positive terminal and TCM connector terminals 45, and 46.
- 10A fuse (No.23, located in the fuse holder). Refer to [PG-79, "Fuse and Fusible Link Arrangement"](#).
- 10A fuse (No.33, located in the fuse holder). Refer to [PG-79, "Fuse and Fusible Link Arrangement"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

### 3.CHECK INTERMITTENT INCIDENT

**< DTC/CIRCUIT DIAGNOSIS >**

Refer to [GI-44, "Intermittent Incident"](#).

Is the inspection result normal?

- YES    >> Replace TCM. Refer to [TM-547, "Removal and Installation"](#).
- NO     >> Repair or replace malfunctioning parts.

# P0962 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0962 PRESSURE CONTROL SOLENOID A

### DTC Logic

INFOID:0000000011682839

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                   | DTC detection condition                                                                                                                                                                                                                                            | Possible causes                                                                                                                                                               |
|-------|-----------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0962 | PC SOLENOID A<br>(Pressure Control Solenoid A<br>Control Circuit Low) | When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• TCM judges that solenoid valve circuit is shorted to ground.</li></ul> | <ul style="list-style-type: none"><li>• Harness or connector<br/>(Line pressure solenoid valve circuit is shorted to ground)</li><li>• Line pressure solenoid valve</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0962" detected?

YES >> Go to [TM-505, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682840

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

| TCM       |          | —      | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F83       | 30       | Ground | Not existed |

Is the inspection result normal?

YES >> GO TO 2.  
NO >> Repair or replace damaged parts.

#### 2. CHECK CIRCUIT BETWEEN CVT UNIT AND GROUND

Check continuity between CVT unit harness connector terminal and ground.

| CVT unit  |          | —      | Condition                           | Resistance  |
|-----------|----------|--------|-------------------------------------|-------------|
| Connector | Terminal |        |                                     |             |
| F250      | 1        | Ground | CVT fluid temperature: 20°C (68°F)  | 5.5 – 7.0 Ω |
|           |          |        | CVT fluid temperature: 50°C (122°F) | 6.0 – 8.0 Ω |
|           |          |        | CVT fluid temperature: 80°C (176°F) | 6.5 – 8.5 Ω |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

## P0962 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

---

NO     >> There is malfunction of line pressure solenoid valve. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).

# P0963 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0963 PRESSURE CONTROL SOLENOID A

### DTC Logic

INFOID:0000000011682841

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                    | DTC detection condition                                                                                                                                                                                                                                                               | Possible causes                                                                                                                                                                             |
|-------|------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0963 | PC SOLENOID A<br>(Pressure Control Solenoid A<br>Control Circuit High) | When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• P0962 is not detected</li><li>• TCM judges that solenoid valve circuit is open.</li></ul> | <ul style="list-style-type: none"><li>• Harness or connector<br/>(Line pressure solenoid valve circuit is open or shorted to power supply)</li><li>• Line pressure solenoid valve</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0963" detected?

YES >> Go to [TM-507, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682842

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F83       | 30       | F82       | 1        | Existed    |

Is the inspection result normal?

YES >> GO TO 2.  
NO >> Repair or replace damaged parts.

#### 2. CHECK CIRCUIT BETWEEN CVT UNIT AND GROUND

Check continuity between CVT unit harness connector terminal and ground.

| CVT unit  |          | —      | Condition                           | Resistance  |
|-----------|----------|--------|-------------------------------------|-------------|
| Connector | Terminal |        |                                     |             |
| F250      | 1        | Ground | CVT fluid temperature: 20°C (68°F)  | 5.5 – 7.0 Ω |
|           |          |        | CVT fluid temperature: 50°C (122°F) | 6.0 – 8.0 Ω |
|           |          |        | CVT fluid temperature: 80°C (176°F) | 6.5 – 8.5 Ω |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

## P0963 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

---

NO     >> There is malfunction of line pressure solenoid valve. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).



# P0965 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0965 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:0000000011682843

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                                 | DTC detection condition                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Possible causes                                                                                                                                                            |
|-------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0965 | PC SOLENOID B<br>(Pressure Control Solenoid B<br>Control Circuit Range Performance) | <p>When any of 1 or 2 is satisfied and this state is maintained for 10 seconds:</p> <ol style="list-style-type: none"><li>When all of the following conditions are satisfied:<ul style="list-style-type: none"><li>DTC other than the applicable DTC is not detected.</li><li>Engine speed: More than 625 rpm</li><li>Selector lever: Other than P/N position</li><li>CVT fluid temperature: More than -20°C (-4°F)</li><li>TCM power supply: More than 11 V</li><li>The difference between instruction pressure of primary pressure and 10-msec-ago instruction primary pressure is 0 MPa or more</li><li>Instruction pressure of primary pressure: 0.86 MPa or more</li><li>Instruction pressure of primary pressure - primary pressure: More than 1.2 MPa</li></ul></li><li>When all of the following conditions are satisfied and this state is maintained for 1 second:<ul style="list-style-type: none"><li>DTC other than the applicable DTC is not detected.</li><li>CVT fluid temperature: More than -20°C (-4°F)</li><li>Selector lever: Other than P/N position</li><li>Engine speed: More than 625 rpm</li><li>Instruction pressure of primary pressure: More than 2 MPa</li><li>Primary pressure: 0.4 MPa or less</li></ul></li></ol> <p>When all of the following conditions are satisfied and this state is maintained for 5.5 seconds:</p> <ul style="list-style-type: none"><li>DTC other than the applicable DTC is not detected.</li><li>CVT fluid temperature: More than -20°C (-4°F)</li><li>Selector lever: Other than P/N position</li><li>Primary pressure - instruction pressure of primary pressure: 1.2 MPa or more</li><li>The difference between instruction pressure of primary pressure and 10-msec-ago instruction primary pressure is 0 MPa or more</li><li>Primary pressure - instruction pressure of primary pressure: More than 1.2 MPa</li></ul> | <ul style="list-style-type: none"><li>Harness or connector (Primary pressure solenoid valve circuit is open or shorted.)</li><li>Primary pressure solenoid valve</li></ul> |

### DTC CONFIRMATION PROCEDURE

## P0965 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

### CAUTION:

Be careful of the driving speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 20 seconds or more.

Vehicle speed : 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0965" detected?

YES >> Go to [TM-510, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682844

#### 1. CHECK INTERMITTENT INCIDENT

Refer to [GI-44, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning parts.

# P0966 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0966 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:0000000011682845

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                   | DTC detection condition                                                                                                                                                                                                                                             | Possible causes                                                                                                                                                                  |
|-------|-----------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0966 | PC SOLENOID B<br>(Pressure Control Solenoid B<br>Control Circuit Low) | When all of the following conditions are satisfied and this state is maintained for 0.48 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• TCM judges that solenoid valve circuit is shorted to ground.</li></ul> | <ul style="list-style-type: none"><li>• Harness or connector<br/>(Primary pressure solenoid valve circuit shorted to ground)</li><li>• Primary pressure solenoid valve</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0966" detected?

YES >> Go to [TM-511, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682846

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

| TCM       |          | —      | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F83       | 40       | Ground | Not existed |

Is the inspection result normal?

YES >> GO TO 2.  
NO >> Repair or replace damaged parts.

#### 2. CHECK CIRCUIT BETWEEN CVT UNIT AND GROUND

Check continuity between CVT unit harness connector terminal and ground.

| CVT unit  |          | —      | Condition                           | Resistance  |
|-----------|----------|--------|-------------------------------------|-------------|
| Connector | Terminal |        |                                     |             |
| F250      | 2        | Ground | CVT fluid temperature: 20°C (68°F)  | 5.5 – 7.0 Ω |
|           |          |        | CVT fluid temperature: 50°C (122°F) | 6.0 – 8.0 Ω |
|           |          |        | CVT fluid temperature: 80°C (176°F) | 6.5 – 8.5 Ω |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

## P0966 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

---

NO     >> There is malfunction of primary pressure solenoid valve. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).

# P0967 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P0967 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:0000000011682847

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)                    | DTC detection condition                                                                                                                                                                                                                                                               | Possible causes                                                                                                                                                                            |
|-------|------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P0967 | PC SOLENOID B<br>(Pressure Control Solenoid B<br>Control Circuit High) | When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• P0966 is not detected</li><li>• TCM judges that solenoid valve circuit is open.</li></ul> | <ul style="list-style-type: none"><li>• Harness or connector (Primary pressure solenoid valve circuit open or shorted to power supply)</li><li>• Primary pressure solenoid valve</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0967" detected?

YES >> Go to [TM-513, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682848

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F83       | 40       | F82       | 2        | Existed    |

Is the inspection result normal?

YES >> GO TO 2.  
NO >> Repair or replace damaged parts.

#### 2. CHECK CIRCUIT BETWEEN CVT UNIT AND GROUND

Check continuity between CVT unit harness connector terminal and ground.

| CVT unit  |          | —      | Condition                           | Resistance  |
|-----------|----------|--------|-------------------------------------|-------------|
| Connector | Terminal |        |                                     |             |
| F250      | 2        | Ground | CVT fluid temperature: 20°C (68°F)  | 5.5 – 7.0 Ω |
|           |          |        | CVT fluid temperature: 50°C (122°F) | 6.0 – 8.0 Ω |
|           |          |        | CVT fluid temperature: 80°C (176°F) | 6.5 – 8.5 Ω |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

## P0967 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

---

NO     >> There is malfunction of primary pressure solenoid valve. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).

# P2765 INPUT SPEED SENSOR B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P2765 INPUT SPEED SENSOR B

### DTC Logic

INFOID:0000000011682853

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content)            | DTC detection condition                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Possible causes                                                                                                                                          |
|-------|----------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| P2765 | INPUT SPEED SENSOR B<br>(Input/Turbine Speed Sensor B Circuit) | <p>When 1 is satisfied and any of 2, 3 or 4 is satisfied and this state is maintained for 5 seconds:</p> <ol style="list-style-type: none"> <li>When all of the following conditions are satisfied: <ul style="list-style-type: none"> <li>- TCM power supply voltage: More than 11 V</li> <li>- After range change completion, it spends 2 seconds or more.</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>- Secondary pulley speed: Less than 149 rpm</li> <li>- Primary pulley speed: 1,000 rpm or more</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 0.5 seconds: <ul style="list-style-type: none"> <li>- 10-msec-ago secondary pulley speed: 1000 rpm or more</li> <li>- Now secondary pulley speed: 0 rpm</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>- Range: D</li> <li>- Engine speed: 450 rpm or more</li> <li>- Primary pulley speed: 300 rpm or more</li> <li>- Secondary pulley speed: 300 rpm or more</li> <li>- Input speed: 300 rpm or more</li> <li>- The difference between engine speed and primary pulley speed is 1,000 rpm or less</li> <li>- The difference between engine speed and input speed is 1,000 rpm or less</li> <li>- The difference between primary pulley speed and input speed is 1,000 rpm or less</li> <li>- Lock-up command is being given (except for slip lock-up)</li> <li>- DTC other than the applicable DTC is not detected.</li> <li>- When any of following items are satisfied: <ul style="list-style-type: none"> <li>• Primary pulley speed/secondary pulley speed: More than 2.9</li> <li>• Primary pulley speed/secondary pulley speed: Less than 0.3</li> </ul> </li> </ul> </li> </ol> | <ul style="list-style-type: none"> <li>• Harness or connector (Output speed sensor circuit is open or shorted)</li> <li>• Output speed sensor</li> </ul> |

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Be careful of the driving speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

# P2765 INPUT SPEED SENSOR B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

>> GO TO 2.

## 2.CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position  
Engine speed : 1,200 rpm or more  
Vehicle speed : 55 km/h (34 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P2765" detected?

YES >> Go to [TM-516. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000011682854

## 1.CHECK OUTPUT SPEED SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect output speed sensor connector.
3. Turn ignition switch ON.
4. Check voltage between output speed sensor harness connector terminal and ground.

| +                   |          | –      | Voltage   |
|---------------------|----------|--------|-----------|
| Output speed sensor |          |        |           |
| Connector           | Terminal |        |           |
| F22                 | 3        | Ground | 10 – 16 V |

Is the inspection result normal?

YES >> GO TO 2.  
NO >> GO TO 6.

## 2.CHECK OUTPUT SPEED SENSOR GROUND CIRCUIT

Check continuity between output speed sensor harness connector terminal and ground.

| Output speed sensor |          | —      | Continuity |
|---------------------|----------|--------|------------|
| Connector           | Terminal |        |            |
| F22                 | 1        | Ground | Existed    |

Is the inspection result normal?

YES >> GO TO 3.  
NO >> Repair or replace malfunctioning parts.

## 3.CHECK CIRCUIT BETWEEN OUTPUT SPEED SENSOR AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between output speed sensor harness connector terminal and TCM harness connector terminal.

| Output speed sensor |          | TCM       |          | Continuity |
|---------------------|----------|-----------|----------|------------|
| Connector           | Terminal | Connector | Terminal |            |
| F22                 | 2        | F83       | 34       | Existed    |

Is the inspection result normal?



## P2765 INPUT SPEED SENSOR B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

- YES >> GO TO 4.  
NO >> Repair or replace malfunctioning parts.

### 4.CHECK CIRCUIT BETWEEN OUTPUT SPEED SENSOR AND TCM (PART 2)

Check continuity between output speed sensor harness connector terminal and ground.


| Output speed sensor |          | —      | Continuity  |
|---------------------|----------|--------|-------------|
| Connector           | Terminal |        |             |
| F22                 | 2        | Ground | Not existed |

Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Repair or replace malfunctioning parts.

### 5.CHECK TCM INPUT SIGNALS

1. Connect all of disconnected connectors.
2. Lift the vehicle.
3. Start the engine.
4. Check frequency of output speed sensor.
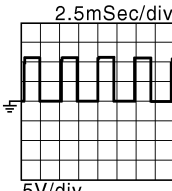
| +         |          | —      | Condition                                                                                                                 | Frequency<br>(Approx.)                                                                                                                                                 |
|-----------|----------|--------|---------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TCM       |          |        |                                                                                                                           |                                                                                                                                                                        |
| Connector | Terminal |        |                                                                                                                           |                                                                                                                                                                        |
| F83       | 34       | Ground | <ul style="list-style-type: none"><li>• Shift position: "M1" position</li><li>• Vehicle speed: 20 km/h (12 MPH)</li></ul> | <div>200 Hz</div> <div>2.5mSec/div</div>  <div>5V/div</div> <div>JSDIA1904GB</div> |

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).  
NO >> Replace output speed sensor. Refer to [TM-557, "Removal and Installation"](#).

### 6.CHECK CIRCUIT BETWEEN IPDM E/R AND OUTPUT SPEED SENSOR

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector terminal and output speed sensor harness connector terminals.

| IPDM E/R  |          | Output speed sensor |          | Continuity |
|-----------|----------|---------------------|----------|------------|
| Connector | Terminal | Connector           | Terminal |            |
| E15       | 57       | F22                 | 3        | Existed    |

Is the check result normal?

- YES >> GO TO 7.  
NO >> Repair or replace malfunctioning parts.

### 7.DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-42, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Short circuit in harness between IPDM E/R harness connector terminal 57 and output speed sensor harness connector terminal 3.
- 10A fuse (No.55, located in the IPDM E/R). Refer to [PG-78, "Fuse, Connector and Terminal Arrangement"](#).
- IPDM E/R

## P2765 INPUT SPEED SENSOR B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

---

Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).
- NO >> Repair or replace malfunctioning parts.

# P2813 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P2813 SELECT SOLENOID

### DTC Logic

INFOID:0000000011682855

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content) | DTC detection condition                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Possible causes       |
|-------|-----------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|
| P2813 | SELECT SOLENOID<br>(Select solenoid)                | <p>When any of 1, or 2 is satisfied:</p> <ol style="list-style-type: none"> <li>When all the following conditions are established three times in 1DC <ul style="list-style-type: none"> <li>Precondition</li> <li>DTC other than the applicable DTC is not detected.</li> <li>Throttle position: More than 6.27 deg.</li> <li>Vehicle speed: Less than 3 km/h (1 MPH)</li> <li>CVT fluid temperature: More than 20°C (68°F)</li> <li>Selector lever: Other than P, N</li> <li>Turbine speed when performed N → D, N (P) → R: More than 500 rpm</li> <li>TCM power supply voltage: More than 11 V</li> </ul> </li> <li>Detection time <ul style="list-style-type: none"> <li>N → D: 0.4 seconds</li> <li>N → R: 0.3 seconds</li> <li>P → R: 0.3 seconds</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 30 seconds: <ul style="list-style-type: none"> <li>The counting of time continues while all of the following conditions are satisfied and stops when the conditions become unsatisfied (the count is maintained).</li> </ul> </li> </ol> <p>When accumulated time reaches 30 seconds (Clutch is judged as engaged and the count is reset.)</p> <ul style="list-style-type: none"> <li>Selector lever: Other than P, N</li> <li>Vehicle speed: Less than 3 km/h (1 MPH)</li> <li>Differences between primary pulley speed and secondary speed: Less than 120 rpm</li> <li>Clutch instructions pressure: 0.95 MPa or more</li> <li>Differences between turbine speed and input speed: Less than 200 rpm</li> <li>Turbine speed – speed: More than 450 rpm</li> <li>DTC other than the applicable DTC is not detected.</li> <li>TCM power supply voltage: More than 11 V</li> </ul> | Select solenoid valve |

#### NOTE:

DC stands for "DRIVING CYCLE" and indicates a series of driving cycle of "Ignition switch OFF → ON → driving → OFF".

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

## P2813 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

>> GO TO 2.

### 2.CHECK DTC DETECTION 1

---

1. Start the engine.
2. Maintain the following conditions. (Keep 30 seconds or more after the selector lever shifted.)

Selector lever : N→ D, N → R, P→ R

3. Check the first trip DTC.

Is "P2813"detected?

- YES >> Go to [TM-520. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011682856

### 1.CHECK INTERMITTENT INCIDENT

---

Refer to [GI-44. "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace transaxle assembly. Refer to [TM-570. "Removal and Installation"](#).  
NO >> Repair or replace malfunctioning parts.

# P2814 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P2814 SELECT SOLENOID

### DTC Logic

INFOID:0000000011682857

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content) | DTC detection condition                                                                                                                                                                                                                                           | Possible causes                                                                                                                                          |
|-------|-----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| P2814 | SELECT SOLENOID<br>(Select solenoid)                | When all of the following conditions are satisfied and this state is maintained for 0.48 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: 11 V or more</li><li>• TCM judges that solenoid valve circuit is shorted to ground.</li></ul> | <ul style="list-style-type: none"><li>• Harness or connector (Select solenoid valve circuit shorted to ground)</li><li>• Select solenoid valve</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Maintain the following conditions. (Keep 5 seconds or more after the selector lever shifted.)

Selector lever : N → D, N → R, P → R

3. Check the first trip DTC.

Is "P2814" detected?

YES >> Go to [TM-521. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682858

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

| TCM       |          | —      | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| F83       | 37       | Ground | Not existed |

Is the inspection result normal?

YES >> GO TO 2.  
NO >> Repair or replace damaged parts.

#### 2. CHECK CIRCUIT BETWEEN CVT UNIT AND GROUND

Check continuity between CVT unit harness connector terminal and ground.

| CVT unit  |          | —      | Condition                           | Resistance  |
|-----------|----------|--------|-------------------------------------|-------------|
| Connector | Terminal |        |                                     |             |
| F250      | 4        | Ground | CVT fluid temperature: 20°C (68°F)  | 5.5 – 7.0 Ω |
|           |          |        | CVT fluid temperature: 50°C (122°F) | 6.0 – 8.0 Ω |
|           |          |        | CVT fluid temperature: 80°C (176°F) | 6.5 – 8.5 Ω |

## P2814 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

---

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> There is malfunction of select solenoid valve. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).

# P2815 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## P2815 SELECT SOLENOID

### DTC Logic

INFOID:0000000011682859

### DTC DETECTION LOGIC

| DTC   | CONSULT screen terms<br>(Trouble diagnosis content) | DTC detection condition                                                                                                                                                                                                                                                                | Possible causes                                                                                                                                                        |
|-------|-----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P2815 | SELECT SOLENOID<br>(Select solenoid)                | When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• TCM judges that solenoid valve circuit is open.</li><li>• P2814 is not detected.</li></ul> | <ul style="list-style-type: none"><li>• Harness or connector (Select solenoid valve circuit open or shorted to power supply)</li><li>• Select solenoid valve</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1.PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2.CHECK DTC DETECTION

1. Start the engine.
2. Maintain the following conditions. (Keep 5 seconds or more after the selector lever shifted.)

Selector lever : N → D, N → R, P → R

3. Check the first trip DTC.

Is "P2815" detected?

YES >> Go to [TM-523. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011682860

#### 1.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

| TCM       |          | CVT unit  |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| F83       | 37       | F82       | 4        | Existed    |

Is the inspection result normal?

YES >> GO TO 2.  
NO >> Repair or replace damaged parts.

#### 2.CHECK CIRCUIT BETWEEN CVT UNIT AND GROUND

Check continuity between CVT unit harness connector terminal and ground.

## P2815 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

| CVT unit  |          | —      | Condition                           | Resistance  |
|-----------|----------|--------|-------------------------------------|-------------|
| Connector | Terminal |        |                                     |             |
| F250      | 4        | Ground | CVT fluid temperature: 20°C (68°F)  | 5.5 – 7.0 Ω |
|           |          |        | CVT fluid temperature: 50°C (122°F) | 6.0 – 8.0 Ω |
|           |          |        | CVT fluid temperature: 80°C (176°F) | 6.5 – 8.5 Ω |

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).

NO >> There is malfunction of select solenoid valve. Replace transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).



# MAIN POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## MAIN POWER SUPPLY AND GROUND CIRCUIT

### Diagnosis Procedure

INFOID:0000000011682861

#### 1.CHECK TCM POWER CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check voltage between TCM harness connector terminals and ground.

| +         |          | –      | Voltage   |
|-----------|----------|--------|-----------|
| TCM       |          |        |           |
| Connector | Terminal |        |           |
| F83       | 45       | Ground | 10 – 16 V |
|           | 46       |        |           |

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 4.

#### 2.CHECK TCM POWER CIRCUIT (PART 2)

Check voltage between TCM harness connector terminals and ground.

| +         |          | –      | Condition           | Voltage     |
|-----------|----------|--------|---------------------|-------------|
| TCM       |          |        |                     |             |
| Connector | Terminal |        |                     |             |
| F83       | 47       | Ground | Ignition switch ON  | 10 – 16 V   |
|           |          |        | Ignition switch OFF | Approx. 0 V |
|           | 48       |        | Ignition switch ON  | 10 – 16 V   |
|           |          |        | Ignition switch OFF | Approx. 0 V |

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 5.

#### 3.CHECK TCM GROUND CIRCUIT

Check continuity between TCM harness connector terminals and ground.

| TCM       |          | —      | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal |        |            |
| F83       | 41       | Ground | Existed    |
|           | 42       |        |            |

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).  
NO >> Repair or replace malfunctioning parts.

#### 4.DETECT MALFUNCTION ITEMS (PART 1)

Check the following items:

- Open circuit or short circuit in harness between battery positive terminal and TCM connector terminal 45, and 46.
- 10A fuse (No.23, located in the fuse holder). Refer to [PG-79, "Fuse and Fusible Link Arrangement"](#).
- 10A fuse (No.33, located in the fuse holder). Refer to [PG-79, "Fuse and Fusible Link Arrangement"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).  
NO >> Repair or replace malfunctioning parts.

# MAIN POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## 5. CHECK CIRCUIT BETWEEN IPDM E/R AND TCM

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector terminal and TCM harness connector terminals.

| IPDM E/R  |          | TCM       |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| E15       | 57       | F83       | 47       | Existed    |
|           |          |           | 48       |            |

Is the check result normal?

- YES >> GO TO 6.  
NO >> Repair or replace malfunctioning parts.

## 6. DETECT MALFUNCTIONING ITEMS (PART 2)

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-42, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Short circuit in harness between IPDM E/R harness connector terminal 57 and TCM harness connector terminals 47, and 48.
- 10A fuse (No.55, located in the IPDM E/R). Refer to [PG-78, "Fuse, Connector and Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-44, "Intermittent Incident"](#).  
NO >> Repair or replace malfunctioning parts.

# SHIFT POSITION INDICATOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

## SHIFT POSITION INDICATOR CIRCUIT

### Component Parts Function Inspection

INFOID:0000000011682862

#### 1.CHECK SHIFT POSITION INDICATOR

1. Start the engine.
2. Shift selector lever.
3. Check that the selector lever position and the shift position indicator on the combination meter are identical.

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Go to [TM-527, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000011682863

#### 1.CHECK TCM INPUT/OUTPUT SIGNAL

##### ⓂWith CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "RANGE".
4. Shift selector lever.
5. Check that selector lever position, "RANGE" on CONSULT screen, and shift position indicator display on combination meter are identical.

Is the check result normal?

- YES >> INSPECTION END  
NO-1 ("RANGE" is changed but is not displayed on shift position indicator.)>>Check "Self Diagnostic Result" in "TRANSMISSION".  
NO-2 ("RANGE" and shift position indicator are different.)>>Check "Self Diagnostic Result" in "TRANSMISSION".  
NO-3 (Specific "RANGE" is not displayed on shift position indicator.)>>Check "Self Diagnostic Result" in "METER/M&A".

## SHIFT LOCK SYSTEM

## Component Function Check

INFOID:0000000011682864

**1.CHECK SHIFT LOCK OPERATION (PART 1)**

1. Turn ignition ON.
2. Shift the selector lever to "P" position.
3. Attempt to shift the selector lever to any other than position with the brake pedal released.

Can the selector lever be shifted to any other position?

- YES >> Go to [TM-528, "Diagnosis Procedure"](#).  
 NO >> GO TO 2.

**2.CHECK SHIFT LOCK OPERATION (PART 2)**

Attempt to shift the selector lever to any other than position with the brake pedal depressed.

Can the selector lever be shifted to any other position?

- YES >> INSPECTION END  
 NO >> Go to [TM-528, "Diagnosis Procedure"](#).

## Diagnosis Procedure

INFOID:0000000011682865

**1.CHECK POWER SOURCE (PART 1)**

1. Turn ignition switch OFF.
2. Disconnect stop lamp switch connector
3. Turn ignition switch ON.
4. Check the voltage between the stop lamp switch harness connector terminal and ground.

|                  |          |        |                 |
|------------------|----------|--------|-----------------|
| +                |          | -      | Voltage         |
| Stop lamp switch |          |        |                 |
| Connector        | Terminal |        |                 |
| E102             | 3        | Ground | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> GO TO 8.

**2.CHECK STOP LAMP SWITCH (PART 1)**

Check stop lamp switch. Refer to [TM-529, "Component Inspection \(Stop Lamp Switch\)"](#).

Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> GO TO 9.

**3.CHECK CIRCUIT BETWEEN STOP LAMP SWITCH AND CVT SHIFT SELECTOR**

1. Disconnect CVT shift selector connector
2. Check the continuity between the stop lamp switch harness connector terminal and the CVT shift selector harness connector terminal.

|                  |          |                    |          |            |
|------------------|----------|--------------------|----------|------------|
| Stop lamp switch |          | CVT shift selector |          | Continuity |
| Connector        | Terminal | Connector          | Terminal |            |
| E102             | 4        | M57                | 3        | Existed    |

3. Also check short circuit in harness.

Is the inspection result normal?

- YES >> GO TO 4.  
 NO >> Repair or replace the malfunctioning parts.

**4.CHECK GROUND CIRCUIT**

# SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

Check the continuity between the CVT shift selector harness connector terminal and ground.

| CVT shift selector |          | —      | Continuity |
|--------------------|----------|--------|------------|
| Connector          | Terminal |        |            |
| M57                | 4        | Ground | Existed    |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace the malfunctioning parts.

## 5.CHECK PART POSITION SWITCH

1. Disconnect park position switch connector.

2. Check park position switch. Refer to [TM-530, "Component Inspection \(Park Position Switch\)"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace the malfunctioning parts.

## 6.CHECK SHIFT LOCK SOLENOID

1. Disconnect shift lock solenoid connector.

2. Check shift lock solenoid. Refer to [TM-530, "Component Inspection \(Shift Lock Solenoid\)"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace the malfunctioning parts.

## 7.CHECK CVT SHIFT SELECTOR HARNESS

Check CVT shift selector harness. Refer to [TM-530, "Component Inspection \(CVT Shift Selector Harness\)"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace the malfunctioning parts.

## 8.DETECT MALFUNCTIONING ITEM

Check the following items:

- Open circuit or short circuit in harness between ignition switch and stop lamp switch connector. Refer to [PG-42, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Ignition switch
- 10A fuse [No.3, fuse block (J/B)]. Refer to [PG-78, "Fuse, Connector and Terminal Arrangement"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace the malfunctioning parts.

## 9.CHECK INSTALLATION POSITION OF STOP LAMP SWITCH

Adjust stop lamp switch position. Refer to [BR-9, "Inspection and Adjustment"](#).

>> GO TO 10.

## 10.CHECK STOP LAMP SWITCH (PART 2)

Check stop lamp switch. Refer to [TM-529, "Component Inspection \(Stop Lamp Switch\)"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace the malfunctioning parts.

## Component Inspection (Stop Lamp Switch)

INFOID:0000000011682866

## 1.CHECK STOP LAMP SWITCH

Check continuity between the stop lamp switch connector terminals.

# SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

| Stop lamp switch |  | Condition             | Continuity |
|------------------|--|-----------------------|------------|
| Terminal         |  |                       |            |
| 3 – 4            |  | Depressed brake pedal | Yes        |
|                  |  | Released brake pedal  | No         |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace stop lamp switch. Refer to [BR-20. "Exploded View"](#).

## Component Inspection (Park Position Switch)

INFOID:000000011682867

### 1.CHECK PARK POSITION SWITCH

Check continuity between park position switch connector terminals.

#### CAUTION:

- Connect the fuse between the terminals when applying the voltage.
- Never cause shorting between terminals.

| Park position switch |  | Condition                             | Continuity  |
|----------------------|--|---------------------------------------|-------------|
| Terminal             |  |                                       |             |
| 1 – 2                |  | Shift selector lever to "P" position. | Existed     |
|                      |  | Other than above                      | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace park position switch. Refer to [TM-540. "Disassembly and Assembly"](#).

## Component Inspection (Shift Lock Solenoid)

INFOID:000000011682868

### 1.CHECK SHIFT LOCK SOLENOID

Apply voltage to terminals of shift lock solenoid connector and check that shift lock solenoid is activated.

#### CAUTION:

- Connect the fuse between the terminals when applying the voltage.
- Never cause shorting between terminals.

| Shift lock solenoid |   | Condition                                        | Status                       |
|---------------------|---|--------------------------------------------------|------------------------------|
| + (fuse)            | – |                                                  |                              |
| Terminal            |   |                                                  |                              |
| 1                   | 2 | Apply battery voltage between terminals 1 and 2. | Shift lock solenoid operates |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace shift lock unit. Refer to [TM-540. "Disassembly and Assembly"](#).

## Component Inspection (CVT Shift Selector Harness)

INFOID:000000011682869

### 1.CHECK CVT SHIFT SELECTOR HARNESS (PART 1)

Check continuity between CVT shift selector harness connector terminal and shift lock solenoid harness connector terminal.

| CVT shift selector |          | Shift lock solenoid |          | Continuity |
|--------------------|----------|---------------------|----------|------------|
| Connector          | Terminal | Connector           | Terminal |            |
| M324               | 3        | M326                | 1        | Existed    |

Is the inspection result normal?

# SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10D]

YES >> GO TO 2.

NO >> Replace CVT shift selector assembly. Refer to [TM-539, "Removal and Installation"](#).

## 2.CHECK CVT SHIFT SELECTOR HARNESS (PART 2)

Check continuity between shift lock solenoid harness connector terminal and park position switch harness connector terminal.

| Shift lock solenoid |          | Park position switch |          | Continuity |
|---------------------|----------|----------------------|----------|------------|
| Connector           | Terminal | Connector            | Terminal |            |
| M326                | 2        | M325                 | 1        | Existed    |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace CVT shift selector assembly. Refer to [TM-539, "Removal and Installation"](#).

## 3.CHECK CVT SHIFT SELECTOR HARNESS (PART 3)

Check continuity between park switch harness connector terminal and CVT shift selector harness connector terminal.

| Park switch |          | CVT shift selector |          | Continuity |
|-------------|----------|--------------------|----------|------------|
| Connector   | Terminal | Connector          | Terminal |            |
| M325        | 2        | M324               | 4        | Existed    |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace CVT shift selector harness. Refer to [TM-539, "Removal and Installation"](#).

## 4.CHECK CVT SHIFT SELECTOR HARNESS (PART 4)

Check harness cladding CVT shift selector harness for damage.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace CVT shift selector assembly. Refer to [TM-539, "Removal and Installation"](#).





# CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10D]

| Symptom               |                                                                    | Engine system                                                     |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|-----------------------|--------------------------------------------------------------------|-------------------------------------------------------------------|---|---|---|---|----|----|----|----|---|--|---|---|----|----|---|
|                       |                                                                    | CAN communication line                                            |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | Transmission range switch (P0705, P0706)                          |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | Input speed sensor (P0717)                                        |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | Primary speed sensor (P0715)                                      |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | Output speed sensor (P2765)                                       |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | CVT fluid temperature sensor (P0712, P0713)                       |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | Primary pressure sensor (P084C, P084D)                            |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | Secondary pressure sensor (P0841, P0847, P0848)                   |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | Torque converter clutch solenoid valve (P0740, P0743, P0744)      |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | Manual mode switch                                                |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | Stall test                                                        |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | CVT position                                                      |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | Power supply                                                      |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | Control valve                                                     |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | CVT fluid level and state                                         |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | Ignition switch and starter                                       |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | EC-728                                                            |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | TM-411                                                            |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | TM-434                                                            |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | TM-435                                                            |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | TM-525                                                            |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | TM-550                                                            |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | TM-437                                                            |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
|                       |                                                                    | PG-42, STR-16 (With GR8-1200 NI),<br>STR-19 (Without GR8-1200 NI) |   |   |   |   |    |    |    |    |   |  |   |   |    |    |   |
| Slips/Will Not Engage | Vehicle cannot be started from D position.                         | 8                                                                 | 3 |   | 5 | 6 | 7  | 9  | 10 | 11 |   |  | 4 | 2 | 12 | 13 | 1 |
|                       | Vehicle cannot be started from R position.                         | 8                                                                 | 3 |   | 5 | 6 | 7  | 9  | 10 | 11 |   |  | 4 | 2 | 12 | 13 | 1 |
|                       | Does not lock-up.                                                  | 2                                                                 | 6 | 8 | 3 | 4 | 10 | 9  | 11 | 12 | 5 |  | 7 |   |    | 13 | 1 |
|                       | Does not hold lock-up condition.                                   | 2                                                                 | 6 | 8 | 3 | 4 | 10 | 9  | 11 | 12 | 5 |  | 7 |   |    | 13 | 1 |
|                       | Lock-up is not released.                                           | 2                                                                 | 6 |   | 3 | 4 |    |    |    |    | 5 |  | 7 |   |    | 8  | 1 |
|                       | With selector lever in D position, acceleration is extremely poor. | 3                                                                 | 4 | 5 | 7 | 8 | 9  | 12 | 10 | 11 |   |  | 2 | 6 | 13 | 14 | 1 |
|                       | With selector lever in R position, acceleration is extremely poor. | 3                                                                 | 4 | 5 | 7 | 8 | 9  | 12 | 10 | 11 |   |  | 2 | 6 | 13 | 14 | 1 |
|                       | Slips at lock-up.                                                  | 2                                                                 | 6 | 8 | 3 | 4 | 10 | 9  | 11 | 12 | 5 |  | 7 |   |    | 13 | 1 |

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10D]

| Symptom | Engine system                                                                                                                                                |                                          |                            |                              |                             |                                             |                                        |                                                 |                                                              |                    |            |                        |                        |                        |                           |                                                                                                                    |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------|----------------------------|------------------------------|-----------------------------|---------------------------------------------|----------------------------------------|-------------------------------------------------|--------------------------------------------------------------|--------------------|------------|------------------------|------------------------|------------------------|---------------------------|--------------------------------------------------------------------------------------------------------------------|
|         | CAN communication line                                                                                                                                       | Transmission range switch (P0705, P0706) | Input speed sensor (P0717) | Primary speed sensor (P0715) | Output speed sensor (P2765) | CVT fluid temperature sensor (P0712, P0713) | Primary pressure sensor (P084C, P084D) | Secondary pressure sensor (P0841, P0847, P0848) | Torque converter clutch solenoid valve (P0740, P0743, P0744) | Manual mode switch | Stall test | CVT position           | Power supply           | Control valve          | CVT fluid level and state | Ignition switch and starter                                                                                        |
|         | <a href="#">EC-728</a>                                                                                                                                       | <a href="#">TM-411</a>                   |                            |                              |                             |                                             |                                        |                                                 |                                                              |                    |            | <a href="#">TM-434</a> | <a href="#">TM-435</a> | <a href="#">TM-525</a> | <a href="#">TM-550</a>    | <a href="#">TM-437</a>                                                                                             |
|         |                                                                                                                                                              |                                          |                            |                              |                             |                                             |                                        |                                                 |                                                              |                    |            |                        |                        |                        |                           | <a href="#">PG-42</a> , <a href="#">STR-16</a> (With GR8-1200 NI),<br><a href="#">STR-19</a> (Without GR8-1200 NI) |
| Other   | No creep at all.                                                                                                                                             | 2                                        | 4                          | 3                            | 7                           | 8                                           | 9                                      | 10                                              | 11                                                           | 12                 |            | 5                      | 6                      | 13                     | 14                        | 1                                                                                                                  |
|         | Vehicle cannot run in any position.                                                                                                                          | 8                                        |                            | 2                            | 5                           | 6                                           | 7                                      | 9                                               | 10                                                           | 11                 |            | 3                      | 4                      | 12                     | 13                        | 1                                                                                                                  |
|         | With selector lever in D position, driving is not possible.                                                                                                  | 8                                        |                            | 2                            | 5                           | 6                                           | 7                                      | 9                                               | 10                                                           | 11                 |            | 3                      | 4                      | 12                     | 13                        | 1                                                                                                                  |
|         | With selector lever in R position, driving is not possible.                                                                                                  | 8                                        |                            | 2                            | 5                           | 6                                           | 7                                      | 9                                               | 10                                                           | 11                 |            | 3                      | 4                      | 12                     | 13                        | 1                                                                                                                  |
|         | Judder occurs during lock-up.                                                                                                                                | 2                                        | 6                          |                              | 3                           | 4                                           | 5                                      |                                                 |                                                              |                    | 7          |                        |                        |                        | 8                         | 1                                                                                                                  |
|         | Strange noise in D position.                                                                                                                                 | 2                                        | 3                          |                              |                             |                                             |                                        |                                                 |                                                              |                    |            |                        |                        |                        | 4                         | 1                                                                                                                  |
|         | Strange noise in R position.                                                                                                                                 | 2                                        | 3                          |                              |                             |                                             |                                        |                                                 |                                                              |                    |            |                        |                        |                        | 4                         | 1                                                                                                                  |
|         | Strange noise in N position.                                                                                                                                 | 2                                        | 3                          |                              |                             |                                             |                                        |                                                 |                                                              |                    |            |                        |                        |                        | 4                         | 1                                                                                                                  |
|         | Vehicle does not decelerate by engine brake.                                                                                                                 | 7                                        | 3                          |                              | 4                           | 5                                           | 6                                      |                                                 |                                                              |                    |            | 2                      |                        |                        | 8                         | 1                                                                                                                  |
|         | Maximum speed low.                                                                                                                                           | 2                                        | 3                          |                              | 5                           | 6                                           | 7                                      |                                                 | 8                                                            | 9                  | 11         | 4                      |                        |                        | 10                        | 1                                                                                                                  |
|         | With selector lever in P position, vehicle does not enter parking condition or, with selector lever in another position, parking condition is not cancelled. |                                          |                            | 1                            |                             |                                             |                                        |                                                 |                                                              |                    |            | 2                      |                        |                        |                           |                                                                                                                    |
|         | Vehicle runs with CVT in P position.                                                                                                                         |                                          |                            | 1                            |                             |                                             |                                        |                                                 |                                                              |                    |            | 3                      |                        |                        | 4                         | 2                                                                                                                  |
|         | Vehicle runs with CVT in N position.                                                                                                                         |                                          |                            | 1                            |                             |                                             |                                        |                                                 |                                                              |                    |            | 3                      |                        |                        | 4                         | 2                                                                                                                  |

# CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10D]

| Symptom |                                                       | Engine system                                                  |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|---------|-------------------------------------------------------|----------------------------------------------------------------|---|---|---|---|---|--|---|---|---|---|---|---|---|----|---|
|         |                                                       | CAN communication line                                         |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | Transmission range switch (P0705, P0706)                       |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | Input speed sensor (P0717)                                     |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | Primary speed sensor (P0715)                                   |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | Output speed sensor (P2765)                                    |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | CVT fluid temperature sensor (P0712, P0713)                    |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | Primary pressure sensor (P084C, P084D)                         |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | Secondary pressure sensor (P0841, P0847, P0848)                |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | Torque converter clutch solenoid valve (P0740, P0743, P0744)   |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | Manual mode switch                                             |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | Stall test                                                     |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | CVT position                                                   |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | Power supply                                                   |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | Control valve                                                  |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | CVT fluid level and state                                      |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | Ignition switch and starter                                    |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | EC-728                                                         |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | TM-411                                                         |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | TM-434                                                         |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | TM-435                                                         |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | TM-525                                                         |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | TM-550                                                         |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | TM-437                                                         |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
|         |                                                       | PG-42, STR-16 (With GR8-1200 NI), STR-19 (Without GR8-1200 NI) |   |   |   |   |   |  |   |   |   |   |   |   |   |    |   |
| Other   | Engine stall.                                         | 2                                                              | 6 |   | 3 | 4 |   |  | 8 | 9 | 5 |   | 7 |   |   | 10 | 1 |
|         | Engine stalls when selector lever shifted N → D or R. | 2                                                              | 6 |   | 3 | 4 |   |  |   |   | 5 |   |   |   |   | 7  | 1 |
|         | Engine speed does not return to idle.                 | 2                                                              | 4 |   |   |   | 3 |  |   |   |   |   |   |   |   | 5  | 1 |
|         | Engine does not start in N or P position.             |                                                                |   | 3 |   |   |   |  |   |   |   |   | 2 |   |   |    | 1 |
|         | Does not shift.                                       | 3                                                              | 4 |   | 5 | 6 | 7 |  |   |   |   |   | 2 |   |   | 8  | 1 |
|         | Cannot be changed to manual mode.                     |                                                                | 4 | 2 |   | 6 | 6 |  |   |   |   | 1 |   | 3 | 5 |    |   |
|         | Engine starts in positions other than N or P.         |                                                                |   | 3 |   |   |   |  |   |   |   |   |   | 2 |   |    | 1 |

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10D]

Symptom Table 2

| Symptom               |                                                                    | Torque converter | Transmission range switch | Oil pump | Forward clutch | Reverse brake | Planetary gear | Bearings | Parking mechanism | Stop lamp switch | Shift lock solenoid | CVT shift selector |
|-----------------------|--------------------------------------------------------------------|------------------|---------------------------|----------|----------------|---------------|----------------|----------|-------------------|------------------|---------------------|--------------------|
|                       |                                                                    | TM-574           | TM-570                    |          |                |               |                |          |                   | TM-529           | TM-530              | TM-539             |
| Shift Shock           | Large shock (N→D position)                                         |                  | 2                         |          | 1              |               |                |          |                   |                  |                     |                    |
|                       | Large shock (N→R position)                                         |                  | 2                         |          |                | 1             |                |          |                   |                  |                     |                    |
|                       | Shock is too large for lock-up.                                    | 1                |                           |          |                |               |                |          |                   |                  |                     |                    |
| Slips/Will Not Engage | Vehicle cannot be started from D position.                         |                  | 3                         | 1        | 2              |               |                |          |                   |                  |                     |                    |
|                       | Vehicle cannot be started from R position.                         |                  | 4                         | 1        |                | 2             |                |          | 3                 |                  |                     |                    |
|                       | Does not lock-up.                                                  | 1                | 3                         | 2        |                |               |                |          |                   |                  |                     |                    |
|                       | Does not hold lock-up condition.                                   | 1                | 3                         | 2        |                |               |                |          |                   |                  |                     |                    |
|                       | Lock-up is not released.                                           | 1                |                           | 2        |                |               |                |          |                   |                  |                     |                    |
|                       | With selector lever in D position, acceleration is extremely poor. | 1                | 3                         |          | 2              |               |                |          |                   |                  |                     |                    |
|                       | With selector lever in R position, acceleration is extremely poor. | 1                | 4                         | 2        |                | 3             |                |          |                   |                  |                     |                    |
|                       | Slips at lock-up.                                                  | 1                |                           | 2        |                |               |                |          |                   |                  |                     |                    |

# CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10D]

| Symptom |                                                                                                                                                              | Torque converter | Transmission range switch | Oil pump | Forward clutch | Reverse brake | Planetary gear | Bearings | Parking mechanism | Stop lamp switch | Shift lock solenoid | CVT shift selector |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|---------------------------|----------|----------------|---------------|----------------|----------|-------------------|------------------|---------------------|--------------------|
|         |                                                                                                                                                              | TM-574           | TM-570                    |          |                |               |                |          |                   | TM-529           | TM-530              | TM-539             |
| Other   | No creep at all.                                                                                                                                             | 1                | 6                         | 2        | 4              | 5             | 3              |          |                   |                  |                     |                    |
|         | Vehicle cannot run in all positions.                                                                                                                         | 1                |                           | 2        | 4              | 5             | 3              |          | 6                 |                  |                     |                    |
|         | With selector lever in D position, driving is not possible.                                                                                                  | 1                |                           | 2        | 4              |               | 3              |          | 5                 |                  |                     |                    |
|         | With selector lever in R position, driving is not possible.                                                                                                  | 1                |                           | 2        |                | 4             | 3              |          | 5                 |                  |                     |                    |
|         | Judder occurs during lock-up.                                                                                                                                | 1                |                           |          |                |               |                |          |                   |                  |                     |                    |
|         | Strange noise in D position.                                                                                                                                 | 1                |                           | 2        | 4              |               | 3              | 5        |                   |                  |                     |                    |
|         | Strange noise in R position.                                                                                                                                 | 1                |                           | 2        |                | 4             | 3              |          |                   |                  |                     |                    |
|         | Strange noise in N position.                                                                                                                                 | 1                |                           | 2        |                |               | 3              |          |                   |                  |                     |                    |
|         | Maximum speed low.                                                                                                                                           | 1                | 5                         | 2        | 4              |               | 3              |          |                   |                  |                     |                    |
|         | With selector lever in P position, vehicle does not enter parking condition or, with selector lever in another position, parking condition is not cancelled. |                  |                           |          |                |               |                |          | 1                 |                  |                     |                    |
|         | Vehicle runs with CVT in P position.                                                                                                                         |                  |                           |          |                |               | 2              |          | 1                 |                  |                     |                    |
|         | Vehicle runs with CVT in N position.                                                                                                                         |                  |                           |          | 2              | 3             | 1              |          |                   |                  |                     |                    |
|         | Engine stall.                                                                                                                                                | 1                |                           |          |                |               |                |          |                   |                  |                     |                    |
|         | Engine stalls when selector lever shifted N → D or R.                                                                                                        | 1                |                           |          |                |               |                |          |                   |                  |                     |                    |
|         | Does not shift.                                                                                                                                              |                  |                           | 1        |                |               |                |          |                   |                  |                     |                    |
|         | Cannot be changed to manual mode.                                                                                                                            |                  |                           |          |                |               |                |          |                   |                  |                     | 1                  |
|         | When brake pedal is depressed with ignition switch ON, selector lever cannot be shifted from P position to other position.                                   |                  |                           |          |                |               |                |          |                   | 1                | 2                   | 3                  |
|         | When brake pedal is not depressed with ignition switch ON, selector lever can be shifted from P position to other position.                                  |                  |                           |          |                |               |                |          |                   | 1                | 2                   | 3                  |

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## PERIODIC MAINTENANCE


### CVT FLUID

#### Inspection

INFOID:0000000011682871

#### FLUID LEAKAGE

- Check transaxle surrounding area (oil seal and plug etc.)for fluid leakage.
- If anything is found, repair or replace damaged parts and adjust CVT fluid level. Refer to [TM-437, "Adjustment"](#).

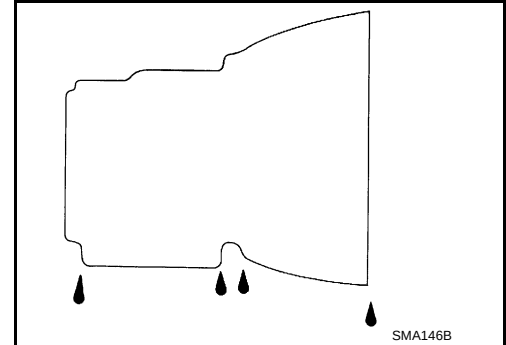

# CVT SHIFT SELECTOR

< REMOVAL AND INSTALLATION >


[CVT: RE0F10D]

## REMOVAL AND INSTALLATION

### CVT SHIFT SELECTOR

#### Exploded View

INFOID:0000000011682874

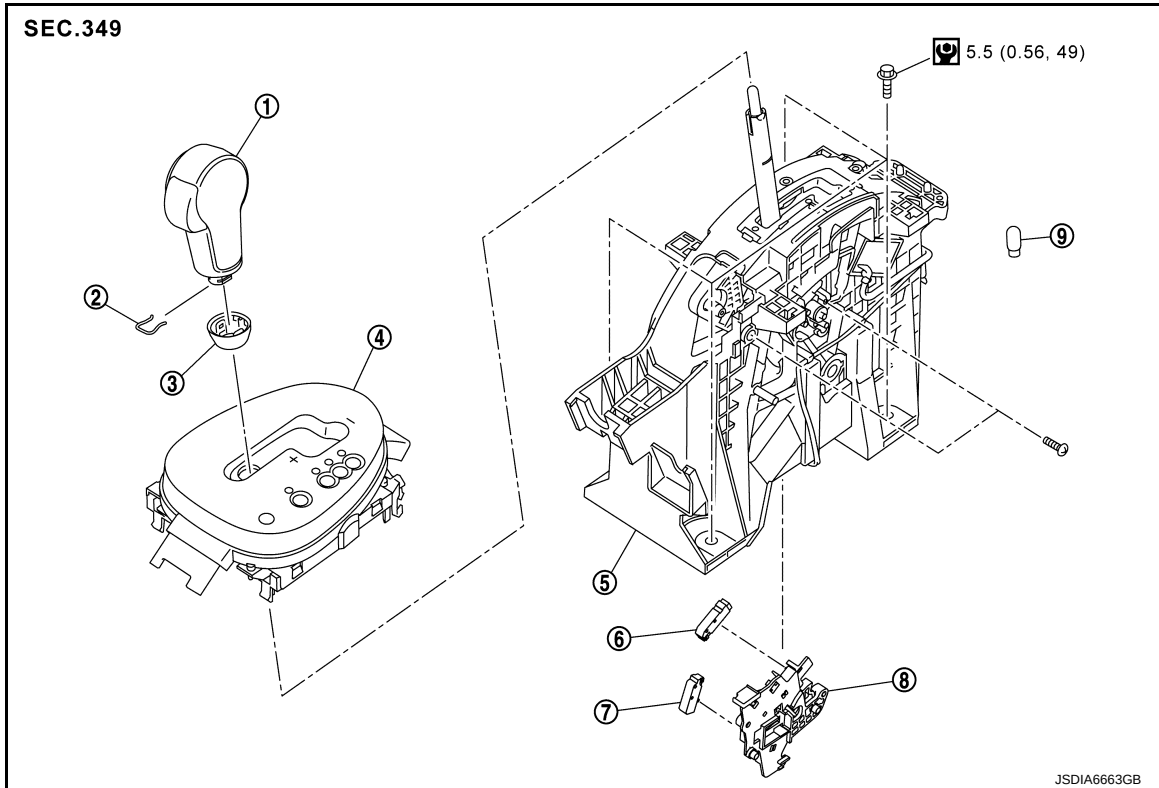

- |                              |                                |                            |
|------------------------------|--------------------------------|----------------------------|
| 1. Selector lever knob       | 2. Lock pin                    | 3. Knob cover              |
| 4. Position indication panel | 5. CVT shift selector assembly | 6. Detent switch           |
| 7. Park position switch      | 8. Shift lock unit             | 9. Position indicator bulb |



:N·m (kg-m, in-lb)

#### Removal and Installation

INFOID:0000000011682875

##### REMOVAL

##### **CAUTION:**

**Always apply the parking brake before performing removal and installation.**


1. Disconnect battery cable from negative terminal. Refer to [PG-116, "Removal and Installation"](#).
2. Shift the selector lever to "N" position.
3. Remove the center console. Refer to [IP-24, "Removal and Installation"](#).
4. Disconnect the CVT shift selector connector.
5. Shift the selector lever to "P" position.

## CVT SHIFT SELECTOR

### < REMOVAL AND INSTALLATION >

[CVT: RE0F10D]


6. Disconnect the tip (A) of control cable and remove socket (B) from the CVT shift selector assembly.
7. Remove the CVT shift selector assembly mounting bolts.
8. Remove the CVT shift selector assembly from the vehicle.

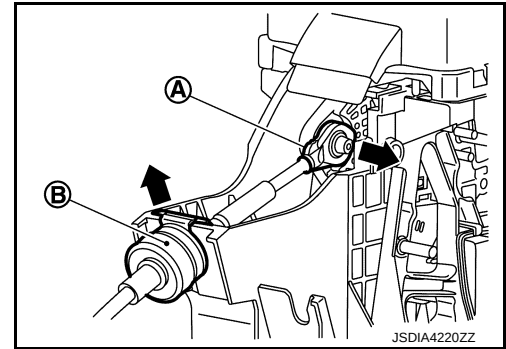

### INSTALLATION

Note the following, and install in the reverse order of removal.

- When connecting the control cable (1) to the CVT shift selector assembly (2), face the grooved surface of the rib (A) up and insert the control cable until it stops.

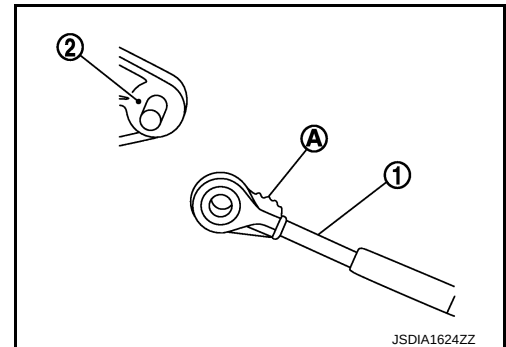

### Disassembly and Assembly


INFOID:000000011682876

### DISASSEMBLY

#### CAUTION:

Confirm the installation condition of wiring before disassembly.


1. Slide the selector lever knob cover (1) down.  
**CAUTION:**  
**Never damage the knob cover.**
2. Pull out the lock pin (2).
3. Pull the selector lever knob (3) and knob cover upwards to remove them.
4. Remove the position lamp.

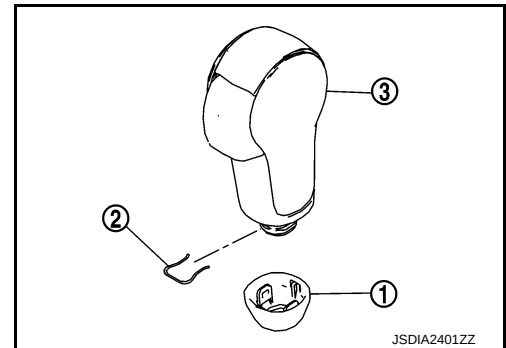

5. Disengage the hooks (A) (4 locations), and lift up the position indication panel (1) to separate it from the CVT shift selector assembly (2).

#### CAUTION:

Never damage the CVT shift selector assembly.

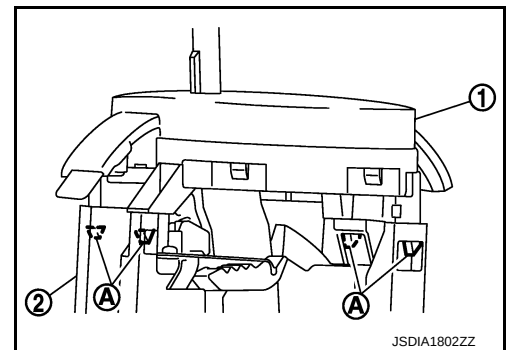




# CVT SHIFT SELECTOR


## < REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

6. Remove shift lock unit mounting screws (←).

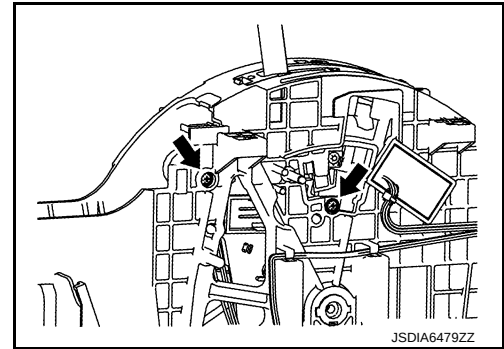


7. Remove the shift lock unit (1) from the CVT shift selector assembly.  
8. Disconnect shift lock solenoid harness connector, park position switch harness connector, and detent switch harness connector.

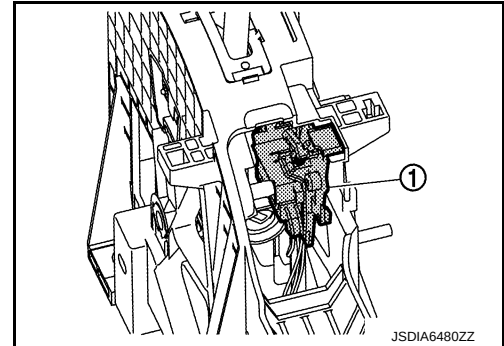

9. Remove park position switch (1) and detent switch (2) from shift lock unit.

**CAUTION:**  
Never damage pawls.

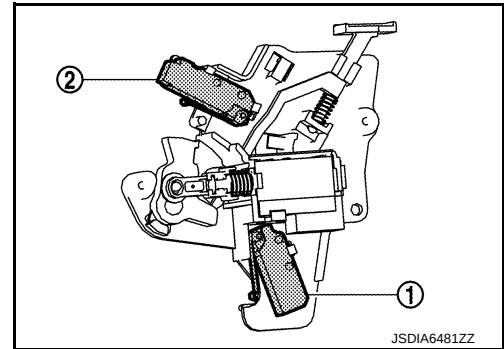

## ASSEMBLY


Note the following, and assemble in the reverse order of disassembly.

- Follow the procedure below and place the selector knob onto the CVT shift selector.

1. Install the lock pin (2) onto the selector lever knob (3).
2. Install the knob cover (1) onto the selector lever knob.
3. Press the selector lever knob onto the selector lever until it clicks.

### **CAUTION:**

- When pressing the selector lever knob onto the selector lever, never press the selector lever knob button.
- Never strike the selector lever knob to press it into place.

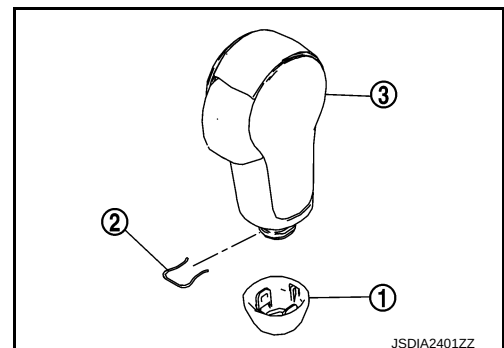

## Inspection

### INSPECTION AFTER INSTALLATION

Check the CVT position. If a malfunction is found, adjust the CVT position. Refer to [TM-435, "Adjustment"](#).

# CONTROL CABLE


< REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

## CONTROL CABLE

### Exploded View

INFOID:000000011682878

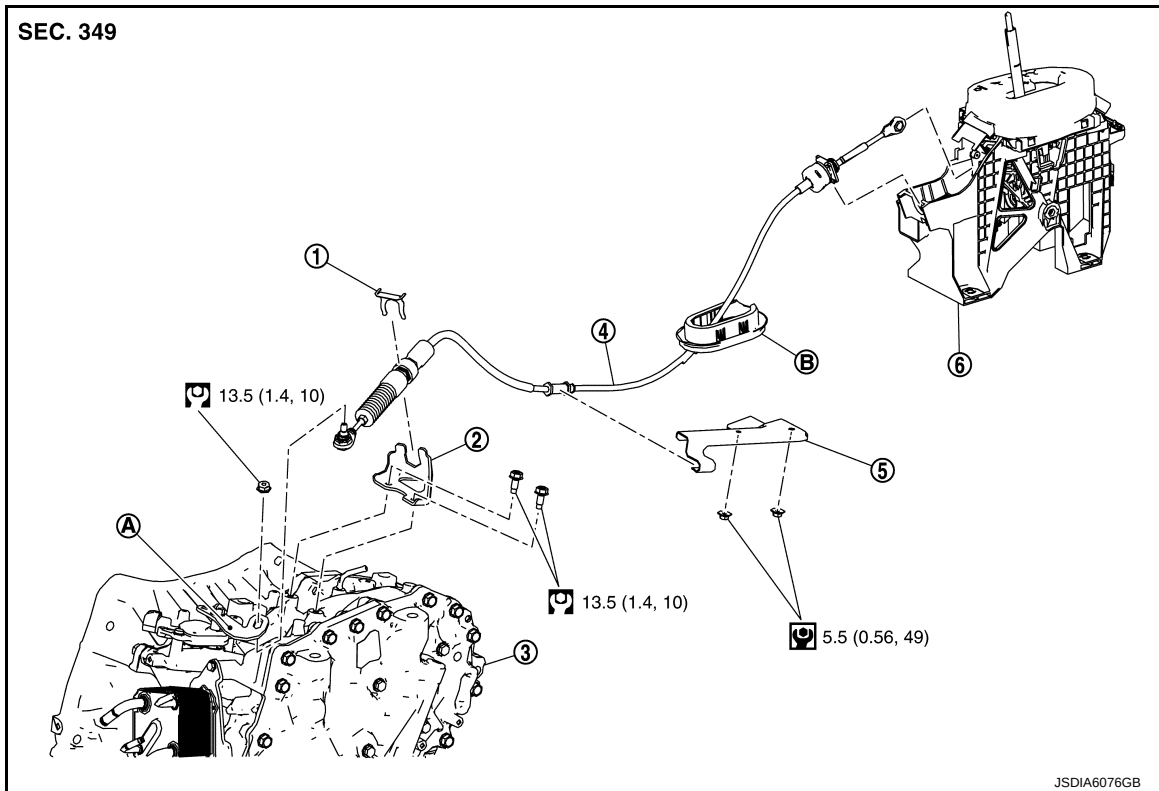

- |                  |            |                                |
|------------------|------------|--------------------------------|
| 1. Lock plate    | 2. Bracket | 3. Transaxle assembly          |
| 4. Control cable | 5. Bracket | 6. CVT shift selector assembly |
| A: Manual lever  | B: Grommet |                                |

: N·m (kg-m, ft-lb)

: N·m (kg-m, in-lb)

### Removal and Installation


INFOID:000000011682879

#### CAUTION:

Always apply the parking brake before performing removal and installation.

#### REMOVAL

1. Apply the parking brake.  
**CAUTION:**  
Make sure the vehicle cannot move with the parking brake applied.
2. Remove the center console. Refer to [IP-24, "Removal and Installation"](#).
3. Disconnect the tip (A) of control cable and remove socket (B) from the CVT shift selector assembly.

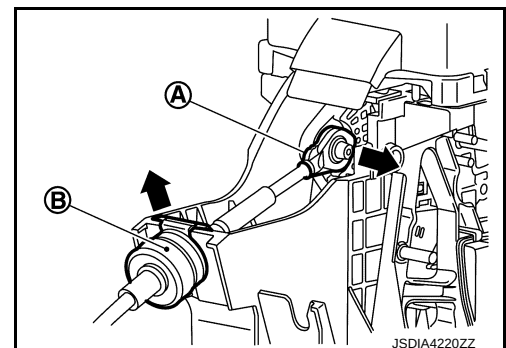


# CONTROL CABLE

## < REMOVAL AND INSTALLATION >


[CVT: RE0F10D]

4. Disengage the pawls (B) of the grommet (A), and pull downwards to remove.
5. Remove the battery and battery mounting bracket assembly. Refer to [PG-116, "Removal and Installation"](#).

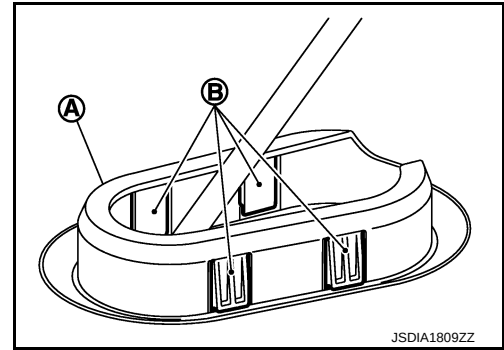


6. Remove the control cable nut (➡) and remove the control cable (1) from the manual lever (2).

➡ : Vehicle front

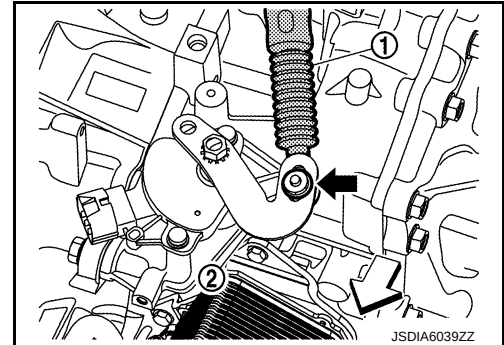

7. Remove the lock plate (1) and remove the control cable (2) from bracket (3).

➡ : Vehicle front

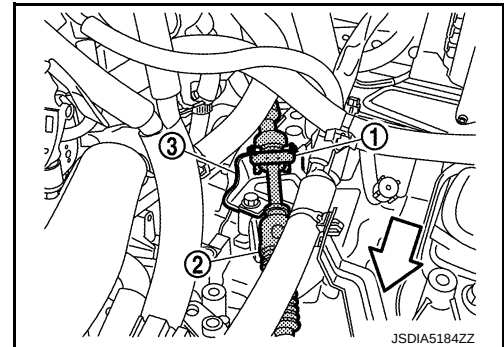


8. Remove center muffler from the mounting rubber and lower the center muffler downward. Refer to [EX-5, "Exploded View"](#).
9. Remove heat plate.

10. Remove the control cable (1) from the bracket (2).

➡ : Vehicle front

11. Remove the control cable from the vehicle.

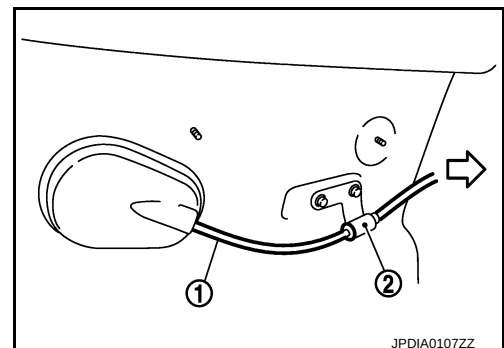

## INSTALLATION

Note the following, and install in the reverse order of removal.

- After installing control cable, adjust it. Refer to [TM-544, "Inspection and Adjustment"](#).

## CONTROL CABLE


### < REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

- From below the vehicle, press the grommet (A) into place until the pawls (B) make a click sound.


**CAUTION:**

- Place the grommet on the floor, then fasten it in place from below the vehicle.
- Check that pulling down on the grommet does not disconnect it.

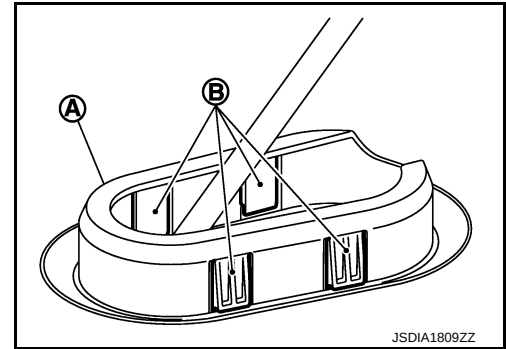

- Pay attention to the following when connecting the control cable to the CVT shift selector.


- When connecting the control cable (1) to the CVT shift selector assembly (2), face the grooved surface of the rib (A) up and insert the control cable until it stops.

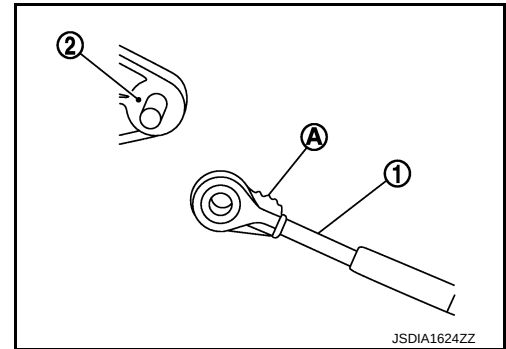

- Install the socket (A) onto the CVT shift selector.

**CAUTION:**

- Place the socket onto the CVT shift lever, then fasten it in place from above.
- Check that the pulling on the socket does not disconnect it.

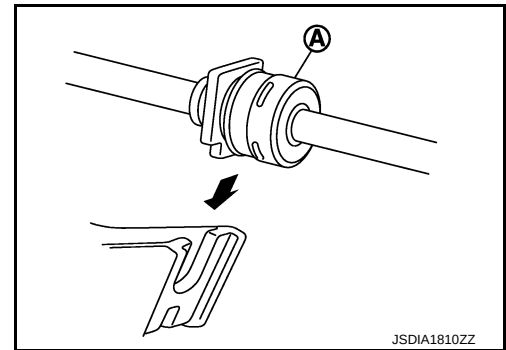

## Inspection and Adjustment

INFOID:000000011682880

### ADJUSTMENT OF CONTROL CABLE

- Shift the selector lever to the "P" position.

**CAUTION:**

Rotate the wheels at least a quarter turn and be certain the Park position mechanism is fully engaged.

- Loosen nut (A) and set manual lever (1) to the "P" position.


**CAUTION:**

Never apply force to the manual lever.

- Tighten the nut to the specified torque. Refer to [TM-542, "Exploded View"](#).

**CAUTION:**

In tightening, fix the manual lever.

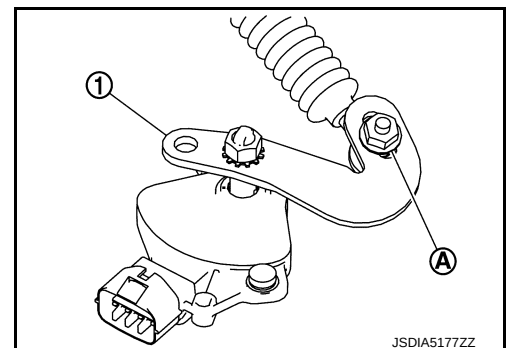

### INSPECTION AFTER INSTALLATION

Check the CVT position. Refer to [TM-435, "Inspection"](#).

# PADDLE SHIFTER


< REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

## PADDLE SHIFTER

### Exploded View

INFOID:0000000011772977

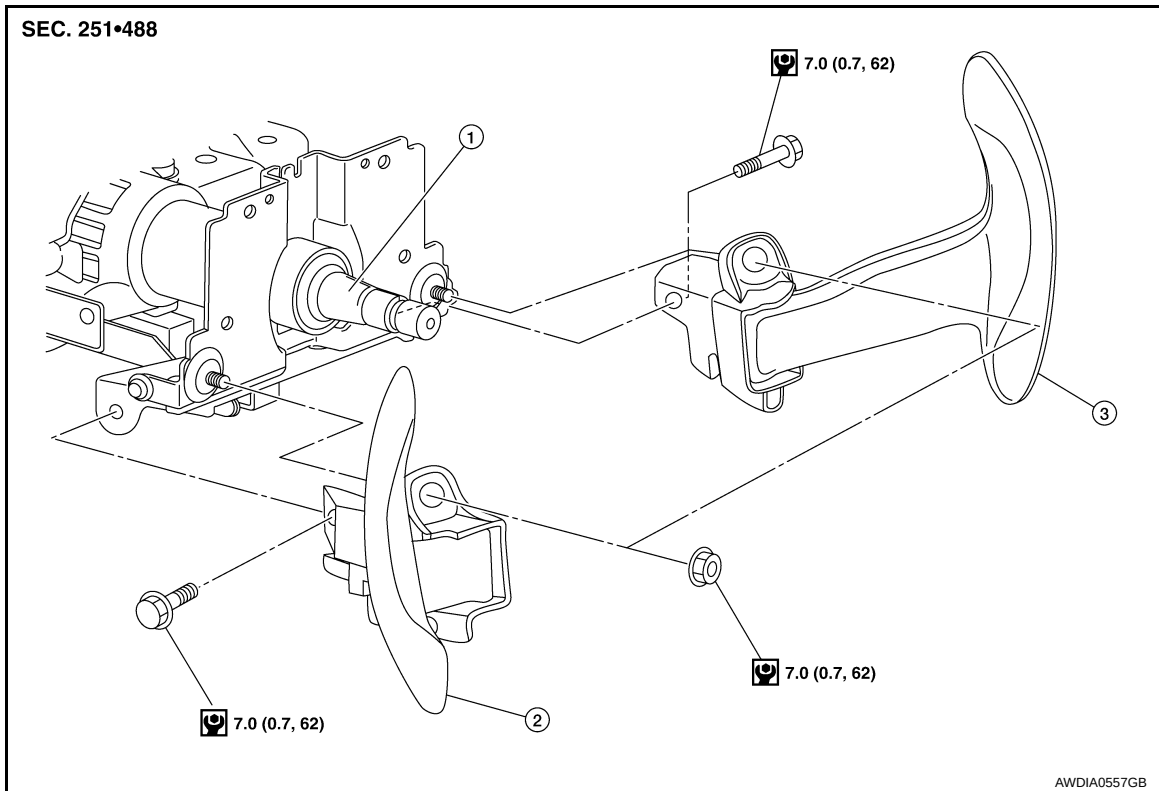

1. Steering column assembly

2. Paddle shifter (shift-down switch)

3. Paddle shifter (shift-up switch)

 : N·m (kg-m, in-lb)

## Removal and Installation

INFOID:0000000011772978

### REMOVAL

1. Park the vehicle on a level surface.
2. Remove the driver air bag module. Refer to [SR-11, "Removal and Installation"](#).
3. Remove the steering wheel. Refer to [ST-9, "Removal and Installation"](#).
4. Remove the column cover. Refer to [IP-13, "Removal and Installation"](#).

## PADDLE SHIFTER

### < REMOVAL AND INSTALLATION >


[CVT: RE0F10D]

5. Remove the paddle shifter connector (C) and (D) from paddle shifter.

A : Side of paddle shifter (shift-down switch)

B : Side of paddle shifter (shift-up switch)

6. Remove the paddle shifter mounting bolts (E) and nuts (F).
7. Remove the paddle shifter from the steering column assembly.

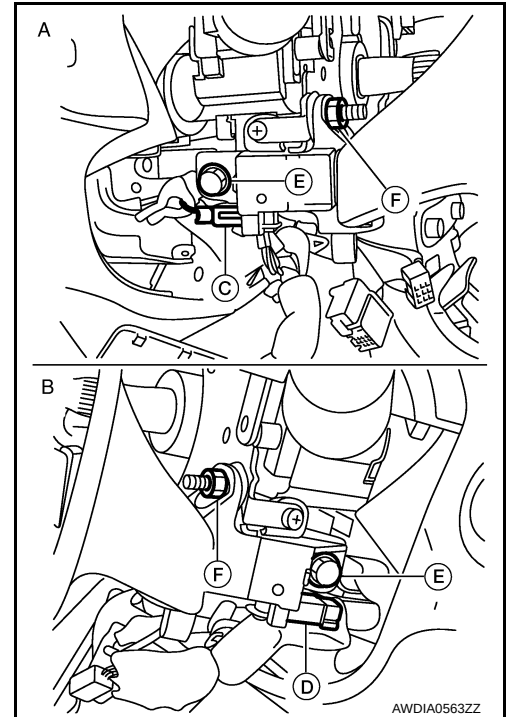


### INSTALLATION

Installation is in the reverse order of removal.

## TCM

## Exploded View

INFOID:0000000011682881

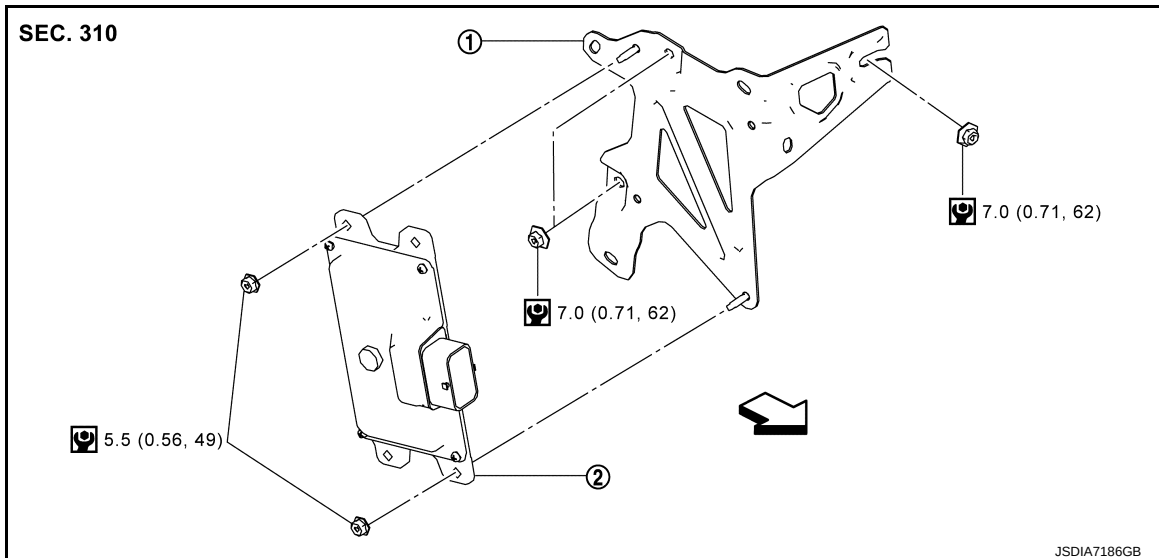

1. Bracket

2. TCM

:Vehicle front

: N·m (kg-m, in-lb)

## Removal and Installation

INFOID:0000000011682882

**CAUTION:**

- When replacing TCM, note the “CVTF DETERIORATION DATE” value displayed on CONSULT “CONFORM CVTF DETERIORATION” in MAINTENANCE BOOKLET, before start the operation.
- Before replacing TCM, perform “ADDITIONAL SERVICE WHEN REPLACING TCM”. Refer to [TM-425, "Work Procedure"](#).
- Before replacing TCM and transaxle assembly, perform “ADDITIONAL SERVICE WHEN REPLACING TCM AND TRANSAXLE ASSEMBLY”. Refer to [TM-429, "Work Procedure"](#).

## REMOVAL

1. Remove the battery. Refer to [PG-116, "Removal and Installation"](#).
2. Remove air duct (inlet) and air cleaner case. Refer to [EM-191, "Removal and Installation"](#).
3. Disconnect the TCM connector.
4. Remove the TCM.
5. Remove the bracket.

## INSTALLATION

Installation is in the reverse order of removal.

## Adjustment

INFOID:0000000011682883

## ADJUSTMENT AFTER INSTALLATION

When replaced TCM, perform "ADDITIONAL SERVICE WHEN REPLACING TCM". Refer to [TM-425, "Work Procedure"](#).

# AIR BREATHER HOSE


< REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

## AIR BREATHER HOSE

Exploded View

INFOID:000000011682884

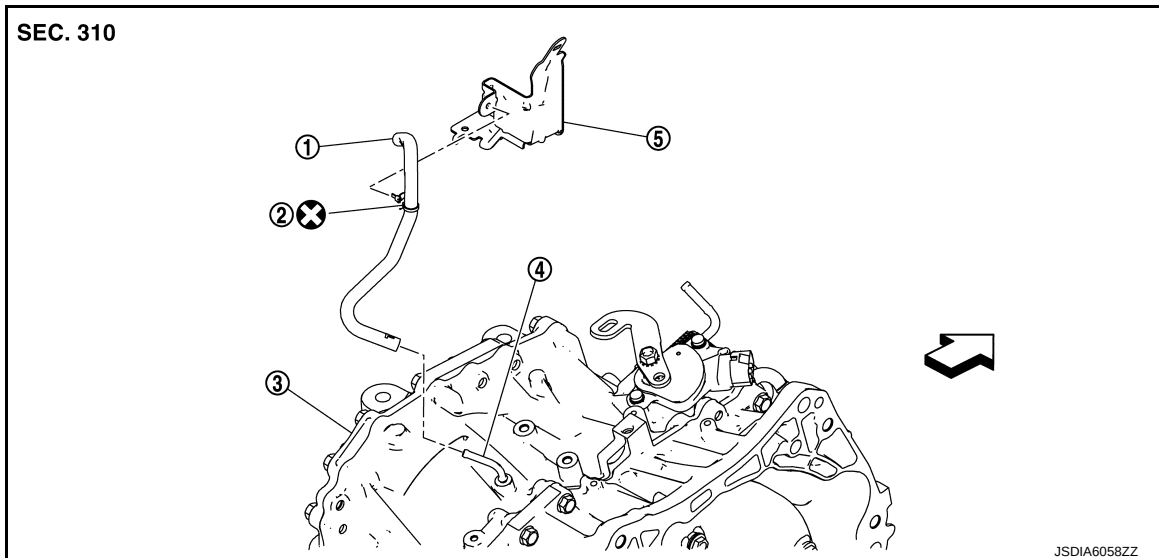

- |                      |                    |                       |
|----------------------|--------------------|-----------------------|
| 1. Air breather hose | 2. Clip            | 3. Transaxle assembly |
| 4. Air breather tube | 5. Harness bracket |                       |

⇐ : Vehicle front

⊗ : Always replace after every disassembly.

## Removal and Installation

INFOID:000000011682885

### REMOVAL


1. Remove air cleaner case. Refer to [EM-191, "Removal and Installation"](#).
2. Remove clip of air breather hose from harness bracket.
3. Remove air breather hose from transaxle assembly.

### INSTALLATION

Note the followings and installation is in the reverse order of removal.

#### CAUTION:

- Never bend the air breather hose to prevent damage to the hose.
- Insert air breather hose (1) to air breather tube (A) all the way to the curve of the tube.
- Insert air breather hose to air breather tube so that the paint mark (B) is facing upward.

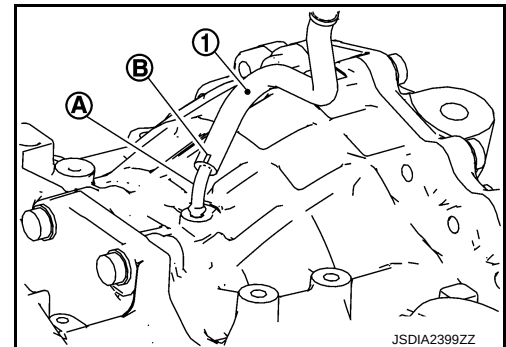




## AIR BREATHER HOSE

< REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

- **Never reuse clip (A).**
- **Securely install the clip to the harness bracket.**

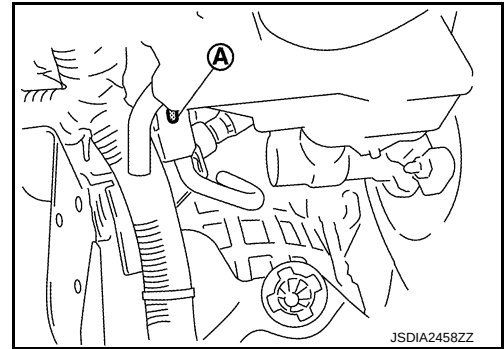

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# OIL PAN

< REMOVAL AND INSTALLATION >


[CVT: RE0F10D]

## OIL PAN

### Exploded View

INFOID:0000000011682889

### COMPONENT PARTS LOCATION

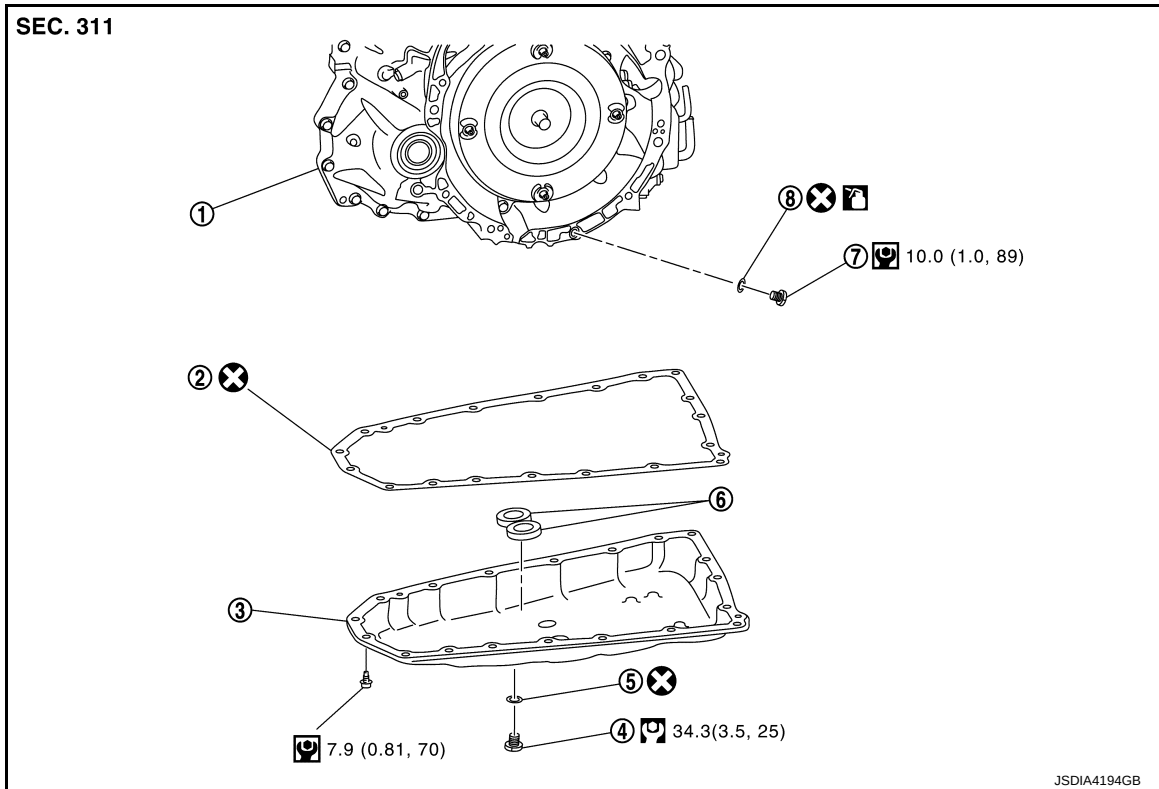

- |                       |                      |            |
|-----------------------|----------------------|------------|
| 1. Transaxle assembly | 2. Oil pan gasket    | 3. Oil pan |
| 4. Drain plug         | 5. Drain plug gasket | 6. Magnet  |
| 7. Overflow plug      | 8. O-ring            |            |

⊗ : Always replace after every disassembly.

⊞ : N·m (kg-m, ft-lb)

⊞ : N·m (kg-m, in-lb)


⊞ : Apply CVT fluid

### Removal and Installation

INFOID:0000000011682890

#### REMOVAL

1. Remove drain plug (1) from oil pan and then drain the CVT fluid.

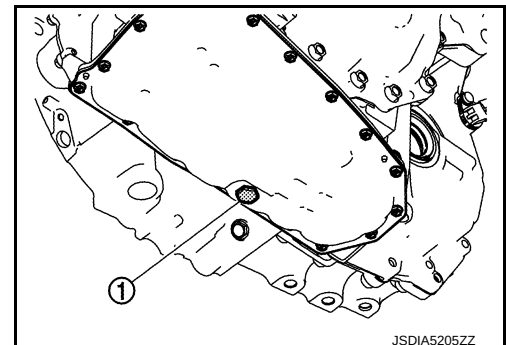


# OIL PAN

## < REMOVAL AND INSTALLATION >

[CVT: RE0F10D]


2. Remove drain plug gasket (1).

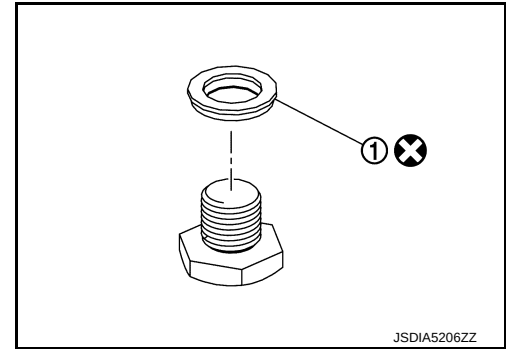


3. Remove oil pan bolts (↔).

↔ : Vehicle front


4. Remove oil pan from transaxle case.

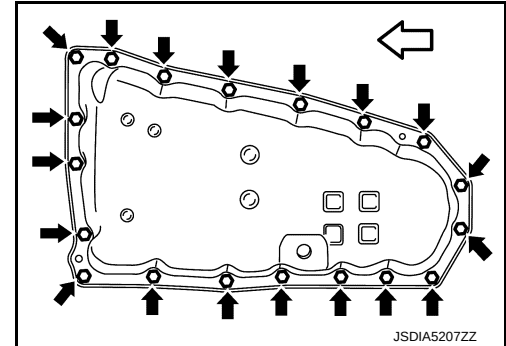

5. Remove oil pan gasket (1) from oil pan.

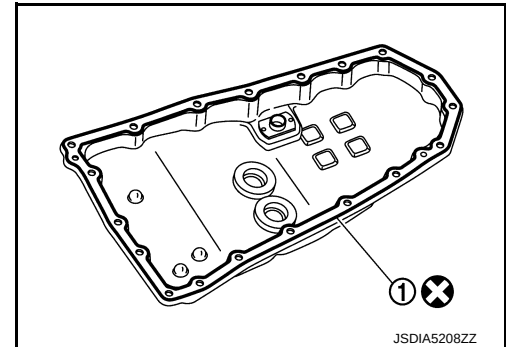

6. Remove magnets (1) from oil pan.

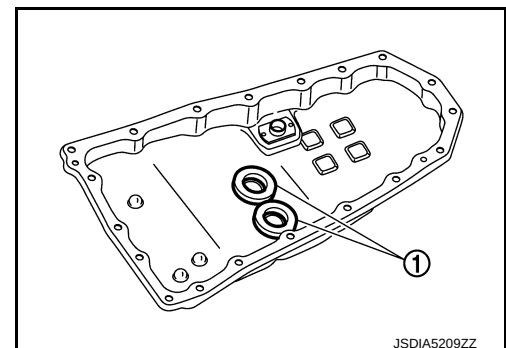

## INSTALLATION

Note the followings and installation is in the reverse order of removal.

### CAUTION:

- Never reuse oil pan gasket.
- Never reuse drain plug gasket.
- Never reuse O-ring.
- Completely clean the iron powder from the magnet area of oil pan and the magnets.
- Install the oil pan to the transaxle case with the following procedure.

1. Install the oil pan gasket to the oil pan.

### CAUTION:

## OIL PAN

### < REMOVAL AND INSTALLATION >


[CVT: RE0F10D]

**Completely wipe out any moisture, oil, and old gasket from the oil pan gasket surface and bolt hole of oil pan and transaxle case.**

2. Install the oil pan assembly to the transaxle case, and then temporarily tighten the oil pan bolt.
3. Tighten the oil pan bolts in the order shown to the specified torque.

← : Vehicle front

4. Tighten the oil pan bolts again clockwise from (1) shown to the specified torque.
- Fill with CVT fluid after installation. Refer to [TM-436, "Replacement"](#).

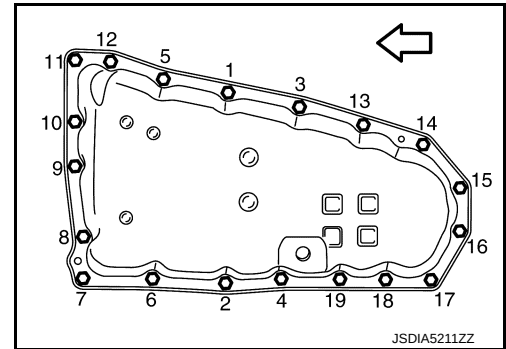

INFOID:0000000011682891

### Inspection

#### INSPECTION AFTER REMOVAL

Check oil pan for foreign material.

- If a large amount of worn material is found, clutch plate may be worn.
  - If iron powder is found, bearings, gears, or clutch plates may be worn.
  - If aluminum powder is found, bushing may be worn, or chips or burrs of aluminum casting parts may enter.
- Check points where wear is found in all cases.

#### INSPECTION AFTER INSTALLATION

Start the engine and check visually that there is no leakage of CVT fluid.

# INPUT SPEED SENSOR


< REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

## INPUT SPEED SENSOR

### Exploded View

INFOID:0000000011682892

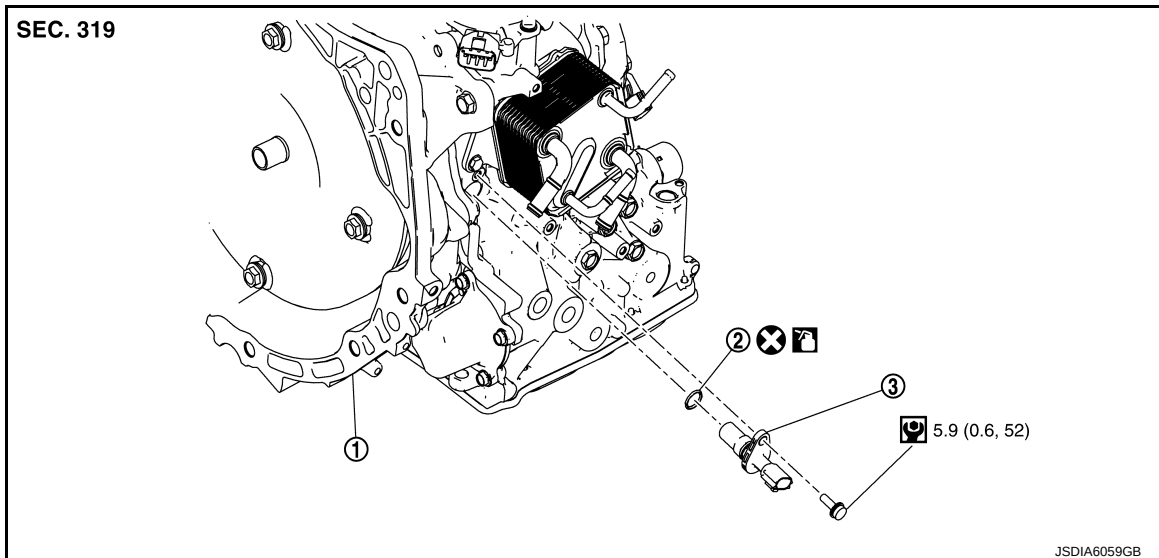

1. Transaxle assembly

2. O-ring

3. Input speed sensor

✕ : Always replace after every disassembly.

Ⓐ : N·m (kg-m, in-lb)

🔧 : Apply CVT fluid

### Removal and Installation


INFOID:0000000011682893

#### REMOVAL

##### NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

1. Turn ignition switch OFF.
2. Remove battery and battery support. Refer to [PG-116, "Removal and Installation"](#).
3. Remove ECM and bracket as a set. Refer to [EC-1255, "Removal and Installation"](#).
4. Disconnect input speed sensor connector.
5. Remove mounting bolt (➡) and remove input speed sensor (1) from transaxle assembly.

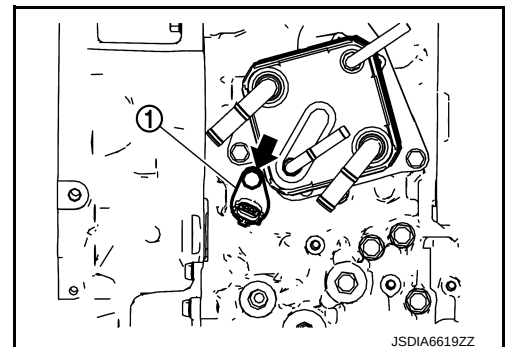


## INPUT SPEED SENSOR

< REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

6. Remove O-ring (1) from input speed sensor.

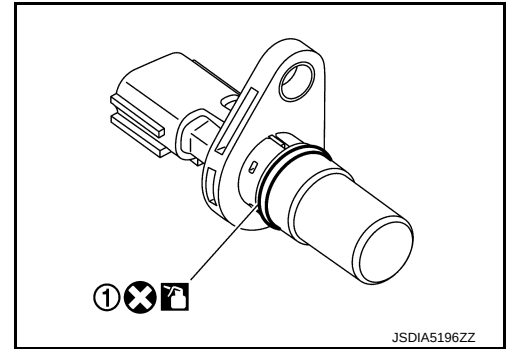

### INSTALLATION

Note the followings and installation is in the reverse order of removal.

#### **CAUTION:**

- **Never reuse O-ring.**
- **Apply CVT fluid to the O-ring.**

### Inspection and Adjustment

INFOID:0000000011682894

### INSPECTION AFTER INSTALLATION

Start the engine and check visually that there is no leakage of CVT fluid.

### ADJUSTMENT AFTER INSTALLATION

If CVT fluid leaks during work, adjust the CVT fluid level. Refer to [TM-437, "Adjustment"](#).

# PRIMARY SPEED SENSOR


< REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

## PRIMARY SPEED SENSOR

### Exploded View

INFOID:0000000011682895

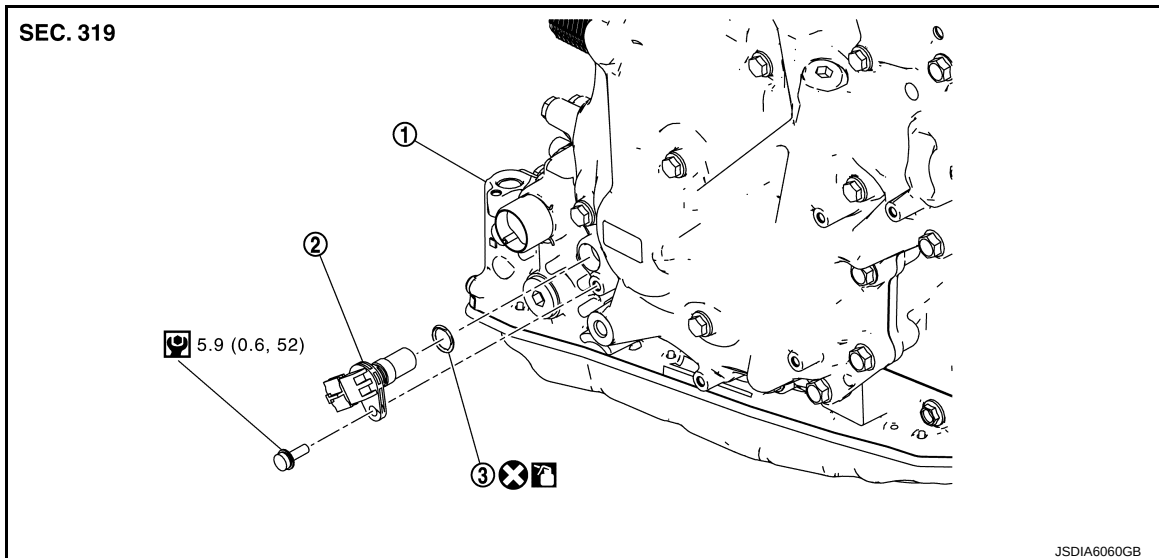

1. Transaxle assembly

2. Primary speed sensor

3. O-ring

⊗ : Always replace after every disassembly.

Ⓐ : N·m (kg-m, in-lb)


🔧 : Apply CVT fluid

### Removal and Installation

INFOID:0000000011682896

#### REMOVAL

1. Turn ignition switch OFF.
2. Remove fender protector (LH). Refer to [EXT-31, "Removal and Installation"](#).
3. Disconnect primary speed sensor.
4. Remove mounting bolt (⬅) and remove primary speed sensor (1) from transaxle assembly.

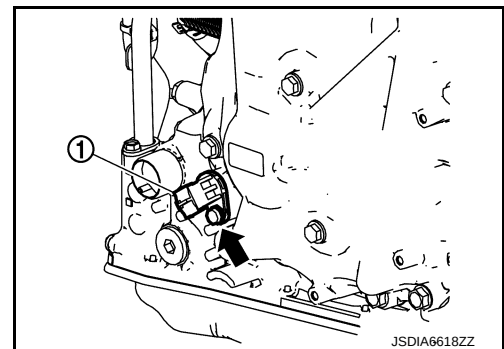


## PRIMARY SPEED SENSOR

### < REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

5. Remove O-ring (1) from primary speed sensor.

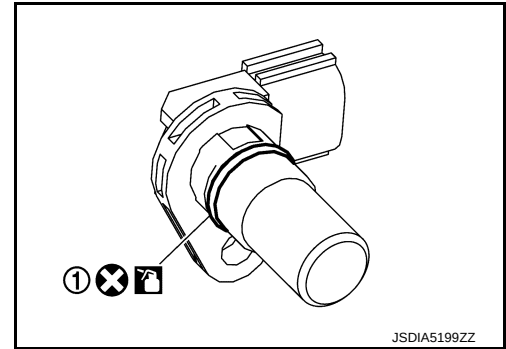

### INSTALLATION

Note the followings and installation is in the reverse order of removal.

#### **CAUTION:**

- **Never reuse O-ring.**
- **Apply CVT fluid to the O-ring.**

### Inspection and Adjustment

INFOID:0000000011682897

### INSPECTION AFTER INSTALLATION

Start the engine and check visually that there is no leakage of CVT fluid.

### ADJUSTMENT AFTER INSTALLATION

If CVT fluid leaks during work, adjust the CVT fluid level. Refer to [TM-437, "Adjustment"](#).



# OUTPUT SPEED SENSOR


< REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

## OUTPUT SPEED SENSOR

### Exploded View

INFOID:0000000011682898

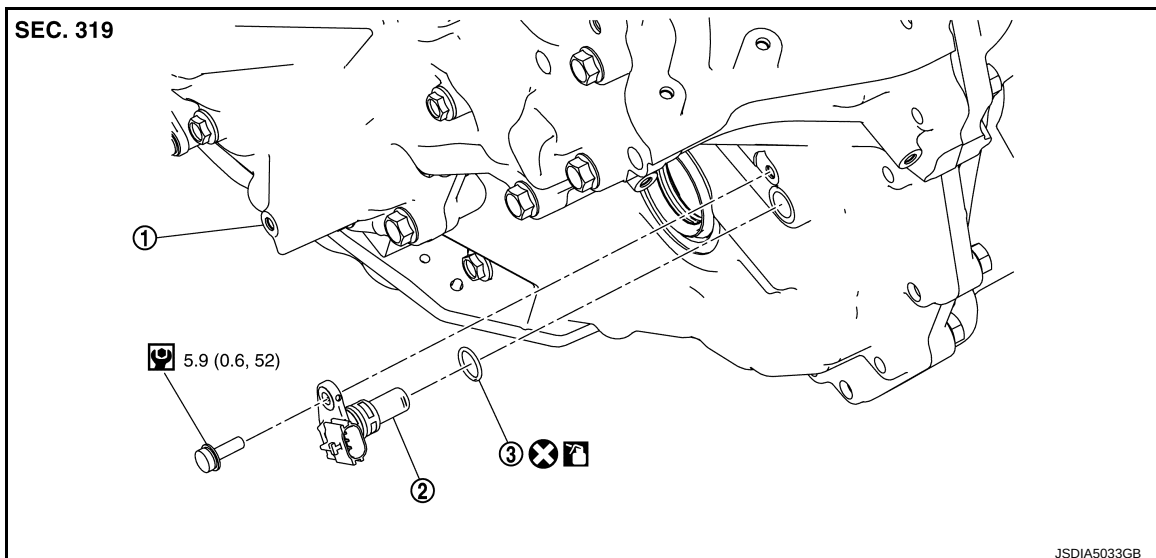

1. Transaxle assembly

2. Output speed sensor

3. O-ring

⊗ : Always replace after every disassembly.

Ⓜ : N·m (kg-m, in-lb)


🔧 : Apply CVT fluid

## Removal and Installation


INFOID:0000000011682899

### REMOVAL

1. Turn ignition switch OFF.
2. Disconnect output speed sensor connector.
3. Remove mounting bolt (⬅) and remove output speed sensor (1) from transaxle assembly.

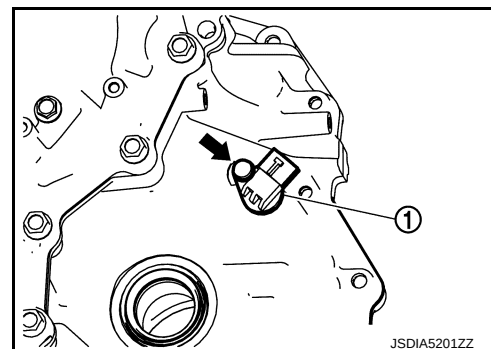

4. Remove O-ring (1) from output speed sensor.

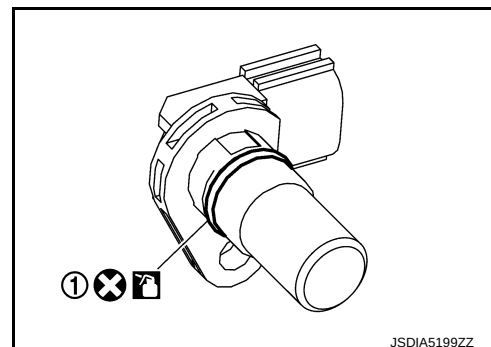

## OUTPUT SPEED SENSOR

< REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

### INSTALLATION

Note the followings and installation is in the reverse order of removal.

#### **CAUTION:**

- **Never reuse O-ring.**
- **Apply CVT fluid to the O-ring.**

### Inspection and Adjustment

INFOID:0000000011682900

### INSPECTION AFTER INSTALLATION

Start the engine and check visually that there is no leakage of CVT fluid.

### ADJUSTMENT AFTER INSTALLATION

If CVT fluid leaks during work, adjust the CVT fluid level. Refer to [TM-437, "Adjustment"](#).

# DIFFERENTIAL SIDE OIL SEAL


< REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

## DIFFERENTIAL SIDE OIL SEAL

### Exploded View

INFOID:0000000011682901

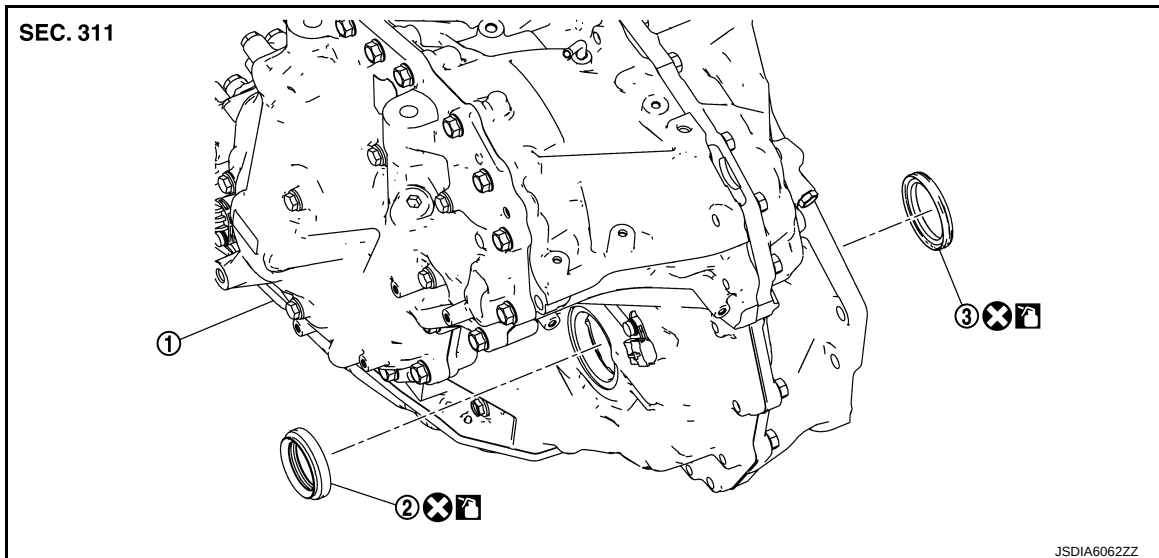

1. Transaxle assembly
2. Differential side oil seal (transaxle case side)
3. Differential side oil seal (converter housing side)

⊗ : Always replace after every disassembly.

☑ : Apply CVT fluid

### Removal and Installation

INFOID:0000000011682902

#### NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

#### REMOVAL


##### Differential Side Oil Seal (Left Side)

1. Remove front drive shaft (left side). Refer to [FAX-80, "2WD : Removal and Installation"](#) (2WD), [FAX-94, "AWD : Removal and Installation"](#) (AWD).

2. Remove differential side oil seal (1) using an oil seal remover (commercial service tool) (A).

#### CAUTION:

Be careful not to scratch transaxle case and converter housing.

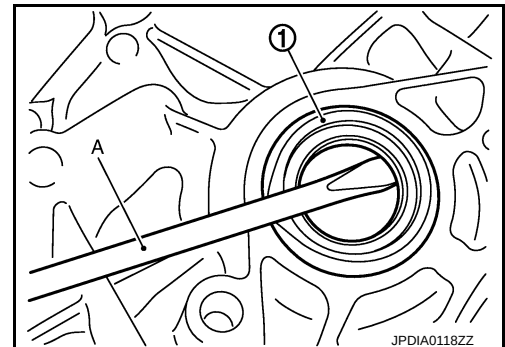

##### Differential Side Oil Seal (Right Side)

1. Remove transfer assembly. Refer to [FAX-80, "2WD : Removal and Installation"](#) (2WD), [FAX-94, "AWD : Removal and Installation"](#) (AWD).

## DIFFERENTIAL SIDE OIL SEAL


### < REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

2. Remove differential side oil seal (1) using an oil seal remover (commercial service tool) (A).

**CAUTION:**

Be careful not to scratch transaxle case and converter housing.

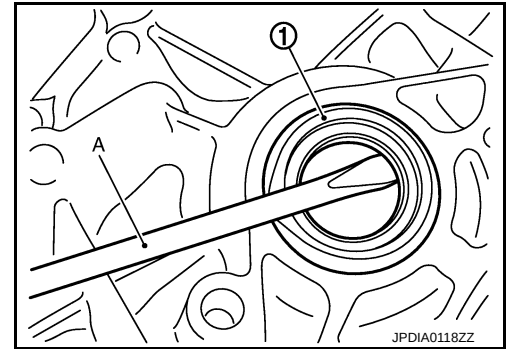

### INSTALLATION

Note the followings and installation is in the reverse order of removal.

Differential Side Oil Seal (Transaxle Case Side)

**CAUTION:**

When inserting the drive shaft, be sure to use protector (SST: KV38107900).


1. Measure height (A) of seal lip. Calculate protrusion (C) of oil seal lip according to measured height (A) of seal lip and reference value (B) of side oil insertion.

(1) : Differential side oil seal

(2) : Transaxle case

**Lip protrusion (C) :  $C=A-B$**

**Differential side oil seal insertion : 1.8 mm (0.071 in)**  
**reference value (B)**

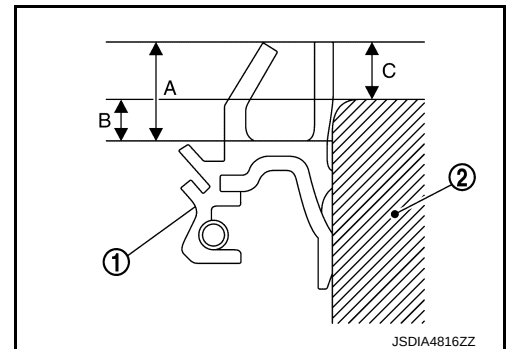

**CAUTION:**

- Never reuse differential side oil seal.
- Put a mark on the measurement area and measure height of seal lip at four points diagonally using suitable tool.

**NOTICE:**

Since seal lips have a tolerance of  $\pm 0.3$  mm ( $\pm 0.012$  in) at maximum due to manufacturing tolerances or packing conditions, it is necessary to measure the seal lip height beforehand to clarify the tolerance.

2. As an indicator of the parallelism and insertion depth, cut a masking tape (1) to specified width [add 1 mm (0.04 in) to the value calculated from the tip of differential side oil seal lip] and affix to the differential side oil seal.
3. Install the differential side oil seal using a drift [outer diameter: 53 mm (2.09 in), inner diameter: 50 mm (1.97 in)] according to the guide of the masking tape.

**CAUTION:**

- If differential side oil seal is inserted deeper than the reference value, use a new differential side oil seal and perform the steps again.
- Apply ATF to the differential side oil seal lip and around the oil seal.


**NOTE:**

A hub cap (Part No. 43234 1HA0A) can be used as a substitute for drift. To use a hub cap, be sure to prepare a new one specifically for patting seal.

4. Remove masking tape.
5. Adjust as instructed below to optimize the protrusion size and parallelism.

**CAUTION:**

If differential side oil seal is inserted deeper than the reference value, use a new differential side oil seal and perform the steps again.

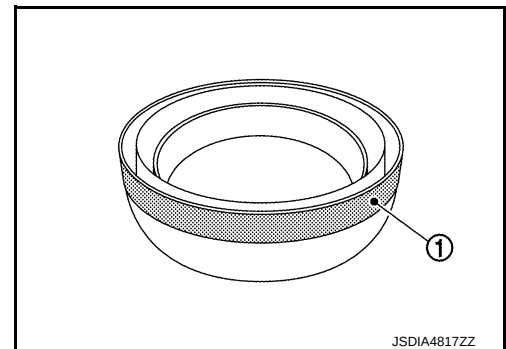

# DIFFERENTIAL SIDE OIL SEAL


< REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

- Protrusion size (A)

**CAUTION:**

Protrusion must fall within  $\pm 0.5\text{mm}$  (0.020 in) of calculated size.

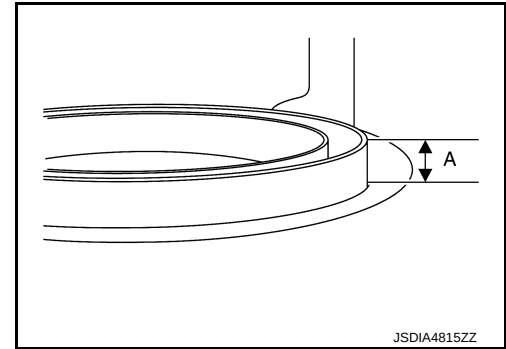

- Parallelism at four diagonal points (➡)


**CAUTION:**

The difference among four diagonal points must be within 0.3 mm (0.012 in).

**NOTE:**

If differential side oil seal is uneven while installing, tilt suitable tool.

6. Check that the protrusion size and parallelism are adequate.

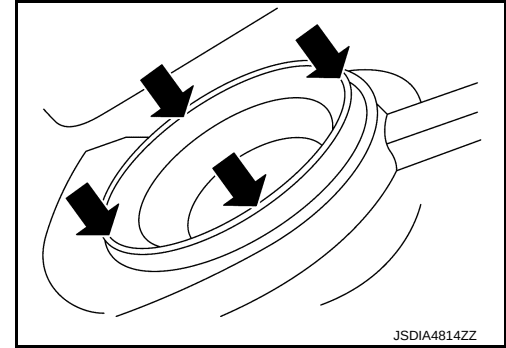

Differential Side Oil Seal (Converter housing Side) (2WD Models)


**CAUTION:**

When inserting the drive shaft, be sure to use protector (SST: KV38107900).

1. Measure height (A) of seal lip. Calculate protrusion (C) of oil seal lip according to measured height (A) of seal lip and reference value (B) of side oil insertion.

- (1) : Differential side oil seal
- (2) : Transaxle case

**Lip protrusion (C) :  $C=A-B$**   
**Differential side oil seal insertion reference value (B) : 2.2 mm (0.087 in)**

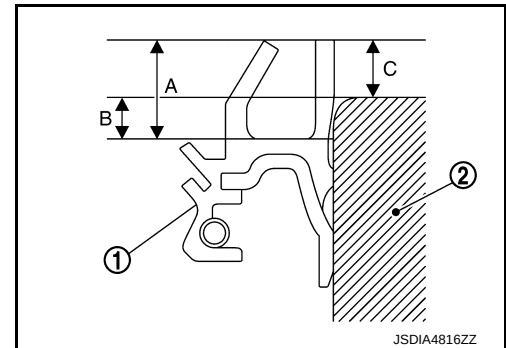

**CAUTION:**

- Never reuse differential side oil seal.
- Put a mark on the measurement area and measure height of seal lip at four points diagonally using suitable tool.

**NOTICE:**


Since seal lips have a tolerance of  $\pm 0.3\text{ mm}$  ( $\pm 0.012\text{ in}$ ) at maximum due to manufacturing tolerances or packing conditions, it is necessary to measure the seal lip height beforehand to clarify the tolerance.

2. As an indicator of the parallelism and insertion depth, cut a masking tape (1) to specified width [add 1 mm (0.04 in) to the value calculated from the tip of differential side oil seal lip] and affix to the differential side oil seal.
3. Install the differential side oil seal using a drift [outer diameter: 53 mm (2.09 in), inner diameter: 50 mm (1.97 in)] according to the guide of the masking tape.

**CAUTION:**

- If differential side oil seal is inserted deeper than the reference value, use a new differential side oil seal and perform the steps again.
- Apply ATF to the differential side oil seal lip and around the oil seal.

**NOTE:**

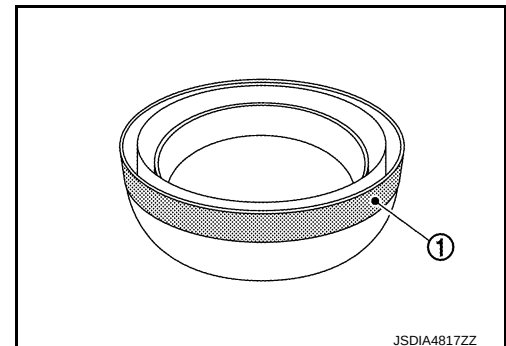

## DIFFERENTIAL SIDE OIL SEAL

### < REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

A hub cap (Part No. 43234 1HA0A) can be used as a substitute for drift. To use a hub cap, be sure to prepare a new one specifically for patting seal.

4. Remove masking tape.
5. Adjust as instructed below to optimize the protrusion size and parallelism.


**CAUTION:**

If differential side oil seal is inserted deeper than the reference value, use a new differential side oil seal and perform the steps again.

- Protrusion size (A)

**CAUTION:**

Protrusion must fall within  $\pm 0.5\text{mm}$  (0.020 in) of calculated size.

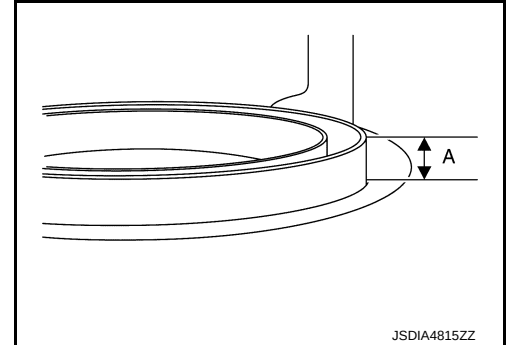

- Parallelism at four diagonal points (➡➡)


**CAUTION:**

The difference among four diagonal points must be within 0.3 mm (0.012 in).

**NOTE:**

If differential side oil seal is uneven while installing, tilt suitable tool.

6. Check that the protrusion size and parallelism are adequate.

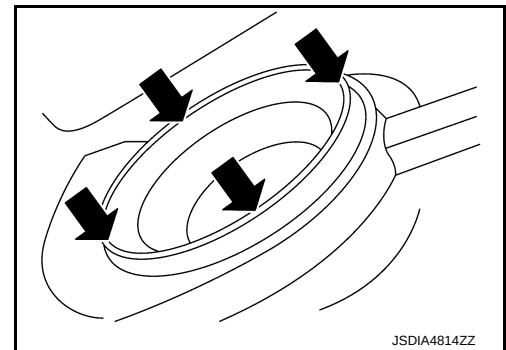

Differential Side Oil Seal (Converter housing Side) (AWD Models)

**CAUTION:**


- Never reuse differential side oil seal.
- Apply ATF to the differential side oil seal lip and around the oil seal.

Install differential side oil seal evenly using a drift [outer diameter: 60 mm (2.36 in)] so that differential side oil seal protrudes by the dimension (A) respectfully.

**Dimension (A) : Height difference from case end surface is within  $1.0 \pm 0.5\text{ mm}$  ( $0.039 \pm 0.020\text{ in}$ ).**

**NOTE:**

The reference is the installation direction of the differential side oil seal.

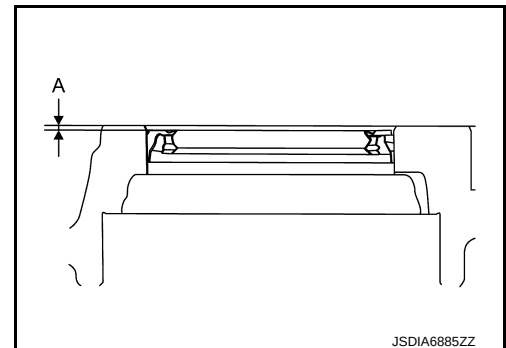

### Inspection and Adjustment

#### INSPECTION AFTER INSTALLATION

Drive the vehicle and check visually that there is no leakage of CVT fluid.

#### ADJUSTMENT AFTER INSTALLATION

Adjust the CVT fluid level. Refer to [TM-437. "Adjustment"](#).

INFOID:0000000011682903

# WATER HOSE


< REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

## WATER HOSE

### Exploded View

INFOID:0000000011682904

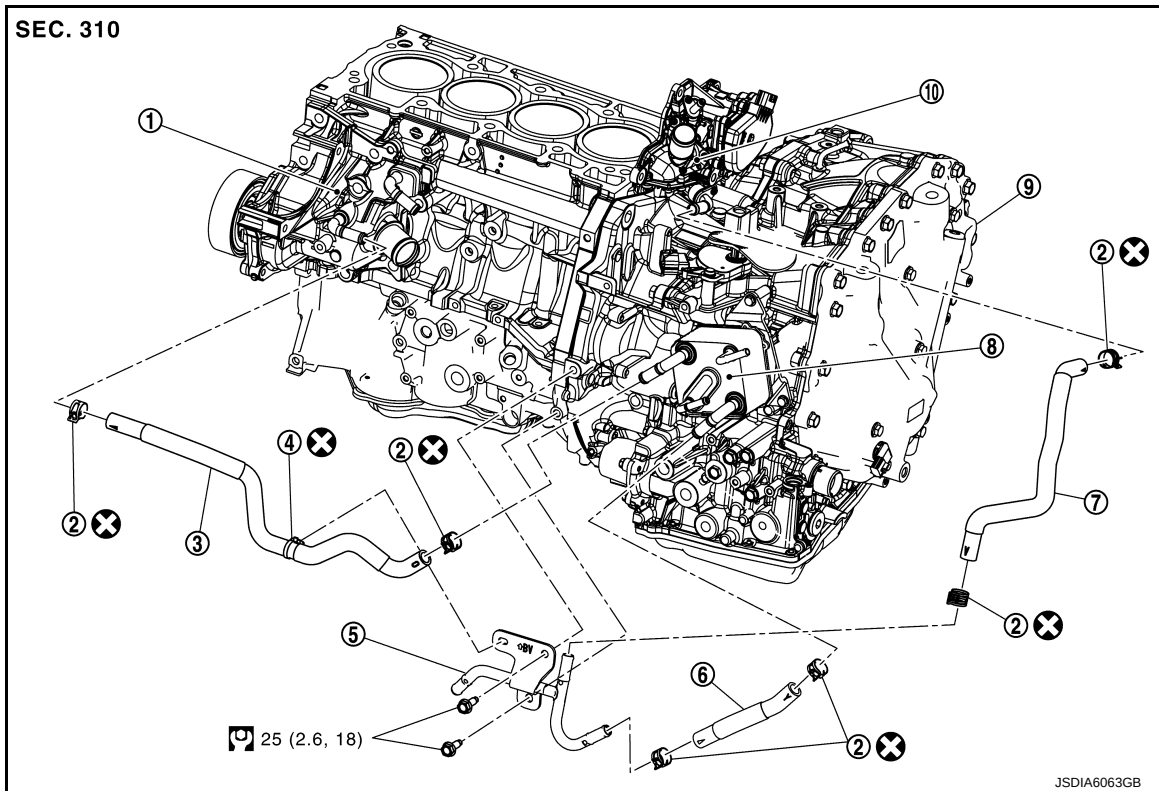

- |                       |                        |                       |
|-----------------------|------------------------|-----------------------|
| 1. Thermostat housing | 2. Hose clamp          | 3. Water hose A       |
| 4. Clip               | 5. Water tube assembly | 6. Water hose B       |
| 7. Water hose C       | 8. CVT oil warmer      | 9. Transaxle assembly |
| 10. Water outlet      |                        |                       |

⊗ : Always replace after every disassembly.

⌚ : N·m (kg-m, ft-lb)

### Removal and Installation

INFOID:0000000011682905

#### REMOVAL

##### **WARNING:**

Never remove the radiator cap when the engine is hot. Serious burns could occur from high pressure coolant escaping from the radiator. Wrap a thick cloth around the cap. Slowly turn it a quarter turn to allow built-up pressure to escape. Carefully remove the cap by turning it all the way.

##### **CAUTION:**

Perform when the engine is cold.

##### **NOTE:**

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

1. Remove battery. Refer to [PG-116, "Removal and Installation"](#).
2. Remove ECM and bracket as a set. Refer to [EC-1255, "Removal and Installation"](#).
3. Remove CVT fluid charging pipe. Refer to [TM-570, "Exploded View"](#).
4. Remove water hoses.
5. Remove water tube assembly

#### INSTALLATION

# WATER HOSE

## < REMOVAL AND INSTALLATION >


[CVT: RE0F10D]

Note the followings and installation is in the reverse order of removal.

### CAUTION:


- **Never reuse hose clamp and clip.**
- **Securely install the water hose clip to the converter housing.**
- Refer to the following when installing water hoses.

| Hose (1)     | Installation side tube (2) | Direction of paint mark | Hose insertion depth (L)            |
|--------------|----------------------------|-------------------------|-------------------------------------|
| Water hose A | Thermostat housing         | Frontward               | Hose end reaches the 2-stage bulge. |
|              | CVT oil warmer             |                         |                                     |
| Water hose B | CVT oil warmer             |                         |                                     |
|              | Water tube assembly        |                         |                                     |
| Water hose C | Water tube assembly        | Leftward                |                                     |
|              | Water outlet               |                         |                                     |

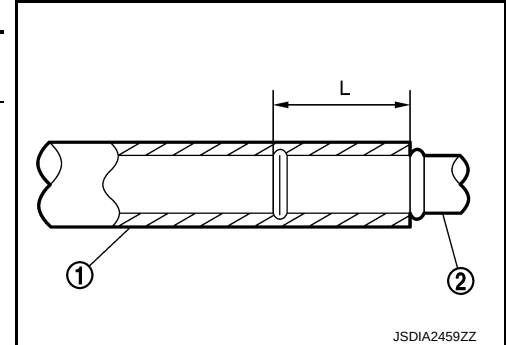

- Refer to the followings when installing hose clamp.
- CAUTION:**  
Hose clamp should not interfere with the bulge of tube.

| Hose (1)     | Installation side tube<br>(2) | Hose clamp (3)   |                                               |
|--------------|-------------------------------|------------------|-----------------------------------------------|
|              |                               | Direction of tab | Clamping position<br>(A)                      |
| Water hose A | Thermostat housing            | Frontward        | 5 – 7 mm (0.20 –<br>0.28 in) from hose<br>end |
|              | CVT oil warmer                |                  |                                               |
| Water hose B | CVT oil warmer                |                  |                                               |
|              | Water tube assem-<br>bly      |                  |                                               |
| Water hose C | Water tube assem-<br>bly      |                  |                                               |
|              | Water outlet                  |                  |                                               |

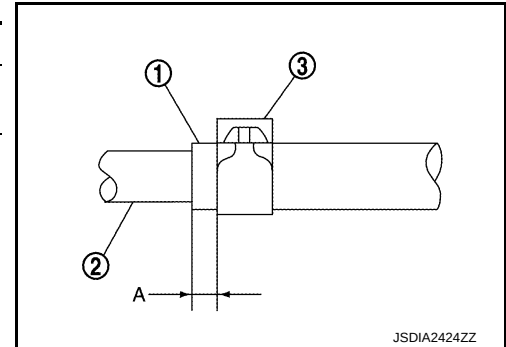

## Inspection

INFOID:000000011682906

### INSPECTION AFTER INSTALLATION

Start the engine and check visually that there is no leakage of engine coolant.



# FLUID COOLER HOSE


< REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

## FLUID COOLER HOSE

### Exploded View

INFOID:0000000011682907

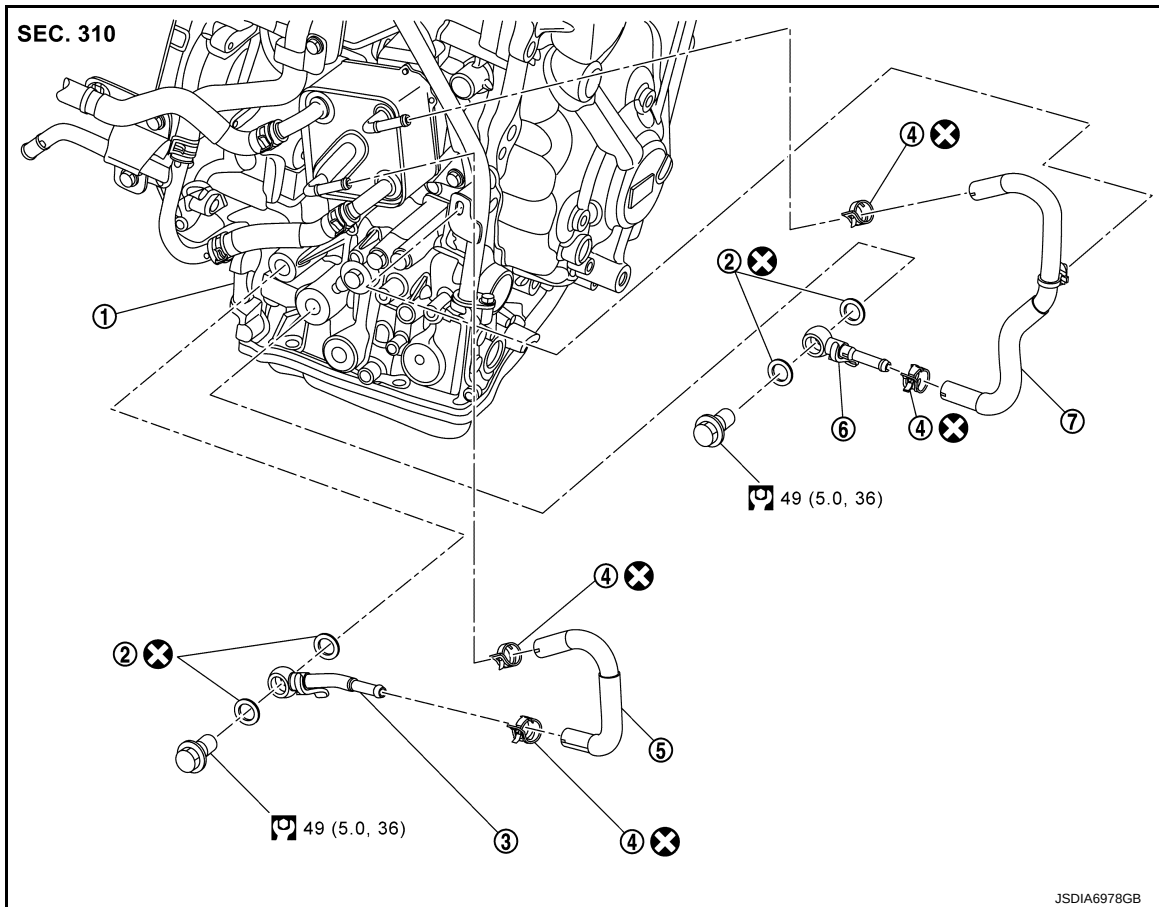

- |                        |                        |                        |
|------------------------|------------------------|------------------------|
| 1. Transaxle assembly  | 2. Copper washer       | 3. Fluid cooler tube B |
| 4. Hose clamp          | 5. Fluid cooler hose B | 6. Fluid cooler tube A |
| 7. Fluid cooler hose A |                        |                        |

⊗ : Always replace after every disassembly.

⌘ : N·m (kg-m, ft-lb)

### Removal and Installation

INFOID:0000000011682908

#### REMOVAL

##### NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

1. Remove fluid cooler hose A and B.
2. Remove fluid cooler tube A and B.

#### INSTALLATION

Note the followings and Installation is in the reverse order of removal.

##### CAUTION:

Never reuse hose clamp, and copper washer.


# FLUID COOLER HOSE

## < REMOVAL AND INSTALLATION >

[CVT: RE0F10D]


Refer to the followings when installing CVT fluid cooler tubes.

- When installing fluid cooler tube A (1) and fluid cooler tube B (2) to transaxle assembly, contact fluid cooler tubes stopper (A) and (B) to transaxle case.

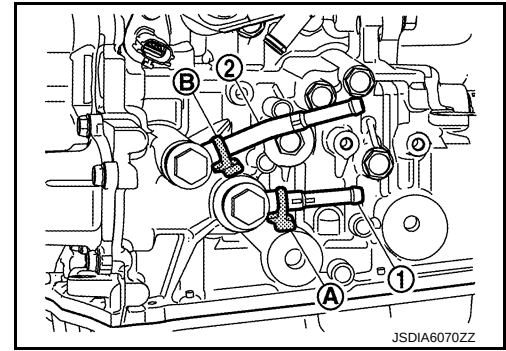

- Refer to the followings when installing fluid cooler hose.

| Hose (1)            | Installation side tube (2) | Direction of paint mark | Hose insertion depth (L)                 |
|---------------------|----------------------------|-------------------------|------------------------------------------|
| Fluid cooler hose A | CVT fluid cooler tube A    | Frontward               | (A): Hose end reaches the 2-stage bulge. |
|                     | CVT oil warmer             |                         | (B): Hose end reaches the end of tube.   |
| Fluid cooler hose B | CVT fluid cooler tube B    |                         | (A): Hose end reaches the 2-stage bulge. |
|                     | CVT oil warmer             |                         | (B): Hose end reaches the end of tube.   |

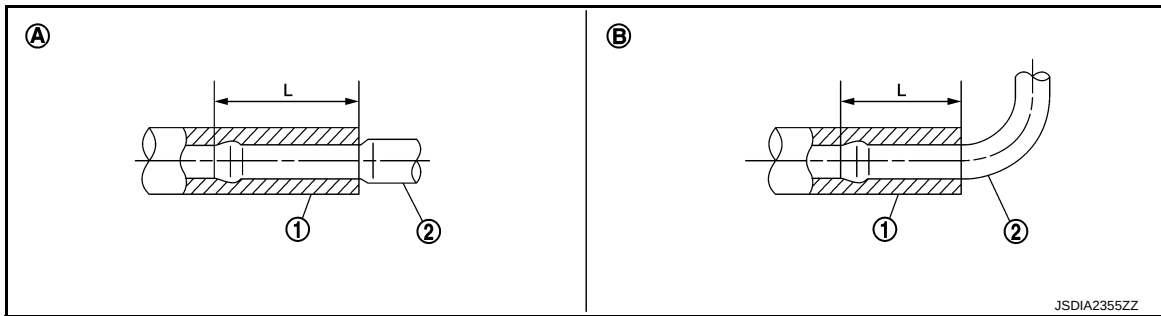


- Refer to the followings when installing hose clamp.

### CAUTION:

Hose clamp should not interfere with the bulge of tube.

| Hose (1)            | Installation side tube (2) | Hose clamp (3)   |                                              |
|---------------------|----------------------------|------------------|----------------------------------------------|
|                     |                            | Direction of tab | Clamping position                            |
| Fluid cooler hose A | CVT oil warmer             | Frontward        | 5 - 9 mm. (0.20 - 0.35 in) (A) from hose end |
|                     | CVT fluid cooler tube A    |                  |                                              |
| Fluid cooler hose B | CVT oil warmer             |                  |                                              |
|                     | CVT fluid cooler tube B    |                  |                                              |

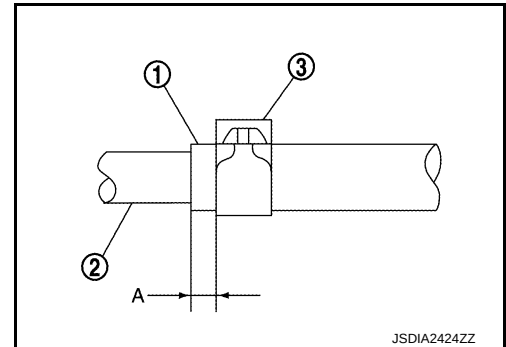

## Inspection

INFOID:000000011682909

### INSPECTION AFTER INSTALLATION

Start the engine and check visually that there is no leakage of CVT fluid.

### ADJUSTMENT AFTER INSTALLATION

Adjust the CVT fluid level. Refer to [TM-437, "Adjustment"](#).

# CVT OIL WARMER


< REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

## CVT OIL WARMER

### Exploded View

INFOID:0000000011682910

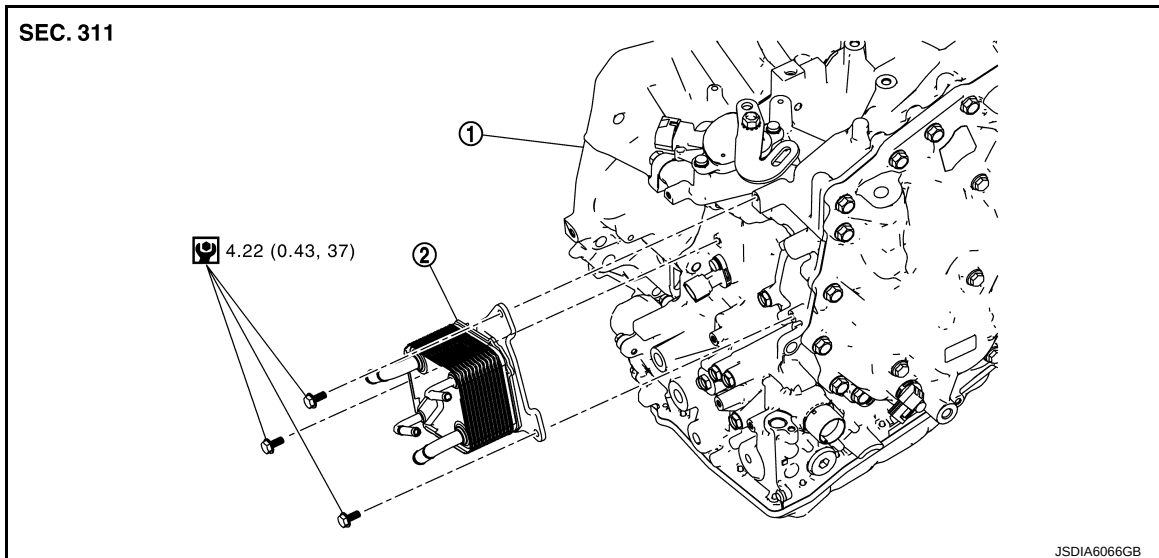

1. Transaxle assembly
2. CVT oil warmer

: N·m (kg-m, in-lb)

### Removal and Installation

INFOID:0000000011682911

#### REMOVAL

##### **WARNING:**

Never remove the radiator cap when the engine is hot. Serious burns could occur from high pressure coolant escaping from the radiator. Wrap a thick cloth around the cap. Slowly turn it a quarter turn to allow built-up pressure to escape. Carefully remove the cap by turning it all the way.


##### **CAUTION:**

Perform when the engine is cold.

##### **NOTE:**

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid/coolant from spilling.

1. Remove ECM and bracket as a set. Refer to [EC-1255, "Removal and Installation"](#).
2. Pull out water hoses from CVT oil warmer. Refer to [TM-563, "Removal and Installation"](#).
3. Pull out fluid cooler hoses from CVT oil warmer. Refer to [TM-565, "Removal and Installation"](#).
4. Remove mounting bolt () and remove CVT oil warmer from transaxle assembly.

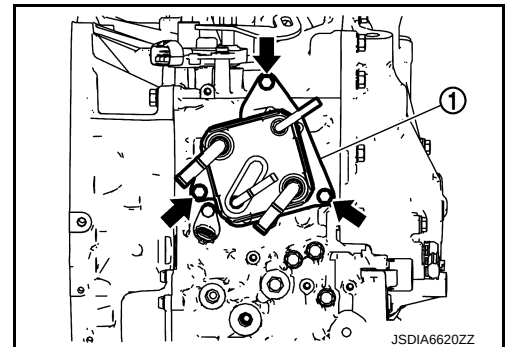

#### INSTALLATION

Installation is in the reverse order of removal.

## Inspection

INFOID:0000000011682912

### INSPECTION AFTER INSTALLATION

Start the engine and check visually that there is no leakage of CVT fluid and engine coolant.

### ADJUSTMENT AFTER INSTALLATION

Adjust the CVT fluid level. Refer to [TM-437, "Adjustment"](#).

# PLUG

< REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

## PLUG


### Description

INFOID:0000000011682913

Replace the O-ring if oil leakage or exudes from the plug.

### Exploded View

INFOID:0000000011682914

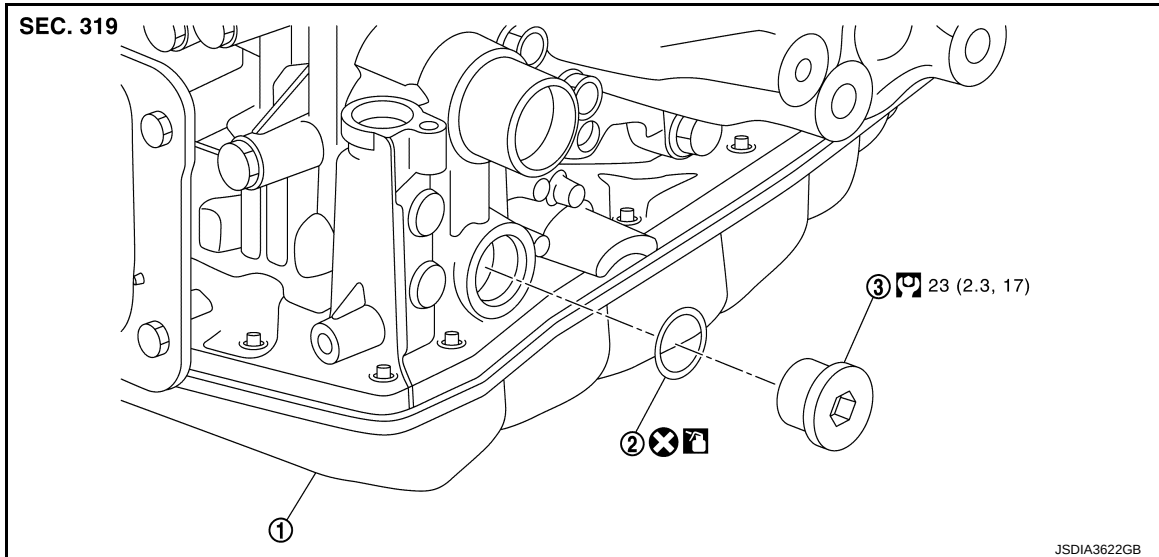

1. Transaxle assembly

2. O-ring

3. Plug



: Always replace after every disassembly.



: N·m (kg·m, ft·lb)



: Apply CVT fluid

### Removal and Installation

INFOID:0000000011682915

#### REMOVAL

1. Remove front fender protector (LH). Refer to [EXT-31, "Removal and Installation"](#).
2. Remove the plug and O-ring.

#### INSTALLATION

Installation is in the reverse order of removal.

#### CAUTION:

- Never reuse O-ring.
- Apply CVT fluid to O-ring.

### Inspection and Adjustment

INFOID:0000000011682916

#### INSPECTION AFTER INSTALLATION

Start the engine and check visually that there is no leakage of CVT fluid.

#### ADJUSTMENT AFTER INSTALLATION


Adjust the CVT fluid level. Refer to [TM-437, "Adjustment"](#).

## UNIT REMOVAL AND INSTALLATION

### TRANSAXLE ASSEMBLY

#### Exploded View

INFOID:000000011682917

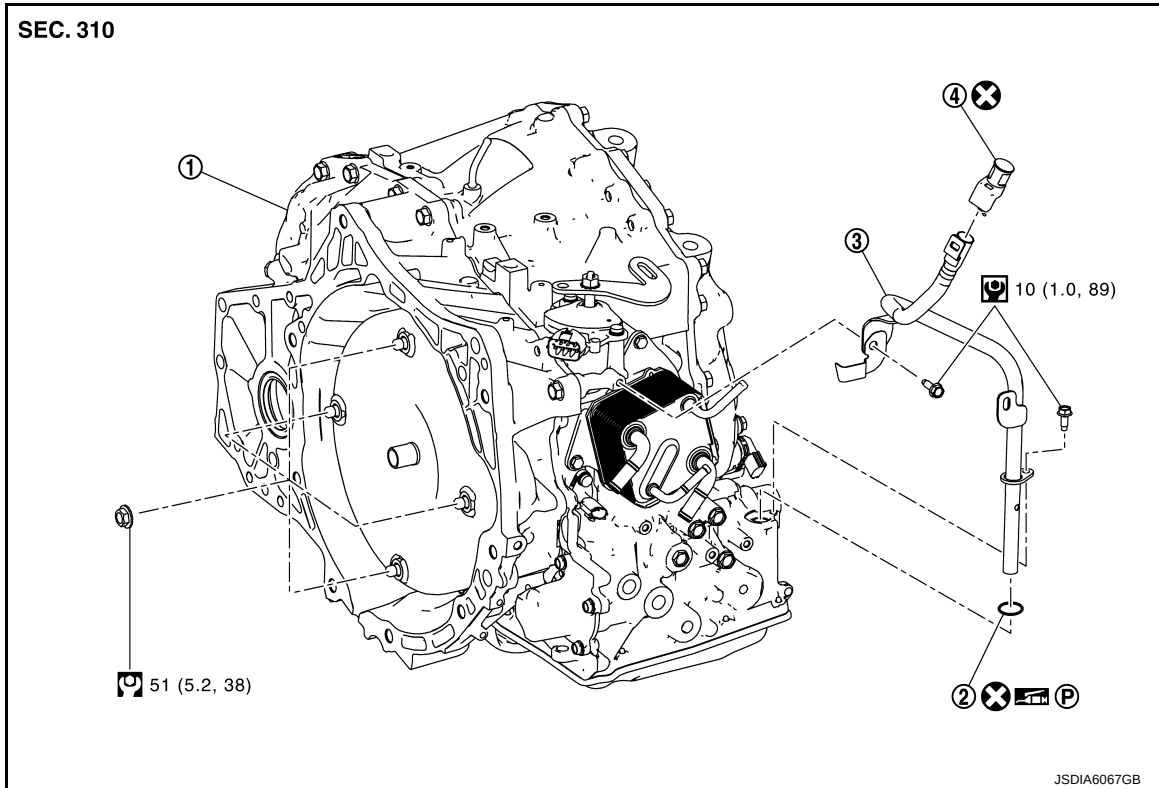

1. Transaxle assembly                      2. O-ring                      3. CVT fluid charging pipe

4. CVT fluid charging pipe cap

A. : For the tightening torque, refer to [TM-570, "Removal and Installation"](#).



: Always replace after every disassembly.



: N·m (kg-m, ft-lb)



: N·m (kg-m, in-lb)



: Apply petroleum jelly

## Removal and Installation

INFOID:000000011682918

### REMOVAL

#### **WARNING:**

Never remove the radiator cap when the engine is hot. Serious burns could occur from high pressure coolant escaping from the radiator. Wrap a thick cloth around the cap. Slowly turn a quarter turn to allow built-up pressure to escape. Carefully remove the cap by turning it all the way.

#### **CAUTION:**

- Perform when the engine is cold.
- When replacing TCM and transaxle assembly simultaneously, perform "ADDITIONAL SERVICE WHEN REPLACING TCM AND TRANSAXLE ASSEMBLY" before work. Refer to [TM-429, "Work Procedure"](#).

#### **NOTE:**

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

1. Remove the battery. Refer to [PG-116, "Removal and Installation"](#).

# TRANSAXLE ASSEMBLY

## < UNIT REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

2. Remove the air duct and air cleaner case. Refer to [EM-191, "Removal and Installation"](#).
3. Remove air breather hose. Refer to [TM-548, "Removal and Installation"](#).
4. Remove the ECM and bracket as a set. Refer to [EC-1255, "Removal and Installation"](#).
5. Drain engine coolant. Refer to [CO-39, "Draining and Filling"](#).
6. Remove CVT fluid charging pipe from transaxle assembly.
7. Remove O-ring from CVT fluid charging pipe.
8. Disconnect fluid cooler hoses from transaxle assembly. Refer to [TM-565, "Removal and Installation"](#).
9. Disconnect following harness connector and wire harness. Refer to [TM-358, "CVT CONTROL SYSTEM : Component Parts Location"](#).
  - CVT unit harness connector
  - Input speed sensor harness connector
  - Primary speed sensor harness connector
  - Output speed sensor harness connector
  - Transmission range switch connector
10. Remove harness and clip from the transaxle assembly.
11. Remove water hoses and water tube assembly. Refer to [TM-563, "Removal and Installation"](#).
12. Remove control cable from transaxle assembly. Refer to [TM-542, "Removal and Installation"](#).
13. Remove starter motor. Refer to [STR-26, "MR16DDT : Removal and Installation"](#).
14. Turn crankshaft and remove the four tightening nuts (↶) for drive plate and torque converter.


**CAUTION:**  
**When turning crankshaft, turn it clockwise as viewed from the front of the engine.**
15. Remove exhaust front tube. Refer to [EX-5, "Exploded View"](#).
16. Separate the propeller shaft. Refer to [DLN-124, "Removal and Installation"](#).
17. Remove front drive shafts. Refer to [FAX-80, "2WD : Removal and Installation"](#) (2WD), [FAX-94, "AWD : Removal and Installation"](#) (4WD).
18. Remove front suspension member from vehicle. Refer to [FSU-17, "Removal and Installation"](#).
19. Remove transfer assembly from transaxle assembly with power tool. Refer to [DLN-94, "Removal and Installation"](#).
20. Support transaxle assembly with a transmission jack.

**CAUTION:**  
**When setting the transmission jack, be careful not to collide against the drain plug.**
21. Support engine assembly with a transmission jack.

**CAUTION:**  
**When setting the transmission jack, be careful not to collide against the drain plug.**
22. Remove engine mounting insulator (LH). Refer to [EM-220, "AWD : Exploded View"](#).
23. Remove bolts fixing transaxle assembly to engine assembly.
24. Remove transaxle assembly from vehicle.

**CAUTION:**

  - Secure torque converter to prevent it from dropping.
  - Secure transaxle assembly to a transmission jack.

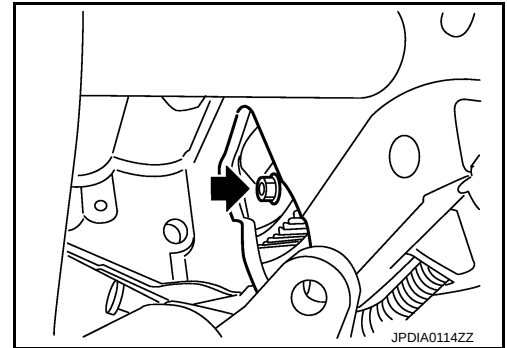

## INSTALLATION

Note the followings and installation is in the reverse order of removal.


**CAUTION:**

# TRANSAXLE ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >


[CVT: RE0F10D]

- Write down the serial number of the new transaxle assembly.

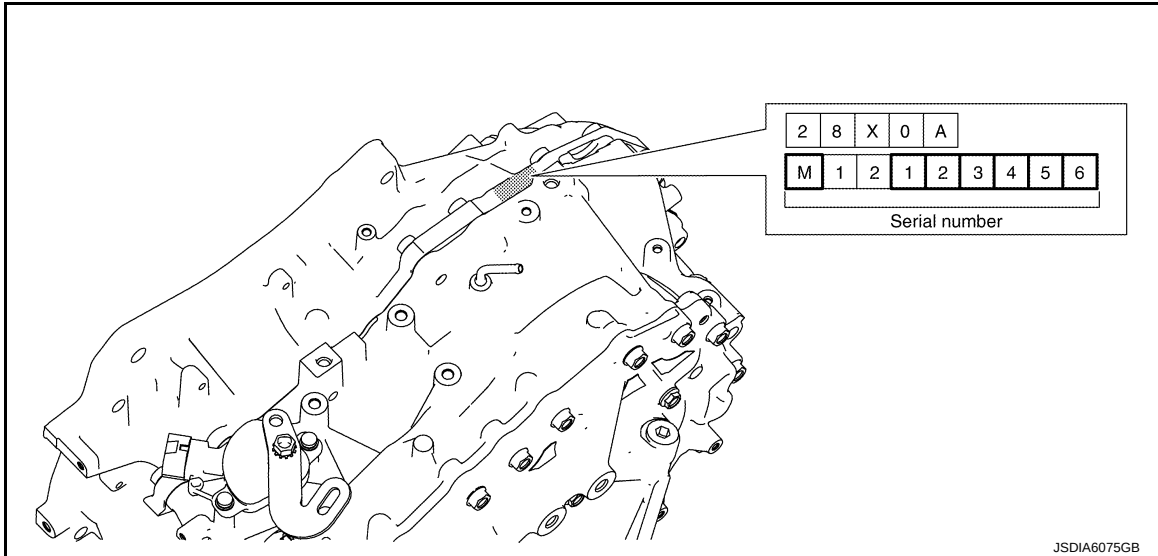


- When replacing an engine or transaxle you must make sure any dowels are installed correctly during re-assembly
- Improper alignment caused by missing dowels may cause vibration, oil leaks or breakage of drive train components.
- Never reuse O-rings or copper sealing washers.
- When turning crankshaft, turn it clockwise as viewed from the front of the engine.
- When tightening the nuts for the torque converter while securing the crankshaft pulley bolt, be sure to confirm the tightening torque of the crankshaft pulley bolt. Refer to [EM-247, "Exploded View"](#).
- After converter is installed to drive plate, rotate crankshaft several turns to check that CVT rotates freely without binding.
- When installing the CVT to the engine, align the matching mark on the drive plate with the matching mark on the torque converter.
- When installing the drive plate to torque converter nuts, tighten them temporarily. Then tighten the nuts to the specified torque.
- Install the transaxle assembly and engine assembly mounting bolts according to the following standards.

| Bolt symbol                            | A                   | B                   |
|----------------------------------------|---------------------|---------------------|
| Insertion direction                    | Transaxle to engine | Engine to transaxle |
| Number of bolts                        | 1                   | 6                   |
| Bolt length<br>mm (in)                 | 55 (2.17)           | 50 (1.97)           |
| Tightening torque<br>N·m (kg·m, ft·lb) | 62 (6.3, 46)        |                     |

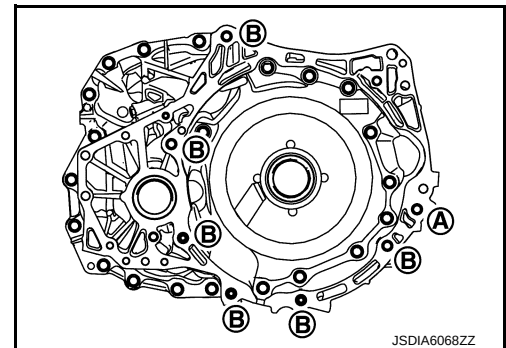

- When installing charging pipe (1) to transaxle assembly, bracket (A) of charging pipe surrounds the water hose (2).

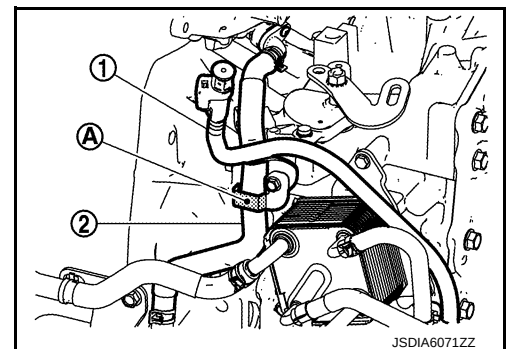



# TRANSAXLE ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[CVT: RE0F10D]

## Inspection and Adjustment


INFOID:0000000011682919

### INSPECTION BEFORE INSTALLATION

After inserting a torque converter to the CVT, check dimension (A) with in the reference value limit.

- B : Scale  
C : Straightedge

**Dimension (A)** : Refer to [TM-577, "Torque Converter"](#).

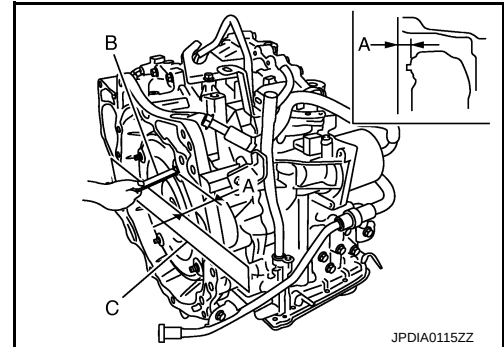

### INSPECTION AFTER INSTALLATION

Check the following items:

- Start the engine and check visually that there is no leakage of CVT fluid and engine coolant.
- For CVT position, refer to [TM-435, "Inspection"](#).

### ADJUSTMENT AFTER INSTALLATION


- Adjust the CVT fluid level. Refer to [TM-437, "Adjustment"](#).
- When replaced transaxle assembly, perform "ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY". Refer to [TM-427, "Work Procedure"](#).

## UNIT DISASSEMBLY AND ASSEMBLY

### TORQUE CONVERTER AND CONVERTER HOUSING OIL SEAL

#### Exploded View

INFOID:0000000011682920

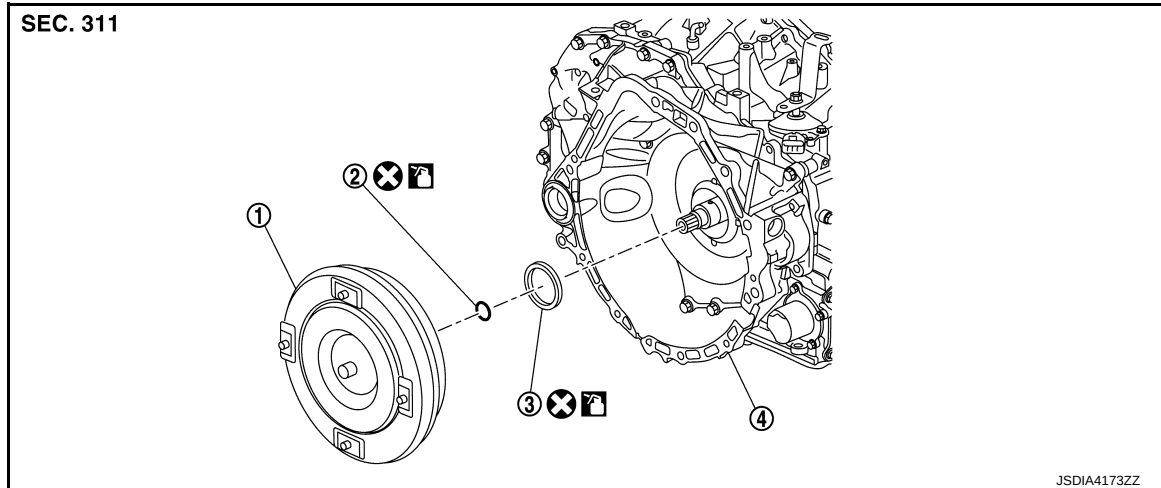

- |                       |           |                               |
|-----------------------|-----------|-------------------------------|
| 1. Torque converter   | 2. O-ring | 3. Converter housing oil seal |
| 4. Transaxle assembly |           |                               |

: Always replace after every disassembly.

: Apply CVT fluid

#### Disassembly

INFOID:0000000011682921

1. Remove transaxle assembly. Refer to [TM-570, "Removal and Installation"](#).
2. Remove torque converter from transaxle assembly.  
**CAUTION:**  
Never damage the bushing on the inside of torque converter sleeve when removing torque converter.
3. Remove O-ring from input shaft.
4. Remove converter housing oil seal using an oil seal remover (commercial service tool).  
**CAUTION:**  
Be careful not to scratch converter housing.

#### Assembly

INFOID:0000000011682922

Note the followings and assembly is in the reverse order of disassembly.

#### **CAUTION:**

- Never reuse O-ring.
- Never reuse converter housing oil seal.
- Apply CVT fluid to O-ring.
- Apply CVT fluid to converter housing oil seal.

# TORQUE CONVERTER AND CONVERTER HOUSING OIL SEAL

< UNIT DISASSEMBLY AND ASSEMBLY >


[CVT: RE0F10D]

- Drive converter housing oil seal (1) evenly using a drift (A) (commercial service tool) so that converter housing oil seal protrudes by the dimension (B) respectively.

Unit: mm (in)

|                              |                           |
|------------------------------|---------------------------|
| Commercial service tool: (A) | Outer diameter: 65 (2.56) |
|                              | Inner diameter: 60 (2.36) |

② : Transaxle assembly

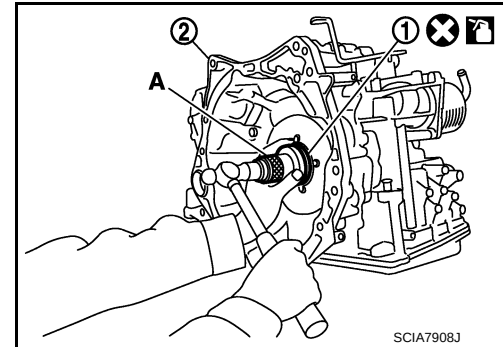


SCIA7908J

**Dimension (B) :  $1.0 \pm 0.5$  mm ( $0.039 \pm 0.020$  in)**

## NOTE:

Converter housing oil seal pulling direction is used as the reference.

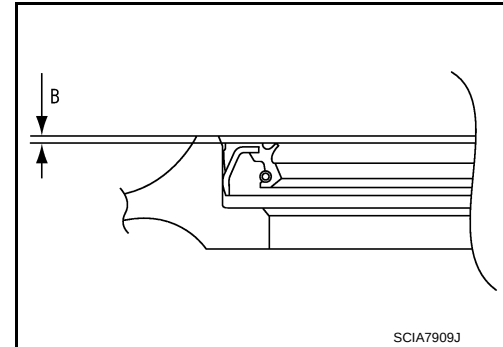


SCIA7909J

- Attach the pawl (A) of the torque converter to the drive sprocket hole (B) on the transaxle assembly side.

## CAUTION:

- Rotate the torque converter for installing torque converter.
- Never damage the bushing inside the torque converter sleeve when installing the converter housing oil seal.

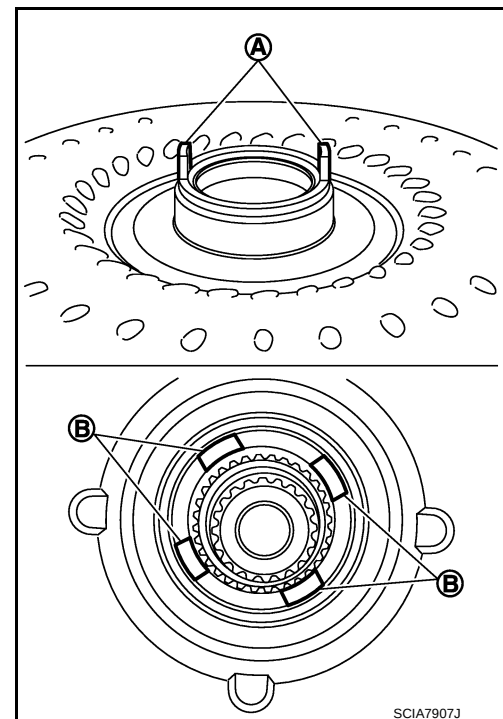

SCIA7907J

## Inspection

## INSPECTION AFTER INSTALLATION

INFOID:0000000011682923

## TORQUE CONVERTER AND CONVERTER HOUSING OIL SEAL

< UNIT DISASSEMBLY AND ASSEMBLY >


[CVT: RE0F10D]

- After inserting a torque converter to the CVT, check dimension (A) with in the reference value limit.

B : Scale

C : Straightedge

**Dimension (A)** : Refer to [TM-577, "Torque Converter"](#).

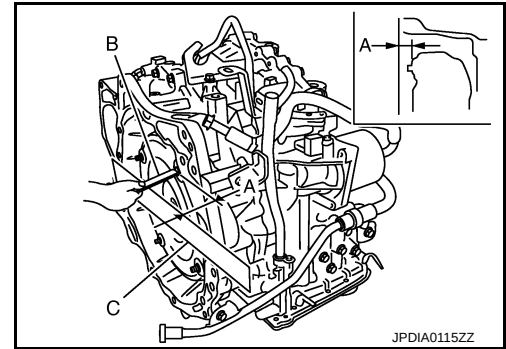

## SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[CVT: RE0F10D]

# SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

### General Specification

INFOID:0000000011682924

|                                      |             |                                                |
|--------------------------------------|-------------|------------------------------------------------|
| Applied model                        | Engine      | MR16DDT                                        |
|                                      | Axle        | 2WD/AWD                                        |
| Transaxle model                      |             | RE0F10D                                        |
| Transaxle gear ratio                 | D position  | 2.631 – 0.378                                  |
|                                      | R position  | 1.960                                          |
|                                      | Final drive | 5.694                                          |
| Recommended fluid and fluid capacity |             | <a href="#">MA-11. "Fluids and Lubricants"</a> |

### Shift Characteristics

INFOID:0000000011682925

Unit: rpm

| Throttle position | Shift pattern | CVT input speed     |                     |
|-------------------|---------------|---------------------|---------------------|
|                   |               | At 40 km/h (25 MPH) | At 60 km/h (37 MPH) |
| 2/8               | "D" position  | 1,500 – 3,200       | 1,600 – 3,500       |
|                   | ECO mode      | 1,500 – 3,200       | 1,600 – 3,500       |
| 8/8               | "D" position  | 4,000 – 4,800       | 4,600 – 5,400       |
|                   | ECO mode      | 4,000 – 4,800       | 4,600 – 5,400       |

#### NOTE:

Lock-up is engaged at the vehicle speed of approximately 18 km/h (11 MPH) to 130 km/h (81 MPH).

### Stall Speed

INFOID:0000000011682926

Unit: rpm

|             |               |
|-------------|---------------|
| Stall speed | 2,600 – 3,040 |
|-------------|---------------|

### Torque Converter

INFOID:0000000011682927

Unit: mm (in)

|                                                                  |              |
|------------------------------------------------------------------|--------------|
| Dimension "A" between the converter housing and torque converter | 14.4 (0.567) |
|------------------------------------------------------------------|--------------|