
ALPHABETICAL INDEX

A

A-BAG BRANCH LINE CIRCUIT .LAN-45, LAN-62,
LAN-78, LAN-95, LAN-111
A/T CONTROL SYSTEM TM-50
A/T FLUID TM-67
A/T FLUID COOLER TM-71
A/T SHIFT LOCK SYSTEM..... TM-60, TM-138
A/T SHIFT SELECTOR TM-163
ABBREVIATIONS GI-13
ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT).....BRC-37, BRC-143
ABS BRANCH LINE CIRCUIT LAN-53, LAN-69,
LAN-86, LAN-102, LAN-119
ABS FUNCTION DOES NOT OPERATE. BRC-136
ABS WARNING LAMP BRC-128
AC 120 V OUTLET PWO-51
AC 120 V OUTLET MAIN SWITCH INDICATOR
CIRCUIT PWO-43
AC 120 V OUTLET MAIN SWITCH INDICATOR
DOES NOT TURN ON PWO-47
AC 120 V OUTLET MAIN SWITCH INPUT SIGNAL
CIRCUIT PWO-38
AC 120 V OUTLET MAIN SWITCH POWER
SUPPLY CIRCUIT PWO-37
AC 120 V POWER OUTPUT CIRCUIT PWO-40
AC 120V OUTLET MAIN SW PWO-50
ACCELERATOR CONTROL SYSTEM ACC-3
ACCELERATOR PEDAL RELEASED POSITION
LEARNING EC-137, EC-590
ADDITIONAL SERVICE WHEN REPLACING ABS
ACTUATOR AND ELECTRIC UNIT (CONTROL
UNIT) BRC-55
ADDITIONAL SERVICE WHEN REPLACING
CONTROL VALVE & TCM TM-66
ADDITIONAL SERVICE WHEN REPLACING ECM
EC-134, EC-588
ADDITIONAL SERVICE WHEN REPLACING LOW
TIRE PRESSURE WARNING CONTROL UNIT
WT-25
ADDITIONAL SERVICE WHEN REPLACING
TRANSMISSION ASSEMBLY TM-65
ADJUSTMENT OF STEERING ANGLE SENSOR
NEUTRAL POSITION BRC-56
AIR BREATHER HOSE TM-181
AIR CLEANER AND AIR DUCT EM-24, EM-165
AIR CLEANER FILTER EM-15, EM-155
AIR CONDITIONER CONTROL HAC-35, HAC-145
AMBIENT SENSOR HAC-111, HAC-213
ASCD BRAKE SWITCH EC-421, EC-869
ASCD INDICATOR EC-423, EC-872
AUDIO ANTENNA AV-30, AV-85, AV-152
AUDIO SYSTEM AV-24, AV-42, AV-73
AUDIO UNIT AV-10, AV-27, AV-78

AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATES NORMALLY PWC-39
AUTOMATIC SPEED CONTROL DEVICE (ASCD)
CCS-3
AUXILIARY INPUT JACK AV-137
AV BRANCH LINE CIRCUIT LAN-46, LAN-79,
LAN-112
AV CONTROL UNIT AV-99, AV-146
AXLE SHAFT RAX-5, RAX-6

B

B TERMINAL CIRCUIT CHG-17, STR-23
B0001, B0002 DRIVER AIRBAG MODULE SRC-45
B0010, B0011 PASSENGER AIRBAG MODULE
SRC-48
B0020 SIDE AIRBAG MODULE LH SRC-51
B0021 SIDE CURTAIN AIR BAG MODULE LH
SRC-54
B0022 CURTAIN AIR BAG MODULE SRC-57
B0028 SIDE AIRBAG MODULE RH SRC-60
B0029 SIDE CURTAIN AIR BAG MODULE RH
SRC-63
B002A CURTAIN AIR BAG MODULE SRC-66
B0091 FRONT SIDE AIR BAG SATELLITE
SENSOR LH SRC-69
B0092 REAR SIDE AIR BAG SATELLITE SENSOR
LH SRC-72
B0093 FRONT DOOR SATELLITE SENSOR LH ...
SRC-75
B0094 CRASH ZONE SENSOR SRC-78
B0096 FRONT SIDE AIR BAG SATELLITE
SENSOR RH SRC-81
B0097 REAR SIDE AIR BAG SATELLITE SENSOR
RH SRC-84
B0098 FRONT DOOR SATELLITE SENSOR RH...
SRC-87
B1427 CONFIG SETTING SRC-103
B1428 SEAT BELT BUCKLE SWITCH LH. SRC-90
B1429 SEAT BELT BUCKLE SWITCH RH SRC-92
B142A IGNITION VOLTAGE SRC-98
B142X COLLISION DETECTION SRC-100
B1430 SEAT BELT PRE-TENSIONER SRC-94
B1431 SEAT BELT PRE-TENSIONER SRC-96
B14XX AIR BAG DIAGNOSIS SENSOR UNIT
SRC-101
B2190 NATS ANTENNA AMP. SEC-43
B2191 DIFFERENCE OF KEY SEC-45
B2192 ID DISCORD, IMMUECM SEC-46
B2193 CHAIN OF ECM-IMMU SEC-48
B2195 ANTI-SCANNING SEC-49
B2578, B2579 IN-VEHICLE SENSOR HAC-58
B257B, B257C AMBIENT SENSOR HAC-61,
HAC-168
B2581, B2582 INTAKE SENSOR HAC-65, HAC-172

B2630, B2631 SUNLOAD SENSOR [HAC-68](#)
 B2632, B2633 FRONT AIR MIX DOOR MOTOR
 [HAC-175](#)
 B2632, B2633 FRONT AIR MIX DOOR MOTOR
 (DRIVER SIDE) [HAC-71](#)
 B2634, B2635 FRONT AIR MIX DOOR MOTOR
 (PASSENGER SIDE)..... [HAC-73](#)
 B2636, B2637, B2638, B2639, B2654 MODE DOOR
 MOTOR (FRONT) [HAC-75](#), [HAC-177](#)
 B263D, B263E, B263F INTAKE DOOR MOTOR
 [HAC-77](#)
 B263D, B263F INTAKE DOOR MOTOR .. [HAC-179](#)
 B27B0 FRONT AIR CONTROL. [HAC-79](#), [HAC-181](#)
 BACK DOOR FINISHER [INT-21](#)
 BACK DOOR LOCK [DLK-120](#)
 BACK DOOR WINDOW GLASS [GW-25](#)
 BACK-UP LAMP [EXL-76](#)
 BASE AUDIO SYSTEM [AV-12](#)
 BASIC INSPECTION [EC-142](#), [EC-584](#)
 BATTERY [PG-86](#), [PG-95](#)
 BATTERY SAVER OUTPUT/POWER SUPPLY
 CIRCUIT [INL-53](#)
 BATTERY TERMINAL WITH FUSIBLE LINK [PG-97](#)
 BCM [PWC-13](#)
 BCM (BODY CONTROL MODULE) [BCS-28](#),
 [BCS-41](#), [BCS-62](#), [DLK-19](#), [INL-14](#)
 BCM BRANCH LINE CIRCUIT [LAN-48](#), [LAN-64](#),
 [LAN-81](#), [LAN-97](#), [LAN-114](#)
 BCM, COMBINATION METER [WCS-15](#)
 BCM, IPDM E/R [DEF-15](#), [EXL-23](#), [MWI-23](#), [WW-14](#)
 BLOWER MOTOR [VTL-14](#)
 BLOWER MOTOR RESISTOR [VTL-16](#)
 BLUETOOTH CONTROL UNIT [AV-45](#), [AV-83](#)
 BODY ALIGNMENT [BRM-73](#), [BRM-169](#), [BRM-275](#)
 BODY COMPONENT PARTS ... [BRM-9](#), [BRM-108](#),
 [BRM-205](#)
 BODY CONSTRUCTION [BRM-22](#), [BRM-121](#),
 [BRM-218](#)
 BODY EXTERIOR PAINT COLOR [BRM-3](#),
 [BRM-102](#), [BRM-199](#)
 BODY SIDE TRIM [INT-23](#)
 BOTH DOORS MIRROR DEFOGGER DON'T
 OPERATE BUT REAR WINDOW DEFOGGER
 OPERATES [DEF-40](#)
 BOTH HIGH- AND LOW-PRESSURE SIDES ARE
 TOO HIGH [HA-29](#)
 BOTH HIGH- AND LOW-PRESSURE SIDES ARE
 TOO LOW [HA-32](#)
 BOTH SIDE FRONT FOG LAMPS ARE NOT
 TURNED ON [EXL-116](#)
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED
 ON [EXL-114](#)
 BOTH SIDE HEADLAMPS DO NOT SWITCH TO
 HIGH BEAM [EXL-113](#)
 BRAKE CONTROL SYSTEM [BRC-45](#)
 BRAKE FLUID [BR-12](#)

BRAKE PEDAL [BR-10](#), [BR-22](#)
 BRAKE PIPING [BR-24](#)
 BRAKE WARNING LAMP [BRC-129](#)
 BULB SPECIFICATIONS [INL-71](#)

C

C1101, C1102, C1103, C1104 WHEEL SENSOR ...
 [BRC-60](#)
 C1105, C1106, C1107, C1108 WHEEL SENSOR ...
 [BRC-65](#)
 C1109 POWER AND GROUND SYSTEM . [BRC-72](#)
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM.....
 [BRC-74](#)
 C1115 WHEEL SENSOR [BRC-77](#)
 C1116 STOP LAMP SWITCH [BRC-84](#)
 C1120, C1122, C1124, C1126 ABS IN VALVE
 SYSTEM [BRC-88](#)
 C1121, C1123, C1125, C1127 ABS OUT VALVE
 SYSTEM [BRC-90](#)
 C1130 ENGINE SIGNAL [BRC-92](#)
 C1140 ACTUATOR RELAY SYSTEM [BRC-94](#)
 C1142 PRESS SENSOR [BRC-96](#)
 C1143 STEERING ANGLE SENSOR [BRC-99](#)
 C1144 INCOMPLETE STEERING ANGLE SENSOR
 ADJUSTMENT [BRC-103](#)
 C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR
 [BRC-105](#)
 C1155 BRAKE FLUID LEVEL SWITCH ... [BRC-108](#)
 C1160 INCOMPLETE DECEL G SENSOR
 CALIBRATION [BRC-112](#)
 C1164, C1165 CV SYSTEM [BRC-114](#)
 C1166, C1167 SV SYSTEM [BRC-116](#)
 C1170 VARIANT CODING [BRC-118](#)
 C118E ACCUMULATOR [BRC-119](#)
 C1704, C1705, C1706, C1707 LOW TIRE
 PRESSURE [WT-30](#)
 C1708, C1709, C1710, C1711 TIRE PRESSURE
 SENSOR [WT-32](#)
 C1716, C1717, C1718, C1719 TIRE PRESSURE
 SENSOR [WT-36](#)
 C1728 RECEIVER ID [WT-38](#)
 C1729 VEHICLE SPEED SIGNAL [WT-41](#)
 C1735 IGN CIRCUIT OPEN [BCS-54](#)
 C1750, C1751, C1752, C1753 RECEIVER .. [WT-43](#)
 C1754 LOW TIRE PRESSURE WARNING
 CONTROL UNIT [WT-46](#)
 C1755, C1756, C1757, C1758 POOR RECEIVING
 CONDITIONS [WT-49](#)
 CALIBRATION OF DECEL G SENSOR [BRC-58](#)
 CAMSHAFT [EM-77](#), [EM-200](#)
 CAMSHAFT VALVE CLEARANCE [EM-18](#), [EM-158](#)
 CAN COMMUNICATION CIRCUIT [LAN-56](#), [LAN-72](#),
 [LAN-89](#), [LAN-105](#), [LAN-122](#)
 CAN SYSTEM [LAN-33](#)
 CARGO LAMP [INL-68](#)
 CARRIER COVER [DLN-41](#)

CENTER CONSOLE ASSEMBLY IP-25, IP-26
 CHARGING SYSTEM CHG-6, CHG-22
 CHARGING SYSTEM PRELIMINARY INSPECTION
 CHG-16
 CHASSIS AND BODY MAINTENANCE MA-41
 CLUSTER LID A IP-21
 CLUSTER LID C IP-22
 COIL SPRING AND SHOCK ABSORBER.. FSU-21
 COLLISION DIAGNOSIS SR-5
 COMBINATION AND LIGHTING SWITCH INPUT
 CIRCUIT BCS-56
 COMBINATION AND LIGHTING SWITCH OUTPUT
 CIRCUIT BCS-58
 COMBINATION AND LIGHTING SWITCH SYSTEM
 SYMPTOMS BCS-60
 COMBINATION METER MWI-20, MWI-68
 COMBINATION SWITCH EXL-127
 COMPASS MWI-43
 COMPRESSION PRESSURE EM-22, EM-163
 COMPRESSOR HA-10, HA-47
 CONDENSER HA-67
 CONTROL CABLE TM-165
 CONTROL UNIT HAC-107, HAC-211
 CONTROL VALVE WITH TCM TM-171
 COOLER PIPE AND HOSE HA-56
 COOLING FAN EC-424, EC-873
 COOLING SYSTEM CO-7, CO-39
 CORROSION PROTECTION .. BRM-16, BRM-115,
 BRM-212
 COWL TOP EXT-30
 CRASH ZONE SENSOR SR-27
 CYLINDER HEAD EM-91, EM-217

D

DAYTIME RUNNING LIGHT SYSTEM EXL-38
 DEFOGGER DEF-16
 DEFOGGER SYSTEM SYMPTOMS DEF-37
 DIAGNOSIS AND REPAIR WORK FLOW BRC-52,
 PWO-32, SRC-38, WT-23
 DIAGNOSIS SENSOR UNIT SR-33, SRC-16
 DIAGNOSIS SYSTEM (AIR BAG) SRC-13
 DIAGNOSIS SYSTEM (AUDIO UNIT) AV-38
 DIAGNOSIS SYSTEM (AV CONTROL UNIT) AV-96
 DIAGNOSIS SYSTEM (BCM) BCS-16, DEF-9,
 DLK-15, EXL-14, INL-11, PWC-9, SEC-10,
 WCS-13, WW-8
 DIAGNOSIS SYSTEM (BLUETOOTH CONTROL
 UNIT) AV-40
 DIAGNOSIS SYSTEM (COMBINATION METER) ..
 MWI-16, WCS-9
 DIAGNOSIS SYSTEM (ECM) EC-57, EC-508
 DIAGNOSIS SYSTEM (HVAC) .. HAC-26, HAC-138
 DIAGNOSIS SYSTEM (IPDM E/R) DEF-11, EXL-19,
 PCS-8, SEC-13, WW-10
 DIAGNOSIS SYSTEM (LOW TIRE PRESSURE
 WARNING CONTROL UNIT) WT-9

DIAGNOSIS SYSTEM (SONAR CONTROL UNIT)
 SN-8
 DIAGNOSIS SYSTEM (TCM) TM-39
 DIAGNOSIS SYSTEM [ABS ACTUATOR AND
 ELECTRIC UNIT (CONTROL UNIT)]... BRC-32
 DIFFERENTIAL GEAR OIL DLN-36
 DIRECT CLUTCH TM-256
 DLC BRANCH LINE CIRCUIT LAN-49, LAN-65,
 LAN-82, LAN-98, LAN-115
 DOOR DLK-97
 DOOR LOCK ACTUATOR DLK-58
 DOOR LOCK AND UNLOCK SWITCH DLK-53
 DOOR MIRROR MIR-4, MIR-21
 DOOR MIRROR DEFOGGER LH DEF-33
 DOOR MIRROR DEFOGGER RH DEF-35
 DOOR MIRROR REMOTE CONTROL SWITCH....
 MIR-13, MIR-23
 DOOR MOTOR HAC-114, HAC-216
 DOOR MOTOR COMMUNICATION CIRCUIT
 HAC-80, HAC-182
 DOOR OUTSIDE MOLDING EXT-37
 DOOR SWITCH DLK-50, DLK-108, PWC-31
 DRIVE BELTS EM-13, EM-153
 DRIVER AIR BAG MODULE SR-11
 DRIVER SIDE DOOR MIRROR DEFOGGER DOES
 NOT OPERATE DEF-41
 DRIVER SIDE POWER WINDOW ALONE DOES
 NOT OPERATE PWC-37
 DTC B2205 VEHICLE SPEED CIRCUIT ... MWI-50
 DUCTS AND GRILLES VTL-5

E

ECM BRANCH LINE CIRCUIT LAN-44, LAN-61,
 LAN-77, LAN-94, LAN-110
 ECM, IPDM E/R, BCM HAC-34, HAC-144, SEC-15
 ELECTRICAL LEAK DETECTOR HA-44
 ELECTRICAL LOAD SIGNAL EC-426, EC-875
 ELECTRICAL UNITS LOCATION PG-4
 ENCODER CIRCUIT PWC-29
 ENGINE ASSEMBLY EM-102, EM-227
 ENGINE CONTROL SYSTEM EC-108, EC-558
 ENGINE CONTROL SYSTEM SYMPTOM SEC-452,
 EC-894
 ENGINE COOLANT CO-11, CO-43
 ENGINE COOLING FAN CO-21, CO-52
 ENGINE MAINTENANCE (VK56DE) MA-30
 ENGINE MAINTENANCE (VQ40DE) MA-20
 ENGINE OIL LU-8, LU-25
 ENGINE ROOM COVER EM-164
 ENGINE UNIT EM-105, EM-230
 EVAP CANISTER FL-13
 EVAP CANISTER FILTER FL-16
 EVAP CANISTER VENT CONTROL VALVE.. FL-15
 EVAP CONTROL SYSTEM PRESSURE SENSOR
 FL-17
 EVAP LEAK CHECK EC-459, EC-901

EVAPORATOR	HA-70
EXCESSIVE ABS FUNCTION OPERATION FREQUENCY	BRC-133
EXHAUST MANIFOLD AND THREE WAY CATALYST	EM-30, EM-170
EXHAUST SYSTEM	EX-4, EX-5
EXPANSION VALVE	HA-72
EXTERIOR LIGHTING SYSTEM SYMPTOMS	EXL-111

F

FENDER PROTECTOR	EXT-33
FILAMENT	DEF-44
FLOOR TRIM	INT-44
FLUID COOLER SYSTEM	TM-184
FLUORESCENT LEAK DETECTOR	HA-42
FOURTH ROW SEAT BELT	SB-20
FOURTH ROW SEATS	SE-37, SE-72
FRONT AIR CONTROL	HAC-29, HAC-140
FRONT BLOWER MOTOR	HAC-87, HAC-189
FRONT BRAKE CALIPER	BR-45
FRONT BUMPER	EXT-15
FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR	TM-244
FRONT COMBINATION LAMP	EXL-122
FRONT DISC BRAKE	BR-8, BR-18, BR-32
FRONT DOOR FINISHER	INT-15
FRONT DOOR GLASS AND REGULATOR	GW-15
FRONT DOOR LOCK	DLK-109
FRONT DOOR SPEAKER	AV-20, AV-28, AV-62, AV-79, AV-124, AV-147
FRONT FENDER	DLK-94
FRONT FOG LAMP	EXL-52, EXL-121, EXL-124
FRONT FOG LAMP CIRCUIT	EXL-103
FRONT FOG LIGHT SWITCH	EXL-126
FRONT GRILLE	EXT-28
FRONT OIL SEAL	DLN-38
FRONT PASSENGER AIR BAG MODULE	SR-16
FRONT PASSENGER SIDE POWER WINDOW ALONE DOES NOT OPERATE	PWC-38
FRONT ROOM/MAP LAMP	INL-62
FRONT SEAT	SE-22, SE-42
FRONT SEAT BELT	SB-8
FRONT SEAT BELT PRE-TENSIONER	SR-32
FRONT SIDE AIR BAG MODULE	SR-25
FRONT SUN GEAR, 3RD ONE-WAY CLUTCH	TM-242
FRONT SUSPENSION ASSEMBLY	FSU-6
FRONT TIMING CHAIN CASE	EM-52
FRONT UNDER COVER	EXT-38
FRONT WASHER NOZZLE	WW-46
FRONT WASHER TUBE	WW-45
FRONT WHEEL ALIGNMENT INSPECTION AND ADJUSTMENT	FSU-8
FRONT WIPER AND WASHER SWITCH	WW-48
FRONT WIPER AND WASHER SYSTEM	WW-15

FRONT WIPER ARM	WW-37
FRONT WIPER AUTO STOP SIGNAL CIRCUIT WW-27	
FRONT WIPER BLADE	WW-39
FRONT WIPER DOES NOT OPERATE	WW-34
FRONT WIPER DRIVE ASSEMBLY	WW-43
FRONT WIPER MOTOR GROUND CIRCUIT	WW-29
FRONT WIPER MOTOR HI CIRCUIT	WW-25
FRONT WIPER MOTOR LO CIRCUIT	WW-23
FUEL FILLER DOOR	DLK-124
FUEL INJECTOR	EC-428, EC-877
FUEL INJECTOR AND FUEL TUBE	EM-45, EM-181
FUEL LEVEL SENSOR SIGNAL CIRCUIT	MWI-54
FUEL LEVEL SENSOR UNIT, FUEL FILTER AND FUEL PUMP ASSEMBLY	FL-11, FL-18
FUEL PRESSURE	EC-596
FUEL PRESSURE CHECK	EC-146
FUEL PUMP	EC-430, EC-879
FUEL SYSTEM	FL-5
FUEL TANK	FL-6
FUSE BLOCK - JUNCTION BOX (J/B)	PG-81
FUSE INSPECTION	PG-90
FUSE, FUSIBLE LINK AND RELAY BOX	PG-82
FUSIBLE LINK INSPECTION	PG-94

G

GENERAL MAINTENANCE	MA-5
GENERATOR	CHG-23, CHG-25
GPS ANTENNA	AV-156
GROUND	PG-33

H

HARNESS	PG-46
HAZARD FUNCTION	DLK-71
HAZARD SWITCH	EXL-128
HEADLAMP	EXL-24, EXL-134
HEADLAMP (HI) CIRCUIT	EXL-93
HEADLAMP (LO) CIRCUIT	EXL-98
HEADLAMP AIMING ADJUSTMENT	EXL-118
HEADLAMP FUNCTION	DLK-73
HEADLINING	INT-47
HEATED SEAT	SE-12
HEATER & COOLING UNIT ASSEMBLY	HA-76
HEATER AND AIR CONDITIONING SYSTEM CONTROL SYMPTOMS	HAC-101, HAC-206
HEATER AND AIR CONDITIONING SYSTEM SYMPTOMS	HA-27
HEATER CORE	HA-74
HEATER PUMP	HA-65, HAC-199
HIGH AND LOW REVERSE CLUTCH	TM-254
HIGH-MOUNTED STOP LAMP	EXL-131
HIGH-PRESSURE SIDE IS TOO HIGH AND LOW- PRESSURE SIDE IS TOO LOW	HA-30

HIGH-PRESSURE SIDE IS TOO LOW AND LOW-PRESSURE SIDE IS TOO HIGH..... HA-31
 HOOD DLK-84
 HORN..... HRN-4, HRN-7
 HORN FUNCTION DLK-69
 HOW TO ERASE PERMANENT DTC EC-154, EC-604
 HOW TO FOLLOW TROUBLE DIAGNOSES.. GI-6
 HOW TO READ WIRING DIAGRAMS GI-9
 HOW TO SELECT PISTON AND BEARINGEM-127, EM-250
 HOW TO SET SRT CODE EC-148, EC-598
 HOW TO USE THIS MANUAL GI-3
 HOW TO USE THIS SECTION LAN-5, LAN-21
 HVAC BRANCH LINE CIRCUIT... LAN-47, LAN-63, LAN-80, LAN-96, LAN-113
 HYDRAULIC BOOSTER ASSEMBLYBR-17, BR-28, BR-42
 HYDRAULIC LINE ST-29

I

ID REGISTRATION WT-26
 ID REGISTRATION CANNOT BE COMPLETED.... WT-59
 IDENTIFICATION INFORMATION GI-22
 IDLE AIR VOLUME LEARNING.... EC-139, EC-592
 IDLE SPEED EC-457, EC-899
 IGNITION COIL EM-40, EM-178
 IGNITION SIGNAL EC-433, EC-882
 IGNITION TIMING..... EC-458, EC-900
 ILLUMINATION INL-38
 ILLUMINATION CONTROL SWITCH INL-70
 IN-CABIN MICROFILTER VTL-4
 IN-VEHICLE SENSOR..... HAC-110
 INSIDE MIRROR..... MIR-10, MIR-20
 INSTRUMENT LOWER PANEL LH IP-18
 INSTRUMENT LOWER PANEL RH AND GLOVE BOX IP-24
 INSTRUMENT PANEL ASSEMBLY IP-14
 INSUFFICIENT COOLING HAC-103, HAC-207
 INSUFFICIENT HEATING..... HAC-105, HAC-209
 INTAKE MANIFOLD EM-28, EM-166
 INTAKE MANIFOLD COLLECTOR..... EM-25
 INTAKE SENSOR HAC-112, HAC-214
 INTAKE VALVE TIMING CONTROLEM-51, EM-185
 INTERIOR LIGHTING SYSTEM SYMPTOMSINL-61
 INTERIOR ROOM LAMP CONTROL CIRCUIT INL-56
 INTERIOR ROOM LAMP CONTROL SYSTEM..... INL-15
 INTERMITTENT INCIDENT SRC-42
 INVERTER UNIT PWO-17, PWO-20, PWO-49
 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) .. PCS-12, PCS-19, PCS-25, PG-85

IPDM-E BRANCH LINE CIRCUIT LAN-55, LAN-71, LAN-88, LAN-104, LAN-121

K

KEY CYLINDER SWITCH DLK-56, SEC-58
 KEY INTERLOCK CABLE TM-167
 KEY SWITCH (BCM INPUT) DLK-72
 KEY SWITCH SIGNAL CIRCUIT WCS-28
 KEYFOB BATTERY AND FUNCTION DLK-67
 KNUCKLE FSU-11

L

L TERMINAL CIRCUIT (OPEN) CHG-18
 L TERMINAL CIRCUIT (SHORT)..... CHG-20
 LEAF SPRING..... RSU-10
 LICENSE LAMP FINISHER EXT-39
 LICENSE PLATE LAMP EXL-129
 LIFTING POINT..... GI-35
 LIGHTING SWITCH EXL-125
 LINE PRESSURE TEST TM-76
 LIQUID TANK..... HA-69
 LOCATION OF PLASTIC PARTS..... BRM-99, BRM-196, BRM-301
 LOW TIRE PRESSURE WARNING CONTROL UNIT WT-12, WT-64
 LOW TIRE PRESSURE WARNING LAMP BLINKS WT-57
 LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN OFF WT-56
 LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON WT-55
 LOW-PRESSURE SIDE BECOMES NEGATIVE HA-34
 LOW-PRESSURE SIDE SOMETIMES BECOMES NEGATIVE HA-33
 LOWER LINK FSU-14
 LUBRICATION SYSTEM..... LU-7, LU-23

M

M&A BRANCH LINE CIRCUIT LAN-50, LAN-66, LAN-83, LAN-99, LAN-116
 MAGNET CLUTCH HAC-97, HAC-202
 MAIN LINE BETWEEN ABS AND TCM CIRCUIT .. LAN-43, LAN-60, LAN-76, LAN-93, LAN-109
 MAIN LINE BETWEEN DLC AND ABS CIRCUIT ... LAN-42, LAN-59, LAN-75, LAN-92, LAN-108
 MAIN LINE BETWEEN HVAC AND DLC CIRCUIT LAN-41, LAN-58, LAN-74, LAN-91, LAN-107
 MAIN POWER SUPPLY AND GROUND CIRCUIT. TM-130
 MAIN POWER WINDOW AND DOOR LOCK/ UNLOCK SWITCH PWC-11, PWC-42
 MALFUNCTION AREA CHART LAN-40
 MALFUNCTION INDICATOR LAMPEC-438, EC-887

METER BUZZER CIRCUIT WCS-25
 METER SYSTEM MWI-24
 MICROPHONE AV-84, AV-151
 MICROPHONE SIGNAL CIRCUIT .. AV-71, AV-132
 MID AUDIO SYSTEM AV-48
 MID SUN GEAR, REAR SUN GEAR, HIGH AND
 LOW REVERSE CLUTCH HUB TM-249
 MIXTURE RATIO SELF-LEARNING VALUE CLEAR
 EC-141, EC-594
 MUDGUARD EXT-35
 MULTI AV SYSTEM AV-138

N

NATS ANTENNA AMP SEC-65
 NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS
 SYMPTOMS SEC-64
 NO OUTPUT FROM AC 120 V OUTLET .. PWO-46
 NOISE HA-35
 NOISE VIBRATION AND HARSHNESS (NVH)
 TROUBLESHOOTING RSU-4
 NOISE, VIBRATION AND HARSHNESS (NVH)
 TROUBLESHOOTING ... BR-7, DLN-34, EM-11
 NONE OF THE POWER WINDOWS CAN BE
 OPERATED USING ANY SWITCH PWC-36
 NORMAL OPERATING CONDITION AV-26, AV-76,
 AV-141, BCS-61, BRC-139, EC-456, EC-898,
 MWI-67, PWO-48, WW-36
 NVIS SEC-29

O

OIL HA-23, HA-39
 OIL COOLER LU-12, LU-29
 OIL FILTER LU-11, LU-28
 OIL PAN TM-168
 OIL PAN AND OIL STRAINER EM-34, EM-173
 OIL PRESSURE SWITCH SIGNAL CIRCUIT
 MWI-56
 OIL PUMP ... LU-14, LU-16, LU-31, LU-33, TM-239
 OIL SEAL EM-87, EM-212
 ON BOARD DIAGNOSTIC (OBD) SYSTEM EC-56,
 EC-507, TM-37
 ON BOARD REFUELING VAPOR RECOVERY
 (ORVR) EC-439, EC-888
 OPERATION EC-54, EC-505, HAC-23, HAC-134
 OPERATION INSPECTION HAC-51, HAC-162
 OVERHEATING CAUSE ANALYSIS .. CO-9, CO-41

P

P0011, P0021 IVT CONTROL EC-174, EC-624
 P0030, P0031, P0032, P0036, P0051, P0052 A/F
 SENSOR 1 HEATER EC-178, EC-630
 P0037, P0038, P0057, P0058 HO2S2 HEATER
 EC-181, EC-633

P0075, P0081 IVT CONTROL SOLENOID VALVE .
 EC-184, EC-636
 P0101 MAF SENSOR EC-186, EC-639
 P0102, P0103 MAF SENSOR EC-192, EC-645
 P0111 IAT SENSOR EC-197, EC-650
 P0112, P0113 IAT SENSOR EC-199, EC-652
 P0116 ECT SENSOR EC-201, EC-654
 P0117, P0118 ECT SENSOR EC-203, EC-656
 P0122, P0123 TP SENSOR EC-205, EC-658
 P0125 ECT SENSOR EC-209, EC-662
 P0127 IAT SENSOR EC-211, EC-664
 P0128 THERMOSTAT FUNCTION EC-213, EC-666
 P0130, P0150 A/F SENSOR 1 EC-216, EC-669
 P0131, P0151 A/F SENSOR 1 EC-220, EC-673
 P0132, P0152 A/F SENSOR 1 EC-223, EC-676
 P0137, P0157 HO2S2 EC-226, EC-679
 P0138, P0158 HO2S2 EC-232, EC-685
 P0139, P0159 HO2S2 EC-240, EC-693
 P014C, P014D, P014E, P014F, P015A, P015B,
 P015C, P015D, A/F SENSOR 1 EC-247, EC-699
 P0171, P0174 FUEL INJECTION SYSTEM
 FUNCTION EC-253, EC-705
 P0172, P0175 FUEL INJECTION SYSTEM
 FUNCTION EC-257, EC-709
 P0181 FTT SENSOR EC-261, EC-713
 P0182, P0183 FTT SENSOR EC-265, EC-717
 P0222, P0223 TP SENSOR EC-268, EC-720
 P0300, P0301, P0302, P0303, P0304, P0305,
 P0306 MISFIRE EC-272
 P0300, P0301, P0302, P0303, P0304, P0305,
 P0306, P0307, P0308 MISFIRE EC-723
 P0327, P0328, P0332, P0333 KS EC-278, EC-729
 P0335 CKP SENSOR (POS) EC-280, EC-731
 P0340 CMP SENSOR (PHASE) EC-734
 P0340, P0345 CMP SENSOR (PHASE) EC-283
 P0420, P0430 THREE WAY CATALYST FUNCTION
 EC-286, EC-737
 P0441 EVAP CONTROL SYSTEM EC-291, EC-742
 P0443 EVAP CANISTER PURGE VOLUME
 CONTROL SOLENOID VALVE EC-296, EC-748
 P0444, P0445 EVAP CANISTER PURGE VOLUME
 CONTROL SOLENOID VALVE EC-301, EC-753
 P0447 EVAP CANISTER VENT CONTROL VALVE
 EC-304, EC-756
 P0448 EVAP CANISTER VENT CONTROL VALVE
 EC-308, EC-760
 P0451 EVAP CONTROL SYSTEM PRESSURE
 SENSOR EC-312, EC-764
 P0452 EVAP CONTROL SYSTEM PRESSURE
 SENSOR EC-315, EC-768
 P0453 EVAP CONTROL SYSTEM PRESSURE
 SENSOR EC-318, EC-771
 P0455 EVAP CONTROL SYSTEM EC-322
 P0456 EVAP CONTROL SYSTEM EC-328, EC-775
 P0460 FUEL LEVEL SENSOR EC-334, EC-781
 P0461 FUEL LEVEL SENSOR EC-335, EC-782

P0462, P0463 FUEL LEVEL SENSOR.....	EC-337, EC-784
P0500 VSS.....	EC-338, EC-785
P0506 ISC SYSTEM.....	EC-340, EC-787
P0507 ISC SYSTEM.....	EC-342, EC-789
P050A, P050E COLD START CONTROL..	EC-344, EC-791
P0550 PSP SENSOR.....	EC-346, EC-793
P0603 ECM.....	EC-349, EC-796
P0604 ECM.....	EC-351, EC-797
P0605 ECM.....	EC-352, EC-798
P0606 ECM.....	EC-353, EC-799
P0607 ECM.....	EC-354, EC-800
P060A ECM.....	EC-355, EC-801
P060B ECM.....	EC-356, EC-802
P0615 STARTER RELAY.....	TM-85
P0643 SENSOR POWER SUPPLY.....	EC-357, EC-803
P0700 TRANSMISSION CONTROL.....	TM-87
P0705 TRANSMISSION RANGE SWITCH.....	ATM-88
P0717 INPUT SPEED SENSOR A.....	TM-90
P0720 OUTPUT SPEED SENSOR.....	TM-92
P0725 ENGINE SPEED.....	TM-95
P0731 1GR INCORRECT RATIO.....	TM-97
P0732 2GR INCORRECT RATIO.....	TM-99
P0733 3GR INCORRECT RATIO.....	TM-101
P0734 4GR INCORRECT RATIO.....	TM-103
P0735 5GR INCORRECT RATIO.....	TM-105
P0740 TORQUE CONVERTER.....	TM-107
P0744 TORQUE CONVERTER.....	TM-108
P0745 PRESSURE CONTROL SOLENOID A.....	TM-109
P0850 PNP SWITCH.....	EC-359, EC-805
P1140, P1145 IVT CONTROL POSITION SENSOR	EC-808
P1148, P1168 CLOSED LOOP CONTROL.....	EC-362, EC-812
P1211 TCS CONTROL UNIT.....	EC-363, EC-813
P1212 TCS COMMUNICATION LINE.....	EC-364, EC-814
P1217 ENGINE OVER TEMPERATURE... ..	EC-365, EC-815
P1225 TP SENSOR.....	EC-369, EC-819
P1226 TP SENSOR.....	EC-370, EC-820
P1564 ASCD STEERING SWITCH.....	EC-371, EC-821
P1572 ASCD BRAKE SWITCH.....	EC-374, EC-824
P1574 ASCD VEHICLE SPEED SENSOR.....	EC-379, EC-829
P1610 LOCK MODE.....	SEC-50
P1611 ID DISCORD, IMMU-ECM.....	SEC-51
P1612 CHAIN OF ECM-IMMU.....	SEC-53
P1614 CHAIN OF IMMU-KEY.....	SEC-54
P1615 DIFFERENCE OF KEY.....	SEC-56
P1705 TP SENSOR.....	TM-110
P1710 TRANSMISSION FLUID TEMPERATURE	SENSOR..... TM-111
P1715 INPUT SPEED SENSOR (PRIMARY SPEED	SENSOR)..... EC-381, EC-831
P1721 VEHICLE SPEED SIGNAL.....	TM-114
P1730 INTERLOCK.....	TM-116
P1731 1ST ENGINE BRAKING.....	TM-118
P1752 INPUT CLUTCH SOLENOID.....	TM-119
P1757 FRONT BRAKE SOLENOID.....	TM-120
P1762 DIRECT CLUTCH SOLENOID.....	TM-121
P1767 HIGH AND LOW REVERSE CLUTCH	SOLENOID..... TM-123
P1772 LOW COAST BRAKE SOLENOID.....	TM-124
P1774 LOW COAST BRAKE SOLENOID.....	TM-125
P1800 VIAS CONTROL SOLENOID VALVE 1.....	EC-382
P1805 BRAKE SWITCH.....	EC-385, EC-832
P1815 M-MODE SWITCH.....	TM-127
P2096, P2097, P2098, P2099 A/F SENSOR 1.....	EC-387, EC-834
P2100, P2103 THROTTLE CONTROL MOTOR	RELAY..... EC-391, EC-838
P2101 ELECTRIC THROTTLE CONTROL	FUNCTION..... EC-393, EC-841
P2118 THROTTLE CONTROL MOTOR.....	EC-396, EC-844
P2119 ELECTRIC THROTTLE CONTROL	ACTUATOR..... EC-398, EC-846
P2122, P2123 APP SENSOR.....	EC-400, EC-848
P2127, P2128 APP SENSOR.....	EC-403, EC-851
P2135 TP SENSOR.....	EC-407, EC-855
P2138 APP SENSOR.....	EC-411, EC-858
P219A, P219B AIR FUEL RATIO.....	EC-416, EC-863
PARKING BRAKE CONTROL.....	PB-6
PARKING BRAKE SHOE.....	PB-8
PARKING BRAKE SWITCH.....	BRC-124
PARKING BRAKE SWITCH SIGNAL CIRCUIT.....	MWI-58
PARKING BRAKE SYSTEM.....	PB-4
PARKING LAMP CIRCUIT.....	EXL-105
PARKING, LICENSE PLATE AND TAIL LAMPS ARE	NOT TURNED ON..... EXL-115
PARKING, LICENSE PLATE AND TAIL LAMPS	SYSTEM..... EXL-63
PASSENGER SIDE DOOR MIRROR DEFOGGER	DOES NOT OPERATE..... DEF-42
PEDAL VIBRATION OR ABS OPERATION SOUND	OCCURS..... BRC-137
PERFORMANCE TEST.....	HA-25
PERIODIC MAINTENANCE.....	MA-9
PERSONAL LAMP.....	INL-64
POSITIVE CRANKCASE VENTILATION... ..	EC-461, EC-903
POWER DOOR LOCK SYSTEM.....	DLK-20
POWER DOOR LOCK SYSTEM SYMPTOMS.....	DLK-74
POWER SEAT FOR DRIVER SIDE.....	SE-8
POWER SOCKET.....	PWO-6, PWO-10

POWER STEERING FLUID ST-6
 POWER STEERING OIL PUMP ST-9, ST-25, ST-36
 POWER SUPPLY ROUTING CIRCUIT PG-13
 POWER WINDOW AND DOOR LOCK/UNLOCK
 SWITCH RH PWC-12, PWC-43
 POWER WINDOW CONTROL SYSTEM
 SYMPTOMS PWC-35
 POWER WINDOW LOCK SWITCH PWC-34
 POWER WINDOW LOCK SWITCH DOES NOT
 FUNCTION PWC-41
 POWER WINDOW MOTOR PWC-26
 POWER WINDOW RETAINED POWER
 OPERATION DOES NOT OPERATE
 PROPERLY PWC-40
 POWER WINDOW SYSTEM PWC-14
 PRE-INSPECTION FOR DIAGNOSTIC SEC-39
 PRECAUTION SN-2, WW-3
 PRECAUTIONS ACC-2, AV-5, AV-32, AV-87, BCS-3,
 BR-3, BRC-4, BRM-4, BRM-103, BRM-200,
 CCS-2, CHG-2, CO-3, CO-35, DEF-3, DLK-4,
 DLN-3, DLN-16, DLN-29, EC-14, EC-464, EM-4,
 EM-143, EX-2, EXL-4, EXT-2, FAX-2, FL-2,
 FSU-2, GI-30, GW-2, HA-3, HAC-6, HAC-117,
 HRN-2, INL-3, INT-3, IP-2, LAN-6, LAN-22,
 LU-3, LU-19, MA-3, MIR-2, MWI-4, PB-2,
 PCS-2, PG-2, PWC-3, PWO-3, PWO-11, RAX-2,
 RSU-2, SB-2, SE-2, SEC-3, SR-2, SRC-4, ST-2,
 STR-2, TM-5, VTL-2, WCS-3, WT-3
 PREMIUM AUDIO SYSTEM AV-103
 PROPELLER SHAFT ASSEMBLY .. DLN-6, DLN-7,
 DLN-9, DLN-19, DLN-20, DLN-22

R

RADIATOR CO-17, CO-18, CO-48, CO-49
 RADIATOR CORE SUPPORT DLK-92
 REAR AIR MIX DOOR MOTOR HAC-83, HAC-185
 REAR BLOWER MOTOR HAC-92, HAC-194
 REAR BRAKE CALIPER BR-46
 REAR BUMPER EXT-23
 REAR COMBINATION LAMP EXL-132
 REAR DISC BRAKE BR-9, BR-20, BR-37
 REAR FINAL DRIVE DLN-35, DLN-43, DLN-45
 REAR MODE DOOR MOTOR... HAC-85, HAC-187
 REAR OIL SEAL TM-179
 REAR SEAT RAILS SE-41
 REAR SPEAKER AV-22, AV-66, AV-128
 REAR SPEAKERS AV-29, AV-81, AV-149
 REAR SUSPENSION ASSEMBLY .. RSU-5, RSU-6
 REAR TIMING CHAIN CASE EM-72
 REAR VIEW CAMERA AV-157
 REAR VIEW CAMERA IMAGE SIGNAL CIRCUIT..
 AV-134
 REAR WINDOW DEFOGGER AND DOOR
 MIRROR DEFOGGER DO NOT OPERATE.
 DEF-38

REAR WINDOW DEFOGGER DOES NOT
 OPERATE BUT BOTH OF DOOR MIRROR
 DEFOGGER OPERATE. DEF-39
 REAR WINDOW DEFOGGER POWER SUPPLY
 AND GROUND CIRCUIT DEF-31
 REAR WINDOW DEFOGGER RELAY DEF-30
 REAR WINDOW DEFOGGER SWITCH DEF-28
 REAR WINDOW DEFOGGER SWITCH DOES NOT
 LIGHT, BUT REAR WINDOW DEFOGGER
 OPERATES DEF-43
 RECOMMENDED CHEMICAL PRODUCTS AND
 SEALANTS GI-21
 RECOMMENDED FLUIDS AND LUBRICANTS
 MA-15
 REFRIGERANT HA-19
 REFRIGERANT PRESSURE SENSOR EC-444,
 EC-892, HAC-113, HAC-215
 REFRIGERATION SYSTEM HA-37
 REMOTE KEYLESS ENTRY RECEIVER . DLK-64,
 SEC-66
 REMOTE KEYLESS ENTRY SYSTEM DLK-33
 REMOTE KEYLESS ENTRY SYSTEM SYMPTOMS
 DLK-76
 REPAIRING MATERIAL BRM-7, BRM-106, BRM-203
 REPLACEMENT OPERATIONS BRM-24, BRM-123,
 BRM-220
 ROAD TEST TM-78
 ROCKER COVER EM-41, EM-179

S

S CONNECTOR CIRCUIT STR-24
 S TERMINAL CIRCUIT CHG-21
 SATELLITE RADIO ANTENNA AV-155
 SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT..
 WCS-26
 SEAT BELT WARNING SYSTEM SRC-106
 SECOND ROW SEAT BELT SB-12
 SECOND ROW SEATS SE-31, SE-56
 SENSOR POWER SUPPLY2 CIRCUIT EC-446
 SENSOR ROTOR BRC-142
 SERVICE DATA AND SPECIFICATIONS (SDS)
 ACC-5, BR-47, CO-34, CO-60, DLN-15, DLN-28,
 DLN-58, EC-463, EC-905, EM-132, EM-257,
 EXL-135, FAX-8, FL-19, FSU-24, HA-79, LU-18,
 LU-35, PB-12, PG-98, PWO-52, RSU-12, ST-38,
 TM-258, WT-69, WW-49
 SERVICE INFORMATION FOR ELECTRICAL
 INCIDENT GI-39
 SHIFT POSITION INDICATOR CIRCUIT ... TM-137
 SHIPPING MODE CANCEL OPERATION . BCS-50
 SHOCK ABSORBER RSU-7
 SIDE AIR BAG (SATELLITE) SENSOR SR-29
 SIDE CURTAIN AIR BAG MODULE SR-18
 SIDE WINDOW GLASS GW-21
 SLIDE DOOR FINISHER INT-19
 SLIDE DOOR GLASS GW-19

SLIDE DOOR GUIDE RAIL..... DLK-118
 SLIDE DOOR LOCK DLK-112
 SLIP INDICATOR LAMP BRC-131
 SONAR CONTROL UNIT SN-11, SN-38
 SONAR SENSOR SN-35
 SONAR SENSOR CIRCUIT INSPECTION... SN-29
 SONAR SYSTEM..... SN-15
 SONAR SYSTEM OFF SWITCH SN-39
 SONAR SYSTEM OFF SWITCH CIRCUIT
 INSPECTION SN-32
 SONAR SYSTEM SYMPTOMS SN-34
 SPARK PLUG EM-16, EM-156
 SPIRAL CABLE..... SR-14
 SQUEAK AND RATTLE TROUBLE DIAGNOSES..
 DLK-78, EXT-9, GW-5, INT-9, IP-8, MIR-14,
 SE-16
 SRS AIR BAG CONTROL SYSTEM..... SRC-22
 SRS AIR BAG WARNING LAMP DOES NOT TURN
 OFF SRC-105
 SRS AIR BAG WARNING LAMP DOES NOT TURN
 ON..... SRC-104
 STABILIZER BAR FSU-18, RSU-8
 STALL TEST TM-74
 STARTER MOTOR STR-27, STR-30
 STARTING SYSTEM..... STR-9, STR-26
 STEERING ANGLE SENSOR BRC-145
 STEERING COLUMN ST-12, ST-33
 STEERING COLUMN COVERS IP-20
 STEERING GEAR AND LINKAGE ST-16
 STEERING LOCK UNIT..... DLK-125
 STEERING SWITCH..... AV-68, AV-130
 STEERING WHEEL ST-8, ST-10
 STEERING WHEEL AUDIO CONTROL SWITCH..
 AV-82, AV-150
 STEP LAMP INL-66
 STEP LAMP CIRCUIT INL-60
 STOP LAMP EXL-71
 STRG BRANCH LINE CIRCUIT .. LAN-51, LAN-67,
 LAN-84, LAN-100, LAN-117
 STRUCTURE AND OPERATION .. EC-35, EC-486,
 TM-16
 SUNLOAD SENSOR..... HAC-109
 SYSTEM SETTING..... HAC-54, HAC-165
 SYSTEM SYMPTOM TM-139

T

TCM TM-45
 TCM BRANCH LINE CIRCUIT..... LAN-54, LAN-70,
 LAN-87, LAN-103, LAN-120
 THE AMBIENT TEMPERATURE DISPLAY IS
 INCORRECT..... MWI-66
 THE BRAKING DISTANCE IS LONG BRC-135
 THE DOOR OPEN WARNING CONTINUES
 DISPLAYING, OR DOES NOT DISPLAY MWI-65
 THE FUEL GAUGE POINTER DOES NOT MOVE
 MWI-59

THE FUEL GAUGE POINTER DOES NOT MOVE
 TO
 THE KEY WARNING DOES NOT SOUND WCS-32
 THE LIGHT REMINDER WARNING DOES NOT
 SOUND WCS-30
 THE LOW WASHER FLUID WARNING
 CONTINUES DISPLAYING, or DOES NOT
 DISPLAY MWI-64
 THE OIL PRESSURE WARNING LAMP DOES NOT
 TURN OFF MWI-62
 THE OIL PRESSURE WARNING LAMP DOES NOT
 TURN ON..... MWI-61
 THE PARKING BRAKE RELEASE WARNING
 CONTINUES DISPLAYING, OR DOES NOT
 DISPLAY MWI-63
 THE PARKING BRAKE RELEASE WARNING
 CONTINUES SOUNDING, OR DOES NOT
 SOUND WCS-33
 THE SEAT BELT WARNING CONTINUES
 SOUNDING, OR DOES NOT SOUND WCS-31
 THERMOSTAT AND WATER PIPING..... CO-56
 THIRD ROW SEAT BELT SB-16
 THIRD ROW SEATS SE-34, SE-64
 THROTTLE VALVE CLOSED POSITION
 LEARNING..... EC-138, EC-591
 TIGHTENING TORQUE OF STANDARD BOLTS...
 GI-18
 TIMING CHAIN..... EM-61, EM-193
 TIMING CHAIN COVER..... EM-188
 TIMING CHAIN TENSIONER..... EM-69
 TIRE PRESSURE MONITORING SYSTEM WT-17
 TIRE PRESSURE RECEIVER..... WT-67
 TOW MODE SWITCH TM-135
 TOW TRUCK TOWING GI-36
 TPMS BRANCH LINE CIRCUIT... LAN-52, LAN-68,
 LAN-85, LAN-101, LAN-118
 TPMS SYMPTOMS WT-54
 TRAILER TOW EXL-81
 TRANSIT MODE CANCEL OPERATION... BCS-51
 TRANSMISSION ASSEMBLY..... TM-190, TM-195
 TRANSMITTER..... WT-65
 TROUBLE DIAGNOSIS LAN-9
 TROUBLE DIAGNOSIS - SPECIFICATION VALUE
 EC-160, EC-610
 TURN SIGNAL AND HAZARD WARNING LAMP
 SYSTEM EXL-57
 TURN SIGNAL LAMP CIRCUIT EXL-108
 TWEETER..... AV-64, AV-80, AV-126, AV-148

U

U0100 LOST COMMUNICATION (ECM A)... TM-83
 U0101 CAN COMM CIRCUIT EC-172, EC-622
 U1000 CAN COMM..... BCS-52, DLK-47, SEC-41
 U1000 CAN COMM CIRCUIT .. BRC-120, HAC-56,
 HAC-166, MWI-48, PCS-23, SRC-43, TM-84,
 WT-51

U1001 CAN COMM CIRCUIT [EC-173](#), [EC-623](#)
U1010 CONTROL UNIT (CAN) ... [BCS-53](#), [DLK-48](#),
[HAC-57](#), [HAC-167](#), [MWI-49](#), [SEC-42](#), [SRC-44](#),
[WT-52](#)
UNEXPECTED PEDAL REACTION..... [BRC-134](#)
UPPER BALL JOINT AND LOWER BALL JOINT ...
[FSU-13](#)
UPPER LINK [FSU-16](#)
USB CONNECTOR [AV-136](#)
USB CONNECTOR AND AUX JACK [AV-154](#)

V

VARIABLE INDUCTION AIR CONTROL SYSTEM
(VIAS).....[EC-448](#)
VDC OFF INDICATOR LAMP..... [BRC-130](#)
VDC OFF SWITCH..... [BRC-126](#), [BRC-146](#)
VDC/TCS/ABS..... [BRC-132](#)
VEHICLE JERKS DURING VDC/TCS/ABS
CONTROL [BRC-138](#)
VEHICLE SECURITY INDICATOR..... [SEC-61](#)
VEHICLE SECURITY SYSTEM [SEC-16](#)
VEHICLE SECURITY SYSTEM SYMPTOMS.....
[SEC-63](#)
VIN REGISTRATION..... [EC-136](#), [EC-595](#)

W

WARNING CHIME SYSTEM [WCS-16](#)
WASHER LEVEL SWITCH SIGNAL CIRCUIT
[MWI-57](#)
WASHER MOTOR CIRCUIT [WW-30](#)
WASHER SWITCH..... [WW-31](#)
WASHER TANK..... [WW-47](#)
WATER CONTROL VALVE [HA-66](#)
WATER INLET AND THERMOSTAT ASSEMBLY ...
[CO-30](#)
WATER OUTLET AND WATER PIPING [CO-32](#)
WATER PUMP [CO-24](#), [CO-54](#)
WATER VALVE CIRCUIT [HAC-95](#), [HAC-197](#)
WHEEL [WT-61](#)
WHEEL AND TIRE ASSEMBLY [WT-62](#)
WHEEL HUB [FAX-5](#), [FAX-6](#)
WHEEL SENSOR..... [BRC-140](#)
WINDSHIELD GLASS [GW-11](#)
WIPER AND WASHER FUSE [WW-22](#)
WIPER AND WASHER SYSTEM SYMPTOMS
[WW-32](#)

Y

YAW RATE/SIDE/DECEL G SENSOR [BRC-144](#)

