

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram..... EC-222
 ABS (anti-lock brake system) BR-30
 ABS - Wiring diagram BR-50
 ABS input/output signal inspection BR-127
 ABS sensor rotor FA-13
 ABS/TCS C/U signal..... EC-306
 A/C - Wiring diagram HA-50
 A/C air flow..... HA-19
 A/C component layout..... HA-15
 A/C compressor clutch removal and
 installation HA-113
 A/C compressor description HA-12
 A/C compressor mounting HA-111
 A/C compressor precaution HA-6
 A/C compressor special service tool HA-6
 A/C control linkage adjustment HA-102
 A/C control operation HA-17
 A/C diagnostic work flow..... HA-21
 A/C harness layout..... HA-47
 A/C HFC134a (R134a) system
 precaution HA-2
 A/C HFC134a (R134a) system service
 procedure..... HA-104
 A/C HFC134a (R134a) system service
 tools HA-7
 A/C HFC134a system service
 equipment precaution..... HA-9
 A/C lubricant (R134a) HA-106
 A/C operational check HA-22
 A/C performance test diagnoses HA-41
 A/C relay HA-98
 A/C self-diagnoses HA-26
 A/C service data specification HA-117
 A/C symptom chart HA-25, 43
 A/C system description HA-16
 A/C trouble diagnoses..... HA-21
 Accelerator control system FE-2
 Accelerator wire adjustment FE-3
 Air bag RS-6
 Air bag disposal RS-13
 Air bag precautions GI-2
 Air bleeding for brake system BR-5
 Air cleaner filter replacement..... MA-13
 Air conditioner - Wiring diagram HA-50
 Air conditioner cut control EC-19
 Air flow meter - See Mass air flow
 sensor EC-99
 Air mix door control linkage adjustment..... HA-102
 Air mix. door motor HA-90
 Air spoiler, rear BT-24
 Alternator EL-36
 Ambient sensor HA-67
 Angular tightening application EM-2
 Antenna - See Power antenna EL-169
 Anti-lock brake system - See ABS BR-30
 Anti-lock brake system - Wiring
 diagram..... BR-50

ASCD (automatic speed control device) EL-193
 ASCD - Wiring diagram EL-197
 AT control unit AT-51
 AT fluid temperature sensor AT-65
 A/T IND - Wiring diagram EL-119
 AT indicator lamp EL-118
 AT removal and installation AT-146
 AT self-diagnoses AT-22
 AT shift lock system AT-129
 A/T shift lock system - Wiring diagram AT-130
 A/T - Wiring diagram AT-8
 AT/C - Wiring diagram..... EC-228
 AUDIO - Wiring diagram..... EL-162
 Audio EL-160
 Audio and A/C control removal and
 installation - See Instrument panel BT-13
 AUT/DP - Wiring diagram EL-379
 Auto air conditioner - Wiring diagram HA-50
 Auto anti-dazzling inside mirror EL-185
 Autolamp EL-41
 Automatic drive positioner EL-373
 Automatic speed control system - See
 ASCD EL-193
 Automatic transmission fluid
 replacement..... MA-18
 Automatic transmission number GI-38

B

Back-up lamp EL-77
 BACK/L - Wiring diagram EL-77
 Battery EL-25
 Bi-level door control linkage adjustment..... HA-103
 Blower motor HA-95
 Board-on lift GI-39
 Body alignment BT-45
 BPT valve EC-214
 Brake booster BR-13
 Brake control valve (Proportioning
 valve) BR-7
 Brake fluid change BR-4
 Brake fluid level MA-19
 Brake fluid level and line check BR-4
 Brake hydraulic line BR-6
 Brake inspection MA-19
 Brake lines and cables inspection MA-19
 Brake master cylinder BR-10
 Brake pedal BR-8
 Bumper, front BT-5
 Bumper, rear BT-8

C

Camshaft inspection EM-34
 Camshaft position sensor (CMPS) EC-197
 Center bearing assembly (propeller
 shaft)..... PD-8

ALPHABETICAL INDEX

Center bearing disassembly (propeller shaft).....	PD-7
CHARGE - Wiring diagram.....	EL-34
Charging system.....	EL-33
Chassis and body maintenance.....	MA-17
CHIME - Wiring diagram.....	EL-124
Cigarette lighter.....	EL-147
Circuit breaker.....	EL-16
CKPS - Wiring diagram.....	EC-278
Clock.....	EL-147
Closed loop control.....	EC-131
CMPS - Wiring diagram.....	EC-197
Coil spring (front).....	FA-15
Coil spring (rear).....	RA-20
Collision diagnosis.....	RS-42
Combination lamp, rear, removal and installation.....	BT-24
Combination meter.....	EL-100
Combination meter removal and installation - See Instrument panel.....	BT-13
Combination switch.....	EL-38
COMM - Wiring diagram.....	EL-239
Compression pressure.....	EM-8
Compressor clutch removal and installation.....	HA-113
Compressor description.....	HA-12
Compressor mounting.....	HA-111
Compressor precaution.....	HA-6
Compressor special service tool.....	HA-6
Connecting rod.....	EM-46
Connecting rod bearing clearance.....	EM-50
Connecting rod bushing clearance.....	EM-51
Console box - See Instrument panel.....	BT-13
CONSULT for ECCS.....	EC-56
CONSULT for TCS.....	BR-63
CONSULT general information.....	GI-35
Control valve (AT).....	AT-169
Converter housing installation.....	AT-147
COOL/F - Wiring diagram.....	EC-293
Coolant mixture ratio.....	MA-9
Coolant replacement.....	MA-11
Cooling circuit (engine).....	LC-8
Cooling fan.....	LC-17
Cooling fan control.....	EC-293
Cooling fan motor.....	EC-305
Crankshaft.....	EM-48
Crankshaft position sensor (OBD).....	EC-192
Crankshaft position sensor (OBD) chipping.....	EC-278
Cruise control - See ASCD.....	EL-193
Cylinder block.....	EM-44
Cylinder head.....	EM-28

D

Daytime light system.....	EL-55
Daytime running light - See Daytime light system.....	EL-55
DEF - Wiring diagram.....	EL-151
Detonation sensor - See Knock sensor.....	EC-189

Diagnosis sensor unit.....	RS-9
Diagnostic trouble code (DTC) chart.....	EC-75
Differential carrier assembly.....	PD-25
Differential carrier disassembly.....	PD-12
Differential gear oil replacement.....	MA-18
Dimensions.....	GI-38
Direct ignition system.....	EC-25
D/LOCK - Wiring diagram.....	EL-265
Door glass.....	BT-11
Door lock.....	BT-11
Door mirror.....	BT-44
Door trim.....	BT-19
Door, front.....	BT-11
Door, rear.....	BT-12
Drive belt inspection.....	MA-10
Drive pinion height.....	PD-19
Drive plate runout.....	EM-51
Drive shaft (rear).....	RA-14
Dropping resistor (AT).....	AT-92
DTRL - Wiring diagram.....	EL-58

E

ECCS basic inspection.....	EC-73
ECCS circuit diagram.....	EC-8
ECCS component parts location.....	EC-11
ECCS on board diagnostic system.....	EC-35
ECCS system diagram and chart.....	EC-10
ECM input/output signal.....	EC-84
ECM-ABS/TCS COMM NG.....	EC-307
ECTS - Wiring diagram.....	EC-110
ECTS - Wiring diagram.....	EC-121
EGR control (EGRC) - BPT valve.....	EC-213
EGR control (EGRC) - solenoid valve.....	EC-283
EGR control valve.....	EC-212
EGR temperature sensor.....	EC-288
EGR valve & EVAP canister purge control solenoid valve.....	EC-287
EGR/TS - Wiring diagram.....	EC-288
EGRC/V - Wiring diagram.....	EC-283
EGRC1 - Wiring diagram.....	EC-203
Electric sun roof.....	EL-182
Electrical diagnoses.....	GI-21
Electrical unit.....	Foldout
Electrical units location.....	EL-442
Electronic controlled power steering system - Wiring diagram.....	ST-30
Electronic ignition system.....	EC-18
Engine compartment.....	BT-45
Engine control module (ECM).....	EC-231
Engine coolant temperature sensor (ECTS).....	EC-110
Engine oil filter replacement.....	MA-14
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-14
Engine outer component parts.....	EM-6
Engine removal.....	EM-42
Engine room - See Engine compartment.....	BT-45
Engine serial number.....	GI-38

ALPHABETICAL INDEX

EPS - Wiring diagram.....	ST-30
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-20
Exhaust system	FE-5
Exhaust system inspection	MA-17
Exterior.....	BT-24
Exterior lamp.....	EL-66

F

Fan control amp.	HA-93
Fast idle cam (FIC) inspection and adjustment	EC-25
F/FOG - Wiring diagram	EL-79
Final drive disassembly.....	PD-12
Final drive pre-inspection.....	PD-12
Final drive removal and installation	PD-10
Finisher, interior - See Trim	BT-17
Finisher, rear panel.....	BT-23
Finisher, trunk lid	BT-23
Floor trim.....	BT-17
Flow charts	GI-32
Fluid temperature sensor (AT)	AT-65
Fluids	MA-8
FO2H-L - Wiring diagram.....	EC-126
FO2H-R - Wiring diagram	EC-145
Fog lamp, front	EL-78
Fog lamp, front, removal and installation	BT-5
Foot lamp.....	EL-306
Forward clutch.....	AT-188
FPCM - Wiring diagram	EC-264
F/PUMP - Wiring diagram	EC-323
Freeze frame data.....	EC-37
FRO2LH - Wiring diagram	EC-132
FRO2RH - Wiring diagram.....	EC-150
Front axle.....	FA-10
Front bumper	BT-5
Front disc brake	BR-16
Front door.....	BT-11
Front fog lamp	EL-78
Front fog lamp removal and installation	BT-5
Front heated oxygen sensor (HO2S) (Left bank)	EC-126
Front heated oxygen sensor (HO2S) (Right bank)	EC-145
Front heated oxygen sensor (HO2S).....	EC-126
Front heated oxygen sensor (HO2S) monitor.....	EC-47
Front heated oxygen sensor heater (Left bank)	EC-132
Front heated oxygen sensor heater (Right bank).....	EC-150
Front passenger air bag.....	RS-11
Front seat.....	BT-32
Front seat belt	RS-4
Front suspension	FA-14
Front tower bar	BT-24
Front washer.....	EL-132
Front wiper	EL-132

Fuel check valve	EC-21
Fuel cut control (at no load & high engine speed).....	EC-19
Fuel filter replacement	MA-13
Fuel gauge.....	EL-101
Fuel injection system (Left bank).....	EC-163, 169
Fuel injection system (Right bank)	EC-174, 180
Fuel lid opener, electric	EL-180
Fuel line inspection	MA-12
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-23
Fuel pressure release	EC-23
Fuel pump control module	EC-264
Fuel system	FE-4
Fuel tank vacuum relief valve	EC-21
FUELLH - Wiring diagram	EC-163, 169
FUELRH - Wiring diagram.....	EC-174, 180
Fuse	EL-16
Fuse block	Foldout
Fusible link.....	EL-16

G

Garage jack and safety stand	GI-40
Gauges	EL-99
Generic scan tool (GST)	EC-67
Glass.....	BT-11
Grease	MA-8
Grille - See Exterior	BT-24
Ground distribution	EL-17

H

Harness connector.....	EL-3
Harness layout.....	EL-446
Hazard warning lamp.....	EL-81
Headlamp.....	EL-41
Headlining - See Roof trim	BT-21
Heated oxygen sensor (HO2S) (Front) (Left bank)	EC-126
Heated oxygen sensor (HO2S) (Front) (Right bank).....	EC-145
Heated oxygen sensor (HO2S) (front).....	EC-126
Heated oxygen sensor (rear).....	EC-136, 154
Heated oxygen sensor heater (Front)(Left bank).....	EC-132
Heated oxygen sensor heater (Front)(Right bank)	EC-150
Heated seat.....	BT-33, EL-191
Height (Dimensions).....	GI-38
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure.....	HA-104
HFC134a (R134a) system service tools	HA-7
HFC134a system service equipment precaution.....	HA-9
High clutch.....	AT-186
H/LAMP - Wiring diagram.....	EL-44

ALPHABETICAL INDEX

Hood BT-5
 HORN - Wiring diagram EL-147
 Horn EL-147
 HSEAT - Wiring diagram EL-191
 Hydraulic lash adjuster inspection EM-38

I

IATS - Wiring diagram EC-105
 Identification plate GI-38
 Idle mixture ratio EC-28
 Idle speed EC-28
 IGN/SG - Wiring diagram EC-270
 Ignition coil EC-277
 Ignition timing EC-28
 ILL - Wiring diagram EL-91
 Illumination EL-89, 339
 I/MIRR - Wiring diagram EL-185
 In vehicle sensor HA-70
 Inhibitor switch AT-61
 INJECT - Wiring diagram EC-310
 Injector EC-315
 Injector removal and installation EC-24
 Instrument panel BT-13
 INT/L - Wiring diagram EL-98
 Intake air temperature sensor EC-105
 Intake door motor HA-87
 Intake sensor HA-72, 103
 Intake valve timing control position
 sensor (left bank) EC-251
 Intake valve timing control position
 sensor (right bank) EC-256
 Integrated homelink transmitter EL-440
 Interior BT-17
 Interior lamp EL-89, 306
 IPPS (Infiniti personal protection
 system) EL-422
 IPPS (Infiniti personal protection
 system) precautions GI-2
 IVC-L - Wiring diagram EC-238
 IVC-R - Wiring diagram EC-245
 IVCS-L - Wiring diagram EC-251
 IVCS-R - Wiring diagram EC-256
 IVMS (In-Vehicle Multiplexing System) EL-216
 IVMS-System description EL-216
 IVMS-Trouble diagnoses system EL-226

J

Jacking points GI-40
 Joint connector (J/C) Foldout
 Junction box (J/B) Foldout

K

Key illumination EL-306

Keyless entry system - See Multi-
 remote control system EL-283
 Knock sensor (KS) EC-189
 KS - Wiring diagram EC-189

L

Length (Dimensions) GI-38
 License lamp EL-66
 Lifting points GI-41
 Line pressure solenoid valve AT-81, 89, 92
 Line pressure test (AT) AT-127
 Liquid gasket application EM-2
 LOAD - Wiring diagram EC-332
 Location of electrical units EL-442
 Lock, door BT-11
 Low and reverse brake AT-192
 Lower ball joint (rear susp.) RA-21
 Lubricant (R134a) A/C HA-106
 Lubricants MA-8
 Lubrication circuit (engine) LC-3
 Lubrication-locks, hinges and hood
 latches MA-21

M

MAFS - Wiring diagram EC-99
 Magnet clutch HA-113
 MAIN - Wiring diagram EC-94
 Maintenance (engine) MA-10
 Maintenance MA-1
 Malfunction indicator lamp (MIL) EC-47
 Map lamp EL-306
 Mass air flow sensor (MAFS) EC-99
 Master cylinder (brake) BR-10
 METER - Wiring diagram EL-101
 Meter EL-99
 Middle throttle drum adjustment FE-3
 MIL & Data link connectors circuit EC-335
 MIL/DL - Wiring diagram EC-335
 MIRROR - Wiring diagram EL-184
 Mirror, door BT-44
 Mirror, out side BT-44
 Misfire EC-185
 Mode door control linkage adjustment HA-102
 Mode door motor HA-83
 Model variation GI-36
 Molding - See Exterior BT-24
 Mud guard - See Exterior BT-24
 MULTI - Wiring diagram EL-287
 Multi link/lower ball joint (rear) RA-21
 Multi-remote control system EL-283
 Multiport fuel injection (MFI) system EC-15
 Multiport fuel injection precautions GI-5

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

N

NATS (Nissan anti-theft system) EL-422
 NATS (Nissan anti-theft system)
 precautions GI-2
 NATS - Wiring diagram..... EL-424

O

Oil change (capacity) MA-8
 Oil change (interval) MA-6, 7
 Oil pan (engine) EM-9
 Oil pressure (engine) LC-4
 Oil pump (AT) AT-165
 Oil pump (engine) LC-5
 Oil pump regulator valve (engine) LC-7
 Oil seal replacement (engine) EM-26
 Oil seal replacement (front of final
 drive) PD-9
 Oil seal replacement (side of final
 drive) PD-9
 Out side mirror BT-44
 Overdrive control switch AT-61
 Overrun clutch AT-188
 Overrun clutch solenoid valve AT-81, 89, 102

P

P/ANT - Wiring diagram..... EL-170
 Park/Neutral position switch..... EC-233
 Parking brake control BR-28
 Parking drum brake BR-24
 Parking lamp EL-66
 PCV (positive crankcase ventilation) EC-22
 Personal lamp EL-306
 PHONE - Wiring diagram EL-177
 Pinion bearing preload diff. PD-19
 Pinion gear height diff. PD-19
 Piston assembly EM-51
 Piston pin inspection EM-46
 Piston ring inspection EM-46
 Piston to bore clearance EM-47
 PNP/SW - Wiring diagram EC-233
 POWER - Wiring diagram EL-7
 Power antenna EL-169
 Power door lock EL-262
 Power door mirror EL-184
 Power seat EL-186, 373
 Power steering (twin orifice) trouble
 diagnoses ST-32
 Power steering fluid level MA-20, ST-6
 Power steering gear ST-14
 Power steering hydraulic pressure ST-8
 Power steering oil pressure switch EC-327
 Power steering oil pump ST-26
 Power steering system (twin orifice) ST-29
 Power steering system bleeding ST-7

Power supply routing EL-6
 Power transistor & ignition coil EC-270
 Power transistor EC-277
 Power window EL-247
 Precautions (General) GI-3
 Pressure test (AT) AT-127
 Propeller shaft PD-5
 Propeller shaft on vehicle service PD-5
 Propeller shaft vibration PD-5
 PST/SW - Wiring diagram EC-327

R

Rack retainer adjustment ST-6
 Radiator LC-13
 Radio - See Audio EL-160
 Rear air spoiler BT-24
 Rear axle RA-8
 Rear bumper BT-8
 Rear combination lamp removal and
 installation BT-24
 Rear disc brake BR-20
 Rear door BT-12
 Rear heated oxygen sensor (HO2S) .. EC-136, 154
 Rear panel finisher BT-23
 Rear seat BT-34
 Rear seat belt RS-5
 Rear suspension RA-18
 Rear tower bar BT-24
 Rear window BT-43
 Rear window defogger EL-149
 Refrigerant connection precaution HA-3
 Refrigerant discharging evacuating
 charging HA-105
 Refrigerant general precaution HA-2
 Refrigerant lines HA-108
 Refrigeration cycle HA-11
 Reverse clutch AT-182
 Revolution sensor (AT) AT-67
 RO2H-L - Wiring diagram EC-136
 Road wheel size GI-38
 Roof trim BT-21
 Room lamp EL-306
 ROOM/L - Wiring diagram EL-311
 RRO2LH - Wiring diagram EC-140
 RRO2RH - Wiring diagram EC-158

S

SAE J1930 terminology list GI-44
 Seal - See Exterior BT-24
 SEAT - Wiring diagram EL-187
 Seat belt inspection MA-21
 Seat belt pre-tensioner RS-6
 Seat belt pre-tensioner disposal RS-13
 Seat belt, front RS-4
 Seat belt, rear RS-5
 Seat, front BT-32

ALPHABETICAL INDEX

Seat, rear	BT-34
Secondary throttle position sensor (TPS) for TCS.....	EC-316
Secondary throttle position sensor	BR-33
Self-diagnostic results	EC-47
SHIFT - Wiring diagram	AT-130
Shift lock system	AT-129
Shift schedule.....	AT-45
Shift solenoid valve (AT)	AT-71, 74, 76, 81, 89, 94, 97
Shock absorber (rear)	RA-20
Side bearing preload diff.	PD-18
Side flange installation diff.	PD-10
Side trim.....	BT-17
SMJ (super multiple junction).....	Foldout
Spark plug replacement.....	MA-15
Speedometer	EL-101
Spiral cable	RS-10
Splice location.....	EL-465
Spot lamp.....	EL-306
Spring (Wheelarch) height.....	FA-5
SROOF - Wiring diagram	EL-182
SRS - See Supplemental Restraint System.....	RS-6
SRS - Wiring diagram	RS-21
SRS Trouble diagnoses	RS-18
S/SIG - Wiring diagram	EC-321
Stabilizer bar (front)	FA-20
Stabilizer bar (rear)	RA-24
Stall test (AT).....	AT-124
Standardized relay.....	EL-4
START - Wiring diagram.....	EL-30
Starter	EL-31
Starting system	EL-29
Steering gear and linkage inspection	MA-20
Steering linkage	ST-14
Steering wheel and column	ST-10
Steering wheel play	ST-5
Steering wheel turning force.....	ST-8
Step lamp.....	EL-328
STEP/L - Wiring diagram.....	EL-331
Stop lamp.....	EL-73
STOP/L - Wiring diagram	EL-74
Strut (front).....	FA-15
Sun roof, electric.....	EL-182
Sunload sensor	HA-74
Sunroof	BT-35
Supplemental restraint system - Wiring diagram.....	RS-21
Supplemental Restraint System.....	RS-6
SW/ILL - Wiring diagram	EL-341
Symbols and abbreviations	GI-8
System readiness test (SRT) code	EC-37

Tachometer	EL-101	
Tail lamp.....	EL-66	
TAIL/L - Wiring diagram	EL-68	
Tandem throttle position sensor	EC-244	
TCS (traction control system)	BR-30	GI
TCS - Wiring diagram	BR-50	
TCS component parts and connector location	BR-48	MA
TCS control unit	BR-127	
TCS front wheel sensor removal and installation.....	BR-36	EM
TCS rear wheel sensor removal and installation.....	BR-36	
TCS self-diagnosis	BR-60	LC
TCS symptom chart	BR-44	
TCS system components.....	BR-31	EC
TCS throttle valve control system.....	BR-33	
TCS trouble diagnoses	BR-39	
TCS wheel sensors.....	BR-35	FE
Telephone	EL-176	
Tension rod (front)	FA-20	
THEFT - Wiring diagram.....	EL-350	
Theft warning system	EL-346	AT
Thermostat	LC-11	
Three way catalyst	EC-215	
Three way catalyst function (Left bank).....	EC-215	PD
Three way catalyst function (Right bank).....	EC-215	
Three way catalyst precautions	GI-5	FA
Throttle actuator control module - See TAC module.....	BR-36	
Throttle drum adjustment	FE-3	RA
Throttle Motor	BR-33	
Throttle position sensor (TPS)	EC-115	BR
Throttle position sensor adjustment.....	EC-73	
Throttle position switch.....	AT-62	
Throttle valve control system for TCS	BR-33	ST
Tie-rod.....	ST-18	
Tie-rod ball joints	ST-18	
Tightening torque of standard bolts	GI-43	RS
Timing chain	EM-11	
Tire rotation.....	MA-19	
Tire size.....	GI-38	BT
Tooth contact diff.....	PD-24	
Torque converter clutch solenoid valve.....	AT-81, 84, 89	HA
Torque converter installation	AT-147	
Tow truck towing.....	GI-41	
Towing point	GI-42	EL
TPS - Wiring diagram.....	EC-115	
Traction control system - See TCS.....	BR-30	
Traction control system - Wiring diagram.....	BR-50	IDX
Traction control system circuit (engine)	EC-261	
Transmission serial number	GI-38	
TRANSMT - Wiring diagram.....	EL-440	
Transverse link (front).....	FA-21	
Tread-FR&RR (Dimensions)	GI-38	
Trim	BT-17	
Triple pressure switch	HA-98	
Trunk lid	BT-8	

T

2-pole lift	GI-41
T&FLID - Wiring diagram	EL-180
TAC (throttle actuator control) module	BR-36
TAC module removal and installation	BR-36

ALPHABETICAL INDEX

Trunk lid finisher BT-23
Trunk lid opener - See Trunk lid BT-8
Trunk lid opener, electric EL-180
Trunk lid trim BT-23
Trunk room lamp EL-97
Trunk room trim BT-23
Turbine revolution sensor AT-107
TURN - Wiring diagram EL-84
Turn signal lamp EL-81
Two trip detection logic EC-35

U

Under body BT-47

V

Vacuum hose (brake system) BR-15
Vacuum hose drawing (ECCS) EC-13
Valve guide EM-35
Valve seat EM-37
Valve spring EM-38
Vehicle identification number GI-37
Vehicle speed sensor (VSS) EC-218
Viscosity number (SAE) MA-8
VSS - Wiring diagram EC-218

W

WARN - Wiring diagram EL-110

Warning chime EL-122
Warning lamps EL-107
Washer, front EL-132
Water pump LC-9
Water temperature gauge EL-101
Weatherstrip - See Exterior BT-24
Wheel alignment (front) FA-7
Wheel alignment (rear) RA-6
Wheel balance MA-18
Wheel bearing (front axle) FA-6
Wheel bearing (rear) RA-6
Wheel sensors (ABS) BR-35
Wheel sensors (TCS) BR-35
Wheel size GI-38
Wheelbase (Dimensions) GI-38
Wide open & closed throttle position
 switch EC-115
Width (Dimensions) GI-38
WINDOW - Wiring diagram EL-249
Window, door BT-11
Window, rear BT-43
Windshield BT-43
WIPER - Wiring diagram EL-135
Wiper, front EL-132
Wiring diagrams GI-9