

ALPHABETICAL INDEX

SECTION

IDX

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

- GI
- MA
- EM
- LC
- EC
- FE
- AT
- PD
- FA
- RA
- BR
- ST
- RS
- BT
- HA
- EL

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-338
ABS (anti-lock brake system).....	BR-32
ABS - Wiring diagram	BR-51
ABS input/output signal inspection	BR-123
ABS sensor rotor	FA-15
ABS/TCS C/U signal	EC-497
Absolute pressure sensor	EC-132
A/C - Wiring diagram.....	HA-53
A/C air flow.....	HA-22
A/C component layout.....	HA-16
A/C compressor clutch removal and installation	HA-109
A/C compressor description	HA-13
A/C compressor mounting.....	HA-108
A/C compressor precaution.....	HA-6
A/C compressor special service tool.....	HA-7
A/C control linkage adjustment (auto A/C).....	HA-97
A/C control operation (auto A/C).....	HA-20
A/C diagnostic work flow (auto A/C)	HA-24
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure.....	HA-99
A/C HFC134a (R134a) system service tools	HA-8
A/C HFC134a system service equip- ment precaution	HA-10
A/C lubricant (R134a).....	HA-102
A/C operational check.....	HA-25
A/C performance test diagnoses.....	HA-44
A/C relay.....	HA-95
A/C self-diagnoses (auto A/C).....	HA-29
A/C service data specification	HA-113
A/C symptom chart (auto A/C)	HA-28
A/C trouble diagnoses (auto A/C)	HA-24
Accelerator control system	FE-3
Accelerator wire adjustment	FE-4
ACTIVE - Wiring diagram	FA-34
Active damper suspension (front) parts location	FA-23
Active damper suspension (front) trouble diagnoses.....	FA-28
Active damper suspension system - Wiring diagram	FA-34
Air bag	RS-11
Air bag disposal.....	RS-24
Air bag precautions	GI-2
Air bleeding for brake system	BR-7
Air cleaner filter replacement.....	MA-13
Air conditioner - Wiring diagram.....	HA-53
Air conditioner cut control	EC-24
Air flow meter - See Mass air flow sensor	EC-124
Air mix door control linkage adjustment.....	HA-97
Alternator.....	EL-41
Ambient sensor	HA-66

Angular tightening application.....	EM-2
Antenna - See Power antenna	EL-203
Anti-lock brake system - See ABS	BR-32
Anti-lock brake system - Wiring diagram	BR-51
AP/SEN - Wiring diagram	EC-132
ASCD (automatic speed control device)	EL-236
ASCD - Wiring diagram	EL-240
A/T - Wiring diagram	AT-12
A/T fluid temperature sensor	AT-88, 150
A/T IND - Wiring diagram	EL-148
AT indicator lamp	EL-147
A/T self-diagnoses.....	AT-42
A/T shift lock system	AT-183
A/T shift lock system - Wiring diagram	AT-184
A/T trouble diagnoses	AT-54
AT/C - Wiring diagram.....	EC-350, 498
Audio	EL-191
AUDIO - Wiring diagram.....	EL-193
Audio and A/C control removal and installation - See Instrument panel	BT-21
AUT/DP - Wiring diagram	EL-421
Auto air conditioner - Wiring diagram	HA-53
Auto anti-dazzling inside mirror	EL-222
Autolamp.....	EL-46, 63
Automatic drive positioner	EL-415
Automatic speed control system - See ASCD	EL-236
Automatic transmission fluid replacement.....	MA-18
Automatic transmission number	GI-40

B

Back-up lamp	EL-100
BACK/L - Wiring diagram.....	EL-100
Ball joint front axle	FA-22
Basic inspection	EC-91
Battery	EL-31
Bi-level door control linkage adjustment.....	HA-98
Blower motor	HA-91
Board-on lift	GI-41
Body alignment	BT-55
BPT valve	EC-292
Brake booster.....	BR-15
Brake control valve (Proportioning valve)	BR-9
Brake fluid change	BR-6
Brake fluid level	MA-19
Brake fluid level and line check	BR-6
Brake hydraulic line	BR-8
Brake inspection	MA-20
Brake lines and cables inspection	MA-20
Brake master cylinder	BR-12
Brake pedal	BR-10
Bulb specifications	EL-549
Bumper, front	BT-13
Bumper, rear	BT-16
BYPS/V - Wiring diagram	EC-468, 473

ALPHABETICAL INDEX

C

Camshaft inspection	EM-35
Camshaft position sensor (CMPS).....	EC-273
CANI/V - Wiring diagram	EC-479, 485
Center bearing assembly (propeller shaft)	PD-9
Center bearing disassembly (propeller shaft)	PD-8
CHARGE - Wiring diagram	EL-39
Charging system	EL-38
Chassis and body maintenance	MA-17
CHIME - Wiring diagram	EL-153
CIGAR - Wiring diagram	EL-180
Cigarette lighter	EL-180
Circuit breaker	EL-20
CKPS - Wiring diagram	EC-268, 405
Clock	EL-181
CLOCK - Wiring diagram	EL-181
Closed loop control	EC-386
CMPS - Wiring diagram	EC-273
Coil spring (front)	FA-17
Coil spring (rear)	RA-22
Collision diagnosis	RS-60
Combination lamp, rear, removal and installation	BT-32
Combination meter	EL-122
Combination meter removal and installation - See Instrument panel	BT-21
Combination switch	EL-42
COMM - Wiring diagram	EL-276
Component Location (auto A/C)	HA-50
Compression pressure	EM-10
Compressor clutch removal and installation	HA-109
Compressor description	HA-13
Compressor mounting	HA-108
Compressor precaution	HA-6
Compressor special service tool	HA-7
Connecting rod	EM-47
Connecting rod bearing clearance	EM-51
Connecting rod bushing clearance	EM-52
Connector inspection	GI-20
Console box - See Instrument panel	BT-21
CONSULT for engine	EC-74
CONSULT for TCS	BR-62
CONSULT-II general information	GI-36
Control valve (A/T)	AT-221
Converter housing installation	AT-199
COOL/F - Wiring diagram	EC-501
Coolant mixture ratio	MA-9
Cooling circuit (engine)	LC-8
Cooling fan	LC-17
Cooling fan control	EC-501
Cooling fan motor	EC-512
Crankshaft	EM-49
Crankshaft position sensor (OBD)	EC-268
Crankshaft position sensor (OBD) cog chipping	EC-405

Cruise control - See ASCD	EL-236
Cylinder block	EM-45
Cylinder head	EM-29

D

Daytime light system	EL-74, 84	MA
Daytime running light - See Daytime light system	EL-74, 84	
DEF - Wiring diagram	EL-183	EM
Detonation sensor - See Knock sensor	EC-265	
Diagnosis sensor unit	RS-16	LC
Diagnostic trouble code (DTC) inspection priority chart	EC-97	
Differential carrier assembly	PD-27	EC
Differential carrier disassembly	PD-14	
Differential gear oil replacement	MA-18	
Dimensions	GI-40	FE
Direct ignition system	EC-40	
D/LOCK - Wiring diagram	EL-310	
Door glass	BT-19	AT
Door lock	BT-19	
Door mirror	BT-54	
Door trim	BT-27	PD
Door, front	BT-19	
Door, rear	BT-20	
Drive belt inspection	MA-10	FA
Drive pinion height	PD-21	
Drive plate runout	EM-52	
Drive shaft (rear)	RA-16	RA
Dropping resistor (A/T)	AT-128	
DTRL - Wiring diagram	EL-78, 88	BR

E

ECM input/output signal	EC-107	
ECM-ABS/TCS COMM NG	EC-498	RS
ECTS - Wiring diagram	EC-145, 161	
EGR control (EGRC) - BPT valve	EC-288	BT
EGR control (EGRC) - solenoid valve	EC-410	
EGR control valve	EC-286, 428	
EGR temperature sensor	EC-415	HA
EGR/TS - Wiring diagram	EC-415	
EGRC1 - Wiring diagram	EC-279, 421	
Electric sun roof	EL-217	EL
Electrical diagnoses	GI-23	
Electrical ignition system	EC-23	
Electrical unit	Foldout	
Electrical units location	EL-514	
Electronic controlled power steering system - Wiring diagram	ST-31	
Engine compartment	BT-55	
Engine control circuit diagram	EC-14	
Engine control component parts location	EC-17	
Engine control module (ECM)	EC-353	
Engine control system diagram and chart	EC-16	

ALPHABETICAL INDEX

Engine coolant temperature sensor (ECTS).....	EC-145
Engine oil filter replacement	MA-14
Engine oil precautions	GI-6
Engine oil replacement	MA-14
Engine outer component parts	EM-8
Engine removal	EM-43
Engine room - See Engine compartment.....	BT-55
Engine serial number	GI-40
EPS - Wiring diagram	ST-31
EVAP canister purge control solenoid valve	EC-479, 485
EVAP canister purge control valve	EC-479, 485
EVAP canister purge volume control valve	EC-307, 442
EVAP canister vent control valve	EC-313, 450, 462
EVAP control system (small leak) diagnosis.....	EC-296, 430
EVAP control system pressure sensor.....	EC-318
EVAP control system purge flow monitoring diagnosis.....	EC-455
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-26
Exhaust system	FE-7
Exhaust system inspection	MA-17
Exterior	BT-32

F

Fan control amp.	HA-89
Fast idle cam (FIC) inspection and adjustment	EC-40
F/FOG - Wiring diagram	EL-102
Final drive disassembly	PD-14
Final drive pre-inspection	PD-14
Final drive removal and installation	PD-12
Finisher, interior - See Trim	BT-25
Floor trim.....	BT-25
Flow charts	GI-33
Fluid temperature sensor (A/T).....	AT-88, 150
Fluids.....	MA-8
FO2H-L - Wiring diagram	EC-166, 174, 180, 186, 195
Fog lamp, front.....	EL-101
Fog lamp, front, removal and installation	BT-13
Foot lamp	EL-351
Forward clutch.....	AT-240
FPCM - Wiring diagram	EC-391
F/PUMP - Wiring diagram	EC-521
FRO2LH - Wiring diagram	EC-202
Front axle	FA-12
Front bumper	BT-13
Front disc brake	BR-18
Front door	BT-19
Front fog lamp.....	EL-101
Front fog lamp removal and installation	BT-13

Front heated oxygen sensor (HO2S)	EC-166, 174, 180, 186, 195
Front heated oxygen sensor (HO2S) (Left bank).....	EC-166, 174, 180, 186, 195
Front heated oxygen sensor (HO2S) (Right bank)	EC-166, 174, 180, 186, 195
Front heated oxygen sensor (HO2S) monitor	EC-65
Front heated oxygen sensor heater (Left bank).....	EC-202
Front heated oxygen sensor heater (Right bank)	EC-202
Front passenger air bag	RS-11
Front seat.....	BT-41
Front seat belt	RS-4
Front suspension	FA-16
Front tower bar	BT-32
Front washer	EL-161
Front wiper	EL-161
Fuel cut control (at no load & high engine speed).....	EC-25
Fuel filter replacement	MA-13
Fuel injection system (Left bank)	EC-243, 249
Fuel injection system (Right bank)	EC-243, 249
Fuel lid opener, electric.....	EL-209
Fuel line inspection	MA-12
Fuel precautions	GI-7
Fuel pressure check.....	EC-37
Fuel pressure release	EC-37
Fuel pump control module	EC-391
Fuel system	FE-5
Fuel tank vacuum relief valve	EC-27
FUELLH - Wiring diagram.....	EC-243, 249
Fuse	EL-20
Fuse block	Foldout
Fusible link	EL-20

G

Garage jack and safety stand	GI-42
Gauges.....	EL-120
Generic scan tool (GST)	EC-85
Glass	BT-19
Grease	MA-8
Grille - See Exterior	BT-32
Ground distribution.....	EL-21

H

H/AIM - Wiring diagram	EL-94
Harness connector	EL-6
Harness connector inspection	GI-20
Harness layout	EL-518
Hazard warning lamp	EL-105
Headlamp.....	EL-46, 62
Headlamp aiming control	EL-94
Headlining - See Roof trim	BT-29

ALPHABETICAL INDEX

Heated oxygen sensor (HO2S)
 (front).....EC-166, 174, 180, 186, 195
 Heated oxygen sensor (HO2S) (Front)
 (Left bank).....EC-166, 174, 180, 186, 195
 Heated oxygen sensor (HO2S) (Front)
 (Right bank)EC-166, 174, 180, 186, 195
 Heated oxygen sensor (HO2S) heater
 (front)EC-202
 Heated oxygen sensor
 (rear).....EC-208, 216, 224, 231
 Heated oxygen sensor heater
 (Front)(Left bank).....EC-202
 Heated seat.....BT-42, EL-228
 Height (Dimensions)GI-40
 HFC134a (R134a) system precautionHA-2
 HFC134a (R134a) system service
 procedure.....HA-99
 HFC134a (R134a) system service toolsHA-8
 HFC134a system service equipment
 precautionHA-10
 High clutch.....AT-238
 H/LAMP - Wiring diagram.....EL-49, 66
 Hood.....BT-13
 HornEL-179
 HORN - Wiring diagram.....EL-179
 HSEAT - Wiring diagram.....EL-228
 Hydraulic lash adjuster inspectionEM-39

I

IATS - Wiring diagram.....EC-140
 Identification plate.....GI-40
 Idle mixture ratio.....EC-42
 Idle speed.....EC-42
 IGN/SG - Wiring diagram.....EC-397
 Ignition coilEC-404
 Ignition timingEC-42
 ILL - Wiring diagram.....EL-114
 Illumination.....EL-112, 351, 384
 I/MIRR - Wiring diagram.....EL-222
 In vehicle sensorHA-69
 INFINITI COMMUNICATOR.....EL-480
 Infiniti communicator (IVCS)EL-480
 INJECT - Wiring diagram.....EC-513
 Injector.....EC-518
 Injector removal and installationEC-38
 Instrument panelBT-21
 INT/L - Wiring diagram.....EL-119
 Intake air temperature sensorEC-140
 Intake door motorHA-86
 Intake sensor.....HA-71, 98
 Intake valve timing controlEC-365
 Intake valve timing control (right bank)
 - Wiring diagramEC-365
 Intake valve timing control position
 sensor (left bank).....EC-380
 Intake valve timing control position
 sensor (right bank).....EC-380
 Integrated homelink transmitterEL-478
 InteriorBT-25

Interior lampEL-351
 IVC-L - Wiring diagram.....EC-365
 IVCS (Infiniti communicator)EL-480
 IVCS - Wiring diagram.....EL-489
 IVCS-L - Wiring diagramEC-380
 IVIS (Infiniti vehicle immobilizer
 system).....EL-460
 IVIS (Infiniti vehicle immobilizer sys-
 tem) precautionsGI-2
 IVMS (In-Vehicle Multiplexing System).....EL-259
 IVMS-System description.....EL-259
 IVMS-Trouble diagnoses.....EL-280

J

Jacking points.....GI-42
 Joint connector (J/C)Foldout
 Junction box (J/B).....Foldout

K

Key illumination.....EL-351
 Keyless entry system - See Multi-re-
 mote control system.....EL-328
 Knock sensor (KS)EC-265
 Knuckle spindle.....FA-12
 KS - Wiring diagram.....EC-265

L

LAN system circuitHA-80
 Length (Dimensions)GI-40
 License lamp.....EL-95
 Lifting pointsGI-43
 Line pressure solenoid valveAT-113, 124, 128
 Line pressure test (A/T)AT-62
 Liquid gasket applicationEM-2
 LOAD - Wiring diagram.....EC-530
 Location of electrical unitsEL-514
 Lock, doorBT-19
 Low and reverse brakeAT-244
 Lower ball joint (rear susp.)RA-23
 Lubricant (R134a) A/C.....HA-102
 Lubricants.....MA-8
 Lubrication circuit (engine)LC-3
 Lubrication-locks, hinges and hood
 latchesMA-22

M

MAFS - Wiring diagram.....EC-124
 Magnet clutch.....HA-109
 MAIN - Wiring diagram.....EC-118
 Maintenance (engine)MA-10
 MAJOR OVERHALL.....AT-201

ALPHABETICAL INDEX

Malfunction indicator lamp (MIL)EC-65
 Map lampEL-351
 MAP/BARO switch solenoid valveEC-356
 Mass air flow sensor (MAFS).....EC-124
 Master cylinder (brake)BR-12
 MeterEL-120
 METER - Wiring diagram.....EL-123
 Middle throttle drum adjustmentFE-4
 MIL & Data link connectors circuitEC-533
 MIL/DL - Wiring diagramEC-533
 MIRROR - Wiring diagram.....EL-221
 Mirror, door.....BT-54
 Mirror, out sideBT-54
 MisfireEC-260
 Mode door control linkage adjustment.....HA-97
 Model variationGI-38
 Molding - See ExteriorBT-32
 Mud guard - See ExteriorBT-32
 MULTI - Wiring diagram.....EL-332
 Multi link/lower ball joint (rear)RA-23
 Multi-remote control system.....EL-328
 Multiport fuel injection (MFI) systemEC-21
 Multiport fuel injection precautions.....GI-5

N

NATS (Nissan anti-theft system)
 precautionsGI-2
 NATS - Wiring diagramEL-462
 NVH troubleshooting (BR).....BR-5
 NVH troubleshooting (FA).....FA-4
 NVH troubleshooting (PD).....PD-5
 NVH troubleshooting (RA).....RA-4
 NVH troubleshooting (ST).....ST-5

O

Oil change (capacity)MA-8
 Oil change (interval)MA-6, 7
 Oil pan (engine).....EM-11
 Oil pressure (engine)LC-4
 Oil pump (A/T).....AT-217
 Oil pump (engine)LC-5
 Oil pump regulator valve (engine)LC-7
 Oil seal replacement (engine).....EM-27
 Oil seal replacement (front of final
 drive)PD-11
 Oil seal replacement (side of final
 drive)PD-11
 On board diagnostic systemEC-49
 ORVR (On-board Refueling Vapor
 Recovery).....EC-31
 Out side mirrorBT-54
 Overdrive control switch.....AT-181
 Overrun clutchAT-240
 Overrun clutch solenoid valve.....AT-145

P

P/ANT - Wiring diagramEL-204
 Park/Neutral position switchEC-492
 Park/neutral position switch (A/T)AT-84
 Parking brake controlBR-30
 Parking drum brakeBR-26
 Parking lampEL-95
 PCV (positive crankcase ventilation)EC-36
 Personal lampEL-351
 PGC/V - Wiring diagramEC-307, 442
 PHONE - Wiring diagramEL-207
 Pinion bearing preload diff.PD-21
 Pinion gear height diff.PD-21
 Piston assemblyEM-52
 Piston pin inspectionEM-47
 Piston ring inspection.....EM-47
 Piston to bore clearanceEM-48
 POWER - Wiring diagramEL-11
 Power antenna.....EL-203
 Power door lockEL-307
 Power seatEL-223, 415
 Power steering (twin orifice) trouble
 diagnosesST-33
 Power steering fluid levelMA-21, ST-7
 Power steering gearST-15
 Power steering hydraulic pressureST-9
 Power steering oil pressure switchEC-525
 Power steering oil pumpST-27
 Power steering system (twin orifice).....ST-30
 Power steering system bleeding.....ST-8
 Power supply routingEL-10
 Power transistorEC-404
 Power transistor & ignition coil.....EC-397
 Power windowEL-290
 PRE/SE - Wiring diagramEC-318
 Precautions (General)GI-3
 Pressure test (A/T)AT-62
 Propeller shaftPD-6
 Propeller shaft on vehicle servicePD-6
 Propeller shaft vibrationPD-6
 PST/SW - Wiring diagramEC-525

R

Rack retainer adjustment.....ST-7
 RadiatorLC-13
 Radio - See AudioEL-191
 Rear axleRA-10
 Rear bumperBT-16
 Rear combination lamp removal and
 installationBT-32
 Rear disc brakeBR-22
 Rear doorBT-20
 Rear heated oxygen sensor
 (HO2S)EC-208, 216, 224, 231
 Rear heated oxygen sensor (HO2S)
 heaterEC-237

ALPHABETICAL INDEX

Rear seat	BT-43
Rear seat belt	RS-5
Rear sunshade	EL-230
Rear suspension	RA-20
Rear tower bar	BT-32
Rear window	BT-52
Rear window defogger	EL-182
Refrigerant connection precaution	HA-3
Refrigerant discharging evacuating charging	HA-101
Refrigerant general precaution	HA-3
Refrigerant lines	HA-104
Refrigeration cycle	HA-12
REMOTE - Wiring diagram	EL-202
Removal and installation (A/T)	AT-198
Reverse clutch	AT-234
Revolution sensor (A/T)	AT-91
RO2H-L - Wiring diagram	EC-208
Road wheel size	GI-40
Roof trim	BT-29
Room lamp	EL-351
ROOM/L - Wiring diagram	EL-356
RRO2LH - Wiring diagram	EC-237

S

SAE J1930 terminology list	GI-46
Seal - See Exterior	BT-32
SEAT - Wiring diagram	EL-224
Seat belt inspection	MA-22, RS-7
Seat belt pre-tensioner	RS-11
Seat belt pre-tensioner disposal	RS-24
Seat belt, front	RS-4
Seat belt, rear	RS-5
Seat, front	BT-41
Seat, rear	BT-43
Secondary throttle position sensor	BR-35
Secondary throttle position sensor (TPS) for TCS	EC-373
Self-diagnostic results	EC-65
SHIFT - Wiring diagram	AT-184
Shift lock system	AT-183
Shift schedule	AT-276
Shift solenoid valve A (A/T)	AT-98, 107, 113, 131
Shift solenoid valve B (A/T)	AT-98, 103, 113, 135
Shock absorber (rear)	RA-22
Side air bag	RS-11
Side bearing preload diff.	PD-20
Side flange installation diff.	PD-12
Side trim	BT-25
SMJ (super multiple junction)	Foldout
Spare tire size	GI-40
Spark plug replacement	MA-15
Spiral cable	RS-18
Splice location	EL-537
Spot lamp	EL-351
Spring (Wheelarch) height	FA-6
SROOF - Wiring diagram	EL-218
SRS - See Supplemental Restraint System	RS-11

SRS - Wiring diagram	RS-35
SRS Trouble diagnoses	RS-30
S/SIG - Wiring diagram	EC-519
Stabilizer bar (front)	FA-21
Stabilizer bar (rear)	RA-26
Stall test (A/T)	AT-59
Standardized relay	EL-8
START - Wiring diagram	EL-35
Starter	EL-36
Starting system	EL-34
Steering gear and linkage inspection	MA-21
Steering linkage	ST-15
Steering switch	EL-44
Steering wheel and column	ST-11
Steering wheel play	ST-6
Steering wheel turning force	ST-9
Step lamp	EL-373
STEP/L - Wiring diagram	EL-376
Stop lamp	EL-99
STOP/L - Wiring diagram	EL-99
Strut (front)	FA-17
Sun roof, electric	EL-217
Sunload sensor	HA-73
Sunroof	BT-44
Sunshade	EL-230
Supplemental Restraint System	RS-11
Supplemental restraint system - Wiring diagram	RS-35
SW/ILL - Wiring diagram	EL-385
SW/V - Wiring diagram	EC-356
Symbols and abbreviations	GI-9
System readiness test (SRT) code	EC-51

T

T&FLID - Wiring diagram	EL-209
TAC (throttle actuator control) module	BR-38
TAC module removal and installation	BR-38
Tail lamp	EL-95
TAIL/L - Wiring diagram	EL-96
Tandem throttle position sensor	EC-379
T/CLOS - Wiring diagram	EL-212
TCM circuit diagram	AT-11
TCM inspection table	AT-77
TCS (traction control system)	BR-32
TCS - Wiring diagram	BR-51
TCS component parts and connector location	BR-49
TCS control unit	BR-123
TCS front wheel sensor removal and installation	BR-38
TCS rear wheel sensor removal and installation	BR-38
TCS self-diagnosis	BR-59
TCS symptom chart	BR-45
TCS system components	BR-33
TCS throttle valve control system	BR-35
TCS trouble diagnoses	BR-41
TCS wheel sensors	BR-37
Telephone	EL-207

ALPHABETICAL INDEX

Tension rod (front).....	FA-21
TFTS - Wiring diagram.....	EC-255
THEFT - Wiring diagram.....	EL-393
Theft warning system.....	EL-389
Thermostat	LC-11
Three way catalyst	EC-293
Three way catalyst function (Left bank).....	EC-293
Three way catalyst function (Right bank).....	EC-293
Three way catalyst precautions.....	GI-5
Throttle actuator control module - See TAC module	BR-38
Throttle drum adjustment.....	FE-4
Throttle Motor	BR-35
Throttle position sensor (TPS)	EC-150
Throttle position sensor adjustment	EC-91
Throttle position switch	AT-142, 182
Throttle valve control system for TCS.....	BR-35
Tie-rod	ST-19
Tie-rod ball joints.....	ST-19
Tightening torque of standard bolts.....	GI-45
Timing chain.....	EM-13
Tire rotation	MA-19
Tire size	GI-40
Tooth contact diff.	PD-26
Torque converter installation	AT-199
Torque convertor clutch solenoid valve	AT-117, 124
Tow truck towing	GI-43
Towing point.....	GI-44
TP/SW - Wiring diagram	EC-344
TPS - Wiring diagram.....	EC-150
Traction control system - See TCS	BR-32
Traction control system - Wiring diagram.....	BR-51
Traction control system circuit (engine)	EC-388
Transmission serial number	GI-40
TRANSMT - Wiring diagram	EL-478
Transverse link (front)	FA-22
Tread-FR&RR (Dimensions).....	GI-40
Trim	BT-25
Triple pressure switch	HA-95
Trouble diagnoses	GI-33
Trunk closure.....	EL-211
Trunk lid	BT-16
Trunk lid opener - See Trunk lid	BT-16
Trunk lid opener, electric.....	EL-209
Trunk lid trim	BT-31
Trunk room lamp	EL-119
Trunk room trim.....	BT-31
Turbine revolution sensor.....	AT-156
TURN - Wiring diagram	EL-108
Turn signal lamp	EL-105
Two trip detection logic	EC-49
Two-pole lift	GI-43

U

Under body	BT-57
------------------	-------

V

Vacuum cut valve	EC-477
Vacuum cut valve bypass valve.....	EC-468, 473
Vacuum hose (brake system).....	BR-17
Vacuum hose drawing (Engine control)	EC-19
Valve guide.....	EM-36
Valve seat.....	EM-38
Valve spring.....	EM-39
Vanity mirror lamp	EL-119
Vehicle identification number.....	GI-39
Vehicle recovery (freeing a stuck vehicle).....	GI-44
Vehicle speed sensor (VSS)	EC-333
VENT/V - Wiring diagram	EC-313, 450, 462
Ventilation air filter	HA-111
Ventilator door control rod adjustment	HA-98
Viscosity number (SAE)	MA-8
VSS - Wiring diagram	EC-333

W

WARN - Wiring diagram	EL-138
Warning chime	EL-151
Warning lamps	EL-134
Washer, front.....	EL-161
Water pump	LC-9
Weatherstrip - See Exterior	BT-32
Wheel alignment (front)	FA-8
Wheel alignment (rear).....	RA-7
Wheel bearing (front axle)	FA-7
Wheel bearing (rear)	RA-7
Wheel hub (front)	FA-12
Wheel hub (rear)	RA-10
Wheel sensors (ABS).....	BR-37
Wheel sensors (TCS).....	BR-37
Wheel size	GI-40
Wheelarch height	FA-6
Wheelbase (Dimensions)	GI-40
Wide open & closed throttle position switch	EC-150
Width (Dimensions)	GI-40
WINDOW - Wiring diagram	EL-293
Window, door	BT-19
Window, rear	BT-52
Windshield.....	BT-52
WIPER - Wiring diagram	EL-164
Wiper, front.....	EL-161
Wiring Diagram (Cell code) list.....	EL-550
Wiring diagrams.....	GI-10