

SECTION **IDX**  
ALPHABETICAL INDEX

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

IDX

# ALPHABETICAL INDEX

## Numerics

|                                  |                       |
|----------------------------------|-----------------------|
| 2-4WD shift solenoid valve ..... | <a href="#">TF-95</a> |
| 4LO indicator lamp .....         | <a href="#">TF-90</a> |
| 4WD shift indicator lamp .....   | <a href="#">TF-85</a> |
| 4WD shift switch .....           | <a href="#">TF-95</a> |
| 4WD solenoid valve .....         | <a href="#">TF-95</a> |
| 4WD warning lamp .....           | <a href="#">TF-13</a> |

## A

|                                                     |                                                                                                                                                                              |
|-----------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A/C air flow .....                                  | <a href="#">ATC-29</a>                                                                                                                                                       |
| A/C compressor clutch removal and installation ..   | <a href="#">ATC-167</a>                                                                                                                                                      |
| A/C compressor mounting .....                       | <a href="#">ATC-166</a>                                                                                                                                                      |
| A/C compressor precaution .....                     | <a href="#">ATC-11</a>                                                                                                                                                       |
| A/C compressor special service tool .....           | <a href="#">ATC-14</a>                                                                                                                                                       |
| A/C control operation (auto A/C) .....              | <a href="#">ATC-26</a>                                                                                                                                                       |
| A/C diagnostic work flow (auto A/C) .....           | <a href="#">ATC-120</a>                                                                                                                                                      |
| A/C evaporator .....                                | <a href="#">ATC-175</a>                                                                                                                                                      |
| A/C HFC134a (R134a) system identification .....     | <a href="#">ATC-7</a>                                                                                                                                                        |
| A/C HFC134a (R134a) system precaution .....         | <a href="#">ATC-5</a>                                                                                                                                                        |
| A/C HFC134a (R134a) system service procedure        | <a href="#">ATC-162</a>                                                                                                                                                      |
| A/C HFC134a (R134a) system service tools ...        | <a href="#">ATC-14</a>                                                                                                                                                       |
| A/C HFC134a system service equipment precaution ... | <a href="#">ATC-11</a>                                                                                                                                                       |
| A/C lubricant (R134a) .....                         | <a href="#">ATC-22</a>                                                                                                                                                       |
| A/C lubrication oil .....                           | <a href="#">ATC-22</a>                                                                                                                                                       |
| A/C operational check .....                         | <a href="#">ATC-56</a> , <a href="#">ATC-59</a>                                                                                                                              |
| A/C self-diagnoses (auto A/C) .....                 | <a href="#">ATC-53</a> , <a href="#">ATC-120</a>                                                                                                                             |
| A/C service data specification .....                | <a href="#">ATC-182</a>                                                                                                                                                      |
| A/C trouble diagnoses (auto A/C) .....              | <a href="#">ATC-33</a>                                                                                                                                                       |
| A/C, A - Wiring diagram .....                       | <a href="#">ATC-41</a>                                                                                                                                                       |
| A/T - Wiring diagram .....                          | <a href="#">AT-52</a>                                                                                                                                                        |
| A/T fluid checking .....                            | <a href="#">AT-13</a> , <a href="#">AT-58</a> , <a href="#">MA-21</a>                                                                                                        |
| A/T fluid cooler cleaning .....                     | <a href="#">AT-15</a>                                                                                                                                                        |
| A/T fluid replacement .....                         | <a href="#">AT-13</a> , <a href="#">MA-23</a>                                                                                                                                |
| A/T fluid temperature sensor .....                  | <a href="#">AT-131</a>                                                                                                                                                       |
| A/T IND - Wiring diagram .....                      | <a href="#">DI-41</a>                                                                                                                                                        |
| A/T indicator .....                                 | <a href="#">DI-41</a>                                                                                                                                                        |
| A/T shift lock system .....                         | <a href="#">AT-236</a>                                                                                                                                                       |
| A/T trouble diagnoses .....                         | <a href="#">AT-43</a>                                                                                                                                                        |
| ABS - Wiring diagram .....                          | <a href="#">BRC-16</a>                                                                                                                                                       |
| ABS (anti-lock brake system) .....                  | <a href="#">BRC-7</a>                                                                                                                                                        |
| Accelerator control system .....                    | <a href="#">ACC-2</a>                                                                                                                                                        |
| Accelerator pedal position (APP) sensor .           | <a href="#">EC-556</a> , <a href="#">EC-562</a> , <a href="#">EC-576</a>                                                                                                     |
| Accelerator pedal released position learning .....  | <a href="#">EC-44</a>                                                                                                                                                        |
| AF1B1-Wiring diagram                                | <a href="#">EC-431</a> , <a href="#">EC-439</a> , <a href="#">EC-447</a> , <a href="#">EC-456</a> , <a href="#">EC-466</a> , <a href="#">EC-475</a> , <a href="#">EC-487</a> |
| AF1B2-Wiring diagram                                | <a href="#">EC-433</a> , <a href="#">EC-441</a> , <a href="#">EC-449</a> , <a href="#">EC-458</a> , <a href="#">EC-468</a> , <a href="#">EC-477</a> , <a href="#">EC-489</a> |
| AF1HB1-Wiring diagram .....                         | <a href="#">EC-355</a>                                                                                                                                                       |
| AF1HB2-Wiring diagram .....                         | <a href="#">EC-357</a>                                                                                                                                                       |
| Aiming adjustment .....                             | <a href="#">LT-31</a> , <a href="#">LT-78</a>                                                                                                                                |
| Air bag .....                                       | <a href="#">SRS-3</a>                                                                                                                                                        |
| Air cleaner and air duct .....                      | <a href="#">EM-14</a>                                                                                                                                                        |
| Air cleaner filter replacement .....                | <a href="#">MA-15</a>                                                                                                                                                        |

|                                             |                                                                                                                                                                              |
|---------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Air conditioner cut control .....           | <a href="#">EC-30</a>                                                                                                                                                        |
| Air flow meter - See Mass air flow sensor   | <a href="#">EC-146</a> , <a href="#">EC-154</a>                                                                                                                              |
| Air fuel ratio sensor 1 ..                  | <a href="#">EC-429</a> , <a href="#">EC-437</a> , <a href="#">EC-445</a> , <a href="#">EC-454</a> , <a href="#">EC-463</a> , <a href="#">EC-472</a> , <a href="#">EC-484</a> |
| Air fuel ratio sensor 1 heater .....        | <a href="#">EC-354</a>                                                                                                                                                       |
| Air mix. door motor .....                   | <a href="#">ATC-67</a>                                                                                                                                                       |
| All - mode 4WD system .....                 | <a href="#">TF-10</a>                                                                                                                                                        |
| Ambient sensor .....                        | <a href="#">ATC-125</a> , <a href="#">ATC-136</a>                                                                                                                            |
| Angular tightening application .....        | <a href="#">EM-3</a>                                                                                                                                                         |
| APPS1 - Wiring diagram .....                | <a href="#">EC-558</a>                                                                                                                                                       |
| APPS2 - Wiring diagram .....                | <a href="#">EC-564</a>                                                                                                                                                       |
| APPS3 - Wiring diagram .....                | <a href="#">EC-578</a>                                                                                                                                                       |
| ASC/BS - Wiring diagram .....               | <a href="#">EC-536</a>                                                                                                                                                       |
| ASC/SW - Wiring diagram .....               | <a href="#">EC-519</a>                                                                                                                                                       |
| ASCSOF - Wiring diagram .....               | <a href="#">EC-622</a>                                                                                                                                                       |
| ASCD .....                                  | <a href="#">EC-647</a>                                                                                                                                                       |
| ASCD (automatic speed control device) ..... | <a href="#">ACS-3</a>                                                                                                                                                        |
| ASCD brake switch .....                     | <a href="#">EC-534</a> , <a href="#">EC-621</a>                                                                                                                              |
| ASCD indicator lamp .....                   | <a href="#">EC-628</a>                                                                                                                                                       |
| ASCD steering switch .....                  | <a href="#">EC-517</a>                                                                                                                                                       |
| ASCIND - Wiring diagram .....               | <a href="#">EC-629</a>                                                                                                                                                       |
| ATP switch .....                            | <a href="#">TF-96</a>                                                                                                                                                        |
| ATP warning lamp .....                      | <a href="#">TF-89</a>                                                                                                                                                        |
| AUDIO - Wiring diagram .....                | <a href="#">AV-10</a>                                                                                                                                                        |
| AUT/DP - Wiring diagram .....               | <a href="#">SE-19</a>                                                                                                                                                        |
| Auto air conditioner - Wiring diagram ..... | <a href="#">ATC-41</a>                                                                                                                                                       |
| Auto anti-dazzling inside mirror .....      | <a href="#">GW-76</a> , <a href="#">GW-77</a>                                                                                                                                |
| Autolamp .....                              | <a href="#">LT-47</a>                                                                                                                                                        |
| Automatic amplifier .....                   | <a href="#">ATC-60</a>                                                                                                                                                       |
| Automatic transmission number .....         | <a href="#">GI-48</a>                                                                                                                                                        |
| AV and NAVI control unit .....              | <a href="#">AV-63</a>                                                                                                                                                        |
| AV communication line .....                 | <a href="#">AV-87</a>                                                                                                                                                        |

## B

|                                         |                                                                      |
|-----------------------------------------|----------------------------------------------------------------------|
| Back door trim .....                    | <a href="#">EI-31</a>                                                |
| Back sonar .....                        | <a href="#">DI-59</a>                                                |
| BACK/L - Wiring diagram .....           | <a href="#">LT-106</a>                                               |
| Back-up lamp .....                      | <a href="#">LT-106</a>                                               |
| Ball joint (front) .....                | <a href="#">FSU-15</a>                                               |
| Basic inspection .....                  | <a href="#">EC-79</a>                                                |
| Battery .....                           | <a href="#">SC-4</a>                                                 |
| Battery/Starting/Charging System Tester | <a href="#">SC-6</a> , <a href="#">SC-12</a> , <a href="#">SC-19</a> |
| BCM (Body control module) .....         | <a href="#">BCS-3</a>                                                |
| Block heater .....                      | <a href="#">EM-73</a>                                                |
| Blower motor .....                      | <a href="#">ATC-83</a> , <a href="#">ATC-140</a>                     |
| Body alignment .....                    | <a href="#">BL-174</a>                                               |
| Body component parts .....              | <a href="#">BL-161</a>                                               |
| Body construction .....                 | <a href="#">BL-173</a>                                               |
| Body exterior paint color .....         | <a href="#">BL-160</a>                                               |
| Body mounting .....                     | <a href="#">BL-159</a>                                               |
| Body repair .....                       | <a href="#">BL-160</a>                                               |
| Body sealing .....                      | <a href="#">BL-170</a>                                               |
| Brake booster .....                     | <a href="#">BR-17</a>                                                |
| Brake fluid level .....                 | <a href="#">MA-27</a>                                                |
| Brake hydraulic line .....              | <a href="#">BR-12</a>                                                |
| Brake inspection .....                  | <a href="#">MA-28</a>                                                |

# ALPHABETICAL INDEX

|                                         |                        |
|-----------------------------------------|------------------------|
| Brake lines and cables inspection ..... | <a href="#">MA-27</a>  |
| Brake master cylinder .....             | <a href="#">BR-15</a>  |
| Brake switch .....                      | <a href="#">EC-551</a> |
| BRK/SW - Wiring diagram .....           | <a href="#">EC-552</a> |
| Bulb specifications .....               | <a href="#">LT-170</a> |
| Bumper, front .....                     | <a href="#">EI-13</a>  |
| Bumper, rear .....                      | <a href="#">EI-15</a>  |

## C

|                                                                                                                                                                                                                                                  |                         |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| Cabin air filter .....                                                                                                                                                                                                                           | <a href="#">MA-20</a>   |
| Camshaft .....                                                                                                                                                                                                                                   | <a href="#">EM-43</a>   |
| Camshaft inspection .....                                                                                                                                                                                                                        | <a href="#">EM-47</a>   |
| Camshaft position sensor (PHASE) .....                                                                                                                                                                                                           | <a href="#">EC-261</a>  |
| CAN - Wiring diagram <a href="#">EC-136</a> , <a href="#">LAN-18</a> , <a href="#">LAN-52</a> , <a href="#">LAN-92</a> , <a href="#">LAN-128</a>                                                                                                 |                         |
| CAN (Controller Area Network) .. <a href="#">WT-9</a> , <a href="#">BRC-10</a> , <a href="#">LAN-16</a> , <a href="#">LAN-50</a> , <a href="#">LAN-90</a> , <a href="#">LAN-126</a>                                                              |                         |
| CAN communication . <a href="#">EC-31</a> , <a href="#">EC-135</a> , <a href="#">AT-103</a> , <a href="#">WT-9</a> , <a href="#">BRC-10</a> , <a href="#">LAN-16</a> , <a href="#">LAN-50</a> , <a href="#">LAN-90</a> , <a href="#">LAN-126</a> |                         |
| Canister-See EVAP canister .....                                                                                                                                                                                                                 | <a href="#">EC-636</a>  |
| Center case (Transfer) .....                                                                                                                                                                                                                     | <a href="#">TF-113</a>  |
| CHARGE - Wiring diagram .....                                                                                                                                                                                                                    | <a href="#">SC-18</a>   |
| Charging system .....                                                                                                                                                                                                                            | <a href="#">SC-17</a>   |
| Chassis and body maintenance .....                                                                                                                                                                                                               | <a href="#">MA-20</a>   |
| Chassis and body maintenanceSchedule 1 .....                                                                                                                                                                                                     | <a href="#">MA-7</a>    |
| Chassis and body maintenanceSchedule 2 .....                                                                                                                                                                                                     | <a href="#">MA-9</a>    |
| CHIME - Wiring diagram .....                                                                                                                                                                                                                     | <a href="#">DI-46</a>   |
| Circuit breaker .....                                                                                                                                                                                                                            | <a href="#">PG-67</a>   |
| Clock .....                                                                                                                                                                                                                                      | <a href="#">DI-70</a>   |
| CLOCK - Wiring diagram .....                                                                                                                                                                                                                     | <a href="#">DI-70</a>   |
| Closed loop control .....                                                                                                                                                                                                                        | <a href="#">EC-27</a>   |
| Closed loop control (Bank 1) .....                                                                                                                                                                                                               | <a href="#">EC-407</a>  |
| Closed loop control (Bank 2) .....                                                                                                                                                                                                               | <a href="#">EC-407</a>  |
| Clutch drum (Transfer) .....                                                                                                                                                                                                                     | <a href="#">TF-116</a>  |
| Clutch force release limit adjustment .....                                                                                                                                                                                                      | <a href="#">TF-42</a>   |
| Clutch pressure switch (Transfer) .....                                                                                                                                                                                                          | <a href="#">TF-95</a>   |
| Coil spring (front) .....                                                                                                                                                                                                                        | <a href="#">FSU-10</a>  |
| Collision diagnosis .....                                                                                                                                                                                                                        | <a href="#">SRS-60</a>  |
| Combination lamp, front, removal and installation . <a href="#">LT-33</a>                                                                                                                                                                        |                         |
| Combination lamp, rear, removal and installation .. <a href="#">LT-122</a>                                                                                                                                                                       |                         |
| Combination meter .....                                                                                                                                                                                                                          | <a href="#">DI-5</a>    |
| Combination switch .....                                                                                                                                                                                                                         | <a href="#">LT-97</a>   |
| COMBSW - Wiring diagram .....                                                                                                                                                                                                                    | <a href="#">LT-97</a>   |
| COMM - Wiring diagram .....                                                                                                                                                                                                                      | <a href="#">AV-87</a>   |
| COMPAS - Wiring diagram .....                                                                                                                                                                                                                    | <a href="#">DI-27</a>   |
| Compass .....                                                                                                                                                                                                                                    | <a href="#">DI-26</a>   |
| Component Location (auto A/C) .....                                                                                                                                                                                                              | <a href="#">ATC-37</a>  |
| Compressor clutch removal and installation . <a href="#">ATC-167</a>                                                                                                                                                                             |                         |
| Compressor mounting .....                                                                                                                                                                                                                        | <a href="#">ATC-166</a> |
| Compressor precaution .....                                                                                                                                                                                                                      | <a href="#">ATC-11</a>  |
| Compressor special service tool .....                                                                                                                                                                                                            | <a href="#">ATC-14</a>  |
| Condenser .....                                                                                                                                                                                                                                  | <a href="#">ATC-173</a> |
| Connecting rod .....                                                                                                                                                                                                                             | <a href="#">EM-91</a>   |
| Connecting rod bearing clearance .....                                                                                                                                                                                                           | <a href="#">EM-91</a>   |
| Connecting rod bushing clearance .....                                                                                                                                                                                                           | <a href="#">EM-91</a>   |
| Console box - See Instrument panel .....                                                                                                                                                                                                         | <a href="#">IP-10</a>   |

|                                                                                                                                                                                    |                                                   |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------|
| Console box lamp .....                                                                                                                                                             | <a href="#">LT-152</a>                            |
| CONSULT for all-mode 4WD .....                                                                                                                                                     | <a href="#">TF-31</a>                             |
| CONSULT for VDC .....                                                                                                                                                              | <a href="#">BRC-28</a>                            |
| CONSULT-II for engine .....                                                                                                                                                        | <a href="#">EC-103</a>                            |
| Control units (terminal arrangement) .....                                                                                                                                         | <a href="#">PG-71</a>                             |
| Control valve (A/T) .....                                                                                                                                                          | <a href="#">AT-37</a>                             |
| Control valve (Transfer) .....                                                                                                                                                     | <a href="#">TF-119</a>                            |
| Controller Area Network (CAN) . <a href="#">WT-9</a> , <a href="#">BRC-10</a> , <a href="#">LAN-16</a> , <a href="#">LAN-50</a> , <a href="#">LAN-90</a> , <a href="#">LAN-126</a> |                                                   |
| Converter housing installation .....                                                                                                                                               | <a href="#">AT-257</a> , <a href="#">AT-260</a>   |
| COOL/F - Wiring diagram .....                                                                                                                                                      | <a href="#">EC-413</a>                            |
| Coolant mixture ratio .....                                                                                                                                                        | <a href="#">MA-11</a>                             |
| Coolant replacement .....                                                                                                                                                          | <a href="#">MA-12</a>                             |
| Cooling circuit (engine) .....                                                                                                                                                     | <a href="#">CO-6</a>                              |
| Cooling fan .....                                                                                                                                                                  | <a href="#">CO-13</a>                             |
| Cooling fan control .....                                                                                                                                                          | <a href="#">EC-410</a>                            |
| Cooling fan motor .....                                                                                                                                                            | <a href="#">EC-419</a>                            |
| Cooling unit (A/C evaporator) .....                                                                                                                                                | <a href="#">ATC-144</a> , <a href="#">ATC-175</a> |
| Corrosion protection .....                                                                                                                                                         | <a href="#">BL-167</a>                            |
| Crankcase ventilation system - See Positive crankcase ventilation .....                                                                                                            | <a href="#">EC-645</a>                            |
| Crankshaft .....                                                                                                                                                                   | <a href="#">EM-74</a>                             |
| Crankshaft position sensor (POS) .....                                                                                                                                             | <a href="#">EC-255</a>                            |
| Crash zone sensor .....                                                                                                                                                            | <a href="#">SRS-55</a>                            |
| Cylinder block .....                                                                                                                                                               | <a href="#">EM-73</a>                             |
| Cylinder block boring .....                                                                                                                                                        | <a href="#">EM-94</a>                             |

## D

|                                                                               |                                                 |
|-------------------------------------------------------------------------------|-------------------------------------------------|
| D/LOCK - Wiring diagram .....                                                 | <a href="#">BL-20</a>                           |
| Data link connector .....                                                     | <a href="#">EC-105</a>                          |
| Daytime light system .....                                                    | <a href="#">LT-34</a>                           |
| Daytime running light - See Daytime light system .. <a href="#">LT-34</a>     |                                                 |
| DEF - Wiring diagram .....                                                    | <a href="#">GW-82</a>                           |
| Diagnosis sensor unit .....                                                   | <a href="#">SRS-58</a>                          |
| Diagnostic trouble code (DTC) .....                                           | <a href="#">EC-53</a>                           |
| Diagnostic trouble code (DTC) for OBD system .. <a href="#">EC-8</a>          |                                                 |
| Diagnostic trouble code (DTC) inspection priority chart <a href="#">EC-76</a> |                                                 |
| Differential carrier assembly .....                                           | <a href="#">RFD-11</a>                          |
| Differential carrier disassembly .....                                        | <a href="#">RFD-13</a>                          |
| Differential gear oil replacement .....                                       | <a href="#">MA-25</a>                           |
| Dimensions .....                                                              | <a href="#">GI-49</a>                           |
| Direct clutch solenoid valve .....                                            | <a href="#">AT-157</a> , <a href="#">AT-160</a> |
| Display and amp.assembly .....                                                | <a href="#">ATC-60</a>                          |
| Display Control Unit .....                                                    | <a href="#">AV-158</a>                          |
| Dome light - See Interior lamp .....                                          | <a href="#">LT-129</a>                          |
| Door glass .....                                                              | <a href="#">GW-69</a> , <a href="#">GW-72</a>   |
| Door lock .....                                                               | <a href="#">BL-132</a>                          |
| Door mirror lamp .....                                                        | <a href="#">LT-129</a>                          |
| Door trim .....                                                               | <a href="#">EI-31</a>                           |
| Door, front .....                                                             | <a href="#">BL-129</a> , <a href="#">GW-69</a>  |
| Door, rear .....                                                              | <a href="#">BL-129</a> , <a href="#">GW-72</a>  |
| Drive belt .....                                                              | <a href="#">EM-12</a>                           |
| Drive chain (Transfer) .....                                                  | <a href="#">TF-115</a>                          |
| Drive pinion diff. inspection .....                                           | <a href="#">RFD-12</a>                          |
| Drive pinion height .....                                                     | <a href="#">RFD-17</a>                          |
| Drive shaft (rear) .....                                                      | <a href="#">RAX-7</a>                           |

# ALPHABETICAL INDEX

Driver air bag ..... [SRS-45](#)  
DTC work support ..... [EC-113](#)  
DTRL - Wiring diagram ..... [LT-37](#)  
Duct and grilles ..... [ATC-157](#)  
DVD Player ..... [AV-59](#)

## E

ECM input/output signal ..... [EC-96](#)  
ECM power supply ..... [EC-128](#), [EC-361](#)  
ECM relay ..... [EC-128](#)  
ECM/PW - Wiring diagram ..... [EC-362](#)  
ECTS - Wiring diagram ..... [EC-167](#)  
Electric sunroof ..... [RF-10](#)  
Electric throttle control actuator ..... [EC-365](#), [EC-367](#)  
Electrical load signal circuit ..... [EC-612](#)  
Electrical units location ..... [PG-64](#)  
Electronic ignition (EI) system ..... [EC-28](#)  
Engine control circuit diagram ..... [EC-94](#)  
Engine control component parts location ..... [EC-88](#)  
Engine control module (ECM) ..... [EC-351](#)  
Engine control system diagram and chart ..... [EC-23](#)  
Engine coolant ..... [CO-8](#)  
Engine coolant temperature sensor (ECTS) .. [EC-165](#),  
[EC-178](#)  
Engine fail-safe system ..... [EC-77](#)  
Engine oil ..... [LU-7](#)  
Engine oil filter replacement ..... [MA-16](#)  
Engine oil precautions ..... [GI-7](#)  
Engine oil replacement ..... [MA-16](#)  
Engine removal ..... [EM-70](#)  
Engine room cover ..... [EM-11](#)  
Engine serial number ..... [GI-48](#)  
ETC1 - Wiring diagram ..... [EC-368](#)  
ETC2 - Wiring diagram ..... [EC-375](#)  
ETC3 - Wiring diagram ..... [EC-379](#)  
EVAP canister ..... [EC-636](#)  
EVAP canister purge volume control solenoid valve ....  
[EC-285](#), [EC-496](#)  
EVAP canister vent control valve ..... [EC-292](#), [EC-504](#)  
EVAP control system (small leak) diagnosis .. [EC-276](#),  
[EC-316](#), [EC-324](#)  
EVAP control system pressure sensor .... [EC-299](#), [EC-302](#),  
[EC-308](#)  
EVAP control system purge flow monitoring diagnosis  
[EC-271](#)  
EVAP vapor lines inspection ..... [MA-19](#)  
Evaporative emission (EVAP) system ..... [EC-633](#)  
Evaporator ..... [ATC-175](#)  
Exhaust manifold ..... [EM-19](#)  
Exhaust system ..... [EX-3](#)  
Exhaust system inspection ..... [EX-3](#)  
Expansion valve ..... [ATC-177](#)

## F

F/FOG - Wiring diagram ..... [LT-71](#)  
F/PUMP - Wiring diagram ..... [EC-602](#)  
Final drive pre-inspection ..... [FFD-15](#), [RFD-12](#)

Final drive removal and installation ... [FFD-12](#), [RFD-10](#)  
Flow charts ..... [GI-27](#)  
Fluid temperature sensor (A/T) ..... [AT-131](#)  
Fluids ..... [MA-10](#)  
Fluorescent leak detector ..... [ATC-178](#)  
Fog lamp, front ..... [LT-69](#)  
Foot lamp ..... [LT-129](#)  
Freeze frame data ..... [EC-54](#), [EC-107](#)  
Front brake solenoid valve ..... [AT-151](#), [AT-154](#)  
Front bumper ..... [EI-13](#)  
Front case (Transfer) ..... [TF-125](#)  
Front combination lamp removal and installation [LT-33](#)  
Front door ..... [BL-129](#), [BL-132](#), [GW-69](#)  
Front Door Trim ..... [EI-31](#)  
Front drive shaft (Transfer) ..... [TF-115](#)  
Front fog lamp ..... [LT-69](#)  
Front passenger air bag ..... [SRS-50](#)  
Front seat ..... [SE-96](#)  
Front seat belt ..... [SB-3](#)  
Front seat belt pre-tensioner ..... [SRS-3](#), [SRS-57](#)  
Front washer ..... [WW-4](#)  
Front wiper ..... [WW-4](#)  
FTTS - Wiring diagram ..... [EC-227](#), [EC-232](#)  
Fuel cut control (at no load high engine speed) [EC-30](#)  
Fuel filter replacement ..... [FL-5](#)  
Fuel gauge ..... [DI-5](#)  
Fuel injection system (Bank 1) ..... [EC-208](#), [EC-217](#)  
Fuel injection system (Bank 2) ..... [EC-208](#), [EC-217](#)  
Fuel injector and fuel tube ..... [EM-29](#)  
Fuel level sensor ..... [EC-334](#), [EC-336](#), [EC-338](#)  
Fuel line inspection ..... [FL-3](#)  
Fuel precautions ..... [GI-5](#)  
Fuel pressure check ..... [EC-46](#)  
Fuel pressure release ..... [EC-46](#)  
Fuel pump ..... [EC-601](#)  
Fuel pump and gauge ..... [FL-5](#)  
Fuel system ..... [FL-3](#)  
Fuel tank ..... [FL-9](#)  
Fuel tank temperature sensor ..... [EC-225](#), [EC-231](#)  
Fuel tank vacuum relief valve ..... [EC-636](#)  
FUEL B1 - Wiring diagram ..... [EC-210](#), [EC-219](#)  
FUEL B2 - Wiring diagram ..... [EC-211](#), [EC-220](#)  
Fuse ..... [PG-67](#), [PG-77](#)  
Fuse and fusible link box ..... [PG-77](#)  
Fuse block ..... [PG-76](#)  
Fusible link ..... [PG-67](#), [PG-77](#)

## G

Garage jack and safety stand ..... [GI-40](#)  
Gauges ..... [DI-5](#)  
Generator ..... [SC-17](#)  
Generic scan tool (GST) ..... [EC-116](#)  
Glass ..... [GW-11](#), [GW-69](#), [GW-72](#)  
Glove box lamp ..... [LT-152](#), [LT-153](#)  
GPS antenna ..... [AV-62](#)  
Grease ..... [MA-10](#)  
Ground distribution ..... [PG-30](#)

# ALPHABETICAL INDEX

## H

|                                                  |                                                                                                   |
|--------------------------------------------------|---------------------------------------------------------------------------------------------------|
| H/AIM - Wiring diagram .....                     | <a href="#">LT-66</a>                                                                             |
| H/LAMP - Wiring diagram .....                    | <a href="#">LT-10</a>                                                                             |
| Handling precautions for plastics .....          | <a href="#">BL-189</a>                                                                            |
| Harness connector .....                          | <a href="#">PG-68</a>                                                                             |
| Harness layout .....                             | <a href="#">PG-40</a>                                                                             |
| Hazard warning lamp .....                        | <a href="#">LT-80</a>                                                                             |
| Headlamp .....                                   | <a href="#">LT-6</a>                                                                              |
| Headlamp aiming control .....                    | <a href="#">LT-65</a>                                                                             |
| Headlamp leveler - See Headlamp aiming control . | <a href="#">LT-65</a>                                                                             |
| Headlamp removal and installation .....          | <a href="#">LT-33</a>                                                                             |
| Heated oxygen sensor 2 (bank 1) ....             | <a href="#">EC-186</a> , <a href="#">EC-196</a> , <a href="#">EC-383</a> , <a href="#">EC-395</a> |
| Heated oxygen sensor 2 (bank 2) ....             | <a href="#">EC-186</a> , <a href="#">EC-196</a> , <a href="#">EC-383</a> , <a href="#">EC-395</a> |
| Heated oxygen sensor 2 heater (bank 1) .....     | <a href="#">EC-138</a>                                                                            |
| Heated oxygen sensor 2 heater (bank 2) .....     | <a href="#">EC-138</a>                                                                            |
| Heated seat .....                                | <a href="#">SE-89</a>                                                                             |
| Heater and cooling unit (Heater core) .          | <a href="#">ATC-144</a> , <a href="#">ATC-147</a>                                                 |
| Heater unit (heater core) .....                  | <a href="#">ATC-144</a> , <a href="#">ATC-147</a>                                                 |
| Height (Dimensions) .....                        | <a href="#">GI-49</a>                                                                             |
| HFC134a (R134a) system identification .....      | <a href="#">ATC-7</a>                                                                             |
| HFC134a (R134a) system precaution .....          | <a href="#">ATC-5</a>                                                                             |
| HFC134a (R134a) system service procedure         | <a href="#">ATC-162</a>                                                                           |
| HFC134a (R134a) system service tools .....       | <a href="#">ATC-14</a>                                                                            |
| HFC134a system service equipment precaution      | <a href="#">ATC-11</a>                                                                            |
| High and low reverse clutch solenoid valve ....  | <a href="#">AT-163</a> , <a href="#">AT-166</a>                                                   |
| Horn .....                                       | <a href="#">WW-56</a>                                                                             |
| HORN - Wiring diagram .....                      | <a href="#">WW-56</a>                                                                             |
| How to erase DTC for OBD system .....            | <a href="#">EC-62</a>                                                                             |
| HSEAT - Wiring diagram .....                     | <a href="#">SE-91</a>                                                                             |

## I

|                                      |                                                   |
|--------------------------------------|---------------------------------------------------|
| I/MIRR - Wiring diagram .....        | <a href="#">GW-76</a>                             |
| IATS - Wiring diagram .....          | <a href="#">EC-162</a>                            |
| ICC - Wiring diagram .....           | <a href="#">ACS-20</a>                            |
| ICC/BS - Wiring diagram .....        | <a href="#">EC-527</a>                            |
| ICC/SW - Wiring diagram .....        | <a href="#">EC-512</a>                            |
| ICCBOF - Wiring diagram .....        | <a href="#">EC-614</a>                            |
| Identification plate .....           | <a href="#">GI-47</a>                             |
| Idle air volume learning .....       | <a href="#">EC-44</a>                             |
| Idle mixture ratio .....             | <a href="#">EC-33</a>                             |
| Idle speed .....                     | <a href="#">EC-33</a>                             |
| Idle speed control (ISC) .....       | <a href="#">EC-342</a> , <a href="#">EC-344</a>   |
| Ignition coil .....                  | <a href="#">EM-26</a> , <a href="#">EC-583</a>    |
| Ignition control system .....        | <a href="#">EC-583</a>                            |
| Ignition key hole illumination ..... | <a href="#">LT-129</a>                            |
| Ignition timing .....                | <a href="#">EC-33</a>                             |
| IGNSYS - Wiring diagram .....        | <a href="#">EC-584</a>                            |
| ILL - Wiring diagram .....           | <a href="#">LT-158</a>                            |
| Illumination .....                   | <a href="#">LT-152</a>                            |
| Illumination control .....           | <a href="#">LT-152</a> , <a href="#">LT-169</a>   |
| In vehicle sensor .....              | <a href="#">ATC-128</a> , <a href="#">ATC-137</a> |

|                                                                |                                                   |
|----------------------------------------------------------------|---------------------------------------------------|
| In-cabin Microfilter .....                                     | <a href="#">MA-20</a>                             |
| INJECT - Wiring diagram .....                                  | <a href="#">EC-596</a>                            |
| Injector .....                                                 | <a href="#">EC-595</a>                            |
| Input clutch solenoid valve .....                              | <a href="#">AT-145</a> , <a href="#">AT-148</a>   |
| Instrument panel .....                                         | <a href="#">IP-10</a>                             |
| Instrument panel speaker .....                                 | <a href="#">AV-46</a>                             |
| INT/L - Wiring diagram .....                                   | <a href="#">LT-135</a>                            |
| Intake air temperature sensor .....                            | <a href="#">EC-161</a> , <a href="#">EC-181</a>   |
| Intake door control linkage adjustment .                       | <a href="#">ATC-78</a> , <a href="#">ATC-80</a>   |
| Intake door motor .....                                        | <a href="#">ATC-76</a> , <a href="#">ATC-151</a>  |
| Intake manifold .....                                          | <a href="#">EM-15</a>                             |
| Intake sensor .....                                            | <a href="#">ATC-133</a> , <a href="#">ATC-139</a> |
| Intelligent cruise control (ICC) system .....                  | <a href="#">ACS-6</a>                             |
| Interior .....                                                 | <a href="#">EI-34</a>                             |
| Interior lamp .....                                            | <a href="#">LT-129</a>                            |
| Interior lamp on-off control .....                             | <a href="#">LT-129</a>                            |
| Internal gear (Transfer) .....                                 | <a href="#">TF-127</a>                            |
| IPDM (Intelligent power distribution module engine room) ..... | <a href="#">PG-17</a>                             |
| IVIS (Infiniti vehicle immobilizer system) precautions ...     | <a href="#">GI-3</a>                              |

## J

|                          |                       |
|--------------------------|-----------------------|
| Jacking points .....     | <a href="#">GI-40</a> |
| Junction box (J/B) ..... | <a href="#">PG-76</a> |

## K

|                                                        |                        |
|--------------------------------------------------------|------------------------|
| Key illumination .....                                 | <a href="#">LT-129</a> |
| Keyless entry system - See Multi-remote control system | <a href="#">BL-44</a>  |
| Knock sensor (KS) .....                                | <a href="#">EC-250</a> |
| KS - Wiring diagram .....                              | <a href="#">EC-251</a> |

## L

|                                                         |                                                 |
|---------------------------------------------------------|-------------------------------------------------|
| Length (Dimensions) .....                               | <a href="#">GI-49</a>                           |
| License lamp .....                                      | <a href="#">LT-108</a>                          |
| Lifting points .....                                    | <a href="#">GI-41</a>                           |
| Line pressure solenoid valve .....                      | <a href="#">AT-124</a>                          |
| Line pressure switch (Transfer) .....                   | <a href="#">TF-95</a>                           |
| Line pressure test (A/T) .....                          | <a href="#">AT-59</a>                           |
| Liquid gasket application .....                         | <a href="#">LU-2</a> , <a href="#">FFD-2</a>    |
| Location of electrical units .....                      | <a href="#">PG-64</a>                           |
| Low coast brake solenoid valve .....                    | <a href="#">AT-169</a> , <a href="#">AT-172</a> |
| Low tire pressure warning system .....                  | <a href="#">WT-7</a>                            |
| Low tire pressure warning system - trouble diagnoses    | <a href="#">WT-10</a>                           |
| Low tire pressure warning system - Wiring diagram ..... | <a href="#">WT-10</a>                           |
| Lubricant (R134a) A/C .....                             | <a href="#">ATC-22</a>                          |
| Lubricants .....                                        | <a href="#">MA-10</a>                           |
| Lubrication circuit (engine) .....                      | <a href="#">LU-5</a>                            |
| Lubrication oil A/C .....                               | <a href="#">ATC-22</a>                          |
| Lubrication-locks, hinges and hood latches .....        | <a href="#">MA-30</a>                           |

# ALPHABETICAL INDEX

## M

|                                             |                                                   |
|---------------------------------------------|---------------------------------------------------|
| MAFS - Wiring diagram .....                 | <a href="#">EC-149</a> , <a href="#">EC-156</a>   |
| Magnet clutch .....                         | <a href="#">ATC-104</a> , <a href="#">ATC-167</a> |
| MAIN - Wiring diagram .....                 | <a href="#">EC-128</a>                            |
| Main oil pump (Transfer) .....              | <a href="#">TF-122</a>                            |
| Mainshaft (Transfer) .....                  | <a href="#">TF-116</a>                            |
| Maintenance (engine)Schedule 1 .....        | <a href="#">MA-6</a>                              |
| Maintenance (engine)Schedule 2 .....        | <a href="#">MA-8</a>                              |
| Major overhaul (Final drive) .....          | <a href="#">FFD-14</a> , <a href="#">RFD-13</a>   |
| Major overhaul (Transfer) .....             | <a href="#">TF-110</a>                            |
| Malfunction indicator lamp (MIL) .....      | <a href="#">EC-63</a>                             |
| Map lamp .....                              | <a href="#">LT-129</a>                            |
| Mass air flow sensor (MAFS) .....           | <a href="#">EC-146</a> , <a href="#">EC-154</a>   |
| Meter .....                                 | <a href="#">DI-5</a>                              |
| METER - Wiring diagram .....                | <a href="#">DI-10</a>                             |
| MIL data link connectors circuit .....      | <a href="#">EC-631</a>                            |
| MIL/DL - Wiring diagram .....               | <a href="#">EC-631</a>                            |
| MIRROR - Wiring diagram .....               | <a href="#">GW-99</a>                             |
| Misfire .....                               | <a href="#">EC-243</a>                            |
| Mode door control linkage adjustment .....  | <a href="#">ATC-65</a>                            |
| Mode door motor .....                       | <a href="#">ATC-63</a> , <a href="#">ATC-152</a>  |
| Model variation .....                       | <a href="#">GI-46</a>                             |
| Multiport fuel injection (MFI) system ..... | <a href="#">EC-26</a>                             |
| Multiport fuel injection precautions .....  | <a href="#">GI-6</a>                              |
| Multi-remote control system .....           | <a href="#">BL-44</a>                             |

## N

|                                                      |                        |
|------------------------------------------------------|------------------------|
| NATS - Wiring diagram .....                          | <a href="#">BL-141</a> |
| NAVI - Wiring diagram .....                          | <a href="#">AV-79</a>  |
| NAVI Control Unit .....                              | <a href="#">AV-157</a> |
| Neutral-4LO switch .....                             | <a href="#">TF-96</a>  |
| Nissan torque demand (NTD) control system ....       | <a href="#">EC-29</a>  |
| NVH troubleshooting (AX) .....                       | <a href="#">FAX-4</a>  |
| NVH troubleshooting (EM) .....                       | <a href="#">EM-9</a>   |
| NVH troubleshooting (Final drive) .....              | <a href="#">RFD-5</a>  |
| NVH troubleshooting (Propeller shaft) .....          | <a href="#">PR-3</a>   |
| NVH troubleshooting (RAX) .....                      | <a href="#">RAX-4</a>  |
| NVH troubleshooting (RSU) .....                      | <a href="#">RSU-5</a>  |
| NVH troubleshooting (ST) .....                       | <a href="#">PS-5</a>   |
| NVH troubleshooting (WT)NVH troubleshooting (WT) .   | <a href="#">WT-3</a>   |
| NVIS (Nissan vehicle immobilizer system) precautions | <a href="#">GI-3</a>   |

## O

|                               |                                                                                                      |
|-------------------------------|------------------------------------------------------------------------------------------------------|
| O2H2B1 - Wiring diagram ..... | <a href="#">EC-140</a>                                                                               |
| O2H2B2 - Wiring diagram ..... | <a href="#">EC-142</a>                                                                               |
| O2S2B1 - Wiring diagram ..    | <a href="#">EC-188</a> , <a href="#">EC-199</a> , <a href="#">EC-386</a> ,<br><a href="#">EC-398</a> |
| O2S2B2 - Wiring diagram ..    | <a href="#">EC-190</a> , <a href="#">EC-201</a> , <a href="#">EC-388</a> ,<br><a href="#">EC-400</a> |
| Oil cooler (engine) .....     | <a href="#">LU-11</a>                                                                                |
| Oil filter .....              | <a href="#">LU-10</a>                                                                                |
| Oil filter (Transfer) .....   | <a href="#">TF-107</a>                                                                               |
| Oil pan (engine) .....        | <a href="#">EM-22</a>                                                                                |
| Oil pressure (engine) .....   | <a href="#">LU-7</a>                                                                                 |

|                                                   |                                                |
|---------------------------------------------------|------------------------------------------------|
| Oil pressure relief valve (engine) .....          | <a href="#">LU-5</a>                           |
| Oil pump (engine) .....                           | <a href="#">LU-13</a>                          |
| Oil seal replacement (engine) .....               | <a href="#">EM-56</a>                          |
| Oil seal replacement (front of final drive) ..... | <a href="#">FFD-8</a> , <a href="#">RFD-6</a>  |
| Oil seal replacement (side of final drive) .....  | <a href="#">FFD-10</a> , <a href="#">RFD-8</a> |
| On board diagnostic system .....                  | <a href="#">EC-49</a>                          |
| ORVR (On-board Refueling Vapor Recovery) .....    | <a href="#">EC-640</a>                         |
| Overheat .....                                    | <a href="#">EC-410</a>                         |

## P

|                                                   |                                                 |
|---------------------------------------------------|-------------------------------------------------|
| P/SCKT - Wiring diagram .....                     | <a href="#">WW-54</a>                           |
| Pantograph jack .....                             | <a href="#">GI-40</a>                           |
| Park/Neutral position switch .....                | <a href="#">EC-546</a>                          |
| Park/neutral position switch (A/T) .....          | <a href="#">AT-109</a>                          |
| Parking brake control .....                       | <a href="#">PB-4</a>                            |
| Parking lamp .....                                | <a href="#">LT-108</a>                          |
| PCV (positive crankcase ventilation) .....        | <a href="#">EC-645</a>                          |
| Periodic maintenance .....                        | <a href="#">MA-6</a>                            |
| Personal lamp .....                               | <a href="#">LT-129</a>                          |
| PGC/V - Wiring diagram .....                      | <a href="#">EC-287</a> , <a href="#">EC-498</a> |
| PHASE - Wiring diagram .....                      | <a href="#">EC-261</a>                          |
| Pinion bearing preload diff. ....                 | <a href="#">RFD-21</a>                          |
| Piston pin inspection .....                       | <a href="#">EM-89</a>                           |
| Piston ring inspection .....                      | <a href="#">EM-90</a>                           |
| Piston to bore clearance .....                    | <a href="#">EM-94</a>                           |
| Planetary carrier (Transfer) .....                | <a href="#">TF-127</a>                          |
| PNP/SW - Wiring diagram .....                     | <a href="#">EC-548</a>                          |
| POS - Wiring diagram .....                        | <a href="#">EC-256</a>                          |
| POWER - Wiring diagram .....                      | <a href="#">PG-6</a>                            |
| Power seat .....                                  | <a href="#">SE-88</a>                           |
| Power steering fluid level .....                  | <a href="#">MA-29</a>                           |
| Power steering gear .....                         | <a href="#">PS-15</a>                           |
| Power steering oil pump .....                     | <a href="#">PS-26</a>                           |
| Power steering pressure (PSP) sensor .....        | <a href="#">EC-346</a>                          |
| Power steering system bleeding .....              | <a href="#">PS-6</a>                            |
| Power supply routing .....                        | <a href="#">PG-4</a>                            |
| Power window .....                                | <a href="#">GW-15</a>                           |
| PRE/SE - Wiring diagram .....                     | <a href="#">EC-304</a> , <a href="#">EC-310</a> |
| Precautions (General) .....                       | <a href="#">GI-4</a>                            |
| Precautions in repairing high strength steel .... | <a href="#">BL-192</a>                          |
| Pressure switch 1 .....                           | <a href="#">AT-154</a> , <a href="#">AT-175</a> |
| Pressure switch 2 .....                           | <a href="#">AT-172</a>                          |
| Pressure switch 3 .....                           | <a href="#">AT-148</a> , <a href="#">AT-178</a> |
| Pressure switch 5 .....                           | <a href="#">AT-160</a> , <a href="#">AT-181</a> |
| Pressure switch 6 .....                           | <a href="#">AT-166</a> , <a href="#">AT-184</a> |
| Pressure test (A/T) .....                         | <a href="#">AT-59</a>                           |
| Propeller shaft .....                             | <a href="#">PR-4</a> , <a href="#">PR-8</a>     |
| Propeller shaft inspection .....                  | <a href="#">MA-24</a>                           |
| Propeller shaft on vehicle service .....          | <a href="#">PR-8</a>                            |
| Propeller shaft vibration .....                   | <a href="#">PR-4</a> , <a href="#">PR-8</a>     |
| PS/SEN - Wiring diagram .....                     | <a href="#">EC-347</a>                          |

## R

|                                      |                       |
|--------------------------------------|-----------------------|
| R/VIEW - Wiring diagram .....        | <a href="#">DI-75</a> |
| Radiator .....                       | <a href="#">CO-10</a> |
| Rear Audio Remote Control Unit ..... | <a href="#">AV-47</a> |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
D>

DX

## J

K

## ALPHABETICAL INDEX

|                                                                                            |                                                                  |
|--------------------------------------------------------------------------------------------|------------------------------------------------------------------|
| Torque convertor clutch solenoid valve ... <a href="#">AT-118</a> , <a href="#">AT-121</a> | Wheel bearing (rear) ..... <a href="#">RAX-5</a>                 |
| Tow truck towing ..... <a href="#">GI-42</a>                                               | Wheel hub (rear) ..... <a href="#">RAX-5</a>                     |
| Towing point ..... <a href="#">GI-43</a>                                                   | Wheel size ..... <a href="#">GI-49</a>                           |
| TPS1 - Wiring diagram ..... <a href="#">EC-238</a>                                         | Wheelbase (Dimensions) ..... <a href="#">GI-49</a>               |
| TPS2 - Wiring diagram ..... <a href="#">EC-173</a>                                         | Width (Dimensions) ..... <a href="#">GI-49</a>                   |
| TPS3 - Wiring diagram ..... <a href="#">EC-571</a>                                         | WINDOW - Wiring diagram ..... <a href="#">GW-22</a>              |
| Traction control system - Wiring diagram ..... <a href="#">BRC-16</a>                      | Window, door ..... <a href="#">GW-69</a> , <a href="#">GW-72</a> |
| Transfer control device ..... <a href="#">TF-104</a>                                       | Windshield ..... <a href="#">GW-11</a>                           |
| Transfer control unit inspection table ..... <a href="#">TF-55</a>                         | WIP/R - Wiring diagram ..... <a href="#">WW-37</a>               |
| Transfer dropping resistor ..... <a href="#">TF-96</a>                                     | WIPER - Wiring diagram ..... <a href="#">WW-9</a>                |
| Transfer fluid temperature sensor ..... <a href="#">TF-95</a>                              | Wiper, front ..... <a href="#">WW-4</a>                          |
| Transfer motor ..... <a href="#">TF-106</a>                                                | Wiper, rear ..... <a href="#">WW-33</a>                          |
| Transfer motor relay ..... <a href="#">TF-97</a>                                           | Wiring Diagram (Cell code) list ..... <a href="#">PG-61</a>      |
| Transfer oil replacement ..... <a href="#">MA-24</a>                                       | Wiring diagram (Transfer) ..... <a href="#">TF-18</a>            |
| Transfer serial number ..... <a href="#">GI-48</a>                                         | Wiring diagrams ..... <a href="#">GI-15</a>                      |
| Transmission serial number ..... <a href="#">GI-48</a>                                     | WT-T/WARN - Wiring diagram ..... <a href="#">WT-10</a>           |
| Tread-FR&RR (Dimensions) ..... <a href="#">GI-49</a>                                       |                                                                  |
| Trim ..... <a href="#">EI-34</a>                                                           |                                                                  |
| TRNSCV - Wiring diagram ..... <a href="#">BL-157</a>                                       |                                                                  |
| Trouble diagnoses ..... <a href="#">GI-11</a>                                              |                                                                  |
| Turbine revolution sensor ..... <a href="#">AT-134</a>                                     |                                                                  |
| TURN - Wiring diagram ..... <a href="#">LT-83</a>                                          |                                                                  |
| Turn signal lamp ..... <a href="#">LT-80</a>                                               |                                                                  |
| Two trip detection logic ..... <a href="#">EC-49</a>                                       |                                                                  |
| Two-pole lift ..... <a href="#">GI-41</a>                                                  |                                                                  |

### V

|                                                                               |
|-------------------------------------------------------------------------------|
| Vacuum hose (brake system) ..... <a href="#">BR-20</a>                        |
| Vacuum hose drawing (Engine control) ..... <a href="#">EC-24</a>              |
| Valve clearance ..... <a href="#">EM-52</a>                                   |
| Valve guide ..... <a href="#">EM-66</a>                                       |
| Vanity mirror lamp ..... <a href="#">LT-129</a>                               |
| VDC (vehicle dynamics control) ..... <a href="#">BRC-7</a>                    |
| VDC -Wiring diagram ..... <a href="#">BRC-16</a>                              |
| Vehicle identification number ..... <a href="#">GI-47</a>                     |
| Vehicle recovery (freeing a stuck vehicle) ..... <a href="#">GI-43</a>        |
| Vehicle speed sensor (VSS) ..... <a href="#">EC-340</a>                       |
| VEHSEC - Wiring diagram ..... <a href="#">BL-80</a>                           |
| VENT/V - Wiring diagram ..... <a href="#">EC-294</a> , <a href="#">EC-506</a> |
| Video Monitor ..... <a href="#">AV-60</a>                                     |
| Viscosity number (SAE) ..... <a href="#">MA-11</a>                            |

### W

|                                                     |
|-----------------------------------------------------|
| W/ANT - Wiring diagram ..... <a href="#">AV-49</a>  |
| Wait detection switch ..... <a href="#">TF-96</a>   |
| WARN - Wiring diagram ..... <a href="#">DI-32</a>   |
| Warning chime ..... <a href="#">DI-43</a>           |
| Warning lamps ..... <a href="#">DI-31</a>           |
| Washer, front ..... <a href="#">WW-4</a>            |
| Washer, rear ..... <a href="#">WW-33</a>            |
| Water pump ..... <a href="#">CO-15</a>              |
| Water temperature gauge ..... <a href="#">DI-5</a>  |
| Wheel alignment (front) ..... <a href="#">FSU-6</a> |
| Wheel alignment (rear) ..... <a href="#">RSU-27</a> |
| Wheel balance ..... <a href="#">MA-25</a>           |
| Wheel bearing (front) ..... <a href="#">FAX-5</a>   |