

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve	TF-94 , TF-152 , TF-165
4WD - Wiring diagram	TF-24
4WD shift switch	TF-66
4WD solenoid valve	TF-90 , TF-152 , TF-165
4WD system description	TF-15
4WD system diagram	TF-19

A

A/C air flow	ATC-29
A/C compressor clutch removal and installation ..	ATC-180
A/C compressor mounting	ATC-179
A/C compressor precaution	ATC-11
A/C compressor special service tool	ATC-14
A/C control operation (auto A/C)	ATC-26
A/C diagnostic work flow (auto A/C)	ATC-132
A/C evaporator	ATC-186
A/C HFC134a (R134a) system identification	ATC-7
A/C HFC134a (R134a) system precaution	ATC-5
A/C HFC134a (R134a) system service procedure	ATC-175
A/C HFC134a (R134a) system service tools ...	ATC-14
A/C HFC134a system service equipment precaution ...	ATC-11
A/C lubricant (R134a)	ATC-22
A/C lubrication oil	ATC-22
A/C operational check	ATC-57 , ATC-60
A/C self-diagnoses (auto A/C)	ATC-55 , ATC-132
A/C service data specification	ATC-193
A/C trouble diagnoses (auto A/C)	ATC-33
A/C, A - Wiring diagram	ATC-43
A/T fluid checking	AT-13 , AT-50 , MA-22
A/T fluid cooler cleaning	AT-13
A/T fluid replacement	AT-13 , MA-24
A/T fluid temperature sensor	AT-126
A/T IND - Wiring diagram	DI-40
A/T indicator	DI-40
A/T shift lock system	AT-222
A/T trouble diagnoses	AT-41
A/T Wiring diagram AT - CAN	AT-96
A/T Wiring diagram AT - FTS	AT-127
A/T Wiring diagram AT - MAIN	AT-168
A/T Wiring diagram AT - NONDTC	AT-177
A/T Wiring diagram AT - PNP/SW	AT-105
A/T Wiring diagram AT - STSIG	AT-100
A/T Wiring diagram AT - VSS A/T	AT-110
ABS - Wiring diagram	BRC-16
ABS (anti-lock brake system)	BRC-7
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor .	EC-591 , EC-597 , EC-611
Accelerator pedal released position learning	EC-90
AF1B1-Wiring diagram	EC-461 , EC-470 , EC-479 , EC-489 , EC-500 , EC-510 , EC-522
AF1B2-Wiring diagram	EC-463 , EC-472 , EC-481 , EC-491 , EC-502 , EC-512 , EC-524

AF1HB1-Wiring diagram	EC-387
AF1HB2-Wiring diagram	EC-389
Aiming adjustment	LT-30 , LT-78
Air bag	SRS-3
Air cleaner and air duct	EM-14
Air cleaner filter replacement	MA-16
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-174 , EC-183
Air fuel ratio sensor 1 ..	EC-459 , EC-468 , EC-477 , EC-487 , EC-497 , EC-507 , EC-519
Air fuel ratio sensor 1 heater	EC-386
Air mix. door motor	ATC-70
Ambient sensor	ATC-137 , ATC-148
Angular tightening application	EM-3
APPS1 - Wiring diagram	EC-593
APPS2 - Wiring diagram	EC-599
APPS3 - Wiring diagram	EC-613
ASC/BS - Wiring diagram	EC-571
ASC/SW - Wiring diagram	EC-554
ASCB OF - Wiring diagram	EC-658
ASCD	EC-29
ASCD (automatic speed control device)	ACS-3
ASCD brake switch	EC-569 , EC-657
ASCD indicator lamp	EC-664
ASCD steering switch	EC-552
ASCIND - Wiring diagram	EC-665
ATP switch	TF-107 , TF-110 , TF-115
AUDIO - Wiring diagram	AV-10
AUT/DP - Wiring diagram	SE-20
Auto air conditioner - Wiring diagram	ATC-43
Auto anti-dazzling inside mirror	GW-75 , GW-76
Autolamp	LT-47
Automatic amplifier	ATC-61
Automatic drive positioner	SE-11
Automatic transmission number	GI-48
AV and NAVI control unit	AV-63
AV communication line	AV-87

B

Back door	BL-99
Back door trim	EI-32
Back sonar	DI-58
BACK/L - Wiring diagram	LT-106
Back-up lamp	LT-106
Ball joint (front)	FSU-15
Basic inspection	EC-72
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-12 , SC-19
BCM (Body control module)	BCS-3
Block heater	EM-73
Blower motor	ATC-93 , ATC-152
Body alignment	BL-172
Body component parts	BL-161
Body construction	BL-171
Body exterior paint color	BL-160
Body mounting	BL-159

ALPHABETICAL INDEX

Body repair	BL-160
Body sealing	BL-168
Brake booster	BR-16
Brake fluid level	MA-28
Brake hydraulic line	BR-11
Brake inspection	MA-28
Brake lines and cables inspection	MA-28
Brake master cylinder	BR-14
Brake switch	EC-569 , EC-586
BRK/SW - Wiring diagram	EC-587
Bulb specifications	LT-170
Bumper, front	EI-13
Bumper, rear	EI-15

C

Camshaft	EM-43
Camshaft inspection	EM-46
Camshaft position sensor (PHASE)	EC-291
CAN - Wiring diagram	EC-164 , LAN-18 , LAN-52 , LAN-92 , LAN-128
CAN (Controller Area Network)	BRC-10 , SE-17 , LAN-16 , LAN-50 , LAN-90 , LAN-126
CAN communication ...	EC-31 , EC-163 , AT-95 , TF-20 , TF-113 , BRC-10 , SE-17 , LAN-16 , LAN-50 , LAN-90 , LAN-126
Canister-See EVAP canister	EC-35
Center case (Transfer)	TF-152 , TF-165
CHARGE - Wiring diagram	SC-18
Charging system	SC-17
Chassis and body maintenance	MA-21
Chassis and body maintenanceSchedule 1	MA-8
Chassis and body maintenanceSchedule 2	MA-10
CHIME - Wiring diagram	DI-44
Circuit breaker	PG-66
Clock	DI-69
CLOCK - Wiring diagram	DI-69
Closed loop control	EC-25
Closed loop control (Bank 1)	EC-437
Closed loop control (Bank 2)	EC-437
Clutch drum (Transfer)	TF-152 , TF-165
Clutch pressure switch (Transfer)	TF-152 , TF-165
Coil spring (front)	FSU-10
Collision diagnosis	SRS-61
Combination lamp, front, removal and installation .	LT-32
Combination lamp, rear, removal and installation ..	LT-122
Combination meter	DI-5
Combination switch	LT-97
COMBSW - Wiring diagram	LT-97
COMM - Wiring diagram	AV-87
COMPAS - Wiring diagram	DI-27
Compass	DI-26
Component Location (auto A/C)	ATC-39
Compressor clutch removal and installation .	ATC-180
Compressor mounting	ATC-179
Compressor precaution	ATC-11
Compressor special service tool	ATC-14

Condenser	ATC-185
Connecting rod	EM-91
Connecting rod bearing clearance	EM-91
Connecting rod bushing clearance	EM-91
Console box - See Instrument panel	IP-10
CONSULT for VDC	BRC-28
CONSULT general information	GI-37
CONSULT-II for engine	EC-126
Control units (terminal arrangement)	PG-71
Control valve (A/T)	AT-35
Control valve (Transfer)	TF-152 , TF-165
Controller Area Network (CAN)	BRC-10 , SE-17 , LAN-16 , LAN-50 , LAN-90 , LAN-126
Converter housing installation	AT-246 , AT-249
COOL/F - Wiring diagram	EC-443
Coolant mixture ratio	MA-12
Coolant replacement	MA-13
Cooling circuit (engine)	CO-8
Cooling fan	CO-15
Cooling fan control	EC-440
Cooling fan motor	EC-449
Cooling unit (A/C evaporator)	ATC-156 , ATC-186
Corrosion protection	BL-165
Crankcase ventilation system - See Positive crankcase ventilation	EC-45
Crankshaft	EM-74
Crankshaft position sensor (POS)	EC-284
Crash zone sensor	SRS-56
CVT shift lock system - Wiring diagram	AT-223
Cylinder block	EM-73
Cylinder block boring	EM-94

D

D/LOCK - Wiring diagram	BL-19
Data link connector for Consult	EC-128 , EC-140
Daytime light system	LT-33
Daytime running light - See Daytime light system ..	LT-33
Diagnosis sensor unit	SRS-59
Diagnostic trouble code (DTC) for OBD system .	EC-8 , EC-53
Diagnostic trouble code (DTC) inspection priority chart	EC-101
Differential carrier assembly	RFD-12
Differential carrier disassembly	RFD-14
Differential gear oil replacement	MA-25
Dimensions	GI-49
Direct clutch solenoid valve	AT-148 , AT-150
Display and amp.assembly	ATC-61
Display Control Unit	AV-158
Dome light - See Interior lamp	LT-129
Door glass	GW-68 , GW-71
Door lock	BL-131
Door mirror lamp	LT-129
Door trim	EI-32
Door, front	BL-128 , GW-68
Door, rear	BL-128 , GW-71
Drive belt	EM-12

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Drive chain (Transfer) [TF-147](#), [TF-174](#)
 Drive pinion diff. inspection [RFD-13](#)
 Drive pinion height [RFD-18](#)
 Drive shaft (rear) [RAX-7](#)
 Driver air bag [SRS-46](#)
 DTC work support [EC-136](#)
 DTRL - Wiring diagram [LT-37](#)
 Duct and grilles [ATC-170](#)
 DVD Player [AV-60](#)

E

ECM input/output signal [EC-117](#), [EC-141](#)
 ECM power supply [EC-157](#), [EC-393](#)
 ECM relay [EC-157](#)
 ECM/PW - Wiring diagram [EC-394](#)
 ECTS - Wiring diagram [EC-197](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-397](#), [EC-399](#)
 Electrical load signal circuit [EC-648](#)
 Electrical units location [PG-63](#)
 Electronic ignition (EI) system [EC-26](#)
 Engine control circuit diagram [EC-115](#)
 Engine control component parts location [EC-108](#)
 Engine control module (ECM) [EC-383](#)
 Engine control system diagram [EC-23](#)
 Engine coolant [CO-10](#)
 Engine coolant temperature sensor (ECTS) .. [EC-195](#),
[EC-208](#)
 Engine fail-safe system [EC-103](#)
 Engine oil [LU-7](#)
 Engine oil filter replacement [MA-17](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacement [MA-17](#)
 Engine removal [EM-69](#)
 Engine room cover [EM-11](#)
 Engine serial number [GI-48](#)
 ETC1 - Wiring diagram [EC-400](#)
 ETC2 - Wiring diagram [EC-407](#)
 ETC3 - Wiring diagram [EC-411](#)
 EVAP canister [EC-35](#)
 EVAP canister purge volume control solenoid valve
[EC-318](#), [EC-531](#)
 EVAP canister vent control valve [EC-325](#), [EC-539](#)
 EVAP control system (small leak) diagnosis .. [EC-309](#),
[EC-349](#), [EC-357](#)
 EVAP control system pressure sensor [EC-332](#), [EC-335](#),
[EC-341](#)
 EVAP control system purge flow monitoring diagnosis
[EC-304](#)
 EVAP vapor lines inspection [MA-20](#)
 Evaporative emission (EVAP) system [EC-32](#)
 Evaporator [ATC-186](#)
 Exhaust manifold [EM-19](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#)
 Expansion valve [ATC-188](#)

F

F/FOG - Wiring diagram [LT-71](#)
 F/PUMP - Wiring diagram [EC-638](#)
 Final drive pre-inspection [FFD-14](#), [RFD-13](#)
 Final drive removal and installation .. [FFD-11](#), [RFD-10](#)
 Flow charts [GI-27](#)
 Fluid temperature sensor (A/T) [AT-126](#)
 Fluids [MA-11](#)
 Fluorescent leak detector [ATC-189](#)
 Fog lamp, front [LT-69](#)
 Foot lamp [LT-130](#)
 Freeze frame data [EC-54](#), [EC-130](#)
 Front brake solenoid valve [AT-144](#), [AT-146](#)
 Front bumper [EI-13](#)
 Front case (Transfer) [TF-147](#), [TF-174](#)
 Front combination lamp removal and installation [LT-32](#)
 Front door [BL-128](#), [BL-131](#), [GW-68](#)
 Front Door Trim [EI-32](#)
 Front drive shaft (Transfer) [TF-147](#), [TF-174](#)
 Front fog lamp [LT-69](#)
 Front passenger air bag [SRS-51](#)
 Front seat [SE-97](#)
 Front seat belt [SB-3](#)
 Front seat belt pre-tensioner [SRS-3](#), [SRS-58](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)
 FTTS - Wiring diagram [EC-255](#), [EC-260](#)
 Fuel cut control (at no load high engine speed) [EC-27](#)
 Fuel filter replacement [FL-5](#)
 Fuel gauge [DI-5](#)
 Fuel injection system (Bank 1) [EC-236](#), [EC-245](#)
 Fuel injection system (Bank 2) [EC-236](#), [EC-245](#)
 Fuel injector and fuel tube [EM-29](#)
 Fuel level sensor [EC-366](#), [EC-368](#), [EC-370](#)
 Fuel line inspection [FL-3](#)
 Fuel pressure check [EC-93](#)
 Fuel pressure release [EC-93](#)
 Fuel pump [EC-637](#)
 Fuel pump and gauge [FL-5](#)
 Fuel system [FL-3](#)
 Fuel tank [FL-9](#)
 Fuel tank temperature sensor [EC-253](#), [EC-259](#)
 Fuel tank vacuum relief valve [EC-35](#)
 FUEL B1 - Wiring diagram [EC-238](#), [EC-247](#)
 FUEL B2 - Wiring diagram [EC-239](#), [EC-248](#)
 Fuse [PG-66](#), [PG-77](#)
 Fuse and fusible link box [PG-77](#)
 Fuse block [PG-76](#)
 Fusible link [PG-66](#), [PG-77](#)

G

Garage jack and safety stand [GI-40](#)
 Gauges [DI-5](#)
 Generator [SC-17](#)
 Generic scan tool (GST) [EC-139](#)
 Glass [GW-11](#), [GW-68](#), [GW-71](#)
 Glove box lamp [LT-153](#)

ALPHABETICAL INDEX

GPS antenna [AV-62](#)
Grease [MA-11](#)
Ground distribution [PG-29](#)

H

H/AIM - Wiring diagram [LT-66](#)
Handling precautions for plastics [BL-187](#)
Harness connector [PG-67](#)
Harness layout [PG-39](#)
Hazard warning lamp [LT-80](#)
Headlamp aiming control [LT-66](#)
Headlamp leveler - See Headlamp aiming control . [LT-66](#)
Headlamp removal and installation [LT-32](#)
Heated oxygen sensor 2 (bank 1) ... [EC-216](#), [EC-225](#), [EC-415](#), [EC-426](#)
Heated oxygen sensor 2 (bank 2) ... [EC-216](#), [EC-225](#), [EC-415](#), [EC-426](#)
Heated oxygen sensor 2 heater (bank 1) [EC-166](#)
Heated oxygen sensor 2 heater (bank 2) [EC-166](#)
Heated seat [SE-90](#)
Heater and cooling unit (Heater core) . [ATC-156](#), [ATC-160](#)
Heater unit (heater core) [ATC-156](#), [ATC-160](#)
Height (Dimensions) [GI-49](#)
HFC134a (R134a) system identification [ATC-7](#)
HFC134a (R134a) system precaution [ATC-5](#)
HFC134a (R134a) system service procedure [ATC-175](#)
HFC134a (R134a) system service tools [ATC-14](#)
HFC134a system service equipment precaution [ATC-11](#)
High & low reverse clutch solenoid valve . [AT-152](#), [AT-154](#)
Homelink universal transceiver [BL-156](#)
Horn [WW-58](#)
HORN - Wiring diagram [WW-58](#)
How to erase DTC for OBD system [EC-62](#)
HSEAT - Wiring diagram [SE-92](#)

I

I/MIRR - Wiring diagram [GW-75](#)
IATS - Wiring diagram [EC-192](#)
ICC - Wiring diagram [ACS-20](#)
ICC/BS - Wiring diagram [EC-562](#)
ICC/SW - Wiring diagram [EC-547](#)
ICCBOF - Wiring diagram [EC-650](#)
Identification plate [GI-47](#)
Idle air volume learning [EC-91](#)
Idle mixture ratio [EC-79](#)
Idle speed [EC-72](#), [EC-77](#)
Idle speed control (ISC) [EC-374](#), [EC-376](#)
Ignition coil [EM-26](#), [EC-619](#)
Ignition control system [EC-619](#)
Ignition key hole illumination [LT-129](#)
Ignition timing [EC-72](#), [EC-77](#)
IGNSYS - Wiring diagram [EC-620](#)
ILL - Wiring diagram [LT-158](#)

Illumination [LT-152](#)
In vehicle sensor [ATC-140](#), [ATC-149](#)
INJECT - Wiring diagram [EC-632](#)
Injector [EC-631](#)
Input clutch solenoid valve [AT-140](#), [AT-142](#)
Instrument panel [IP-10](#)
Instrument panel speaker [AV-46](#)
Intake air temperature sensor [EC-191](#), [EC-211](#)
Intake door control linkage adjustment . [ATC-85](#), [ATC-88](#)
Intake door motor [ATC-83](#), [ATC-164](#)
Intake manifold [EM-15](#)
Intake sensor [ATC-145](#), [ATC-151](#)
Integrated homelink transmitter - See Homelink universal transceiver [BL-156](#)
Intelligent cruise control (ICC) system [ACS-6](#)
Interior [EI-35](#)
Interior lamp [LT-129](#)
Interior lamp on-off control [LT-130](#)
Internal gear (Transfer) [TF-147](#), [TF-174](#)
IPDM (Intelligent power distribution module engine room) [PG-17](#)
IVIS (Infiniti vehicle immobilizer system) [BL-137](#)
IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-3](#)

J

Jacking points [GI-40](#)
Junction box (J/B) [PG-76](#)

K

Key illumination [LT-130](#)
KEYLES - Wiring diagram [BL-49](#)
Knock sensor (KS) [EC-279](#)
KS - Wiring diagram [EC-280](#)

L

Length (Dimensions) [GI-49](#)
License lamp [LT-108](#)
Lifting points [GI-41](#)
Line pressure solenoid valve [AT-119](#)
Line pressure switch (Transfer) [TF-152](#), [TF-165](#)
Line pressure test (A/T) [AT-51](#)
Location of electrical units [PG-63](#)
Low coast brake solenoid valve [AT-156](#), [AT-158](#)
Low tire pressure warning system [WT-8](#)
Low tire pressure warning system - trouble diagnoses [WT-11](#)
Low tire pressure warning system - Wiring diagram [WT-11](#)
Lubricant (R134a) A/C [ATC-22](#)
Lubricants [MA-11](#)
Lubrication circuit (engine) [LU-5](#)
Lubrication oil A/C [ATC-22](#)
Lubrication-locks, hinges and hood latches [MA-31](#)

ALPHABETICAL INDEX

M

MAFS - Wiring diagram [EC-177](#), [EC-185](#)
Magnet clutch [ATC-115](#), [ATC-180](#)
MAIN - Wiring diagram [EC-157](#)
Main oil pump (Transfer) [TF-152](#), [TF-165](#)
Mainshaft (Transfer) [TF-152](#), [TF-165](#)
Maintenance (engine)Schedule 1 [MA-7](#)
Maintenance (engine)Schedule 2 [MA-9](#)
Major overhaul (Final drive) [FFD-13](#), [RFD-14](#)
Major overhaul (Transfer) [TF-144](#)
Malfunction indicator lamp (MIL) [EC-64](#)
Map lamp [LT-130](#)
Mass air flow sensor (MAFS) [EC-174](#), [EC-183](#)
Meter [DI-5](#)
METER - Wiring diagram [DI-10](#)
MIL data link connectors circuit [EC-667](#)
MIL/DL - Wiring diagram [EC-667](#)
Misfire [EC-271](#)
Mode door control linkage adjustment [ATC-66](#)
Mode door motor [ATC-64](#), [ATC-165](#)
Model variation [GI-46](#)
Multiport fuel injection (MFI) system [EC-24](#)
Multiport fuel injection precautions [GI-6](#)
Multi-remote control system - See Remote keyless entry system [BL-44](#)

N

NATS - Wiring diagram [BL-140](#)
NAVI - Wiring diagram [AV-79](#)
NAVI Control Unit [AV-157](#)
Neutral-4LO switch [TF-62](#)
NVH troubleshooting (AX) [FAX-4](#)
NVH troubleshooting (EM) [EM-9](#)
NVH troubleshooting (Final drive) [RFD-5](#)
NVH troubleshooting (Propeller shaft) [PR-3](#)
NVH troubleshooting (RAX) [RAX-4](#)
NVH troubleshooting (RSU) [RSU-5](#)
NVH troubleshooting (ST) [PS-5](#)
NVH troubleshooting (Transfer) [TF-10](#)
NVH troubleshooting (WT)NVH troubleshooting (WT) .
[WT-4](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-168](#)
O2H2B2 - Wiring diagram [EC-170](#)
O2S2B1 - Wiring diagram .. [EC-218](#), [EC-228](#), [EC-418](#),
[EC-429](#)
O2S2B2 - Wiring diagram .. [EC-220](#), [EC-230](#), [EC-420](#),
[EC-431](#)
Oil cooler (engine) [LU-11](#)
Oil filter [LU-10](#)
Oil filter (Transfer) [TF-141](#)
Oil pan (engine) [EM-22](#)
Oil pressure (engine) [LU-7](#)

Oil pressure relief valve (engine) [LU-5](#)
Oil pump (engine) [LU-13](#)
Oil seal replacement (engine) [EM-55](#)
Oil seal replacement (front of final drive) [FFD-7](#), [RFD-6](#)
Oil seal replacement (side of final drive) [FFD-9](#), [RFD-8](#)
On board diagnostic system [EC-48](#)
ORVR (On-board Refueling Vapor Recovery) .. [EC-39](#)
Overheat [EC-440](#)

P

P/SCKT - Wiring diagram [WW-56](#)
Pantograph jack [GI-40](#)
Park/Neutral position switch [EC-581](#)
Park/neutral position switch (A/T) [AT-104](#)
Parking brake control [PB-4](#)
PCV (positive crankcase ventilation) [EC-45](#)
Periodic maintenance [MA-7](#)
Personal lamp [LT-130](#)
PGC/V - Wiring diagram [EC-320](#), [EC-533](#)
PHASE - Wiring diagram [EC-291](#)
Pinion bearing preload diff. [RFD-22](#)
Piston pin inspection [EM-89](#)
Piston ring inspection [EM-90](#)
Piston to bore clearance [EM-94](#)
Planetary carrier (Transfer) [TF-147](#), [TF-174](#)
PNP/SW - Wiring diagram [EC-583](#)
POS - Wiring diagram [EC-286](#)
POWER - Wiring diagram [PG-6](#)
Power door lock [BL-16](#)
Power seat [SE-89](#)
Power steering fluid level [MA-29](#)
Power steering gear [PS-15](#)
Power steering oil pump [PS-26](#)
Power steering pressure (PSP) sensor [EC-378](#)
Power steering system bleeding [PS-6](#)
Power supply routing [PG-4](#)
Power window [GW-15](#)
PRE/SE - Wiring diagram [EC-337](#), [EC-343](#)
Precautions (General) [GI-4](#)
Precautions in repairing high strength steel [BL-190](#)
Pressure switch 1 [AT-146](#), [AT-160](#)
Pressure switch 2 [AT-158](#)
Pressure switch 3 [AT-142](#), [AT-162](#)
Pressure switch 5 [AT-150](#), [AT-164](#)
Pressure switch 6 [AT-154](#), [AT-166](#)
Pressure test (A/T) [AT-51](#)
Propeller shaft [PR-4](#), [PR-8](#)
Propeller shaft inspection [MA-25](#)
Propeller shaft on vehicle service [PR-8](#)
Propeller shaft vibration [PR-4](#), [PR-8](#)
PS/SEN - Wiring diagram [EC-379](#)

R

R/VIEW - Wiring diagram [DI-74](#)
Radiator [CO-12](#)
Rear Audio Remote Control Unit [AV-47](#)
Rear axle [RAX-5](#)

ALPHABETICAL INDEX

Rear bumper	EI-15	SROOF - Wiring diagram	RF-13	
Rear case (Transfer)	TF-146 , TF-179	SRS - See Supplemental Restraint System	SRS-5	A
Rear combination lamp removal and installation ...	LT-122	SRS - Wiring diagram	SRS-12	
Rear cover packing replacement diff.	RFD-24	SRS Trouble diagnoses	SRS-8	B
Rear door	BL-128 , GW-71	Stabilizer bar (front)	FSU-12	
Rear seat	SE-104	Stabilizer bar (rear)	RSU-41	
Rear seat belt	SB-6	Stall test (A/T)	AT-50	C
Rear suspension	RSU-25	Standardized relay	PG-72	
Rear view monitor	DI-71	START - Wiring diagram	SC-11	
Rear washer	WW-35	Starting system	SC-10	
Rear window defogger	GW-77	Steering gear, linkage and transfer gear inspection	MA-29	D
Rear wiper	WW-35	Steering linkage	PS-15	
Refrigerant connection precaution	ATC-7	Steering wheel and column	PS-7	
Refrigerant discharging evacuating charging	ATC-175	Step lamp	LT-130	E
Refrigerant general precaution	ATC-6	Stop lamp	LT-103	
Refrigerant lines	ATC-175 , ATC-183 , ATC-184	Stop lamp switch	EC-569 , EC-586 , EC-657	
Refrigerant pressure sensor	EC-643 , ATC-185	STOP/L - Wiring diagram	LT-104	F
Relay box	PG-78	Strut (front)	FSU-10	
Remote keyless entry system	BL-44	Sub-oil pump (Transfer)	TF-152 , TF-165	
Removal and installation (A/T)	AT-244 , AT-247	Sun gear (Transfer)	TF-147 , TF-174	G
Removal and installation (Transfer)	TF-143	Sun roof, electric	RF-10	
Revolution sensor (A/T)	AT-108	Sunload sensor	ATC-143	
Ring gear diff. inspection	RFD-13	Sunroof	RF-23	
Road wheel size	GI-49	Supplemental Restraint System	SRS-5	H
Rocker cover	EM-33	Supplemental restraint system - Wiring diagram .	SRS-12	
Room lamp	LT-129	Symbols and abbreviations	GI-10 , GI-22	I
Room lamp - See Interior lamp	LT-129	Symptom matrix chart	EC-104	
ROOM/L - Wiring diagram	LT-135	System readiness test (SRT) code	EC-54	
RP/SEN - Wiring diagram	EC-644			J

S

SAE J1979 - Service \$01 - 09	EC-48
Seat belt inspection	SB-10 , MA-32
Seat belt pre-tensioner	SRS-58
Seat belt, front	SB-3
Seat belt, rear	SB-6
Seat, front	SE-97
Seat, rear	SE-104
Self-diagnosis (Transfer)	TF-50
SEN/PW - Wiring diagram	EC-455
SHIFT - Wiring diagram	AT-223
Shift control (Transfer)	TF-147 , TF-174
Shift lock system	AT-222
Shock absorber (front)	FSU-10
Shock absorber (rear)	RSU-34
Side air bag (satellite) sensor	SRS-57
Side bearing preload diff.	RFD-19
Side curtain air bag	SRS-54
Side trim	EI-35
SMJ (super multiple junction)	PG-74
SONAR - Wiring diagram	DI-61
Spare tire size	GI-49
Spark plug	EM-27
Spark plug replacement	MA-18
Specification value	EC-146
Speedometer	DI-5
Spiral cable	SRS-48

T

Tachometer	DI-5
Tail lamp	LT-108
TAIL/L - Wiring diagram	LT-110
TCM circuit diagram	AT-49
TCM inspection table	AT-82
TCS - Wiring diagram	BRC-16
TCS (traction control system)	BRC-7
TCS component parts and connector location	BRC-14
TCS wheel sensors	BRC-14
Theft warning system - See Vehicle security (Theft warn- ing) system	BL-75
Thermometer	DI-26
Three way catalyst	EM-19
Three way catalyst function (Bank 1)	EC-298
Three way catalyst function (Bank 2)	EC-298
Three way catalyst precautions	GI-5
Throttle control motor	EC-410
Throttle control motor relay	EC-405
Throttle position sensor (TPS) ...	EC-201 , EC-264 , EC-450 , EC-452 , EC-604
Throttle valve closed position learning	EC-90
Tie-rod	PS-15
Timing chain	EM-35
Tire rotation	MA-28
Tire size	GI-49
Tooth contact diff.	RFD-20

ALPHABETICAL INDEX

Torque converter installation	AT-245 , AT-246 , AT-248 , AT-249	Water temperature gauge	DI-5
Torque convertor clutch solenoid valve	AT-115 , AT-117	Wheel alignment (front)	FSU-6
Tow truck towing	GI-42	Wheel alignment (rear)	RSU-27
Towing point	GI-43	Wheel bearing (front)	FAX-5
TPS1 - Wiring diagram	EC-266	Wheel bearing (rear)	RAX-5
TPS2 - Wiring diagram	EC-203	Wheel hub (rear)	RAX-5
TPS3 - Wiring diagram	EC-606	Wheel size	GI-49
Traction control system - Wiring diagram	BRC-16	Wheelbase (Dimensions)	GI-49
Transfer control device	TF-76 , TF-80 , TF-138	Width (Dimensions)	GI-49
Transfer control unit inspection table	TF-36	WINDOW - Wiring diagram	GW-22
Transfer dropping resistor	TF-90	Window, door	GW-68 , GW-71
Transfer fluid temperature sensor	TF-104 , TF-152 , TF-165	Windshield	GW-11
Transfer motor	TF-102 , TF-140	WIP/R - Wiring diagram	WW-39
Transfer motor relay	TF-102	WIPER - Wiring diagram	WW-11
Transfer oil replacement	MA-24	Wiper, front	WW-4
Transfer serial number	GI-48	Wiper, rear	WW-35
Transmission serial number	GI-48	Wiring Diagram (Cell code) list	PG-60
Tread-FR&RR (Dimensions)	GI-49	Wiring diagrams	GI-15
Trim	EI-35	WT-T/WARN - Wiring diagram	WT-11
TRNSCV - Wiring diagram	BL-140 , BL-156		
Trouble diagnoses	GI-11		
Turbine revolution sensor	AT-131		
TURN - Wiring diagram	LT-83		
Turn signal lamp	LT-80		
Two trip detection logic	EC-48		
Two-pole lift	GI-41		

V

Vacuum hose (brake system)	BR-19
Vacuum hose drawing (Engine control)	EC-114
Valve clearance	EM-51
Valve guide	EM-65
Vanity mirror lamp	LT-129
VDC (vehicle dynamics control)	BRC-7
VDC -Wiring diagram	BRC-16
Vehicle identification number	GI-47
Vehicle recovery (freeing a stuck vehicle)	GI-43
Vehicle security (theft warning) system	BL-75
Vehicle speed sensor (VSS)	EC-372
VEHSEC - Wiring diagram	BL-79
VENT/V - Wiring diagram	EC-327 , EC-541
Video Monitor	AV-60
VIN registration	EC-90
Viscosity number (SAE)	MA-12

W

W/ANT - Wiring diagram	AV-49
Wait detection switch	TF-69
WARN - Wiring diagram	DI-31
Warning chime	DI-42
Warning lamps	DI-30
Washer, front	WW-4
Washer, rear	WW-35
Water pump	CO-17