

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve [TF-94](#), [TF-154](#), [TF-167](#)
 4WD - Wiring diagram [TF-24](#)
 4WD shift switch [TF-66](#)
 4WD solenoid valve [TF-90](#), [TF-154](#), [TF-167](#)
 4WD system description [TF-15](#)
 4WD system diagram [TF-19](#)

A

A/C air flow [ATC-30](#)
 A/C compressor clutch removal and installation .. [ATC-176](#)
 A/C compressor mounting [ATC-175](#)
 A/C compressor precaution [ATC-11](#)
 A/C compressor special service tool [ATC-14](#)
 A/C control operation (auto A/C) [ATC-27](#)
 A/C diagnostic work flow (auto A/C) [ATC-130](#)
 A/C evaporator [ATC-184](#)
 A/C HFC134a (R134a) system identification [ATC-6](#)
 A/C HFC134a (R134a) system precaution [ATC-5](#)
 A/C HFC134a (R134a) system service procedure [ATC-171](#)
 A/C HFC134a (R134a) system service tools ... [ATC-14](#)
 A/C HFC134a system service equipment precaution ... [ATC-11](#)
 A/C lubricant (R134a) [ATC-22](#)
 A/C lubrication oil [ATC-22](#)
 A/C operational check [ATC-58](#), [ATC-60](#)
 A/C self-diagnoses (auto A/C) [ATC-56](#), [ATC-130](#)
 A/C service data specification [ATC-191](#)
 A/C trouble diagnoses (auto A/C) [ATC-34](#)
 A/C, A - Wiring diagram [ATC-44](#)
 A/T fluid checking [AT-12](#), [AT-51](#), [MA-22](#)
 A/T fluid cooler cleaning [AT-14](#)
 A/T fluid replacement [AT-12](#), [MA-24](#)
 A/T fluid temperature sensor [AT-127](#)
 A/T IND - Wiring diagram [DI-41](#)
 A/T indicator [DI-41](#)
 A/T shift lock system [AT-221](#)
 A/T trouble diagnoses [AT-42](#)
 ABS - Wiring diagram [BRC-16](#)
 ABS (anti-lock brake system) [BRC-7](#)
 Accelerator control system [ACC-3](#)
 Accelerator pedal position (APP) sensor . [EC-547](#), [EC-553](#), [EC-567](#)
 Accelerator pedal released position learning [EC-78](#)
 AF1B1-Wiring diagram [EC-216](#), [EC-225](#), [EC-234](#), [EC-244](#), [EC-577](#)
 AF1B2-Wiring diagram [EC-218](#), [EC-227](#), [EC-236](#), [EC-246](#), [EC-579](#)
 AF1HB1-Wiring diagram [EC-157](#)
 AF1HB2-Wiring diagram [EC-159](#)
 Aiming adjustment [LT-29](#), [LT-78](#)
 Air bag [SRS-3](#)
 Air bag precautions [AV-4](#)
 Air cleaner and air duct [EM-15](#)
 Air cleaner filter replacement [EM-16](#), [MA-16](#)

Air conditioner cut control [EC-28](#)
 Air flow meter - See Mass air flow sensor [EC-171](#), [EC-180](#)
 Air fuel ratio sensor 1 .. [EC-213](#), [EC-223](#), [EC-232](#), [EC-241](#), [EC-575](#)
 Air fuel ratio sensor 1 heater [EC-156](#)
 Air mix. door motor [ATC-70](#)
 Ambient sensor [ATC-134](#), [ATC-145](#)
 Angular tightening application [EM-4](#)
 Antenna [AV-60](#)
 APPS1 - Wiring diagram [EC-549](#)
 APPS2 - Wiring diagram [EC-555](#)
 APPS3 - Wiring diagram [EC-569](#)
 ASC/BS - Wiring diagram [EC-513](#)
 ASC/SW - Wiring diagram [EC-496](#)
 ASCBOF - Wiring diagram [EC-587](#)
 ASCD [EC-29](#)
 ASCD (automatic speed control device) [ACS-3](#)
 ASCD brake switch [EC-511](#), [EC-586](#)
 ASCD indicator lamp [EC-593](#)
 ASCD steering switch [EC-494](#)
 ASCIND - Wiring diagram [EC-594](#)
 ATP switch [TF-107](#), [TF-110](#), [TF-115](#)
 Audio [AV-6](#)
 AUDIO - Wiring diagram [AV-11](#)
 AUT/DP - Wiring diagram [SE-16](#)
 Auto air conditioner - Wiring diagram [ATC-44](#)
 Auto anti-dazzling inside mirror [GW-72](#), [GW-73](#)
 Autolamp [LT-47](#)
 Automatic amplifier [ATC-61](#)
 Automatic drive positioner [SE-11](#)
 Automatic transmission number [GI-49](#)

B

Back door [BL-99](#)
 Back door trim [EI-32](#)
 Back sonar [DI-60](#)
 BACK/L - Wiring diagram [LT-109](#)
 Back-up lamp [LT-109](#)
 Ball joint (front) [FSU-15](#)
 Basic inspection [EC-71](#)
 Battery [SC-4](#)
 Battery/Starting/Charging System Tester [SC-6](#), [SC-12](#), [SC-19](#)
 BCM (Body control module) [BCS-3](#), [AV-109](#)
 Block heater [EM-78](#)
 Blower motor [ATC-93](#), [ATC-149](#)
 Body alignment [BL-172](#)
 Body component parts [BL-161](#)
 Body construction [BL-171](#)
 Body exterior paint color [BL-160](#)
 Body mounting [BL-159](#)
 Body repair [BL-160](#)
 Body sealing [BL-168](#)
 Bose speaker amp. [AV-8](#)
 Brake booster [BR-17](#)
 Brake fluid level [MA-28](#)
 Brake hydraulic line [BR-12](#)

ALPHABETICAL INDEX

Brake inspection	MA-28
Brake lines and cables inspection	MA-28
Brake master cylinder	BR-15
Brake switch	EC-511 , EC-523
BRK/SW - Wiring diagram	EC-524
Bulb specifications	LT-175
Bumper, front	EI-13
Bumper, rear	EI-15

C

Cabin air filter	MA-21
Camshaft	EM-46
Camshaft inspection	EM-50
Camshaft position sensor (PHASE)	EC-347
CAN - Wiring diagram	EC-152 , AT-96 , AT-97 , LAN-28 , LAN-39 , LAN-57 , LAN-79 , LAN-98
CAN communication	EC-31 , EC-151 , EC-154 , TF-113 , RSU-6
Canister-See EVAP canister	EC-35
Center case (Transfer)	TF-154 , TF-167
CHARGE - Wiring diagram	SC-18
Charging system	SC-17
Chassis and body maintenance	MA-21
Chassis and body maintenanceSchedule 1	MA-8
Chassis and body maintenanceSchedule 2	MA-10
CHIME - Wiring diagram	DI-46
Circuit breaker	PG-17
Clock	DI-71
CLOCK - Wiring diagram	DI-71
Closed loop control	EC-25 , EC-470
Closed loop control (Bank 1)	EC-470
Closed loop control (Bank 2)	EC-470
Clutch drum (Transfer)	TF-154 , TF-167
Clutch pressure switch (Transfer)	TF-154 , TF-167
Coil spring (front)	FSU-10
Collision diagnosis	SRS-60
Combination lamp, front, removal and installation ..	LT-31
Combination lamp, rear, removal and installation ..	LT-125
Combination meter	DI-5
Combination switch	LT-100
COMBSW - Wiring diagram	LT-100
COMM - Wiring diagram	AV-97
COMPAS - Wiring diagram	DI-27
Compass	DI-26
Component Location (auto A/C)	ATC-40
Compressor clutch removal and installation ..	ATC-176
Compressor mounting	ATC-175
Compressor precaution	ATC-11
Compressor special service tool	ATC-14
Condenser	ATC-182
Connecting rod	EM-96
Connecting rod bearing clearance	EM-96
Connecting rod bushing clearance	EM-96
Console box - See Instrument panel	IP-10
CONSULT for VDC	BRC-28
CONSULT-II for engine	EC-114

Control units (terminal arrangement)	PG-71
Control valve (A/T)	AT-36
Control valve (Transfer)	TF-154 , TF-167
Converter housing installation	AT-245 , AT-249
COOL/F - Wiring diagram	EC-476
Coolant mixture ratio	MA-12
Coolant replacement	CO-10 , MA-13
Cooling circuit (engine)	CO-8
Cooling fan	CO-17
Cooling fan control	EC-473
Cooling fan motor	EC-482
Cooling unit (A/C evaporator)	ATC-153 , ATC-184
Corrosion protection	BL-165
Crankcase ventilation system - See Positive crankcase ventilation	EC-45
Crankshaft	EM-79
Crankshaft position sensor (POS)	EC-340
Crash zone sensor	SRS-55
Cylinder block	EM-78
Cylinder block boring	EM-99

D

D/LOCK - Wiring diagram	BL-19
Data link connector for Consult	EC-116 , EC-128
Daytime light system	LT-33
Daytime running light - See Daytime light system ..	LT-33
DEF - Wiring diagram	GW-77
Diagnosis sensor unit	SRS-58
Diagnostic trouble code (DTC) for OBD system ..	EC-8 , EC-52
Diagnostic trouble code (DTC) inspection priority chart ..	EC-89
Differential carrier assembly	RFD-15
Differential gear oil replacement	MA-26
Dimensions	GI-50
Direct clutch solenoid valve	AT-147 , AT-149
Display and amp.assembly	ATC-61
Display Control Unit	AV-86
Display Unit	AV-86
Dome light - See Interior lamp	LT-134
Door glass	GW-65 , GW-68
Door lock	BL-131
Door mirror lamp	LT-134
Door trim	EI-32
Door, front	BL-128 , GW-65
Door, rear	BL-128 , GW-68
Drive belt	EM-13
Drive chain (Transfer)	TF-149 , TF-176
Drive pinion diff. inspection	RFD-18
Drive shaft (rear)	RAX-7
Driver air bag	SRS-46
DTC work support	EC-124
DTRL - Wiring diagram	LT-37
Duct and grilles	ATC-166
DVD - Wiring Diagram	AV-78
DVD Entertainment System	AV-75
DVD Player	AV-76

ALPHABETICAL INDEX

E

ECM input/output signal [EC-105](#), [EC-129](#)
 ECM power supply [EC-145](#), [EC-453](#)
 ECM relay [EC-145](#)
 ECM/PW - Wiring diagram [EC-454](#)
 ECTS - Wiring diagram [EC-194](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-534](#), [EC-545](#)
 Electrical load signal circuit [EC-596](#)
 Electrical units location [PG-65](#)
 Electronic ignition (EI) system [EC-26](#)
 Engine control circuit diagram [EC-103](#)
 Engine control component parts location [EC-96](#)
 Engine control module (ECM) [EC-457](#)
 Engine control system diagram [EC-23](#)
 Engine coolant [CO-10](#)
 Engine coolant temperature sensor (ECTS) ... [EC-192](#),
[EC-205](#)
 Engine fail-safe system [EC-91](#)
 Engine oil [LU-7](#)
 Engine oil filter replacement [MA-17](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacement [MA-17](#)
 Engine removal [EM-74](#)
 Engine room cover [EM-12](#)
 Engine serial number [GI-49](#)
 ETC1 - Wiring diagram [EC-535](#)
 ETC2 - Wiring diagram [EC-530](#)
 ETC3 - Wiring diagram [EC-541](#)
 EVAP canister [EC-35](#)
 EVAP canister purge volume control solenoid valve
[EC-373](#), [EC-381](#)
 EVAP canister vent control valve [EC-388](#), [EC-395](#)
 EVAP control system (small leak) diagnosis .. [EC-365](#),
[EC-419](#), [EC-427](#)
 EVAP control system pressure sensor [EC-402](#), [EC-405](#),
[EC-411](#)
 EVAP control system purge flow monitoring diagnosis
[EC-360](#)
 EVAP vapor lines inspection [MA-20](#)
 Evaporative emission (EVAP) system [EC-32](#)
 Evaporator [ATC-184](#)
 Exhaust manifold [EM-21](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#)
 Expansion valve [ATC-186](#)

F

F/FOG - Wiring diagram [LT-71](#)
 F/PUMP - Wiring diagram [EC-605](#)
 Final drive pre-inspection [FFD-15](#)
 Final drive removal and installation .. [FFD-12](#), [RFD-13](#)
 Flow charts [GI-28](#)
 Fluid temperature sensor (A/T) [AT-127](#)
 Fluids [MA-11](#)
 Fluorescent leak detector [ATC-187](#)
 Fog lamp, front [LT-69](#)

Fog lamp, front, removal and installation [LT-79](#)
 Foot lamp [LT-135](#)
 Freeze frame data [EC-53](#), [EC-118](#)
 Front brake solenoid valve [AT-143](#), [AT-145](#)
 Front bumper [EI-13](#)
 Front case (Transfer) [TF-149](#), [TF-176](#)
 Front combination lamp removal and installation [LT-31](#)
 Front door [BL-128](#), [BL-131](#), [GW-65](#)
 Front Door Trim [EI-32](#)
 Front drive shaft (Transfer) [TF-149](#), [TF-176](#)
 Front fog lamp [LT-69](#)
 Front fog lamp removal and installation [LT-79](#)
 Front passenger air bag [SRS-50](#)
 Front seat [SE-91](#)
 Front seat belt [SB-3](#)
 Front seat belt pre-tensioner [SRS-3](#), [SRS-57](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)
 FTS - Wiring diagram [AT-128](#)
 FTTS - Wiring diagram [EC-311](#), [EC-316](#)
 Fuel cut control (at no load high engine speed) [EC-27](#)
 Fuel filter replacement [FL-6](#)
 Fuel gauge [DI-5](#)
 Fuel injection system (Bank 1) [EC-288](#), [EC-299](#)
 Fuel injection system (Bank 2) [EC-288](#), [EC-299](#)
 Fuel injector [EC-598](#)
 Fuel injector and fuel tube [EM-31](#)
 Fuel level sensor [EC-436](#), [EC-438](#), [EC-440](#)
 Fuel line inspection [FL-4](#)
 Fuel precautions [GI-5](#)
 Fuel pressure check [EC-80](#)
 Fuel pressure release [EC-80](#)
 Fuel pump [EC-604](#)
 Fuel pump and gauge [FL-6](#)
 Fuel system [FL-4](#)
 Fuel tank [FL-10](#)
 Fuel tank temperature sensor [EC-309](#), [EC-315](#)
 Fuel tank vacuum relief valve [EC-35](#)
 FUEL B1 - Wiring diagram [EC-290](#), [EC-301](#)
 FUEL B2 - Wiring diagram [EC-292](#), [EC-303](#)
 Fuse [PG-17](#), [PG-77](#)
 Fuse and fusible link box [PG-77](#)
 Fuse block [PG-76](#)
 Fusible link [PG-17](#), [PG-77](#)

G

Garage jack and safety stand [GI-41](#)
 Gauges [DI-5](#)
 Generator [SC-17](#)
 Generic scan tool (GST) [EC-127](#)
 Glass [GW-11](#), [GW-65](#), [GW-68](#)
 Glove box lamp [LT-158](#)
 GPS antenna [AV-85](#)
 Grease [MA-11](#)
 Ground distribution [PG-31](#)

ALPHABETICAL INDEX

H

H/AIM - Wiring diagram	LT-66
H/LAMP - Wiring diagram	LT-9
Handling precautions for plastics	BL-187
Harness connector	PG-68
Harness layout	PG-41
Hazard warning lamp	LT-80
Headlamp	LT-5
Headlamp aiming control	LT-66
Headlamp leveler - See Headlamp aiming control .	LT-66
Headlamp removal and installation	LT-31
Heated oxygen sensor 2 (bank 1)	EC-253 , EC-264 , EC-277
Heated oxygen sensor 2 (bank 2)	EC-253 , EC-264 , EC-277
Heated oxygen sensor 2 heater (bank 1)	EC-163
Heated oxygen sensor 2 heater (bank 2)	EC-163
Heated seat	SE-84
Heater and cooling unit (Heater core) .	ATC-153 , ATC-156
Heater unit (heater core)	ATC-153 , ATC-156
Height (Dimensions)	GI-50
HFC134a (R134a) system identification	ATC-6
HFC134a (R134a) system precaution	ATC-5
HFC134a (R134a) system service procedure	ATC-171
HFC134a (R134a) system service tools	ATC-14
HFC134a system service equipment precaution	ATC-11
High and low reverse clutch solenoid valve	AT-151 , AT-153
Homelink universal transceiver	BL-156
Horn	WW-55
HORN - Wiring diagram	WW-55
How to erase DTC for OBD system	EC-61
HSEAT - Wiring diagram	SE-86

I

IATS - Wiring diagram	EC-189
ICC - Wiring diagram	ACS-20
ICC/BS - Wiring diagram	EC-504
ICC/SW - Wiring diagram	EC-489
ICCBOF - Wiring diagram	EC-611
Identification plate	GI-48
Idle air volume learning	EC-78
Idle speed	EC-71 , EC-76
Idle speed control (ISC)	EC-444 , EC-446
Ignition coil	EM-28 , EC-618
Ignition control system	EC-618
Ignition key hole illumination	LT-134
Ignition timing	EC-71 , EC-76
IGNSYS - Wiring diagram	EC-619
ILL - Wiring diagram	LT-163
Illumination	LT-157
In vehicle sensor	ATC-137 , ATC-146
In-cabin Microfilter	MA-21
INJECT - Wiring diagram	EC-599

Injector	EC-598
Input clutch solenoid valve	AT-139 , AT-141
Instrument panel	IP-10
Intake air temperature sensor	EC-188 , EC-208
Intake door control linkage adjustment .	ATC-85 , ATC-88
Intake door motor	ATC-83 , ATC-160
Intake manifold	EM-17
Intake sensor	ATC-142 , ATC-148
Integrated homelink transmitter - See Homelink univer-	
sal transceiver	BL-156
Intelligent cruise control (ICC) system	ACS-6
Interior	EI-35
Interior lamp	LT-134
Interior lamp on-off control	LT-135
Internal gear (Transfer)	TF-149 , TF-176
IPDM (Intelligent power distribution module engine	
room)	PG-18
IVIS (Infiniti vehicle immobilizer system)	BL-137
IVIS (Infiniti vehicle immobilizer system) precautions ...	GI-3

J

Jacking points	GI-41
Junction box (J/B)	PG-76

K

Key illumination	LT-135
KEYLES - Wiring diagram	BL-49
Knock sensor (KS)	EC-335
KS - Wiring diagram	EC-336

L

Laser beam aiming adjustment	ACS-12
Length (Dimensions)	GI-50
License lamp	LT-111
Lifting points	GI-42
Line pressure solenoid valve	AT-122
Line pressure switch (Transfer)	TF-154 , TF-167
Line pressure test (A/T)	AT-52
Location of electrical units	PG-65
Low coast brake solenoid valve	AT-155 , AT-157
Low tire pressure warning system	WT-8
Low tire pressure warning system - trouble diagnoses	WT-11
Low tire pressure warning system - Wiring diagram	WT-11
Lubricant (R134a) A/C	ATC-22
Lubricants	MA-11
Lubrication circuit (engine)	LU-5
Lubrication oil A/C	ATC-22
Lubrication-locks, hinges and hood latches	MA-31

M

MAFS - Wiring diagram	EC-174 , EC-182
-----------------------------	---

ALPHABETICAL INDEX

Magnet clutch [ATC-115](#), [ATC-176](#)
 MAIN - Wiring diagram [EC-145](#), [AT-167](#)
 Main oil pump (Transfer) [TF-154](#), [TF-167](#)
 Mainshaft (Transfer) [TF-154](#), [TF-167](#)
 Maintenance (engine)Schedule 1 [MA-7](#)
 Maintenance (engine)Schedule 2 [MA-9](#)
 Major overhaul (Final drive) [FFD-14](#)
 Major overhaul (Transfer) [TF-146](#)
 Malfunction indicator lamp (MIL) [EC-63](#)
 Map lamp [LT-135](#)
 Mass air flow sensor (MAFS) [EC-171](#), [EC-180](#)
 Meter [DI-5](#)
 METER - Wiring diagram [DI-10](#)
 MIL data link connectors circuit [EC-635](#)
 MIL/DL - Wiring diagram [EC-635](#)
 MIRROR - Wiring diagram [GW-93](#)
 Misfire [EC-327](#)
 Mode door control linkage adjustment [ATC-66](#)
 Mode door motor [ATC-64](#), [ATC-161](#)
 Model variation [GI-47](#)
 Multiport fuel injection (MFI) system [EC-24](#)
 Multiport fuel injection precautions [GI-6](#)
 Multi-remote control system - See Remote keyless entry system [BL-44](#)

N

NATS - Wiring diagram [BL-140](#)
 NAVI - Wiring diagram [AV-89](#)
 NAVI Control Unit [AV-86](#)
 Navigation system [AV-84](#)
 Neutral-4LO switch [TF-62](#)
 NONDTC - Wiring diagram [AT-176](#)
 NVH troubleshooting (AX) [FAX-4](#)
 NVH troubleshooting (EM) [EM-10](#)
 NVH troubleshooting (Final drive) [RFD-7](#)
 NVH troubleshooting (Propeller shaft) [PR-3](#)
 NVH troubleshooting (RAX) [RAX-4](#)
 NVH troubleshooting (RSU) [RSU-5](#)
 NVH troubleshooting (ST) [PS-5](#)
 NVH troubleshooting (Transfer) [TF-10](#)
 NVH troubleshooting (WT)NVH troubleshooting (WT) .
[WT-4](#)
 NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-165](#)
 O2H2B2 - Wiring diagram [EC-167](#)
 O2S2B1 - Wiring diagram ... [EC-256](#), [EC-267](#), [EC-280](#)
 O2S2B2 - Wiring diagram ... [EC-258](#), [EC-269](#), [EC-282](#)
 Oil cooler (engine) [LU-11](#)
 Oil filter [LU-10](#)
 Oil filter (Transfer) [TF-143](#)
 Oil pan (engine) [EM-24](#)
 Oil pressure (engine) [LU-7](#)
 Oil pressure relief valve (engine) [LU-5](#)
 Oil pump (engine) [LU-13](#)

Oil seal replacement (engine) [EM-60](#)
 Oil seal replacement (front of final drive) [FFD-8](#), [RFD-9](#)
 Oil seal replacement (side of final drive) [RFD-11](#)
 On board diagnostic system [EC-48](#)
 ORVR (On-board Refueling Vapor Recovery) .. [EC-39](#)
 Overheat [EC-473](#)

P

P/SCKT - Wiring diagram [WW-53](#)
 Pantograph jack [GI-41](#)
 Park/Neutral position switch [EC-465](#)
 Parking brake control [PB-4](#)
 PCV (positive crankcase ventilation) [EC-45](#)
 Periodic maintenance [MA-7](#)
 Personal lamp [LT-135](#)
 PGC/V - Wiring diagram [EC-375](#), [EC-383](#)
 PHASE - Wiring diagram [EC-349](#)
 PHONE - Wiring diagram [AV-67](#)
 Pinion bearing preload diff. [RFD-26](#)
 Piston pin inspection [EM-94](#)
 Piston ring inspection [EM-95](#)
 Piston to bore clearance [EM-99](#)
 Planetary carrier (Transfer) [TF-149](#), [TF-176](#)
 PNP/SW - Wiring diagram ... [EC-467](#), [AT-105](#), [AT-106](#)
 POS - Wiring diagram [EC-342](#)
 POWER - Wiring diagram [PG-6](#)
 Power door lock [BL-16](#)
 Power seat [SE-83](#)
 Power steering fluid level [MA-29](#)
 Power steering gear [PS-15](#)
 Power steering oil pump [PS-21](#)
 Power steering pressure (PSP) sensor [EC-448](#)
 Power steering system bleeding [PS-6](#)
 Power supply routing [PG-4](#)
 Power window [GW-15](#)
 PRE/SE - Wiring diagram [EC-407](#), [EC-413](#)
 Precautions (General) [GI-4](#)
 Precautions in repairing high strength steel [BL-190](#)
 Pressure switch 1 [AT-145](#), [AT-159](#)
 Pressure switch 2 [AT-157](#)
 Pressure switch 3 [AT-141](#), [AT-161](#)
 Pressure switch 5 [AT-149](#), [AT-163](#)
 Pressure switch 6 [AT-153](#), [AT-165](#)
 Pressure test (A/T) [AT-52](#)
 Propeller shaft [PR-4](#), [PR-8](#)
 Propeller shaft inspection [MA-25](#)
 Propeller shaft on vehicle service [PR-8](#)
 Propeller shaft vibration [PR-4](#), [PR-8](#)
 PS/SEN - Wiring diagram [EC-449](#)

R

R/VIEW - Wiring diagram [DI-76](#)
 Radiator [CO-14](#)
 Rear Audio Remote Control Unit [AV-8](#)
 Rear axle [RAX-5](#)
 Rear bumper [EI-15](#)
 Rear case (Transfer) [TF-148](#), [TF-181](#)

ALPHABETICAL INDEX

Rear combination lamp removal and installation ... LT-125	Stabilizer bar (rear) RSU-42	
Rear cover packing replacement diff. RFD-28	Stall test (A/T) AT-51	A
Rear door BL-128 , GW-68	Standardized relay PG-72	
Rear seat belt SB-6	START - Wiring diagram SC-11	B
Rear suspension RSU-26	Starting system SC-10	
Rear view monitor DI-73	Steering gear, linkage and transfer gear inspection MA-29	
Rear washer WW-32	Steering linkage PS-15	C
Rear window defogger GW-74	Steering wheel and column PS-7	
Rear wiper WW-32	Step lamp LT-135	
Refrigerant connection precaution ATC-7	Stop lamp LT-106	
Refrigerant discharging evacuating charging ATC-171	Stop lamp switch EC-511 , EC-523 , EC-586	D
Refrigerant general precaution ATC-6	STOP/L - Wiring diagram LT-107	
Refrigerant lines ATC-171 , ATC-179 , ATC-180	Strut (front) FSU-10	
Refrigerant pressure sensor EC-630 , ATC-182	STSIG - Wiring diagram AT-101	E
Relay box PG-78	Sub-oil pump (Transfer) TF-154 , TF-167	
Remote keyless entry system BL-44	Sun gear (Transfer) TF-149 , TF-176	
Removal and installation (A/T) AT-243 , AT-246	Sun roof, electric RF-10	F
Removal and installation (Transfer) TF-145	Sunload sensor ATC-140	
Ring gear diff. inspection RFD-18	Sunroof RF-24	
Road wheel size GI-50	Supplemental Restraint System SRS-5	G
Rocker cover EM-35	Supplemental restraint system - Wiring diagram . SRS-12	
Room lamp LT-134	Symbols and abbreviations GI-10 , GI-23	
Room lamp - See Interior lamp LT-134	Symptom matrix chart EC-92	H
ROOM/L - Wiring diagram LT-140	System readiness test (SRT) code EC-54	
RP/SEN - Wiring diagram EC-631		

S

SAE J1979 - Service \$01 - 09 EC-48
SEAT - Wiring diagram SE-83
Seat belt inspection SB-11 , MA-32
Seat belt pre-tensioner SRS-57
Seat belt, front SB-3
Seat belt, rear SB-6
Seat, front SE-91
Self-diagnosis (Transfer) TF-50
SEN/PW - Wiring diagram EC-461
SHIFT - Wiring diagram AT-222
Shift control (Transfer) TF-149 , TF-176
Shift lock system AT-221
Shock absorber (front) FSU-11
Shock absorber (rear) RSU-35
Side air bag (satellite) sensor SRS-56
Side curtain air bag SRS-53
Side trim EI-35
SMJ (super multiple junction) PG-74
SONAR - Wiring diagram DI-63
Spare tire size GI-50
Spark plug EM-29
Spark plug replacement MA-18
Specification value EC-134
Speedometer DI-5
Spiral cable SRS-48
SROOF - Wiring diagram RF-13
SRS - See Supplemental Restraint System SRS-5
SRS - Wiring diagram SRS-12
SRS Trouble diagnoses SRS-8
Stabilizer bar (front) FSU-12

T

Tachometer DI-5
Tail lamp LT-111
TAIL/L - Wiring diagram LT-113
TCM circuit diagram AT-50
TCM inspection table AT-83
TCS - Wiring diagram BRC-16
TCS (traction control system) BRC-7
TCS component parts and connector location BRC-14
TCS wheel sensors BRC-14
Telephone AV-64
Theft warning system - See Vehicle security (Theft warning) system BL-75
Thermometer DI-26
Three way catalyst EM-21
Three way catalyst function (Bank 1) EC-354
Three way catalyst function (Bank 2) EC-354
Three way catalyst precautions GI-5
Throttle control motor EC-540
Throttle control motor relay EC-528
Throttle position sensor (TPS) ... EC-198 , EC-320 , EC-483 , EC-485 , EC-560
Throttle valve closed position learning EC-78
Tie-rod PS-15
Timing chain EM-37
Tire rotation MA-28
Tire size GI-50
Torque converter installation AT-244 , AT-245 , AT-248 , AT-249
Torque convertor clutch solenoid valve AT-118 , AT-120

ALPHABETICAL INDEX

Tow truck towing	GI-43	Wheel bearing (rear)	RAX-5
Towing point	GI-44	Wheel hub (rear)	RAX-5
TPS1 - Wiring diagram	EC-322	Wheel size	GI-50
TPS2 - Wiring diagram	EC-200	Wheelbase (Dimensions)	GI-50
TPS3 - Wiring diagram	EC-562	Width (Dimensions)	GI-50
Traction control system - Wiring diagram	BRC-16	WINDOW - Wiring diagram	GW-22
Transfer control device	TF-76 , TF-80 , TF-138	Window, door	GW-65 , GW-68
Transfer control unit inspection table	TF-35	Windshield	GW-11
Transfer dropping resistor	TF-90	WIP/R - Wiring diagram	WW-36
Transfer fluid temperature sensor TF-104 , TF-154 , TF-167		WIPER - Wiring diagram	WW-8
Transfer motor	TF-102 , TF-142	Wiper, front	WW-4
Transfer motor relay	TF-102	Wiper, rear	WW-32
Transfer oil replacement	MA-24	Wiring Diagram (Cell code) list	PG-62
Transfer serial number	GI-49	Wiring diagrams	GI-16
Transmission serial number	GI-49	WT-T/WARN - Wiring diagram	WT-11
Tread-FR&RR (Dimensions)	GI-50		
Trim	EI-35		
TRNSCV - Wiring diagram	BL-140 , BL-156		
Trouble diagnoses	GI-10		
Turbine revolution sensor	AT-109		
TURN - Wiring diagram	LT-84		
Turn signal lamp	LT-80		
Two trip detection logic	EC-48		
Two-pole lift	GI-42		

V

Vacuum hose (brake system)	BR-20
Vacuum hose drawing (Engine control)	EC-102
Valve clearance	EM-55
Valve guide	EM-69
Vanity mirror lamp	LT-134
VDC (vehicle dynamics control)	BRC-7
VDC -Wiring diagram	BRC-16
Vehicle identification number	GI-48
Vehicle recovery (freeing a stuck vehicle)	GI-44
Vehicle security (theft warning) system	BL-75
Vehicle speed sensor (VSS)	EC-442
VEHSEC - Wiring diagram	BL-79
VENT/V - Wiring diagram	EC-390 , EC-397
VIN registration	EC-77
Viscosity number (SAE)	MA-12
VSS A/T - Wiring diagram	AT-111 , AT-113

W

W/ANT - Wiring diagram	AV-61
Wait detection switch	TF-69
WARN - Wiring diagram	DI-32
Warning chime	DI-43
Warning lamps	DI-31
Washer, front	WW-4
Washer, rear	WW-32
Water pump	CO-19
Water temperature gauge	DI-5
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-28
Wheel bearing (front)	FAX-5