

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve [TF-93](#), [TF-154](#), [TF-167](#)
 4WD - Wiring diagram [TF-24](#)
 4WD shift switch [TF-65](#)
 4WD solenoid valve [TF-89](#), [TF-154](#), [TF-167](#)
 4WD system description [TF-15](#)
 4WD system diagram [TF-19](#)

A

A/C air flow [ATC-30](#)
 A/C compressor clutch removal and installation .. [ATC-180](#)
 A/C compressor mounting [ATC-179](#)
 A/C compressor precaution [ATC-11](#)
 A/C compressor special service tool [ATC-14](#)
 A/C control operation (auto A/C) [ATC-27](#)
 A/C diagnostic work flow (auto A/C) [ATC-133](#)
 A/C evaporator [ATC-186](#)
 A/C HFC134a (R134a) system identification [ATC-6](#)
 A/C HFC134a (R134a) system precaution [ATC-5](#)
 A/C HFC134a (R134a) system service procedure [ATC-175](#)
 A/C HFC134a (R134a) system service tools ... [ATC-14](#)
 A/C HFC134a system service equipment precaution ... [ATC-11](#)
 A/C lubricant (R134a) [ATC-22](#)
 A/C lubrication oil [ATC-22](#)
 A/C operational check [ATC-56](#), [ATC-58](#)
 A/C self-diagnoses (auto A/C) [ATC-54](#), [ATC-133](#)
 A/C service data specification [ATC-193](#)
 A/C trouble diagnoses (auto A/C) [ATC-34](#)
 A/C, A - Wiring diagram [ATC-42](#)
 A/T fluid checking [AT-12](#), [AT-51](#), [MA-22](#)
 A/T fluid cooler cleaning [AT-14](#)
 A/T fluid replacement [AT-12](#), [MA-24](#)
 A/T fluid temperature sensor [AT-123](#)
 A/T IND - Wiring diagram [DI-36](#)
 A/T indicator [DI-36](#)
 A/T shift lock system [AT-216](#)
 A/T trouble diagnoses [AT-42](#)
 ABS - Wiring diagram [BRC-16](#)
 ABS (anti-lock brake system) [BRC-7](#)
 Accelerator control system [ACC-3](#)
 Accelerator pedal position (APP) sensor . [EC-608](#), [EC-614](#), [EC-628](#)
 Accelerator pedal released position learning [EC-80](#)
 AF1B1-Wiring diagram [EC-242](#), [EC-250](#), [EC-258](#), [EC-267](#), [EC-638](#)
 AF1B2-Wiring diagram [EC-244](#), [EC-252](#), [EC-260](#), [EC-269](#), [EC-640](#)
 AF1HB1-Wiring diagram [EC-175](#)
 AF1HB2-Wiring diagram [EC-177](#)
 Aiming adjustment [LT-23](#), [LT-61](#)
 Air bag [SRS-3](#)
 Air bag precautions [AV-4](#)
 Air cleaner and air duct [EM-15](#)
 Air cleaner filter replacement [EM-16](#), [MA-16](#)

Air conditioner cut control [EC-29](#)
 Air flow meter - See Mass air flow sensor [EC-197](#), [EC-206](#)
 Air fuel ratio sensor 1 .. [EC-239](#), [EC-248](#), [EC-256](#), [EC-264](#), [EC-636](#)
 Air fuel ratio sensor 1 heater [EC-174](#)
 Air mix. door motor [ATC-69](#)
 Ambient sensor [ATC-138](#), [ATC-149](#)
 Angular tightening application [EM-4](#)
 Antenna [AV-58](#)
 APPS1 - Wiring diagram [EC-610](#)
 APPS2 - Wiring diagram [EC-616](#)
 APPS3 - Wiring diagram [EC-630](#)
 ASC/BS - Wiring diagram [EC-574](#)
 ASC/SW - Wiring diagram [EC-557](#)
 ASCBOF - Wiring diagram [EC-648](#)
 ASCD [EC-30](#)
 ASCD (automatic speed control device) [ACS-3](#)
 ASCD brake switch [EC-572](#), [EC-647](#)
 ASCD indicator lamp [EC-654](#)
 ASCD steering switch [EC-555](#)
 ASCIND - Wiring diagram [EC-655](#)
 ATP switch [TF-106](#), [TF-109](#), [TF-114](#)
 Audio [AV-6](#)
 AUDIO - Wiring diagram [AV-11](#)
 AUT/DP - Wiring diagram [SE-16](#)
 Auto air conditioner - Wiring diagram [ATC-42](#)
 Auto anti-dazzling inside mirror [GW-69](#), [GW-70](#)
 Autolamp [LT-38](#)
 Automatic amplifier [ATC-59](#)
 Automatic drive positioner [SE-11](#)
 Automatic transmission number [GI-50](#)

B

Back door [BL-88](#)
 Back door trim [EI-32](#)
 Back sonar [DI-50](#)
 BACK/L - Wiring diagram [LT-87](#)
 Back-up lamp [LT-87](#)
 Ball joint (front) [FSU-15](#)
 Basic inspection [EC-73](#)
 Battery [SC-4](#)
 Battery current sensor . [EC-520](#), [EC-527](#), [EC-534](#), [EC-541](#)
 Battery/Starting/Charging System Tester [SC-6](#), [SC-12](#), [SC-20](#)
 BCM (Body control module) [BCS-3](#), [AV-106](#)
 Block heater [EM-78](#)
 Blower motor [ATC-93](#), [ATC-153](#)
 Body alignment [BL-164](#)
 Body component parts [BL-151](#)
 Body construction [BL-163](#)
 Body exterior paint color [BL-150](#)
 Body mounting [BL-149](#)
 Body repair [BL-150](#)
 Body sealing [BL-160](#)
 Bose speaker amp. [AV-8](#)
 Brake booster [BR-17](#)

ALPHABETICAL INDEX

Brake fluid level	MA-28
Brake hydraulic line	BR-12
Brake inspection	MA-28
Brake lines and cables inspection	MA-28
Brake master cylinder	BR-15
Brake switch	EC-572 , EC-584
BRK/SW - Wiring diagram	EC-585
Bulb specifications	LT-148
Bumper, front	EI-13
Bumper, rear	EI-15

C

Cabin air filter	MA-21
Camshaft	EM-46
Camshaft inspection	EM-49
Camshaft position sensor (PHASE)	EC-369
CAN - Wiring diagram	EC-157 , AT-93 , AT-94
CAN communication	EC-32 , EC-156 , EC-159 , TF-112 , RSU-6
Canister-See EVAP canister	EC-36
Center case (Transfer)	TF-154 , TF-167
CHARGE - Wiring diagram	SC-19
Charging system	SC-17
Chassis and body maintenance	MA-21
Chassis and body maintenanceSchedule 1	MA-8
Chassis and body maintenanceSchedule 2	MA-10
CHIME - Wiring diagram	DI-41
Circuit breaker	PG-17
Clock	DI-61
CLOCK - Wiring diagram	DI-61
Closed loop control	EC-26 , EC-501
Closed loop control (Bank 1)	EC-501
Closed loop control (Bank 2)	EC-501
Clutch drum (Transfer)	TF-154 , TF-167
Clutch pressure switch (Transfer)	TF-154 , TF-167
Coil spring (front)	FSU-10
Collision diagnosis	SRS-53
Combination lamp, front, removal and installation .	LT-25
Combination lamp, rear, removal and installation ..	LT-101
Combination meter	DI-5
Combination switch	LT-79
COMBSW - Wiring diagram	LT-79
COMM - Wiring diagram	AV-94
COMPAS - Wiring diagram	DI-24
Compass	DI-23
Component Location (auto A/C)	ATC-38
Compressor clutch removal and installation .	ATC-180
Compressor mounting	ATC-179
Compressor precaution	ATC-11
Compressor special service tool	ATC-14
Condenser	ATC-184
Connecting rod	EM-96
Connecting rod bearing clearance	EM-96
Connecting rod bushing clearance	EM-96
Console box - See Instrument panel	IP-10
CONSULT for VDC	BRC-27

CONSULT general information	GI-37
CONSULT-II for engine	EC-118
Control units (terminal arrangement)	PG-71
Control valve (A/T)	AT-36
Control valve (Transfer)	TF-154 , TF-167
Converter housing installation	AT-240 , AT-244
COOL/F - Wiring diagram	EC-507
Coolant mixture ratio	MA-12
Coolant replacement	CO-10 , MA-13
Cooling circuit (engine)	CO-8
Cooling fan	CO-17
Cooling fan control	EC-504
Cooling fan motor	EC-513
Cooling unit (A/C evaporator)	ATC-157 , ATC-186
Corrosion protection	BL-157
Crankcase ventilation system - See Positive crankcase ventilation	EC-46
Crankshaft	EM-79
Crankshaft position sensor (POS)	EC-362
Crash zone sensor	SRS-48
CUR/SE - Wiring diagram ...	EC-522 , EC-529 , EC-536 , EC-543
Cylinder block	EM-78
Cylinder block boring	EM-99

D

D/LOCK - Wiring diagram	BL-19
Data link connector for Consult	EC-120 , EC-132
Daytime light system	LT-27
Daytime running light - See Daytime light system ..	LT-27
DEF - Wiring diagram	GW-74
Diagnosis sensor unit	SRS-51
Diagnostic trouble code (DTC) for OBD system .	EC-9 , EC-54
Diagnostic trouble code (DTC) inspection priority chart	EC-91
Differential carrier assembly	RFD-15
Differential gear oil replacement	MA-26
Dimensions	GI-51
Direct clutch solenoid valve	AT-143 , AT-145
Display and amp.assembly	ATC-59
Display Control Unit	AV-83
Display Unit	AV-83
Dome light - See Interior lamp	LT-110
Door glass	GW-62 , GW-65
Door lock	BL-121
Door mirror lamp	LT-110
Door trim	EI-32
Door, front	BL-117 , GW-62
Door, rear	BL-117 , GW-65
Drive belt	EM-13
Drive chain (Transfer)	TF-149 , TF-176
Drive pinion diff. inspection	RFD-18
Drive shaft (rear)	RAX-7
Driver air bag	SRS-39
DTC work support	EC-128
DTRL - Wiring diagram	LT-31

ALPHABETICAL INDEX

Duct and grilles [ATC-170](#)
 DVD - Wiring Diagram [AV-75](#)
 DVD Entertainment System [AV-72](#)
 DVD Player [AV-73](#)

E

ECM input/output signal [EC-109](#), [EC-133](#)
 ECM power supply [EC-150](#), [EC-475](#)
 ECM relay [EC-150](#)
 ECM/PW - Wiring diagram [EC-476](#)
 ECTS - Wiring diagram [EC-220](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-595](#), [EC-606](#)
 Electrical load signal circuit [EC-657](#)
 Electrical units location [PG-65](#)
 Electronic ignition (EI) system [EC-27](#)
 Engine control circuit diagram [EC-107](#)
 Engine control component parts location [EC-98](#)
 Engine control module (ECM) [EC-479](#)
 Engine control system diagram [EC-24](#)
 Engine coolant [CO-10](#)
 Engine coolant temperature sensor (ECTS) ... [EC-218](#),
[EC-231](#)
 Engine fail-safe system [EC-93](#)
 Engine oil [LU-8](#)
 Engine oil filter replacement [MA-17](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacement [MA-17](#)
 Engine removal [EM-74](#)
 Engine room cover [EM-12](#)
 Engine serial number [GI-50](#)
 ETC1 - Wiring diagram [EC-596](#)
 ETC2 - Wiring diagram [EC-591](#)
 ETC3 - Wiring diagram [EC-602](#)
 EVAP canister [EC-36](#)
 EVAP canister purge volume control solenoid valve
[EC-395](#), [EC-403](#)
 EVAP canister vent control valve [EC-410](#), [EC-417](#)
 EVAP control system (small leak) diagnosis .. [EC-387](#),
[EC-441](#), [EC-449](#)
 EVAP control system pressure sensor [EC-424](#), [EC-427](#),
[EC-433](#)
 EVAP control system purge flow monitoring diagnosis
[EC-382](#)
 EVAP vapor lines inspection [MA-20](#)
 Evaporative emission (EVAP) system [EC-33](#)
 Evaporator [ATC-186](#)
 Exhaust manifold [EM-21](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#)
 Expansion valve [ATC-188](#)

F

F/FOG - Wiring diagram [LT-56](#)
 F/PUMP - Wiring diagram [EC-666](#)
 Final drive pre-inspection [FFD-15](#)
 Final drive removal and installation .. [FFD-12](#), [RFD-13](#)

Flow charts [GI-27](#)
 Fluid temperature sensor (A/T) [AT-123](#)
 Fluids [MA-11](#)
 Fluorescent leak detector [ATC-189](#)
 Fog lamp, front [LT-54](#)
 Fog lamp, front, removal and installation [LT-62](#)
 Foot lamp [LT-111](#)
 Freeze frame data [EC-55](#), [EC-121](#)
 Front brake solenoid valve [AT-139](#), [AT-141](#)
 Front bumper [EI-13](#)
 Front case (Transfer) [TF-149](#), [TF-176](#)
 Front combination lamp removal and installation [LT-25](#)
 Front door [BL-117](#), [BL-121](#), [GW-62](#)
 Front Door Trim [EI-32](#)
 Front drive shaft (Transfer) [TF-149](#), [TF-176](#)
 Front fog lamp [LT-54](#)
 Front fog lamp removal and installation [LT-62](#)
 Front passenger air bag [SRS-43](#)
 Front seat [SE-89](#)
 Front seat belt [SB-3](#)
 Front seat belt pre-tensioner [SRS-3](#), [SRS-50](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)
 FTS - Wiring diagram [AT-124](#)
 FTTS - Wiring diagram [EC-334](#), [EC-339](#)
 Fuel cut control (at no load high engine speed) [EC-28](#)
 Fuel filter replacement [FL-5](#)
 Fuel gauge [DI-5](#)
 Fuel injection system (Bank 1) [EC-311](#), [EC-322](#)
 Fuel injection system (Bank 2) [EC-311](#), [EC-322](#)
 Fuel injector [EC-659](#)
 Fuel injector and fuel tube [EM-31](#)
 Fuel level sensor [EC-458](#), [EC-460](#), [EC-462](#)
 Fuel line inspection [FL-4](#)
 Fuel precautions [GI-5](#)
 Fuel pressure check [EC-82](#)
 Fuel pressure release [EC-82](#)
 Fuel pump [EC-665](#)
 Fuel pump and gauge [FL-5](#)
 Fuel system [FL-4](#)
 Fuel tank [FL-10](#)
 Fuel tank temperature sensor [EC-332](#), [EC-338](#)
 Fuel tank vacuum relief valve [EC-36](#)
 FUEL B1 - Wiring diagram [EC-313](#), [EC-324](#)
 FUEL B2 - Wiring diagram [EC-315](#), [EC-326](#)
 Fuse [PG-17](#), [PG-77](#)
 Fuse and fusible link box [PG-77](#)
 Fuse block [PG-76](#)
 Fusible link [PG-17](#), [PG-77](#)

G

Garage jack and safety stand [GI-42](#)
 Gauges [DI-5](#)
 Generator [SC-17](#)
 Generic scan tool (GST) [EC-131](#)
 Glass [GW-11](#), [GW-62](#), [GW-65](#)
 Glove box lamp [LT-131](#)
 GPS antenna [AV-82](#)

ALPHABETICAL INDEX

Grease [MA-11](#)
Ground distribution [PG-31](#)

H

H/AIM - Wiring diagram [LT-51](#)
H/LAMP - Wiring diagram [LT-9](#)
Handling precautions for plastics [BL-179](#)
Harness connector [PG-68](#)
Harness layout [PG-41](#)
Hazard warning lamp [LT-63](#)
Headlamp [LT-5](#)
Headlamp aiming control [LT-51](#)
Headlamp leveler - See Headlamp aiming control . [LT-51](#)
Headlamp removal and installation [LT-25](#)
Heated oxygen sensor 2 (bank 1) [EC-276](#), [EC-287](#), [EC-300](#)
Heated oxygen sensor 2 (bank 2) [EC-276](#), [EC-287](#), [EC-300](#)
Heated oxygen sensor 2 heater (bank 1) [EC-181](#)
Heated oxygen sensor 2 heater (bank 2) [EC-181](#)
Heated seat [SE-82](#)
Heater and cooling unit (Heater core) . [ATC-157](#), [ATC-160](#)
Heater unit (heater core) [ATC-157](#), [ATC-160](#)
Height (Dimensions) [GI-51](#)
HFC134a (R134a) system identification [ATC-6](#)
HFC134a (R134a) system precaution [ATC-5](#)
HFC134a (R134a) system service procedure [ATC-175](#)
HFC134a (R134a) system service tools [ATC-14](#)
HFC134a system service equipment precaution [ATC-11](#)
High and low reverse clutch solenoid valve [AT-147](#), [AT-149](#)
Homelink universal transceiver [BL-146](#)
Horn [WW-48](#)
HORN - Wiring diagram [WW-48](#)
How to erase DTC for OBD system [EC-63](#)
HSEAT - Wiring diagram [SE-84](#)

I

IATS - Wiring diagram [EC-215](#)
ICC - Wiring diagram [ACS-20](#)
ICC/BS - Wiring diagram [EC-565](#)
ICC/SW - Wiring diagram [EC-550](#)
ICCBOF - Wiring diagram [EC-672](#)
Identification plate [GI-49](#)
Idle air volume learning [EC-80](#)
Idle speed [EC-73](#), [EC-78](#)
Idle speed control (ISC) [EC-466](#), [EC-468](#)
Ignition coil [EM-28](#), [EC-679](#)
Ignition control system [EC-679](#)
Ignition key hole illumination [LT-110](#)
Ignition timing [EC-73](#), [EC-78](#)
IGNSYS - Wiring diagram [EC-680](#)
ILL - Wiring diagram [LT-136](#)
Illumination [LT-130](#)

In vehicle sensor [ATC-141](#), [ATC-150](#)
In-cabin Microfilter [MA-21](#)
INJECT - Wiring diagram [EC-660](#)
Injector [EC-659](#)
Input clutch solenoid valve [AT-135](#), [AT-137](#)
Instrument panel [IP-10](#)
Intake air temperature sensor [EC-214](#), [EC-234](#)
Intake door control linkage adjustment . [ATC-85](#), [ATC-88](#)
Intake door motor [ATC-83](#), [ATC-164](#)
Intake manifold [EM-17](#)
Intake sensor [ATC-146](#), [ATC-152](#)
Intake valve timing control (Bank 1) [EC-161](#)
Intake valve timing control (Bank 2) [EC-161](#)
Intake valve timing control position sensor (Bank 1) [EC-492](#)
Intake valve timing control position sensor (Bank 2) [EC-492](#)
Intake valve timing control solenoid valve (Bank 1) [EC-189](#)
Intake valve timing control solenoid valve (Bank 2) [EC-189](#)
Integrated homelink transmitter - See Homelink universal transceiver [BL-146](#)
Intelligent cruise control (ICC) system [ACS-6](#)
Interior [EI-35](#)
Interior lamp [LT-110](#)
Interior lamp on-off control [LT-111](#)
Internal gear (Transfer) [TF-149](#), [TF-176](#)
IPDM (Intelligent power distribution module engine room) [PG-18](#)
IVCB1 - Wiring diagram [EC-190](#)
IVCB2 - Wiring diagram [EC-192](#)
IVCSB1 - Wiring diagram [EC-493](#)
IVCSB2 - Wiring diagram [EC-495](#)
IVIS (Infiniti vehicle immobilizer system) [BL-127](#)
IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-3](#)
IVTB1 - Wiring diagram [EC-164](#)
IVTB2 - Wiring diagram [EC-166](#)

J

Jacking points [GI-42](#)
Junction box (J/B) [PG-76](#)

K

Key illumination [LT-111](#)
KEYLES - Wiring diagram [BL-45](#)
Knock sensor (KS) [EC-357](#)
KS - Wiring diagram [EC-358](#)

L

Laser beam aiming adjustment [ACS-12](#)
Length (Dimensions) [GI-51](#)
License lamp [LT-89](#)
Lifting points [GI-43](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Line pressure solenoid valve [AT-118](#)
 Line pressure switch (Transfer) [TF-154](#), [TF-167](#)
 Line pressure test (A/T) [AT-52](#)
 Location of electrical units [PG-65](#)
 Low coast brake solenoid valve [AT-151](#), [AT-153](#)
 Low tire pressure warning system [WT-8](#)
 Low tire pressure warning system - trouble diagnoses .
[WT-11](#)
 Low tire pressure warning system - Wiring diagram
[WT-11](#)
 Lubricant (R134a) A/C [ATC-22](#)
 Lubricants [MA-11](#)
 Lubrication circuit (engine) [LU-6](#)
 Lubrication oil A/C [ATC-22](#)
 Lubrication-locks, hinges and hood latches [MA-31](#)

M

MAFS - Wiring diagram [EC-200](#), [EC-208](#)
 Magnet clutch [ATC-115](#), [ATC-180](#)
 MAIN - Wiring diagram [EC-150](#), [AT-163](#)
 Main oil pump (Transfer) [TF-154](#), [TF-167](#)
 Mainshaft (Transfer) [TF-154](#), [TF-167](#)
 Maintenance (engine)Schedule 1 [MA-7](#)
 Maintenance (engine)Schedule 2 [MA-9](#)
 Major overhaul (Final drive) [FFD-14](#)
 Major overhaul (Transfer) [TF-146](#)
 Malfunction indicator lamp (MIL) [EC-65](#)
 Map lamp [LT-111](#)
 Mass air flow sensor (MAFS) [EC-197](#), [EC-206](#)
 Meter [DI-5](#)
 METER - Wiring diagram [DI-9](#)
 MIL data link connectors circuit [EC-697](#)
 MIL/DL - Wiring diagram [EC-697](#)
 MIRROR - Wiring diagram [GW-87](#)
 Misfire [EC-350](#)
 Mode door control linkage adjustment [ATC-65](#)
 Mode door motor [ATC-62](#), [ATC-165](#)
 Model variation [GI-48](#)
 Multiport fuel injection (MFI) system [EC-25](#)
 Multiport fuel injection precautions [GI-6](#)
 Multi-remote control system - See Remote keyless entry
 system [BL-40](#)

N

NATS - Wiring diagram [BL-130](#)
 NAVI - Wiring diagram [AV-86](#)
 NAVI Control Unit [AV-83](#)
 Navigation system [AV-81](#)
 Neutral-4LO switch [TF-61](#)
 NONDTC - Wiring diagram [AT-172](#)
 NVH troubleshooting (AX) [FAX-4](#)
 NVH troubleshooting (EM) [EM-10](#)
 NVH troubleshooting (Final drive) [RFD-7](#)
 NVH troubleshooting (Propeller shaft) [PR-3](#)
 NVH troubleshooting (RAX) [RAX-4](#)
 NVH troubleshooting (RSU) [RSU-5](#)
 NVH troubleshooting (ST) [PS-5](#)

NVH troubleshooting (Transfer) [TF-10](#)
 NVH troubleshooting (WT)NVH troubleshooting (WT) ..
[WT-4](#)
 NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-183](#)
 O2H2B2 - Wiring diagram [EC-185](#)
 O2S2B1 - Wiring diagram ... [EC-279](#), [EC-290](#), [EC-303](#)
 O2S2B2 - Wiring diagram ... [EC-281](#), [EC-292](#), [EC-305](#)
 Oil cooler (engine) [LU-12](#)
 Oil filter [LU-11](#)
 Oil filter (Transfer) [TF-143](#)
 Oil pan (engine) [EM-24](#)
 Oil pressure (engine) [LU-8](#)
 Oil pressure relief valve (engine) [LU-6](#)
 Oil pump (engine) [LU-14](#)
 Oil seal replacement (engine) [EM-60](#)
 Oil seal replacement (front of final drive) [FFD-8](#), [RFD-9](#)
 Oil seal replacement (side of final drive) [RFD-11](#)
 On board diagnostic system [EC-49](#)
 ORVR (On-board Refueling Vapor Recovery) .. [EC-40](#)
 Overheat [EC-504](#)

P

P/SCKT - Wiring diagram [WW-46](#)
 Pantograph jack [GI-42](#)
 Park/Neutral position switch [EC-487](#)
 Parking brake control [PB-4](#)
 PCV (positive crankcase ventilation) [EC-46](#)
 Periodic maintenance [MA-7](#)
 Personal lamp [LT-111](#)
 PGC/V - Wiring diagram [EC-397](#), [EC-405](#)
 PHASE - Wiring diagram [EC-371](#)
 PHONE - Wiring diagram [AV-65](#)
 Pinion bearing preload diff. [RFD-26](#)
 Piston pin inspection [EM-94](#)
 Piston ring inspection [EM-95](#)
 Piston to bore clearance [EM-99](#)
 Planetary carrier (Transfer) [TF-149](#), [TF-176](#)
 PNP/SW - Wiring diagram ... [EC-489](#), [AT-101](#), [AT-102](#)
 POS - Wiring diagram [EC-364](#)
 POWER - Wiring diagram [PG-6](#)
 Power door lock [BL-16](#)
 Power seat [SE-81](#)
 Power steering fluid level [MA-29](#)
 Power steering gear [PS-15](#)
 Power steering oil pump [PS-22](#)
 Power steering pressure (PSP) sensor [EC-470](#)
 Power steering system bleeding [PS-6](#)
 Power supply routing [PG-4](#)
 Power window [GW-15](#)
 PRE/SE - Wiring diagram [EC-429](#), [EC-435](#)
 Precautions (General) [GI-4](#)
 Precautions in repairing high strength steel [BL-182](#)
 Pressure switch 1 [AT-141](#), [AT-155](#)

ALPHABETICAL INDEX

Pressure switch 2 [AT-153](#)
 Pressure switch 3 [AT-137](#), [AT-157](#)
 Pressure switch 5 [AT-145](#), [AT-159](#)
 Pressure switch 6 [AT-149](#), [AT-161](#)
 Pressure test (A/T) [AT-52](#)
 Propeller shaft [PR-4](#), [PR-8](#)
 Propeller shaft inspection [MA-25](#)
 Propeller shaft on vehicle service [PR-8](#)
 Propeller shaft vibration [PR-4](#), [PR-8](#)
 PS/SEN - Wiring diagram [EC-471](#)

R

R/VIEW - Wiring diagram [DI-66](#)
 Radiator [CO-14](#)
 Rear Audio Remote Control Unit [AV-8](#)
 Rear axle [RAX-5](#)
 Rear bumper [EI-15](#)
 Rear case (Transfer) [TF-148](#), [TF-181](#)
 Rear combination lamp removal and installation ... [LT-101](#)
 Rear cover packing replacement diff. [RFD-28](#)
 Rear door [BL-117](#), [GW-65](#)
 Rear seat belt [SB-7](#)
 Rear suspension [RSU-23](#)
 Rear view monitor [DI-63](#)
 Rear washer [WW-29](#)
 Rear window defogger [GW-71](#)
 Rear wiper [WW-29](#)
 Refrigerant connection precaution [ATC-6](#)
 Refrigerant discharging evacuating charging [ATC-175](#)
 Refrigerant general precaution [ATC-6](#)
 Refrigerant lines [ATC-175](#), [ATC-183](#), [ATC-184](#)
 Refrigerant pressure sensor [EC-692](#), [ATC-184](#)
 Relay box [PG-78](#)
 Remote keyless entry system [BL-40](#)
 Removal and installation (A/T) [AT-238](#), [AT-241](#)
 Removal and installation (Transfer) [TF-145](#)
 Ring gear diff. inspection [RFD-18](#)
 Road wheel size [GI-51](#)
 Rocker cover [EM-35](#)
 Room lamp [LT-110](#)
 Room lamp - See Interior lamp [LT-110](#)
 ROOM/L - Wiring diagram [LT-116](#)
 RP/SEN - Wiring diagram [EC-693](#)

S

SAE J1979 - Service \$01 - 09 [EC-49](#)
 SEAT - Wiring diagram [SE-81](#)
 Seat belt inspection [SB-12](#), [MA-32](#)
 Seat belt pre-tensioner [SRS-50](#)
 Seat belt, front [SB-3](#)
 Seat belt, rear [SB-7](#)
 Seat, front [SE-89](#)
 Self-diagnosis (Transfer) [TF-49](#)
 SEN/PW - Wiring diagram [EC-483](#)
 SHIFT - Wiring diagram [AT-217](#)
 Shift control (Transfer) [TF-149](#), [TF-176](#)

Shift lock system [AT-216](#)
 Shock absorber (front) [FSU-11](#)
 Shock absorber (rear) [RSU-32](#)
 Side air bag (satellite) sensor [SRS-49](#)
 Side curtain air bag [SRS-46](#)
 Side trim [EI-35](#)
 SMJ (super multiple junction) [PG-74](#)
 SONAR - Wiring diagram [DI-53](#)
 Spare tire size [GI-51](#)
 Spark plug [EM-29](#)
 Specification value [EC-139](#)
 Speedometer [DI-5](#)
 Spiral cable [SRS-41](#)
 SROOF - Wiring diagram [RF-13](#)
 SRS - See Supplemental Restraint System [SRS-5](#)
 SRS - Wiring diagram [SRS-13](#)
 SRS Trouble diagnoses [SRS-9](#)
 Stabilizer bar (front) [FSU-12](#)
 Stabilizer bar (rear) [RSU-39](#)
 Stall test (A/T) [AT-51](#)
 Standardized relay [PG-72](#)
 START - Wiring diagram [SC-11](#)
 Starting system [SC-10](#)
 Steering gear, linkage and transfer gear inspection [MA-29](#)
 Steering linkage [PS-15](#)
 Steering wheel and column [PS-7](#)
 Step lamp [LT-111](#)
 Stop lamp [LT-84](#)
 Stop lamp switch [EC-572](#), [EC-584](#), [EC-647](#)
 STOP/L - Wiring diagram [LT-85](#)
 Strut (front) [FSU-10](#)
 STSIG - Wiring diagram [AT-97](#)
 Sub-oil pump (Transfer) [TF-154](#), [TF-167](#)
 Sun gear (Transfer) [TF-149](#), [TF-176](#)
 Sun roof, electric [RF-10](#)
 Sunload sensor [ATC-144](#)
 Sunroof [RF-22](#)
 Supplemental Restraint System [SRS-5](#)
 Supplemental restraint system - Wiring diagram . [SRS-13](#)
 Symbols and abbreviations [GI-10](#), [GI-23](#)
 Symptom matrix chart [EC-94](#)
 System readiness test (SRT) code [EC-55](#)

T

Tachometer [DI-5](#)
 Tail lamp [LT-89](#)
 TAIL/L - Wiring diagram [LT-91](#)
 TCM circuit diagram [AT-50](#)
 TCS - Wiring diagram [BRC-16](#)
 TCS (traction control system) [BRC-7](#)
 TCS component parts and connector location [BRC-14](#)
 TCS wheel sensors [BRC-14](#)
 Telephone [AV-62](#)
 Theft warning system - See Vehicle security (Theft warn-
 ing) system [BL-67](#)
 Thermometer [DI-23](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Three way catalyst [EM-21](#)
 Three way catalyst function (Bank 1) [EC-376](#)
 Three way catalyst function (Bank 2) [EC-376](#)
 Three way catalyst precautions [GI-5](#)
 Throttle control motor [EC-601](#)
 Throttle control motor relay [EC-589](#)
 Throttle position sensor (TPS) .. [EC-224](#), [EC-343](#), [EC-514](#), [EC-516](#), [EC-621](#)
 Throttle valve closed position learning [EC-80](#)
 Tie-rod [PS-15](#)
 Timing chain [EM-37](#)
 Tire rotation [MA-28](#)
 Tire size [GI-51](#)
 Torque converter installation [AT-239](#), [AT-240](#), [AT-243](#), [AT-244](#)
 Torque convertor clutch solenoid valve ... [AT-114](#), [AT-116](#)
 Tow truck towing [GI-44](#)
 Towing point [GI-45](#)
 TPS1 - Wiring diagram [EC-345](#)
 TPS2 - Wiring diagram [EC-226](#)
 TPS3 - Wiring diagram [EC-623](#)
 Traction control system - Wiring diagram [BRC-16](#)
 Transfer control device [TF-75](#), [TF-79](#), [TF-138](#)
 Transfer control unit inspection table [TF-35](#)
 Transfer dropping resistor [TF-89](#)
 Transfer fluid temperature sensor [TF-103](#), [TF-154](#), [TF-167](#)
 Transfer motor [TF-101](#), [TF-142](#)
 Transfer motor relay [TF-101](#)
 Transfer oil replacement [MA-24](#)
 Transfer serial number [GI-50](#)
 Transmission serial number [GI-50](#)
 Tread-FR&RR (Dimensions) [GI-51](#)
 Trim [EI-35](#)
 TRNSCV - Wiring diagram [BL-130](#), [BL-146](#)
 Trouble diagnoses [GI-11](#)
 Turbine revolution sensor [AT-105](#)
 TURN - Wiring diagram [LT-67](#)
 Turn signal lamp [LT-63](#)
 Two trip detection logic [EC-49](#)
 Two-pole lift [GI-43](#)

V

Vacuum hose (brake system) [BR-20](#)
 Vacuum hose drawing (Engine control) [EC-106](#)
 Valve clearance [EM-55](#)
 Valve guide [EM-69](#)
 Vanity mirror lamp [LT-110](#)
 VDC (vehicle dynamics control) [BRC-7](#)
 VDC -Wiring diagram [BRC-16](#)
 Vehicle identification number [GI-49](#)
 Vehicle recovery (freeing a stuck vehicle) [GI-45](#)
 Vehicle security (theft warning) system [BL-67](#)
 Vehicle speed sensor (VSS) [EC-464](#)
 VEHSEC - Wiring diagram [BL-71](#)
 VENT/V - Wiring diagram [EC-412](#), [EC-419](#)
 VIN registration [EC-79](#)

Viscosity number (SAE) [MA-12](#)
 VSS A/T - Wiring diagram [AT-107](#), [AT-109](#)

W

W/ANT - Wiring diagram [AV-59](#)
 Wait detection switch [TF-68](#)
 WARN - Wiring diagram [DI-29](#)
 Warning chime [DI-38](#)
 Warning lamps [DI-28](#)
 Washer, front [WW-4](#)
 Washer, rear [WW-29](#)
 Water pump [CO-19](#)
 Water temperature gauge [DI-5](#)
 Wheel alignment (front) [FSU-6](#)
 Wheel alignment (rear) [RSU-25](#)
 Wheel bearing (front) [FAX-5](#)
 Wheel bearing (rear) [RAX-5](#)
 Wheel hub (rear) [RAX-5](#)
 Wheel size [GI-51](#)
 Wheelbase (Dimensions) [GI-51](#)
 Width (Dimensions) [GI-51](#)
 WINDOW - Wiring diagram [GW-22](#)
 Window, door [GW-62](#), [GW-65](#)
 Windshield [GW-11](#)
 WIP/R - Wiring diagram [WW-33](#)
 WIPER - Wiring diagram [WW-8](#)
 Wiper, front [WW-4](#)
 Wiper, rear [WW-29](#)
 Wiring Diagram (Cell code) list [PG-62](#)
 Wiring diagrams [GI-15](#)
 WT-T/WARN - Wiring diagram [WT-11](#)