

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-332
ABS - Wiring diagramBR-46
ABS (anti-lock brake system).....BR-39
Absolute pressure sensorEC-124
A/C - Wiring diagram.....HA-21
A/C air flow.....HA-16
A/C component layout.....HA-15
A/C compressor clutch removal and
installationHA-68
A/C compressor description.....HA-7
A/C compressor mounting.....HA-67
A/C compressor precaution.....HA-7
A/C compressor special service tool.....HA-8
A/C control linkage adjustment (manual A/C).....HA-37
A/C control operation (manual A/C).....HA-14
A/C diagnostic work flow (manual A/C)HA-28
A/C HFC134a (R134a) system introductionHA-13
A/C HFC134a (R134a) system precautionHA-2
A/C HFC134a (R134a) system service
procedureHA-59, HA-62
A/C HFC134a (R134a) system service tools.....HA-9
A/C HFC134a system service equipment
precautionHA-11
A/C lubricant (R134a).....HA-64
A/C lubrication oilHA-64
A/C operational check.....HA-26
A/C performance chart.....HA-52
A/C performance test diagnoses.....HA-50
A/C pressure switchHA-13
A/C push control.....HA-14, HA-75
A/C relay.....HA-47
A/C service data specification.....HA-76
A/C trouble diagnoses (manual A/C)HA-28
Accel drum unitEM-28
Accelerator control system.....FE-3
Accelerator wire adjustment.....FE-3
Air bagRS-11
Air bag disposal.....RS-24
Air bag precautionsGI-2
Air bleeding for brake systemBR-7
Air bleeding (hydraulic clutch).....CL-6
Air cleaner filter replacementMA-13
Air conditioner cut controlEC-21
Air conditioning - See A/C.....HA-13
Air flow meter - See Mass air flow sensor.....EC-115
AlternatorEL-37
Angular tightening applicationEM-2
AntennaEL-150
Anti-lock brake system - See ABS.....BR-39
Anti-lock brake system - Wiring diagram.....BR-46
AP/SEN - Wiring diagramEC-124

ASCD - Wiring diagram.....EL-161
ASCD (automatic speed control device).....EL-157
A/T - Wiring diagram - AT - FTS.....AT-85
A/T - Wiring diagram - AT - MAIN.....AT-76
A/T - Wiring diagram - AT - PNP/SW.....AT-80
A/T - Wiring diagram - AT - VSS A/T.....AT-90
A/T controlEC-344
A/T diagnosis communication lineEC-433
A/T fluid temperature sensor.....AT-87
A/T self-diagnoses.....AT-38
A/T shift lock system.....AT-200
A/T shift lock system - Wiring diagram.....AT-201
A/T trouble diagnosesAT-49
A/T Wiring diagram - AT - ENG SSAT-94
A/T Wiring diagram AT - 1ST.....AT-99
A/T Wiring diagram AT - 2ND.....AT-105
A/T Wiring diagram AT - 3RD.....AT-111
A/T Wiring diagram AT - 4TH.....AT-117
A/T Wiring diagram AT - BA/FTS.....AT-163
A/T Wiring diagram AT - LPSVAT-136
A/T Wiring diagram AT - NONDTC.....AT-174
A/T Wiring diagram AT - OVRCSVAT-158
A/T Wiring diagram AT - SSV/A.....AT-141
A/T Wiring diagram AT - SSV/B.....AT-146
A/T Wiring diagram AT - TCCSIG.....AT-129
A/T Wiring diagram AT - TCVAT-123
A/T Wiring diagram AT - TPS.....AT-152
A/T Wiring diagram AT - VSSMTR.....AT-168
AT/C - Wiring diagram.....EC-344
AudioEL-145
AUDIO - Wiring diagramEL-146
Audio and A/C control removal and
installation - See Instrument panel.....BT-18
Automatic speed control system - See ASCD..EL-157
Automatic transaxle numberGI-41
Automatic transmission fluid replacementMA-18
Auxiliary air control (AAC).....EC-332

B

Back windowBT-48
BACK/L - Wiring diagram.....EL-62
Back-up lampEL-62
Back-up lamp switch (M/T)MT-8
Ball joint front axle.....FA-27
Basic inspectionEC-84
BatteryEL-27
Baulk ring (M/T).....MT-15
Block heaterEM-44
Blower and cooling unit.....HA-73
Blower motorHA-34, HA-74
Blower resistor.....HA-34
Board-on lift.....GI-44

ALPHABETICAL INDEX

Body alignment..... BT-52
 Boring/honing cylinder block EM-47
 BPT valve EC-280
 Brake booster BR-16
 Brake control valve (Proportioning valve) BR-9
 Brake fluid change BR-6
 Brake fluid level MA-19
 Brake fluid level and line check BR-6
 Brake hydraulic line BR-8
 Brake inspection MA-19
 Brake lines and cables inspection MA-19
 Brake lining wear temporary checking MA-20
 Brake master cylinder BR-13
 Brake pedal BR-11
 Bulb specifications EL-287
 Bumper, front BT-7
 Bumper, rear BT-11
 BYPS/V - Wiring diagram EC-423

C

Camshaft inspection EM-33
 Camshaft position sensor (CMPS) EC-260
 Canister - See EVAP canister EC-23
 CHARGE - Wiring diagram EL-38
 Charging system EL-37
 Chassis and body maintenance MA-17
 CHIME - Wiring diagram EL-112
 CIGAR - Wiring diagram EL-131
 Cigarette lighter EL-131
 Circuit breaker EL-19
 CKPS - Wiring diagram EC-255
 Closed loop control EC-19
 Clutch cover CL-11
 Clutch disc CL-11
 Clutch fluid level MA-17
 Clutch master cylinder CL-7
 Clutch operating cylinder CL-8
 Clutch pedal CL-4
 Clutch release bearing CL-9
 Clutch release mechanism CL-9
 Clutch withdrawal lever CL-9
 CMPS - Wiring diagram EC-260
 Coil spring (front) FA-25
 Coil spring (rear) RA-12
 Collision diagnosis RS-64
 Combination lamp, rear, removal and
 installation BT-32
 Combination meter EL-86
 Combination meter removal and installation -
 See Instrument panel BT-18
 Combination switch EL-42
 Component Location (manual A/C) HA-17

Compression pressure EM-13
 Compressor clutch removal and installation HA-68
 Compressor description HA-7
 Compressor mounting HA-67
 Compressor precaution HA-7
 Compressor special service tool HA-8
 Connecting rod EM-47
 Connecting rod bearing clearance EM-50
 Connecting rod bushing clearance EM-51
 Connector inspection GI-20
 Console box - See Instrument panel BT-18
 CONSULT for ABS BR-56
 CONSULT for engine EC-67
 CONSULT general information GI-36
 Control lever (M/T) MT-13
 Control valve (A/T) AT-238
 Coolant mixture ratio MA-9
 Coolant replacement MA-11
 Cooling circuit (engine) LC-9
 Cooling fan LC-14
 Cooling fan control system LC-14
 Cooling fan motor EC-453
 Cooling fan relay EC-453
 CORNER - Wiring diagram EL-66
 Cornering lamp EL-66
 Coupling sleeve (M/T) MT-15
 Crank angle sensor built into distributor - See
 Camshaft position sensor EC-260
 Crankcase emission control system - See
 positive crankcase ventilation EC-33
 Crankcase ventilation system - See positive
 crankcase ventilation EC-33
 Crankshaft EM-48
 Crankshaft position sensor (OBD) EC-255
 Crankshaft position sensor (OBD) cog
 chipping EC-361
 Cruise control - See ASCD EL-157
 Cylinder block EM-44
 Cylinder block boring EM-47
 Cylinder head EM-30
 Cylinder head bolt tightening EM-30

D

Daytime light system EL-50
 Daytime running light - See Daytime light
 system EL-50
 DEF - Wiring diagram EL-136
 Detonation sensor - See Knock sensor EC-250
 Diagnosis sensor unit RS-16
 Diagnostic trouble code (DTC) inspection
 priority chart EC-90
 Differential gear (FF A/T) AT-281

ALPHABETICAL INDEX

Differential gear (FF M/T).....MT-29
Dimensions.....GI-42
Distributor.....EC-20
Distributor ignition (DI) system.....EC-20
D/LOCK - Wiring diagram.....EL-185
Dome light - See Interior lamp.....EL-76
Door, front.....BT-15
Door glass.....BT-15
Door lock.....BT-15
Door mirror.....BT-50
Door, rear.....BT-17
Door trim.....BT-23
Drive belt inspection.....MA-10
Drive plate runout.....EM-52
Drive shaft (front).....FA-16
Dropping resistor (A/T).....AT-138
DTC work support.....EC-75
DTRL - Wiring diagram.....EL-53

E

ECCS relay.....EC-110
ECM input/output signal.....EC-99
ECTS - Wiring diagram.....EC-135
EGR control (EGRC) - BPT valve.....EC-276
EGR control (EGRC) - solenoid valve.....EC-366
EGR control valve.....EC-273, EC-280, EC-382
EGR temperature sensor.....EC-371
EGRC1 - Wiring diagram.....EC-267
EGRC/V - Wiring diagram.....EC-366
EGR/TS - Wiring diagram.....EC-371
Electric sun roof.....EL-152
Electrical diagnoses.....GI-23
Electrical ignition system.....EC-20
Electrical load signal circuit.....EC-473
Electrical unit.....EL-266
Electrical units location.....EL-266
Engine compartment.....BT-52
Engine control circuit diagram.....EC-12
Engine control component parts location.....EC-13
Engine control module (ECM).....EC-348
Engine control system diagram and chart.....EC-15
Engine coolant temperature sensor
(ECTS).....EC-135, EC-153
Engine fail-safe system.....EC-91
Engine oil filter replacement.....MA-14
Engine oil precautions.....GI-7
Engine oil replacement.....MA-14
Engine outer component parts.....EM-10
Engine removal.....EM-41
Engine room - See Engine compartment.....BT-52
Engine serial number.....GI-41
EVAP canister.....EC-23

EVAP canister purge volume control solenoid
valve.....EC-294, EC-394
EVAP canister vent control valve.....EC-300, EC-401
EVAP control system pressure sensor.....EC-305
EVAP control system purge flow monitoring
diagnosis.....EC-406
EVAP control system (small leak) diagnosis.....EC-285
EVAP vapor lines inspection.....MA-16
Evaporative emission (EVAP) system.....EC-23
Exhaust gas recirculation (EGR) valve.....EC-267
Exhaust system.....FE-6
Exhaust system inspection.....MA-17
Exterior.....BT-27

F

Fan switch.....HA-34
Fast idle.....EC-35
Fast idle cam (FIC).....EC-35
Fast idle cam (FIC) inspection and
adjustment.....EC-35
F/FOG - Wiring diagram.....EL-64
FICD - Wiring diagram.....EC-469
Final drive (FF A/T).....AT-281
Final drive (FF M/T).....MT-29
Finisher, interior - See Trim.....BT-21
Finisher, rear panel.....BT-21
Floor trim.....BT-21
Flow charts.....GI-33
Fluid temperature sensor (A/T).....AT-87
Fluids.....MA-8
Flywheel (clutch).....CL-12
Flywheel runout.....EM-52
Fog lamp, front.....EL-63
Fog lamp, front, removal and installation.....BT-7
Fork rod (M/T).....MT-16
Forward clutch.....AT-259
F/PUMP - Wiring diagram.....EC-460
Freeze frame data.....EC-45
FRO2 - Wiring diagram.....EC-158
FRO2/H - Wiring diagram.....EC-196
Front axle.....FA-11
Front bumper.....BT-7
Front disc brake.....BR-19
Front door.....BT-15
Front fog lamp.....EL-63
Front fog lamp removal and installation.....BT-7
Front heated oxygen sensor (HO2S).....EC-158,
EC-165, EC-173, EC-181, EC-189
Front passenger air bag.....RS-11
Front seat.....BT-35
Front seat belt.....RS-4
Front suspension.....FA-24

ALPHABETICAL INDEX

Front tower bar BT-32
Front washer EL-122
Front wiper EL-122
FUEL - Wiring diagram EC-231
Fuel cut control (at no load & high engine speed) EC-22
Fuel filler lid BT-11
Fuel filter replacement MA-13
Fuel gauge EL-87
Fuel injector EC-454
Fuel line inspection MA-12
Fuel precautions GI-8
Fuel pressure check EC-34
Fuel pressure regulator EC-35
Fuel pressure release EC-34
Fuel pump EC-460
Fuel pump and gauge FE-5
Fuel pump relay EC-464
Fuel system FE-4
Fuel tank vacuum relief valve EC-24
Fuel temperature sensor EC-241
FUELLH - Wiring diagram EC-332
Fuse EL-19
Fusible link EL-19

G

Garage jack and safety stand GI-44
Gauges EL-86
Gear components (M/T) MT-15
Generator EL-37
Generic scan tool (GST) EC-78
Glass BT-47
Grease MA-8
Grille - See Exterior BT-7
Ground distribution EL-20

H

Harness connector EL-5
Harness connector inspection GI-20
Harness layout EL-269
Hazard warning lamp EL-68
Headlamp EL-45
Headlamp aiming control EL-49
Headlamp leveler - See Headlamp aiming control EL-49
Headlining - See Roof trim BT-25
Heated oxygen sensor heater EC-170, EC-178
Heated oxygen sensor (HO2S) EC-158, EC-165, EC-173, EC-181, EC-189
HEATER - Wiring diagram HA-20

Heater unit (heater core) HA-72
Height (Dimensions) GI-42
HFC134a (R134a) system introduction HA-13
HFC134a (R134a) system precaution HA-2
HFC134a (R134a) system service procedure HA-59, HA-62
HFC134a (R134a) system service tools HA-9
HFC134a system service equipment precaution HA-11
High clutch AT-255
H/LAMP - Wiring diagram EL-46
HLC - Wiring diagram EL-67
Hood BT-7
Horn EL-130
HORN - Wiring diagram EL-130
How to erase DTC for OBD system EC-56

I

IACV-AAC valve EC-332
IACV-FICD solenoid valve EC-469
IATS - Wiring diagram EC-129
Identification plate GI-40
Idle air control valve (IACV) EC-332
Idle mixture ratio EC-37
Idle speed EC-37
Ignition coil EC-354
Ignition timing EC-37
Ignition wire inspection EC-249
IGN/SG - Wiring diagram EC-354
ILL - Wiring diagram EL-74
Illuminated entry system EL-76
Illumination EL-73
INJECT - Wiring diagram EC-454
Injector EC-456
Injector removal and installation EC-35
Input shaft (FF M/T) MT-20
Instrument panel BT-18
Intake air temperature sensor EC-129
Intake door control linkage adjustment HA-41
Intake manifold EM-10
Integrated homelink transmitter EL-248
Interior BT-21
Interior lamp EL-76
Interior lamp on-off control EL-77
INT/L - Wiring diagram EL-85

J

Jacking points GI-43, GI-44

ALPHABETICAL INDEX

K

Keyless entry system - See Multi-remote control system.....	EL-196
Knock sensor (KS)	EC-250
Knuckle spindle	FA-11
KS - Wiring diagram.....	EC-250

L

Length (Dimensions)	GI-42
License lamp	EL-58
Lifting points	GI-43
Line pressure solenoid valve	AT-134
Line pressure test (A/T)	AT-57
Liquid gasket application.....	EM-2
LOAD - Wiring diagram.....	EC-473
Location of electrical units.....	EL-266
Lock, door.....	BT-15
Low and reverse brake	AT-265
Lubricant (R134a) A/C.....	HA-64
Lubricants	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication oil A/C	HA-64
Lubrication-locks, hinges and hood latches.....	MA-22
Luggage compartment trim	BT-26
Luggage room lamp	EL-85

M

MAFS - Wiring diagram.....	EC-115
Magnet clutch	HA-68
MAIN - Wiring diagram.....	EC-110
Main drive gear (M/T).....	MT-15
Mainshaft (M/T)	MT-25
Maintenance (engine).....	MA-10
MAJOR OVERHAUL.....	AT-213
Malfunction indicator lamp (MIL).....	EC-58
Manual transaxle number.....	GI-41
Manual transmission oil replacement.....	MA-17
Map lamp.....	EL-85
Mass air flow sensor (MAFS).....	EC-115
Master cylinder (brake)	BR-13
Master cylinder (clutch)	CL-7
Meter	EL-86
METER - Wiring diagram.....	EL-92
MIL & Data link connectors circuit	EC-476
MIL/DL - Wiring diagram	EC-476
MIRROR - Wiring diagram	EL-155
Mirror, door.....	BT-50
Mirror, out side	BT-50

Misfire	EC-245
Mode door control linkage adjustment.....	HA-37
Model variation	GI-39
Molding - See Exterior	BT-27
M/T major overhaul	MT-14
M/T removal and installation	MT-9
MULTI - Wiring diagram	EL-201
Multi link/lower ball joint (rear)	RA-14
Multipoint fuel injection (MFI) system.....	EC-18
Multipoint fuel injection precautions.....	GI-6
Multi-remote control system.....	EL-196

N

NATS - Wiring diagram	EL-252
Neutral position switch	EC-437
NVH troubleshooting (BR).....	BR-5
NVH troubleshooting (CL)	CL-3
NVH troubleshooting (EM)	EM-8
NVH troubleshooting (M/T)	MT-5
NVH troubleshooting (RA).....	RA-3
NVH troubleshooting (ST)	ST-5
NVIS (Nissan vehicle immobilizer system)	EL-250

O

Oil change (capacity)	MA-14
Oil jet	LC-4
Oil pan (engine).....	EM-15
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine)	LC-8
Oil pump (A/T).....	AT-234
Oil pump (engine).....	LC-6
Oil pump regulator valve (engine).....	LC-8
Oil seal replacement (engine)	EM-26
On board diagnostic system	EC-43
Operating cylinder (clutch)	CL-8
Out side mirror	BT-50
Overdrive control switch.....	AT-198
Overrun clutch	AT-259
Overrun clutch solenoid valve.....	AT-156
Oversize piston.....	EM-47
Oxygen sensor (O2S)	EC-158, EC-165, EC-173, EC-181, EC-189

P

Parking brake control	BR-37
Parking drum brake.....	BR-23
Parking lamp	EL-58, EL-60
Park/Neutral position switch.....	EC-437

ALPHABETICAL INDEX

Park/neutral position switch (A/T)AT-78
Park/neutral position switch (M/T).....MT-8
PCV (positive crankcase ventilation)EC-33
PGC/V - Wiring diagramEC-394
Pilot bushing replacement.....EM-54
Piston assemblyEM-52
Piston pin inspectionEM-46
Piston ring inspectionEM-46
Piston to bore clearanceEM-47
PNP/SW - Wiring diagramEC-437
POWER - Wiring diagramEL-12
Power door lockEL-181
Power door mirrorEL-155
Power seatEL-156
Power steering fluid level.....ST-6, MA-21
Power steering gearST-14
Power steering hydraulic pressure.....ST-9
Power steering oil pressure switchEC-465
Power steering oil pumpST-20
Power steering system bleedingST-7
Power supply routing.....EL-10
Power transistor & ignition coil.....EC-354
Power windowEL-175
Precautions (General)GI-4
PRE/SE - Wiring diagramEC-305
Pressure plate - See Clutch cover.....CL-11
Pressure test (A/T)AT-57
PST/SW - Wiring diagram.....EC-465

R

R134a - See HFC134aHA-2
RadiatorLC-14
Radiator fan - See Cooling fanLC-14
Radio - See AudioEL-145
Rear axleRA-4
Rear axle (disc brake type).....RA-8
Rear axle (drum brake type)RA-8
Rear bumperBT-11
Rear combination lamp removal and
installationBT-32
Rear disc brakeBR-28
Rear doorBT-17
Rear drum brakeBR-23
Rear heated oxygen sensor
(HO2S).....EC-200, EC-208, EC-215, EC-221
Rear panel finisherBT-21
Rear seatBT-37
Rear seat belt.....RS-6
Rear suspensionRA-10
Rear window.....BT-48
Rear window defoggerEL-133
Refrigerant connection precautionHA-4

Refrigerant discharging evacuating charging.....HA-62
Refrigerant general precaution.....HA-3
Refrigerant linesHA-66
Refrigeration cycle.....HA-13
Release bearing (clutch)CL-9
Removal and installation (A/T).....AT-210
ResistorEC-360
Reverse clutch.....AT-252
Reverse idler shaft (M/T)MT-15
Reverse lamp switch (M/T) - See Back-up
lamp switch (M/T)MT-8
Reverse main gear (M/T)MT-15
Revolution sensor (A/T)AT-91
Road wheel size.....GI-42
Roof trim.....BT-25
Room lampEL-76
Room lamp - See Interior lamp.....EL-76
ROOM/L - Wiring diagramEL-80
Rotor disc (front)FA-11
RRO2 - Wiring diagram.....EC-200
RRO2/H - Wiring diagram.....EC-227

S

SAE J1930 terminology list.....GI-49
Seal - See ExteriorBT-27
SEAT - Wiring diagramEL-156
Seat belt, front.....RS-4
Seat belt inspection.....RS-8, MA-22
Seat belt pre-tensioner.....RS-2, RS-11
Seat belt pre-tensioner disposalRS-24
Seat belt, rear.....RS-6
Seat, front.....BT-35
Seat, rear.....BT-37
Self-diagnostic resultsEC-58
SHIFT - Wiring diagramAT-201
Shift control components (M/T).....MT-16
Shift fork (M/T)MT-16
Shift lock systemAT-200
Shift schedule.....AT-304
Shift solenoid valve A (A/T).....AT-100, AT-112
Shift solenoid valve B (A/T)AT-100
Shock absorber (front)FA-25
Shock absorber (rear)RA-12
Side air bagRS-11
Side trimBT-21
Smart entrance control unit.....EL-242
Spare tire sizeGI-42
Spark plug replacementMA-15
SpeedometerEL-88
Spiral cable.....RS-18
Spot lampEL-85
Spring (Wheelarch) heightFA-6

ALPHABETICAL INDEX

SROOF - Wiring diagram..... EL-152
SRS - See Supplemental Restraint System RS-11
SRS - Wiring diagram RS-36
SRS Trouble diagnoses RS-31
S/SIG - Wiring diagram EC-457
Stabilizer bar (front)..... FA-26
Stabilizer bar (rear) RA-14
Stall test (A/T) AT-54
Standardized relay EL-7
START - Wiring diagram EL-33
Start signal EC-457
Starter EL-31
Starting system..... EL-31
Steering gear and linkage inspection..... MA-21
Steering knuckle..... FA-11
Steering linkage..... ST-14
Steering switch EL-44
Steering wheel and column..... ST-10
Steering wheel play..... ST-8
Steering wheel turning force ST-7
Stop lamp EL-61
STOP/L - Wiring diagram..... EL-61
Striking rod (M/T) MT-16
Strut (front) FA-25
Strut (rear) RA-12
Sun roof, electric EL-152
Sunroof..... BT-39
Supplemental Restraint System..... RS-11
Supplemental restraint system - Wiring
diagram RS-36
Symbols and abbreviations GI-10
Symptom matrix chart EC-92
Synchronizer (M/T)..... MT-15, MT-26
System readiness test (SRT) code EC-45

T

Tachometer..... EL-87
Tail lamp EL-58
TAIL/L - Wiring diagram EL-58
TCM circuit diagram AT-14
TCM inspection table AT-72
Temperature control cable and linkage
adjustment..... HA-48
TFTS - Wiring diagram..... EC-241
THEFT - Wiring diagram EL-226
Theft warning system EL-219
Thermal protector HA-47
Thermo control amp HA-47
Thermostat LC-13
Three way catalyst EC-281
Three way catalyst precautions GI-6
Throttle bodies..... EM-10

Throttle drum adjustment FE-3
Throttle position sensor adjustment..... EC-84
Throttle position sensor (TPS) EC-140
Throttle position switch..... AT-155, AT-199
Throwout bearing - See Clutch release
bearing CL-9
Tie-rod ST-17
Tie-rod ball joints ST-17
Tightening torque of standard bolts GI-48
Timing chain EM-19
Tire rotation MA-21
Tire size GI-42
TLID - Wiring diagram..... EL-154
Torque converter clutch solenoid valve..... AT-121
Torque converter installation AT-211
Tow truck towing..... GI-45
TPS - Wiring diagram..... EC-140
TP/SW - Wiring diagram EC-338
Transmission case (M/T)..... MT-14
Transverse link (front) FA-27
Tread-FR&RR (Dimensions) GI-42
Trim BT-21
Triple pressure switch HA-47
Trouble diagnoses GI-23
Trunk lid..... BT-11
Trunk lid opener - See Trunk lid BT-11
Trunk lid opener, electric..... EL-154
Trunk room lamp EL-85
Trunk room trim BT-26
TURN - Wiring diagram..... EL-70
Turn signal lamp..... EL-68
Two trip detection logic EC-43
Two-pole lift GI-45

U

Under body..... BT-54

V

Vacuum cut valve EC-432
Vacuum cut valve bypass valve..... EC-423, EC-428
Vacuum hose (brake system) BR-18
Vacuum hose drawing (Engine control) EC-16
Valve clearance EM-38
Valve guide EM-34
Valve lifter EM-37
Valve seat EM-36
Valve spring EM-37
Vanity mirror lamp EL-85
Vehicle identification number GI-40
Vehicle recovery (freeing a stuck vehicle) GI-47

ALPHABETICAL INDEX

Vehicle speed sensor (VSS)EC-328
 Vent mode switchHA-14
 VENT/V - Wiring diagram..... EC-300, EC-413
 Viscosity number (SAE) MA-8
 VSS - Wiring diagramEC-328

W

WARN - Wiring diagram..... EL-105
 Warning buzzer EL-111
 Warning chime EL-109
 Warning lamps EL-102
 Washer, front EL-122
 Water pump LC-11
 Water temperature gauge EL-87
 Weatherstrip - See Exterior..... BT-27
 Wheel alignment (front)..... FA-7
 Wheel alignment (rear).....RA-6
 Wheel balance..... MA-21
 Wheel bearing (front axle)..... FA-7
 Wheel bearing (rear)RA-5
 Wheel hub (front)FA-11

Wheel hub (rear)RA-8
 Wheel sensors (ABS).....BR-40
 Wheel size..... GI-42
 Wheelarch height FA-6
 Wheelbase (Dimensions) GI-42
 Width (Dimensions) GI-42
 WINDOW - Wiring diagram..... EL-178
 Window antenna..... EL-151
 Window, back BT-48
 Window, door..... BT-15
 Window, rear BT-48
 Windshield BT-47
 Windshield washer - See Front washer..... EL-122
 Windshield wiper - See Front wiper..... EL-122
 WIPER - Wiring diagram..... EL-124
 Wiper and washer EL-122
 Wiper, front..... EL-122
 Wiring Diagram (Cell code) list EL-288
 Wiring diagrams GI-11
 Withdrawal lever (clutch)..... CL-9
 Wrist pin - See Piston pin inspection..... EM-46

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX