

ALPHABETICAL INDEX

SECTION **IDX**

- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT
- FA
- RA
- BR
- ST
- RS
- BT
- HA
- EL

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-330
ABS - Wiring diagramBR-46
ABS (anti-lock brake system).....BR-39
Absolute pressure sensorEC-127
A/C - Wiring diagram.....HA-22
A/C air flow.....HA-17
A/C component layout.....HA-16
A/C compressor clutch removal and
installationHA-71
A/C compressor description.....HA-7
A/C compressor mounting.....HA-70
A/C compressor precaution.....HA-7
A/C compressor special service tool.....HA-8
A/C control linkage adjustment (manual A/C).....HA-38
A/C control operation (manual A/C).....HA-15
A/C diagnostic work flow (manual A/C)HA-29
A/C HFC134a (R134a) system introductionHA-14
A/C HFC134a (R134a) system precautionHA-2
A/C HFC134a (R134a) system service
procedureHA-60, HA-65
A/C HFC134a (R134a) system service tools.....HA-9
A/C HFC134a system service equipment
precautionHA-12
A/C lubricant (R134a).....HA-67
A/C lubrication oilHA-67
A/C operational check.....HA-27
A/C performance chart.....HA-53
A/C performance test diagnoses.....HA-51
A/C pressure switchHA-14
A/C push control.....HA-15, HA-78
A/C relay.....HA-48
A/C service data specification.....HA-79
A/C trouble diagnoses (manual A/C)HA-29
Accel drum unitEM-28
Accelerator control system.....FE-3
Accelerator wire adjustment.....FE-3
Air bagRS-12
Air bag disposal.....RS-26
Air bag precautionsGI-2
Air bleeding for brake systemBR-7
Air bleeding (hydraulic clutch).....CL-6
Air cleaner filter replacementMA-13
Air conditioner cut controlEC-21
Air conditioning - See A/C.....HA-14
Air flow meter - See Mass air flow sensor.....EC-118
AlternatorEL-43
Angular tightening applicationEM-2
AntennaEL-161
Anti-lock brake system - See ABS.....BR-39
Anti-lock brake system - Wiring diagram.....BR-46
ASCD - Wiring diagram.....EL-172

ASCD (automatic speed control device).....EL-168
A/T - Wiring diagram - AT - FTS.....AT-85
A/T - Wiring diagram - AT - MAIN.....AT-76
A/T - Wiring diagram - AT - PNP/SW.....AT-80
A/T - Wiring diagram - AT - VSS A/TAT-90
A/T controlEC-341
A/T diagnosis communication lineEC-425
A/T fluid temperature sensor.....AT-87
A/T self-diagnoses.....AT-38
A/T shift lock system.....AT-197
A/T shift lock system - Wiring diagram.....AT-198
A/T trouble diagnosesAT-49
A/T Wiring diagram - AT - ENG SSAT-93
A/T Wiring diagram AT - 1ST.....AT-98
A/T Wiring diagram AT - 2NDAT-104
A/T Wiring diagram AT - 3RDAT-110
A/T Wiring diagram AT - 4TH.....AT-116
A/T Wiring diagram AT - BA/FTS.....AT-160
A/T Wiring diagram AT - LPSVAT-135
A/T Wiring diagram AT - NONDTCAT-171
A/T Wiring diagram AT - OVRCSVAT-155
A/T Wiring diagram AT - SSV/A.....AT-140
A/T Wiring diagram AT - SSV/B.....AT-145
A/T Wiring diagram AT - TCCSIGAT-128
A/T Wiring diagram AT - TCVAT-122
A/T Wiring diagram AT - TPS.....AT-150
A/T Wiring diagram AT - VSSMTR.....AT-165
AT/C - Wiring diagram.....EC-341
AudioEL-157
AUDIO - Wiring diagramEL-158
Audio and A/C control removal and
installation - See Instrument panel.....BT-15
Automatic speed control system - See ASCD..EL-168
Automatic transaxle numberGI-43
Automatic transmission fluid replacementMA-18
Auxiliary air control (AAC).....EC-330

B

Back windowBT-44
BACK/L - Wiring diagram.....EL-74
Back-up lampEL-74
Back-up lamp switch (M/T)MT-8
Ball joint front axle.....FA-26
Basic inspectionEC-83
BatteryEL-27
Baulk ring (M/T).....MT-15
Block heaterEM-44
Blower and cooling unit.....HA-76
Blower motorHA-35, HA-77
Blower resistor.....HA-35
Board-on lift.....GI-46
Body alignment.....BT-48

ALPHABETICAL INDEX

Boring/honing cylinder block EM-48
 BPT valve EC-279
 Brake booster BR-16
 Brake control valve (Proportioning valve) BR-9
 Brake fluid change BR-6
 Brake fluid level MA-19
 Brake fluid level and line check BR-6
 Brake hydraulic line BR-8
 Brake inspection MA-19
 Brake lines and cables inspection MA-19
 Brake lining wear temporary checking MA-20
 Brake master cylinder BR-13
 Brake pedal BR-11
 Bulb specifications EL-292
 Bumper, front BT-5
 Bumper, rear BT-8
 BYPS/V - Wiring diagram EC-415

C

Camshaft inspection EM-33
 Camshaft position sensor (CMPS) EC-259
 Canister - See EVAP canister EC-23
 CHARGE - Wiring diagram EL-44
 Charging system EL-43
 Chassis and body maintenance MA-17
 CHIME - Wiring diagram EL-124
 CIGAR - Wiring diagram EL-143
 Cigarette lighter EL-143
 Circuit breaker EL-18
 CKPS - Wiring diagram EC-254
 Closed loop control EC-19
 Clutch cover CL-11
 Clutch disc CL-11
 Clutch fluid level MA-17
 Clutch master cylinder CL-7
 Clutch operating cylinder CL-8
 Clutch pedal CL-4
 Clutch release bearing CL-9
 Clutch release mechanism CL-9
 Clutch withdrawal lever CL-9
 CMPS - Wiring diagram EC-259
 Coil spring (front) FA-24
 Coil spring (rear) RA-12
 Collision diagnosis RS-64
 Combination lamp, rear, removal and
 installation BT-29
 Combination meter EL-99
 Combination meter removal and installation -
 See Instrument panel BT-15
 Combination switch EL-54
 Component Location (manual A/C) HA-18
 Compression pressure EM-13

Compressor clutch removal and installation HA-71
 Compressor description HA-7
 Compressor mounting HA-70
 Compressor precaution HA-7
 Compressor special service tool HA-8
 Connecting rod EM-47
 Connecting rod bearing clearance EM-51
 Connecting rod bushing clearance EM-51
 Connector inspection GI-20
 Console box - See Instrument panel BT-15
 CONSULT for ABS BR-56
 CONSULT for engine EC-66
 CONSULT general information GI-38
 Control lever (M/T) MT-13
 Control valve (A/T) AT-235
 Coolant mixture ratio MA-9
 Coolant replacement MA-11
 Cooling circuit (engine) LC-9
 Cooling fan LC-14
 Cooling fan control system LC-14
 Cooling fan motor EC-444
 Cooling fan relay EC-444
 CORNER - Wiring diagram EL-78
 Cornering lamp EL-78
 Coupling sleeve (M/T) MT-15
 Crank angle sensor built into distributor - See
 Camshaft position sensor EC-259
 Crankcase emission control system - See
 positive crankcase ventilation EC-33
 Crankcase ventilation system - See positive
 crankcase ventilation EC-33
 Crankshaft EM-49
 Crankshaft position sensor (OBD) EC-254
 Crankshaft position sensor (OBD) cog
 chipping EC-351
 Cruise control - See ASCD EL-168
 Cylinder block EM-44
 Cylinder block boring EM-48
 Cylinder head EM-30
 Cylinder head bolt tightening EM-30

D

Daytime light system EL-62
 Daytime running light - See Daytime light
 system EL-62
 DEF - Wiring diagram EL-148
 Detonation sensor - See Knock sensor EC-249
 Diagnosis sensor unit RS-18
 Diagnostic trouble code (DTC) inspection
 priority chart EC-89
 Differential gear (FF A/T) AT-278
 Differential gear (FF M/T) MT-29

ALPHABETICAL INDEX

Dimensions..... GI-44
Distributor EC-20
Distributor ignition (DI) system..... EC-20
D/LOCK - Wiring diagram EL-194
Dome light - See Interior lamp..... EL-88
Door, front..... BT-12
Door glass BT-12
Door lock BT-12
Door mirror BT-46
Door, rear BT-14
Door trim..... BT-20
Drive belt inspection..... MA-10
Drive plate runout..... EM-52
Drive shaft (front) FA-15
Dropping resistor (A/T)..... AT-137
DTC work support EC-74
DTRL - Wiring diagram EL-65

E

ECCS relay..... EC-113
ECM input/output signal..... EC-98
ECTS - Wiring diagram EC-134
EGR control (EGRC) - BPT valve..... EC-275
EGR control (EGRC) - solenoid valve EC-356
EGR control valve EC-272, EC-279, EC-372
EGR temperature sensor EC-361
EGRC1 - Wiring diagram EC-266
EGRC/V - Wiring diagram..... EC-356
EGR/TS - Wiring diagram EC-361
Electric sun roof EL-163
Electrical diagnoses GI-23
Electrical ignition system..... EC-20
Electrical load signal circuit..... EC-471
Electrical unit..... EL-273
Electrical units location..... EL-273
Engine compartment BT-48
Engine control circuit diagram..... EC-12
Engine control component parts location..... EC-13
Engine control module (ECM)..... EC-345
Engine control system diagram and chart..... EC-15
Engine coolant temperature sensor
(ECTS) EC-134, EC-151
Engine fail-safe system EC-90
Engine oil filter replacement..... MA-13
Engine oil precautions..... GI-7
Engine oil replacement..... MA-13
Engine outer component parts..... EM-10
Engine removal EM-41
Engine room - See Engine compartment BT-48
Engine serial number GI-43
EVAP canister EC-23

EVAP canister purge volume control solenoid
valve EC-293, EC-386
EVAP canister vent control valve EC-299, EC-393
EVAP control system pressure sensor EC-304
EVAP control system purge flow monitoring
diagnosis EC-398
EVAP control system (small leak)
diagnosis EC-284, EC-374
EVAP vapor lines inspection MA-16
Evaporative emission (EVAP) system..... EC-23
Exhaust gas recirculation (EGR) valve EC-266
Exhaust system FE-6
Exhaust system inspection..... MA-17
Exterior BT-24

F

Fan switch HA-35
Fast idle..... EC-35
Fast idle cam (FIC) EC-35
Fast idle cam (FIC) inspection and
adjustment..... EC-35
F/FOG - Wiring diagram..... EL-76
FICD - Wiring diagram EC-467
Final drive (FF A/T) AT-278
Final drive (FF M/T) MT-29
Finisher, interior - See Trim..... BT-18
Finisher, rear panel BT-18
Floor trim BT-18
Flow charts..... GI-33
Fluid temperature sensor (A/T)..... AT-87
Fluids..... MA-8
Flywheel (clutch) CL-12
Flywheel runout..... EM-52
Fog lamp, front..... EL-75
Fog lamp, front, removal and installation..... BT-5
Fork rod (M/T) MT-16
Forward clutch..... AT-256
F/PUMP - Wiring diagram EC-457
Freeze frame data..... EC-47
FRO2 - Wiring diagram EC-156
FRO2/H - Wiring diagram EC-192
Front axle FA-10
Front bumper..... BT-5
Front disc brake BR-19
Front door..... BT-12
Front fog lamp EL-75
Front fog lamp removal and installation..... BT-5
Front heated oxygen sensor (HO2S)..... EC-156,
EC-163, EC-170, EC-178, EC-186
Front passenger air bag..... RS-12
Front seat BT-32
Front seat belt RS-4

ALPHABETICAL INDEX

Front suspension..... FA-23
Front tower bar..... BT-29
Front washer EL-134
Front wiper EL-134
FUEL - Wiring diagram EC-230
Fuel cut control (at no load & high engine speed) EC-22
Fuel filler lid BT-8
Fuel filter replacement..... MA-12
Fuel gauge EL-100
Fuel injector..... EC-451
Fuel line inspection MA-12
Fuel precautions..... GI-8
Fuel pressure check..... EC-34
Fuel pressure regulator EC-35
Fuel pressure release EC-34
Fuel pump EC-457
Fuel pump and gauge FE-5
Fuel pump relay EC-462
Fuel system..... FE-4
Fuel tank vacuum relief valve EC-24
Fuel temperature sensor EC-240
Fuse..... EL-18
Fusible link EL-18

G

Garage jack and safety stand GI-46
Gauges..... EL-99
Gear components (M/T)..... MT-15
Generator EL-43
Generic scan tool (GST) EC-77
Glass BT-43
Grease..... MA-8
Grille - See Exterior..... BT-5
Ground distribution EL-20

H

Harness connector EL-5
Harness connector inspection..... GI-20
Harness layout EL-276
Hazard warning lamp EL-80
Headlamp EL-57
Headlamp aiming control EL-61
Headlamp leveler - See Headlamp aiming control EL-61
Headlining - See Roof trim..... BT-22
Heated oxygen sensor heater..... EC-168, EC-176
Heated oxygen sensor (HO2S)..... EC-156, EC-163, EC-170, EC-178, EC-186
HEATER - Wiring diagram HA-21

Heater unit (heater core)..... HA-75
Height (Dimensions)..... GI-44
HFC134a (R134a) system introduction..... HA-14
HFC134a (R134a) system precaution HA-2
HFC134a (R134a) system service procedure HA-60, HA-65
HFC134a (R134a) system service tools..... HA-9
HFC134a system service equipment precaution HA-12
High clutch..... AT-252
H/LAMP - Wiring diagram EL-58
Hood BT-5
Horn..... EL-142
HORN - Wiring diagram EL-142
How to erase DTC for OBD system EC-58

I

IACV-AAC valve EC-330
IACV-FICD solenoid valve..... EC-467
IATS - Wiring diagram..... EC-129
Identification plate GI-42
Idle air control valve (IACV)..... EC-330
Idle mixture ratio..... EC-37
Idle speed..... EC-37
Ignition coil EC-445
Ignition timing EC-37
Ignition wire inspection..... EC-248
IGN/SG - Wiring diagram EC-445
ILL - Wiring diagram..... EL-86
Illuminated entry system EL-88
Illumination EL-85
INJECT - Wiring diagram EC-451
Injector..... EC-453
Injector removal and installation EC-35
Input shaft (FF M/T) MT-20
Instrument panel..... BT-15
Intake air temperature sensor EC-129
Intake door control linkage adjustment..... HA-42
Intake manifold..... EM-10
Integrated homelink transmitter..... EL-255
Interior BT-18
Interior lamp EL-88
Interior lamp on-off control EL-89
INT/L - Wiring diagram EL-97

J

Jacking points..... GI-45, GI-46

ALPHABETICAL INDEX

K

Keyless entry system - See Multi-remote control system.....	EL-205
Knock sensor (KS)	EC-249
Knuckle spindle	FA-10
KS - Wiring diagram.....	EC-249

L

Length (Dimensions)	GI-44
License lamp	EL-70
Lifting points	GI-45
Line pressure solenoid valve	AT-133
Line pressure test (A/T)	AT-57
Liquid gasket application.....	EM-2
LOAD - Wiring diagram.....	EC-471
Location of electrical units.....	EL-273
Lock, door.....	BT-12
Low and reverse brake	AT-262
Lubricant (R134a) A/C.....	HA-67
Lubricants	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication oil A/C	HA-67
Lubrication-locks, hinges and hood latches.....	MA-22
Luggage compartment trim	BT-23
Luggage room lamp	EL-97

M

MAFS - Wiring diagram.....	EC-118
Magnet clutch	HA-71
MAIN - Wiring diagram.....	EC-113
Main drive gear (M/T).....	MT-15
Mainshaft (M/T)	MT-25
Maintenance (engine).....	MA-10
MAJOR OVERHAUL.....	AT-210
Malfunction indicator lamp (MIL).....	EC-60
Manual transaxle number.....	GI-43
Manual transmission oil replacement.....	MA-17
Map lamp.....	EL-97
Mass air flow sensor (MAFS).....	EC-118
Master cylinder (brake)	BR-13
Master cylinder (clutch)	CL-7
Meter	EL-99
METER - Wiring diagram.....	EL-105
MIL & Data link connectors circuit	EC-474
MIL/DL - Wiring diagram	EC-474
MIRROR - Wiring diagram.....	EL-167
Mirror, door.....	BT-46
Mirror, out side	BT-46

Misfire	EC-244
Mode door control linkage adjustment.....	HA-38
Model variation	GI-41
Molding - See Exterior	BT-24
M/T major overhaul	MT-14
M/T removal and installation	MT-9
MULTI - Wiring diagram	EL-210
Multi link/lower ball joint (rear)	RA-14
Multipoint fuel injection (MFI) system.....	EC-18
Multipoint fuel injection precautions.....	GI-6
Multi-remote control system.....	EL-205

N

NATS - Wiring diagram	EL-259
Neutral position switch	EC-428
NVH troubleshooting (BR).....	BR-5
NVH troubleshooting (CL)	CL-3
NVH troubleshooting (EM)	EM-8
NVH troubleshooting (M/T)	MT-5
NVH troubleshooting (RA).....	RA-3
NVH troubleshooting (ST)	ST-5
NVIS (Nissan vehicle immobilizer system)	EL-257

O

Oil change (capacity)	MA-13
Oil jet	LC-4
Oil pan (engine).....	EM-15
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine)	LC-8
Oil pump (A/T).....	AT-231
Oil pump (engine).....	LC-6
Oil pump regulator valve (engine).....	LC-8
Oil seal replacement (engine)	EM-26
On board diagnostic system	EC-45
Operating cylinder (clutch)	CL-8
Out side mirror	BT-46
Overdrive control switch.....	AT-195
Overrun clutch	AT-256
Overrun clutch solenoid valve.....	AT-154
Oversize piston.....	EM-48
Oxygen sensor (O2S)	EC-156, EC-163, EC-170, EC-178, EC-186

P

Parking brake control	BR-37
Parking lamp	EL-70, EL-72
Park/Neutral position switch.....	EC-428
Park/neutral position switch (A/T)	AT-78

ALPHABETICAL INDEX

Park/neutral position switch (M/T).....MT-8
PCV (positive crankcase ventilation)EC-33
PGC/V - Wiring diagramEC-386
Pilot bushing replacement.....EM-54
Piston assemblyEM-52
Piston pin inspectionEM-46
Piston ring inspectionEM-46
Piston to bore clearanceEM-48
PNP/SW - Wiring diagramEC-428
POWER - Wiring diagram.....EL-12
Power door lockEL-190
Power door mirrorEL-166
Power seatEL-167
Power steering fluid level.....ST-6, MA-21
Power steering gearST-14
Power steering hydraulic pressure.....ST-9
Power steering oil pressure switchEC-463
Power steering oil pumpST-20
Power steering system bleedingST-7
Power supply routing.....EL-10
Power transistor & ignition coil.....EC-445
Power windowEL-185
Precautions (General)GI-4
PRE/SE - Wiring diagramEC-304
Pressure plate - See Clutch cover.....CL-11
Pressure test (A/T).....AT-57
PST/SW - Wiring diagram.....EC-463

R

R134a - See HFC134aHA-2
RadiatorLC-14
Radiator fan - See Cooling fanLC-14
Radio - See AudioEL-157
Rear axleRA-4
Rear axle (disc brake type).....RA-8
Rear axle (drum brake type).....RA-8
Rear bumperBT-8
Rear combination lamp removal and
installationBT-29
Rear disc brakeBR-28
Rear doorBT-14
Rear drum brakeBR-23
Rear heated oxygen sensor (HO2S)EC-196,
EC-204, EC-212, EC-219
Rear panel finisherBT-18
Rear seat.....BT-34
Rear seat belt.....RS-6
Rear suspensionRA-10
Rear window.....BT-44
Rear window defoggerEL-145
Refrigerant connection precautionHA-4
Refrigerant discharging evacuating charging.....HA-65

Refrigerant general precaution.....HA-3
Refrigerant linesHA-69
Refrigeration cycle.....HA-14
Release bearing (clutch)CL-9
Removal and installation (A/T).....AT-207
ResistorEC-450
Reverse clutch.....AT-249
Reverse idler shaft (M/T)MT-15
Reverse lamp switch (M/T) - See Back-up
lamp switch (M/T)MT-8
Reverse main gear (M/T)MT-15
Revolution sensor (A/T)AT-91
Road wheel size.....GI-44
Roof trim.....BT-22
Room lamp.....EL-88
Room lamp - See Interior lamp.....EL-88
ROOM/L - Wiring diagramEL-92
Rotor disc (front)FA-10
RRO2 - Wiring diagram.....EC-196
RRO2/H - Wiring diagram.....EC-225

S

SAE J1930 terminology list.....GI-50
Seal - See ExteriorBT-24
SEAT - Wiring diagramEL-167
Seat belt, front.....RS-4
Seat belt inspection.....RS-8, MA-22
Seat belt pre-tensionerRS-12, RS-14
Seat belt pre-tensioner disposalRS-26
Seat belt, rear.....RS-6
Seat, front.....BT-32
Seat, rear.....BT-34
Self-diagnostic resultsEC-60
SHIFT - Wiring diagramAT-198
Shift control components (M/T).....MT-16
Shift fork (M/T)MT-16
Shift lock systemAT-197
Shift schedule.....AT-302
Shift solenoid valve A (A/T).....AT-99, AT-111
Shift solenoid valve B (A/T)AT-99
Shock absorber (front)FA-24
Shock absorber (rear)RA-12
Side air bagRS-12
Side trimBT-18
Smart entrance control unit.....EL-250
Spare tire sizeGI-44
Spark plug replacementMA-15
SpeedometerEL-101
Spiral cable.....RS-20
Spot lampEL-97
Spring (Wheelarch) heightFA-6
SROOF - Wiring diagram.....EL-163

ALPHABETICAL INDEX

SRS - See Supplemental Restraint System	RS-12	Throttle position sensor adjustment	EC-83
SRS - Wiring diagram	RS-38	Throttle position sensor (TPS)	EC-139
SRS Trouble diagnoses	RS-33	Throttle position switch	AT-153, AT-196
S/SIG - Wiring diagram	EC-454	Throwout bearing - See Clutch release bearing	CL-9
Stabilizer bar (front)	FA-25	Tie-rod	ST-17
Stabilizer bar (rear)	RA-14	Tie-rod ball joints	ST-17
Stall test (A/T)	AT-54	Tightening torque of standard bolts	GI-49
Standardized relay	EL-7	Timing chain	EM-19
START - Wiring diagram	EL-34	Tire rotation	MA-20
Start signal	EC-454	Tire size	GI-44
Starter	EL-33	TLID - Wiring diagram	EL-165
Starting system	EL-33	Torque converter clutch solenoid valve	AT-120
Steering gear and linkage inspection	MA-21	Torque converter installation	AT-208
Steering knuckle	FA-10	Tow truck towing	GI-47
Steering linkage	ST-14	TPS - Wiring diagram	EC-139
Steering switch	EL-56	TP/SW - Wiring diagram	EC-335
Steering wheel and column	ST-10	Transmission case (M/T)	MT-14
Steering wheel play	ST-8	Transverse link (front)	FA-26
Steering wheel turning force	ST-7	Tread-FR&RR (Dimensions)	GI-44
Stop lamp	EL-73	Trim	BT-18
STOP/L - Wiring diagram	EL-73	Triple pressure switch	HA-48
Striking rod (M/T)	MT-16	Trouble diagnoses	GI-23
Strut (front)	FA-24	Trunk lid	BT-8
Strut (rear)	RA-12	Trunk lid opener - See Trunk lid	BT-8
Sun roof, electric	EL-163	Trunk lid opener, electric	EL-165
Sunroof	BT-35	Trunk room lamp	EL-97
Supplemental Restraint System	RS-12	Trunk room trim	BT-23
Supplemental restraint system - Wiring diagram	RS-38	TURN - Wiring diagram	EL-82
Symbols and abbreviations	GI-10	Turn signal lamp	EL-80
Symptom matrix chart	EC-91	Two trip detection logic	EC-45
Synchronizer (M/T)	MT-15, MT-26	Two-pole lift	GI-47
System readiness test (SRT) code	EC-47		

T

Tachometer	EL-100
Tail lamp	EL-70
TAIL/L - Wiring diagram	EL-70
TCM circuit diagram	AT-14
TCM inspection table	AT-72
Temperature control cable and linkage adjustment	HA-49
TFTS - Wiring diagram	EC-240
THEFT - Wiring diagram	EL-234
Theft warning system	EL-228
Thermal protector	HA-48
Thermo control amp	HA-48
Thermostat	LC-13
Three way catalyst	EC-280
Three way catalyst precautions	GI-6
Throttle bodies	EM-10
Throttle drum adjustment	FE-3

U

Under body	BT-50
------------------	-------

V

Vacuum cut valve	EC-424
Vacuum cut valve bypass valve	EC-415, EC-420
Vacuum hose (brake system)	BR-18
Vacuum hose drawing (Engine control)	EC-16
Valve clearance	EM-38
Valve guide	EM-34
Valve lifter	EM-37
Valve seat	EM-36
Valve spring	EM-37
Vanity mirror lamp	EL-97
Vehicle identification number	GI-42
Vehicle recovery (freeing a stuck vehicle)	GI-48
Vehicle speed sensor (VSS)	EC-326

ALPHABETICAL INDEX

Vent mode switch.....HA-15
VENT/V - Wiring diagram..... EC-299, EC-405
Viscosity number (SAE) MA-8
VSS - Wiring diagramEC-326

W

WARN - Wiring diagram.....EL-117
Warning buzzer EL-121
Warning chime EL-121
Warning lampsEL-114
Washer, front EL-134
Water pump..... LC-11
Water temperature gauge EL-100
Weatherstrip - See Exterior..... BT-24
Wheel alignment (front)..... FA-7
Wheel alignment (rear).....RA-6
Wheel balance..... MA-20
Wheel bearing (front axle)..... FA-7
Wheel bearing (rear)RA-6
Wheel hub (front) FA-10

Wheel hub (rear)RA-8
Wheel sensors (ABS).....BR-40
Wheel size..... GI-44
Wheelarch height FA-6
Wheelbase (Dimensions) GI-44
Width (Dimensions)..... GI-44
WINDOW - Wiring diagram..... EL-187
Window antenna..... EL-162
Window, back BT-44
Window, door..... BT-12
Window, rear BT-44
Windshield BT-43
Windshield washer - See Front washer..... EL-134
Windshield wiper - See Front wiper..... EL-134
WIPER - Wiring diagram..... EL-136
Wiper and washer EL-134
Wiper, front..... EL-134
Wiring Diagram (Cell code) list EL-293
Wiring diagrams GI-11
Withdrawal lever (clutch)..... CL-9
Wrist pin - See Piston pin inspection..... EM-46

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

NOTES