

SECTION **IDX**

ALPHABETICAL INDEX

A
B
C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

A

A/C - Wiring diagram	ATC-35 , MTC-35	A/T Wiring diagram AT - OVRCSV	AT-182
A/C air flow	MTC-22	A/T Wiring diagram AT - SSV/A	AT-167
A/C component layout	MTC-17	A/T Wiring diagram AT - SSV/B	AT-172
A/C compressor clutch removal and installation ..	ATC-123 , MTC-85	A/T Wiring diagram AT - TCCSIG	AT-153
A/C compressor description	MTC-16	A/T Wiring diagram AT - TCV	AT-148
A/C compressor mounting ATC-122 , MTC-83 , MTC-84		A/T Wiring diagram AT - TPS	AT-177
A/C compressor precaution	ATC-9 , MTC-9	A/T Wiring diagram AT - VSSMTR ..	AT-198 , AT-202
A/C compressor special service tool .	ATC-12 , MTC-12	ABS - Wiring diagram	BRC-12
A/C diagnostic work flow (auto A/C)	ATC-31	Absolute pressure sensor	EC-804
A/C diagnostic work flow (manual A/C)	MTC-28	Accelerator control system	ACC-2
A/C evaporator	ATC-128 , MTC-90	Accelerator pedal position (APP) sensor	EC-263 , EC-269 , EC-465 , EC-915 , EC-922 , EC-1125
A/C HFC134a (R134a) system identification	ATC-5 , MTC-4	Accelerator pedal released position learning ..	EC-668
A/C HFC134a (R134a) system introduction ...	MTC-16	Active damper suspension system - Wiring diagram	FSU-4
A/C HFC134a (R134a) system precaution	ATC-4 , MTC-3	Aiming adjustment	LT-23
A/C HFC134a (R134a) system service procedure	ATC-119 , MTC-79	Air bag	SRS-3
A/C HFC134a (R134a) system service tools ..	ATC-12 , MTC-12	Air bag disposal	SRS-54
A/C HFC134a system service equipment precaution ...	ATC-9 , MTC-9	Air bag precautions	GI-3
A/C lubricant (R134a)	ATC-18 , MTC-18	Air bleeding (hydraulic clutch)Air bleeding (hydraulic clutch)	CL-7
A/C lubrication oil	ATC-18 , MTC-18	Air bleeding for brake systemAir bleeding for brake system	BR-9
A/C operational check	ATC-49 , MTC-38	Air cleaner and air duct	EM-14 , EM-110
A/C performance chart	ATC-82 , MTC-59	Air cleaner filter replacement	MA-17 , MA-24
A/C performance test diagnoses	ATC-79 , MTC-58	Air conditioner - Wiring diagram	ATC-35 , MTC-35
A/C self-diagnoses (auto A/C)	ATC-41	Air conditioner cut control	EC-34 , EC-652
A/C service data specification	ATC-133	Air conditioning - See A/C	MTC-16
A/C switch	MTC-21	Air flow meter - See Mass air flow sensor	EC-154 , EC-161 , EC-387 , EC-790 , EC-798 , EC-1041
A/C symptom chart (auto A/C)	ATC-31	Air mix door control linkage adjustment	ATC-63
A/C symptom chart (manual A/C)	MTC-28	Alternator	SC-33
A/C trouble diagnoses (auto A/C)	ATC-31	Ambient sensor	ATC-103
A/C trouble diagnoses (manual A/C)	MTC-28	Angular tightening application	EM-4 , EM-101
A/C, A - Wiring diagram	ATC-35	Antenna	AV-26
A/C, M - Wiring diagram	MTC-35	Anti-lock brake system - Wiring diagram	BRC-12
A/T - Wiring diagram	AT-16	APPS1 - Wiring diagram	EC-271 , EC-924
A/T - Wiring diagram - AT - FTS	AT-111	APPS2 - Wiring diagram	EC-467 , EC-1127
A/T - Wiring diagram - AT - MAIN	AT-100	APPS3 - Wiring diagram	EC-265 , EC-917
A/T - Wiring diagram - AT - PNP/SW	AT-105	ASC/BS - Wiring diagram	EC-535 , EC-1183
A/T - Wiring diagram - AT - VSS A/T	AT-117	ASC/SW - Wiring diagram	EC-528 , EC-1176
A/T fluid temperature sensor	AT-109	ASCSOF - Wiring diagram	EC-603 , EC-1259
A/T IND - Wiring diagram	DI-41	ASCD	EC-628
A/T indicator	DI-41	ASCD (automatic speed control device)	EC-1286 , ACS-2
A/T self-diagnoses	AT-40 , AT-50 , AT-51	ASCIND - Wiring diagram	EC-611 , EC-1269
A/T shift lock system	AT-247	Audio	AV-4
A/T shift lock system - Wiring diagram	AT-248	AUDIO - Wiring diagram	AV-4 , AV-8
A/T Wiring diagram - AT - ENG SS	AT-121	Auto air conditioner - Wiring diagram	ATC-35
A/T Wiring diagram AT - 1ST	AT-126	Auto anti-dazzling inside mirror	GW-39 , GW-40
A/T Wiring diagram AT - 2ND	AT-131	Automatic amplifier	ATC-39 , ATC-52
A/T Wiring diagram AT - 3RD	AT-136	Automatic transaxle number	GI-43
A/T Wiring diagram AT - 4TH	AT-141	Automatic transmission fluid replacement	MA-29
A/T Wiring diagram AT - BA/FTS	AT-191		
A/T Wiring diagram AT - CAN	AT-187		
A/T Wiring diagram AT - LPSV	AT-161		
A/T Wiring diagram AT - NONDTC	AT-209		

B

Back door trim	EI-27
BACK/L - Wiring diagram	LT-107
Back-up lamp switch (M/T)Back-up lamp switch	MT-12

ALPHABETICAL INDEX

Basic inspection	EC-84 , EC-705	Closed loop control	EC-32 , EC-442 , EC-650	
Battery	SC-4	Closed loop control (Bank 1)	EC-1099	A
Battery/Starting/Charging System Tester	SC-6 , SC-16 , SC-27	Closed loop control (Bank 2)	EC-1099	
Baulk ring (M/T)	MT-20	Clutch coverClutch cover	CL-15	B
BCM(Body control module)	BCS-3	Clutch discClutch disc	CL-15	
Block heater	EM-67 , EM-186	Clutch fluid level	MA-28	
Blower motor	ATC-67 , ATC-109 , MTC-49 , MTC-70	Clutch master cylinderClutch master cylinder	CL-8	C
Blower resistor	MTC-76	Clutch operating cylinderClutch operating cylinder	CL-10	
Blower unit	ATC-108 , MTC-69	Clutch pedalClutch pedal	CL-5	
Board-on lift	GI-37	Clutch release mechanismClutch release mechanism	CL-13	D
Body alignment	BL-150	Coil spring (front)	FSU-9	
Body component parts	BL-139	Coil spring (rear)Coil spring	RSU-9	
Body construction	BL-149	Collision diagnosis	SRS-61	E
Body exterior paint color	BL-138	Combination lamp, front, removal and installation ..	LT-25	
Body repair	BL-138	Combination lamp, rear, removal and installation ..	LT-122	F
Body sealing	BL-146	Combination meter	DI-4	
Brake boosterBrake booster	BR-17	Component Location (auto A/C)	ATC-32	G
Brake control valve (Proportioning valve)Brake control valve (Proportioning valve)	BR-31	Component Location (manual A/C)	MTC-29	
Brake fluid changeBrake fluid change	BR-9	Compressor clutch removal and installation ..	ATC-123 , MTC-85	
Brake fluid level	MA-32	Compressor mounting	ATC-122 , MTC-83 , MTC-84	H
Brake fluid level and line checkBrake fluid level and line check	BR-9	Compressor precaution	ATC-9 , MTC-9	
Brake hydraulic lineBake hydraulic line	BR-10	Compressor special service tool	ATC-12 , MTC-12	
Brake inspection	MA-32	Condenser	ATC-126 , MTC-88	I
Brake lines and cables inspection	MA-32	Connector inspection	GI-22	
Brake master cylinderBrake master cylinder	BR-13	Console box - See Instrument panel	IP-10	
Brake pedalBrake pedal	BR-6	CONSULT for engine	EC-106 , EC-730	J
Brake switch	EC-549 , EC-1205	CONSULT for TCS	BRC-58	
BRK/SW - Wiring diagram	EC-550 , EC-1206	CONSULT general information	GI-35	
Bulb specifications	LT-146	Contaminated refrigerant	MTC-3	K
Bumper, front	EI-13	Control unit	ATC-102 , MTC-67	
Bumper, rear	EI-15	Control units (terminal arrangement)	PG-67	
BYPSS/V - Wiring diagram ..	EC-512 , EC-520 , EC-1162 , EC-1169	Controller Area Network (CAN) ..	LAN-4 , LAN-8 , LAN-27 , LAN-43	L
C		Converter housing installation	AT-357	
Camshaft	EM-34 , EM-134	COOL/F - Wiring diagram ..	EC-242 , EC-447 , EC-1106	
Camshaft inspection	EM-36 , EM-139	Coolant mixture ratio	MA-13	
Camshaft position sensor (PHASE) ..	EC-291 , EC-945	Coolant overtemperarute enrichment protection ..	EC-238	IDX
CAN - Wiring diagram ..	EC-139 , EC-764 , LAN-9 , LAN-28 , LAN-44	Coolant replacement	CO-6 , CO-28 , MA-14	
CAN (Controller Area Network) ..	LAN-4 , LAN-8 , LAN-27 , LAN-43	Coolant replacementVQ35DE	MA-22	
CAN communication ..	EC-34 , EC-138 , EC-653 , EC-763 , AT-185 , BRC-71 , LAN-4 , LAN-8 , LAN-27 , LAN-43	Cooling circuit (engine)	CO-31	
Canister-See EVAP canister	EC-617 , EC-1275	Cooling fan motor	EC-249 , EC-454 , EC-1113	
CHARGE - Wiring diagram	SC-26	Cooling unit (A/C evaporator)	ATC-112 , ATC-128 , MTC-73 , MTC-90	
Charging system	SC-25	Corrosion protection	BL-143	
Chassis and body maintenance	MA-28	Coupling sleeve (M/T)	MT-20	
Chassis and body maintenanceSchedule 1	MA-9	Crankcase ventilation system - See Positive crankcase ventilation	EC-626 , EC-1284	
Chassis and body maintenanceSchedule 2	MA-11	Crankshaft	EM-68	
CHIME - Wiring diagram	DI-49	Crankshaft position sensor (POS)	EC-284 , EC-938	
CIGAR - Wiring diagram	WW-28	Crash zone sensor	SRS-50	
Cigarette lighter	WW-28	Cylinder block	EM-67 , EM-186	
Circuit breaker	PG-63	Cylinder block boring	EM-87	
Clearance lamp	LT-109	Cylinder head	EM-53 , EM-164	

ALPHABETICAL INDEX

Cylinder head bolt tightening [EM-170](#)

D

Data link connector [EC-613](#), [EC-1271](#)
 Data link connector for Consult [EC-108](#), [EC-732](#)
 Daytime light system [LT-28](#)
 Daytime running light - See Daytime light system .. [LT-28](#)
 Diagnosis sensor unit [SRS-53](#)
 Diagnostic trouble code (DTC) for OBD system [EC-15](#),
[EC-58](#), [EC-632](#), [EC-677](#)
 Diagnostic trouble code (DTC) inspection priority chart
[EC-81](#), [EC-701](#)
 Differential gear (FF M/T) [MT-23](#)
 Dimensions [GI-43](#)
 DLC - Wiring diagram [EC-613](#), [EC-1271](#)
 Door glass [GW-34](#), [GW-37](#)
 Door glass Fitting Adjustment(Front) [GW-35](#)
 Door glass Fitting Adjustment(Rear) [GW-38](#)
 Door mirror [GW-61](#)
 Door trim [EI-27](#)
 Door, front [BL-75](#), [GW-34](#)
 Door, rear [BL-75](#), [GW-37](#)
 Drive belt [EM-12](#)
 Drive belt inspectionQR25DE [MA-14](#)
 Drive belt inspectionVQ35DE [MA-21](#)
 Drive shaft (front) [FAX-11](#)
 Driver air bag [SRS-39](#)
 Dropping resistor (A/T) [AT-159](#)
 DTC work support [EC-117](#), [EC-742](#)
 DTRL - Wiring diagram [LT-38](#)
 Duct and grilles [ATC-117](#), [MTC-77](#)

E

ECM input/output signal [EC-99](#), [EC-722](#)
 ECM power supply [EC-131](#), [EC-383](#), [EC-757](#), [EC-1037](#)
 ECM/PW - Wiring diagram [EC-384](#)
 ECTS - Wiring diagram [EC-174](#), [EC-813](#), [EC-818](#)
 Electric sun roof [RF-10](#)
 Electric throttle control actuator [EC-397](#), [EC-399](#), [EC-411](#), [EC-1047](#), [EC-1049](#), [EC-1061](#)
 Electrical diagnoses [GI-22](#)
 Electrical load signal circuit [EC-601](#), [EC-1257](#)
 Electronic ignition (EI) system [EC-33](#), [EC-651](#)
 EMNT - Wiring diagram [EC-1248](#)
 Engine control circuit diagram [EC-97](#), [EC-720](#)
 Engine control component parts location ... [EC-93](#), [EC-714](#)
 Engine control module (ECM) [EC-376](#), [EC-1030](#)
 Engine control system diagram and chart . [EC-28](#), [EC-646](#)
 Engine coolant [CO-32](#)
 Engine coolant temperature sensor (ECTS) ... [EC-172](#),
[EC-177](#), [EC-811](#), [EC-816](#)
 Engine fail-safe system [EC-82](#), [EC-703](#)
 Engine mounting control (Front) [EC-1247](#)
 Engine oil [LU-17](#)

Engine oil filter replacementQR25DE ... [MA-18](#), [MA-25](#)
 Engine oil precautions [GI-3](#), [GI-6](#)
 Engine oil replacementQR25DE [MA-17](#), [MA-24](#)
 Engine removal [EM-63](#), [EM-182](#)
 Engine serial number [GI-43](#)
 ETC1 - Wiring diagram [EC-400](#), [EC-1050](#)
 ETC2 - Wiring diagram [EC-408](#), [EC-1058](#)
 ETC3 - Wiring diagram [EC-412](#), [EC-1062](#)
 EVAP canister [EC-1275](#)
 EVAP canister purge volume control solenoid valve
[EC-315](#), [EC-477](#), [EC-617](#), [EC-972](#), [EC-1135](#), [EC-1275](#)
 EVAP canister vent control valve [EC-321](#), [EC-485](#), [EC-491](#), [EC-978](#), [EC-1143](#), [EC-1149](#)
 EVAP control system (small leak) diagnosis .. [EC-307](#),
[EC-341](#), [EC-349](#), [EC-475](#), [EC-498](#), [EC-963](#), [EC-998](#)
 EVAP control system pressure sensor ... [EC-328](#), [EC-334](#), [EC-985](#), [EC-991](#)
 EVAP control system purge flow monitoring diagnosis .
[EC-301](#), [EC-957](#)
 EVAP vapor lines inspection [MA-20](#), [MA-27](#)
 Evaporative emission (EVAP) system [EC-614](#), [EC-617](#),
[EC-1272](#)
 Evaporator [ATC-128](#), [MTC-90](#)
 Exhaust manifold [EM-116](#)
 Exhaust system [EX-3](#), [EX-6](#)
 Exhaust system inspection [EX-3](#), [EX-6](#), [MA-28](#)
 Expansion valve [ATC-129](#), [MTC-91](#)

F

F/PUMP - Wiring diagram [EC-585](#), [EC-1241](#)
 Fan control amp. [ATC-116](#)
 Fan switch [MTC-21](#)
 Final drive (FF M/T) [MT-23](#)
 Flow charts [GI-25](#)
 FLS1 - Wiring diagram [EC-359](#), [EC-1008](#)
 FLS2 - Wiring diagram [EC-366](#), [EC-1015](#)
 FLS3 - Wiring diagram [EC-508](#), [EC-1158](#)
 Fluid temperature sensor (A/T) [AT-109](#)
 Fluids [MA-12](#)
 Fluorescent leak detector [ATC-129](#), [MTC-91](#)
 Flywheel (clutch)Flywheel (clutch) [CL-15](#)
 Fork rod (M/T) [MT-22](#)
 Freeze frame data [EC-59](#), [EC-678](#)
 Front bumper [EI-13](#)
 Front combination lamp removal and installation [LT-25](#)
 Front disc brakeFront disc brake [BR-20](#)
 Front door [BL-75](#), [GW-34](#)
 Front Door Trim [EI-27](#)
 Front passenger air bag [SRS-43](#)
 Front seat [SE-14](#)
 Front seat belt [SB-3](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-52](#)
 Front side air bag [SRS-47](#)
 FTTS - Wiring diagram [EC-235](#), [EC-894](#), [EC-898](#)
 FUEL - Wiring diagram [EC-222](#), [EC-228](#)
 Fuel cut control (at no load high engine speed) [EC-34](#),
[EC-652](#)
 Fuel gauge [DI-4](#)

ALPHABETICAL INDEX

Fuel injection system [EC-220](#), [EC-226](#)
 Fuel injection system (Bank 1) [EC-877](#), [EC-885](#)
 Fuel injection system (Bank 2) [EC-877](#), [EC-885](#)
 Fuel injector and fuel tube [EM-29](#), [EM-129](#)
 Fuel level sensor .. [EC-358](#), [EC-363](#), [EC-365](#), [EC-507](#),
[EC-1007](#), [EC-1012](#), [EC-1014](#), [EC-1157](#)
 Fuel line inspection [FL-3](#), [MA-17](#), [MA-24](#)
 Fuel precautions [GI-3](#), [GI-5](#)
 Fuel pressure check [EC-51](#), [EC-671](#)
 Fuel pressure release [EC-51](#), [EC-671](#)
 Fuel pump [EC-584](#), [EC-1240](#)
 Fuel system [FL-3](#)
 Fuel systemCommercial Service Tools [FL-2](#)
 Fuel systemPREPARATION [FL-2](#)
 Fuel tank temperature sensor ... [EC-232](#), [EC-234](#), [EC-892](#), [EC-897](#)
 Fuel tank vacuum relief valve [EC-1275](#)
 FUEL B1 - Wiring diagram [EC-879](#), [EC-887](#)
 FUEL B2 - Wiring diagram [EC-880](#), [EC-888](#)
 Fuse [PG-63](#), [PG-72](#)
 Fuse block [PG-71](#)
 Fusible link [PG-63](#), [PG-72](#)

G

Garage jack and safety stand [GI-37](#)
 Gear components (M/T) [MT-20](#)
 Generator [SC-33](#)
 Generator - See Alternator [SC-33](#)
 Generic scan tool (GST) [EC-119](#), [EC-743](#)
 Glass [GW-11](#), [GW-13](#), [GW-34](#), [GW-37](#)
 Glove box lamp [LT-142](#)
 Grease [MA-12](#)
 Ground distribution [PG-26](#)

H

H/LAMP - Wiring diagram [LT-12](#)
 Handling precautions for plastics [BL-161](#)
 Harness connector [PG-64](#)
 Harness connector inspection [GI-22](#)
 Harness layout [PG-37](#)
 Hazard warning lamp [LT-80](#)
 Headlamp [LT-5](#)
 Headlamp removal and installation [LT-25](#)
 Heated oxygen sensor 1 [EC-185](#), [EC-191](#), [EC-200](#),
[EC-416](#), [EC-422](#)
 Heated oxygen sensor 1 (bank 1) [EC-827](#), [EC-836](#),
[EC-847](#), [EC-1066](#), [EC-1072](#)
 Heated oxygen sensor 1 (bank 2) [EC-827](#), [EC-836](#),
[EC-847](#), [EC-1066](#), [EC-1072](#)
 Heated oxygen sensor 1 heater [EC-144](#)
 Heated oxygen sensor 1 heater (bank 1) [EC-774](#)
 Heated oxygen sensor 1 heater (bank 2) [EC-774](#)
 Heated oxygen sensor 2 [EC-207](#), [EC-213](#), [EC-428](#),
[EC-435](#)
 Heated oxygen sensor 2 (bank 1) [EC-857](#), [EC-867](#),
[EC-1079](#), [EC-1089](#)
 Heated oxygen sensor 2 (bank 2) [EC-857](#), [EC-867](#),

[EC-1079](#), [EC-1089](#)
 Heated oxygen sensor 2 heater [EC-149](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-782](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-782](#)
 Heated seat [SE-12](#)
 HEATER - Wiring diagram [MTC-33](#)
 Heater and cooling unit (Heater core) [ATC-112](#), [ATC-113](#), [MTC-73](#), [MTC-74](#)
 Heater system - Wiring diagram [MTC-33](#)
 Heater unit (heater core) [ATC-112](#), [ATC-113](#), [MTC-73](#),
[MTC-74](#)
 Height (Dimensions) [GI-43](#)
 HFC134a (R134a) system identification [ATC-5](#), [MTC-4](#)
 HFC134a (R134a) system introduction [MTC-16](#)
 HFC134a (R134a) system precaution .. [ATC-4](#), [MTC-3](#)
 HFC134a (R134a) system service procedure [ATC-119](#),
[MTC-79](#)
 HFC134a (R134a) system service tools [ATC-12](#), [MTC-12](#)
 HFC134a system service equipment precaution . [ATC-9](#), [MTC-9](#)
 HO2S1 - Wiring diagram [EC-187](#), [EC-194](#), [EC-203](#)
 HO2S1H - Wiring diagram [EC-146](#)
 HO2S2 - Wiring diagram ... [EC-209](#), [EC-215](#), [EC-430](#),
[EC-437](#)
 HO2S2H - Wiring diagram [EC-151](#)
 Horn [WW-32](#)
 HORN - Wiring diagram [WW-32](#)
 How to erase DTC for OBD system [EC-67](#), [EC-687](#)
 HSEAT - Wiring diagram [SE-13](#)

I

IATS - Wiring diagram [EC-169](#), [EC-808](#), [EC-822](#)
 Identification [MTC-4](#)
 Identification plate [GI-43](#)
 Idle air volume learning [EC-49](#), [EC-669](#)
 Idle mixture ratio [EC-39](#), [EC-658](#)
 Idle speed [EC-39](#), [EC-84](#), [EC-658](#), [EC-705](#)
 Idle speed control (ISC) [EC-372](#), [EC-374](#), [EC-1021](#),
[EC-1023](#)
 Ignition coil [EM-26](#), [EM-126](#), [EC-554](#), [EC-1210](#)
 Ignition control system [EC-554](#), [EC-1210](#)
 Ignition key hole illumination [LT-130](#)
 Ignition timing [EC-39](#), [EC-84](#), [EC-658](#), [EC-705](#)
 IGNSYS - Wiring diagram [EC-555](#), [EC-1211](#)
 ILL - Wiring diagram [LT-138](#)
 Illumination [LT-131](#)
 Illumination control [LT-142](#)
 In vehicle sensor [ATC-104](#)
 INJECT - Wiring diagram [EC-575](#), [EC-1231](#)
 Injector [EC-574](#), [EC-1230](#)
 Input shaft (FF M/T) [MT-20](#)
 Instrument panel [IP-10](#)
 INT/L - Wiring diagram [LT-143](#)
 Intake air temperature sensor [EC-167](#), [EC-180](#), [EC-806](#), [EC-820](#)
 Intake door control linkage adjustment . [ATC-66](#), [MTC-48](#)

A
B
C
D
E
F
G
H
J
K
L

IDX

ALPHABETICAL INDEX

Intake door motor [ATC-66](#), [ATC-110](#), [MTC-47](#), [MTC-71](#)
 Intake manifold [EM-16](#), [EM-112](#)
 Intake sensor [ATC-99](#), [ATC-106](#), [MTC-65](#), [MTC-68](#)
 Intake valve timing control [EC-141](#)
 Intake valve timing control (Bank 1) [EC-766](#)
 Intake valve timing control (Bank 2) [EC-766](#)
 Intake valve timing control solenoid valve [EC-393](#)
 Interior [EI-29](#)
 Interior lamp [LT-123](#)
 IPDM(Intelligent power distribution module engine room)
 [PG-14](#)
 IVC - Wiring diagram [EC-394](#)
 IVCB1 - Wiring diagram [EC-768](#)
 IVCB2 - Wiring diagram [EC-770](#)

J

Jacking points [GI-37](#)
 Junction box (J/B) [PG-71](#)

K

Keyless entry system - See Multi-remote control system
[BL-43](#)
 Knock sensor (KS) [EC-280](#), [EC-934](#)
 KS - Wiring diagram [EC-281](#), [EC-935](#)

L

LAN system circuit [ATC-55](#)
 Length (Dimensions) [GI-43](#)
 License lamp [LT-109](#)
 Lifting points [GI-37](#)
 Line pressure solenoid valve [AT-159](#)
 Line pressure test (A/T) [AT-65](#)
 Liquid gasket application [EM-5](#)
 Location of electrical units [PG-60](#)
 Lubricant (R134a) A/C [ATC-18](#), [MTC-18](#)
 Lubricants [MA-12](#)
 Lubrication circuit (engine) [LU-15](#)
 Lubrication oil A/C [ATC-18](#), [MTC-18](#)
 Lubrication-locks, hinges and hood latches [MA-35](#)
 Luggage compartment trim [EI-35](#)

M

M/T major overhaul [MT-23](#)
 M/T oil replacementM/T oil replacement [MT-10](#)
 M/T removal and installationM/T removal and installation
 [MT-16](#)
 MAFS - Wiring diagram [EC-157](#), [EC-163](#), [EC-389](#), [EC-793](#), [EC-800](#), [EC-1043](#)
 Magnet clutch [ATC-123](#), [MTC-85](#)
 MAIN - Wiring diagram [EC-131](#), [EC-757](#)
 Mainshaft (M/T) [MT-20](#)
 Maintenance [MA-5](#)
 Maintenance (engine)QR25DE [MA-14](#)
 Maintenance (engine)VQ35DE [MA-21](#)
 Malfunction indicator lamp (MIL) . [EC-69](#), [EC-379](#), [EC-](#)

[689](#), [EC-1033](#)

Manual air conditioner - Wiring diagram [MTC-35](#)
 Manual transaxle number [GI-43](#)
 Manual transmission oil replacement [MA-28](#)
 Mass air flow sensor (MAFS) [EC-154](#), [EC-161](#), [EC-387](#), [EC-790](#), [EC-798](#), [EC-1041](#)
 Master cylinder (brake)Master cylinder (brake) [BR-13](#)
 Master cylinder (clutch)Master cylinder (clutch) ... [CL-8](#)
 METER - Wiring diagram [DI-12](#), [DI-65](#)
 MIL - Wiring diagram [EC-380](#), [EC-1034](#)
 Mirror, door [GW-61](#)
 Mirror, out side [GW-61](#)
 Misfire [EC-275](#), [EC-928](#)
 Mode door control linkage adjustment . [ATC-60](#), [MTC-44](#)
 Mode door motor [ATC-114](#), [MTC-75](#)
 Model variation [GI-43](#)
 Multiport fuel injection (MFI) system .. [EC-31](#), [EC-649](#)
 Multiport fuel injection precautions [GI-3](#), [GI-5](#)
 Multi-remote control system [BL-43](#)

N

NATS - Wiring diagram [BL-118](#)
 NVH troubleshooting (BR)NVH troubleshooting (BR) ... [BR-5](#)
 NVH troubleshooting (CL)NVH troubleshooting (CL) [CL-4](#)
 NVH troubleshooting (EM) [EM-10](#), [EM-107](#)
 NVH troubleshooting (FA) [FAX-4](#)
 NVH troubleshooting (RA) [RAX-4](#)
 NVH troubleshooting (RSU)NVH Troubleshooting (RSU)
 [RSU-4](#)
 NVH troubleshooting (ST) [PS-5](#)
 NVH troubleshooting (WT)NVH troubleshooting (WT) .. [WT-2](#)

O

O2H1B1 - Wiring diagram [EC-776](#)
 O2H1B2 - Wiring diagram [EC-778](#)
 O2H2B1 - Wiring diagram [EC-784](#)
 O2H2B2 - Wiring diagram [EC-786](#)
 O2S1B1 - Wiring diagram .. [EC-829](#), [EC-839](#), [EC-850](#)
 O2S1B2 - Wiring diagram .. [EC-831](#), [EC-841](#), [EC-852](#)
 O2S2B1 - Wiring diagram [EC-859](#), [EC-869](#), [EC-1081](#),
 [EC-1091](#)
 O2S2B2 - Wiring diagram [EC-861](#), [EC-871](#), [EC-1083](#),
 [EC-1093](#)
 Oil change (capacity)QR25DE [MA-12](#)
 Oil change (capacity)VQ35DE [MA-12](#)
 Oil filter [LU-19](#)
 Oil pan (engine) [EM-23](#), [EM-120](#)
 Oil pump (engine) [LU-9](#), [LU-20](#)
 On board diagnostic system [EC-54](#), [EC-673](#)
 Operating cylinder (clutch)Operating cylinder (clutch) .. [CL-10](#)
 ORVR (On-board Refueling Vapor Recovery) [EC-620](#),
 [EC-1278](#)

ALPHABETICAL INDEX

Out side mirror [GW-61](#)
 Overdrive control switch [AT-242](#)
 Overheat [EC-1103](#)
 Overrun clutch solenoid valve [AT-180](#)

P

Park/Neutral position switch [EC-545](#), [EC-1194](#)
 Park/neutral position switch (A/T) [AT-103](#)
 Park/neutral position switch (M/T)Park/neutral position switch (M/T) [MT-12](#)
 Parking brake controlParking brake control [PB-2](#)
 Parking drum brakeParking drum brake [PB-5](#)
 Parking lamp [LT-109](#)
 PCV (positive crankcase ventilation) [EC-626](#), [EC-1284](#)
 Periodic maintenance [MA-7](#)
 Personal lamp [LT-129](#)
 PGC/V - Wiring diagram [EC-317](#), [EC-479](#), [EC-974](#), [EC-1137](#)
 PHASE - Wiring diagram [EC-292](#)
 PHSB1 - Wiring diagram [EC-946](#)
 PHSB2 - Wiring diagram [EC-948](#)
 Piston ring inspection [EM-195](#)
 Piston to bore clearance [EM-86](#)
 PNP/SW - Wiring diagram [EC-547](#), [EC-1196](#)
 POS - Wiring diagram [EC-286](#), [EC-940](#)
 POWER - Wiring diagram [EC-1038](#), [PG-5](#)
 Power seat [SE-10](#)
 Power steering fluid level [MA-33](#)
 Power steering oil pressure switch [EC-591](#)
 Power steering pressure (PSP) sensor [EC-1025](#)
 Power supply routing [PG-3](#)
 Power window [GW-15](#)
 PRE/SE - Wiring diagram ... [EC-330](#), [EC-336](#), [EC-987](#), [EC-993](#)
 Precations for Leak detection dye [MTC-4](#)
 Precautions (General) [GI-3](#)
 Precautions in repairing high strength steel [BL-164](#)
 Pressure test (A/T) [AT-65](#)
 PS/SEN - Wiring diagram [EC-1026](#)
 PST/SW - Wiring diagram [EC-592](#)

R

R134a - See HFC134a [MTC-3](#)
 Radiator [CO-34](#)
 Rear bumper [EI-15](#)
 Rear combination lamp removal and installation ... [LT-122](#)
 Rear disc brakeRear disc brake [BR-26](#)
 Rear door [BL-75](#), [GW-37](#)
 Rear seat [SE-18](#)
 Rear seat belt [SB-4](#)
 Rear suspensionRear suspension [RSU-5](#)
 Rear window [GW-13](#)
 Rear window defogger [GW-41](#)
 Refrigerant connection precaution [ATC-6](#), [MTC-5](#)
 Refrigerant discharging evacuating charging [ATC-119](#), [MTC-79](#)

Refrigerant general precaution [ATC-5](#), [MTC-4](#)
 Refrigerant lines [ATC-119](#), [MTC-79](#)
 Refrigerant pressure sensor . [EC-596](#), [EC-1252](#), [ATC-126](#), [MTC-57](#), [MTC-88](#)
 Refrigeration cycle [MTC-16](#)
 Remote keyless entry system [BL-43](#)
 Reverse idler shaft (M/T) [MT-20](#)
 Reverse main gear (M/T) [MT-20](#)
 Revolution sensor (A/T) [AT-115](#)
 Road wheel size [GI-43](#)
 Rocker cover [EM-32](#), [EM-132](#)
 Room lamp [LT-123](#), [LT-129](#)
 Room lamp - See Interior lamp [LT-123](#)
 ROOM/L - Wiring diagram [LT-125](#)
 RP/SEN - Wiring diagram [EC-597](#), [EC-1253](#)

S

S/SIG - Wiring diagram [EC-581](#), [EC-1237](#)
 SAE J1930 terminology list [GI-47](#)
 SAE J1979 - Mode 1 - 7 [EC-54](#), [EC-673](#)
 SEAT - Wiring diagram [SE-10](#)
 Seat belt inspection [SB-5](#), [MA-36](#)
 Seat belt pre-tensioner disposal [SRS-54](#)
 Seat belt, front [SB-3](#)
 Seat belt, rear [SB-4](#)
 Seat, front [SE-14](#)
 Seat, rear [SE-18](#)
 SEN/PW - Wiring diagram [EC-472](#), [EC-1132](#)
 SHIFT - Wiring diagram [AT-248](#)
 Shift control components (M/T) [MT-22](#)
 Shift control components (M/T)Shift control components (M/T) [MT-13](#)
 Shift fork (M/T) [MT-22](#)
 Shift lock system [AT-247](#)
 Shift schedule [AT-364](#)
 Shift solenoid valve A (A/T) [AT-165](#)
 Shift solenoid valve B (A/T) [AT-170](#)
 Shock absorber (front) [FSU-9](#)
 Shock absorber (rear)Shock absorber (rear) ... [RSU-8](#)
 Side air bag (satellite) sensor [SRS-51](#)
 Side curtain air bag [SRS-48](#)
 Side trim [EI-29](#)
 SMJ (super multiple junction) [PG-68](#)
 Spare tire size [GI-43](#)
 Spark plug [EM-127](#)
 Spark plug replacementQR25DE [MA-19](#), [MA-26](#)
 Specification value [EC-126](#), [EC-752](#)
 Speedometer [DI-4](#)
 Spiral cable [SRS-41](#)
 Spot lamp [LT-129](#)
 SROOF - Wiring diagram [RF-11](#)
 SRS - See Supplemental Restraint System [SRS-5](#)
 SRS - Wiring diagram [SRS-12](#)
 SRS Trouble diagnoses [SRS-8](#)
 Stabilizer bar (front) [FSU-11](#)
 Stall test (A/T) [AT-61](#)
 Standardized relay [PG-69](#)
 START - Wiring diagram [SC-14](#)

IDX

ALPHABETICAL INDEX

Start signal	EC-580 , EC-1236
Starter	SC-20
Starting system	SC-9
Steering gear and linkage inspection	MA-33
Steering knuckle	FAX-6
STEP/L - Wiring diagram	LT-104
Stop lamp switch	EC-549 , EC-1205
STOP/L - Wiring diagram	LT-100
Strut (front)	FSU-9
Sun roof, electric	RF-10
Sunload sensor	ATC-105
Sunroof	RF-15
Supplemental Restraint System	SRS-5
Supplemental restraint system - Wiring diagram	SRS-12
Symbols and abbreviations	GI-8 , GI-9 , GI-20
Symptom matrix chart	EC-89 , EC-710
Synchronizer (M/T)	MT-20
System readiness test (SRT) code	EC-59 , EC-679

T

Tachometer	DI-4
Tail lamp	LT-109
TAIL/L - Wiring diagram	LT-116
TCM circuit diagram	AT-16
TCM inspection table	AT-93
TCS - Wiring diagram	BRC-54
TCS component parts and connector location	BRC-53
TCS control unit	BRC-47
TCS self-diagnosis	BRC-64
TCS wheel sensors	BRC-53
Thermo control amp	ATC-107
Thermostat	CO-20
Three way catalyst	EM-116
Three way catalyst function	EC-297
Three way catalyst function (Bank 1)	EC-953
Three way catalyst function (Bank 2)	EC-953
Three way catalyst precautions	GI-3 , GI-5
Throttle control motor relay	EC-406 , EC-1056
Throttle position sensor (TPS) ..	EC-250 , EC-257 , EC-455 , EC-461 , EC-463 , EC-901 , EC-908 , EC-1114 , EC-1121 , EC-1123
Throttle position switch	AT-242
Tightening torque of standard bolts	GI-41
Timing chain	EM-45 , EM-146
Tire rotation	MA-31
Tire size	GI-43
Torque converter installation	AT-261 , AT-357
Torque convertor clutch solenoid valve	AT-146
Tow truck towing	GI-40
Towing point	GI-40
TPS1 - Wiring diagram	EC-259 , EC-910
TPS2 - Wiring diagram	EC-457 , EC-1116
TPS3 - Wiring diagram	EC-252 , EC-903
Traction control system - Wiring diagram	BRC-54
Transaxle serial number	GI-43
Transmission case (M/T)	MT-19
TRANSMT - Wiring diagram	BL-135

Tread-FR0R (Dimensions)	GI-43
Trim	EI-29
Trouble diagnoses	GI-9
Trunk lid trim	EI-35
Trunk room lamp	LT-143
Trunk room trim	EI-35
TURN - Wiring diagram	LT-87
Turn signal lamp	LT-80
Two trip detection logic	EC-54 , EC-673
Two-pole lift	GI-37

V

Vacuum cut valve	EC-617 , EC-1173 , EC-1275
Vacuum cut valve bypass valve	EC-510 , EC-517 , EC-617 , EC-1160 , EC-1166 , EC-1275
Vacuum hose (brake system)Vacuum hose (brake system)	BR-19
Vacuum hose drawing (Engine control)	EC-29 , EC-647
Valve clearance	EM-41 , EM-141
Valve guide	EM-59 , EM-178 , EM-179
Valve seat	EM-60 , EM-180
Valve spring	EM-62 , EM-181
Vanity mirror lamp	LT-143
Variable induction air control system (VIAS) ..	EC-565 , EC-1199 , EC-1222
Vehicle identification number	GI-43
Vehicle recovery (freeing a stuck vehicle)	GI-40
Vehicle speed sensor (VSS)	EC-370 , EC-1019
VENT/V - Wiring diagram ...	EC-323 , EC-487 , EC-494 , EC-980 , EC-1145 , EC-1152
VIAS - Wiring diagram	EC-567 , EC-1224
VIAS/V - Wiring diagram	EC-1201
Viscosity number (SAE)	MA-13

W

W/ANT - Wiring diagram	AV-27
WARN - Wiring diagram	DI-30
Warning chime	DI-43
Warning lamps	DI-22
Water pump	CO-41
Water temperature gauge	DI-4
Wheel alignment (rear)Wheel alignment (rear) ..	RSU-6
Wheel balance	MA-30
Wheel bearing (front axle)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (front)	FAX-5 , FAX-6
Wheel hub (rear)	RAX-5
Wheel size	GI-43
Wheelarch heightWheelarch height	RSU-11
Wheelbase (Dimensions)	GI-43
Width (Dimensions)	GI-43
WINDOW - Wiring diagram	GW-18
Window, door	GW-34 , GW-37
Window, rear	GW-13
Windshield	GW-11
Wiper and washer	WW-3
Wiring Diagram (Cell code) list	PG-57

ALPHABETICAL INDEX

Wiring diagrams [GI-8](#), [GI-12](#)

A

B

C

D

E

F

G

H

I

J

K

L

IDX