

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C - Wiring diagram [ATC-35](#), [MTC-35](#)
A/C air flow [MTC-22](#)
A/C component layout [MTC-17](#)
A/C compressor clutch removal and installation .. [ATC-122](#), [MTC-85](#)
A/C compressor description [MTC-16](#)
A/C compressor mounting [ATC-121](#), [MTC-83](#), [MTC-84](#)
A/C compressor precaution [ATC-9](#), [MTC-9](#)
A/C compressor special service tool . [ATC-12](#), [MTC-12](#)
A/C diagnostic work flow (auto A/C) [ATC-31](#)
A/C diagnostic work flow (manual A/C) [MTC-28](#)
A/C evaporator [ATC-126](#), [MTC-90](#)
A/C HFC134a (R134a) system identification [ATC-5](#), [MTC-4](#)
A/C HFC134a (R134a) system introduction ... [MTC-16](#)
A/C HFC134a (R134a) system precaution [ATC-4](#), [MTC-3](#)
A/C HFC134a (R134a) system service procedure [ATC-118](#), [MTC-79](#)
A/C HFC134a (R134a) system service tools .. [ATC-12](#), [MTC-12](#)
A/C HFC134a system service equipment precaution ... [ATC-9](#), [MTC-9](#)
A/C lubricant (R134a) [ATC-18](#), [MTC-18](#)
A/C lubrication oil [ATC-18](#), [MTC-18](#)
A/C operational check [ATC-49](#), [MTC-38](#)
A/C performance chart [ATC-82](#), [MTC-59](#)
A/C performance test diagnoses [ATC-78](#), [MTC-58](#)
A/C self-diagnoses (auto A/C) [ATC-41](#)
A/C service data specification [ATC-132](#)
A/C switch [MTC-21](#)
A/C symptom chart (auto A/C) [ATC-31](#)
A/C symptom chart (manual A/C) [MTC-28](#)
A/C trouble diagnoses (auto A/C) [ATC-31](#)
A/C trouble diagnoses (manual A/C) [MTC-28](#)
A/C, A - Wiring diagram [ATC-35](#)
A/C, M - Wiring diagram [MTC-35](#)
A/T - Wiring diagram [AT-16](#)
A/T fluid temperature sensor [AT-109](#)
A/T IND - Wiring diagram [DI-40](#)
A/T indicator [DI-40](#)
A/T self-diagnoses [AT-41](#), [AT-50](#), [AT-51](#)
A/T shift lock system [AT-256](#)
A/T shift lock system - Wiring diagram [AT-257](#)
A/T Wiring diagram AT - 1ST [AT-126](#)
A/T Wiring diagram AT - 2ND [AT-131](#)
A/T Wiring diagram AT - 3RD [AT-136](#)
A/T Wiring diagram AT - 4TH [AT-141](#)
A/T Wiring diagram AT - BA/FTS [AT-191](#)
A/T Wiring diagram AT - CAN [AT-187](#)
A/T Wiring diagram AT - ENG SS [AT-121](#)
A/T Wiring diagram AT - FTS [AT-111](#)
A/T Wiring diagram AT - LPSV [AT-161](#)
A/T Wiring diagram AT - MAIN [AT-100](#)
A/T Wiring diagram AT - NONDTC [AT-209](#)
A/T Wiring diagram AT - OVRCSV [AT-183](#)
A/T Wiring diagram AT - PNP/SW [AT-105](#)

A/T Wiring diagram AT - SSV/A [AT-167](#)
A/T Wiring diagram AT - SSV/B [AT-172](#)
A/T Wiring diagram AT - TCCSIG [AT-153](#)
A/T Wiring diagram AT - TCV [AT-148](#)
A/T Wiring diagram AT - TPS [AT-178](#)
A/T Wiring diagram AT - VSS A/T [AT-117](#)
A/T Wiring diagram AT - VSSMTR [AT-198](#), [AT-202](#)
ABS - Wiring diagram [BRC-13](#)
ABS (anti-lock brake system) [BRC-5](#)
Absolute pressure sensor [EC-810](#)
Accelerator control system [ACC-2](#)
Accelerator pedal position (APP) sensor [EC-534](#), [EC-540](#), [EC-553](#), [EC-1209](#), [EC-1215](#), [EC-1228](#)
Accelerator pedal released position learning .. [EC-672](#)
Active damper suspension system - Wiring diagram [FSU-4](#)
Aiming adjustment [LT-24](#)
Air bag [SRS-3](#)
Air bag disposal [SRS-54](#)
Air bag precautions [GI-3](#)
Air bleeding (hydraulic clutch)Air bleeding (hydraulic clutch) [CL-7](#)
Air bleeding for brake systemAir bleeding for brake system [BR-8](#)
Air cleaner and air duct [EM-16](#), [EM-119](#)
Air cleaner filter replacement [MA-18](#), [MA-25](#)
Air conditioner - Wiring diagram [ATC-35](#), [MTC-35](#)
Air conditioner cut control [EC-33](#), [EC-656](#)
Air conditioning - See A/C [MTC-16](#)
Air flow meter - See Mass air flow sensor [EC-155](#), [EC-162](#), [EC-377](#), [EC-796](#), [EC-804](#), [EC-1040](#)
Air mix door control linkage adjustment [ATC-63](#)
Alternator [SC-33](#)
Ambient sensor [ATC-102](#)
Angular tightening application [EM-5](#), [EM-110](#)
Antenna [AV-26](#)
Anti-lock brake system - See ABS [BRC-5](#)
Anti-lock brake system - Wiring diagram [BRC-13](#)
APPS1 - Wiring diagram [EC-536](#), [EC-1211](#)
APPS2 - Wiring diagram [EC-542](#), [EC-1217](#)
APPS3 - Wiring diagram [EC-555](#), [EC-1230](#)
ASC/BS - Wiring diagram [EC-515](#), [EC-1181](#)
ASC/SW - Wiring diagram [EC-508](#), [EC-1174](#)
ASCSOF - Wiring diagram [EC-607](#), [EC-1284](#)
ASCD [EC-632](#)
ASCD (automatic speed control device) [EC-1311](#), [ACS-2](#)
ASCIND - Wiring diagram [EC-615](#), [EC-1294](#)
Audio [AV-4](#)
AUDIO - Wiring diagram [AV-4](#), [AV-8](#)
Auto air conditioner - Wiring diagram [ATC-35](#)
Auto anti-dazzling inside mirror [GW-39](#), [GW-40](#)
Automatic amplifier [ATC-39](#), [ATC-52](#)
Automatic transaxle number [GI-44](#)
Automatic transmission fluid replacement [MA-30](#)

B

Back door trim [EI-27](#)

ALPHABETICAL INDEX

BACK/L - Wiring diagram	LT-108	Cigarette lighter	WW-31
Back-up lamp switch (M/T)Back-up lamp switch	MT-12	Circuit breaker	PG-63
Basic inspection	EC-83 , EC-708	Clearance lamp	LT-110
Battery	SC-4	Closed loop control	EC-31 , EC-433 , EC-654
Battery/Starting/Charging System Tester	SC-6 , SC-16 , SC-27	Closed loop control (Bank 1)	EC-1100
Baulk ring (M/T)	MT-20	Closed loop control (Bank 2)	EC-1100
BCM (Body control module)	BCS-3	Clutch coverClutch cover	CL-15
Block heater	EM-76 , EM-206	Clutch discClutch disc	CL-15
Blower motor	ATC-67 , ATC-108 , MTC-49 , MTC-70	Clutch fluid level	MA-29
Blower resistor	MTC-76	Clutch master cylinderClutch master cylinder	CL-8
Blower unit	ATC-107 , MTC-69	Clutch operating cylinderClutch operating cylinder	CL-10
Board-on lift	GI-38	Clutch pedalClutch pedal	CL-5
Body alignment	BL-150	Clutch release mechanismClutch release mechanism	CL-13
Body component parts	BL-139	Coil spring (front)	FSU-9
Body construction	BL-149	Coil spring (rear)Coil spring	RSU-9
Body exterior paint color	BL-138	Collision diagnosis	SRS-61
Body repair	BL-138	Combination lamp, front, removal and installation ..	LT-26
Body sealing	BL-146	Combination lamp, rear, removal and installation ..	LT-123
Bose speaker amp.	AV-23	Combination meter	DI-4
Brake boosterBrake booster	BR-15	Component Location (auto A/C)	ATC-32
Brake control valve (Proportioning valve)Brake control valve (Proportioning valve)	BR-29	Component Location (manual A/C)	MTC-29
Brake fluid changeBrake fluid change	BR-8	Compressor clutch removal and installation ..	ATC-122 , MTC-85
Brake fluid level	MA-33	Compressor mounting	ATC-121 , MTC-83 , MTC-84
Brake fluid level and line checkBrake fluid level and line check	BR-8	Compressor precaution	ATC-9 , MTC-9
Brake hydraulic lineBake hydraulic line	BR-9	Compressor special service tool	ATC-12 , MTC-12
Brake inspection	MA-34	Condenser	ATC-125 , MTC-88
Brake lines and cables inspection	MA-33	Connector inspection	GI-22
Brake master cylinderBrake master cylinder	BR-12	Console box - See Instrument panel	IP-10
Brake pedalBrake pedal	BR-6	CONSULT for engine	EC-106 , EC-736
Brake switch	EC-529 , EC-1204	CONSULT for TCS	BRC-60
BRK/SW - Wiring diagram	EC-530 , EC-1205	CONSULT general information	GI-35
Bulb specifications	LT-147	Contaminated refrigerant	MTC-3
Bumper, front	EI-13	Control unit	ATC-101 , MTC-67
Bumper, rear	EI-15	Control units (terminal arrangement)	PG-68
BYPSS/V - Wiring diagram ..	EC-492 , EC-500 , EC-1160 , EC-1167	Controller Area Network (CAN) ..	LAN-3 , LAN-7 , LAN-28 , LAN-45

C

Camshaft	EM-37 , EM-144	Converter housing installation	AT-366
Camshaft inspection	EM-39 , EM-149	COOL/F - Wiring diagram ..	EC-251 , EC-438 , EC-1107
Camshaft position sensor (PHASE) ..	EC-280 , EC-938	Coolant mixture ratio	MA-13
CAN - Wiring diagram ..	EC-139 , EC-769 , LAN-8 , LAN-29 , LAN-46	Coolant overtemperarute enrichment potection ..	EC-247
CAN (Controller Area Network) ..	LAN-3 , LAN-7 , LAN-28 , LAN-45	Coolant replacement	MA-15
CAN communication ..	EC-34 , EC-138 , EC-657 , EC-768 , AT-186 , BRC-73 , LAN-3 , LAN-7 , LAN-28 , LAN-45	Coolant replacementVQ35DE	MA-23
Canister-See EVAP canister	EC-621 , EC-1300	Cooling circuit (engine)	CO-28
CHARGE - Wiring diagram	SC-26	Cooling fan motor	EC-258 , EC-445 , EC-1114
Charging system	SC-25	Cooling unit (A/C evaporator)	ATC-111 , ATC-126 , MTC-73 , MTC-90
Chassis and body maintenance	MA-29	Corrosion protection	BL-143
Chassis and body maintenanceSchedule 1	MA-9	Coupling sleeve (M/T)	MT-20
Chassis and body maintenanceSchedule 2	MA-11	Crankcase ventilation system - See Positive crankcase ventilation	EC-630 , EC-1309
CHIME - Wiring diagram	DI-48	Crankshaft	EM-77
CIGAR - Wiring diagram	WW-31	Crankshaft position sensor (POS)	EC-274 , EC-932
		Crash zone sensor	SRS-50

ALPHABETICAL INDEX

Cylinder block [EM-76](#), [EM-206](#)
 Cylinder block boring [EM-95](#)
 Cylinder head [EM-59](#), [EM-183](#)
 Cylinder head bolt tightening [EM-189](#)

D

Data link connector [EC-617](#), [EC-1296](#)
 Data link connector for Consult [EC-108](#), [EC-738](#)
 Daytime light system [LT-29](#)
 Daytime running light - See Daytime light system .. [LT-29](#)
 Diagnosis sensor unit [SRS-53](#)
 Diagnostic trouble code (DTC) for OBD system [EC-15](#),
[EC-56](#), [EC-636](#), [EC-681](#)
 Diagnostic trouble code (DTC) inspection priority chart
[EC-80](#), [EC-705](#)
 Differential gear (FF M/T) [MT-23](#)
 Dimensions [GI-44](#)
 DLC - Wiring diagram [EC-617](#), [EC-1296](#)
 Door glass [GW-34](#), [GW-37](#)
 Door glass Fitting Adjustment(Front) [GW-35](#)
 Door glass Fitting Adjustment(Rear) [GW-38](#)
 Door mirror [GW-61](#)
 Door trim [EI-27](#)
 Door, front [BL-75](#), [GW-34](#)
 Door, rear [BL-75](#), [GW-37](#)
 Drive belt [EM-13](#)
 Drive belt inspectionQR25DE [MA-15](#)
 Drive belt inspectionVQ35DE [MA-22](#)
 Drive shaft (front) [FAX-11](#)
 Driver air bag [SRS-39](#)
 Dropping resistor (A/T) [AT-159](#)
 DTC work support [EC-117](#), [EC-747](#)
 DTRL - Wiring diagram [LT-39](#)
 Duct and grilles [ATC-116](#), [MTC-77](#)

E

ECM input/output signal [EC-99](#), [EC-727](#)
 ECM power supply [EC-131](#), [EC-373](#), [EC-763](#), [EC-1036](#)
 ECM/PW - Wiring diagram [EC-374](#)
 ECTS - Wiring diagram [EC-175](#), [EC-819](#), [EC-830](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-387](#), [EC-389](#), [EC-401](#),
[EC-1046](#), [EC-1048](#), [EC-1060](#)
 Electrical diagnoses [GI-22](#)
 Electrical load signal circuit [EC-605](#), [EC-1282](#)
 Electronic ignition (EI) system [EC-32](#), [EC-655](#)
 EMNT - Wiring diagram [EC-1273](#)
 Engine control circuit diagram [EC-97](#), [EC-725](#)
 Engine control component parts location ... [EC-92](#), [EC-717](#)
 Engine control module (ECM) [EC-366](#), [EC-1029](#)
 Engine control system diagram and chart . [EC-27](#), [EC-650](#)
 Engine coolant [CO-29](#)
 Engine coolant temperature sensor (ECTS) ... [EC-173](#),
[EC-184](#), [EC-817](#), [EC-828](#)

Engine fail-safe system [EC-82](#), [EC-707](#)
 Engine mounting control (Front) [EC-1272](#)
 Engine oil [LU-17](#)
 Engine oil filter replacementQR25DE .. [MA-19](#), [MA-26](#)
 Engine oil precautions [GI-3](#), [GI-6](#)
 Engine oil replacementQR25DE [MA-18](#), [MA-25](#)
 Engine removal [EM-72](#), [EM-202](#)
 Engine serial number [GI-44](#)
 ETC1 - Wiring diagram [EC-390](#), [EC-1049](#)
 ETC2 - Wiring diagram [EC-398](#), [EC-1057](#)
 ETC3 - Wiring diagram [EC-402](#), [EC-1061](#)
 EVAP canister [EC-1300](#)
 EVAP canister purge volume control solenoid valve
[EC-305](#), [EC-456](#), [EC-621](#), [EC-964](#), [EC-1125](#), [EC-1300](#)
 EVAP canister vent control valve [EC-311](#), [EC-464](#), [EC-470](#),
[EC-970](#), [EC-1133](#), [EC-1139](#)
 EVAP control system (small leak) diagnosis .. [EC-297](#),
[EC-331](#), [EC-339](#), [EC-454](#), [EC-478](#), [EC-956](#), [EC-990](#),
[EC-998](#), [EC-1123](#), [EC-1147](#)
 EVAP control system pressure sensor ... [EC-318](#), [EC-324](#),
[EC-977](#), [EC-983](#)
 EVAP control system purge flow monitoring diagnosis .
[EC-291](#), [EC-950](#)
 EVAP vapor lines inspection [MA-21](#), [MA-28](#)
 Evaporative emission (EVAP) system [EC-618](#), [EC-621](#),
[EC-1297](#)
 Evaporator [ATC-126](#), [MTC-90](#)
 Exhaust manifold [EM-126](#)
 Exhaust system [EX-3](#), [EX-6](#)
 Exhaust system inspection [EX-3](#), [EX-6](#), [MA-29](#)
 Expansion valve [ATC-127](#), [MTC-91](#)

F

F/PUMP - Wiring diagram [EC-590](#), [EC-1266](#)
 Fan control amp. [ATC-115](#)
 Fan switch [MTC-21](#)
 Final drive (FF M/T) [MT-23](#)
 Flow charts [GI-25](#)
 FLS1 - Wiring diagram [EC-349](#), [EC-1007](#)
 FLS2 - Wiring diagram [EC-356](#), [EC-1014](#)
 FLS3 - Wiring diagram [EC-488](#), [EC-1156](#)
 Fluid temperature sensor (A/T) [AT-109](#)
 Fluids [MA-12](#)
 Fluorescent leak detector [ATC-128](#), [MTC-91](#)
 Flywheel (clutch)Flywheel (clutch) [CL-15](#)
 Fork rod (M/T) [MT-22](#)
 Freeze frame data [EC-57](#), [EC-682](#)
 Front bumper [EI-13](#)
 Front combination lamp removal and installation [LT-26](#)
 Front disc brakeFront disc brake [BR-18](#)
 Front door [BL-75](#), [GW-34](#)
 Front Door Trim [EI-27](#)
 Front passenger air bag [SRS-43](#)
 Front seat [SE-14](#)
 Front seat belt [SB-4](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-52](#)
 Front side air bag [SRS-47](#)
 FTTS - Wiring diagram [EC-244](#), [EC-909](#), [EC-913](#)

ALPHABETICAL INDEX

FUEL - Wiring diagram [EC-230](#), [EC-237](#)
 Fuel cut control (at no load high engine speed) [EC-33](#),
[EC-656](#)
 Fuel gauge [DI-4](#)
 Fuel injection system [EC-228](#), [EC-235](#)
 Fuel injection system (Bank 1) [EC-892](#), [EC-900](#)
 Fuel injection system (Bank 2) [EC-892](#), [EC-900](#)
 Fuel injector and fuel tube [EM-32](#), [EM-139](#)
 Fuel level sensor .. [EC-348](#), [EC-353](#), [EC-355](#), [EC-487](#),
[EC-1006](#), [EC-1011](#), [EC-1013](#), [EC-1155](#)
 Fuel line inspection [FL-3](#), [MA-17](#), [MA-25](#)
 Fuel precautions [GI-3](#)
 Fuel pressure check [EC-50](#), [EC-675](#)
 Fuel pressure release [EC-50](#), [EC-675](#)
 Fuel pump [EC-589](#), [EC-1265](#)
 Fuel system [FL-3](#)
 Fuel systemCommercial Service Tools [FL-2](#)
 Fuel systemPREPARATION [FL-2](#)
 Fuel systemSpecial Service Tools [FL-2](#)
 Fuel tank temperature sensor ... [EC-241](#), [EC-243](#), [EC-907](#), [EC-912](#)
 Fuel tank vacuum relief valve [EC-1300](#)
 FUELB1 - Wiring diagram [EC-894](#), [EC-902](#)
 FUELB2 - Wiring diagram [EC-895](#), [EC-903](#)
 Fuse [PG-63](#), [PG-72](#)
 Fuse block [PG-71](#)
 Fusible link [PG-63](#), [PG-72](#)

G

Garage jack and safety stand [GI-38](#)
 Gear components (M/T) [MT-20](#)
 Generator [SC-33](#)
 Generator - See Alternator [SC-33](#)
 Generic scan tool (GST) [EC-118](#), [EC-749](#)
 Glass [GW-11](#), [GW-13](#), [GW-34](#), [GW-37](#)
 Glove box lamp [LT-143](#)
 Grease [MA-12](#)
 Ground distribution [PG-26](#)

H

H/LAMP - Wiring diagram [LT-13](#)
 Handling precautions for plastics [BL-161](#)
 Harness connector [PG-64](#)
 Harness connector inspection [GI-22](#)
 Harness layout [PG-37](#)
 Hazard warning lamp [LT-81](#)
 Headlamp [LT-6](#)
 Headlamp removal and installation [LT-26](#)
 Heated oxygen sensor 1 [EC-192](#), [EC-198](#), [EC-207](#),
[EC-406](#), [EC-412](#)
 Heated oxygen sensor 1 (bank 1) [EC-839](#), [EC-848](#),
[EC-860](#), [EC-1065](#), [EC-1071](#)
 Heated oxygen sensor 1 (bank 2) [EC-839](#), [EC-848](#),
[EC-860](#), [EC-1065](#), [EC-1071](#)
 Heated oxygen sensor 1 heater [EC-144](#)
 Heated oxygen sensor 1 heater (bank 1) [EC-779](#)
 Heated oxygen sensor 1 heater (bank 2) [EC-779](#)

Heated oxygen sensor 2 [EC-214](#), [EC-220](#), [EC-418](#),
[EC-425](#)
 Heated oxygen sensor 2 (bank 1) [EC-870](#), [EC-881](#),
[EC-1078](#), [EC-1089](#)
 Heated oxygen sensor 2 (bank 2) [EC-870](#), [EC-881](#),
[EC-1078](#), [EC-1089](#)
 Heated oxygen sensor 2 heater [EC-150](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-787](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-787](#)
 Heated seat [SE-12](#)
 HEATER - Wiring diagram [MTC-33](#)
 Heater and cooling unit (Heater core) [ATC-111](#), [ATC-112](#), [MTC-73](#), [MTC-74](#)
 Heater system - Wiring diagram [MTC-33](#)
 Heater unit (heater core) [ATC-111](#), [ATC-112](#), [MTC-73](#),
[MTC-74](#)
 Height (Dimensions) [GI-44](#)
 HFC134a (R134a) system identification [ATC-5](#), [MTC-4](#)
 HFC134a (R134a) system introduction [MTC-16](#)
 HFC134a (R134a) system precaution .. [ATC-4](#), [MTC-3](#)
 HFC134a (R134a) system service procedure [ATC-118](#),
[MTC-79](#)
 HFC134a (R134a) system service tools [ATC-12](#), [MTC-12](#)
 HFC134a system service equipment precaution . [ATC-9](#), [MTC-9](#)
 HO2S1 - Wiring diagram [EC-194](#), [EC-201](#), [EC-210](#)
 HO2S1H - Wiring diagram [EC-146](#)
 HO2S2 - Wiring diagram [EC-216](#), [EC-223](#), [EC-420](#),
[EC-428](#)
 HO2S2H - Wiring diagram [EC-152](#)
 Horn [WW-35](#)
 HORN - Wiring diagram [WW-35](#)
 How to erase DTC for OBD system [EC-66](#), [EC-691](#)
 HSEAT - Wiring diagram [SE-13](#)

I

IATS - Wiring diagram [EC-170](#), [EC-814](#), [EC-834](#)
 Identification [MTC-4](#)
 Identification plate [GI-44](#)
 Idle air volume learning [EC-48](#), [EC-673](#)
 Idle mixture ratio [EC-38](#), [EC-662](#)
 Idle speed [EC-38](#), [EC-83](#), [EC-662](#), [EC-708](#)
 Idle speed control (ISC) [EC-362](#), [EC-364](#), [EC-1020](#),
[EC-1022](#)
 Ignition coil [EM-29](#), [EM-136](#), [EC-559](#), [EC-1235](#)
 Ignition control system [EC-559](#), [EC-1235](#)
 Ignition key hole illumination [LT-131](#)
 Ignition timing [EC-38](#), [EC-83](#), [EC-662](#), [EC-708](#)
 IGNSYS - Wiring diagram [EC-560](#), [EC-1236](#)
 ILL - Wiring diagram [LT-139](#)
 Illumination [LT-132](#)
 Illumination control [LT-143](#)
 In vehicle sensor [ATC-103](#)
 INJECT - Wiring diagram [EC-580](#), [EC-1256](#)
 Injector [EC-579](#), [EC-1255](#)
 Input shaft (FF M/T) [MT-20](#)
 Instrument panel [IP-10](#)

ALPHABETICAL INDEX

INT/L - Wiring diagram [LT-144](#)
 Intake air temperature sensor ... [EC-168](#), [EC-187](#), [EC-812](#), [EC-832](#)
 Intake door control linkage adjustment . [ATC-66](#), [MTC-48](#)
 Intake door motor [ATC-66](#), [ATC-109](#), [MTC-46](#), [MTC-71](#)
 Intake manifold [EM-18](#), [EM-121](#)
 Intake sensor [ATC-98](#), [ATC-105](#), [MTC-65](#), [MTC-68](#)
 Intake valve timing control [EC-141](#)
 Intake valve timing control (Bank 1) [EC-771](#)
 Intake valve timing control (Bank 2) [EC-771](#)
 Intake valve timing control solenoid valve [EC-383](#)
 Interior [EI-29](#)
 Interior lamp [LT-124](#)
 IPDM (Intelligent power distribution module engine room) [PG-14](#)
 IVC - Wiring diagram [EC-384](#)
 IVCB1 - Wiring diagram [EC-773](#)
 IVCB2 - Wiring diagram [EC-775](#)

J

Jacking points [GI-38](#)
 Junction box (J/B) [PG-71](#)

K

Keyless entry system - See Multi-remote control system [BL-43](#)
 Knock sensor (KS) [EC-270](#), [EC-928](#)
 KS - Wiring diagram [EC-271](#), [EC-929](#)

L

LAN system circuit [ATC-54](#)
 Length (Dimensions) [GI-44](#)
 License lamp [LT-110](#)
 Lifting points [GI-38](#)
 Line pressure solenoid valve [AT-159](#)
 Line pressure test (A/T) [AT-65](#)
 Liquid gasket application [EM-6](#), [EM-111](#)
 Location of electrical units [PG-60](#)
 Lubricant (R134a) A/C [ATC-18](#), [MTC-18](#)
 Lubricants [MA-12](#)
 Lubrication circuit (engine) [LU-15](#)
 Lubrication oil A/C [ATC-18](#), [MTC-18](#)
 Lubrication-locks, hinges and hood latches [MA-37](#)
 Luggage compartment trim [EI-35](#)

M

M/T major overhaul [MT-23](#)
 M/T oil replacementM/T oil replacement [MT-10](#)
 M/T removal and installationM/T removal and installation [MT-16](#)
 MAFS - Wiring diagram [EC-158](#), [EC-164](#), [EC-379](#), [EC-799](#), [EC-806](#), [EC-1042](#)
 Magnet clutch [ATC-122](#), [MTC-85](#)
 MAIN - Wiring diagram [EC-131](#), [EC-763](#)

Mainshaft (M/T) [MT-20](#)
 Maintenance [MA-5](#)
 Maintenance (engine)QR25DE [MA-15](#)
 Maintenance (engine)VQ35DE [MA-22](#)
 Malfunction indicator lamp (MIL) . [EC-68](#), [EC-369](#), [EC-693](#), [EC-1032](#)
 Manual air conditioner - Wiring diagram [MTC-35](#)
 Manual transaxle number [GI-44](#)
 Manual transmission oil replacement [MA-29](#)
 Mass air flow sensor (MAFS) ... [EC-155](#), [EC-162](#), [EC-377](#), [EC-796](#), [EC-804](#), [EC-1040](#)
 Master cylinder (brake)Master cylinder (brake) [BR-12](#)
 Master cylinder (clutch)Master cylinder (clutch) ... [CL-8](#)
 METER - Wiring diagram [DI-12](#), [DI-66](#)
 MIL - Wiring diagram [EC-370](#), [EC-1033](#)
 Mirror, door [GW-61](#)
 Mirror, out side [GW-61](#)
 Misfire [EC-265](#), [EC-922](#)
 Mode door control linkage adjustment . [ATC-60](#), [MTC-44](#)
 Mode door motor [ATC-113](#), [MTC-75](#)
 Model variation [GI-44](#)
 Multiport fuel injection (MFI) system ... [EC-30](#), [EC-653](#)
 Multiport fuel injection precautions [GI-3](#), [GI-5](#)
 Multi-remote control system [BL-43](#)

N

NATS - Wiring diagram [BL-118](#)
 NVH troubleshooting (BR)NVH troubleshooting (BR) ... [BR-5](#)
 NVH troubleshooting (CL)NVH troubleshooting (CL) [CL-4](#)
 NVH troubleshooting (EM) [EM-11](#), [EM-116](#)
 NVH troubleshooting (FA) [FAX-4](#)
 NVH troubleshooting (RA) [RAX-4](#)
 NVH troubleshooting (RSU)NVH Troubleshooting (RSU) [RSU-4](#)
 NVH troubleshooting (ST) [PS-5](#)
 NVH troubleshooting (WT)NVH troubleshooting (WT) .. [WT-2](#)

O

O2H1B1 - Wiring diagram [EC-781](#)
 O2H1B2 - Wiring diagram [EC-783](#)
 O2H2B1 - Wiring diagram [EC-789](#)
 O2H2B2 - Wiring diagram [EC-791](#)
 O2S1B1 - Wiring diagram ... [EC-841](#), [EC-851](#), [EC-863](#)
 O2S1B2 - Wiring diagram ... [EC-843](#), [EC-853](#), [EC-865](#)
 O2S2B1 - Wiring diagram [EC-872](#), [EC-883](#), [EC-1080](#), [EC-1091](#)
 O2S2B2 - Wiring diagram [EC-874](#), [EC-885](#), [EC-1082](#), [EC-1093](#)
 Oil change (capacity)QR25DE [MA-12](#)
 Oil change (capacity)VQ35DE [MA-12](#)
 Oil filter [LU-19](#)
 Oil pan (engine) [EM-25](#), [EM-129](#)
 Oil pump (engine) [LU-9](#), [LU-20](#)

ALPHABETICAL INDEX

Oil seal replacement (engine) [EM-56](#), [EM-179](#)
 On board diagnostic system [EC-53](#), [EC-677](#)
 Operating cylinder (clutch)Operating cylinder (clutch) .
[CL-10](#)
 ORVR (On-board Refueling Vapor Recovery) [EC-624](#),
[EC-1303](#)
 Out side mirror [GW-61](#)
 Overdrive control switch [AT-250](#)
 Overheat [EC-1104](#)
 Overrun clutch solenoid valve [AT-181](#)

P

Park/Neutral position switch [EC-525](#), [EC-1193](#)
 Park/neutral position switch (A/T) [AT-103](#)
 Park/neutral position switch (M/T)Park/neutral position
 switch (M/T) [MT-12](#)
 Parking brake controlParking brake control [PB-2](#)
 Parking drum brakeParking drum brake [PB-5](#)
 Parking lamp [LT-110](#)
 PCV (positive crankcase ventilation) [EC-630](#), [EC-1309](#)
 Periodic maintenance [MA-7](#)
 Personal lamp [LT-130](#)
 PGC/V - Wiring diagram [EC-307](#), [EC-458](#), [EC-966](#), [EC-1127](#)
 PHASE - Wiring diagram [EC-281](#)
 PHSB1 - Wiring diagram [EC-939](#)
 PHSB2 - Wiring diagram [EC-941](#)
 Piston ring inspection [EM-216](#)
 Piston to bore clearance [EM-95](#)
 PNP/SW - Wiring diagram [EC-527](#), [EC-1195](#)
 POS - Wiring diagram [EC-275](#), [EC-933](#)
 POWER - Wiring diagram [EC-1037](#), [PG-5](#)
 Power seat [SE-10](#)
 Power steering fluid level [MA-35](#)
 Power steering oil pressure switch [EC-596](#)
 Power steering pressure (PSP) sensor [EC-1024](#)
 Power supply routing [PG-3](#)
 Power window [GW-15](#)
 PRE/SE - Wiring diagram .. [EC-320](#), [EC-326](#), [EC-979](#),
[EC-985](#)
 Precations for Leak detection dye [MTC-4](#)
 Precautions (General) [GI-3](#)
 Precautions in repairing high strength steel [BL-164](#)
 Pressure test (A/T) [AT-65](#)
 PS/SEN - Wiring diagram [EC-1025](#)
 PST/SW - Wiring diagram [EC-597](#)

R

R134a - See HFC134a [MTC-3](#)
 Radiator [CO-31](#)
 Radio - See Audio [AV-4](#)
 Rear bumper [EI-15](#)
 Rear combination lamp removal and installation ... [LT-123](#)
 Rear disc brakeRear disc brake [BR-24](#)
 Rear door [BL-75](#), [GW-37](#)
 Rear seat [SE-18](#)

Rear seat belt [SB-5](#)
 Rear suspensionRear suspension [RSU-5](#)
 Rear window [GW-13](#)
 Rear window defogger [GW-41](#)
 Refrigerant connection precaution [ATC-6](#), [MTC-5](#)
 Refrigerant discharging evacuating charging [ATC-118](#),
[MTC-79](#)
 Refrigerant general precaution [ATC-5](#), [MTC-4](#)
 Refrigerant lines [ATC-118](#), [MTC-79](#)
 Refrigerant pressure sensor . [EC-600](#), [EC-1277](#), [ATC-125](#), [MTC-57](#), [MTC-88](#)
 Refrigeration cycle [MTC-16](#)
 Remote keyless entry system [BL-43](#)
 Reverse idler shaft (M/T) [MT-20](#)
 Reverse main gear (M/T) [MT-20](#)
 Revolution sensor (A/T) [AT-115](#)
 Road wheel size [GI-44](#)
 Rocker cover [EM-35](#), [EM-142](#)
 Room lamp [LT-124](#), [LT-130](#)
 Room lamp - See Interior lamp [LT-124](#)
 ROOM/L - Wiring diagram [LT-126](#)
 RP/SEN - Wiring diagram [EC-601](#), [EC-1278](#)

S

S/SIG - Wiring diagram [EC-586](#), [EC-1262](#)
 SAE J1930 terminology list [GI-48](#)
 SAE J1979 - Mode 1 - 7 [EC-53](#), [EC-677](#)
 SEAT - Wiring diagram [SE-10](#)
 Seat belt inspection [SB-6](#), [MA-37](#)
 Seat belt pre-tensioner disposal [SRS-54](#)
 Seat belt, front [SB-4](#)
 Seat belt, rear [SB-5](#)
 Seat, front [SE-14](#)
 Seat, rear [SE-18](#)
 SEN/PW - Wiring diagram [EC-451](#), [EC-1120](#)
 SHIFT - Wiring diagram [AT-257](#)
 Shift control components (M/T) [MT-22](#)
 Shift control components (M/T)Shift control components
 (M/T) [MT-13](#)
 Shift fork (M/T) [MT-22](#)
 Shift lock system [AT-256](#)
 Shift schedule [AT-373](#)
 Shift solenoid valve A (A/T) [AT-165](#)
 Shift solenoid valve B (A/T) [AT-170](#)
 Shock absorber (front) [FSU-9](#)
 Shock absorber (rear)Shock absorber (rear) [RSU-9](#)
 Side air bag (satellite) sensor [SRS-51](#)
 Side curtain air bag [SRS-48](#)
 Side trim [EI-29](#)
 Spare tire size [GI-44](#)
 Spark plug [EM-137](#)
 Spark plug replacementQR25DE [MA-19](#), [MA-27](#)
 Specification value [EC-126](#), [EC-758](#)
 Speedometer [DI-4](#)
 Spiral cable [SRS-41](#)
 Spot lamp [LT-130](#)
 SROOF - Wiring diagram [RF-11](#)
 SRS - See Supplemental Restraint System [SRS-5](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

SRS - Wiring diagram	SRS-12
SRS Trouble diagnoses	SRS-8
Stabilizer bar (front)	FSU-11
Stall test (A/T)	AT-61
Standardized relay	PG-69
START - Wiring diagram	SC-14
Start signal	EC-585 , EC-1261
Starter	SC-20
Starting system	SC-9
Steering gear and linkage inspection	MA-35
Steering knuckle	FAX-6
STEP/L - Wiring diagram	LT-105
Stop lamp switch	EC-529 , EC-1204
STOP/L - Wiring diagram	LT-101
Strut (front)	FSU-9
Sun roof, electric	RF-10
Sunload sensor	ATC-104
Sunroof	RF-15
Supplemental Restraint System	SRS-5
Supplemental restraint system - Wiring diagram	SRS-12
Symbols and abbreviations	GI-8 , GI-9 , GI-20
Symptom matrix chart	EC-87 , EC-713
Synchronizer (M/T)	MT-20
System readiness test (SRT) code	EC-58 , EC-683

T

Tachometer	DI-4
Tail lamp	LT-110
TAIL/L - Wiring diagram	LT-117
TCM circuit diagram	AT-16
TCM inspection table	AT-93
TCS - Wiring diagram	BRC-56
TCS (traction control system)	BRC-47
TCS actuator	BRC-49 , BRC-92
TCS component parts and connector location	BRC-55
TCS control unit	BRC-49 , BRC-92
TCS self-diagnosis	BRC-66
TCS system components	BRC-48
TCS wheel sensors	BRC-55 , BRC-90
Thermo control amp	ATC-106
Thermostat	CO-18
Three way catalyst	EM-126
Three way catalyst function	EC-286
Three way catalyst function (Bank 1)	EC-946
Three way catalyst function (Bank 2)	EC-946
Three way catalyst precautions	GI-3 , GI-5
Throttle control motor relay	EC-396 , EC-1055
Throttle position sensor (TPS) ..	EC-178 , EC-259 , EC-446 , EC-448 , EC-546 , EC-822 , EC-916 , EC-1115 , EC-1117 , EC-1221
Throttle position switch	AT-250
Tightening torque of standard bolts	GI-42
Timing chain	EM-48 , EM-157
Tire rotation	MA-33
Tire size	GI-44
Torque converter installation	AT-270 , AT-366
Torque convertor clutch solenoid valve	AT-146

Tow truck towing	GI-41
Towing point	GI-41
TPS1 - Wiring diagram	EC-261 , EC-918
TPS2 - Wiring diagram	EC-180 , EC-824
TPS3 - Wiring diagram	EC-548 , EC-1223
Traction control system - See TCS	BRC-47
Traction control system - Wiring diagram	BRC-56
Transaxle serial number	GI-44
Transmission case (M/T)	MT-19
TRANSMT - Wiring diagram	BL-135
Tread-FR&RR (Dimensions)	GI-44
Trim	EI-29
Trouble diagnoses	GI-9
Trunk lid trim	EI-35
Trunk room lamp	LT-144
Trunk room trim	EI-35
TURN - Wiring diagram	LT-88
Turn signal lamp	LT-81
Two trip detection logic	EC-53 , EC-677
Two-pole lift	GI-38

V

Vacuum cut valve	EC-621 , EC-1171 , EC-1300
Vacuum cut valve bypass valve	EC-490 , EC-497 , EC-621 , EC-1158 , EC-1164 , EC-1300
Vacuum hose (brake system)Vacuum hose (brake system)	BR-17
Vacuum hose drawing (Engine control)	EC-28 , EC-651
Valve clearance	EM-44 , EM-153
Valve guide	EM-67 , EM-198
Valve seat	EM-69 , EM-200
Valve spring	EM-70 , EM-201
Vanity mirror lamp	LT-144
Variable induction air control system (VIAS) ..	EC-570 , EC-1198 , EC-1247
Vehicle identification number	GI-44
Vehicle recovery (freeing a stuck vehicle)	GI-41
Vehicle speed sensor (VSS)	EC-360 , EC-1018
VENT/V - Wiring diagram ...	EC-313 , EC-466 , EC-473 , EC-972 , EC-1135 , EC-1142
VIAS - Wiring diagram	EC-572 , EC-1249
VIAS/V - Wiring diagram	EC-1200
Viscosity number (SAE)	MA-13

W

W/ANT - Wiring diagram	AV-27
WARN - Wiring diagram	DI-30
Warning chime	DI-42
Warning lamps	DI-22
Water pump	CO-37
Water temperature gauge	DI-4
Wheel alignment (rear)Wheel alignment (rear) .	RSU-6
Wheel balance	MA-31
Wheel bearing (front axle)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (front)	FAX-5 , FAX-6
Wheel hub (rear)	RAX-5

ALPHABETICAL INDEX

Wheel sensors (ABS) [BRC-7](#), [BRC-42](#)
Wheel sensors (TCS) [BRC-90](#)
Wheel size [GI-44](#)
Wheelarch heightWheelarch height . [FSU-17](#), [RSU-12](#)
Wheelbase (Dimensions) [GI-44](#)
Width (Dimensions) [GI-44](#)
WINDOW - Wiring diagram [GW-18](#)
Window antenna [AV-26](#)
Window, door [GW-34](#), [GW-37](#)
Window, rear [GW-13](#)
Windshield [GW-11](#)
WIPER - Wiring diagram [WW-11](#)
Wiper and washer [WW-4](#)
Wiring Diagram (Cell code) list [PG-57](#)
Wiring diagrams [GI-8](#), [GI-12](#)

A

B

C

D

E

F

G

H

I

J

K

L

IDX