

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

A

A/C - Wiring diagram	ATC-32 , MTC-34
A/C air flow	MTC-25
A/C component layout	MTC-18
A/C compressor clutch removal and installation ..	ATC-122 , MTC-84
A/C compressor description	MTC-17
A/C compressor mounting	ATC-121 , MTC-82 , MTC-83
A/C compressor precaution	ATC-9 , MTC-10
A/C compressor special service tool ..	ATC-12 , MTC-13
A/C diagnostic work flow (auto A/C)	ATC-28
A/C diagnostic work flow (manual A/C)	MTC-27
A/C evaporator	ATC-127 , MTC-89
A/C HFC134a (R134a) system identification	ATC-6 , MTC-6
A/C HFC134a (R134a) system introduction ...	MTC-17
A/C HFC134a (R134a) system precaution	ATC-4 , MTC-4
A/C HFC134a (R134a) system service procedure	ATC-118 , MTC-78
A/C HFC134a (R134a) system service tools ..	ATC-12 , MTC-13
A/C HFC134a system service equipment precaution ...	ATC-9 , MTC-10
A/C lubricant (R134a)	ATC-18 , MTC-19
A/C lubrication oil	ATC-18 , MTC-19
A/C operational check	ATC-46 , MTC-37
A/C performance chart	ATC-81 , MTC-58
A/C performance test diagnoses	ATC-77 , MTC-57
A/C self-diagnoses (auto A/C)	ATC-38
A/C service data specification	ATC-132
A/C switch	MTC-24
A/C symptom chart (auto A/C)	ATC-28
A/C symptom chart (manual A/C)	MTC-27
A/C trouble diagnoses (auto A/C)	ATC-28
A/C trouble diagnoses (manual A/C)	MTC-27
A/C, A - Wiring diagram	ATC-32
A/C, M - Wiring diagram	MTC-34
A/F - Wiring diagram ...	EC-412 , EC-417 , EC-422 , EC-429 , EC-437 , EC-443 , EC-452
A/FH - Wiring diagram	EC-344
A/T - Wiring diagram	AT-16
A/T fluid temperature sensor	AT-107
A/T IND - Wiring diagram	DI-32
A/T indicator	DI-32
A/T self-diagnoses	AT-41 , AT-50
A/T shift lock system	AT-254
A/T shift lock system - Wiring diagram	AT-255
A/T Wiring diagram AT - 1ST	AT-124
A/T Wiring diagram AT - 2ND	AT-129
A/T Wiring diagram AT - 3RD	AT-134
A/T Wiring diagram AT - 4TH	AT-139
A/T Wiring diagram AT - BA/FTS	AT-189
A/T Wiring diagram AT - CAN	AT-185
A/T Wiring diagram AT - ENG SS	AT-119
A/T Wiring diagram AT - FTS	AT-109
A/T Wiring diagram AT - LPSV	AT-159
A/T Wiring diagram AT - MAIN	AT-98
A/T Wiring diagram AT - NONDTC	AT-207
A/T Wiring diagram AT - OVRCSV	AT-181
A/T Wiring diagram AT - PNP/SW	AT-103
A/T Wiring diagram AT - SSV/A	AT-165
A/T Wiring diagram AT - SSV/B	AT-170
A/T Wiring diagram AT - TCCSIG	AT-151
A/T Wiring diagram AT - TCV	AT-146
A/T Wiring diagram AT - TPS	AT-176
A/T Wiring diagram AT - VSS A/T	AT-115
A/T Wiring diagram AT - VSSMTR	AT-196 , AT-200
ABS - Wiring diagram	BRC-13
ABS (anti-lock brake system)	BRC-5
Accelerator control system	ACC-2
Accelerator pedal position (APP) sensor	EC-509 , EC-516 , EC-531 , EC-1144 , EC-1150 , EC-1163
Accelerator pedal released position learning ..	EC-644
Active damper suspension system - Wiring diagram	FSU-4
Aiming adjustment	LT-27
Air bag	SRS-3
Air bag disposal	SRS-54
Air bag precautions	GI-3
Air bleeding (hydraulic clutch)Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake systemAir bleeding for brake system	BR-8
Air cleaner and air duct	EM-17 , EM-120
Air cleaner filter replacement	MA-19 , MA-26
Air conditioner - Wiring diagram	ATC-32 , MTC-34
Air conditioner cut control	EC-33 , EC-630
Air conditioning - See A/C	MTC-17
Air flow meter - See Mass air flow sensor	EC-151 , EC-159 , EC-770 , EC-778
Air fuel ratio sensor 1 ..	EC-410 , EC-415 , EC-420 , EC-427 , EC-434 , EC-440 , EC-449
Air fuel ratio sensor 1 heater	EC-343
Air mix door control linkage adjustment	ATC-60
Alternator	SC-29
Ambient sensor	ATC-102
Angular tightening application	EM-5 , EM-111
Antenna	AV-26
Anti-lock brake system - See ABS	BRC-5
Anti-lock brake system - Wiring diagram	BRC-13
APPS1 - Wiring diagram	EC-511 , EC-1146
APPS2 - Wiring diagram	EC-518 , EC-1152
APPS3 - Wiring diagram	EC-533 , EC-1165
ASC/BS - Wiring diagram	EC-480 , EC-1112
ASC/SW - Wiring diagram	EC-473 , EC-1105
ASCSOF - Wiring diagram	EC-579 , EC-1218
ASCD	EC-607
ASCD (automatic speed control device)	EC-1245 , ACS-2
ASCIND - Wiring diagram	EC-588 , EC-1228
Audio	AV-4
AUDIO - Wiring diagram	AV-4 , AV-8
Auto air conditioner - Wiring diagram	ATC-32
Auto anti-dazzling inside mirror	GW-39 , GW-40
Automatic amplifier	ATC-36 , ATC-49
Automatic transaxle number	GI-44

ALPHABETICAL INDEX

Automatic transmission fluid replacement [MA-32](#)

B

B/COMP - Wiring diagram [DI-51](#)
 Back door trim [EI-27](#)
 BACK/L - Wiring diagram [LT-102](#)
 Back-up lamp switch (M/T)Back-up lamp switch [MT-12](#)
 Basic inspection [EC-83](#), [EC-679](#)
 Battery [SC-4](#)
 Battery/Starting/Charging System Tester [SC-6](#), [SC-12](#),
[SC-23](#)
 Baulk ring (M/T) [MT-20](#)
 BCM (Body control module) [BCS-3](#)
 Block heater [EM-77](#), [EM-207](#)
 Blower motor [ATC-64](#), [ATC-108](#), [MTC-48](#), [MTC-69](#)
 Blower resistor [MTC-75](#)
 Blower unit [ATC-107](#), [MTC-68](#)
 Board-on lift [GI-38](#)
 Body alignment [BL-140](#)
 Body component parts [BL-129](#)
 Body construction [BL-139](#)
 Body exterior paint color [BL-128](#)
 Body repair [BL-128](#)
 Body sealing [BL-136](#)
 Bose speaker amp. [AV-23](#)
 Brake boosterBrake booster [BR-15](#)
 Brake control valve (Proportioning valve)Brake control
 valve (Proportioning valve) [BR-30](#)
 Brake fluid changeBrake fluid change [BR-8](#)
 Brake fluid level [MA-34](#)
 Brake fluid level and line checkBrake fluid level and line
 check [BR-8](#)
 Brake hydraulic lineBake hydraulic line [BR-9](#)
 Brake inspection [MA-35](#)
 Brake lines and cables inspection [MA-34](#)
 Brake master cylinderBrake master cylinder [BR-12](#)
 Brake pedalBrake pedal [BR-6](#)
 Brake switch [EC-504](#), [EC-1139](#)
 BRK/SW - Wiring diagram [EC-505](#), [EC-1140](#)
 Bulb specifications [LT-136](#)
 Bumper, front [EI-13](#)
 Bumper, rear [EI-15](#)

C

Camshaft [EM-38](#), [EM-145](#)
 Camshaft inspection [EM-40](#), [EM-150](#)
 Camshaft position sensor (PHASE) .. [EC-251](#), [EC-908](#)
 CAN - Wiring diagram . [EC-141](#), [EC-742](#), [LAN-9](#), [LAN-30](#),
[LAN-48](#)
 CAN (Controller Area Network) [LAN-4](#), [LAN-8](#), [LAN-29](#),
[LAN-47](#)
 CAN communication [EC-34](#), [EC-140](#), [EC-631](#), [EC-741](#),
[AT-184](#), [BRC-72](#), [LAN-4](#), [LAN-8](#), [LAN-29](#), [LAN-47](#)
 Canister-See EVAP canister [EC-595](#), [EC-1234](#)
 CHARGE - Wiring diagram [SC-22](#)
 Charging system [SC-21](#)
 Chassis and body maintenance [MA-30](#)

Chassis and body maintenanceSchedule 1 [MA-10](#)
 Chassis and body maintenanceSchedule 2 [MA-12](#)
 CHIME - Wiring diagram [DI-36](#)
 CIGAR - Wiring diagram [WW-34](#)
 Cigarette lighter [WW-34](#)
 Circuit breaker [PG-65](#)
 Clearance lamp [LT-104](#)
 Closed loop control [EC-31](#), [EC-390](#), [EC-628](#)
 Closed loop control (Bank 1) [EC-1062](#)
 Closed loop control (Bank 2) [EC-1062](#)
 Clutch coverClutch cover [CL-15](#)
 Clutch discClutch disc [CL-15](#)
 Clutch fluid level [MA-30](#)
 Clutch master cylinderClutch master cylinder [CL-8](#)
 Clutch operating cylinderClutch operating cylinder [CL-10](#)
 Clutch pedalClutch pedal [CL-5](#)
 Clutch release mechanismClutch release mechanism .
[CL-13](#)
 Coil spring (front) [FSU-9](#)
 Coil spring (rear)Coil spring [RSU-9](#)
 Collision diagnosis [SRS-61](#)
 Combination lamp, front, removal and installation .. [LT-29](#)
 Combination lamp, rear, removal and installation [LT-97](#)
 Combination meter [DI-4](#), [DI-17](#)
 Combination meter removal and installation - See Instru-
 ment panel [DI-17](#)
 Component Location (auto A/C) [ATC-29](#)
 Component Location (manual A/C) [MTC-28](#)
 Compressor clutch removal and installation . [ATC-122](#),
[MTC-84](#)
 Compressor mounting [ATC-121](#), [MTC-82](#), [MTC-83](#)
 Compressor precaution [ATC-9](#), [MTC-10](#)
 Compressor special service tool [ATC-12](#), [MTC-13](#)
 Condenser [ATC-126](#), [MTC-88](#)
 Connector inspection [GI-22](#)
 Console box - See Instrument panel [IP-10](#)
 CONSULT for engine [EC-106](#), [EC-707](#)
 CONSULT for TCS [BRC-59](#)
 CONSULT general information [GI-35](#)
 Contaminated refrigerant [MTC-4](#)
 Control unit [ATC-101](#), [MTC-66](#)
 Control units (terminal arrangement) [PG-69](#)
 Controller Area Network (CAN) [LAN-4](#), [LAN-8](#), [LAN-29](#),
[LAN-47](#)
 Converter housing installation [AT-367](#)
 COOL/F - Wiring diagram [EC-394](#), [EC-1070](#)
 Coolant mixture ratio [MA-14](#)
 Coolant replacement [MA-16](#)
 Coolant replacementVQ35DE [MA-24](#)
 Cooling circuit (engine) [CO-29](#)
 Cooling fan motor [EC-400](#), [EC-1077](#)
 Cooling unit (A/C evaporator) [ATC-111](#), [ATC-127](#),
[MTC-72](#), [MTC-89](#)
 Corrosion protection [BL-133](#)
 Coupling sleeve (M/T) [MT-20](#)
 Crankcase ventilation system - See Positive crankcase
 ventilation [EC-605](#), [EC-1243](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Crankshaft [EM-78](#)
 Crankshaft position sensor (POS) [EC-244](#), [EC-902](#)
 Crash zone sensor [SRS-50](#)
 Cylinder block [EM-77](#), [EM-207](#)
 Cylinder block boring [EM-96](#)
 Cylinder head [EM-60](#), [EM-184](#)
 Cylinder head bolt tightening [EM-190](#)

D

Data link connector [EC-590](#), [EC-1230](#)
 Data link connector for Consult [EC-709](#)
 Daytime light system [LT-32](#)
 Daytime running light - See Daytime light system .. [LT-32](#)
 Diagnosis sensor unit [SRS-53](#)
 Diagnostic trouble code (DTC) for OBD system [EC-14](#),
[EC-56](#), [EC-611](#), [EC-653](#)
 Diagnostic trouble code (DTC) inspection priority chart
[EC-80](#), [EC-676](#)
 Differential gear (FF M/T) [MT-23](#)
 Dimensions [GI-44](#)
 DLC - Wiring diagram [EC-590](#), [EC-1230](#)
 Door glass [GW-34](#), [GW-37](#)
 Door glass Fitting Adjustment(Front) [GW-35](#)
 Door glass Fitting Adjustment(Rear) [GW-38](#)
 Door mirror [GW-57](#)
 Door trim [EI-27](#)
 Door, front [BL-70](#), [GW-34](#)
 Door, rear [BL-70](#), [GW-37](#)
 Drive belt [EM-14](#)
 Drive belt inspectionQR25DE [MA-16](#)
 Drive belt inspectionVQ35DE [MA-23](#)
 Drive shaft (front) [FAX-11](#)
 Driver air bag [SRS-39](#)
 Dropping resistor (A/T) [AT-157](#)
 DTC work support [EC-116](#), [EC-718](#)
 DTRL - Wiring diagram [LT-38](#)
 Duct and grilles [ATC-116](#), [MTC-76](#)

E

ECM input/output signal [EC-99](#), [EC-698](#)
 ECM power supply [EC-131](#), [EC-348](#), [EC-734](#), [EC-1004](#)
 ECM/PW - Wiring diagram [EC-349](#)
 ECTS - Wiring diagram [EC-173](#), [EC-792](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-356](#), [EC-358](#), [EC-369](#),
[EC-1008](#), [EC-1010](#), [EC-1022](#)
 Electrical diagnoses [GI-22](#)
 Electrical load signal circuit [EC-577](#), [EC-1216](#)
 Electronic ignition (EI) system [EC-32](#), [EC-629](#)
 EMNT - Wiring diagram [EC-1207](#)
 Engine control circuit diagram [EC-97](#), [EC-696](#)
 Engine control component parts location ... [EC-92](#), [EC-688](#)
 Engine control module (ECM) [EC-340](#), [EC-997](#)
 Engine control system diagram and chart . [EC-27](#), [EC-624](#)

Engine coolant [CO-30](#)
 Engine coolant temperature sensor (ECTS) .. [EC-171](#),
[EC-183](#), [EC-790](#), [EC-801](#)
 Engine fail-safe system [EC-82](#), [EC-678](#)
 Engine mounting control (Front) [EC-1206](#)
 Engine oil [LU-17](#)
 Engine oil filter replacementQR25DE .. [MA-20](#), [MA-27](#)
 Engine oil precautions [GI-3](#), [GI-6](#)
 Engine oil replacementQR25DE [MA-19](#), [MA-26](#)
 Engine removal [EM-73](#), [EM-203](#)
 Engine serial number [GI-44](#)
 ETC1 - Wiring diagram [EC-359](#), [EC-1011](#)
 ETC2 - Wiring diagram [EC-366](#), [EC-1019](#)
 ETC3 - Wiring diagram [EC-370](#), [EC-1023](#)
 EVAP canister [EC-595](#), [EC-1234](#)
 EVAP canister purge volume control solenoid valve
[EC-275](#), [EC-458](#), [EC-933](#), [EC-1086](#), [EC-1234](#)
 EVAP canister vent control valve [EC-281](#), [EC-465](#), [EC-939](#),
[EC-1094](#)
 EVAP control system (small leak) diagnosis .. [EC-267](#),
[EC-305](#), [EC-313](#), [EC-925](#), [EC-959](#), [EC-967](#)
 EVAP control system pressure sensor ... [EC-288](#), [EC-291](#),
[EC-297](#), [EC-946](#), [EC-952](#)
 EVAP control system purge flow monitoring diagnosis .
[EC-261](#), [EC-920](#)
 EVAP vapor lines inspection [MA-22](#), [MA-29](#)
 Evaporative emission (EVAP) system [EC-592](#), [EC-1231](#)
 Evaporator [ATC-127](#), [MTC-89](#)
 Exhaust manifold [EM-127](#)
 Exhaust system [EX-3](#), [EX-6](#)
 Exhaust system inspection [EX-3](#), [EX-6](#), [MA-30](#)
 Expansion valve [ATC-128](#), [MTC-91](#)

F

F/PUMP - Wiring diagram [EC-566](#), [EC-1200](#)
 Fan control amp. [ATC-115](#)
 Fan switch [MTC-24](#)
 Final drive (FF M/T) [MT-23](#)
 Flow charts [GI-25](#)
 FLS1 - Wiring diagram [EC-976](#)
 FLS2 - Wiring diagram [EC-983](#)
 FLS3 - Wiring diagram [EC-1101](#)
 Fluid temperature sensor (A/T) [AT-107](#)
 Fluids [MA-13](#)
 Fluorescent leak detector [ATC-129](#), [MTC-91](#)
 Flywheel (clutch)Flywheel (clutch) [CL-15](#)
 Fork rod (M/T) [MT-22](#)
 Freeze frame data [EC-57](#), [EC-654](#)
 Front bumper [EI-13](#)
 Front combination lamp removal and installation [LT-29](#)
 Front disc brakeFront disc brake [BR-18](#)
 Front door [BL-70](#), [GW-34](#)
 Front Door Trim [EI-27](#)
 Front passenger air bag [SRS-43](#)
 Front seat [SE-14](#)
 Front seat belt [SB-4](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-52](#)

ALPHABETICAL INDEX

Front side air bag [SRS-47](#)
 FTTS - Wiring diagram [EC-220](#), [EC-224](#), [EC-879](#), [EC-883](#)
 FUEL - Wiring diagram [EC-207](#), [EC-214](#)
 Fuel cut control (at no load high engine speed) [EC-33](#), [EC-630](#)
 Fuel gauge [DI-4](#)
 Fuel injection system [EC-205](#), [EC-212](#)
 Fuel injection system (Bank 1) [EC-862](#), [EC-870](#)
 Fuel injection system (Bank 2) [EC-862](#), [EC-870](#)
 Fuel injector and fuel tube [EM-33](#), [EM-140](#)
 Fuel level sensor .. [EC-323](#), [EC-325](#), [EC-327](#), [EC-975](#), [EC-980](#), [EC-982](#), [EC-1100](#)
 Fuel line inspection [FL-3](#), [MA-18](#), [MA-26](#)
 Fuel precautions [GI-3](#), [GI-5](#)
 Fuel pressure check [EC-50](#), [EC-646](#)
 Fuel pressure release [EC-50](#), [EC-646](#)
 Fuel pump [EC-565](#), [EC-1199](#)
 Fuel system [FL-3](#)
 Fuel systemCommercial Service Tools [FL-2](#)
 Fuel systemPREPARATION [FL-2](#)
 Fuel systemSpecial Service Tools [FL-2](#)
 Fuel tank temperature sensor ... [EC-218](#), [EC-223](#), [EC-877](#), [EC-882](#)
 Fuel tank vacuum relief valve [EC-595](#), [EC-1234](#)
 FUELB1 - Wiring diagram [EC-864](#), [EC-872](#)
 FUELB2 - Wiring diagram [EC-865](#), [EC-873](#)
 Fuse [PG-65](#), [PG-73](#)
 Fuse block [PG-72](#)
 Fusible link [PG-65](#), [PG-73](#)

G

Garage jack and safety stand [GI-38](#)
 Gear components (M/T) [MT-20](#)
 Generator [SC-29](#)
 Generator - See Alternator [SC-29](#)
 Generic scan tool (GST) [EC-118](#), [EC-720](#)
 Glass [GW-11](#), [GW-13](#), [GW-34](#), [GW-37](#)
 Glove box lamp [LT-132](#)
 Grease [MA-13](#)
 Ground distribution [PG-28](#)

H

H/LAMP - Wiring diagram [LT-9](#)
 Handling precautions for plastics [BL-151](#)
 Harness connector [PG-66](#)
 Harness connector inspection [GI-22](#)
 Harness layout [PG-39](#)
 Hazard warning lamp [LT-77](#)
 Headlamp [LT-6](#)
 Headlamp removal and installation [LT-29](#)
 Heated oxygen sensor 1 (bank 1) [EC-809](#), [EC-818](#), [EC-830](#), [EC-1027](#), [EC-1033](#)
 Heated oxygen sensor 1 (bank 2) [EC-809](#), [EC-818](#), [EC-830](#), [EC-1027](#), [EC-1033](#)
 Heated oxygen sensor 1 heater (bank 1) [EC-753](#)
 Heated oxygen sensor 1 heater (bank 2) [EC-753](#)

Heated oxygen sensor 2 [EC-191](#), [EC-197](#), [EC-374](#), [EC-382](#)
 Heated oxygen sensor 2 (bank 1) ... [EC-840](#), [EC-851](#), [EC-1040](#), [EC-1051](#)
 Heated oxygen sensor 2 (bank 2) ... [EC-840](#), [EC-851](#), [EC-1040](#), [EC-1051](#)
 Heated oxygen sensor 2 heater [EC-146](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-761](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-761](#)
 Heated seat [SE-12](#)
 HEATER - Wiring diagram [MTC-32](#)
 Heater and cooling unit (Heater core) [ATC-111](#), [ATC-112](#), [MTC-72](#), [MTC-73](#)
 Heater system - Wiring diagram [MTC-32](#)
 Heater unit (heater core) [ATC-111](#), [ATC-112](#), [MTC-72](#), [MTC-73](#)
 Height (Dimensions) [GI-44](#)
 HFC134a (R134a) system identification [ATC-6](#), [MTC-6](#)
 HFC134a (R134a) system introduction [MTC-17](#)
 HFC134a (R134a) system precaution .. [ATC-4](#), [MTC-4](#)
 HFC134a (R134a) system service procedure [ATC-118](#), [MTC-78](#)
 HFC134a (R134a) system service tools [ATC-12](#), [MTC-13](#)
 HFC134a system service equipment precaution . [ATC-9](#), [MTC-10](#)
 HO2S2 - Wiring diagram [EC-193](#), [EC-200](#), [EC-377](#), [EC-385](#)
 HO2S2H - Wiring diagram [EC-148](#)
 Horn [WW-38](#)
 HORN - Wiring diagram [WW-38](#)
 How to erase DTC for OBD system [EC-64](#), [EC-662](#)
 HSEAT - Wiring diagram [SE-13](#)

I

IATS - Wiring diagram [EC-168](#), [EC-787](#)
 Identification [MTC-6](#)
 Identification plate [GI-44](#)
 Idle air volume learning [EC-48](#), [EC-644](#)
 Idle mixture ratio [EC-36](#), [EC-633](#)
 Idle speed [EC-36](#), [EC-83](#), [EC-633](#), [EC-679](#)
 Idle speed control (ISC) [EC-331](#), [EC-333](#), [EC-988](#), [EC-990](#)
 Ignition coil [EM-30](#), [EM-137](#), [EC-539](#), [EC-1169](#)
 Ignition control system [EC-539](#), [EC-1169](#)
 Ignition key hole illumination [LT-124](#)
 Ignition timing [EC-36](#), [EC-83](#), [EC-633](#), [EC-679](#)
 IGNSYS - Wiring diagram [EC-540](#), [EC-1170](#)
 ILL - Wiring diagram [LT-128](#)
 Illumination [LT-125](#)
 Illumination control [LT-132](#)
 In vehicle sensor [ATC-103](#)
 INJECT - Wiring diagram [EC-560](#), [EC-1190](#)
 Injector [EC-559](#), [EC-1189](#)
 Input shaft (FF M/T) [MT-20](#)
 Instrument panel [IP-10](#)
 INT/L - Wiring diagram [LT-133](#)
 Intake air temperature sensor [EC-166](#), [EC-186](#), [EC-](#)

ALPHABETICAL INDEX

[785](#), [EC-804](#)

Intake door control linkage adjustment . [ATC-63](#), [MTC-47](#)

Intake door motor [ATC-63](#), [ATC-109](#), [MTC-45](#), [MTC-70](#)

Intake manifold [EM-19](#), [EM-122](#)

Intake sensor [ATC-98](#), [ATC-105](#), [MTC-64](#), [MTC-67](#)

Intake valve timing control [EC-143](#)

Intake valve timing control (Bank 1) [EC-744](#)

Intake valve timing control (Bank 2) [EC-744](#)

Intake valve timing control solenoid valve [EC-352](#)

Interior [EI-29](#)

Interior lamp [LT-117](#)

IPDM (Intelligent power distribution module engine room) [PG-15](#)

IVC - Wiring diagram [EC-353](#)

IVCB1 - Wiring diagram [EC-747](#)

IVCB2 - Wiring diagram [EC-749](#)

J

Jacking points [GI-38](#)

Junction box (J/B) [PG-72](#)

K

Keyless entry system - See Multi-remote control system [BL-42](#)

Knock sensor (KS) [EC-240](#), [EC-898](#)

KS - Wiring diagram [EC-241](#), [EC-899](#)

L

LAN system circuit [ATC-51](#)

Length (Dimensions) [GI-44](#)

License lamp [LT-104](#)

Lifting points [GI-38](#)

Line pressure solenoid valve [AT-157](#)

Line pressure test (A/T) [AT-67](#)

Liquid gasket application [EM-6](#), [EM-112](#)

Location of electrical units [PG-62](#)

Lubricant (R134a) A/C [ATC-18](#), [MTC-19](#)

Lubricants [MA-13](#)

Lubrication circuit (engine) [LU-15](#)

Lubrication oil A/C [ATC-18](#), [MTC-19](#)

Lubrication-locks, hinges and hood latches [MA-38](#)

Luggage compartment trim [EI-35](#)

M

M/T major overhaul [MT-23](#)

M/T oil replacementM/T oil replacement [MT-10](#)

M/T removal and installationM/T removal and installation [MT-16](#)

MAFS - Wiring diagram [EC-154](#), [EC-161](#), [EC-773](#), [EC-780](#)

Magnet clutch [ATC-122](#), [MTC-84](#)

MAIN - Wiring diagram [EC-131](#), [EC-734](#)

Mainshaft (M/T) [MT-20](#)

Maintenance [MA-6](#)

Maintenance (engine)QR25DE [MA-16](#)

Maintenance (engine)VQ35DE [MA-23](#)

Malfunction indicator lamp (MIL) . [EC-66](#), [EC-664](#), [EC-1000](#)

Manual air conditioner - Wiring diagram [MTC-34](#)

Manual transaxle number [GI-44](#)

Manual transmission oil replacement [MA-31](#)

Mass air flow sensor (MAFS) [EC-151](#), [EC-159](#), [EC-770](#), [EC-778](#)

Master cylinder (brake)Master cylinder (brake) [BR-12](#)

Master cylinder (clutch)Master cylinder (clutch) ... [CL-8](#)

METER - Wiring diagram [DI-9](#)

MIL - Wiring diagram [EC-1001](#)

Mirror, door [GW-57](#)

Mirror, out side [GW-57](#)

Misfire [EC-234](#), [EC-892](#)

Mode door control linkage adjustment [ATC-57](#)

Mode door motor [ATC-113](#), [MTC-74](#)

Model variation [GI-44](#)

Multiport fuel injection (MFI) system ... [EC-30](#), [EC-627](#)

Multiport fuel injection precautions [GI-3](#), [GI-5](#)

Multi-remote control system [BL-42](#)

N

NATS - Wiring diagram [BL-108](#)

NVH troubleshooting (BR)NVH troubleshooting (BR) ... [BR-5](#)

NVH troubleshooting (CL)NVH troubleshooting (CL) [CL-4](#)

NVH troubleshooting (EM) [EM-12](#), [EM-117](#)

NVH troubleshooting (FA) [FAX-4](#)

NVH troubleshooting (RA) [RAX-4](#)

NVH troubleshooting (RSU)NVH Troubleshooting (RSU) [RSU-4](#)

NVH troubleshooting (ST) [PS-5](#)

NVH troubleshooting (WT)NVH troubleshooting (WT) .. [WT-2](#)

O

O2H1B1 - Wiring diagram [EC-755](#)

O2H1B2 - Wiring diagram [EC-757](#)

O2H2B1 - Wiring diagram [EC-763](#)

O2H2B2 - Wiring diagram [EC-765](#)

O2S1B1 - Wiring diagram ... [EC-811](#), [EC-821](#), [EC-833](#)

O2S1B2 - Wiring diagram ... [EC-813](#), [EC-823](#), [EC-835](#)

O2S2B1 - Wiring diagram [EC-842](#), [EC-853](#), [EC-1042](#), [EC-1053](#)

O2S2B2 - Wiring diagram [EC-844](#), [EC-855](#), [EC-1044](#), [EC-1055](#)

Oil change (capacity)QR25DE [MA-13](#)

Oil change (capacity)VQ35DE [MA-13](#)

Oil filter [LU-19](#)

Oil pan (engine) [EM-26](#), [EM-130](#)

Oil pump (engine) [LU-9](#), [LU-20](#)

Oil seal replacement (engine) [EM-57](#), [EM-180](#)

On board diagnostic system [EC-53](#), [EC-649](#)

Operating cylinder (clutch)Operating cylinder (clutch) ..

ALPHABETICAL INDEX

CL-10

ORVR (On-board Refueling Vapor Recovery) [EC-599](#),
[EC-1238](#)
 Out side mirror [GW-57](#)
 Overdrive control switch [AT-248](#)
 Overheat [EC-391](#)
 Overrun clutch solenoid valve [AT-179](#)

P

Park/Neutral position switch [EC-491](#), [EC-1124](#)
 Park/neutral position switch (A/T) [AT-101](#)
 Park/neutral position switch (M/T)Park/neutral position
 switch (M/T) [MT-12](#)
 Parking brake controlParking brake control [PB-2](#)
 Parking drum brakeParking drum brake [PB-5](#)
 Parking lamp [LT-104](#)
 PCV (positive crankcase ventilation) [EC-605](#), [EC-1243](#)
 Periodic maintenance [MA-8](#)
 PGC/V - Wiring diagram [EC-277](#), [EC-460](#), [EC-935](#), [EC-1088](#)
 PHASE - Wiring diagram [EC-252](#)
 PHSB1 - Wiring diagram [EC-909](#)
 PHSB2 - Wiring diagram [EC-911](#)
 Piston ring inspection [EM-217](#)
 Piston to bore clearance [EM-96](#)
 PNP/SW - Wiring diagram [EC-493](#), [EC-1126](#)
 POS - Wiring diagram [EC-246](#), [EC-903](#)
 POWER - Wiring diagram [EC-1005](#), [PG-6](#)
 Power seat [SE-10](#)
 Power steering fluid level [MA-36](#)
 Power steering pressure (PSP) sensor ... [EC-335](#), [EC-992](#)
 Power supply routing [PG-4](#)
 Power window [GW-15](#)
 PRE/SE - Wiring diagram ... [EC-293](#), [EC-299](#), [EC-948](#),
[EC-954](#)
 Precations for Leak detection dye [MTC-5](#)
 Precautions (General) [GI-3](#)
 Precautions in repairing high strength steel [BL-154](#)
 Pressure test (A/T) [AT-67](#)
 PS/SEN - Wiring diagram [EC-336](#), [EC-993](#)

R

R134a - See HFC134a [MTC-4](#)
 Radiator [CO-32](#)
 Radio - See Audio [AV-4](#)
 Rear bumper [EI-15](#)
 Rear combination lamp removal and installation [LT-97](#)
 Rear disc brakeRear disc brake [BR-25](#)
 Rear door [BL-70](#), [GW-37](#)
 Rear seat [SE-18](#)
 Rear seat belt [SB-5](#)
 Rear suspensionRear suspension [RSU-5](#)
 Rear window [GW-13](#)
 Rear window defogger [GW-41](#)
 Refrigerant connection precaution [ATC-6](#), [MTC-6](#)
 Refrigerant discharging evacuating charging [ATC-118](#),

MTC-78

Refrigerant general precaution [ATC-5](#), [MTC-5](#)
 Refrigerant lines [ATC-118](#), [MTC-78](#)
 Refrigerant pressure sensor . [EC-572](#), [EC-1211](#), [ATC-125](#), [MTC-56](#), [MTC-87](#)
 Refrigeration cycle [MTC-17](#)
 Remote keyless entry system [BL-42](#)
 Reverse idler shaft (M/T) [MT-20](#)
 Reverse main gear (M/T) [MT-20](#)
 Revolution sensor (A/T) [AT-113](#)
 Road wheel size [GI-44](#)
 Rocker cover [EM-36](#), [EM-143](#)
 Room lamp [LT-117](#), [LT-123](#)
 Room lamp - See Interior lamp [LT-117](#)
 ROOM/L - Wiring diagram [LT-119](#)
 RP/SEN - Wiring diagram [EC-573](#), [EC-1212](#)

S

S/SIG - Wiring diagram [EC-1196](#)
 SAE J1930 terminology list [GI-48](#)
 SAE J1979 - Mode 1 - 7 [EC-53](#), [EC-649](#)
 SEAT - Wiring diagram [SE-10](#)
 Seat belt inspection [SB-6](#), [MA-38](#)
 Seat belt pre-tensioner disposal [SRS-54](#)
 Seat belt, front [SB-4](#)
 Seat belt, rear [SB-5](#)
 Seat, front [SE-14](#)
 Seat, rear [SE-18](#)
 SEN/PW - Wiring diagram [EC-406](#), [EC-1083](#)
 SHIFT - Wiring diagram [AT-255](#)
 Shift control components (M/T) [MT-22](#)
 Shift control components (M/T)Shift control components
 (M/T) [MT-13](#)
 Shift fork (M/T) [MT-22](#)
 Shift lock system [AT-254](#)
 Shift schedule [AT-374](#)
 Shift solenoid valve A (A/T) [AT-163](#)
 Shift solenoid valve B (A/T) [AT-168](#)
 Shock absorber (front) [FSU-9](#)
 Shock absorber (rear)Shock absorber (rear) ... [RSU-9](#)
 Side air bag (satellite) sensor [SRS-51](#)
 Side curtain air bag [SRS-48](#)
 Side trim [EI-29](#)
 Spare tire size [GI-44](#)
 Spark plug [EM-138](#)
 Spark plug replacementQR25DE [MA-20](#), [MA-28](#)
 Specification value [EC-126](#), [EC-729](#)
 Speedometer [DI-4](#)
 Spiral cable [SRS-41](#)
 Spot lamp [LT-123](#)
 SROOF - Wiring diagram [RF-11](#)
 SRS - See Supplemental Restraint System [SRS-5](#)
 SRS - Wiring diagram [SRS-12](#)
 SRS Trouble diagnoses [SRS-8](#)
 Stabilizer bar (front) [FSU-11](#)
 Stall test (A/T) [AT-64](#)
 Standardized relay [PG-70](#)
 START - Wiring diagram [SC-10](#)

IDX

ALPHABETICAL INDEX

Start signal	EC-1195
Starter	SC-16
Starting system	SC-9
Steering gear and linkage inspection	MA-36
Steering knuckle	FAX-6
STEP/L - Wiring diagram	LT-99
Stop lamp switch	EC-504 , EC-1139
STOP/L - Wiring diagram	LT-95
Strut (front)	FSU-9
Sun roof, electric	RF-10
Sunload sensor	ATC-104
Sunroof	RF-15
Supplemental Restraint System	SRS-5
Supplemental restraint system - Wiring diagram	SRS-12
Symbols and abbreviations	GI-8 , GI-9 , GI-20
Symptom matrix chart	EC-88 , EC-684
Synchronizer (M/T)	MT-20
System readiness test (SRT) code	EC-58 , EC-654

T

Tachometer	DI-4
Tail lamp	LT-104
TAIL/L - Wiring diagram	LT-107
TCM circuit diagram	AT-16
TCM inspection table	AT-95
TCS - Wiring diagram	BRC-55
TCS (traction control system)	BRC-47
TCS actuator	BRC-49 , BRC-91
TCS component parts and connector location	BRC-54
TCS control unit	BRC-49 , BRC-91
TCS self-diagnosis	BRC-65
TCS system components	BRC-48
TCS wheel sensors	BRC-54 , BRC-89
Thermo control amp	ATC-106
Thermostat	CO-19
Three way catalyst	EM-127
Three way catalyst function	EC-257
Three way catalyst function (Bank 1)	EC-916
Three way catalyst function (Bank 2)	EC-916
Three way catalyst precautions	GI-3 , GI-5
Throttle control motor relay	EC-364 , EC-1017
Throttle position sensor (TPS) ..	EC-176 , EC-227 , EC-401 , EC-403 , EC-524 , EC-795 , EC-886 , EC-1078 , EC-1080 , EC-1156
Throttle position switch	AT-248
Tightening torque of standard bolts	GI-42
Timing chain	EM-49 , EM-158
Tire rotation	MA-34
Tire size	GI-44
Torque converter installation	AT-271 , AT-367
Torque convertor clutch solenoid valve	AT-144
Tow truck towing	GI-41
Towing point	GI-41
TPS1 - Wiring diagram	EC-229 , EC-888
TPS2 - Wiring diagram	EC-178 , EC-797
TPS3 - Wiring diagram	EC-526 , EC-1158
Traction control system - See TCS	BRC-47

Traction control system - Wiring diagram	BRC-55
Transaxle serial number	GI-44
Transmission case (M/T)	MT-19
TRANSMT - Wiring diagram	BL-125
Tread-FR&RR (Dimensions)	GI-44
Trim	EI-29
Trouble diagnoses	GI-9
Trunk lid trim	EI-35
Trunk room lamp	LT-135
Trunk room trim	EI-35
TURN - Wiring diagram	LT-80
Turn signal lamp	LT-77
Two trip detection logic	EC-53 , EC-649
Two-pole lift	GI-38

V

Vacuum cut valve	EC-1234
Vacuum cut valve bypass valve	EC-1234
Vacuum hose (brake system)Vacuum hose (brake system)	BR-17
Vacuum hose drawing (Engine control)	EC-28 , EC-625
Valve clearance	EM-45 , EM-154
Valve guide	EM-68 , EM-199
Valve seat	EM-70 , EM-201
Valve spring	EM-71 , EM-202
Vanity mirror lamp	LT-133 , LT-135
Variable induction air control system (VIAS) ..	EC-499 , EC-550 , EC-1133 , EC-1181
Vehicle identification number	GI-44
Vehicle recovery (freeing a stuck vehicle)	GI-41
Vehicle speed sensor (VSS)	EC-329 , EC-986
VENT/V - Wiring diagram ..	EC-283 , EC-467 , EC-941 , EC-1096
VIAS - Wiring diagram	EC-552 , EC-1183
VIAS/V - Wiring diagram	EC-500 , EC-1135
Viscosity number (SAE)	MA-14

W

W/ANT - Wiring diagram	AV-27
WARN - Wiring diagram	DI-22
Warning chime	DI-34
Warning lamps	DI-18
Water pump	CO-38
Water temperature gauge	DI-4
Wheel alignment (rear)Wheel alignment (rear) ..	RSU-6
Wheel balance	MA-32
Wheel bearing (front axle)	FAX-5
Wheel bearing (rear)	RAX-5
Wheel hub (front)	FAX-5 , FAX-6
Wheel hub (rear)	RAX-5
Wheel sensors (ABS)	BRC-7 , BRC-42
Wheel sensors (TCS)	BRC-89
Wheel size	GI-44
Wheelarch heightWheelarch height	RSU-13
Wheelbase (Dimensions)	GI-44
Width (Dimensions)	GI-44
WINDOW - Wiring diagram	GW-18

ALPHABETICAL INDEX

Window antenna	AV-26
Window, door	GW-34 , GW-37
Window, rear	GW-13
Windshield	GW-11
WIPER - Wiring diagram	WW-11
Wiper and washer	WW-4
Wiring Diagram (Cell code) list	PG-59
Wiring diagrams	GI-8 , GI-12

A

B

C

D

E

F

G

H

I

J

K

L

IDX