

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

1ST - Wiring diagram	AT-133 , AT-504
2ND - Wiring diagram	AT-138 , AT-508
2nd brake	AT-662
2nd coast brake	AT-662
2nd coast brake hub	AT-668
3METER - Wiring diagram	DI-22
3RD - Wiring diagram	AT-143 , AT-514
4TH - Wiring diagram	AT-148 , AT-520
5TH - Wiring diagram	AT-525

A

A/C - Wiring diagram	ATC-34 , MTC-34
A/C compressor clutch removal and installation ..	ATC-107 , MTC-93
A/C compressor mounting .	ATC-106 , ATC-107 , MTC-92 , MTC-93
A/C compressor precaution	ATC-10 , MTC-10
A/C compressor special service tool .	ATC-13 , MTC-13
A/C diagnostic work flow (auto A/C)	ATC-29
A/C diagnostic work flow (manual A/C)	MTC-29
A/C evaporator	ATC-113 , MTC-99
A/C HFC134a (R134a) system identification	ATC-5 , MTC-5
A/C HFC134a (R134a) system precaution	ATC-4 , MTC-4
A/C HFC134a (R134a) system service procedure	ATC-102 , MTC-88
A/C HFC134a (R134a) system service tools ..	ATC-13 , MTC-13
A/C HFC134a system service equipment precaution ...	ATC-10 , MTC-10
A/C lubricant (R134a)	ATC-19 , MTC-19
A/C lubrication oil	ATC-19 , MTC-19
A/C operational check	ATC-40 , MTC-41
A/C performance chart	ATC-69 , MTC-66
A/C service data specification	ATC-119
A/C symptom chart (auto A/C)	ATC-29
A/C symptom chart (manual A/C)	MTC-29
A/C trouble diagnoses (auto A/C)	ATC-29
A/C trouble diagnoses (manual A/C)	MTC-29
A/C, A - Wiring diagram	ATC-34
A/C, M - Wiring diagram	MTC-34 , MTC-36
A/F - Wiring diagram ...	EC-224 , EC-230 , EC-236 , EC-243 , EC-553
A/FH - Wiring diagram	EC-165
A/T - Wiring diagram	AT-24
A/T fluid checking	AT-441
A/T fluid cooler cleaning	AT-19 , AT-399
A/T fluid temperature sensor	AT-116 , AT-483 , AT-488
A/T IND - Wiring diagram	DI-43
A/T indicator	DI-43
A/T self-diagnoses	AT-49 , AT-59 , AT-60 , AT-463 , AT-468
A/T shift lock system	AT-260 , AT-621
A/T shift lock system - Wiring diagram	AT-261 , AT-622
A/T trouble diagnoses	AT-431

ABS - Wiring diagram	BRC-13
ABS (anti-lock brake system)	BRC-5
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-521 , EC-528 , EC-543 , EC-1202 , EC-1209 , EC-1223
Accelerator pedal released position learning ..	EC-684
Active damper suspension system - Wiring diagram	FSU-4
AF1B1-Wiring diagram	EC-839 , EC-848 , EC-857 , EC-867 , EC-1233
AF1B2-Wiring diagram	EC-841 , EC-850 , EC-859 , EC-869 , EC-1235
AF1HB1-Wiring diagram	EC-772
AF1HB2-Wiring diagram	EC-774
Aiming adjustment	LT-27
Air bag	SRS-3
Air bag precautions	GI-3
Air bleeding (hydraulic clutch)Air bleeding (hydraulic clutch)	CL-7
Air bleeding for brake systemAir bleeding for brake system	BR-9
Air cleaner and air duct	EM-17 , EM-118
Air cleaner filter replacement	MA-18 , MA-26
Air conditioner - Wiring diagram	ATC-34 , MTC-34
Air conditioner cut control	EC-634
Air flow meter - See Mass air flow sensor	EC-180 , EC-189 , EC-796 , EC-805
Air fuel ratio sensor 1 ..	EC-221 , EC-228 , EC-234 , EC-240 , EC-551 , EC-836 , EC-846 , EC-855 , EC-864 , EC-1231
Air fuel ratio sensor 1 heater	EC-164 , EC-771
Ambient sensor	ATC-87
Angular tightening application	EM-6 , EM-108
Anti-lock brake system - See ABS	BRC-5
Anti-lock brake system - Wiring diagram	BRC-13
APPS1 - Wiring diagram	EC-523 , EC-1204
APPS2 - Wiring diagram	EC-530 , EC-1211
APPS3 - Wiring diagram	EC-545 , EC-1225
ASC/BS - Wiring diagram	EC-481 , EC-1162
ASC/SW - Wiring diagram	EC-474 , EC-1155
ASCSOF - Wiring diagram	EC-559 , EC-1243
ASCD	EC-34 , EC-635
ASCD (automatic speed control device)	ACS-2
ASCD brake switch ...	EC-479 , EC-558 , EC-1160 , EC-1242
ASCD clutch switch ...	EC-479 , EC-558 , EC-1160 , EC-1242
ASCD steering switch	EC-472 , EC-1153
ASCIND - Wiring diagram	EC-569 , EC-1253
Audio	AV-6
AUDIO - Wiring diagram	AV-7 , AV-13
Auto air conditioner - Wiring diagram	ATC-34
Auto anti-dazzling inside mirror	GW-40 , GW-41
Autolamp	LT-43
Automatic amplifier	ATC-38 , ATC-42 , MTC-39 , MTC-43
Automatic transaxle number	GI-46
Automatic transmission fluid replacement .	AT-18 , AT-398 , MA-34
AV and NAVI control unit	AV-73

ALPHABETICAL INDEX

AV communication line [AV-83](#)

B

B/COMP - Wiring diagram [DI-64](#)
 B5 brake [AT-670](#)
 BA/FTS - Wiring diagram [AT-196](#)
 Back door trim [EI-30](#)
 BACK/L - Wiring diagram [LT-97](#)
 Back-up lamp [LT-97](#)
 Back-up lamp switch (M/T)Back-up lamp switch ... [MT-13](#), [MT-76](#)
 Basic inspection [EC-75](#), [EC-677](#)
 Battery [SC-4](#)
 Battery/Starting/Charging System Tester [SC-6](#), [SC-11](#), [SC-20](#)
 Baulk ring (M/T) [MT-21](#), [MT-84](#)
 BCM (Body control module) [BCS-3](#)
 Block heater [EM-73](#), [EM-220](#)
 Blower motor [ATC-56](#), [ATC-92](#), [MTC-54](#), [MTC-78](#)
 Blower unit [ATC-91](#), [MTC-77](#)
 Board-on lift [GI-40](#)
 Body alignment [BL-141](#)
 Body component parts [BL-130](#)
 Body construction [BL-140](#)
 Body exterior paint color [BL-129](#)
 Body repair [BL-129](#)
 Body sealing [BL-137](#)
 Brake boosterBrake booster [BR-17](#)
 Brake control valve (Proportioning valve)Brake control valve (Proportioning valve) [BR-40](#)
 Brake fluid changeBrake fluid change [BR-9](#)
 Brake fluid level [MA-37](#)
 Brake fluid level and line checkBrake fluid level and line check [BR-9](#)
 Brake hydraulic lineBake hydraulic line [BR-10](#)
 Brake inspection [MA-38](#)
 Brake lines and cables inspection [MA-37](#)
 Brake master cylinderBrake master cylinder [BR-14](#)
 Brake pedalBrake pedal [BR-6](#)
 Brake switch [EC-497](#), [EC-1178](#)
 BRK/SW - Wiring diagram [EC-498](#), [EC-1179](#)
 Bulb specifications [LT-144](#)
 Bumper, front [EI-14](#)
 Bumper, rear [EI-16](#)

C

Cabin air filter [MA-31](#)
 Camshaft [EM-37](#), [EM-179](#)
 Camshaft inspection [EM-39](#), [EM-44](#), [EM-184](#)
 Camshaft position sensor (PHASE) .. [EC-328](#), [EC-979](#)
 CAN - Wiring diagram . [EC-156](#), [EC-763](#), [AT-192](#), [AT-472](#), [LAN-22](#), [LAN-38](#), [LAN-45](#), [LAN-55](#), [LAN-67](#), [LAN-76](#), [LAN-86](#), [LAN-96](#), [LAN-109](#), [LAN-122](#)
 CAN (Controller Area Network) [LAN-20](#)
 CAN communication ... [EC-155](#), [EC-158](#), [EC-762](#), [EC-765](#), [AT-190](#), [AT-471](#), [LAN-20](#)
 Canister-See EVAP canister [EC-40](#), [EC-641](#)

CHARGE - Wiring diagram [SC-19](#)
 Charging system [SC-18](#)
 Chassis and body maintenance [MA-31](#)
 Chassis and body maintenanceSchedule 1 [MA-9](#)
 Chassis and body maintenanceSchedule 2 [MA-11](#)
 CHIME - Wiring diagram [DI-48](#)
 CIGAR - Wiring diagram [WW-31](#)
 Cigarette lighter [WW-31](#)
 Circuit breaker [PG-15](#)
 Clearance lamp [LT-99](#)
 Closed loop control [EC-30](#), [EC-452](#), [EC-631](#)
 Clutch coverClutch cover [CL-18](#)
 Clutch discClutch disc [CL-18](#)
 Clutch fluid level [MA-31](#)
 Clutch master cylinderClutch master cylinder [CL-8](#)
 Clutch operating cylinderClutch operating cylinder [CL-11](#)
 Clutch pedalClutch pedal [CL-5](#)
 Clutch release mechanismClutch release mechanism . [CL-14](#)
 Coil spring (front) [FSU-9](#)
 Coil spring (rear)Coil spring [RSU-10](#)
 Collision diagnosis [SRS-56](#)
 Combination lamp, front, removal and installation .. [LT-29](#)
 Combination meter [DI-5](#), [DI-19](#)
 Combination meter removal and installation - See Instrument panel [DI-19](#)
 Combination switch [LT-88](#)
 COMBSW - Wiring diagram [LT-88](#)
 COMM - Wiring diagram [AV-83](#)
 Component Location (auto A/C) [ATC-30](#)
 Component Location (manual A/C) [MTC-30](#)
 Compressor clutch removal and installation . [ATC-107](#), [MTC-93](#)
 Compressor mounting .. [ATC-106](#), [ATC-107](#), [MTC-92](#), [MTC-93](#)
 Compressor precaution [ATC-10](#), [MTC-10](#)
 Compressor special service tool [ATC-13](#), [MTC-13](#)
 Condenser [ATC-112](#), [MTC-98](#)
 Connector inspection [GI-24](#)
 Console box - See Instrument panel [IP-10](#)
 CONSULT for ABS [BRC-16](#)
 CONSULT for TCS [BRC-62](#)
 CONSULT general information [GI-37](#)
 CONSULT-II for engine [EC-117](#), [EC-722](#)
 Control units (terminal arrangement) [PG-69](#)
 Controller Area Network (CAN) [LAN-20](#)
 Converter housing installation [AT-371](#)
 COOL/F - Wiring diagram [EC-457](#), [EC-1134](#)
 Coolant mixture ratio [MA-14](#)
 Coolant replacement [CO-10](#), [MA-15](#)
 Coolant replacementVQ35DE [CO-31](#), [MA-23](#)
 Cooling circuit (engine) [CO-28](#)
 Cooling fan [CO-41](#)
 Cooling fan motor [EC-464](#), [EC-1141](#)
 Cooling unit (A/C evaporator) [ATC-94](#), [ATC-113](#), [MTC-80](#), [MTC-99](#)
 Corrosion protection [BL-134](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Coupling sleeve (M/T) [MT-21](#), [MT-84](#)
 Crankcase ventilation system - See Positive crankcase ventilation [EC-50](#), [EC-650](#)
 Crankshaft [EM-74](#)
 Crankshaft position sensor (POS) [EC-321](#), [EC-972](#)
 Crash zone sensor [SRS-51](#)
 Cylinder block [EM-73](#), [EM-220](#)
 Cylinder block boring [EM-92](#)
 Cylinder head [EM-59](#), [EM-196](#)
 Cylinder head bolt tightening [EM-202](#)

D

D/LOCK - Wiring diagram [BL-20](#)
 Data link connector [EC-610](#)
 Daytime light system [LT-32](#)
 Daytime running light - See Daytime light system .. [LT-32](#)
 DEF - Wiring diagram [GW-44](#)
 Diagnosis sensor unit [SRS-54](#)
 Diagnostic trouble code (DTC) for OBD system [EC-15](#), [EC-56](#), [EC-614](#), [EC-654](#)
 Diagnostic trouble code (DTC) inspection priority chart [EC-94](#), [EC-695](#)
 Differential gear (FF A/T) [AT-675](#)
 Differential gear (FF M/T) [MT-24](#)
 Dimensions [GI-46](#)
 DLC - Wiring diagram [EC-610](#)
 Door glass [GW-34](#), [GW-37](#)
 Door glass Fitting Adjustment(Front) [GW-36](#)
 Door mirror [GW-56](#)
 Door trim [EI-30](#)
 Door, front [BL-73](#), [GW-34](#)
 Door, rear [BL-73](#), [GW-37](#)
 Drive belt [EM-15](#)
 Drive belt inspectionQR25DE [MA-15](#)
 Drive belt inspectionVQ35DE [MA-23](#)
 Drive shaft (front) [FAX-11](#)
 Driver air bag [SRS-42](#)
 Dropping resistor (A/T) [AT-166](#)
 DTC work support [EC-127](#), [EC-733](#)
 DTRL - Wiring diagram [LT-37](#)
 Duct and grilles [ATC-100](#), [MTC-86](#)

E

ECM input/output signal [EC-109](#), [EC-738](#)
 ECM power supply [EC-148](#), [EC-431](#), [EC-755](#), [EC-1107](#)
 ECM/PW - Wiring diagram [EC-432](#), [EC-1108](#)
 ECTS - Wiring diagram [EC-203](#), [EC-818](#)
 EGR function [EC-988](#), [EC-1146](#)
 EGR temperature sensor [EC-1003](#)
 EGR volume control valve [EC-996](#)
 EGR/TS - Wiring diagram [EC-1006](#)
 EGRC1 - Wiring diagram [EC-992](#), [EC-1150](#)
 EGVC/V - Wiring diagram [EC-998](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-508](#), [EC-514](#), [EC-519](#), [EC-1189](#), [EC-1200](#)

Electrical diagnoses [GI-24](#)
 Electrical load signal circuit [EC-571](#), [EC-1255](#)
 Electronic ignition (EI) system [EC-31](#), [EC-632](#)
 EMNT - Wiring diagram [EC-1258](#)
 ENG SS - Wiring diagram [AT-128](#)
 Engine control circuit diagram [EC-107](#), [EC-710](#)
 Engine control component parts location [EC-101](#)
 Engine control module (ECM) [EC-435](#), [EC-1111](#)
 Engine control system diagram and chart . [EC-28](#), [EC-629](#)
 Engine coolant [CO-30](#)
 Engine coolant temperature sensor (ECTS) .. [EC-201](#), [EC-213](#), [EC-816](#), [EC-828](#)
 Engine fail-safe system [EC-96](#), [EC-697](#)
 Engine mounting control (Front) [EC-1257](#)
 Engine oil [LU-20](#)
 Engine oil filter replacementQR25DE .. [MA-19](#), [MA-27](#)
 Engine oil precautions [GI-3](#), [GI-7](#)
 Engine oil replacementQR25DE [MA-18](#), [MA-26](#)
 Engine removal [EM-69](#), [EM-215](#)
 Engine serial number [GI-46](#)
 ETC1 - Wiring diagram [EC-509](#), [EC-1190](#)
 ETC2 - Wiring diagram [EC-504](#), [EC-1185](#)
 ETC3 - Wiring diagram [EC-515](#), [EC-1196](#)
 EVAP canister [EC-40](#), [EC-641](#)
 EVAP canister purge volume control solenoid valve [EC-354](#), [EC-361](#), [EC-1028](#), [EC-1036](#)
 EVAP canister vent control valve [EC-367](#), [EC-374](#), [EC-1043](#), [EC-1050](#)
 EVAP control system (small leak) diagnosis .. [EC-346](#), [EC-396](#), [EC-404](#), [EC-1020](#), [EC-1073](#)
 EVAP control system pressure sensor ... [EC-380](#), [EC-383](#), [EC-389](#), [EC-1056](#), [EC-1059](#), [EC-1065](#)
 EVAP control system purge flow monitoring diagnosis . [EC-340](#), [EC-1015](#)
 EVAP vapor lines inspection [MA-22](#), [MA-30](#)
 Evaporative emission (EVAP) system [EC-37](#), [EC-638](#)
 Evaporator [ATC-113](#), [MTC-99](#)
 Exhaust manifold [EM-132](#)
 Exhaust system [EX-3](#), [EX-6](#)
 Exhaust system inspection [EX-3](#), [EX-6](#), [MA-31](#)
 Expansion valve [ATC-114](#), [MTC-100](#)

F

F/FOG - Wiring diagram [LT-61](#)
 F/PUMP - Wiring diagram [EC-579](#), [EC-1271](#)
 Fan control amp. [ATC-99](#), [MTC-85](#)
 Final drive (FF M/T) [MT-24](#)
 Flow charts [GI-27](#)
 Fluid temperature sensor (A/T) .. [AT-116](#), [AT-483](#), [AT-488](#)
 Fluids [MA-12](#)
 Fluorescent leak detector [ATC-115](#), [MTC-101](#)
 Flywheel (clutch)Flywheel (clutch) [CL-18](#)
 Fog lamp, front [LT-59](#)
 Fork rod (M/T) [MT-23](#), [MT-86](#)
 Freeze frame data [EC-57](#), [EC-659](#)
 Front bumper [EI-14](#)

ALPHABETICAL INDEX

Front combination lamp removal and installation [LT-29](#)
 Front disc brakeFront disc brake [BR-21](#), [BR-27](#)
 Front door [BL-73](#), [GW-34](#)
 Front Door Trim [EI-30](#)
 Front fog lamp [LT-59](#)
 Front passenger air bag [SRS-46](#)
 Front seat [SE-15](#)
 Front seat belt [SB-4](#)
 Front seat belt pre-tensioner [SB-2](#), [SRS-3](#), [SRS-53](#)
 FTS - Wiring diagram [AT-118](#), [AT-484](#)
 FTSP - Wiring diagram [AT-489](#)
 FTTS - Wiring diagram [EC-295](#), [EC-299](#), [EC-943](#), [EC-947](#)
 FUEL - Wiring diagram [EC-280](#), [EC-288](#)
 Fuel cut control (at no load high engine speed) [EC-32](#), [EC-633](#)
 Fuel gauge [DI-5](#)
 Fuel injection system [EC-278](#), [EC-286](#)
 Fuel injection system (Bank 1) [EC-915](#), [EC-928](#)
 Fuel injection system (Bank 2) [EC-915](#), [EC-928](#)
 Fuel injector [EC-572](#), [EC-1262](#)
 Fuel injector and fuel tube [EM-32](#), [EM-145](#)
 Fuel level sensor [EC-414](#), [EC-416](#), [EC-418](#), [EC-1090](#), [EC-1092](#), [EC-1094](#)
 Fuel line inspection [FL-4](#), [MA-17](#), [MA-25](#)
 Fuel precautions [GI-3](#), [GI-5](#)
 Fuel pressure check [EC-84](#), [EC-686](#)
 Fuel pressure release [EC-84](#), [EC-686](#)
 Fuel pump [EC-578](#), [EC-1270](#)
 Fuel system [FL-4](#)
 Fuel systemCommercial Service Tools [FL-3](#)
 Fuel systemPREPARATION [FL-3](#)
 Fuel systemSpecial Service Tools [FL-3](#)
 Fuel tank temperature sensor ... [EC-293](#), [EC-298](#), [EC-941](#), [EC-946](#)
 Fuel tank vacuum relief valve [EC-40](#), [EC-641](#)
 FUEL B1 - Wiring diagram [EC-917](#), [EC-930](#)
 FUEL B2 - Wiring diagram [EC-919](#), [EC-932](#)
 Fuse [PG-15](#), [PG-73](#)
 Fuse block [PG-72](#)
 Fusible link [PG-15](#), [PG-73](#)

G

Garage jack and safety stand [GI-40](#)
 Gear components (M/T) [MT-21](#), [MT-84](#)
 Generic scan tool (GST) [EC-129](#), [EC-735](#)
 Glass [GW-11](#), [GW-13](#), [GW-34](#), [GW-37](#)
 Glove box lamp [LT-143](#)
 GPS antenna [AV-72](#)
 Grease [MA-12](#)
 Ground distribution [PG-29](#)

H

H/LAMP - Wiring diagram [LT-8](#)
 H/MIRROR - Wiring diagram [GW-54](#)
 Handling precautions for plastics [BL-152](#)
 Harness connector [PG-66](#)

Harness connector inspection [GI-24](#)
 Harness layout [PG-40](#)
 Hazard warning lamp [LT-71](#)
 Headlamp [LT-5](#)
 Headlamp removal and installation [LT-29](#)
 Heated oxygen sensor 2 [EC-250](#), [EC-259](#), [EC-269](#)
 Heated oxygen sensor 2 (bank 1) ... [EC-876](#), [EC-888](#), [EC-903](#)
 Heated oxygen sensor 2 (bank 2) ... [EC-876](#), [EC-888](#), [EC-903](#)
 Heated oxygen sensor 2 heater [EC-169](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-778](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-778](#)
 Heated seat [SE-12](#)
 Heater and cooling unit (Heater core) [ATC-94](#), [ATC-95](#), [MTC-80](#), [MTC-81](#)
 Heater unit (heater core) .. [ATC-94](#), [ATC-95](#), [MTC-80](#), [MTC-81](#)
 Height (Dimensions) [GI-46](#)
 HFC134a (R134a) system identification [ATC-5](#), [MTC-5](#)
 HFC134a (R134a) system precaution .. [ATC-4](#), [MTC-4](#)
 HFC134a (R134a) system service procedure [ATC-102](#), [MTC-88](#)
 HFC134a (R134a) system service tools [ATC-13](#), [MTC-13](#)
 HFC134a system service equipment precaution . [ATC-10](#), [MTC-10](#)
 HO2S2 - Wiring diagram [EC-253](#), [EC-262](#), [EC-272](#)
 HO2S2H - Wiring diagram [EC-171](#)
 Homelink universal transceiver [BL-127](#)
 Horn [WW-35](#)
 HORN - Wiring diagram [WW-35](#)
 How to erase DTC for OBD system [EC-64](#), [EC-666](#)
 HSEAT - Wiring diagram [SE-13](#)

I

IATS - Wiring diagram [EC-198](#), [EC-813](#)
 Identification plate [GI-46](#)
 Idle air volume learning [EC-82](#), [EC-684](#)
 Idle speed [EC-75](#), [EC-677](#)
 Idle speed control (ISC) [EC-422](#), [EC-424](#), [EC-1098](#), [EC-1100](#)
 Ignition coil [EM-29](#), [EM-142](#), [EC-585](#), [EC-1276](#)
 Ignition control system [EC-585](#), [EC-1276](#)
 Ignition key hole illumination [LT-114](#), [LT-133](#)
 Ignition timing [EC-75](#), [EC-677](#)
 IGNSYS - Wiring diagram [EC-586](#), [EC-1277](#)
 ILL - Wiring diagram [LT-139](#)
 Illumination [LT-135](#)
 Illumination control [LT-135](#), [LT-143](#)
 In vehicle sensor [ATC-88](#)
 In-cabin Microfilter [MA-31](#)
 INJECT - Wiring diagram [EC-573](#), [EC-1263](#)
 Input shaft (FF M/T) [MT-21](#), [MT-84](#)
 Instrument panel [IP-10](#)
 INT/L - Wiring diagram [LT-119](#)
 Intake air temperature sensor [EC-196](#), [EC-216](#), [EC-812](#), [EC-831](#)

ALPHABETICAL INDEX

Intake door motor [ATC-55](#), [ATC-96](#), [MTC-53](#), [MTC-82](#)
 Intake manifold [EM-19](#), [EM-127](#)
 Intake sensor [ATC-83](#), [ATC-90](#), [MTC-72](#), [MTC-76](#)
 Intake valve timing control [EC-160](#)
 Intake valve timing control (Bank 1) [EC-767](#)
 Intake valve timing control (Bank 2) [EC-767](#)
 Intake valve timing control solenoid valve [EC-175](#)
 Intake valve timing control solenoid valve (Bank 1) [EC-787](#)
 Intake valve timing control solenoid valve (Bank 2) [EC-787](#)
 Integrated homelink transmitter [BL-127](#)
 Integrated homelink transmitter - See Homelink universal transceiver [BL-127](#)
 Interior [EI-32](#)
 Interior lamp [LT-114](#)
 Interior lamp on-off control [LT-114](#)
 IPDM (Intelligent power distribution module engine room) [PG-16](#)
 IVC - Wiring diagram [EC-176](#)
 IVCB1 - Wiring diagram [EC-788](#)
 IVCB2 - Wiring diagram [EC-790](#)
 IVIS (Infiniti vehicle immobilizer system) precautions ... [GI-3](#)

J

Jacking points [GI-40](#)
 Junction box (J/B) [PG-72](#)

K

Key illumination [LT-114](#)
 KEYLES - Wiring diagram [BL-50](#)
 Knock sensor (KS) [EC-316](#), [EC-967](#)
 KS - Wiring diagram [EC-317](#), [EC-968](#)

L

LAN system circuit [ATC-43](#), [MTC-45](#)
 Length (Dimensions) [GI-46](#)
 License lamp [LT-99](#)
 Lifting points [GI-40](#)
 Line pressure solenoid valve [AT-166](#)
 Line pressure test (A/T) [AT-77](#), [AT-443](#)
 Liquid gasket application [EM-6](#), [EM-108](#), [LU-2](#), [LU-15](#), [CO-3](#), [CO-23](#)
 Location of electrical units [PG-63](#)
 LPSV - Wiring diagram [AT-168](#)
 Lubricant (R134a) A/C [ATC-19](#), [MTC-19](#)
 Lubricants [MA-12](#)
 Lubrication circuit (engine) [LU-18](#)
 Lubrication oil A/C [ATC-19](#), [MTC-19](#)
 Lubrication-locks, hinges and hood latches [MA-40](#)
 Luggage compartment trim [EI-38](#)
 Luggage room lamp [LT-114](#)

M

M/T major overhaul [MT-24](#), [MT-87](#)
 M/T oil replacementM/T oil replacement [MT-11](#), [MT-74](#)
 M/T removal and installationM/T removal and installation [MT-17](#)
 MAFS - Wiring diagram [EC-183](#), [EC-191](#), [EC-799](#), [EC-807](#)
 Magnet clutch [ATC-107](#), [MTC-93](#)
 MAIN - Wiring diagram [EC-148](#), [EC-755](#), [AT-107](#)
 Mainshaft (M/T) [MT-21](#), [MT-84](#)
 Maintenance [MA-5](#)
 Maintenance (engine)QR25DE [MA-15](#)
 Maintenance (engine)VQ35DE [MA-23](#)
 Malfunction indicator lamp (MIL) [EC-66](#), [EC-669](#)
 Manual air conditioner - Wiring diagram [MTC-34](#)
 Manual transaxle number [GI-46](#)
 Manual transmission oil replacement [MA-32](#)
 Mass air flow sensor (MAFS) [EC-180](#), [EC-189](#), [EC-796](#), [EC-805](#)
 Master cylinder (brake)Master cylinder (brake) [BR-14](#)
 Master cylinder (clutch)Master cylinder (clutch) ... [CL-8](#)
 METER - Wiring diagram [DI-10](#)
 MIL data link connectors circuit [EC-1302](#)
 MIL/DL - Wiring diagram [EC-1302](#)
 MIRROR - Wiring diagram [GW-53](#)
 Mirror, door [GW-56](#)
 Mirror, out side [GW-56](#)
 Misfire [EC-309](#), [EC-957](#)
 MMSW - Wiring diagram [AT-587](#)
 Mode door motor [ATC-97](#), [MTC-83](#)
 Model variation [GI-46](#)
 Multiport fuel injection (MFI) system ... [EC-29](#), [EC-630](#)
 Multiport fuel injection precautions [GI-3](#), [GI-6](#)
 Multi-remote control system - See Remote keyless entry system [BL-47](#)

N

NATS - Wiring diagram [BL-111](#)
 NAVI - Wiring diagram [AV-76](#)
 NAVI Control Unit [AV-151](#)
 NONDTC - Wiring diagram [AT-213](#)
 NVH troubleshooting (BR)NVH troubleshooting (BR) ... [BR-5](#)
 NVH troubleshooting (CL)NVH troubleshooting (CL) [CL-4](#)
 NVH troubleshooting (EM) [EM-13](#), [EM-115](#)
 NVH troubleshooting (FA) [FAX-4](#)
 NVH troubleshooting (RA) [RAX-4](#)
 NVH troubleshooting (RSU)NVH Troubleshooting (RSU) [RSU-4](#)
 NVH troubleshooting (ST) [PS-5](#)
 NVH troubleshooting (WT)NVH troubleshooting (WT) .. [WT-3](#)
 NVIS (Nissan vehicle immobilizer system) [BL-108](#)
 NVIS (Nissan vehicle immobilizer system) precautions [GI-3](#)

ALPHABETICAL INDEX

O

O2H2B1 - Wiring diagram [EC-780](#)
O2H2B2 - Wiring diagram [EC-782](#)
O2S2B1 - Wiring diagram ... [EC-879](#), [EC-892](#), [EC-906](#)
O2S2B2 - Wiring diagram ... [EC-881](#), [EC-894](#), [EC-908](#)
Oil change (capacity)QR25DE [MA-12](#)
Oil change (capacity)VQ35DE [MA-13](#)
Oil filter [LU-23](#)
Oil pan (engine) [EM-26](#)
Oil pressure (engine) [LU-8](#)
Oil pump (A/T) [AT-662](#)
Oil pump (engine) [LU-11](#), [LU-24](#)
Oil seal replacement (engine) [EM-56](#), [EM-192](#)
On board diagnostic system [EC-653](#)
One-way clutch No.1 [AT-668](#)
One-way clutch outer race sub assembly [AT-668](#)
Operating cylinder (clutch)Operating cylinder (clutch) .
[CL-11](#)
ORVR (On-board Refueling Vapor Recovery) . [EC-44](#),
[EC-645](#)
Out side mirror [GW-56](#)
Overdrive control switch [AT-254](#)
Overheat [EC-453](#), [EC-1130](#)
Overrun clutch solenoid valve [AT-185](#)
OVRCSV - Wiring diagram [AT-187](#)

P

Park/Neutral position switch [EC-443](#), [EC-1119](#)
Park/neutral position switch (A/T) [AT-110](#), [AT-478](#)
Park/neutral position switch (M/T)Park/neutral position
switch (M/T) [MT-13](#), [MT-76](#)
Parking brake controlParking brake control [PB-4](#)
Parking drum brakeParking drum brake [PB-7](#)
Parking lamp [LT-99](#)
PC/A - Wiring diagram [AT-533](#)
PC/B - Wiring diagram [AT-568](#)
PC/C - Wiring diagram [AT-577](#)
PC/CS - Wiring diagram [AT-582](#)
PCV (positive crankcase ventilation) ... [EC-50](#), [EC-650](#)
Periodic maintenance [MA-7](#)
PGC/V - Wiring diagram ... [EC-356](#), [EC-363](#), [EC-1030](#),
[EC-1038](#)
PHASE - Wiring diagram [EC-330](#)
PHSB1 - Wiring diagram [EC-981](#)
PHSB2 - Wiring diagram [EC-983](#)
Piston ring inspection [EM-231](#)
Piston to bore clearance [EM-92](#)
PNP/SW - Wiring diagram [EC-445](#), [EC-1121](#), [AT-112](#),
[AT-479](#)
POS - Wiring diagram [EC-323](#), [EC-974](#)
POWER - Wiring diagram [PG-6](#)
Power door lock [BL-17](#)
Power seat [SE-10](#)
Power steering fluid level [MA-39](#)
Power steering pressure (PSP) sensor ... [EC-426](#), [EC-1102](#)
Power supply routing [PG-4](#)

Power window [GW-15](#)
PRE/SE - Wiring diagram . [EC-385](#), [EC-391](#), [EC-1061](#),
[EC-1067](#)
Precautions (General) [GI-3](#), [GI-4](#)
Precautions in repairing high strength steel [BL-155](#)
Pressure control solenoid valve A [AT-532](#)
Pressure control solenoid valve B [AT-567](#)
Pressure control solenoid valve C [AT-576](#)
Pressure test (A/T) [AT-77](#), [AT-443](#)
PS/SEN - Wiring diagram [EC-427](#), [EC-1103](#)
PWR/IN - Wiring diagram [AT-593](#)

R

Radiator fan - See Cooling fan [CO-41](#)
Radio - See Audio [AV-6](#)
Rear bumper [EI-16](#)
Rear disc brakeRear disc brake [BR-33](#)
Rear door [BL-73](#), [GW-37](#)
Rear seat [SE-22](#)
Rear seat belt [SB-5](#)
Rear suspensionRear suspension [RSU-5](#)
Rear window [GW-13](#)
Rear window defogger [GW-42](#)
Refrigerant connection precaution [ATC-5](#), [MTC-5](#)
Refrigerant discharging evacuating charging [ATC-102](#),
[MTC-88](#)
Refrigerant general precaution [ATC-5](#), [MTC-5](#)
Refrigerant lines [ATC-102](#), [MTC-88](#)
Refrigerant pressure sensor . [EC-596](#), [EC-1289](#), [ATC-112](#), [MTC-98](#)
REMOTE - Wiring diagram [BL-50](#)
Remote keyless entry system [BL-47](#)
Removal and installation (A/T) [AT-631](#)
Reverse idler shaft (M/T) [MT-21](#), [MT-84](#)
Reverse main gear (M/T) [MT-21](#), [MT-84](#)
Revolution sensor (A/T) [AT-122](#), [AT-497](#)
Road wheel size [GI-46](#)
Rocker cover [EM-35](#), [EM-148](#)
Room lamp [LT-114](#), [LT-132](#)
Room lamp - See Interior lamp [LT-114](#)
ROOM/L - Wiring diagram [LT-119](#), [LT-122](#)
RP/SEN - Wiring diagram [EC-597](#), [EC-1290](#)

S

SAE J1930 terminology list [GI-50](#)
SAE J1979 - Service \$01 - 09 [EC-53](#), [EC-653](#)
SEAT - Wiring diagram [SE-10](#)
Seat belt inspection [SB-6](#), [MA-41](#)
Seat belt, front [SB-4](#)
Seat belt, rear [SB-5](#)
Seat, front [SE-15](#)
Seat, rear [SE-22](#)
SEN/PW - Wiring diagram [EC-439](#), [EC-1115](#)
SFTFNC - Wiring diagram [AT-573](#)
SHIFT - Wiring diagram [AT-261](#), [AT-622](#)
Shift control components (M/T) [MT-23](#), [MT-86](#)
Shift control components (M/T)Shift control components

ALPHABETICAL INDEX

(M/T)	MT-14 , MT-77	TCM inspection table	AT-104 , AT-460
Shift fork (M/T)	MT-23 , MT-86	TCS - Wiring diagram	BRC-59
Shift lock system	AT-260 , AT-621	TCS (traction control system)	BRC-49
Shift schedule	AT-378 , AT-450	TCS actuator	BRC-52 , BRC-93
Shift solenoid valve A (A/T)	AT-172 , AT-537	TCS component parts and connector location	BRC-56
Shift solenoid valve B (A/T)	AT-177 , AT-542	TCS control unit	BRC-51 , BRC-52 , BRC-93
Shift solenoid valve C (A/T)	AT-547	TCS self-diagnosis	BRC-62 , BRC-69
Shift solenoid valve D (A/T)	AT-557	TCS system components	BRC-51
Shift solenoid valve E (A/T)	AT-562	TCS wheel sensors	BRC-56 , BRC-91
Shock absorber (front)	FSU-10	TCV - Wiring diagram	AT-155
Shock absorber (rear)Shock absorber (rear)	RSU-9	Theft warning system - See Vehicle security (Theft warn- ing) system	BL-85
Side air bag (satellite) sensor	SRS-52	Thermostat	CO-18
Side curtain air bag	SRS-49	Three way catalyst	EM-132
Side trim	EI-32	Three way catalyst function	EC-335
Spare tire size	GI-46	Three way catalyst function (Bank 1)	EC-1010
Spark plug	EM-143	Three way catalyst function (Bank 2)	EC-1010
Spark plug replacementQR25DE	MA-20 , MA-28	Three way catalyst precautions	GI-3 , GI-5
Specification value	EC-137 , EC-744	Throttle control motor	EC-1195
Speedometer	DI-5	Throttle control motor relay	EC-502 , EC-1183
Spiral cable	SRS-44	Throttle position sensor (TPS) ..	EC-206 , EC-302 , EC-466 , EC-468 , EC-536 , EC-821 , EC-950 , EC-1142 , EC-1144 , EC-1216
Spot lamp	LT-114 , LT-132	Throttle position switch	AT-254
SROOF - Wiring diagram	RF-12	Tightening torque of standard bolts	GI-44
SRS - See Supplemental Restraint System	SRS-5	Time lag test	AT-442
SRS - Wiring diagram	SRS-12	Timing chain	EM-48 , EM-159
SRS Trouble diagnoses	SRS-8	Tire rotation	MA-37
SSV/A - Wiring diagram	AT-174 , AT-538	Tire size	GI-46
SSV/B - Wiring diagram	AT-179 , AT-543	Torque converter installation ..	AT-277 , AT-371 , AT-632
SSV/C - Wiring diagram	AT-548	Torque convertor clutch solenoid valve ...	AT-153 , AT-529
SSV/CS - Wiring diagram	AT-553	Tow truck towing	GI-43
SSV/D - Wiring diagram	AT-558	Towing point	GI-43
SSV/E - Wiring diagram	AT-563	TPS1 - Wiring diagram	EC-304 , EC-952
Stabilizer bar (front)	FSU-11	TPS2 - Wiring diagram	EC-208 , EC-823
Stall test (A/T)	AT-74 , AT-441	TPS3 - Wiring diagram	EC-538 , EC-1218
Standardized relay	PG-70	Traction control system - See TCS	BRC-49
START - Wiring diagram	SC-8	Traction control system - Wiring diagram	BRC-59
Starting system	SC-7	Transaxle case cover	AT-670
Steering gear and linkage inspection	MA-38	Transaxle serial number	GI-46
Steering knuckle	FAX-6	Transmission case (M/T)	MT-20 , MT-83
Step lamp	LT-114	Tread-FR&RR (Dimensions)	GI-46
Stop lamp	LT-94	Trim	EI-32
Stop lamp switch	EC-497 , EC-1178	Triple meter	DI-20
STOP/L - Wiring diagram	LT-94	TRNSCV - Wiring diagram	BL-127
Strut (front)	FSU-9	Trouble diagnoses	GI-10
Sun roof, electric	RF-10	TRSC - Wiring diagram	AT-494
Sunload sensor	ATC-89	Trunk lid trim	EI-38
Sunroof	RF-26	Trunk room lamp	LT-114
Supplemental Restraint System	SRS-5	Trunk room trim	EI-38
Symbols and abbreviations	GI-8 , GI-10 , GI-22	Turbine revolution sensor	AT-493
Symptom matrix chart	EC-97 , EC-698	TURN - Wiring diagram	LT-75
Synchronizer (M/T)	MT-21 , MT-84	Turn signal lamp	LT-71
System readiness test (SRT) code	EC-58 , EC-659	Two trip detection logic	EC-53 , EC-653
T		Two-pole lift	GI-40
Tachometer	DI-5		
Tail lamp	LT-99		
TAIL/L - Wiring diagram	LT-102		
TCCSIG - Wiring diagram	AT-160 , AT-530		
TCM circuit diagram	AT-24 , AT-440		

ALPHABETICAL INDEX

V

Vacuum hose (brake system)Vacuum hose (brake system) [BR-19](#)
 Vacuum hose drawing (Engine control) .. [EC-106](#), [EC-709](#)
 Valve clearance [EM-45](#), [EM-188](#)
 Valve guide [EM-64](#), [EM-65](#), [EM-211](#)
 Valve seat [EM-66](#), [EM-213](#)
 Valve spring [EM-67](#), [EM-214](#)
 Vanity mirror lamp [LT-114](#)
 Variable induction air control system (VIAS) .. [EC-492](#), [EC-601](#), [EC-1173](#), [EC-1294](#)
 Vehicle identification number [GI-46](#)
 Vehicle recovery (freeing a stuck vehicle) [GI-43](#)
 Vehicle security (theft warning) system [BL-85](#)
 Vehicle speed sensor (VSS) [EC-420](#), [EC-1096](#)
 VEHSEC - Wiring diagram [BL-89](#)
 VENT/V - Wiring diagram . [EC-369](#), [EC-376](#), [EC-1045](#), [EC-1052](#)
 VIAS - Wiring diagram [EC-603](#), [EC-1296](#)
 VIAS/V - Wiring diagram [EC-493](#), [EC-1174](#)
 VIN registration [EC-81](#), [EC-683](#)
 Viscosity number (SAE) [MA-14](#)
 VSS A/T - Wiring diagram [AT-124](#)
 VSSATC - Wiring diagram [AT-498](#)
 VSSMTR - Wiring diagram [AT-203](#), [AT-206](#)

W

W/ANT - Wiring diagram [AV-68](#)
 WARN - Wiring diagram [DI-35](#)
 Warning chime [DI-46](#)
 Warning lamps [DI-31](#)
 Water pump [CO-42](#)
 Water temperature gauge [DI-5](#)
 Wheel alignment (rear)Wheel alignment (rear) . [RSU-6](#)
 Wheel balance [MA-35](#)
 Wheel bearing (front axle) [FAX-5](#)
 Wheel bearing (rear) [RAX-5](#)
 Wheel hub (front) [FAX-5](#), [FAX-6](#)
 Wheel hub (rear) [RAX-5](#)
 Wheel sensors (ABS) [BRC-7](#), [BRC-43](#)
 Wheel sensors (TCS) [BRC-52](#), [BRC-91](#)
 Wheel size [GI-46](#)
 Wheelarch heightWheelarch height . [FSU-19](#), [RSU-14](#)
 Wheelbase (Dimensions) [GI-46](#)
 Width (Dimensions) [GI-46](#)
 WINDOW - Wiring diagram [GW-18](#)
 Window antenna [AV-67](#)
 Window, door [GW-34](#), [GW-37](#)
 Window, rear [GW-13](#)
 Windshield [GW-11](#)
 WIPER - Wiring diagram [WW-8](#)
 Wiper and washer [WW-4](#)
 Wiring Diagram (Cell code) list [PG-60](#)
 Wiring diagrams [GI-8](#), [GI-15](#)

A

B

C

D

E

F

G

H

I

J

K

L

IDX