

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

2

2-pole Lift..... GI-38

A

ABS actuator BR-38
ABS (anti-lock brake system)..... BR-35
ABS circuit diagram..... BR-51
ABS component parts and connector
 locations BR-48
ABS control unit BR-36
ABS self-diagnosis BR-45
ABS symptom chart BR-47
ABS trouble diagnoses..... BR-44
ABS wheel sensors BR-37
ABS wiring diagram..... BR-40
A/C air flow HA-13
A/C circuit diagram (auto A/C) HA-95
A/C circuit diagram (manual A/C) HA-35
A/C component layout..... HA-12
A/C compressor clutch removal and
 installation HA-140
A/C compressor mounting..... HA-139
A/C compressor precaution..... HA-5
A/C control linkage adjustment (auto A/C)..... HA-120
A/C control linkage adjustment (manual A/C)..... HA-57
A/C control operation (auto A/C)..... HA-60
A/C control operation (manual A/C) HA-14
A/C harness layout (auto A/C) HA-93
A/C harness layout (manual A/C) HA-33
A/C R134a system precaution HA-2
A/C R134a system service tools..... HA-6
A/C lubricant..... HA-136
A/C operational check HA-16
A/C performance chart..... HA-28
A/C performance test diagnoses..... HA-26
A/C push control..... HA-42
A/C relay..... HA-56
A/C switch HA-14
A/C symptom chart (auto A/C) HA-66
A/C symptom chart (manual A/C) HA-18
A/C trouble diagnoses (auto A/C) HA-62
A/C trouble diagnoses (manual A/C) HA-15
A/C wiring diagram (auto A/C) HA-96
A/C wiring diagram (manual A/C) HA-36
Accel drum unit EM-26
Accelerator control system..... FE-3
Accelerator wire adjustment..... FE-3
Activated carbon canister..... EC-17
Activated carbon canister inspection EC-17
Active suspension fluid..... MA-8
Air bag..... RS-9

Air bag disposal..... RS-12
Air bag module..... RS-9
Air bag precautions GI-2
Air bag removal and installation..... RS-9
Air bleeding for brake system BR-5
Air cleaner filter replacement MA-12
Air conditioner cut control EC-15
Air flow meter - See Mass air flow sensor..... EC-95
Air mix. door motor..... HA-127
Alternator..... EL-29
Ambient sensor HA-124
Angular tightening application EM-2
Anti-freeze coolant MA-8
ASCD (Automatic Speed Control Device) EL-140
A/T control DTC:P0600 EC-209
AT control unit AT-101
A/T diagnosis communication line EC-186
AT fluid temperature sensor..... AT-105
AT removal and installation AT-128
AT self-diagnoses AT-44
AT shift lock system AT-116
AT trouble diagnoses AT-14
Audio EL-127
Automatic amplifier..... HA-125
Automatic transaxle number GI-34
Automatic transmission fluid MA-8
Automatic transmission fluid replacement MA-15
Auxiliary air control (AAC)..... EC-114

B

Back-up lamp EL-49
Ball joint front axle..... FA-25
Battery EL-14
Baulk ring (MT)..... MT-12
Belt inspection (drive belt)..... MA-9
Blower motor HA-119
Blower relay..... HA-119
Board-on Lift..... GI-37
Body alignment..... BT-36
Boring/horning cylinder block..... EM-44
Brake booster..... BR-14
Brake control valve (Proportioning Valve)..... BR-7
Brake fluid MA-8
Brake fluid change BR-4
Brake fluid level..... MA-16
Brake fluid level and line check BR-4
Brake hydraulic line..... BR-6
Brake lining temporary checking..... MA-18
Brake master cylinder BR-11
Brake pedal BR-9
Bumper, front - See Front bumper..... BT-6

ALPHABETICAL INDEX

C

Camshaft inspection..... EM-30
 Camshaft position sensor (CMPS)..... EC-90
 Camshaft position sensor inspection EC-93
 Canister control EC-17
 Canister control solenoid valve EC-205
 Charging system EL-26
 Chassis and body maintenance..... MA-15
 Cigarette lighter EL-122
 Circuit breaker EL-13
 Clearance lamp EL-50
 Clock..... EL-122
 Closed loop control EC-154
 Clutch cover CL-3
 Clutch disc..... CL-3
 Clutch fluid..... MA-8
 Clutch fluid level MA-15
 Clutch master cylinder..... CL-6
 Clutch operating cylinder..... CL-7
 Clutch pedal CL-3
 Clutch pedal free play CL-4
 Clutch pedal height CL-4
 Clutch release bearing CL-3
 Clutch withdrawal lever CL-3
 Coil spring (front)..... FA-22
 Combination lamp, rear, removal and
 installation BT-24
 Combination meter EL-69
 Combination meter (needle type)..... EL-69
 Combination meter removal and installation -
 See Instrument panel..... BT-12
 Combination switch EL-33
 Compression pressure EM-9
 Compressor clutch removal and installation..... HA-140
 Compressor mounting HA-139
 Compressor precaution HA-5
 Connecting rod EM-44
 Connecting rod bearing clearance EM-47
 Connecting rod bushing clearance EM-48
 Console box - See Instrument panel BT-12
 Consult for ECCS..... EC-38
 CONSULT general information GI-31
 Control lever (MT) MT-10
 Control valve (AT) AT-155
 Converter housing installation..... AT-129
 Coolant..... MA-8
 Coolant replacement MA-10
 Cooling circuit (engine) LC-8
 Cooling fan control EC-118
 Cooling fan motor inspection EC-129
 Cooling fan relay inspection..... EC-129
 Cornering lamp..... EL-59
 Coupling sleeve (MT)..... MT-12

Crank angle sensor built into distributor - See
 Camshaft position sensor EC-90
 Crankshaft assembly..... EM-50
 Crankshaft bearing clearance EM-46
 Crankshaft inspection..... EM-45
 Crankshaft position sensor (OBD) EC-182
 Crankshaft position sensor (OBD) inspection... EC-185
 Cylinder block..... EM-41
 Cylinder block boring..... EM-44
 Cylinder head EM-28
 Cylinder head bolt tightening EM-28

D

Daytime light system EL-40
 Detonation sensor - See Knock sensor..... EC-145
 Device (FICD) solenoid valve EC-226
 Diagnostic trouble code (DTC) for ECCS
 OBD system..... EC-28
 Differential gear (FF AT)..... AT-199, AT-203
 Dimensions..... GI-35
 Distributor ignition (DI) system..... EC-14
 Door mirror BT-33
 Door trim..... BT-16
 Drive plate runout..... EM-49
 Drive shaft (front) FA-13
 Dropping resistor (AT)..... AT-107

E

ECCS basic inspection..... EC-70
 ECCS component parts location..... EC-8
 ECCS on-board diagnostic system EC-28
 ECCS symptom matrix chart..... EC-73
 ECCS system diagram and chart EC-7
 ECCS trouble diagnoses..... EC-53
 ECM input/output signal inspection..... EC-81
 EGR canister control solenoid valve
 inspection EC-208
 EGR control (EGRC) - BPT valve..... EC-152
 EGR control (EGRC) - solenoid valve EC-205
 EGR temperature sensor EC-148
 EGR temperature sensor inspection..... EC-151
 EGR valve inspection..... EC-139
 EGRC - BPT valve inspection..... EC-153
 Energy conserving oils MA-8
 Engine compartment BT-36
 Engine control module (ECM)..... EC-130
 Engine coolant temperature sensor (ECTS)..... EC-100
 Engine coolant temperature sensor (ECTS)
 DTC13, P0115 EC-100

ALPHABETICAL INDEX

Engine coolant temperature sensor (ECTS) DTC13, P0115 inspection	EC-103
Engine coolant temperature sensor (ECTS) DTC98, P0125	EC-193
Engine coolant temperature sensor (ECTS) DTC98, P0125 inspection	EC-197
Engine oil	MA-8
Engine oil filter replacement	MA-13
Engine oil precautions	GI-4
Engine oil replacement	MA-13
Engine outer component parts	EM-7
Engine removal	EM-38
Engine serial number	GI-34
Evaporative emission system	EC-17
Exhaust gas recirculation (EGR) system	EC-132
Exhaust gas recirculation (EGR) valve	EC-132
Exhaust system	FE-6
Exhaust system inspection	MA-15
Exterior	BT-19
Exterior lamp	EL-49

F

Fan control amp	HA-132
Fan switch	HA-14
Final drive (FF AT)	AT-199, AT-203
Final drive (FF MT)	MT-27
Floor trim	BT-15
Fluid temperature sensor (AT)	AT-105
Fluids	MA-8
Flywheel runout	EM-49
Fork rod (MT)	MT-13
Forward clutch	AT-176
Freeze frame data	EC-29
Front axle	FA-8
Front bumper	BT-6
Front disc brake	BR-17
Front door	BT-10
Front fog lamp	EL-53
Front oxygen sensor	EC-140
Front oxygen sensor monitor	EC-33
Front passenger air bag	RS-11
Front seat	BT-26
Front seat belt	RS-3
Front suspension	FA-21
Fuel check valve inspection	EC-18
Fuel cut control (at no load & high engine speed)	EC-16
Fuel filler lid	BT-8
Fuel filter replacement	MA-12
Fuel gauge	EL-70, EL-72
Fuel injection system	EC-172
Fuel precautions	GI-5

Fuel pressure check	EC-20
Fuel pressure release	EC-20
Fuel pump	EC-217
Fuel pump control	EC-217
Fuel pump inspection	EC-221
Fuel pump relay inspection	EC-221
Fuel system	FE-4
Fuel tank vacuum relief valve inspection	EC-18
Full active suspension precautions	GI-3
Fuse	EL-13
Fusible link	EL-13

G

Garage Jack and Safety Stand	GI-37
Gauges	EL-68
Gear oil	MA-8
Gears (MT)	MT-12
Generator	EL-29
Generic scan tool (GST)	EC-50
Glass	BT-31
Grease	MA-8

H

Harness connector	EL-3
Harness layout	EL-191
Hazard warning lamp	EL-55
Headlamp	EL-36
Headlamp aiming control	EL-47
Heated oxygen sensor (H02S) heater (rear)	EC-181
Heated oxygen sensor (rear)	EC-177
Height (Dimensions)	GI-35
High clutch	AT-172
Hood	BT-7
Horn	EL-122
How to erase DTC for ECCS OBD system	EC-28
How to follow flow chart in trouble diagnoses	GI-28
How to perform efficient diagnosis for an electrical incident	GI-17
How to read wiring diagrams	GI-8
How to use this manual	GI-6

I

IACV - FICD solenoid valve inspection	EC-229
IACV-AAC valve inspection	EC-117
Identification plate	GI-33
Idle air control valve (IACV)	EC-114
Idle mixture ratio inspection	EC-22
Idle speed inspection	EC-22

ALPHABETICAL INDEX

Ignition coil inspection.....	EC-112
Ignition timing inspection.....	EC-22
Illumination	EL-62
In vehicle sensor	HA-123
Inhibitor switch.....	AT-106
Injector inspection	EC-214
Injector removal and installation	EC-21
Input shaft.....	MT-17
Instrument panel.....	BT-12
Intake air temperature sensor	EC-155
Intake air temperature sensor inspection.....	EC-159
Intake door motor	HA-130
Intake manifold	EM-7
Interior	BT-15
Interior lamp	EL-62

J

Jacking points.....	GI-37
Joint connector (J/C)	Foldout page

K

Knock sensor inspection	EC-147
Knock sensor (KS)	EC-145
Knuckle spindle	FA-9

L

Length (Dimensions)	GI-35
License lamp	EL-50
Lifting points	GI-36
Line pressure solenoid valve	AT-105
Line pressure test (AT).....	AT-111
Liquid gasket application.....	EM-2
Location of electrical units.....	EL-189
Low and reverse brake	AT-182
Lubricants	MA-8
Lubrication circuit (engine)	LC-4
Lubricant (A/C)	HA-136
Lubrication-locks, hinges and hood latches.....	MA-19
Luggage compartment trim	BT-18

M

Magnet clutch	HA-133
Main drive gear (MT).....	MT-12
Mainshaft (MT)	MT-22
Maintenance (engine).....	MA-9
Maintenance general.....	MA-3
Maintenance periodic	MA-5

Maintenance schedule (1).....	MA-5
Maintenance schedule (2).....	MA-5
Malfunction indicator lamp (MIL).....	EC-30
Manual transaxle number.....	GI-34
Manual transmission oil.....	MA-8
Manual transmission oil replacement.....	MA-15
Mass air flow sensor inspection.....	EC-99
Mass air flow sensor (MAFS).....	EC-95
Master cylinder (brake)	BR-11
Master cylinder (clutch).....	CL-6
Meter and gauges	EL-68
Misfire	EC-165
Mode door control linkage adjustment. HA-57, HA-120	
Mode door motor.....	HA-129
Model variation	GI-32
MT overhaul	MT-11
MT removal and installation	MT-7
Multi purpose grease.....	MA-8
Multiport fuel injection (MFI) system.....	EC-12
Multiport fuel injection precautions.....	GI-4

O

Oil change (capacity)	MA-13
Oil change (interval).....	MA-7
Oil pan (engine).....	EM-10
Oil pressure (engine).....	LC-5
Oil pressure relief valve (engine)	LC-7
Oil pump (AT)	AT-151
Oil pump (engine).....	LC-5
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine).....	EM-24
Operating cylinder (clutch)	CL-7
Out side mirror	BT-33
Overdrive switch.....	AT-106
Overrun clutch	AT-176
Overrun clutch solenoid valve.....	AT-105
Oversize piston.....	EM-44
Oxygen sensor (Front)	EC-140

P

Parking brake control	BR-33
Park/Neutral position switch.....	EC-198
PCV (Positive Crankcase Ventilation) inspection	EC-19
Personal lamp	EL-67
Piston assembly	EM-49
Piston pin inspection	EM-43
Piston ring inspection	EM-43
Piston to bore clearance	EM-44
Power antenna	EL-127

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Power steering fluid.....	MA-8
Power steering fluid level.....	ST-6, MA-18
Power steering gear.....	ST-13
Power steering hydraulic pressure.....	ST-8
Power steering oil pressure switch.....	EC-222
Power steering oil pressure switch inspection..	EC-224
Power steering oil pump.....	ST-23
Power steering system bleeding.....	ST-6
Power supply routing.....	EL-6
Power transistor & ignition coil.....	EC-108
Power transistor inspection.....	EC-112
Power window.....	EL-108
Pressure test (AT).....	AT-111

R

R134a system precaution.....	HA-2
R134a system service tools.....	HA-6
Rack retainer adjustment.....	ST-22
Radiator.....	LC-12
Rear air spoiler.....	BT-35
Rear bumper.....	BT-8
Rear combination lamp removal and installation.....	BT-24
Rear disc brake.....	BR-26
Rear door.....	BT-11
Rear drum brake.....	BR-21
Rear heated oxgen sensor (H02S) heater.....	EC-181
Rear heated oxygen sensor.....	EC-177
Rear seat.....	BT-27
Rear seat belt.....	RS-4
Rear window.....	BT-31
Rear window defogger.....	EL-123
Rear window signal.....	EC-230
Refrigerant CFC12 precaution.....	HA-2
Refrigerant connection precaution.....	HA-4
Refrigerant general precaution.....	HA-3
Refrigerant lines.....	HA-138
Refrigeration cycle.....	HA-11
Release bearing (clutch).....	CL-3
Resistor inspection.....	EC-113
Reverse clutch.....	AT-169
Reverse gear (MT).....	MT-12
Reverse idler shaft (MT).....	MT-12
Revolution sensor (AT).....	AT-107
Road wheel size.....	GI-35
Roof trim.....	BT-17
Rotor disc (front).....	FA-8

S

SAE J1930 terminology list.....	GI-41
---------------------------------	-------

Seat belt inspection.....	MA-19
Self-diagnostic results.....	EC-32
Shift control (MT).....	MT-13
Shift fork (MT).....	MT-13
Shift lock system.....	AT-116
Shift schedule.....	AT-34
Shift solenoid valve (AT).....	AT-105
Shock absorber (front).....	FA-22
Side trim.....	BT-15
SMJ (Super Multiple Junction).....	Foldout page
Spark plug replacement.....	MA-14
Speedometer.....	EL-70, EL-74
Spiral cable.....	RS-9
Spring (Wheelarch) height.....	FA-4
SRS Trouble diagnoses.....	RS-16
SRS Wiring diagram.....	RS-16
Stabilizer bar (front).....	FA-24
Stall test (AT).....	AT-108
Standardized relay.....	EL-4
Starter.....	EL-23
Starting system.....	EL-18
Steering gear and linkage inspection.....	MA-18
Steering knuckle.....	FA-9
Steering linkage.....	ST-13
Steering switch.....	EL-35
Steering wheel and column.....	ST-9
Steering wheel play.....	ST-5
Steering wheel turning force.....	ST-7
Stop lamp.....	EL-50
Striking rod (MT).....	MT-13
Strut (front).....	FA-22
Sun roof.....	BT-28
Sunload sensor.....	HA-124
Supplemental Restraint System.....	RS-6
Symbols and abbreviations.....	GI-7
Synchronizer (MT).....	MT-24

T

Tachometer.....	EL-70, EL-73
Tail lamp.....	EL-50
Theft warning system.....	EL-161
Thermal protector.....	HA-56
Thermo control amp.....	HA-56
Thermostat.....	LC-11
Three way catalyst.....	EC-169
Three way catalyst precautions.....	GI-4
Throttle bodies.....	EM-7
Throttle drum adjustment.....	FE-3
Throttle position sensor inspection.....	EC-164
Throttle position sensor (TPS).....	EC-160
Throwout bearing - See Clutch release bearing.....	CL-3

ALPHABETICAL INDEX

Tie-rod	ST-15
Tie-rod ball joints.....	ST-17
Tightening torque of standard bolts	GI-40
Time control system	EL-86
Timing chain.....	EM-15
Tire rotation	MA-18
Tire size.....	GI-35
Torque converter clutch solenoid valve.....	AT-105
Torque converter installation	AT-129
Tow truck towing.....	GI-38
Towing points.....	GI-39
Transmission case (MT).....	MT-11
Transverse link (front)	FA-25
Tread-FR&RR (Dimensions)	GI-35
Trim	BT-15
Triple pressure switch	HA-56
Trunk lid.....	BT-8
Trunk room lamp	EL-67
Trunk room trim.....	BT-18
Turn signal lamp.....	EL-55
Two trip detection logic	EC-28

U

Under body.....	BT-38
-----------------	-------

V

Vacuum hose (brake system)	BR-16
Vacuum hose drawing (ECCS)	EC-10
Valve clearance	EM-35

Valve guide inspection	EM-31
Valve seat inspection	EM-33
Valve spring inspection	EM-34
Vapor lines inspection	MA-14
Vehicle identification number	GI-33
Vehicle speed sensor (VSS)	EC-104
Viscosity number (SAE)	MA-8
Viscous coupling (FF AT)	AT-203
Viscous coupling (FF MT)	MT-6

W

Warning chime	EL-78
Warning lamps	EL-78
Water pump.....	LC-9
Water temperature gauge	EL-70, EL-72
Wheel alignment (front).....	FA-5
Wheel balance.....	MA-18
Wheel bearing (front axle).....	FA-5
Wheel hub and steering knuckle.....	FA-9
Wheel hub (front)	FA-9
Wheel sensors (ABS).....	BR-37
Wheel size.....	GI-35
Wheelarch height	FA-4
Wheelbase (Dimensions)	GI-35
Wide open & closed throttle position (CTP) switch	EC-160
Width (Dimensions)	GI-35
Windshield	BT-31
Wiper and washer	EL-101
Withdrawal lever (clutch).....	CL-3