

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS actuator	BR-38	A/C self-diagnoses (auto A/C).....	HA-71
ABS (anti-lock brake system).....	BR-35	A/C switch	HA-14
ABS circuit diagram.....	BR-42	A/C symptom chart (auto A/C).....	HA-67
ABS component parts and connector		A/C symptom chart (manual A/C)	HA-18
locations	BR-41	A/C system description (auto A/C).....	HA-60
ABS control unit	BR-36	A/C trouble diagnoses (auto A/C)	HA-63
ABS hydraulic circuit	BR-6	A/C trouble diagnoses (manual A/C)	HA-15
ABS self-diagnosis	BR-47	A/C wiring diagram (auto A/C)	HA-97
ABS symptom chart	BR-49	A/C wiring diagram (manual A/C)	HA-37
ABS system components.....	BR-36	Accel drum unit	EM-28
ABS trouble diagnoses.....	BR-39	Accelerator control system.....	FE-3
ABS wheel sensors.....	BR-36	Accelerator wire adjustment.....	FE-3
ABS wiring diagram.....	BR-43	Air bag.....	RS-11
A/C air flow.....	HA-13	Air bag disposal.....	RS-15
A/C circuit diagram (auto A/C)	HA-96	Air bag module.....	RS-11
A/C circuit diagram (manual A/C)	HA-35	Air bag precautions	GI-2
A/C component layout.....	HA-12	Air bag removal and installation.....	RS-11
A/C compressor clutch removal and		Air bleeding for brake system	BR-5
installation	HA-143	Air cleaner filter replacement.....	MA-13
A/C compressor description	HA-5	Air conditioner cut control	EC-21
A/C compressor mounting.....	HA-142	Air conditioning - See A/C.....	HA-11
A/C compressor precaution.....	HA-5	Air cut valve inspection	EC-263
A/C compressor special service tool.....	HA-6	Air flow meter - See Mass air flow sensor.....	EC-96
A/C control linkage adjustment (auto A/C).....	HA-121	Air mix door control linkage adjustment	
A/C control linkage adjustment (manual A/C).....	HA-57	(auto A/C).....	HA-121
A/C control operation (auto A/C).....	HA-61	Air mix door control linkage adjustment	
A/C control operation (manual A/C).....	HA-14	(manual A/C).....	HA-58
A/C diagnostic work flow (auto A/C)	HA-63	Air mix door motor (auto A/C).....	HA-126
A/C diagnostic work flow (manual A/C)	HA-15	Air mix door motor (manual A/C)	HA-58
A/C harness layout (auto A/C)	HA-94	Air spoiler, rear - See Rear air spoiler.....	BT-38
A/C harness layout (manual A/C)	HA-33	Alternator.....	EL-32
A/C HFC134a (R134a) system introduction	HA-11	Ambient sensor	HA-125
A/C HFC134a (R134a) system precaution	HA-2	Angular tightening application.....	EM-2
A/C HFC134a (R134a) system service		Antenna	EL-141
procedure	HA-137	Antenna - See Power antenna.....	EL-141
A/C HFC134a (R134a) system service tools.....	HA-6	Anti-freeze coolant	MA-8
A/C HFC134a system service equipment		Anti-freeze coolant mixture ratio	MA-9
precaution	HA-7	ASCD (automatic speed control device).....	EL-147
A/C lubricant (R134a).....	HA-139	A/T control DTC:P0600.....	EC-198
A/C lubrication oil.....	HA-139	AT control unit	AT-103
A/C operational check (auto A/C)	HA-64	AT diagnosis communication line.....	EC-228
A/C operational check (manual A/C).....	HA-16	AT fluid temperature sensor.....	AT-107
A/C performance chart (auto A/C)	HA-89	AT removal and installation.....	AT-128
A/C performance chart (manual A/C).....	HA-28	AT self-diagnoses.....	AT-47
A/C performance test diagnoses		AT shift lock system	AT-118
(auto A/C).....	HA-87	AT trouble diagnoses	AT-14
A/C performance test diagnoses		Audio	EL-135
(manual A/C)	HA-26	Audio and A/C control removal and	
A/C pressure switch	HA-11	installation - See Instrument panel.....	BT-12
A/C push control.....	HA-14	Automatic amplifier.....	HA-126
A/C relay (auto A/C).....	HA-120	Automatic transaxle number	GI-35
A/C relay (manual A/C)	HA-57	Automatic transmission fluid	MA-8
		Automatic transmission fluid replacement	MA-17
		Auxiliary air control (AAC).....	EC-194

ALPHABETICAL INDEX

B

Back-up lamp	EL-50
Back-up lamp switch (MT) -See reverse lamp switch	MT-6
Ball joint front axle.....	FA-24
Battery	EL-18
Baulk ring (MT).....	MT-12
Belt inspection (drive belt).....	MA-10
Blower motor (auto A/C).....	HA-120
Blower motor (manual A/C).....	HA-56
Blower relay.....	HA-120
Blower resistor.....	HA-56
Board-on lift.....	GI-38
Body alignment.....	BT-39
Boring/horning cylinder block.....	EM-46
Brake booster.....	BR-14
Brake control valve (Proportioning valve).....	BR-7
Brake fluid	MA-8
Brake fluid change	BR-4
Brake fluid level.....	MA-18
Brake fluid level and line check	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-18
Brake lines and cables inspection	MA-18
Brake lining temporary checking.....	MA-19
Brake master cylinder	BR-11
Brake pedal	BR-9
Bumper, front - See Front bumper.....	BT-6
Bumper, rear - See Rear bumper.....	BT-8

C

Camshaft inspection.....	EM-32
Camshaft position sensor (CMPS).....	EC-171
Camshaft position sensor inspection	EC-174
Charging system	EL-29
Chassis and body maintenance.....	MA-16
Check connector for ECCS checker box.....	EC-43
Cigarette lighter.....	EL-130
Circuit breaker.....	EL-13
Clearance lamp	EL-51
Clock.....	EL-130
Closed loop control	EC-129
Closed throttle position switch	EC-112
Clutch cover	CL-9
Clutch disc.....	CL-9
Clutch fluid.....	MA-8
Clutch fluid level.....	MA-16
Clutch master cylinder.....	CL-6
Clutch operating cylinder.....	CL-7
Clutch pedal	CL-3
Clutch pedal free play	CL-4

Clutch pedal height	CL-4	
Clutch release bearing	CL-8	
Clutch withdrawal lever	CL-8	
Coil spring (front).....	FA-22	GI
Coil spring (rear)	RA-11	
Combination lamp, rear, removal and installation	BT-25	MA
Combination meter.....	EL-71	
Combination meter (needle type).....	EL-71	EM
Combination meter removal and installation - See Instrument panel.....	BT-12	
Combination switch	EL-34	LC
Compression pressure	EM-11	
Compressor clutch removal and installation.....	HA-143	
Compressor description	HA-5	EC
Compressor mounting.....	HA-142	
Compressor precaution.....	HA-5	FE
Compressor special service tool.....	HA-6	
Connecting rod	EM-46	
Connecting rod bearing clearance.....	EM-49	CL
Connecting rod bushing clearance	EM-50	
Console box - See Instrument panel.....	BT-12	
CONSULT for ECCS	EC-43	MT
CONSULT general information	GI-32	
Control lever (MT)	MT-10	
Control valve (AT)	AT-155	AT
Converter housing installation.....	AT-129	
Coolant	MA-8	FA
Coolant replacement	MA-11	
Cooling circuit (engine)	LC-8	
Cooling fan	LC-12	RA
Cooling fan control	EC-231	
Cooling fan control system.....	LC-12	BR
Cooling fan motor (auto A/C)	HA-94	
Cooling fan motor (manual A/C)	HA-33	
Cooling fan motor inspection	EC-242	ST
Cooling fan relay (auto A/C).....	HA-94	
Cooling fan relay (manual A/C).....	HA-33	
Cooling fan relay inspection.....	EC-242	RS
Cornering lamp.....	EL-61	
Coupling sleeve (MT).....	MT-12	
Crank angle sensor built into distributor - See Camshaft position sensor	EC-171	BT
Crankshaft assembly.....	EM-52	
Crankshaft bearing clearance	EM-48	HA
Crankshaft inspection.....	EM-47	
Crankshaft position sensor (OBD) DTC0802, P0335.....	EC-167	EL
Crankshaft position sensor (OBD) DTC0802, P0335 inspection	EC-170	IDX
Cruise control - See ASCD	EL-147	
Cylinder block.....	EM-43	
Cylinder block boring.....	EM-46	
Cylinder head	EM-30	

ALPHABETICAL INDEX

Cylinder head bolt tightening EM-30

D

Data link connector for CONSULT EC-43
Daytime light system EL-41
Detonation sensor - See Knock sensor EC-164
Device (FICD) solenoid valve EC-257
Diagnostic trouble code (DTC) for ECCS
 OBD system EC-33
Differential gear (FF AT) (RE4F04A) AT-198
Differential gear (FF AT) (RE4F04V) AT-202
Differential gear (FF MT) MT-12
Dimensions GI-36
Distributor ignition (DI) system EC-19
Dome light - See Interior lamp EL-64
Door, front - See Front door BT-10
Door glass BT-10
Door lock BT-10
Door mirror BT-36
Door, rear - See Rear door BT-11
Door trim BT-16
Drive plate runout EM-51
Drive shaft (front) FA-14
Dropping resistor (AT) AT-109

E

ECCS basic inspection EC-61
ECCS circuit diagram EC-7
ECCS component parts location EC-10
ECCS fail-safe system EC-75
ECCS on-board diagnostic system EC-33
ECCS symptom matrix chart EC-76
ECCS system diagram and chart EC-8
ECCS trouble diagnoses EC-57
ECM input/output signal inspection EC-87
EGR control (EGRC) - BPT valve EC-185
EGR control (EGRC) - solenoid valve EC-219
EGR temperature sensor EC-223
EGR temperature sensor inspection EC-183
EGR valve EVAP canister control solenoid
 valve inspection EC-222
EGR valve inspection EC-183
EGRC - BPT valve inspection EC-186
Electric sun roof EL-128
Electrical units location EL-195
Energy conserving oils MA-8
Engine compartment BT-39
Engine control module (ECM) EC-201
Engine coolant temperature sensor (ECTS) EC-108

Engine coolant temperature sensor (ECTS)
 P0115, DTC0103 inspection EC-111
Engine coolant temperature sensor (ECTS)
 P0115, DTC0103 EC-108
Engine coolant temperature sensor (ECTS)
 P0125, DTC0908 EC-117
Engine coolant temperature sensor (ECTS)
 P0125, DTC0908 inspection EC-121
Engine coolant temperature sensor
 inspection EC-111
Engine oil MA-8
Engine oil filter replacement MA-14
Engine oil precautions GI-4
Engine oil replacement MA-14
Engine outer component parts EM-7
Engine removal EM-40
Engine room - See Engine compartment BT-39
Engine serial number GI-35
EVAP canister EC-22
EVAP canister control EC-22
EVAP canister inspection EC-22
EVAP canister purge control solenoid valve EC-219
Evaporative emission (EVAP) system EC-22
Exhaust gas recirculation (EGR) system EC-176
Exhaust gas recirculation (EGR) valve EC-176
Exhaust system FE-6
Exhaust system inspection MA-16
Exterior BT-20
Exterior lamp EL-50

F

Fan control amp. HA-133
Fan switch (auto A/C) HA-61
Fan switch (manual A/C) HA-14
Final drive (FF AT) (RE4F04A) AT-198
Final drive (FF AT) (RE4F04A) AT-202
Final drive (FF MT) MT-26
Finisher, interior - See Trim BT-15
Finisher, rear panel - See Rear panel finisher BT-15
Floor trim BT-15
Fluid temperature sensor (AT) AT-107
Fluids MA-8
Flywheel runout EM-51
Fog lamp, front EL-54
Fog lamp, front, removal and installation BT-6
Fork rod (MT) MT-13
Forward clutch AT-176
Freeze frame data EC-34
Fresh vent door control linkage adjustment
 (auto A/C) HA-122
Fresh vent door control linkage adjustment
 (manual A/C) HA-58

ALPHABETICAL INDEX

Front axle	FA-9
Front bumper.....	BT-6
Front disc brake	BR-17
Front door.....	BT-10
Front fog lamp.....	EL-54
Front fog lamp removal and installation.....	BT-6
Front heated oxygen sensor heater inspection	EC-132
Front heated oxygen sensor (HO2S).....	EC-122
Front heated oxygen sensor (HO2S) heater	EC-130
Front heated oxygen sensor (HO2S) monitor.....	EC-38
Front oxygen sensor (O2S).....	EC-122
Front oxygen sensor (O2S) monitor	EC-35
Front passenger air bag.....	RS-13
Front seat.....	BT-28
Front seat belt.....	RS-3
Front suspension.....	FA-21
Front washer	EL-103
Front wiper	EL-102
Fuel check valve inspection.....	EC-23
Fuel cut control (at no load & high engine speed)	EC-21
Fuel filler lid.....	BT-8
Fuel filter.....	EC-25
Fuel filter replacement.....	MA-13
Fuel gauge	EL-73
Fuel injection system.....	EC-150
Fuel injector.....	EC-243
Fuel line inspection	MA-12
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-25
Fuel pressure regulator.....	EC-26
Fuel pressure release	EC-25
Fuel pump	EC-248
Fuel pump control	EC-248
Fuel pump inspection.....	EC-252
Fuel pump relay inspection.....	EC-252
Fuel system.....	FE-4
Fuel tank vacuum relief valve inspection.....	EC-23
Fuse.....	EL-13
Fusible link	EL-13

G

Garage jack and safety stand.....	GI-38
Gauges.....	EL-70
Gear oil.....	MA-8
Gears (MT).....	MT-12
Generator	EL-32
Generic scan tool (GST)	EC-55
Glass	BT-33
Grease.....	MA-8
Grille - See Exterior.....	BT-6

Ground distribution.....	EL-14
--------------------------	-------

H

Harness connector	EL-3	GI
Harness layout	EL-197	MA
Hazard warning lamp	EL-56	
Headlamp	EL-37	EM
Headlamp aiming control	EL-48	
Headlining - See Roof trim.....	BT-18	
Heated oxygen sensor (HO2S).....	EC-130	LC
Heated oxygen sensor (HO2S) heater control	EC-130	
Heated oxygen sensor heater (front) inspection	EC-132	EC
Heated oxygen sensor heater inspection	EC-132	
Heated oxygen sensor (HO2S) (front)	EC-122	FE
Heated oxygen sensor (HO2S) heater (front).....	EC-130	
Heated oxygen sensor (HO2S) heater (rear)	EC-141	
Heated oxygen sensor (HO2S) monitor.....	EC-38	CL
Heated oxygen sensor monitor (HO2S) (front).....	EC-38	
Heated oxygen sensor (rear)	EC-133	MT
Heater wiring diagram.....	HA-36	
Height (Dimensions).....	GI-36	AT
HFC134a (R134a) system introduction.....	HA-11	
HFC134a (R134a) system precaution	HA-2	FA
HFC134a (R134a) system service procedure	HA-135	
HFC134a (R134a) system service tools	HA-6	RA
HFC134a system service equipment precaution	HA-7	
High clutch.....	AT-172	BR
Hood.....	BT-6	
Horn.....	EL-130	ST
How to erase DTC for ECCS OBD system	EC-33	
How to follow flow chart in trouble diagnoses	GI-29	RS
How to perform efficient diagnosis for an electrical incident	GI-18	
How to read wiring diagrams	GI-9	BT
How to use this manual	GI-7	HA

I

IACV - air regulator inspection.....	EC-256	EL
IACV - FICD solenoid valve inspection.....	EC-260	
IACV-AAC valve inspection.....	EC-197	
Identification plate	GI-34	IDX
Idle air control valve (IACV).....	EC-194	
Idle air control valve (IACV) - air regulator.....	EC-256	
Idle air control valve (IACV) - fast idle control.....	EC-257	
Idle mixture ratio inspection	EC-27	
Idle speed inspection	EC-27	
Ignition coil inspection.....	EC-214	

ALPHABETICAL INDEX

Ignition timing inspection.....	EC-27
Illumination	EL-64
In vehicle sensor	HA-124
Inhibitor switch.....	AT-108
Inhibitor switch inspection	EC-203
Injector inspection	EC-245
Injector removal and installation	EC-26
Input shaft.....	MT-17
Instrument panel.....	BT-12
Intake air temperature sensor.....	EC-101
Intake air temperature sensor inspection.....	EC-107
Intake door control linkage adjustment (auto A/C).....	HA-122
Intake door control linkage adjustment (manual A/C).....	HA-58
Intake door motor (auto A/C)	HA-131
Intake door motor (manual A/C).....	HA-58
Intake manifold	EM-7
Intake sensor	HA-124
Interior	BT-15
Interior lamp	EL-64

J

Jacking points.....	GI-38
Joint connector (J/C).....	Foldout page

K

Knock sensor (KS)	EC-164
Knock sensor (KS) inspection.....	EC-166
Knuckle spindle	FA-9

L

Length (Dimensions)	GI-36
License lamp	EL-51
Lifting points	GI-37
Line pressure solenoid valve	AT-107
Line pressure test (AT).....	AT-113
Liquid gasket application.....	EM-2
Location of electrical units.....	EL-195
Lock, door - See Door lock.....	BT-10
Low and reverse brake	AT-182
Lubricant (R134a) A/C.....	HA-139
Lubricants.....	MA-8
Lubrication circuit (engine).....	LC-4
Lubrication oil A/C	HA-139
Lubrication-locks, hinges and hood latches.....	MA-21
Luggage compartment trim	BT-19

M

Magnet clutch	HA-134
Main drive gear (MT).....	MT-12
Mainshaft (MT)	MT-22
Maintenance	MA-3
Maintenance (engine).....	MA-10
Maintenance general.....	MA-3
Maintenance periodic	MA-5
Maintenance schedule (1).....	MA-5
Maintenance schedule (2).....	MA-5
Malfunction indicator lamp (MIL).....	EC-35
Manual transaxle number.....	GI-35
Manual transmission oil.....	MA-8
Manual transmission oil replacement.....	MA-16
Mass air flow sensor inspection.....	EC-100
Mass air flow sensor (MAFS).....	EC-96
Master cylinder (brake)	BR-11
Master cylinder (clutch).....	CL-6
Meter and gauges	EL-70
MIL & Data link connectors circuit	EC-264
Mirror, door - See Door mirror	BT-36
Mirror, out side - See Out side mirror	BT-36
Misfire	EC-160
Mode door control linkage adjustment (auto A/C).....	HA-121
Mode door control linkage adjustment (manual A/C)	HA-57
Mode door motor (auto A/C)	HA-130
Mode door motor (manual A/C)	HA-57
Model variation.....	GI-33
Molding - See Exterior	BT-20
MT overhaul	MT-11
MT removal and installation.....	MT-7
Mud guard - See Exterior.....	BT-26
Multi link/lower ball joint (rear)	RA-13
Multi purpose grease.....	MA-8
Multiport fuel injection (MFI) system.....	EC-16
Multiport fuel injection precautions.....	GI-4
Multiport fuel injection system inspection	EC-61

N

Neutral position switch inspection.....	EC-203
Neutral position switch (MT)	MT-6

O

Oil change (capacity)	MA-14
Oil change (interval).....	MA-5
Oil pan (engine).....	EM-12
Oil pressure (engine).....	LC-5

ALPHABETICAL INDEX

Oil pressure relief valve (engine)..... LC-7
 Oil pump (AT).....AT-151
 Oil pump (engine)..... LC-5
 Oil pump regulator valve (engine)..... LC-6
 Oil seal replacement (engine)..... EM-26
 Operating cylinder (clutch)..... CL-7
 Out side mirror BT-36
 Overdrive control switch.....AT-108
 Overrun clutch.....AT-176
 Overrun clutch solenoid valve.....AT-107
 Oversize piston..... EM-46
 Oxygen sensor (O2S).....EC-130
 Oxygen sensor (O2S) (front).....EC-122

P

Parking brake control..... BR-33
 Parking drum brake..... BR-21
 Park/Neutral position switch..... EC-203
 PCV (positive crankcase ventilation)
 inspection..... EC-24
 Personal lamp EL-69
 Pilot bushing replacement..... EM-53
 Piston assembly EM-51
 Piston pin inspection EM-45
 Piston ring inspection..... EM-45
 Piston to bore clearance EM-46
 Power antenna EL-141
 Power door lock EL-115
 Power door mirror EL-127
 Power steering fluid..... MA-8
 Power steering fluid level.....ST-5, MA-20
 Power steering gear..... ST-13
 Power steering hydraulic pressure..... ST-8
 Power steering oil pressure switch..... EC-253
 Power steering oil pressure switch inspection..EC-255
 Power steering oil pump ST-19
 Power steering system bleeding..... ST-5
 Power supply routing..... EL-6
 Power transistor & ignition coil.....EC-210
 Power transistor inspection.....EC-214
 Power window EL-108
 Precautions (General)..... GI-3
 Pressure plate - See Clutch cover..... CL-9
 Pressure test (AT) AT-113

R

R134a - See HFC134aHA-2
 Radiator..... LC-12
 Radiator fan - See Cooling fan LC-12
 Radio - See Audio EL-135

Rear air spoiler..... BT-38
 Rear axle..... RA-3
 Rear axle (disc brake type)..... RA-7
 Rear axle (drum brake type)..... RA-7
 Rear bumper BT-8
 Rear combination lamp removal and
 installation BT-25
 Rear disc brake..... BR-26
 Rear door BT-11
 Rear drum brake BR-21
 Rear heated oxygen sensor heater
 inspection..... EC-144
 Rear heated oxygen sensor (HO2S) EC-133
 Rear heated oxygen sensor (HO2S) heater..... EC-141
 Rear panel finisher..... BT-15
 Rear seat..... BT-29
 Rear seat belt..... RS-3
 Rear suspension RA-9
 Rear window..... BT-34
 Rear window defogger EL-131
 Rear window signal..... EC-261
 Refilling engine coolant..... LC-12
 Refrigerant CFC12 precaution HA-2
 Refrigerant connection precaution HA-4
 Refrigerant discharging evacuating charging.... HA-137
 Refrigerant general precaution..... HA-3
 Refrigerant lines HA-141
 Refrigeration cycle..... HA-11
 Release bearing (clutch) CL-8
 Resistor inspection..... EC-214
 Reverse clutch..... AT-169
 Reverse gear (MT)..... MT-12
 Reverse idler shaft (MT) MT-12
 Reverse lamp switch..... MT-6
 Revolution sensor (AT)..... AT-109
 Road wheel size..... GI-36
 Roof trim..... BT-18
 Room lamp - See Interior lamp..... EL-64
 Rotor disc (front) FA-9

S

SAE J1930 terminology list..... GI-42
 Seal - See Exterior..... BT-20
 Seat belt, front - See Front seat belt RS-3
 Seat belt inspection..... MA-21
 Seat belt, rear - See Rear seat belt..... RS-3
 Seat, front - See Front seat BT-28
 Seat, rear - See Rear seat..... BT-29
 Self-diagnostic results EC-35
 Shift control (MT)..... MT-13
 Shift fork (MT) MT-13
 Shift lock system AT-118

ALPHABETICAL INDEX

Shift schedule.....	AT-37
Shift solenoid valve (AT)	AT-107
Shock absorber (front)	FA-22
Shock absorber (rear)	RA-11
Side trim	BT-15
SMJ (super multiple junction).....	Foldout page
Spark plug replacement	MA-15
Speedometer	EL-75
Spiral cable.....	RS-11
Spring (Wheelarch) height	FA-5
SRS - See Supplemental Restraint System	RS-7
SRS Trouble diagnoses	RS-19
SRS Wiring diagram.....	RS-19
Stabilizer bar (front).....	FA-23
Stabilizer bar (rear)	RA-13
Stall test (AT).....	AT-110
Standardized relay	EL-4
Starter.....	EL-26
Starting system.....	EL-22
Steering gear and linkage inspection.....	MA-19
Steering knuckle.....	FA-9
Steering linkage.....	ST-13
Steering switch	EL-36
Steering wheel and column.....	ST-9
Steering wheel play.....	ST-7
Steering wheel turning force	ST-6
Stop lamp	EL-51
Striking rod (MT)	MT-13
Strut (front)	FA-22
Strut (rear)	RA-11
Sun roof.....	BT-30
Sunload sensor	HA-125
Supplemental Restraint System.....	RS-7
Symbols and abbreviations	GI-8
Synchronizer (MT).....	MT-23

T

Tachometer.....	EL-74
Tail lamp	EL-51
Temperature control cable and linkage adjustment (auto A/C)	HA-121
Temperature control cable and linkage adjustment (manual A/C)	HA-58
Theft warning system	EL-168
Thermal protector (auto A/C)	HA-120
Thermal protector (manual A/C).....	HA-57
Thermo control amp (auto A/C)	HA-120
Thermo control amp (manual A/C).....	HA-57
Thermostat	LC-11
Three way catalyst.....	EC-187
Three way catalyst precautions	GI-4
Throttle bodies.....	EM-7

Throttle drum adjustment	FE-3
Throttle position sensor adjustment.....	EC-61
Throttle position sensor inspection	EC-116
Throttle position sensor (TPS)	EC-112
Throttle position switch.....	AT-109
Throwout bearing - See Clutch release bearing	CL-8
Tie-rod	ST-16
Tie-rod ball joints.....	ST-16
Tightening torque of standard bolts	GI-41
Time control system	EL-87
Timing chain	EM-17
Tire rotation	MA-19
Tire size	GI-36
Torque converter clutch solenoid valve.....	AT-107
Torque converter installation	AT-129
Tow truck towing.....	GI-39
Transmission case (MT).....	MT-11
Transverse link (front)	FA-24
Tread-FR&RR (Dimensions)	GI-36
Trim	BT-15
Triple pressure switch (auto A/C).....	HA-120
Triple pressure switch (manual A/C).....	HA-57
Trunk lid.....	BT-8
Trunk lid opener - See Trunk lid	BT-8
Trunk room lamp	EL-69
Trunk room trim.....	BT-19
Turn signal lamp.....	EL-56
Two trip detection logic	EC-33
Two-pole lift	GI-39

U

Under body.....	BT-41
-----------------	-------

V

Vacuum hose (brake system)	BR-16
Vacuum hose drawing (ECCS)	EC-13
Valve clearance	EM-37
Valve guide inspection	EM-33
Valve seat inspection	EM-35
Valve spring inspection	EM-36
Vapor lines inspection	MA-15
Vehicle identification number	GI-34
Vehicle recovery (Freeing a stuck vehicle).....	GI-40
Vehicle speed sensor (VSS)	EC-190
Vent mode switch (auto A/C)	HA-61
Vent mode switch (manual A/C).....	HA-16
Viscosity number (SAE)	MA-8
Viscous coupling (FF AT) (RE4F04V).....	AT-202
Viscous coupling (FF MT).....	MT-6

ALPHABETICAL INDEX

W

Warning chime	EL-84	Wheel hub (rear)	RA-7
Warning lamps	EL-79	Wheel sensors (ABS).....	BR-36
Washer, front	EL-103	Wheel size.....	GI-36
Water cock control rod adjustment (auto A/C).....	HA-121	Wheelarch height	FA-5
Water cock control rod adjustment (manual A/C).....	HA-58	Wheelbase (Dimensions)	GI-36
Water pump.....	LC-9	Wide open & closed throttle position (CTP) switch	EC-112
Water temperature gauge	EL-73	Width (Dimensions)	GI-36
Weatherstrip - See Exterior.....	BT-20	Window antenna.....	EL-141
Wheel alignment (front).....	FA-6	Window, door.....	BT-10
Wheel alignment (rear).....	RA-5	Window, rear - See Rear window	BT-34
Wheel balance.....	MA-19	Windshield.....	BT-33
Wheel bearing (front axle).....	FA-6	Windshield washer - See Front washer.....	EL-103
Wheel bearing (rear)	RA-4	Windshield wiper - See Front wiper.....	EL-102
Wheel hub and steering knuckle.....	FA-9	Wiper and washer	EL-102
Wheel hub (front)	FA-9	Wiper, front.....	EL-102
		Withdrawal lever (clutch).....	CL-8
		Wrist pin - See Piston pin inspection.....	EM-45

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX