

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

ABS actuator	BR-38	A/C self-diagnoses (auto A/C).....	HA-70
ABS (anti-lock brake system).....	BR-35	A/C switch	HA-55
ABS circuit diagram.....	BR-42	A/C symptom chart (auto A/C).....	HA-66
ABS component parts and connector		A/C symptom chart (manual A/C).....	HA-18
locations	BR-41	A/C system description (auto A/C).....	HA-58
ABS control unit	BR-36	A/C trouble diagnoses (auto A/C).....	HA-61
ABS hydraulic circuit	BR-6	A/C trouble diagnoses (manual A/C)	HA-15
ABS self-diagnosis	BR-47	A/C wiring diagram (auto A/C)	HA-96
ABS symptom chart	BR-49	A/C wiring diagram (manual A/C)	HA-37
ABS system components.....	BR-36	Accel drum unit	EM-28
ABS trouble diagnoses.....	BR-39	Accelerator control system.....	FE-3
ABS wheel sensors	BR-36	Accelerator wire adjustment.....	FE-3
ABS wiring diagram.....	BR-43	Air assisted injector system	EC-257
A/C air flow	HA-13	Air bag	RS-11
A/C circuit diagram (auto A/C)	HA-95	Air bag disposal.....	RS-15
A/C component layout.....	HA-12	Air bag module	RS-11
A/C compressor clutch removal and		Air bag precautions	GI-2
installation	HA-142	Air bleeding for brake system	BR-5
A/C compressor description.....	HA-5	Air cleaner filter replacement.....	MA-13
A/C compressor mounting.....	HA-141	Air conditioner cut control	EC-20
A/C compressor precaution.....	HA-5	Air conditioning - See A/C.....	HA-11
A/C compressor special service tool.....	HA-6	Air cut valve.....	EC-257
A/C control linkage adjustment (auto A/C).....	HA-120	Air cut valve inspection	EC-257
A/C control linkage adjustment (manual A/C).....	HA-56	Air flow meter - See Mass air flow sensor.....	EC-103
A/C control operation (auto A/C).....	HA-59	Air mix door control linkage adjustment.....	HA-57
A/C control operation (manual A/C).....	HA-14	Air mix door control linkage adjustment (auto	
A/C diagnostic work flow (auto A/C)	HA-61	A/C)	HA-120
A/C diagnostic work flow (manual A/C)	HA-15	Air mix. door motor.....	HA-125
A/C harness layout (auto A/C)	HA-93	Air spoiler, rear	BT-38
A/C harness layout (manual A/C)	HA-33	Alternator	EL-32
A/C HFC134a (R134a) system introduction	HA-11	Ambient sensor	HA-124
A/C HFC134a (R134a) system precaution	HA-2	Angular tightening application.....	EM-2
A/C HFC134a (R134a) system service		Antenna	EL-126
procedure	HA-136	Antenna - See Power antenna.....	EL-126
A/C HFC134a (R134a) system service tools.....	HA-7	Anti-freeze coolant mixture ratio	MA-9
A/C HFC134a system service equipment		ASCD (automatic speed control device).....	EL-132
precaution	HA-7	A/T control DTC:P0600	EC-193
A/C lubricant (R134a).....	HA-138	AT control unit	AT-103
A/C lubrication oil	HA-138	AT diagnosis communication line.....	EC-223
A/C operational check (auto A/C)	HA-62	AT fluid temperature sensor	AT-107
A/C operational check (manual A/C).....	HA-16	AT removal and installation.....	AT-128
A/C performance chart (auto A/C)	HA-88	AT self-diagnoses.....	AT-47
A/C performance chart (manual A/C).....	HA-28	AT shift lock system	AT-118
A/C performance test diagnoses (auto A/C).....	HA-86	AT trouble diagnoses	AT-14
A/C performance test diagnoses		Audio	EL-120
(manual A/C)	HA-26	Audio and A/C control removal and	
A/C pressure switch	HA-11	installation - See Instrument panel.....	BT-12
A/C push control.....	HA-14	Automatic amplifier.....	HA-59
A/C relay (auto A/C)	HA-119	Automatic transaxle number	GI-36
A/C relay (manual A/C)	HA-56	Automatic transmission fluid replacement	MA-17
		Auxiliary air control (AAC).....	EC-189

ALPHABETICAL INDEX

B

Back window	BT-34
Back-up lamp	EL-52
Back-up lamp switch (MT)	MT-6
Ball joint front axle.....	FA-24
Battery	EL-18
Baulk ring (MT).....	MT-12
Belt inspection (drive belt).....	MA-10
Blower motor (auto A/C).....	HA-119
Blower motor (manual A/C).....	HA-55
Blower relay.....	HA-119
Blower resistor.....	HA-55
Board-on lift	GI-39
Body alignment.....	BT-39
Boring/honing cylinder block	EM-46
Brake booster	BR-14
Brake control valve (Proportioning valve).....	BR-7
Brake fluid change	BR-4
Brake fluid level.....	MA-18
Brake fluid level and line check	BR-4
Brake hydraulic line.....	BR-6
Brake inspection.....	MA-18
Brake lines and cables inspection	MA-18
Brake lining temporary checking.....	MA-19
Brake master cylinder	BR-11
Brake pedal	BR-9
Bumper, front.....	BT-6
Bumper, rear.....	BT-8

C

Camshaft inspection.....	EM-32
Camshaft position sensor (CMPS).....	EC-166
Camshaft position sensor inspection	EC-169
Charging system	EL-29
Chassis and body maintenance.....	MA-16
Check connector for ECCS checker box	EC-51
Cigarette lighter.....	EL-115
Circuit breaker.....	EL-13
Clearance lamp	EL-53
Clock.....	EL-115
Closed loop control	EC-132
Closed throttle position switch	EC-117
Clutch cover	CL-9
Clutch disc.....	CL-9
Clutch fluid level.....	MA-16
Clutch master cylinder.....	CL-6
Clutch operating cylinder.....	CL-7
Clutch pedal	CL-3
Clutch pedal free play	CL-4
Clutch pedal height	CL-4

Clutch release bearing	CL-8	
Clutch withdrawal lever	CL-8	
Coil spring (front).....	FA-22	GI
Coil spring (rear)	RA-12	
Collision diagnosis.....	RS-39	
Combination lamp, rear, removal and installation	BT-25	MA
Combination meter.....	EL-74	
Combination meter (needle type).....	EL-74	EM
Combination meter removal and installation - See Instrument panel.....	BT-12	LC
Combination switch	EL-36	
Compression pressure	EM-11	
Compressor clutch removal and installation	HA-142	EC
Compressor description	HA-5	
Compressor mounting.....	HA-141	
Compressor precaution.....	HA-5	FE
Compressor special service tool.....	HA-6	
Connecting rod.....	EM-46	CL
Connecting rod bearing clearance	EM-49	
Connecting rod bushing clearance	EM-50	
Console box - See Instrument panel	BT-12	MT
CONSULT for ECCS	EC-51	
CONSULT general information	GI-33	
Control lever (MT)	MT-10	AT
Control valve (AT)	AT-156	
Converter housing installation.....	AT-129	FA
Coolant replacement	MA-11	
Cooling circuit (engine)	LC-9	
Cooling fan	LC-14	FA
Cooling fan control	EC-226	
Cooling fan control system.....	LC-14	
Cooling fan motor inspection	EC-237	BR
Cooling fan relay inspection.....	EC-237	
Cornering lamp.....	EL-63	ST
Coupling sleeve (MT).....	MT-12	
Crank angle sensor built into distributor - See Camshaft position sensor	EC-166	RS
Crankcase emission control system - See positive crankcase ventilation	EC-23	
Crankcase ventilation system - See positive crankcase ventilation	EC-23	BT
Crankshaft assembly.....	EM-52	HA
Crankshaft bearing clearance	EM-48	
Crankshaft inspection.....	EM-47	
Crankshaft position sensor (OBD) chipping.....	EC-210	EL
Crankshaft position sensor (OBD) DTC0802, P0335.....	EC-162	
Crankshaft position sensor (OBD) DTC0802, P0335 inspection	EC-165	IDX
Cruise control - See ASCD	EL-132	
Cylinder block.....	EM-43	
Cylinder block boring.....	EM-46	
Cylinder head	EM-30	

ALPHABETICAL INDEX

Cylinder head bolt tightening EM-30

D

Data link connector for Consult.....EC-51
Daytime light system.....EL-42
Detonation sensor - See Knock sensor.....EC-159
Diagnostic trouble code (DTC) chart.....EC-72
Differential gear (FF AT) (RE4F04A).....AT-199
Differential gear (FF AT) (RE4F04V).....AT-203
Differential gear (FF MT).....MT-26
Dimensions.....GI-37
Distributor ignition (DI) system.....EC-18
Dome light - See Interior lamp.....EL-71
Door, front.....BT-10
Door glass.....BT-10
Door lock.....BT-10
Door mirror.....BT-36
Door, rear.....BT-11
Door trim.....BT-16
Drive plate runout.....EM-50
Drive shaft (front).....FA-14
Dropping resistor (AT).....AT-109

E

ECCS basic inspection.....EC-69
ECCS circuit diagram.....EC-7
ECCS component parts location.....EC-10
ECCS fail-safe system.....EC-83
ECCS on board diagnostic system.....EC-32
ECCS relay inspection.....EC-101
ECCS symptom matrix chart.....EC-84
ECCS system diagram and chart.....EC-8
ECCS trouble diagnoses.....EC-65
ECM input/output signal inspection.....EC-94
EGR control (EGRC) - BPT valve.....EC-180
EGR control (EGRC) - solenoid valve.....EC-214
EGR temperature sensor.....EC-218
EGR temperature sensor inspection.....EC-178
EGR valve EVAP canister control solenoid
valve inspection.....EC-217
EGR valve inspection.....EC-178
EGRC - BPT valve inspection.....EC-181
Electric sun roof.....EL-113
Electrical unit.....EL-205
Electrical units location.....EL-204
Engine compartment.....BT-39
Engine control module (ECM).....EC-196
Engine coolant temperature sensor (ECTS).....EC-113
Engine coolant temperature sensor (ECTS)
P0115, DTC0103.....EC-113

Engine coolant temperature sensor (ECTS)
P0115, DTC0103 inspection.....EC-116
Engine coolant temperature sensor (ECTS)
P0125, DTC0908.....EC-122
Engine coolant temperature sensor (ECTS)
P0125, DTC0908 inspection.....EC-126
Engine coolant temperature sensor
inspection.....EC-116
Engine oil filter replacement.....MA-14
Engine oil precautions.....GI-5
Engine oil replacement.....MA-14
Engine outer component parts.....EM-7
Engine removal.....EM-40
Engine room - See Engine compartment.....BT-39
Engine serial number.....GI-36
EVAP canister.....EC-21
EVAP canister inspection.....EC-21
EVAP canister purge control.....EC-21
EVAP canister purge control solenoid
valve.....EC-214
EVAP vapor lines inspection.....MA-15
Evaporative emission (EVAP) system.....EC-21
Exhaust gas recirculation (EGR) system.....EC-171
Exhaust gas recirculation (EGR) valve.....EC-171
Exhaust system.....FE-6
Exhaust system inspection.....MA-16
Exterior.....BT-20
Exterior lamp.....EL-52

F

Fan control amp.....HA-131
Fan switch.....HA-55
Final drive (FF AT) (RE4F04A).....AT-199
Final drive (FF AT) (RE4F04V).....AT-203
Final drive (FF MT).....MT-26
Finisher, interior - See Trim.....BT-15
Finisher, rear panel.....BT-15
Floor trim.....BT-15
Fluid temperature sensor (AT).....AT-107
Fluids.....MA-8
Flywheel runout.....EM-50
Fog lamp, front.....EL-56
Fog lamp, front, removal and installation.....BT-6
Fork rod (MT).....MT-13
Forward clutch.....AT-177
Freeze frame data.....EC-34
Fresh vent door control linkage adjustment.....HA-121
Front axle.....FA-9
Front bumper.....BT-6
Front disc brake.....BR-17
Front door.....BT-10
Front fog lamp.....EL-56

ALPHABETICAL INDEX

Front fog lamp removal and installation.....	BT-6
Front heated oxygen sensor heater inspection	EC-135
Front heated oxygen sensor (HO2S).....	EC-127
Front heated oxygen sensor (HO2S) heater	EC-133
Front heated oxygen sensor (HO2S) monitor.....	EC-50
Front oxygen sensor (O2S) monitor	EC-47
Front passenger air bag.....	RS-13
Front seat	BT-28
Front seat belt	RS-3
Front suspension.....	FA-21
Front washer	EL-106
Front wiper	EL-105
Fuel check valve inspection	EC-22
Fuel cut control (at no load & high engine speed)	EC-20
Fuel filler lid	BT-8
Fuel filter.....	EC-24
Fuel filter replacement.....	MA-13
Fuel gauge	EL-76
Fuel injection system.....	EC-145
Fuel injector.....	EC-238
Fuel line inspection	MA-12
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-24
Fuel pressure regulator	EC-25
Fuel pressure regulator control	EC-25
Fuel pressure release	EC-24
Fuel pump	EC-243
Fuel pump control	EC-243
Fuel pump inspection.....	EC-247
Fuel pump relay inspection	EC-247
Fuel system	FE-4
Fuel tank vacuum relief valve inspection.....	EC-22
Fuse.....	EL-13
Fuse block	Foldout page
Fusible link	EL-13

G

Garage jack and safety stand.....	GI-39
Gauges	EL-73
Gears (MT)	MT-12
Generator	EL-32
Generic scan tool (GST)	EC-63
Glass	BT-33
Grease.....	MA-8
Grille - See Exterior.....	BT-6
Ground distribution	EL-14

H

Harness connector	EL-3	GI
Harness layout	EL-206	
Hazard warning lamp	EL-59	HA
Headlamp	EL-39	
Headlamp aiming control	EL-50	
Headlining - See Roof trim.....	BT-18	EM
Heated oxygen (HO2S) heater control	EC-133	
Heated oxygen sensor heater (front) inspection	EC-135	IC
Heated oxygen sensor heater inspection	EC-135	
Heated oxygen sensor (HO2S).....	EC-133	EC
Heated oxygen sensor (HO2S) (front)	EC-127	
Heated oxygen sensor (HO2S) heater (front)...	EC-133	
Heated oxygen sensor (HO2S) heater (rear) ...	EC-141	FE
Heated oxygen sensor (HO2S) monitor.....	EC-50	
Heated oxygen sensor monitor (HO2S) (front).....	EC-50	GL
Heated oxygen sensor (rear)	EC-136	
Heater wiring diagram	HA-36	MT
Height (Dimensions).....	GI-37	
HFC134a (R134a) system introduction.....	HA-11	
HFC134a (R134a) system precaution	HA-2	AT
HFC134a (R134a) system service procedure	HA-136	
HFC134a (R134a) system service tools	HA-7	FA
HFC134a system service equipment precaution	HA-7	RA
High clutch.....	AT-173	
Hood.....	BT-6	
Horn.....	EL-115	SR
How to erase DTC for ECCS OBD system	EC-40	
How to follow flow chart in trouble diagnoses	GI-30	ST
How to perform efficient diagnosis for an electrical incident	GI-18	
How to read wiring diagrams	GI-9	RS
How to use this manual	GI-7	

I

IACV - air regulator inspection.....	EC-251	HA
IACV - FICD solenoid valve inspection.....	EC-254	
IACV-AAC valve inspection.....	EC-192	EL
IACV-FICD solenoid valve.....	EC-252	
Identification plate	GI-35	
Idle air control (IAC) system	EC-189	IDX
Idle air control (IACV) - fast idle control	EC-252	
Idle air control valve (IACV).....	EC-189	
Idle air control valve (IACV) - air regulator.....	EC-251	
Idle mixture ratio inspection	EC-26	
Idle speed inspection	EC-26	

ALPHABETICAL INDEX

Ignition coil inspection.....EC-209
Ignition timing inspection.....EC-26
IlluminationEL-66
In vehicle sensor.....HA-123
Inhibitor switch.....AT-108
Inhibitor switch inspection.....EC-198
Injector inspection.....EC-240
Injector removal and installation.....EC-25
Input shaft.....MT-17
Instrument panel.....BT-12
Intake air temperature sensor.....EC-108
Intake air temperature sensor inspection.....EC-112
Intake door control linkage adjustment (auto
A/C).....HA-121
Intake door control linkage adjustment
(manual A/C).....HA-57
Intake door motor.....HA-129
Intake manifold.....EM-7
Intake sensor.....HA-123
Interior.....BT-15
Interior lamp.....EL-66

J

Jacking points.....GI-39
Joint connector (J/C).....Foldout page

K

Knock sensor (KS).....EC-159
Knock sensor (KS) inspection.....EC-161
Knuckle spindle.....FA-9

L

Length (Dimensions).....GI-37
License lamp.....EL-53
Lifting points.....GI-38
Line pressure solenoid valve.....AT-107
Line pressure test (AT).....AT-113
Liquid gasket application.....EM-2
Location of electrical units.....EL-204
Lock, door.....BT-10
Low and reverse brake.....AT-183
Lubricant (R134a) A/C.....HA-138
Lubricants.....MA-8
Lubrication circuit (engine).....LC-4
Lubrication oil A/C.....HA-138
Lubrication-locks, hinges and hood latches.....MA-21
Luggage compartment trim.....BT-19
Luggage room lamp.....EL-71

M

Magnet clutch.....HA-142
Main drive gear (MT).....MT-12
Mainshaft (MT).....MT-22
Maintenance.....MA-3
Maintenance (engine).....MA-10
Maintenance general.....MA-3
Maintenance periodic.....MA-5
Maintenance schedule (1).....MA-5
Maintenance schedule (2).....MA-5
Malfunction indicator lamp (MIL).....EC-47
Manual transaxle number.....GI-36
Manual transmission oil replacement.....MA-16
Mass air flow sensor inspection.....EC-107
Mass air flow sensor (MAFS).....EC-103
Master cylinder (brake).....BR-11
Master cylinder (clutch).....CL-6
Meter.....EL-73
MIL & Data link connectors circuit.....EC-258
Mirror, door.....BT-36
Mirror, out side.....BT-36
Misfire.....EC-155
Mode door control linkage adjustment (auto
A/C).....HA-120
Mode door control linkage adjustment
(manual A/C).....HA-56
Mode door motor.....HA-128
Model variation.....GI-34
Molding - See Exterior.....BT-20
MT overhaul.....MT-11
MT removal and installation.....MT-7
Mud guard - See Exterior.....BT-26
Multi link/lower ball joint (rear).....RA-14
Multiport fuel injection (MFI) system.....EC-15
Multiport fuel injection precautions.....GI-6
Multiport fuel injection system inspection.....EC-69

N

Neutral position switch inspection.....EC-198
Neutral position switch (MT).....MT-6

O

Oil change (capacity).....MA-14
Oil change (interval).....MA-5
Oil pan (engine).....EM-12
Oil pressure (engine).....LC-5
Oil pressure relief valve (engine).....LC-8
Oil pump (AT).....AT-152

ALPHABETICAL INDEX

Oil pump (engine)..... LC-6
 Oil pump regulator valve (engine)..... LC-8
 Oil seal replacement (engine)..... EM-26
 Operating cylinder (clutch) CL-7
 Out side mirror BT-36
 Overdrive control switch..... AT-108
 Overrun clutch..... AT-177
 Overrun clutch solenoid valve..... AT-107
 Oversize piston..... EM-46
 Oxygen sensor monitor (O2S) (front) EC-50
 Oxygen sensor (O2S) (front)..... EC-127

P

Parking brake control BR-33
 Parking drum brake..... BR-21
 Park/Neutral position (PNP) relay inspection.... EC-204
 Park/Neutral position switch..... EC-198
 PCV (positive crankcase ventilation)
 inspection EC-23
 Personal lamp EL-71
 Pilot bushing replacement..... EM-53
 Piston assembly EM-51
 Piston pin inspection EM-45
 Piston ring inspection..... EM-45
 Piston to bore clearance EM-46
 Power antenna EL-126
 Power door lock EL-163
 Power door mirror EL-112
 Power steering fluid level..... ST-5
 Power steering gear..... ST-13
 Power steering hydraulic pressure..... ST-8
 Power steering oil pressure switch..... EC-248
 Power steering oil pressure switch inspection.. EC-250
 Power steering oil pump ST-19
 Power steering system bleeding..... ST-5
 Power supply routing..... EL-6
 Power transistor & ignition coil..... EC-205
 Power transistor inspection..... EC-209
 Power window EL-155
 Precautions (General) GI-3
 Pressure plate - See Clutch cover..... CL-9
 Pressure test (AT) AT-113

R

R134a - See HFC134a HA-2
 Radiator..... LC-14
 Radiator fan - See Cooling fan LC-14
 Radio - See Audio..... EL-120
 Rear air spoiler..... BT-38
 Rear axle..... RA-3

Rear axle (disc brake type)..... RA-8
 Rear axle (drum brake type)..... RA-8
 Rear bumper BT-8
 Rear combination lamp removal and
 installation BT-25
 Rear disc brake..... BR-26
 Rear door BT-11
 Rear drum brake BR-21
 Rear heated oxygen sensor heater
 inspection EC-144
 Rear heated oxygen sensor (HO2S) EC-136
 Rear heated oxygen sensor (HO2S) heater..... EC-141
 Rear panel finisher..... BT-15
 Rear seat..... BT-29
 Rear seat belt..... RS-3
 Rear suspension RA-10
 Rear window..... BT-34
 Rear window defogger EL-116
 Rear window signal..... EC-255
 Refilling engine coolant..... LC-14
 Refrigerant connection precaution HA-4
 Refrigerant discharging evacuating charging.... HA-136
 Refrigerant general precaution..... HA-3
 Refrigerant lines HA-140
 Refrigeration cycle..... HA-11
 Release bearing (clutch) CL-8
 Resistor inspection EC-209
 Reverse clutch..... AT-170
 Reverse gear (MT) MT-12
 Reverse idler shaft (MT) MT-12
 Reverse lamp switch (MT) - See Back-up
 lamp switch (MT) MT-6
 Revolution sensor (AT)..... AT-109
 Road wheel size..... GI-37
 Roof trim..... BT-18
 Room lamp EL-71
 Room lamp - See Interior lamp..... EL-71
 Rotor disc (front) FA-9

S

SAE J1930 terminology list..... GI-43
 SAE J1979 - Mode 1 ~ 7 EC-32
 Seal - See Exterior..... BT-20
 Seat belt, front..... RS-3
 Seat belt inspection..... MA-21
 Seat belt, rear..... RS-3
 Seat, front..... BT-28
 Seat, rear..... BT-29
 Self-diagnostic results EC-47
 Shift control (MT)..... MT-13
 Shift fork (MT) MT-13
 Shift lock system AT-118

GI

MA

EM

LC

EC

FF

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

Shift schedule.....	AT-37
Shift solenoid valve (AT)	AT-107
Shock absorber (front)	FA-22
Shock absorber (rear)	RA-12
Side trim	BT-15
SMJ (super multiple junction).....	Foldout page
Spark plug replacement.....	MA-15
Speedometer.....	EL-78
Spiral cable.....	RS-11
Spring (Wheelarch) height	FA-5
SRS - See Supplemental Restraint System	RS-7
SRS Trouble diagnoses	RS-19
SRS Wiring diagram.....	RS-22
Stabilizer bar (front).....	FA-23
Stabilizer bar (rear)	RA-14
Stall test (AT).....	AT-110
Standardized relay	EL-4
Start signal	EC-241
Starter.....	EL-26
Starting system.....	EL-22
Steering gear and linkage inspection.....	MA-19
Steering gear oil level	MA-20
Steering knuckle.....	FA-9
Steering linkage.....	ST-13
Steering switch	EL-38
Steering wheel and column.....	ST-9
Steering wheel play.....	ST-7
Steering wheel turning force	ST-6
Stop lamp	EL-53
Striking rod (MT)	MT-13
Strut (front)	FA-22
Strut (rear).....	RA-12
Sun roof, electric.....	EL-113
Sunload sensor	HA-124
Sunroof.....	BT-30
Supplemental Restraint System.....	RS-7
Symbols and abbreviations.....	GI-8
Synchronizer (MT).....	MT-23
System readiness test (SRT) code	EC-34

T

Tachometer.....	EL-77
Tail lamp	EL-53
Temperature control cable and linkage adjustment.....	HA-57
Theft warning system.....	EL-175
Thermal protector (auto A/C)	HA-119
Thermal protector (manual A/C).....	HA-56
Thermo control amp (auto A/C)	HA-119
Thermo control amp (manual A/C).....	HA-56
Thermostat	LC-13
Three way catalyst	EC-182

Three way catalyst precautions	GI-6
Throttle bodies.....	EM-7
Throttle drum adjustment	FE-3
Throttle position sensor adjustment	EC-69
Throttle position sensor inspection	EC-121
Throttle position sensor (TPS)	EC-117
Throttle position switch.....	AT-109
Throwout bearing - See Clutch release bearing	CL-8
Tie-rod	ST-16
Tie-rod ball joints.....	ST-16
Tightening torque of standard bolts	GI-42
Time control system	EL-91
Timing chain	EM-17
Tire rotation	MA-19
Tire size.....	GI-37
Torque converter clutch solenoid valve.....	AT-107
Torque converter installation	AT-129
Tow truck towing.....	GI-40
Transmission case (MT).....	MT-11
Transverse link (front)	FA-24
Tread-FR&RR (Dimensions)	GI-37
Trim	BT-15
Triple pressure switch (auto A/C).....	HA-119
Triple pressure switch (manual A/C).....	HA-56
Trunk lid.....	BT-8
Trunk lid opener - See Trunk lid	BT-8
Trunk room lamp	EL-71
Trunk room trim.....	BT-19
Turn signal lamp.....	EL-59
Two trip detection logic	EC-32
Two-pole lift	GI-40

U

Under body.....	BT-41
-----------------	-------

V

Vacuum hose (brake system)	BR-16
Vacuum hose drawing (ECCS)	EC-12
Valve clearance	EM-37
Valve guide inspection	EM-33
Valve seat inspection	EM-35
Valve spring inspection	EM-36
Vehicle identification number	GI-35
Vehicle Recovery. (Freeing a stuck vehicle).....	GI-41
Vehicle speed sensor (VSS)	EC-185
Vehicle speed sensor (VSS) inspection.....	EC-185
Vent mode switch	HA-14
Vent mode switch (auto A/C)	HA-59
Viscosity number (SAE)	MA-8

ALPHABETICAL INDEX

Viscous coupling (FF AT)AT-203
Viscous coupling (FF MT)MT-6

W

Warning chime	EL-88	Wheel hub (rear)	RA-8
Warning lamps	EL-82	Wheel sensors (ABS)	BR-36
Washer, front	EL-106	Wheel size	GI-37
Water cock control rod adjustment	HA-57	Wheelarch height	FA-5
Water pump	LC-11	Wheelbase (Dimensions)	GI-37
Water temperature gauge	EL-76	Wide open & closed throttle position (CTP)	MA
Weatherstrip - See Exterior	BT-20	switch	EC-117
Wheel alignment (front)	FA-6	Width (Dimensions)	GI-37
Wheel alignment (rear)	RA-5	Window antenna	EM
Wheel balance	MA-19	Window, back	BT-34
Wheel bearing (front axle)	FA-6	Window, door	BT-10
Wheel bearing (rear)	RA-4	Window, rear	BT-34
Wheel hub and steering knuckle	FA-9	Windshield	BT-33
Wheel hub (front)	FA-9	Windshield washer - See Front washer	EL-106
		Windshield wiper - See Front wiper	EL-105
		Wiper and washer	EL-105
		Wiper, front	EL-105
		Withdrawal lever (clutch)	CL-8
		Wrist pin - See Piston pin inspection	EM-45

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX