


FUSE BLOCK — JUNCTION BOX (J/B)

Terminal Arrangement

Terminal Arrangement

NLEL0493

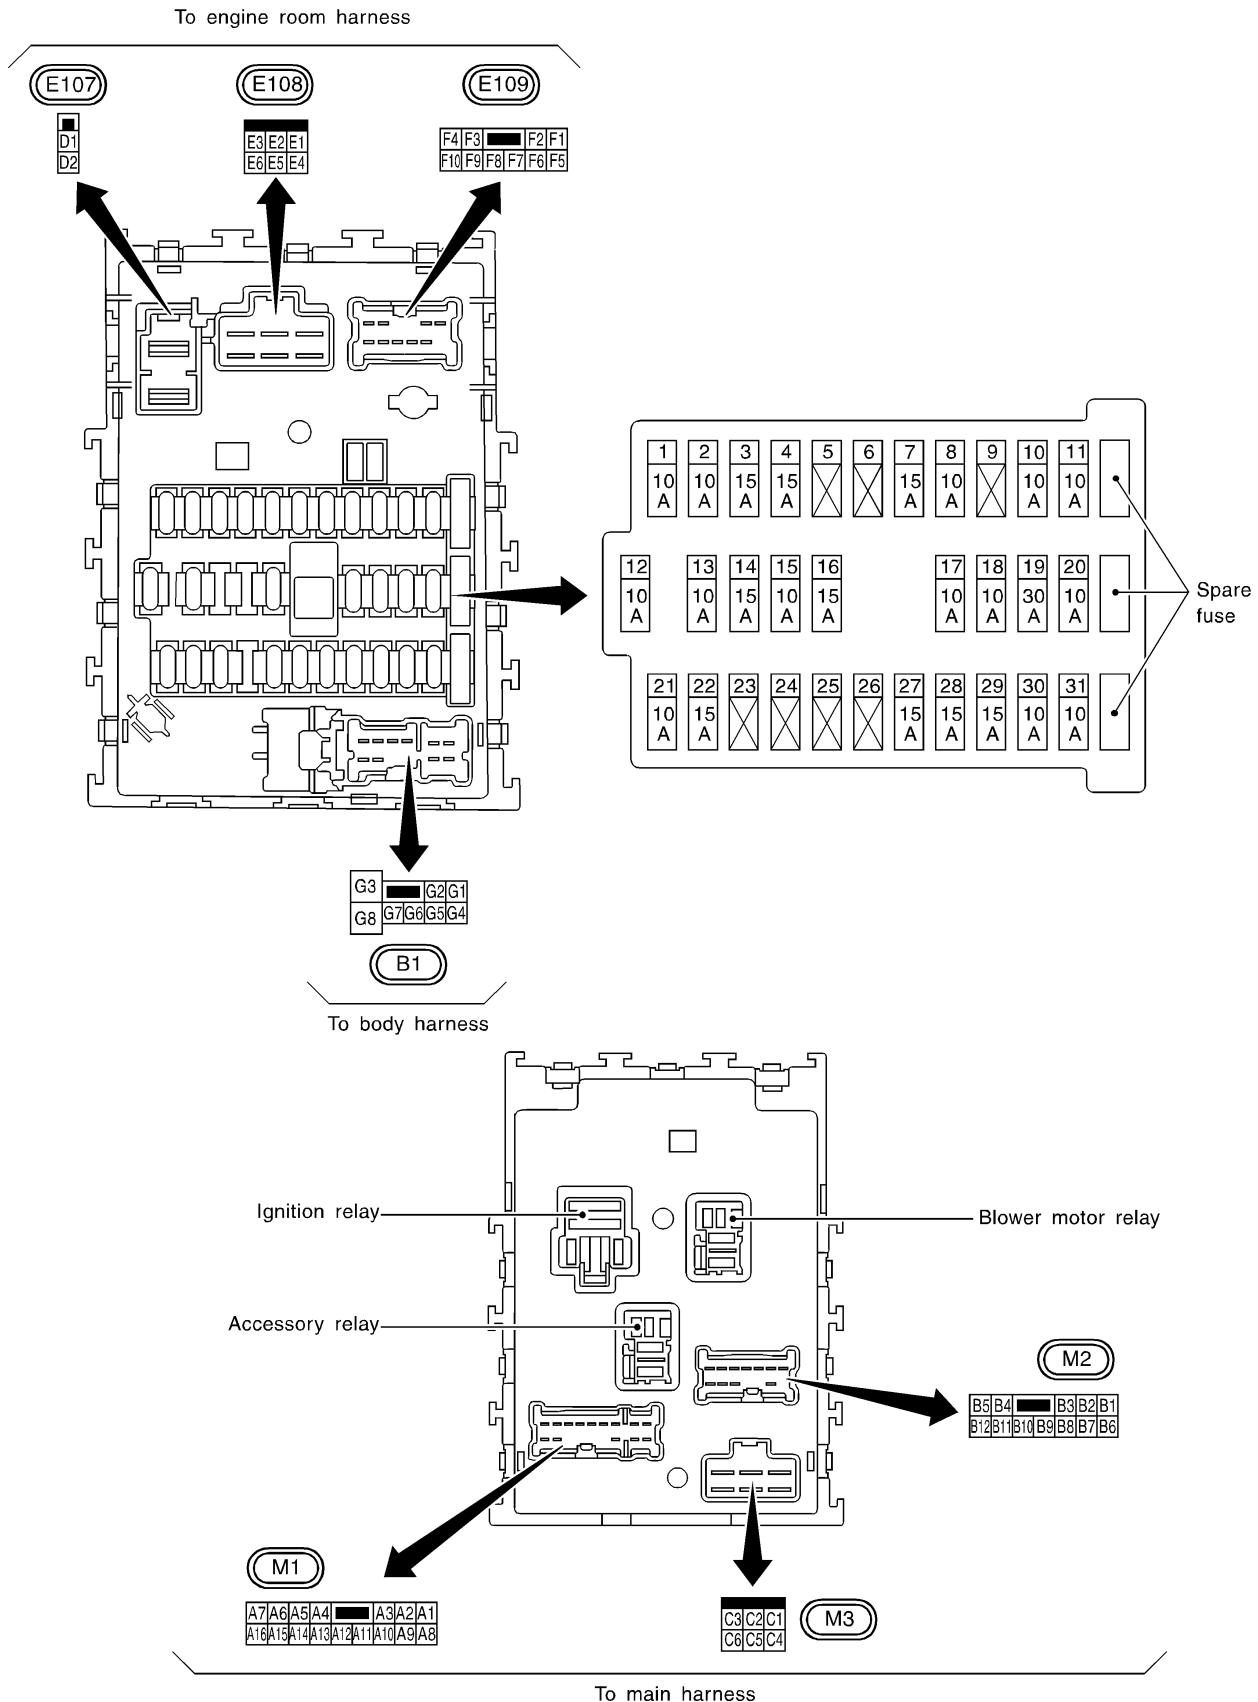


FUSE AND FUSIBLE LINK BOX

Terminal Arrangement

Terminal Arrangement

NLEL0494

- L** : LHD MODELS
- QG** : QG ENGINE
- YD** : YD ENGINE
- *1 30A: **QG**
- 40A: **YD**
- *2 60A: **YD**
- *3 30A: **L**
- *4 10A: **QG**
- *5 15A: **QG**
- *6 10A: **YD**
- *7 20A: **YD**
- *8 15A: **QG**

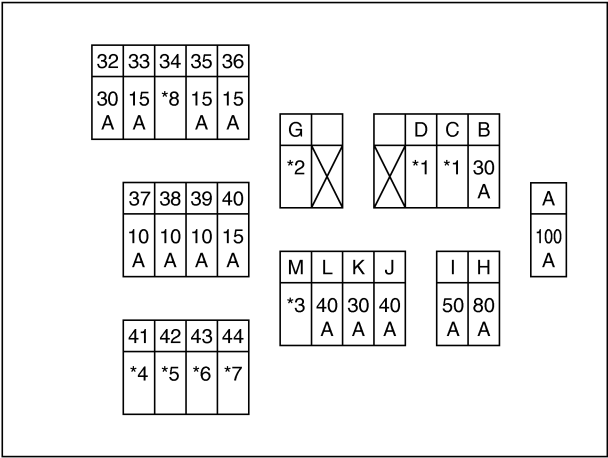


E90
FRONT ←


Terminal Arrangement

NLEL0495


ECM

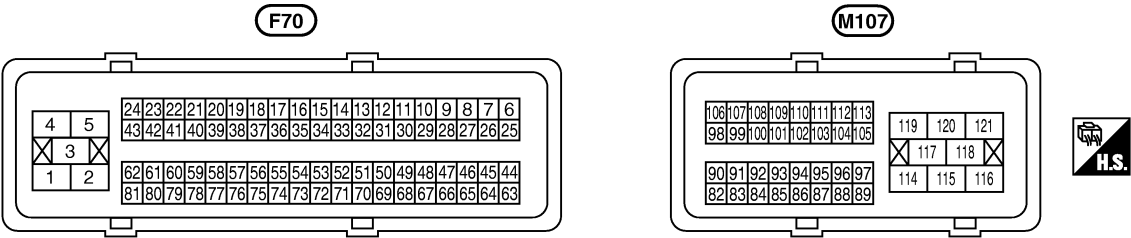


TCM (TRANSMISSION CONTROL MODULE)

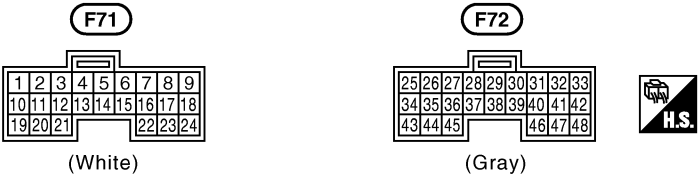


ABS ACTUATOR AND ELECTRIC UNIT

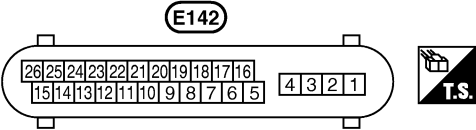


ESP ACTUATOR AND ELECTRIC UNIT

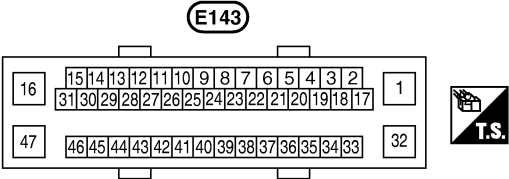

A/C AUTO AMP.

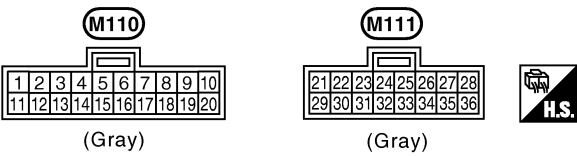

SMART ENTRANCE CONTROL UNIT

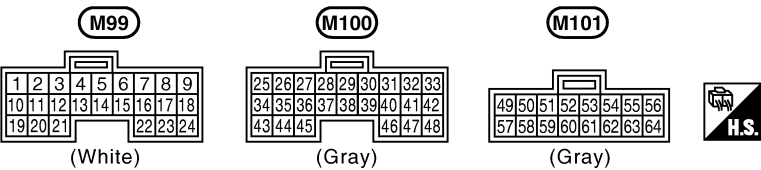

NOTES