

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

A/C air flowATC-27
A/C compressor clutch removal and
installationATC-135
A/C compressor precautionATC-7
A/C HFC134a (R134a) system
precautionATC-4
A/C HFC134a (R134a) system service
procedureATC-128
A/C HFC134a (R134a) system service
toolsATC-11
A/C HFC134a system service equip-
ment precautionATC-8
A/C lubricant (R134a)ATC-20
A/C lubrication oilATC-147
A/C operational checkATC-50
A/C performance test diagnosesATC-84
A/C reraATC-80
A/C self-diagnoses (auto A/C)ATC-41
A/C service data specificationATC-147
A/C system description (auto A/C)ATC-22
A/C trouble diagnoses (auto A/C)ATC-29
A/C, A - Wiring diagramATC-33
A/T fluid checkingAT-13
A/T fluid replacementAT-13
A/T fluid temperature sensorAT-124
A/T shift lock system - Wiring diagramAT-403
A/T shift lock systemAT-402
A/T trouble diagnosesAT-56, AT-257
A/T Wiring diagram AT - 1STAT-138
A/T Wiring diagram AT - 2NDAT-144
A/T Wiring diagram AT - 3RDAT-150
A/T Wiring diagram AT - 4THAT-156
A/T Wiring diagram AT - BA/FTSAT-199, AT-383
A/T Wiring diagram AT - ENG SSAT-132, AT-389
A/T Wiring diagram AT - FTSAT-121
A/T Wiring diagram AT - LPSVAT-168, AT-394
A/T Wiring diagram AT - MAINAT-344
A/T Wiring diagram AT - OVRCSVAT-191, AT-373
A/T Wiring diagram AT - PNP/SWAT-115
A/T Wiring diagram AT - SSV/AAT-175, AT-363
A/T Wiring diagram AT - SSV/BAT-180, AT-368
A/T Wiring diagram AT - TCVAT-163, AT-378
A/T Wiring diagram AT - TPSAT-186, AT-358
A/T Wiring diagram AT - VSS A/TAT-128, AT-349
A/T Wiring diagram AT - VSSMTRAT-205, AT-354
ABS (anti-lock brake system)BR-45
ABS - Wiring diagramBR-50
ABS sensor rotorAX-23
Accelerator control systemFE-3, 16
Accelerator pedal position (APP)
sensorEC-322, EC-328, EC-494, EC-722,
EC-728, EC-801, EC-1050, EC-1088,
EC-1162, EC-1167, EC-1209, EC-1343,
EC-1378, EC-1430, EC-1435, EC-1477
Accelerator pedal released position
learningEC-49, EC-576
Air bag disposalRS-29

Air bag precautionsGI-3
Air bagRS-16
Air bleeding (hydraulic clutch) (5MT)CL-10
Air bleeding (hydraulic clutch) (6MT)CL-8
Air bleeding for brake systemBR-11
Air cleaner and air duct(QG)EM-16
Air cleaner and air duct(YD22DDTi)EM-119
Air cleaner filter(QG)EM-16
Air cleaner filter(YD22DDTi)EM-119
Air conditioner cut
controlEC-42, EC-571, EC-952, EC-1266
Air flow meter - See Mass air flow
sensorEC-178, EC-654
Air mix door control linkage
adjustmentATC-64, ATC-122
Air mix. door motorATC-62, ATC-122
Air spoiler, rearBT-37
AlternatorSC-27
Ambient sensorATC-95, ATC-97, ATC-110
Angular tightening application(QG)EM-5
Angular tightening
application(YD22DDTi)EM-109
Antenna - See Power antennaEL-212
Anti-lock brake system - See ABSBR-45
Anti-lock brake system - Wiring
diagramBR-50
APP2PW - Wiring diagramEC-1169, EC-1437
APPS - Wiring diagramEC-1052, EC-1345
APPS1 - Wiring diagramEC-330, EC-730
APPS2 - Wiring diagramEC-496, EC-803,
EC-1090, EC-1380
APPS3 - Wiring diagramEC-324, EC-724,
EC-1211, EC-1479
Audio and A/C control removal and
installation - See Instrument panelBT-22
AudioEL-186
Auto air conditioner - Wiring diagramATC-33
Automatic amplifierATC-39, ATC-54
Automatic transaxle numberGI-40

B

Back-up lamp switch (M/T) (5MT)MT-17
Back-up lamp switch (M/T) (6MT)MT-12
Back-up lampEL-57
Ball joint (front)SU-13
Barometric pressure (BARO)
sensorEC-1225, EC-1493
Basic
inspectionEC-87, EC-595, EC-971, EC-1280
BatterySC-3
Baulk ring (M/T) (5MT)MT-26, 64
Baulk ring (M/T) (6MT)MT-18
Blower motorATC-68, ATC-73, ATC-116
Blower unitATC-115
Board-on liftGI-43
Body alignmentBT-64
BOOST - Wiring diagramEC-1103, EC-1393
Brake boosterBR-19
Brake fluid changeBR-10

ALPHABETICAL INDEX

Brake fluid level and line check	BR-10
Brake hydraulic line	BR-12
Brake pedal	BR-14
Brake switch ..EC-509, EC-811, EC-1234, EC-1514	
BRK/SW - Wiring diagram	EC-510, EC-812, EC-1235, EC-1515
Bulb specifications	EL-636
Bumper, front	BT-7
Bumper, rear	BT-10

C

Camshaft inspection(YD22DDTi).....	EM-163
Camshaft position sensor (CMPS)....	EC-1117, EC-1123, EC-1407, EC-1413
Camshaft position sensor (PHASE).....	EC-349, EC-745
Camshaft(QG).....	EM-35
Camshaft(YD22DDTi)	EM-162
CAN (Controller Area Network).....	AT-110, AT-307
CAN (Controller Area Network) ...	EL-459, 467, 493, 514, 535, 558, 576
CAN - Wiring diagram.....	EC-146, EC-652, EC-1012, EC-1319
CAN - Wiring diagram.....	EL-468, 494, 515, 536, 559, 577
CAN communication	EC-145, EC-651, EC-1011, EC-1318, AT-110, AT-307
CAN communication.....	EL-459, 467, 493, 514, 535, 558, 576
Canister-See EVAP canister	EC-549, EC-933
CHARGE - Wiring diagram	SC-25
Charging system	SC-24
CHIME - Wiring diagram.....	EL-127
CIGAR - Wiring diagram.....	EL-154
Cigarette lighter.....	EL-154
Circuit breaker.....	EL-22
CKPS - Wiring diagram.....	EC-1014, EC-1108, EC-1113, EC-1321, EC-1398, EC-1403
Closed loop control.....	EC-40, EC-569
Clutch cover (5MT)	CL-22
Clutch cover (6MT)	CL-16
Clutch disc (5MT)	CL-22
Clutch disc (6MT)	CL-16
Clutch master cylinder (5MT).....	CL-11
Clutch master cylinder (6MT)	CL-9
Clutch operating cylinder (5MT)	CL-14
Clutch operating cylinder (6MT).....	CL-11
Clutch pedal (5MT).....	CL-10
Clutch pedal (6MT).....	CL-5
Clutch release bearing (5MT).....	CL-17, 20
Clutch release bearing (6MT).....	CL-14
Clutch release mechanism (5MT)	CL-17, 20
Clutch release mechanism (6MT)	CL-14
Clutch withdrawal lever (5MT).....	CL-17, 20
Clutch withdrawal lever (6MT).....	CL-14
CMPS - Wiring diagram	EC-1014, EC-1119, EC-1125, EC-1321, EC-1409, EC-1415

Coil spring (front).....	SU-10	
Coil spring (rear).....	SU-23	
Collision diagnosis.....	RS-64	GI
Combination lamp, rear, removal and installation	BT-37	
Combination meter removal and instal- lation - See Instrument panel.....	BT-22	MA
Combination meter.....	EL-100	
Combination switch.....	EL-39	EM
Component Location (auto A/C).....	ATC-30	
Compression pressure(QG).....	EM-60	LC
Compression pressure(YD22DDTi)	EM-186	
Compressor clutch removal and installation.....	ATC-135	EC
Condenser	ATC-141	
Connecting rod bearing clearance(QG).....	EM-90	
Connecting rod bearing clearance(YD22DDTi)	EM-219	FE
Connecting rod bushing clearance(QG)	EM-90	
Connecting rod bushing clearance(YD22DDTi)	EM-214	CL
Connecting rod(QG).....	EM-90	
Connecting rod(YD22DDTi).....	EM-211, EM-215	MT
Console box - See Instrument panel.....	BT-22	
CONSULT for engine	EC-116, EC-624	
CONSULT-II for engine.....	EC-990, EC-1299	AT
Control lever (M/T) (5MT).....	MT-24	
Control unit.....	ATC-108	
Controller Area Network (CAN).....	AT-110, AT-307	AX
Controller Area Network (CAN)	EL-459, 467, 493, 514, 535, 558, 576	
Converter housing installation	AT-415, AT-512	SU
COOL/F - Wiring diagram.....	EC-476, EC-783, EC-1075, EC-1366	
Coolant mixture ratio.....	MA-22	BR
Cooling circuit (engine).....	LC-12, 33	
Cooling fan control system	LC-40	
Cooling fan motor	EC-483, EC-790, EC-1087, EC-1377	ST
Cooling fan relay.....	EC-1087, EC-1377	
Coupling sleeve (M/T) (5MT)	MT-26, 64	RS
Coupling sleeve (M/T) (6MT)	MT-18	
Crankcase ventilation system - See Positive crankcase ventilation....	EC-550, EC-934	BT
Crankcase ventilation system	EC-953, EC-1267	
Crankshaft position sensor (POS).....	EC-343, EC-738	HA
Crankshaft position sensor (TDC).....	EC-1106, EC-1111, EC-1396, EC-1401	
Crankshaft(QG)	EM-75	SC
Crankshaft(YD22DDTi)	EM-213	
Cylinder block boring(QG)	EM-92	
Cylinder block boring(QR)	EM-93	EL
Cylinder block boring(YD22DDTi).....	EM-217	
Cylinder block(QG)	EM-74	
Cylinder block(YD22DDTi).....	EM-201	
Cylinder head bolt tightening(QG)	EM-62	ID
Cylinder head bolt tightening(YD22DDTi)	EM-188	
Cylinder head gasket selection(YD22DDTi).....	EM-188	

ALPHABETICAL INDEX

Cylinder head(QG).....EM-60
Cylinder head(YD22DDTi)EM-186

D

Data link connector for Consult.....EC-118, EC-625,
EC-990, EC-1299
Data link
connector.....EC-545, EC-546, EC-929, EC-930
Daytime light system.....EL-45
DEF - Wiring diagramEL-178
Diagnosis sensor unit.....RS-21
Diagnostic trouble code (DTC) for OBD
systemEC-20, EC-59, EC-554, EC-581,
EC-938, EC-960, EC-1252
Diagnostic trouble code (DTC) inspec-
tion priority chart.....EC-83, EC-592,
EC-970, EC-1279
Diagnostic trouble code (DTC).....EC-1272
Differential gear (FF M/T) (5MT).....MT-26, 64, 78
Differential gear (FF M/T) (6MT)MT-21
DimensionsGI-42
Dome light - See Interior lampEL-77
Door glassBT-14
Door lockBT-18
Door mirrorBT-62
Door trimBT-31
Door, frontBT-13
Door, rearBT-13
Drive belt(QG).....EM-13
Drive belt(YD22DDTi).....EM-117
Drive shaft (front).....AX-10
Dropping resistor (A/T)AT-172, AT-398
DTC work supportEC-124
Dual pressure switch.....ATC-15, ATC-81, ATC-140
Duct and grilles.....ATC-126

E

ECM input/output signal.....EC-102, EC-610
ECM power supplyEC-139, EC-380, EC-645,
EC-755, EC-1003, EC-1310
ECM relay.....EC-1172, EC-1440
ECM/PW - Wiring diagram.....EC-381, EC-756
ECTS - Wiring diagram.....EC-190, EC-662,
EC-1047, EC-1340
EGR function.....EC-1133, EC-1142, EC-1502
EGR volume control
valveEC-1133, EC-1142, EC-1502
EGRC/V - Wiring
diagram.....EC-1136, EC-1145, EC-1504
Electric sun roofEL-252
Electric throttle control actuatorEC-389, EC-391,
EC-404, EC-759,
EC-762, EC-775
Electrical diagnoses.....GI-21
Electrical load signal circuitEC-540, EC-924
Electrical unitFoldout

Electrical units locationEL-594
Electronic ignition (EI) systemEC-41, EC-570
Engine compartment.....BT-65
Engine control circuit diagramEC-100, EC-608,
EC-982, EC-1291
Engine control component parts
locationEC-96, EC-604
Engine control module
(ECM)EC-377, EC-752, EC-1153,
EC-1155, EC-1421, EC-1423
Engine control system diagram and
chart.....EC-36, EC-37, EC-565, EC-566,
EC-947, EC-948, EC-1261, EC-1262
Engine coolant temperature sensor
(ECTS).....EC-188, EC-660, EC-1046, EC-1339
Engine fail-safe system.....EC-85, EC-593
Engine oil precautionsGI-7
Engine removal(QG)EM-70
Engine removal(YD22DDTi).....EM-197
Engine room - See Engine
compartment.....BT-65
Engine serial numberGI-40
ETC1 - Wiring diagramEC-392, EC-763
ETC2 - Wiring diagramEC-400, EC-771
ETC3 - Wiring diagramEC-405, EC-776
EVAP canister purge volume control
solenoid valve.....EC-365, EC-547,
EC-884, EC-933
EVAP canisterEC-549, EC-933
Evaporative emission (EVAP)
systemEC-547, EC-931
EvaporatorATC-141
Exhaust manifold(QG)EM-21
Exhaust manifold(YD22DDTi)EM-128
Exhaust system.....FE-11, 24
Expansion valveATC-142
Exterior.....BT-37

F

F/PUMP - Wiring diagram.....EC-531, EC-914,
EC-1194, EC-1462
Fan control amp.ATC-70, ATC-123
FIAR - Wiring diagramEC-1179, EC-1447
Final drive (FF M/T) (5MT)MT-48, 64, 78
Final drive (FF M/T) (6MT)MT-21, MT-55
Finisher, interior - See TrimBT-27
Finisher, trunk lid.....BT-30
Floor trimBT-27
Fluid temperature sensor (A/T).....AT-124
Fluids.....MA-20
Fluorescent leak detectorATC-143
Flywheel (clutch) (5MT)CL-22
Flywheel (clutch) (6MT)CL-16
Flywheel runout(QG).....EM-95
Flywheel runout(YD22DDTi)EM-221
Fog lamp, front, removal and
installationBT-7
Fog lamp, front.....EL-58
Fork rod (M/T) (5MT)MT-27, 65

ALPHABETICAL INDEX

Fork rod (M/T) (6MT)MT-59
 Freeze frame dataEC-60, EC-582, EC-961
 FRO2 - Wiring diagramEC-817, EC-845
 FRO2B1 - Wiring diagramEC-822, EC-852
 FRO2B2 - Wiring diagramEC-824, EC-854
 Front axleAX-2
 Front bumperBT-7
 Front combination lamp removal and
 installationBT-7
 Front disc brakeBR-27
 Front doorBT-13
 Front fog lamp removal and installationBT-7
 Front fog lampEL-58
 Front seat beltRS-5
 Front seatBT-45
 Front suspensionSU-2
 Front washerEL-141
 Front wiperEL-141
 FRPS - Wiring diagramEC-1061, EC-1354
 FTS - Wiring diagramEC-1056, EC-1349
 FUEL - Wiring diagramEC-283, EC-298
 Fuel check valveEC-547
 Fuel cut control (at no load high engine
 speed)EC-43, EC-572, EC-952, EC-1266
 Fuel filterEC-956, EC-1270
 Fuel gaugeEL-100
 Fuel injection control systemEC-950, EC-1264
 Fuel injection system (Bank 1)EC-288, EC-302
 Fuel injection system (Bank 2)EC-288, EC-302
 Fuel injection systemEC-281, EC-296
 Fuel injector adjustment
 resistorEC-1177, EC-1445
 Fuel injector and fuel tube(QG)EM-29
 Fuel injector and fuel tube(YD22DDTi)EM-147
 Fuel precautionsGI-8
 Fuel pressure checkEC-52, EC-579
 Fuel pressure releaseEC-52, EC-579
 Fuel pumpEC-530, EC-913, EC-956,
 EC-1188, EC-1270, EC-1456
 Fuel rail pressure sensorEC-1059, EC-1352
 Fuel systemFE-5, 17
 Fuel temperature sensorEC-1055, EC-1348
 FUELB1 - Wiring diagramEC-290, EC-304
 FUELB2 - Wiring diagramEC-291, EC-305
 Fuse blockFoldout
 FuseEL-22
 Fusible linkEL-22

G

Garage jack and safety standGI-44
 GaugesEL-100
 Gear components (M/T) (5MT)MT-26, 64
 Gear components (M/T) (6MT)MT-18
 Generator - See AlternatorSC-27
 Generic scan tool (GST)EC-127, EC-997
 GlassBT-14
 GLOW - Wiring
 diagramEC-1130, EC-1228, EC-1496
 Glow plug(YD22DDTi)EM-142

Glow plugEC-1227, EC-1495
 Glow relayEC-1129, EC-1227, EC-1495
 GreaseMA-20
 Ground distributionEL-23

H

H/LAMP - Wiring diagramEL-42
 Harness connectorEL-7
 Harness layoutEL-600
 Hazard warning lampEL-63
 Headlamp removal and installationBT-7
 Headlamp washerEL-151
 HeadlampEL-42
 Headlining - See Roof trimBT-34
 Heated oxygen sensor 1
 (bank 1)EC-199, EC-218, EC-237, EC-415,
 EC-427, EC-671, EC-686, EC-851
 Heated oxygen sensor 1
 (bank 2)EC-199, EC-218, EC-237, EC-415,
 EC-427, EC-671, EC-686, EC-851
 Heated oxygen sensor 1 heater
 (bank 1)EC-157, EC-821
 Heated oxygen sensor 1 heater
 (bank 2)EC-157, EC-821
 Heated oxygen sensor 1 heaterEC-151, EC-816
 Heated oxygen sensor 1EC-193, EC-208,
 EC-230, EC-409, EC-421,
 EC-665, EC-680, EC-844
 Heated oxygen sensor 2
 (bank 1)EC-253, EC-270, EC-441, EC-460,
 EC-701, EC-866
 Heated oxygen sensor 2
 (bank 2)EC-253, EC-270, EC-441, EC-460,
 EC-701, EC-866
 Heated oxygen sensor 2 heater
 (bank 1)EC-170, EC-833
 Heated oxygen sensor 2 heater
 (bank 2)EC-170, EC-833
 Heated oxygen sensor 2 heaterEC-165, EC-828
 Heated oxygen sensor 2EC-247, EC-262,
 EC-433, EC-452,
 EC-695, EC-860
 Heated seatEL-250
 Heater and cooling unit (Heater core)ATC-118
 Heater unit (heater core)ATC-125
 Height (Dimensions)GI-42
 HFC134a (R134a) system precautionATC-4
 HFC134a (R134a) system service
 procedureATC-128
 HFC134a (R134a) system service toolsATC-11
 HFC134a system service equipment
 precautionATC-8
 HO2S1 - Wiring diagramEC-195, EC-211, EC-233,
 EC-667, EC-682
 HO2S1H - Wiring diagramEC-153
 HO2S2 - Wiring diagramEC-249, EC-255,
 EC-265, EC-273, EC-436,
 EC-455, EC-463, EC-697
 HO2S2H - Wiring diagramEC-167

ALPHABETICAL INDEX

Hood.....BT-7
HORN - Wiring diagram.....EL-153
HornEL-153
How to erase DTC for OBD
system.....EC-68, EC-582, EC-961
How to erase DTCEC-1272
HSEAT - Wiring diagramEL-249, 250

I

IATS - Wiring
diagramEC-185, EC-1043, EC-1336
IATSEN - Wiring diagram.....EC-841
Identification plate.....GI-40
IdentificationATC-9, ATC-10
Idle air volume learningEC-49, EC-576
Idle speed.....EC-87, EC-595, EC-971, EC-1280
Ignition coil(QG).....EM-27
Ignition coilEC-514, EC-874
Ignition control systemEC-514, EC-874
Ignition timing.....EC-87, EC-595
IGNSYS - Wiring diagram.....EC-515, EC-875
ILL - Wiring diagramEL-71
IlluminationEL-70
In vehicle sensor.....ATC-97, ATC-99, ATC-111
INJE/PW - Wiring diagram.....EC-1217, EC-1485
INJECT - Wiring diagram.....EC-525, EC-908,
EC-1069, EC-1185,
EC-1222, EC-1361,
EC-1453, EC-1490
Injection nozzle(YD22DDTi).....EM-147
InjectorEC-524, EC-907
Input shaft (FF M/T) (5MT)MT-35, 64, 69
Input shaft (FF M/T) (6MT)MT-18, MT-37
Instrument panelBT-22
Intake air temperature sensor.....EC-184, EC-840,
EC-1042, EC-1335
Intake door control linkage adjustmentATC-66
Intake door motorATC-65, ATC-117
Intake manifold(QG).....EM-18
Intake manifold(YD22DDTi)EM-123
Intake sensorATC-103, ATC-113
Intake valve timing control solenoid
valveEC-384, EC-897
Intake valve timing
controlEC-148, EC-384, EC-897
Interior lamp on-off control.....EL-78
Interior lampEL-77
InteriorBT-27
ISO 15031-2 Terminology.....GI-49
ISO 15031-5 Mode 1 - 9.....EC-54, EC-958
IVC - Wiring diagram.....EC-386
IVC/V - Wiring diagramEC-899

J

Jacking points.....GI-44

Junction box (J/B).....Foldout

K

Keyless entry system - See Multi-re-
mote control system.....EL-322
Knock sensor (KS).....EC-339, EC-734
Knuckle spindleAX-5
KS - Wiring diagramEC-340, EC-735

L

LAN system circuit.....ATC-56
Length (Dimensions)GI-42
License lampEL-54
Lifting pointsGI-45
Line pressure solenoid valveAT-160
Line pressure test (A/T)AT-67, AT-267
Liquid gasket application(QG)EM-6
Liquid gasket application(YD22DDTi)EM-110
LOAD - Wiring diagramEC-541, EC-925
Location of electrical unitsEL-594
Lock, doorBT-18
Lubricant (R134a) A/C.....ATC-5, ATC-20
Lubricants.....MA-20
Lubrication circuit (engine)LC-4, 23
Lubrication oil A/CATC-147

M

M/T major overhaul (5MT)MT-25, 63
M/T oil replacement (5MT)MT-11, 12
M/T oil replacement (6MT)MT-10
M/T removal and installation (5MT)MT-19
M/T removal and installation (6MT)MT-15
MAFS - Wiring diagramEC-180, EC-656,
EC-1032, EC-1039,
EC-1332
Magnet clutchATC-74, ATC-135
MAIN - Wiring
diagramEC-139, EC-645, EC-1004, EC-1311
Main drive gear (M/T) (6MT)MT-18
Mainshaft (M/T) (5MT)MT-40, 64, 74
Mainshaft (M/T) (6MT)MT-18, MT-44
Malfunction indicator
(MI).....EC-70, EC-545, EC-584,
EC-929, EC-963, EC-1273
Manual transaxle number.....GI-41
Mass air flow sensor
(MAFS).....EC-178, EC-654, EC-1030,
EC-1037, EC-1330
Master cylinder (clutch) (5MT)CL-11
Master cylinder (clutch) (6MT)CL-9
MeterEL-100
MIL/DL - Wiring diagram.....EC-545, EC-546,
EC-929, EC-930,
EC-1250, EC-1528

ALPHABETICAL INDEX

MIRROR - Wiring diagram.....	EL-254
Mirror defogger	EL-177
Mirror, door.....	BT-62
Misfire	EC-334
Mode door control linkage	
adjustment	ATC-61, ATC-121
Mode door motor	ATC-59, ATC-121
Model variation	GI-38
Molding - See Exterior	BT-37
Multi-remote control system.....	EL-322
Multiport fuel injection (MFI)	
system	EC-39, EC-568
Multiport fuel injection precautions	GI-6

N

NATS (Nissan anti-theft system) precautions	GI-3
NATS (Nissan anti-theft system).....	EL-352
NATS - Wiring diagram.....	EL-354
NVH troubleshooting (AX)	AX-3
NVH troubleshooting (BR).....	BR-9
NVH troubleshooting (CL) (5MT).....	CL-4
NVH troubleshooting (M/T) (5MT).....	MT-10
NVH troubleshooting (ST).....	ST-5
NVH troubleshooting (SU).....	SU-17
NVIS (Nissan vehicle immobilizer system) precautions	GI-3

O

O2H1B1 - Wiring diagram.....	EC-159
O2H1B2 - Wiring diagram.....	EC-161
O2H2B1 - Wiring diagram.....	EC-172
O2H2B2 - Wiring diagram.....	EC-174
O2S1B1 - Wiring diagram.....	EC-201, EC-221, EC-240, EC-673, EC-688
O2S1B2 - Wiring diagram.....	EC-203, EC-223, EC-242, EC-675, EC-690
O2S2B1 - Wiring diagram.....	EC-255, EC-444, EC-703
O2S2B2 - Wiring diagram.....	EC-257, EC-275, EC-446, EC-465, EC-705
Oil pan (engine)(QG)	EM-25
Oil pan (engine)(YD22DDTi).....	EM-137
Oil pressure (engine).....	LC-5, 24
Oil pump (engine).....	LC-5, 24
Oil pump regulator valve (engine).....	LC-7, 26
On board diagnostic system.....	EC-54, EC-581, EC-958
Operating cylinder (clutch) (5MT).....	CL-14
Operating cylinder (clutch) (6MT)	CL-11
Overdrive control switch	AT-244, AT-342
Overheat.....	EC-473, EC-780, EC-1072, EC-1364
Oversize piston(QG)	EM-92

Oversize piston(YD22DDTi).....EM-217

P

Park/neutral position switch (A/T)	AT-113
Park/neutral position switch (M/T)	
(5MT)	MT-17
Park/neutral position switch (M/T)	
(6MT)	MT-12
Park/Neutral position switch	EC-504, EC-903, EC-1239, EC-1518
Parking brake control	BR-43
Parking lamp	EL-54
PCV (positive crankcase ventilation)	EC-550, EC-934
Periodic maintenance (except for Europe)	MA-4
Periodic maintenance (for Europe)	MA-8
PGC/V - Wiring diagram	EC-367
PHASE - Wiring diagram	EC-350, EC-747
Piston assembly(QG)	EM-92
Piston pin inspection(QG)	EM-88
Piston pin inspection(YD22DDTi)	EM-210
Piston ring inspection(QG)	EM-89
Piston ring inspection(YD22DDTi)	EM-214
Piston to bore clearance(QG)	EM-92, EM-93
Piston to bore clearance(YD22DDTi)	EM-217
PNP/SW - Wiring diagram	EC-506, EC-1240, EC-1519
PNPSW1 - Wiring diagram	EC-904
POS - Wiring diagram	EC-344, EC-740
POWER - Wiring diagram	EL-14
Power antenna	EL-212
Power door lock	EL-264
Power door mirror	EL-254
Power steering fluid level	ST-7
Power steering gear	ST-15
Power steering hydraulic pressure	ST-9
Power steering oil pressure switch	EC-1243, EC-1522
Power steering oil pump	ST-21
Power steering pressure (PSP) sensor	EC-373, EC-892
Power steering system bleeding	ST-8
Power supply routing	EL-11
Power window	EL-256
Precautions for Leak detection dye	ATC-9
Precautions (General)	GI-4
Pressure plate - See Clutch cover (5MT)	CL-22
Pressure plate - See Clutch cover (6MT)	CL-16
PRGVLV - Wirng diagram	EC-885
PS/SEN - Wiring diagram	EC-374, EC-893
PST/SW - Wiring diagram	EC-1244, EC-1523

ALPHABETICAL INDEX

Q

Quick-glow system.....EC-1227, EC-1495

R

RadiatorLC-16, 39
 Radio - See Audio.....EL-186
 Rear air spoilerBT-37
 Rear axle (disc brake type)AX-23
 Rear axleAX-21
 Rear bumperBT-10
 Rear combination lamp removal and
 installationBT-37
 Rear disc brakeBR-31, 39
 Rear doorBT-13
 Rear seat belt.....RS-7
 Rear seatBT-48
 Rear suspensionSU-17
 Rear window defogger.....EL-177
 Rear windowBT-58
 Refrigerant connection precautionATC-5
 Refrigerant discharging evacuating
 chargingATC-128
 Refrigerant general precaution.....ATC-4
 Refrigerant linesATC-128
 Refrigerant pressure sensorEC-535, EC-919,
 ATC-15, ATC-80,
 ATC-140
 Refrigeration cycle.....ATC-15
 Release bearing (clutch) (5MT).....CL-17, 20
 Release bearing (clutch) (6MT).....CL-14
 Removal and installation (A/T).....AT-414
 Reverse idler shaft (M/T) (5MT).....MT-25, 64
 Reverse idler shaft (M/T) (6MT)MT-18, MT-53
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T) (5MT)MT-17
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T) (6MT)MT-12
 Reverse main gear (M/T) (5MT)MT-26, 64
 Reverse main gear (M/T) (6MT)MT-18
 Road wheel sizeGI-42
 Rocker cover(QG).....EM-32
 Rocker cover(YD22DDTi)EM-160
 Roof trimBT-34
 Room lamp - See Interior lampEL-77
 RP/SEN - Wiring diagramEC-536, EC-920
 RRO2 - Wiring diagramEC-829, EC-861
 RRO2B1 - Wiring diagram.....EC-834, EC-867
 RRO2B2 - Wiring diagram.....EC-836, EC-869

S

S/LOCK - Wiring diagram.....EL-266, 293
 S/SIG - Wiring diagram.....EC-1247, EC-1526
 SCTC/V - Wiring diagram.....EC-1159, EC-1190,
 EC-1196, EC-1201,
 EC-1206, EC-1427,
 EC-1458, EC-1464,
 EC-1469, EC-1474
 Seal - See ExteriorBT-37
 Seat belt pre-tensioner disposalRS-29
 Seat belt pre-tensionerRS-3
 Seat belt, front.....RS-5
 Seat belt, rear.....RS-7
 Seat, frontBT-45
 Seat, rearBT-48
 SEN/PW - Wiring diagramEC-501, EC-808
 SHIFT - Wiring diagramAT-403
 Shift control components (M/T) (5MT)MT-27, 65
 Shift control components (M/T) (6MT)MT-20
 Shift fork (M/T) (5MT)MT-27, 65
 Shift fork (M/T) (6MT).....MT-59
 Shift lever (5MT).....MT-24
 Shift lever (6MT).....MT-13
 Shift lock systemAT-402
 Shift schedule.....AT-519
 Shift solenoid valve A
 (A/T)AT-135, AT-140, AT-152
 Shift solenoid valve B (A/T)AT-135, AT-140
 Shock absorber (front).....SU-11
 Shock absorber (rear)SU-23
 Side air bagRS-28
 Side trim.....BT-27
 Spark plug(QG).....EM-28
 Specification valueEC-134, EC-640
 Speedometer.....EL-100
 Spiral cable.....RS-24
 Spring (Wheelarch) heightSU-6
 SROOF - Wiring diagramEL-252
 SRS - See Supplemental Restraint
 SystemRS-16
 Stabilizer bar (front).....SU-12
 Stall test (A/T)AT-64, AT-264
 Standardized relayEL-9
 START - Wiring diagramSC-14
 Start signalEC-1247, EC-1526
 StarterSC-17
 Starting system.....SC-13
 Steering linkageST-15
 Steering switch.....EL-41
 Steering wheel and columnST-10
 Steering wheel playST-6
 Steering wheel turning force.....ST-8
 Stop lamp switch.....EC-509, EC-811
 Stop lamp.....EL-56
 STOP/L - Wiring diagram.....EL-56
 Striking rod (M/T) (5MT).....MT-27, 65
 Striking rod (M/T) (6MT).....MT-20
 Strut (front) (6MT).....CL-5

ALPHABETICAL INDEX

Strut (front)	SU-10
Strut (rear)	SU-22
Sub-gear (M/T) (5MT)	MT-26
Suction control valve	EC-1157, EC-1199, EC-1204, EC-1425, EC-1467, EC-1472
Sunload sensor.....	ATC-100, ATC-102, ATC-112
Sunroof, electric	EL-252
Sunroof.....	BT-50
Super lock	EL-290
Supplemental Restraint System	RS-16
Symbols and abbreviations	GI-9
Symptom matrix chart.....	EC-92, EC-600
Synchronizer (M/T) (5MT).....	MT-26, 64
Synchronizer (M/T) (6MT).....	MT-18
System readiness test (SRT) code	EC-61

T

Tachometer	EL-100
Tail lamp.....	EL-54
TC boost control solenoid valve.....	EC-1016, EC-1101, EC-1391, EC-1510
TCC/V - Wiring diagram.....	EC-1018, EC-1511
TCM circuit diagram	AT-15
TCM inspection table	AT-107, AT-304
Thermostat.....	LC-15, 37
Three way catalyst function (Bank 1)	EC-360
Three way catalyst function (Bank 2)	EC-360
Three way catalyst function	EC-355
Three way catalyst precautions.....	GI-6
Throttle body(QG)	EM-20
Throttle control motor relay.....	EC-398, EC-769
Throttle position sensor (TPS).....	EC-310, EC-316, EC-484, EC-490, EC-492, EC-710, EC-716, EC-791, EC-797, EC-799
Throttle position switch	AT-245, AT-343
Throttle valve closed position learning.....	EC-49, EC-576
Throwout bearing - See Clutch release bearing (5MT)	CL-17, 20
Throwout bearing - See Clutch release bearing (6MT).....	CL-14
Tie-rod ball joints.....	ST-18
Tie-rod	ST-15
Tightening torque of standard bolts.....	GI-48
Timing chain(QG)	EM-50
Timing chain(YD22DDTi).....	EM-171, EM-176
Tire size	GI-42
Torque converter installation.....	AT-415, AT-512
Tow truck towing.....	GI-46
TPS1 - Wiring diagram	EC-318, EC-718
TPS2 - Wiring diagram	EC-486, EC-793
TPS3 - Wiring diagram	EC-312, EC-712
Transmission case (M/T) (5MT)	MT-25, 63
Transmission case (M/T) (6MT)	MT-17
Tread-FR&RR (Dimensions).....	GI-42
Trim	BT-27

Trouble diagnoses	GI-31	
Trunk lid finisher	BT-30	
Trunk lid opener - See Trunk lid	BT-10	GI
Trunk lid trim	BT-30	
Trunk lid	BT-10	
Trunk room trim.....	BT-30	MA
Turbocharger charge air cooler(YD22DDTi)	EM-121	
Turbocharger(YD22DDTi)	EM-128	EM
TURN - Wiring diagram	EL-65	
Turn signal lamp	EL-63	
Two trip detection logic	EC-54, EC-581	LC
Two-pole lift	GI-45	

U

Under bodyBT-67

V

Vacuum hose (brake system).....	BR-21	MT
Vacuum hose drawing (Engine control).....	EC-38, EC-567	AT
Vacuum pump(YD22DDTi).....	EM-143	AX
Vacuum pump.....	BR-23	SU
Valve clearance(YD22DDTi)	EM-167	BR
Valve guide(QG).....	EM-66	ST
Valve guide(YD22DDTi)	EM-193	DC
Valve lifter(YD22DDTi)	EM-165	
Valve lifter.....	EM-44	
Valve seat(QG).....	EM-67	
Valve seat(YD22DDTi)	EM-194	
Valve spring(QG).....	EM-69	
Valve spring(YD22DDTi)	EM-196	
Vehicle speed sensor (VSS).....	EC-371, EC-891	
Ventilation air filter	ATC-124	
Viscosity number (SAE)	MA-21	
Viscous coupling (FF M/T) (5MT)	MT-64	

W

WARN - Wiring diagram.....	EL-116	
Warning chime	EL-125	HA
Warning lamps	EL-115	
Washer, front.....	EL-141	
Water pump	LC-14, 35	SC
Water temperature gauge	EL-100	
Weatherstrip - See Exterior	BT-37	
Wheel alignment (rear).....	SU-19	EL
Wheel bearing (front).....	AX-3	
Wheel bearing (rear)	AX-22	
Wheel hub (front).....	AX-5	
Wheel hub (rear)	AX-23	ID
Wheel sensors (ABS).....	BR-79	
Wheelarch height	SU-6	
Wheelbase (Dimensions)	GI-42	
Width (Dimensions)	GI-42	

ALPHABETICAL INDEX

Window, rearBT-58
Windshield.....BT-58
WIP/R - Wiring diagramEL-147
WIPER - Wiring diagramEL-143
Wiper, front.....EL-141
Wiring Diagram (Cell code) list.....EL-637

Wiring diagram - AT - LAN.....AT-195, AT-400
Wiring diagramsGI-11
Withdrawal lever (clutch) (5MT)CL-17, 20
Withdrawal lever (clutch) (6MT).....CL-14