

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

4LO switch	TF-59
4WD - Wiring diagram	TF-24 , TF-31
4WD shift switch	TF-63
4WD system description	TF-15
4WD system diagram	TF-18

A

A/C air flow	MTC-26
A/C compressor clutch removal and installation .	MTC-99
A/C compressor mounting	MTC-98
A/C compressor precaution	MTC-9
A/C compressor special service tool	MTC-12
A/C control operation (manual A/C)	MTC-25
A/C evaporator	MTC-105
A/C HFC134a (R134a) system identification	MTC-5
A/C HFC134a (R134a) system precaution	MTC-4
A/C HFC134a (R134a) system service procedure	MTC-95
A/C HFC134a (R134a) system service tools ..	MTC-12
A/C HFC134a system service equipment precaution ...	MTC-9
A/C lubricant (R134a)	MTC-19
A/C lubrication oil	MTC-19
A/C operational check	MTC-39
A/C service data specification	MTC-110
A/C trouble diagnoses (manual A/C)	MTC-28
A/C, M - Wiring diagram	MTC-34
A/T fluid checking	AT-14 , AT-54 , MA-22
A/T fluid cooler cleaning	AT-15
A/T fluid replacement	AT-13 , MA-24
A/T fluid temperature sensor	AT-134
A/T IND - Wiring diagram	DI-38
A/T indicator	DI-38
A/T self-diagnoses	AT-102
A/T shift lock system	AT-224
A/T trouble diagnoses	AT-44
ABS - Wiring diagram	BRC-17 , BRC-79
ABS (anti-lock brake system)	BRC-8 , BRC-69
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor .	EC-591 , EC-597 , EC-611
Accelerator pedal released position learning	EC-78
AF1B1-Wiring diagram	EC-232 , EC-241 , EC-250 , EC-260 , EC-620
AF1B2-Wiring diagram	EC-234 , EC-243 , EC-252 , EC-262 , EC-622
AF1HB1-Wiring diagram	EC-166
AF1HB2-Wiring diagram	EC-168
Aiming adjustment	LT-25 , LT-48
Air bag	SRS-3
Air bleeding (hydraulic clutch)	CL-8
Air cleaner and air duct	EM-16
Air cleaner filter	EM-16
Air cleaner filter replacement	MA-17
Air conditioner cut control	EC-28

Air flow meter - See Mass air flow sensor	EC-188 , EC-197
Air fuel ratio sensor 1 ..	EC-229 , EC-239 , EC-248 , EC-257 , EC-618
Air fuel ratio sensor 1 heater	EC-164
Air mix. door motor	MTC-48
Angular tightening application	EM-5
Antenna	AV-53
Anti-lock brake system - Wiring diagram	BRC-17 , BRC-79
APPS1 - Wiring diagram	EC-593
APPS2 - Wiring diagram	EC-599
APPS3 - Wiring diagram	EC-613
ASC/BS - Wiring diagram	EC-548
ASC/SW - Wiring diagram	EC-541
ASCB OF - Wiring diagram	EC-631
ASCD	EC-29
ASCD (automatic speed control device)	ACS-2
ASCIND - Wiring diagram	EC-645
ATP switch	TF-87 , TF-89
Audio	AV-4
AUDIO - Wiring diagram	AV-8
Automatic transmission number	GI-52

B

B/COMP - Wiring diagram	DI-55
Back door trim	EI-24
BACK/L - Wiring diagram	LT-78
Back-up lamp	LT-78
Back-up lamp switch (M/T)	MT-13 , MT-22
Ball joint (front)	FSU-15
Basic inspection	EC-71
Battery	SC-4
Battery current sensor .	EC-511 , EC-518 , EC-525 , EC-532
Battery/Starting/Charging System Tester	SC-6 , SC-17 , SC-26
Baulk ring (M/T)	MT-24
BCM (Body control module)	BCS-3
Block heater	EM-108
Blower motor	MTC-56 , MTC-82
Board computer	DI-54
Body alignment	BL-137
Body component parts	BL-124
Body construction	BL-136
Body exterior paint color	BL-123
Body mounting	BL-122
Body repair	BL-123
Body sealing	BL-133
Boring/horning cylinder block	EM-129
Brake booster	BR-16
Brake fluid level	MA-30
Brake hydraulic line	BR-11
Brake inspection	MA-31
Brake lines and cables inspection	MA-30
Brake master cylinder	BR-14
Brake switch	EC-567
BRK/SW - Wiring diagram	EC-568

ALPHABETICAL INDEX

Bulb specifications [LT-148](#)
 Bumper, front [EI-14](#)
 Bumper, rear [EI-15](#)

C

Cabin air filter [MTC-83](#)
 Camshaft [EM-75](#)
 Camshaft inspection [EM-77](#)
 Camshaft position sensor (PHASE) [EC-368](#)
 CAN - Wiring diagram [EC-156](#), [AT-105](#), [LAN-23](#), [LAN-36](#), [LAN-48](#), [LAN-62](#), [LAN-75](#), [LAN-89](#), [LAN-104](#)
 CAN communication [EC-155](#), [EC-158](#)
 Canister-See EVAP canister [EC-35](#)
 CHARGE - Wiring diagram [SC-25](#)
 Charging system [SC-23](#)
 Chassis and body maintenance [MA-21](#)
 Chassis and body maintenanceSchedule 1 [MA-8](#)
 Chassis and body maintenanceSchedule 2 [MA-10](#)
 CHIME - Wiring diagram [DI-42](#)
 Circuit breaker [PG-17](#)
 Closed loop control [EC-25](#)
 Clutch cover [CL-16](#)
 Clutch disc [CL-16](#)
 Clutch master cylinder [CL-9](#)
 Clutch operating cylinder [CL-11](#)
 Clutch pedal [CL-6](#)
 Clutch release bearing [CL-14](#)
 Clutch release mechanism [CL-14](#)
 Clutch withdrawal lever [CL-14](#)
 Coil spring (front) [FSU-10](#)
 Collision diagnosis [SRS-57](#)
 Combination lamp, rear, removal and installation [LT-96](#)
 Combination meter [DI-4](#)
 Combination switch [LT-67](#)
 COMBSW - Wiring diagram [LT-67](#)
 Component Location (manual A/C) [MTC-31](#)
 Compression pressure [EM-93](#)
 Compressor clutch removal and installation .. [MTC-99](#)
 Compressor mounting [MTC-98](#)
 Compressor precaution [MTC-9](#)
 Compressor special service tool [MTC-12](#)
 Condenser [MTC-103](#)
 Connecting rod [EM-126](#)
 Connecting rod bearing clearance [EM-130](#)
 Connecting rod bushing clearance [EM-126](#)
 Console box - See Instrument panel [IP-10](#)
 CONSULT for ABS [BRC-29](#), [BRC-92](#)
 CONSULT for TCS [BRC-29](#), [BRC-92](#)
 CONSULT for VDC [BRC-29](#), [BRC-92](#)
 CONSULT general information [GI-38](#)
 Control units (terminal arrangement) [PG-80](#)
 Control valve (A/T) [AT-38](#)
 Converter housing installation [AT-250](#), [AT-253](#)
 COOL/F - Wiring diagram [EC-500](#)
 Coolant mixture ratio [MA-12](#)
 Coolant replacement [CO-11](#), [MA-13](#)
 Cooling circuit (engine) [CO-8](#)
 Cooling fan [CO-18](#)

Cooling fan motor [EC-506](#)
 Cooling unit (A/C evaporator) [MTC-85](#), [MTC-105](#)
 Corrosion protection [BL-130](#)
 Counter gear (M/T) [MT-24](#)
 Coupling sleeve (M/T) [MT-24](#)
 Crankcase ventilation system - See Positive crankcase ventilation [EC-44](#)
 Crankshaft [EM-130](#)
 Crankshaft position sensor (POS) [EC-361](#)
 Crash zone sensor [SRS-52](#)
 CUR/SE - Wiring diagram ... [EC-513](#), [EC-520](#), [EC-527](#), [EC-534](#)
 Cylinder block [EM-108](#)
 Cylinder head [EM-93](#)
 Cylinder head bolt tightening [EM-96](#)

D

D/LOCK - Wiring diagram [BL-20](#)
 Daytime light system [LT-30](#)
 Daytime running light - See Daytime light system .. [LT-30](#)
 DEF - Wiring diagram [GW-66](#)
 Diagnosis sensor unit [SRS-55](#)
 Diagnostic trouble code (DTC) for OBD system .. [EC-8](#)
 Diagnostic trouble code (DTC) inspection priority chart [EC-88](#)
 Differential gear oil replacement [MA-27](#)
 DIFLOC - Wiring diagram [RFD-84](#)
 Dimensions [GI-53](#)
 Direct clutch solenoid valve [AT-154](#), [AT-156](#)
 Dome light - See Interior lamp [LT-106](#)
 Door glass [GW-51](#), [GW-55](#)
 Door lock [BL-97](#)
 Door trim [EI-24](#)
 Door, front [BL-92](#), [GW-51](#)
 Door, rear [BL-92](#), [GW-55](#)
 Drive belt [EM-14](#)
 Drive chain (Transfer) [TF-112](#), [TF-114](#), [TF-120](#)
 Driver air bag [SRS-42](#)
 DTC work support [EC-125](#)
 DTRL - Wiring diagram [LT-35](#)
 Duct and grilles [MTC-92](#)

E

ECM input/output signal [EC-105](#)
 ECM power supply [EC-147](#), [EC-475](#)
 ECM/PW - Wiring diagram [EC-476](#)
 ECTS - Wiring diagram [EC-211](#)
 Electric throttle control actuator .. [EM-19](#), [EC-578](#), [EC-589](#)
 Electrical load signal circuit [EC-647](#)
 Electrical units location [PG-73](#)
 Electronic ignition (EI) system [EC-26](#)
 Engine control circuit diagram [EC-103](#)
 Engine control component parts location [EC-95](#)
 Engine control module (ECM) [EC-479](#)
 Engine control system diagram [EC-23](#)

ALPHABETICAL INDEX

Engine coolant temperature sensor (ECTS) ... [EC-209](#), [EC-221](#)
 Engine fail-safe system [EC-90](#)
 Engine oil [LU-6](#)
 Engine oil filter replacement [MA-18](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacement [MA-17](#)
 Engine removal [EM-105](#)
 Engine room cover [EM-13](#)
 Engine serial number [GI-52](#)
 ETC1 - Wiring diagram [EC-579](#)
 ETC2 - Wiring diagram [EC-574](#)
 ETC3 - Wiring diagram [EC-585](#)
 EVAP canister [EC-35](#)
 EVAP canister purge volume control solenoid valve ... [EC-405](#)
 EVAP canister vent control valve [EC-412](#), [EC-419](#)
 EVAP control system (small leak) diagnosis .. [EC-389](#), [EC-442](#)
 EVAP control system pressure sensor [EC-425](#), [EC-428](#), [EC-434](#)
 EVAP control system purge flow monitoring diagnosis [EC-383](#)
 EVAP vapor lines inspection [MA-20](#)
 Evaporative emission (EVAP) system [EC-32](#)
 Evaporator [MTC-105](#)
 Exhaust manifold [EM-22](#)
 Exhaust system [EX-4](#)
 Exhaust system inspection [EX-4](#)
 Expansion valve [MTC-106](#)
 Exterior lamp [LT-30](#)

F

F/FOG - Wiring diagram [LT-44](#)
 F/PUMP - Wiring diagram [EC-657](#)
 Final drive pre-inspection [FFD-17](#), [RFD-17](#)
 Final drive removal and installation . [RFD-14](#), [RFD-49](#), [RFD-120](#)
 Flow charts [GI-28](#)
 Fluid temperature sensor (A/T) [AT-134](#)
 Fluids [MA-11](#)
 Fluorescent leak detector [MTC-106](#)
 Flywheel (clutch) [CL-16](#)
 Flywheel runout [EM-133](#)
 Fog lamp, front [LT-42](#)
 Fork rod (M/T) [MT-26](#)
 Freeze frame data [EC-52](#)
 Front brake solenoid valve [AT-150](#), [AT-152](#)
 Front bumper [EI-14](#)
 Front case (Transfer) [TF-112](#), [TF-114](#), [TF-120](#)
 Front door [BL-92](#), [BL-97](#), [GW-51](#)
 Front Door Trim [EI-24](#)
 Front drive shaft (Transfer) .. [TF-112](#), [TF-114](#), [TF-120](#), [TF-133](#)
 Front final drive removal and installation (4WD) .. [FFD-14](#)
 Front fog lamp [LT-42](#)
 Front passenger air bag [SRS-46](#)

Front seat [SE-10](#)
 Front seat belt [SB-3](#)
 Front seat belt pre-tensioner [SRS-3](#), [SRS-54](#)
 Front washer [WW-4](#)
 Front wiper [WW-4](#)
 FTS - Wiring diagram [AT-135](#)
 FTTS - Wiring diagram [EC-333](#), [EC-337](#)
 Fuel cut control (at no load high engine speed) [EC-27](#)
 Fuel filter replacement [FL-6](#)
 Fuel gauge [DI-4](#)
 Fuel injection system (Bank 1) [EC-307](#), [EC-319](#)
 Fuel injection system (Bank 2) [EC-307](#), [EC-319](#)
 Fuel injector and fuel tube [EM-35](#)
 Fuel level sensor [EC-458](#), [EC-460](#), [EC-462](#)
 Fuel line inspection [FL-4](#)
 Fuel pressure check [EC-80](#)
 Fuel pressure release [EC-80](#)
 Fuel pump [EC-656](#)
 Fuel pump and gauge [FL-6](#)
 Fuel system [FL-4](#)
 Fuel tank [FL-12](#)
 Fuel tank temperature sensor [EC-331](#), [EC-336](#)
 Fuel tank vacuum relief valve [EC-35](#)
 FUEL B1 - Wiring diagram [EC-309](#), [EC-321](#)
 FUEL B2 - Wiring diagram [EC-311](#), [EC-323](#)
 Fuse [PG-17](#), [PG-86](#)
 Fuse and fusible link box [PG-86](#)
 Fuse block [PG-85](#)
 Fusible link [PG-17](#), [PG-86](#)

G

Garage jack and safety stand [GI-43](#)
 Gauges [DI-4](#)
 Gear components (M/T) [MT-24](#)
 Generator [SC-23](#)
 Generic scan tool (GST) [EC-127](#)
 Glass [GW-11](#), [GW-51](#), [GW-55](#)
 Grease [MA-11](#)
 Ground distribution [PG-35](#)

H

H/LAMP - Wiring diagram [LT-8](#)
 Handling precautions for plastics [BL-151](#)
 Harness connector [PG-76](#)
 Harness layout [PG-45](#)
 Hazard warning lamp [LT-50](#)
 Headlamp [LT-5](#)
 Heated oxygen sensor 2 (bank 1) [EC-269](#), [EC-281](#), [EC-295](#)
 Heated oxygen sensor 2 (bank 2) [EC-269](#), [EC-281](#), [EC-295](#)
 Heated oxygen sensor 2 heater (bank 1) [EC-172](#)
 Heated oxygen sensor 2 heater (bank 2) [EC-172](#)
 Heater and cooling unit (Heater core) .. [MTC-85](#), [MTC-87](#)
 Heater unit (heater core) [MTC-85](#), [MTC-87](#)
 Height (Dimensions) [GI-53](#)

ALPHABETICAL INDEX

HFC134a (R134a) system identification [MTC-5](#)
HFC134a (R134a) system precaution [MTC-4](#)
HFC134a (R134a) system service procedure [MTC-95](#)
HFC134a (R134a) system service tools [MTC-12](#)
HFC134a system service equipment precaution [MTC-9](#)
High and low reverse clutch solenoid valve [AT-158](#),
[AT-160](#)
Horn [WW-50](#)
HORN - Wiring diagram [WW-50](#)
How to erase DTC for OBD system [EC-61](#)

I

IATS - Wiring diagram [EC-206](#)
Identification plate [GI-51](#)
Idle air volume learning [EC-78](#)
Idle speed control (ISC) [EC-466](#), [EC-468](#)
Ignition coil [EM-32](#), [EC-662](#)
Ignition control system [EC-662](#)
Ignition key hole illumination [LT-106](#)
IGNSYS - Wiring diagram [EC-663](#)
ILL - Wiring diagram [LT-139](#)
Illumination [LT-134](#)
Illumination control [LT-134](#), [LT-147](#)
In-cabin Microfilter [MTC-83](#)
INJECT - Wiring diagram [EC-650](#)
Injector [EC-649](#)
Input clutch solenoid valve [AT-146](#), [AT-148](#)
Instrument panel [IP-10](#)
INT/L - Wiring diagram [LT-114](#)
Intake air temperature sensor [EC-204](#), [EC-224](#)
Intake door control linkage adjustment [MTC-53](#)
Intake door motor [MTC-52](#), [MTC-88](#)
Intake manifold [EM-20](#)
Intake manifold collector [EM-17](#)
Intake sensor [MTC-78](#), [MTC-81](#)
Intake valve timing control (Bank 1) [EC-160](#)
Intake valve timing control (Bank 2) [EC-160](#)
Intake valve timing control solenoid valve (Bank 1) [EC-181](#)
Intake valve timing control solenoid valve (Bank 2) [EC-181](#)
Interior [EI-27](#)
Interior lamp [LT-106](#)
Interior lamp on-off control [LT-106](#)
Internal gear (Transfer) [TF-112](#), [TF-114](#), [TF-120](#)
IPDM (Intelligent power distribution module engine room) [PG-18](#)
IVCB1 - Wiring diagram [EC-182](#)
IVCB2 - Wiring diagram [EC-184](#)
IVIS (Infiniti vehicle immobilizer system) precautions .. [GI-3](#)

J

Jacking points [GI-43](#)
Junction box (J/B) [PG-85](#)

K

Key illumination [LT-106](#)
KEYLES - Wiring diagram [BL-47](#)
Knock sensor (KS) [EC-356](#)
KS - Wiring diagram [EC-357](#)

L

Leaf spring (rear) [RSU-8](#)
Length (Dimensions) [GI-53](#)
License lamp [LT-81](#)
Lifting points [GI-44](#)
Line pressure solenoid valve [AT-129](#)
Line pressure test (A/T) [AT-55](#)
Liquid gasket application [EM-5](#), [LU-2](#), [CO-2](#)
Location of electrical units [PG-73](#)
Low coast brake solenoid valve [AT-162](#), [AT-164](#)
Low tire pressure warning system [WT-8](#)
Low tire pressure warning system - trouble diagnoses [WT-11](#)
Low tire pressure warning system - Wiring diagram [WT-11](#)
Lubricant (R134a) A/C [MTC-19](#)
Lubricants [MA-11](#)
Lubrication circuit (engine) [LU-4](#)
Lubrication oil A/C [MTC-19](#)
Lubrication-locks, hinges and hood latches [MA-33](#)
Luggage room lamp [LT-106](#)

M

MAFS - Wiring diagram [EC-191](#), [EC-199](#)
Magnet clutch [MTC-64](#), [MTC-99](#)
MAIN - Wiring diagram [EC-147](#), [AT-174](#)
Main drive gear (M/T) [MT-24](#)
Mainshaft (M/T) [MT-24](#)
Mainshaft (Transfer) [TF-112](#), [TF-114](#), [TF-120](#)
Maintenance (engine)Schedule 1 [MA-7](#)
Maintenance (engine)Schedule 2 [MA-9](#)
Major overhaul (Final drive) [FFD-16](#), [RFD-15](#), [RFD-50](#),
[RFD-121](#)
Major overhaul (Transfer) [TF-112](#)
Malfunction indicator lamp (MIL) [EC-62](#)
Map lamp [LT-106](#)
Mass air flow sensor (MAFS) [EC-188](#), [EC-197](#)
Master cylinder (clutch) [CL-9](#)
Meter [DI-4](#)
METER - Wiring diagram [DI-9](#)
MIL data link connectors circuit [EC-689](#)
MIL/DL - Wiring diagram [EC-689](#)
MIRROR - Wiring diagram [GW-81](#)
Misfire [EC-347](#)
Mode door control linkage adjustment [MTC-45](#)
Mode door motor [MTC-44](#), [MTC-89](#)
Model variation [GI-49](#)
Multiport fuel injection (MFI) system [EC-24](#)
Multiport fuel injection precautions [GI-6](#)
Multi-remote control system - See Remote keyless entry

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

system [BL-43](#)

N

NATS - Wiring diagram [BL-105](#)
 NONDTC - Wiring diagram [AT-182](#)
 NVH troubleshooting (AX) [FAX-4](#)
 NVH troubleshooting (EM) [EM-11](#)
 NVH troubleshooting (Final drive) [FFD-6](#), [RFD-8](#), [RFD-42](#), [RFD-77](#)
 NVH troubleshooting (M/T) [MT-7](#)
 NVH troubleshooting (Propeller shaft) [PR-3](#)
 NVH troubleshooting (ST) [PS-5](#)
 NVH troubleshooting (Transfer) [TF-11](#)
 NVH troubleshooting (WT)NVH troubleshooting (WT) . [WT-4](#)
 NVIS (Nissan vehicle immobilizer system) [BL-102](#)
 NVIS (Nissan vehicle immobilizer system) precautions [GI-3](#)

O

O2H2B1 - Wiring diagram [EC-174](#)
 O2H2B2 - Wiring diagram [EC-176](#)
 O2S2B1 - Wiring diagram ... [EC-272](#), [EC-284](#), [EC-298](#)
 O2S2B2 - Wiring diagram ... [EC-274](#), [EC-286](#), [EC-300](#)
 Oil cooler (engine) [LU-10](#)
 Oil filter [LU-9](#)
 Oil pan (engine) [EM-27](#)
 Oil pressure (engine) [LU-7](#)
 Oil pump (A/T) [AT-283](#)
 Oil pump (engine) [LU-12](#)
 Oil pump regulator valve (engine) [LU-12](#)
 Oil seal replacement (engine) [EM-89](#)
 Oil seal replacement (front of final drive) [FFD-9](#), [RFD-11](#)
 Oil seal replacement (side of final drive) [FFD-12](#)
 On board diagnostic system [EC-47](#)
 Operating cylinder (clutch) [CL-11](#)
 ORVR (On-board Refueling Vapor Recovery) ... [EC-39](#)
 Overheat [EC-496](#)
 Oversize piston [EM-128](#)

P

P/SCKT - Wiring diagram [WW-48](#)
 Pantograph jack [GI-43](#)
 Park/Neutral position switch [EC-487](#)
 Park/neutral position switch (A/T) [AT-112](#)
 Park/neutral position switch (M/T) [MT-13](#), [MT-22](#)
 Parking brake control [PB-4](#)
 Parking lamp [LT-81](#)
 PCV (positive crankcase ventilation) [EC-44](#)
 PGC/V - Wiring diagram [EC-399](#), [EC-407](#)
 PHSB1 - Wiring diagram [EC-370](#)
 PHSB2 - Wiring diagram [EC-372](#)
 Pilot bushing replacement - See Pilot converter ... [EM-109](#)
 Piston assembly [EM-119](#)

Piston pin inspection [EM-124](#)
 Piston ring inspection [EM-125](#)
 Piston to bore clearance [EM-128](#)
 Planetary carrier (Transfer) .. [TF-112](#), [TF-114](#), [TF-120](#), [TF-129](#)
 PNP/SW - Wiring diagram [EC-489](#), [AT-113](#)
 POS - Wiring diagram [EC-363](#)
 POWER - Wiring diagram [PG-6](#)
 Power door lock [BL-16](#)
 Power door mirror [GW-81](#)
 Power steering fluid level [MA-32](#)
 Power steering gear [PS-15](#)
 Power steering oil pump [PS-20](#)
 Power steering pressure (PSP) sensor [EC-470](#)
 Power steering system bleeding [PS-6](#)
 Power supply routing [PG-4](#)
 Power window [GW-15](#)
 PRE/SE - Wiring diagram [EC-430](#), [EC-436](#)
 Precautions (General) [GI-4](#)
 Precautions in repairing high strength steel [BL-154](#)
 Pressure plate - See Clutch cover [CL-16](#)
 Pressure switch 1 [AT-152](#), [AT-166](#)
 Pressure switch 2 [AT-164](#)
 Pressure switch 3 [AT-148](#), [AT-168](#)
 Pressure switch 5 [AT-156](#), [AT-170](#)
 Pressure switch 6 [AT-160](#), [AT-172](#)
 Pressure test (A/T) [AT-55](#)
 Propeller shaft [PR-4](#), [PR-9](#)
 Propeller shaft inspection [MA-26](#)
 Propeller shaft on vehicle service [PR-9](#)
 Propeller shaft vibration [PR-4](#), [PR-9](#)
 PS/SEN - Wiring diagram [EC-471](#)

R

Radiator [CO-15](#)
 Radio - See Audio [AV-4](#)
 Rear bumper [EI-15](#)
 Rear case (Transfer) [TF-112](#), [TF-114](#), [TF-120](#)
 Rear combination lamp removal and installation [LT-96](#)
 Rear cover packing replacement diff. [FFD-13](#), [RFD-13](#)
 Rear door [BL-92](#), [GW-55](#)
 Rear seat [SE-17](#)
 Rear seat belt [SB-5](#)
 Rear washer [WW-32](#)
 Rear window defogger [GW-63](#)
 Rear wiper [WW-32](#)
 Refrigerant connection precaution [MTC-5](#)
 Refrigerant discharging evacuating charging .. [MTC-95](#)
 Refrigerant general precaution [MTC-5](#)
 Refrigerant lines [MTC-95](#), [MTC-102](#), [MTC-103](#)
 Refrigerant pressure sensor [EC-675](#), [MTC-103](#)
 Relay box [PG-87](#)
 Release bearing (clutch) [CL-14](#)
 Remote keyless entry system [BL-43](#)
 Removal and installation (A/T) [AT-247](#), [AT-251](#)
 Removal and installation (Transfer) [TF-111](#)
 Reverse idler shaft (M/T) [MT-24](#)
 Reverse lamp switch (M/T) - See Back-up lamp switch

ALPHABETICAL INDEX

(M/T) [MT-13](#), [MT-22](#)
 Reverse main gear (M/T) [MT-24](#)
 Revolution sensor (A/T) [AT-118](#)
 Road wheel size [GI-53](#)
 Rocker cover [EM-41](#)
 Room lamp [LT-106](#)
 Room lamp - See Interior lamp [LT-106](#)
 ROOM/L - Wiring diagram [LT-114](#)
 RP/SEN - Wiring diagram [EC-676](#)

S

SAE J1979 - Service \$01 - 09 [EC-47](#)
 Seat belt inspection [SB-8](#), [MA-34](#)
 Seat belt pre-tensioner [SRS-54](#)
 Seat belt, front [SB-3](#)
 Seat belt, rear [SB-5](#)
 Seat, front [SE-10](#)
 Seat, rear [SE-17](#)
 Self-diagnosis (Transfer) [TF-45](#)
 SEN/PW - Wiring diagram [EC-483](#)
 SHIFT - Wiring diagram [AT-225](#)
 Shift control (Transfer) .. [TF-112](#), [TF-114](#), [TF-120](#), [TF-135](#)
 Shift control components (M/T) [MT-26](#)
 Shift fork (M/T) [MT-26](#)
 Shift lever [MT-14](#)
 Shift lock system [AT-224](#)
 Shock absorber (front) [FSU-10](#)
 Shock absorber (rear) [RSU-7](#)
 Side air bag (satellite) sensor [SRS-53](#)
 Side curtain air bag [SRS-50](#)
 Side trim [EI-27](#)
 SMJ (super multiple junction) [PG-83](#)
 Spare tire size [GI-53](#)
 Spark plug [EM-33](#)
 Spark plug replacement [EM-33](#), [MA-19](#)
 Specification value [EC-136](#)
 Speedometer [DI-4](#)
 Spiral cable [SRS-44](#)
 SRS - See Supplemental Restraint System [SRS-5](#)
 SRS - Wiring diagram [SRS-12](#)
 SRS Trouble diagnoses [SRS-8](#)
 Stabilizer bar (front) [FSU-12](#)
 Stabilizer bar (rear) [RSU-11](#)
 Stall test (A/T) [AT-54](#)
 Standardized relay [PG-81](#)
 START - Wiring diagram [SC-11](#)
 Starting system [SC-8](#)
 Steering gear, linkage and transfer gear inspection [MA-31](#)
 Steering linkage [PS-15](#)
 Steering wheel and column [PS-8](#)
 Stop lamp [LT-74](#)
 Stop lamp switch [EC-567](#)
 STOP/L - Wiring diagram [LT-75](#)
 Striking rod (M/T) [MT-26](#)
 Strut (front) [FSU-10](#)
 STSIG - Wiring diagram [AT-108](#)

Sun gear (Transfer) [TF-112](#), [TF-114](#), [TF-120](#)
 Supplemental Restraint System [SRS-5](#)
 Symbols and abbreviations [GI-10](#), [GI-23](#)
 Symptom matrix chart [EC-91](#)
 Synchronizer (M/T) [MT-24](#)
 System readiness test (SRT) code [EC-53](#)

T

T/TOW - Wiring diagram [LT-101](#)
 Tachometer [DI-4](#)
 Tail lamp [LT-81](#)
 TAIL/L - Wiring diagram [LT-84](#)
 TCM circuit diagram [AT-53](#)
 TCM inspection table [AT-87](#)
 TCS - Wiring diagram [BRC-17](#), [BRC-79](#)
 TCS (traction control system) [BRC-8](#), [BRC-69](#)
 TCS component parts and connector location [BRC-15](#), [BRC-77](#)
 Theft warning system - See Vehicle security (Theft warning) system [BL-69](#)
 Thermostat [CO-25](#)
 Three way catalyst [EM-22](#)
 Three way catalyst function (Bank 1) [EC-377](#)
 Three way catalyst function (Bank 2) [EC-377](#)
 Three way catalyst precautions [GI-5](#)
 Throttle control motor [EC-584](#)
 Throttle control motor relay [EC-572](#)
 Throttle position sensor (TPS) ... [EC-214](#), [EC-340](#), [EC-507](#), [EC-509](#), [EC-604](#)
 Throwout bearing - See Clutch release bearing [CL-14](#)
 Tie-rod [PS-15](#)
 Timing chain [EM-55](#)
 Tire rotation [MA-30](#)
 Tire size [GI-53](#)
 Torque converter installation [AT-249](#), [AT-250](#), [AT-253](#)
 Torque convertor clutch solenoid valve [AT-125](#), [AT-127](#)
 Tow truck towing [GI-45](#)
 Towing point [GI-46](#)
 TPS1 - Wiring diagram [EC-342](#)
 TPS2 - Wiring diagram [EC-216](#)
 TPS3 - Wiring diagram [EC-606](#)
 Traction control system - Wiring diagram [BRC-17](#), [BRC-79](#)
 Transfer control device [TF-76](#), [TF-107](#)
 Transfer control unit inspection table [TF-37](#)
 Transfer serial number [GI-52](#)
 Transmission case (M/T) [MT-22](#)
 Transmission serial number [GI-52](#)
 Tread-FR&RR (Dimensions) [GI-53](#)
 Trim [EI-27](#)
 Trouble diagnoses [GI-11](#)
 Turbine revolution sensor [AT-116](#)
 TURN - Wiring diagram [LT-54](#)
 Turn signal lamp [LT-50](#)
 Two trip detection logic [EC-47](#)
 Two-pole lift [GI-44](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

V

Vacuum hose (brake system)	BR-19
Vacuum hose drawing (Engine control)	EC-102
Valve clearance	EM-84
Valve guide	EM-100 , EM-101
Valve lifter	EM-79
Valve seat	EM-102
Valve spring	EM-103 , EM-104
Vanity mirror lamp	LT-106
Variable induction air control system (VIAS) ..	EC-562 , EC-680
VDC (vehicle dynamics control)	BRC-8 , BRC-69
VDC -Wiring diagram	BRC-17 , BRC-79
Vehicle identification number	GI-51
Vehicle recovery (freeing a stuck vehicle)	GI-46
Vehicle security (theft warning) system	BL-69
Vehicle speed sensor (VSS)	EC-464 , EC-561
VEHSEC - Wiring diagram	BL-73
VENT/V - Wiring diagram	EC-414 , EC-421
VIAS - Wiring diagram	EC-682
VIAS/V - Wiring diagram	EC-563
VIN registration	EC-77
Viscosity number (SAE)	MA-12
VSS A/T - Wiring diagram	AT-120

W

Wait detection switch	TF-67
WARN - Wiring diagram	DI-29
Warning chime	DI-40
Warning lamps	DI-28
Washer, front	WW-4
Washer, rear	WW-32
Water pump	CO-20
Water temperature gauge	DI-4
Wheel alignment (front)	FSU-6
Wheel balance	MA-28
Wheel bearing (front)	FAX-5
Wheel bearing (rear)	RAX-6 , RAX-18
Wheel size	GI-53
Wheelbase (Dimensions)	GI-53
Width (Dimensions)	GI-53
WINDOW - Wiring diagram	GW-21
Window, door	GW-51 , GW-55
Windshield	GW-11
Windshield washer - See Front washer	WW-4
Windshield wiper - See Front wiper	WW-4
WIP/R - Wiring diagram	WW-34
WIPER - Wiring diagram	WW-9
Wiper, front	WW-4
Wiper, rear	WW-32
Wiring Diagram (Cell code) list	PG-71
Wiring diagrams	GI-16
Withdrawal lever (clutch)	CL-14
WT-T/WARN - Wiring diagram	WT-11