

ALPHABETICAL INDEX

SECTION

IDX

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL

A

AAC/V - Wiring diagram.....	EC-428	A/C service data specification (manual A/C).....	HA-207
ABS (anti-lock brake system).....	BR-34	A/C system description (auto A/C).....	HA-19
ABS - Wiring diagram	BR-39	A/C trouble diagnoses (auto A/C)	HA-23
Absolute pressure sensor	EC-161	A/C, A - Wiring diagram	HA-26
A/C air flow (auto A/C)	HA-21	A/C, M - Wiring diagram	HA-142
A/C air flow (manual A/C)	HA-137	Accelerator control system	FE-3
A/C component layout (auto A/C)	HA-15	Accelerator wire adjustment	FE-3
A/C component layout (manual A/C)	HA-135	Air bag	RS-13
A/C compressor clutch removal and installation (auto A/C).....	HA-111	Air bag disposal.....	RS-26
A/C compressor clutch removal and installation (manual A/C).....	HA-195	Air bag precautions	GI-3
A/C compressor precaution (auto A/C)	HA-7	Air bleeding (hydraulic clutch)	CL-7
A/C compressor precaution (manual A/C).....	HA-127	Air bleeding for brake system	BR-8
A/C compressor special service tool (auto A/C).....	HA-10	Air cleaner filter replacement.....	MA-18
A/C compressor special service tool (manual A/C).....	HA-130	Air conditioner cut control	EC-32
A/C control linkage adjustment (manual A/C).....	HA-154, 160	Air flow meter - See Mass air flow sensor	EC-152
A/C control operation (auto A/C).....	HA-19	Air mix door control linkage adjustment (auto A/C).....	HA-56
A/C control operation (manual A/C)	HA-136	Air mix door control linkage adjustment (manual A/C).....	HA-165
A/C diagnostic work flow (auto A/C)	HA-41	Air mix. door motor (auto A/C).....	HA-54, 104
A/C diagnostic work flow (manual A/C).....	HA-146	Air mix. door motor (manual A/C)	HA-162
A/C HFC134a (R134a) system precaution (auto A/C).....	HA-3	Air spoiler, rear.....	BT-33
A/C HFC134a (R134a) system precaution (manual A/C).....	HA-123	Alternator	SC-13
A/C HFC134a (R134a) system service procedure (auto A/C)	HA-105	Ambient sensor (auto A/C).....	HA-92
A/C HFC134a (R134a) system service procedure (manual A/C)	HA-190	Angular tightening application.....	EM-3
A/C HFC134a (R134a) system service tools (auto A/C)	HA-11	Antenna - See Power antenna	EL-135
A/C HFC134a (R134a) system service tools (manual A/C).....	HA-131	Anti-lock brake system - See ABS	BR-34
A/C HFC134a system service equipment precaution (auto A/C)	HA-7	Anti-lock brake system - Wiring diagram.....	BR-39
A/C HFC134a system service equipment precaution (manual A/C).....	HA-127	AP/SEN - Wiring diagram	EC-162
A/C lubricant (R134a) (auto A/C).....	HA-107	ASCD (automatic speed control device)	EL-146
A/C lubricant (R134a) (manual A/C)	HA-192	ASCD - Wiring diagram	EL-150
A/C operational check (auto A/C)	HA-42	A/T - Wiring diagram - AT - FTS	AT-112
A/C operational check (manual A/C).....	HA-147	A/T - Wiring diagram - AT - MAIN.....	AT-102
A/C performance chart (auto A/C)	HA-83	A/T - Wiring diagram - AT - PNP/SW.....	AT-106
A/C performance chart (manual A/C).....	HA-184	A/T - Wiring diagram - AT - VSS A/T	AT-118
A/C performance test diagnoses (auto A/C).....	HA-81	A/T control	EC-442
A/C performance test diagnoses (manual A/C).....	HA-182	A/T diagnosis communication line.....	EC-565
A/C push control (manual A/C)	HA-136	A/T fluid temperature sensor	AT-115
A/C relay (auto A/C)	HA-79	A/T shift lock system	AT-269
A/C relay (manual A/C)	HA-179	A/T shift lock system - Wiring diagram	AT-270
A/C self-diagnoses (auto A/C).....	HA-31	A/T trouble diagnoses	AT-56
A/C service data specification (auto A/C).....	HA-122	A/T Wiring diagram - AT - ENG SS	AT-122
		A/T Wiring diagram AT - 1ST	AT-128
		A/T Wiring diagram AT - 2ND	AT-135
		A/T Wiring diagram AT - 3RD	AT-141
		A/T Wiring diagram AT - 4TH.....	AT-148
		A/T Wiring diagram AT - BA/FTS	AT-207
		A/T Wiring diagram AT - LPSV	AT-173
		A/T Wiring diagram AT - NONDTC	AT-220
		A/T Wiring diagram AT - OVRCSV	AT-201
		A/T Wiring diagram AT - SSV/A	AT-180
		A/T Wiring diagram AT - SSV/B	AT-186
		A/T Wiring diagram AT - TCCSIG	AT-163
		A/T Wiring diagram AT - TCV	AT-156
		A/T Wiring diagram AT - TPS.....	AT-193
		A/T Wiring diagram AT - VSSMTR.....	AT-214
		AT/C - Wiring diagram.....	EC-443
		ATDIAG - Wiring diagram.....	EC-566

ALPHABETICAL INDEX

AudioEL-130
 AUDIO - Wiring diagramEL-131
 Audio and A/C control removal and
 installation - See Instrument panelBT-22
 Auto air conditioner - Wiring diagramHA-26
 Automatic amplifierHA-29
 Automatic amplifier (auto A/C)HA-45
 Automatic speed control system - See
 ASCDEL-146
 Automatic transaxle numberGI-44
 Automatic transmission fluid
 replacementMA-23
 Auxiliary air control (AAC) valveEC-425

B

Back doorBT-16
 Back door opener - See Back doorBT-16
 Back-up lampEL-59
 Back-up lamp switch (M/T)MT-10
 BACK/L - Wiring diagramEL-59
 Ball joint (front)SU-14
 Base idle air volume initialigingEC-65
 Basic inspectionEC-106
 BatterySC-3
 Baulk ring (M/T)MT-17
 Blower motor (auto A/C)HA-65
 Blower motor (manual A/C)HA-172
 Blower resistor (manual A/C)HA-172
 Blower unit (auto A/C)HA-115
 Blower unit (manual A/C)HA-200
 Board-on liftGI-46
 Body alignmentBT-56
 Boring/horning cylinder blockEM-62
 Brake boosterBR-17
 Brake fluid changeBR-7
 Brake fluid levelMA-24
 Brake fluid level and line checkBR-7
 Brake hydraulic lineBR-9
 Brake inspectionMA-24
 Brake lines and cables inspectionMA-24
 Brake master cylinderBR-14
 Brake pedalBR-12
 Bulb specificationsEL-329
 Bumper, frontBT-13
 Bumper, rearBT-16
 BYPS/V - Wiring diagramEC-549, 556

C

Camshaft inspectionEM-36
 Camshaft position sensor (CMPS)EC-327
 Canister-See EVAP canisterEC-33
 CHARGE - Wiring diagramSC-11
 Charging systemSC-10
 Chassis and body maintenanceMA-22
 CHIME - Wiring diagramEL-107
 CIGAR - Wiring diagramEL-120

Cigarette lighterEL-120
 Circuit breakerEL-17
 CKPS - Wiring diagramEC-323, 478
 Closed loop controlEC-449
 Closed throttle position switchEC-434
 Clutch coverCL-19
 Clutch damperCL-11
 Clutch discCL-19
 Clutch fluid levelMA-22
 Clutch master cylinderCL-8
 Clutch operating cylinderCL-13
 Clutch pedalCL-6
 Clutch release bearingCL-16
 Clutch release mechanismCL-16
 Clutch withdrawal leverCL-16
 CMPS - Wiring diagramEC-330
 Coil spring (front)SU-9
 Coil spring (rear)SU-23
 Collision diagnosisRS-65
 Combination lamp, front, removal and
 installationBT-13
 Combination lamp, rear, removal and
 installationBT-33
 Combination meterEL-83
 Combination meter removal and instal-
 lation - See Instrument panelBT-22
 Combination switchEL-26
 Component Location (auto A/C)HA-23
 Component Location (manual A/C)HA-139
 Compressor clutch removal and instal-
 lation (auto A/C)HA-111
 Compressor clutch removal and instal-
 lation (manual A/C)HA-195
 Compressor precaution (auto A/C)HA-7
 Compressor precaution (manual A/C)HA-127
 Compressor special service tool (auto
 A/C)HA-10
 Compressor special service tool
 (manual A/C)HA-130
 Connecting rodEM-61
 Connecting rod bearing clearanceEM-65
 Connecting rod bushing clearanceEM-66
 Connector inspectionGI-22
 Console box - See Instrument panelBT-22
 CONSULT for ABSBR-44
 CONSULT for engineEC-88
 Control lever (M/T)MT-15
 Control valve (A/T)AT-309
 Converter housing installationAT-281
 COOL/F - Wiring diagramEC-297, 454
 Coolant mixture ratioMA-12
 Coolant replacementMA-14
 Cooling circuit (engine)LC-9
 Cooling fan controlEC-451
 Cooling fan motorEC-468
 Cooling fan relayEC-467
 Cooling unit (A/C evaporator) (auto
 A/C)HA-116
 Cooling unit (A/C evaporator) (manual
 A/C)HA-201
 Coupling sleeve (M/T)MT-17

ALPHABETICAL INDEX

Crank angle sensor built into distributor
 - See Camshaft position sensorEC-327
 "Crankcase emission control system -
 See positive crankcase ventilation"EC-48
 Crankcase ventilation system - See
 Positive crankcase ventilationEC-48
 CrankshaftEM-63
 Crankshaft position sensor (OBD)EC-321, 476
 Crankshaft position sensor (OBD) cog
 chippingEC-476
 Cruise control - See ASCDEL-146
 Cylinder blockEM-58
 Cylinder block boringEM-62
 Cylinder headEM-30

D

Data link connector for ConsultEC-50, 88
 Daytime light systemEL-42
 Daytime running light - See Daytime
 light systemEL-42
 DEF - Wiring diagramEL-123
 Detonation sensor - See Knock sensorEC-317
 Diagnosis sensor unitRS-18
 Diagnostic trouble code (DTC) for OBD
 systemEC-8, 68
 Diagnostic trouble code (DTC) inspec-
 tion priority chartEC-122
 Differential gear (FF A/T)AT-358
 Differential gear (FF M/T)MT-17
 DimensionsGI-45
 DistributorEC-31
 Distributor ignition (DI) systemEC-31
 D/LOCK - Wiring diagramEL-178
 Dome light - See Interior lampEL-77
 Door glassBT-19
 Door lockBT-19
 Door mirrorBT-54
 Door trimBT-28
 Door, frontBT-19
 Door, rearBT-21
 Drive belt inspectionMA-13
 Drive plate runoutEM-67
 Drive shaft (front)AX-10
 Dropping resistor (A/T)AT-177
 DTC work supportEC-98
 DTRL - Wiring diagramEL-46

E

ECM input/output signalEC-133
 ECTS - Wiring diagramEC-174, 193
 EGR temperature sensorEC-482
 EGR/TS - Wiring diagramEC-485
 EGRC1 - Wiring diagramEC-339, 348, 494
 Electric sun roofEL-140
 Electrical diagnosesGI-25
 Electrical ignition systemEC-31

Electrical unitFoldout
 Electrical units locationEL-309
 Electronic ignition (EI) systemEC-31
 Engine compartmentBT-57
 Engine control circuit diagramEC-24
 Engine control component parts
 locationEC-20
 Engine control module (ECM)EC-445
 Engine control system diagram and
 chartEC-26
 Engine coolant temperature sensor
 (ECTS)EC-172, 191
 Engine fail-safe systemEC-123
 Engine oil filter replacementMA-19
 Engine oil precautionsGI-7
 Engine oil replacementMA-18
 Engine outer component partsEM-10
 Engine removalEM-55
 Engine room - See Engine
 compartmentBT-57
 Engine serial numberGI-44
 EVAP canisterEC-34
 EVAP canister purge volume control
 solenoid valveEC-370, 502
 EVAP canister vent control
 valveEC-377, 514, 534
 EVAP control system (small leak)
 diagnosisEC-36, 356, 397, 500
 EVAP control system pressure sensorEC-384
 EVAP control system purge flow moni-
 toring diagnosisEC-522
 EVAP system close modeEC-36
 EVAP vapor lines inspectionMA-21
 Evaporative emission (EVAP) systemEC-33
 Exhaust gas recirculation (EGR)
 valveEC-335, 491
 Exhaust systemFE-8
 Exhaust system inspectionMA-22
 ExteriorBT-33

F

Fan control amp. (auto A/C)HA-67
 Fan switch (manual A/C)HA-172
 F/FOG - Wiring diagramEL-62
 Final drive (FF A/T)AT-358
 Final drive (FF M/T)MT-39
 Finisher, interior - See TrimBT-26
 Fluid temperature sensor (A/T)AT-115
 FluidsMA-11
 Flywheel (clutch)CL-19
 Flywheel runoutEM-67
 Fog lamp, frontEL-60
 Fog lamp, front, removal and
 installationBT-13
 Fork rod (M/T)MT-18
 Forward clutchAT-333
 F/PUMP - Wiring diagramEC-586
 Freeze frame dataEC-68
 FRO2 - Wiring diagramEC-200, 221, 229

ALPHABETICAL INDEX

FRO2/H - Wiring diagram	EC-235
Front axle.....	AX-2
Front bumper	BT-13
Front combination lamp removal and installation	BT-13
Front disc brake	BR-20
Front door	BT-19
Front fog lamp.....	EL-60
Front fog lamp removal and installation	BT-13
Front heated oxygen sensor (HO2S)	EC-197, 205, 211, 218, 227
Front heated oxygen sensor (HO2S) heater.....	EC-233
Front seat	BT-39
Front seat belt	RS-5
Front suspension.....	SU-2
Front washer	EL-114
Front wiper	EL-114
FUEL - Wiring diagram	EC-275, 282
Fuel cut control (at no load & high engine speed).....	EC-33
Fuel filler lid.....	BT-16
Fuel filter.....	EC-50
Fuel filter replacement	MA-17
Fuel gauge	EL-83
Fuel injection system	EC-273, 280
Fuel injector	EC-575
Fuel line inspection	MA-16
Fuel precautions	GI-8
Fuel pressure check.....	EC-50
Fuel pressure regulator	EC-51
Fuel pressure release	EC-50
Fuel pump	EC-584
Fuel pump relay	EC-584
Fuel system	FE-5
Fuel tank temperature sensor	EC-287
Fuel tank vacuum relief valve	EC-34
Fuse	EL-17
Fuse block	Foldout
Fusible link	EL-17

G

Garage jack and safety stand	GI-47
Gauges.....	EL-83
Gear components (M/T)	MT-17
Generator - See Alternator.....	SC-13
Generic scan tool (GST)	EC-100
Glass	BT-19
Grease.....	MA-11
Ground distribution.....	EL-18

H

Harness connector.....	EL-5
Harness connector inspection	GI-22
Harness layout	EL-313
Hazard warning lamp.....	EL-65

Headlamp.....	EL-30
Headlining - See Roof trim	BT-30
Heated oxygen sensor (HO2S) (front).....	EC-197, 205, 211, 218, 227
Heated oxygen sensor (HO2S) heater (front)	EC-233
Heated oxygen sensor (HO2S) heater (rear)	EC-268
Heated oxygen sensor (rear).....	EC-238, 246, 254, 262
Heated seat.....	BT-41, EL-145
Heater unit (heater core) (auto A/C).....	HA-114
Heater unit (heater core) (manual A/C).....	HA-199
Height (Dimensions).....	GI-45
HFC134a (R134a) system precaution (auto A/C).....	HA-3
HFC134a (R134a) system precaution (manual A/C).....	HA-123
HFC134a (R134a) system service pro- cedure (auto A/C)	HA-105
HFC134a (R134a) system service pro- cedure (manual A/C).....	HA-190
HFC134a (R134a) system service tools (auto A/C).....	HA-11
HFC134a (R134a) system service tools (manual A/C).....	HA-131
HFC134a system service equipment precaution (auto A/C).....	HA-7
HFC134a system service equipment precaution (manual A/C).....	HA-127
High clutch.....	AT-328
H/LAMP - Wiring diagram.....	EL-34
Hood.....	BT-13
Horn.....	EL-119
HORN - Wiring diagram	EL-119
How to erase DTC for OBD system.....	EC-79
HSEAT - Wiring diagram.....	EL-145
Hydraulic lash adjuster inspection	EM-41

I

IACV-AAC valve	EC-425
IATS - Wiring diagram	EC-168
Identification plate.....	GI-44
Idle air control (IAC) system	EC-425
Idle air control valve (IACV)	EC-425
Idle mixture ratio.....	EC-53
Idle speed.....	EC-53
IGN/SG - Wiring diagram	EC-471
Ignition coil	EC-475
Ignition control system	EC-469
Ignition timing	EC-53
Ignition wire inspection.....	EC-316
ILL - Wiring diagram	EL-73
Illumination	EL-70
In vehicle sensor (auto A/C).....	HA-95
INFINITI COMMUNICATOR.....	EL-271
Infiniti communicator (IVCS)	EL-271
INJECT - Wiring diagram	EC-576
Injector removal and installation	EC-51

IDX

ALPHABETICAL INDEX

Input shaft (FF M/T)MT-26
Instrument panelBT-22
INT/L - Wiring diagram.....EL-82
Intake air temperature sensorEC-166
Intake door control linkage adjustment
(auto A/C).....HA-64
Intake door control linkage adjustment
(manual A/C).....HA-154
Intake door motor (auto A/C)HA-58
Intake door motor (manual A/C).....HA-151
Integrated homelink transmitterEL-268
InteriorBT-26
Interior lamp.....EL-77, 81
Interior lamp on-off control.....EL-78
IVCS - Wiring diagram.....EL-282
IVIS (Infiniti vehicle immobiliser sys-
tem) precautionsGI-3
IVIS (Infiniti vehicle immobilizer
system).....EL-248

J

Jacking points.....GI-47
Joint connector (J/C)Foldout
Junction box (J/B).....Foldout

K

Keyless entry system - See Multi-re-
mote control system.....EL-190
Knock sensor (KS)EC-317, 318
Knuckle spindleAX-5

L

Length (Dimensions)GI-45
License lamp.....EL-52
Lifting pointsGI-48
Line pressure solenoid valveAT-153
Line pressure test (A/T)AT-66
Liquid gasket applicationEM-3
LOAD - Wiring diagram.....EC-603
Location of electrical unitsEL-309
Lock, doorBT-19
Low and reverse brakeAT-340
Lubricant (R134a) A/C (auto A/C)HA-107
Lubricant (R134a) A/C (manual A/C)HA-192
LubricantsMA-11
Lubrication circuit (engine)LC-3
Lubrication-locks, hinges and hood
latchesMA-26
Luggage room lamp.....EL-81

M

MAFS - Wiring diagram.....EC-156
Magnet clutch (auto A/C).....HA-73, 111
Magnet clutch (manual A/C).....HA-195
MAIN - Wiring diagram.....EC-146
Mainshaft (M/T)MT-31
Maintenance (engine)MA-13
MAJOR OVERHALL.....AT-283
Malfunction indicator lamp (MIL).....EC-81
Manual air conditioner - Wiring diagram.....HA-142
Manual transaxle number.....GI-44
Manual transmission oil replacementMA-22
Mass air flow sensor (MAFS).....EC-152
Master cylinder (brake)BR-14
Master cylinder (clutch)CL-8
MeterEL-83
METER - Wiring diagram.....EL-86
MIL & Data link connectors circuitEC-610
MIL/DL - Wiring diagramEC-610
MIRROR - Wiring diagram.....EL-143
Mirror defoggerEL-121
Mirror, door.....BT-54
Mirror, out sideBT-54
MisfireEC-310
Mode door control linkage adjustment
(auto A/C).....HA-53
Mode door control linkage adjustment
(manual A/C).....HA-160
Mode door motor (auto A/C)HA-48
Mode door motor (manual A/C)HA-156
Model variationGI-42
Molding - See ExteriorBT-33
M/T major overhaulMT-15
M/T removal and installationMT-12
MULTI - Wiring diagram.....EL-194
Multi-remote control system.....EL-190
Multiport fuel injection (MFI) systemEC-29
Multiport fuel injection precautions.....GI-6

N

NATS (Nissan anti-theft system)
precautionsGI-3
NATS - Wiring diagramEL-250
Neutral position switchEC-568
NVH troubleshooting (AX)AX-3
NVH troubleshooting (BR).....BR-6
NVH troubleshooting (CL)CL-4
NVH troubleshooting (M/T)MT-6
NVH troubleshooting (ST).....ST-5
NVH troubleshooting (SU).....SU-17

O

Oil change (capacity)MA-11
Oil pan (engine)EM-14

ALPHABETICAL INDEX

Oil pressure (engine)LC-4
 Oil pump (A/T)AT-305
 Oil pump (engine)LC-4
 Oil pump regulator valve (engine)LC-6
 Oil seal replacement (engine)EM-28
 On board diagnostic systemEC-67
 Operating cylinder (clutch)CL-13
 ORVR (On-board Refueling Vapor Recovery)EC-39
 Out side mirrorBT-54
 Overdrive control switchAT-267
 Overrun clutchAT-333
 Oversize pistonEM-62

P

P/ANT - Wiring diagramEL-136
 Park/Neutral position switchEC-568
 Park/neutral position switch (A/T)AT-104
 Park/neutral position switch (M/T)MT-10
 Parking brake controlBR-32
 Parking lampEL-52
 PCV (positive crankcase ventilation)EC-48
 PGC/V - Wiring diagramEC-373, 505
 Pilot bushing replacementEM-66
 Piston assemblyEM-67
 Piston pin inspectionEM-59
 Piston ring inspectionEM-60
 Piston to bore clearanceEM-62
 PNP/SW - Wiring diagramEC-570
 POWER - Wiring diagramEL-10
 Power antennaEL-135
 Power door lockEL-176
 Power door mirrorEL-143
 Power seatEL-144
 Power steering fluid levelMA-25, ST-7
 Power steering gearST-15
 Power steering hydraulic pressureST-8
 Power steering oil pressure switchEC-593
 Power steering oil pumpST-26
 Power steering system bleedingST-7
 Power supply routingEL-9
 Power transistorEC-475
 Power transistor & ignition coilEC-469
 Power windowEL-166
 PRE/SE - Wiring diagramEC-387
 Precautions (General)GI-4
 Pressure plate - See Clutch coverCL-19
 Pressure test (A/T)AT-66
 PST/SW - Wiring diagramEC-594

R

RadiatorLC-14
 Radiator fan - See Cooling fanLC-14
 Radio - See AudioEL-130
 Rear air spoilerBT-33
 Rear axleAX-20

Rear bumperBT-16
 Rear combination lamp removal and installationBT-33 GI
 Rear disc brakeBR-24
 Rear doorBT-21
 Rear heated oxygen sensor (HO2S)EC-238, 246, 254, 262 MA
 Rear heated oxygen sensor (HO2S) heaterEC-268 EM
 Rear seatBT-42
 Rear seat beltRS-7
 Rear suspensionSU-17 LC
 Rear window defoggerEL-121
 Refregerant pressure sensor (auto A/C)HA-79
 Refregerant pressure sensor (manual A/C)HA-180 EC
 Refrigerant connection precaution (auto A/C)HA-4 FE
 Refrigerant connection precaution (manual A/C)HA-124 CL
 Refrigerant discharging evacuating charging (auto A/C)HA-105
 Refrigerant general precaution (auto A/C)HA-4 MT
 Refrigerant general precaution (manual A/C)HA-124 AT
 Refrigerant lines (auto A/C)HA-117
 Refrigerant lines (manual A/C)HA-202
 Refrigerant pressure sensorEC-598 AX
 Refrigeration cycle (auto A/C)HA-14
 Refrigeration cycle (manual A/C)HA-134
 Release bearing (clutch)CL-16
 Removal and installation (A/T)AT-280
 ResistorEC-475
 Reverse clutchAT-324 BR
 Reverse idler shaft (M/T)MT-16
 Reverse lamp switch (M/T) - See Back-up lamp switch (M/T)MT-10 ST
 Reverse main gear (M/T)MT-17
 Road wheel sizeGI-45
 Roof trimBT-30 RS
 Room lamp - See Interior lampEL-77
 ROOM/L - Wiring diagramEL-79
 RRO2 - Wiring diagramEC-240, 248, 256, 264 BT
 RRO2/H - Wiring diagramEC-270

S

SAE J1930 terminology listGI-52 SC
 Seal - See ExteriorBT-33
 SEAT - Wiring diagramEL-144 EL
 Seat belt inspectionMA-26, RS-9
 Seat belt pre-tensionerRS-3
 Seat belt pre-tensioner disposalRS-26
 Seat belt, frontRS-5
 Seat belt, rearRS-7
 Seat, frontBT-39
 Seat, rearBT-42
 SFT, RE - Wiring diagramAT-270
 SHIFT - Wiring diagramAT-270

ALPHABETICAL INDEX

Shift control components (M/T)	MT-18
Shift fork (M/T)	MT-18
Shift lever	MT-15
Shift lock system	AT-269
Shift schedule	AT-386
Shift solenoid valve A (A/T)	AT-125, 130, 143
Shift solenoid valve B (A/T)	AT-125, 130
Shock absorber (front)	SU-10
Shock absorber (rear)	SU-23
Side air bag	RS-24
Side trim	BT-26
Smart entrance control unit	EL-243
SMJ (super multiple junction)	Foldout
Spare tire size	GI-45
Spark plug replacement	MA-19
Speedometer	EL-83
Spiral cable	RS-20
Spot lamp	EL-81
Spring (Wheelarch) height	SU-5
SROOF - Wiring diagram	EL-141
SRS - See Supplemental Restraint System	RS-13
SRS - Wiring diagram	RS-38
S/SIG - Wiring diagram	EC-581
Stabilizer bar (front)	SU-13
Stall test (A/T)	AT-62
Standardized relay	EL-7
START - Wiring diagram	SC-7
Start signal	EC-580
Starter	SC-9
Starting system	SC-6
Steering gear, linkage and transfer gear inspection	MA-25
Steering linkage	ST-15
Steering switch	EL-28
Steering wheel and column	ST-10
Steering wheel play	ST-6
Steering wheel turning force	ST-8
Stop lamp	EL-58
STOP/L - Wiring diagram	EL-58
Striking rod (M/T)	MT-18
Strut (front)	SU-9
Strut (rear)	SU-22
Sub-gear (M/T)	MT-17
Sun roof, electric	EL-140
Sunload sensor (auto A/C)	HA-99
Sunroof	BT-43
Supplemental Restraint System	RS-13
Supplemental restraint system - Wiring diagram	RS-38
Symbols and abbreviations	GI-9
Symptom matrix chart	EC-124
Synchronizer (M/T)	MT-17
System readiness test (SRT) code	EC-69

T

Tachometer	EL-83
Tail lamp	EL-52
TAIL/L - Wiring diagram	EL-54

TCM circuit diagram	AT-15
TCM inspection table	AT-98
TFTS - Wiring diagram	EC-289
THEFT - Wiring diagram	EL-220
Theft warning system	EL-215
Thermal protector (auto A/C)	HA-114
Thermal protector (manual A/C)	HA-199
Thermostat	LC-12
Three way catalyst	EC-352
Three way catalyst precautions	GI-6
Throttle position sensor (TPS)	EC-178
Throttle position sensor adjustment	EC-106
Throttle position switch	EC-434, AT-198, 267
Throwout bearing - See Clutch release bearing	CL-16
Tie-rod ball joints	ST-19
Tightening torque of standard bolts	GI-51
Timing belt	EM-19
Tire rotation	MA-24
Tire size	GI-45
TLID - Wiring diagram	EL-139
Torque converter installation	AT-281
Tow truck towing	GI-49
TP/SW - Wiring diagram	EC-436
TPS - Wiring diagram	EC-184
Transmission case (M/T)	MT-16
TRANSMT - Wiring diagram	EL-268
Tread-FR&RR (Dimensions)	GI-45
Trim	BT-26
Trouble diagnoses	GI-35
Trunk room trim	BT-32
TURN - Wiring diagram	EL-67
Turn signal lamp	EL-65
Two trip detection logic	EC-67
Two-pole lift	GI-48

U

Under body	BT-59
------------------	-------

V

Vacuum cut valve bypass valve	EC-547, 553
Vacuum hose (brake system)	BR-19
Vacuum hose drawing (Engine control)	EC-27
Valve guide	EM-38
Valve seat	EM-39
Valve spring	EM-41
Vehicle identification number	GI-43
Vehicle recovery (freeing a stuck vehicle)	GI-50
Vehicle speed sensor (VSS)	EC-421
Vent mode switch (manual A/C)	HA-136
VENT/V - Wiring diagram	EC-379, 516, 537
Viscosity number (SAE)	MA-11
Viscous coupling (FF A/T)	AT-358
Viscous coupling (FF M/T)	MT-11

ALPHABETICAL INDEX

VSS - Wiring diagramEC-423

W

WARN - Wiring diagramEL-99

Warning chimeEL-105

Warning lampsEL-98

Washer, frontEL-114

Water cock control rod adjustment
(manual A/C)HA-165

Water pumpLC-10

Water temperature gaugeEL-83

Weatherstrip - See ExteriorBT-33

Wheel alignment (front)SU-6

Wheel alignment (rear)SU-19

Wheel balanceMA-24

Wheel bearing (front)AX-3

Wheel bearing (rear)AX-21

Wheel hub (front)AX-5

Wheel hub (rear)AX-21

Wheel sensors (ABS)BR-75 **GI**

Wheel sizeGI-45

Wheelarch heightSU-5

Wheelbase (Dimensions)GI-45 **MA**

Wide open & closed throttle position
switchEC-178

Width (Dimensions)GI-45 **EM**

WINDOW - Wiring diagramEL-169

Window, doorBT-19

WindshieldBT-52 **LC**

WIPER - Wiring diagramEL-116

Wiper, frontEL-114

Wiring Diagram (Cell code) listEL-330 **EC**

Wiring diagramsGI-11

Withdrawal lever (clutch)CL-16

Wrist pin - See Piston pin inspectionEM-59 **FE**

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

NOTES