

ALPHABETICAL INDEX

SECTION

IDX

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

GI
MA
EM
LC
EC
FE
CL
MT
AT
AX
SU
BR
ST
RS
BT
HA
SC
EL

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-426
 ABS (anti-lock brake system).....BR-34
 ABS - Wiring diagramBR-39
 Absolute pressure sensorEC-163
 A/C air flow.....HA-21, 138
 A/C component layout.....HA-15, 136
 A/C compressor clutch removal and
 installationHA-111, 196
 A/C compressor precautionHA-7, 128
 A/C compressor special service toolHA-10, 131
 A/C control linkage adjustment (manual
 A/C).....HA-155, 161
 A/C control operation (auto A/C)HA-19
 A/C control operation (manual A/C)HA-137
 A/C diagnostic work flow (auto A/C)HA-41
 A/C diagnostic work flow (manual A/C).....HA-147
 A/C HFC134a (R134a) system
 precautionHA-3, 124
 A/C HFC134a (R134a) system service
 procedure.....HA-105, 191
 A/C HFC134a (R134a) system service
 toolsHA-11, 132
 A/C HFC134a system service equip-
 ment precaution.....HA-7, 128
 A/C lubricant (R134a)HA-107, 193
 A/C operational check.....HA-42, 148
 A/C performance chart.....HA-83, 185
 A/C performance test diagnosesHA-81, 183
 A/C push control.....HA-137
 A/C relayHA-79, 180
 A/C self-diagnoses (auto A/C).....HA-31
 A/C service data specification.....HA-123, 209
 A/C system description (auto A/C)HA-19
 A/C trouble diagnoses (auto A/C)HA-23
 A/C, A - Wiring diagramHA-26
 A/C, M - Wiring diagramHA-143
 Accelerator control systemFE-3
 Accelerator wire adjustmentFE-3
 Air bagRS-13
 Air bag disposal.....RS-26
 Air bag precautionsGI-3
 Air bleeding (hydraulic clutch)CL-7
 Air bleeding for brake systemBR-8
 Air cleaner filter replacement.....MA-18
 Air conditioner cut controlEC-32
 Air flow meter - See Mass air flow
 sensorEC-154
 Air mix door control linkage
 adjustmentHA-56, 166
 Air mix. door motorHA-54, 104, 163
 Air spoiler, rear.....BT-33
 AlternatorSC-30
 Ambient sensorHA-92
 Angular tightening application.....EM-3
 Antenna - See Power antennaEL-135
 Anti-lock brake system - See ABS.....BR-34

Anti-lock brake system - Wiring
 diagramBR-39
 ASCD (automatic speed control device)EL-146
 ASCD - Wiring diagramEL-150
 A/T - Wiring diagram - AT - FTSAT-115
 A/T - Wiring diagram - AT - MAIN.....AT-104
 A/T - Wiring diagram - AT - PNP/SW.....AT-109
 A/T - Wiring diagram - AT - VSS A/TAT-121
 A/T controlEC-440
 A/T diagnosis communication line.....EC-556
 A/T fluid temperature sensorAT-118
 A/T shift lock systemAT-272
 A/T shift lock system - Wiring diagramAT-273
 A/T trouble diagnosesAT-56
 A/T Wiring diagram - AT - ENG SSAT-125
 A/T Wiring diagram AT - 1STAT-131
 A/T Wiring diagram AT - 2NDAT-138
 A/T Wiring diagram AT - 3RDAT-144
 A/T Wiring diagram AT - 4THAT-151
 A/T Wiring diagram AT - BA/FTSAT-210
 A/T Wiring diagram AT - LPSVAT-176
 A/T Wiring diagram AT - NONDTCAT-223
 A/T Wiring diagram AT - OVRCSVAT-204
 A/T Wiring diagram AT - SSV/AAT-183
 A/T Wiring diagram AT - SSV/BAT-189
 A/T Wiring diagram AT - TCCSIGAT-166
 A/T Wiring diagram AT - TCVAT-159
 A/T Wiring diagram AT - TPS.....AT-196
 A/T Wiring diagram AT - VSSMTR.....AT-217
 AT/C - Wiring diagram.....EC-441
 ATDIAG - Wiring diagram.....EC-557
 AudioEL-130
 AUDIO - Wiring diagram.....EL-131
 Audio and A/C control removal and
 installation - See Instrument panelBT-22
 Auto air conditioner - Wiring diagramHA-26
 Automatic amplifier.....HA-29, 45
 Automatic speed control system - See
 ASCDEL-146
 Automatic transaxle number.....GI-44
 Automatic transmission fluid
 replacement.....MA-23
 Auxiliary air control (AAC) valveEC-423

B

Back door.....BT-16
 Back door opener - See Back doorBT-16
 Back-up lampEL-59
 Back-up lamp switch (M/T)MT-10
 BACK/L - Wiring diagram.....EL-59
 Ball joint (front)SU-14
 Base idle air volume initialiging.....EC-65
 Basic inspectionEC-107
 BatterySC-4
 Battery/Starting/Charging System
 Tester.....SC-7, 13, 23
 Baulk ring (M/T).....MT-17
 Blower motorHA-65, 173
 Blower resistor.....HA-173

ALPHABETICAL INDEX

Blower unit.....HA-115, 201
 Board-on liftGI-46
 Body alignmentBT-56
 Boring/horning cylinder block.....EM-62
 Brake boosterBR-17
 Brake fluid changeBR-7
 Brake fluid levelMA-24
 Brake fluid level and line checkBR-7
 Brake hydraulic line.....BR-9
 Brake inspectionMA-24
 Brake lines and cables inspectionMA-24
 Brake master cylinderBR-14
 Brake pedalBR-12
 Bulb specificationsEL-330
 Bumper, frontBT-13
 Bumper, rearBT-16
 BYPS/V - Wiring diagramEC-540, 547

C

Camshaft inspectionEM-36
 Camshaft position sensor (CMPS).....EC-326
 Canister-See EVAP canisterEC-33
 CHARGE - Wiring diagramSC-22
 Charging systemSC-21
 Chassis and body maintenanceMA-22
 CHIME - Wiring diagram.....EL-107
 CIGAR - Wiring diagram.....EL-120
 Cigarette lighter.....EL-120
 Circuit breaker.....EL-17
 CKPS - Wiring diagram.....EC-322, 469
 Closed loop controlEC-447
 Closed throttle position switchEC-432
 Clutch cover.....CL-19
 Clutch damper.....CL-11
 Clutch discCL-19
 Clutch fluid level.....MA-22
 Clutch master cylinderCL-8
 Clutch operating cylinderCL-13
 Clutch pedal.....CL-6
 Clutch release bearing.....CL-16
 Clutch release mechanismCL-16
 Clutch withdrawal lever.....CL-16
 CMPS - Wiring diagramEC-329
 Coil spring (front).....SU-9
 Coil spring (rear)SU-22
 Collision diagnosis.....RS-65
 Combination lamp, front, removal and
 installationBT-13
 Combination lamp, rear, removal and
 installationBT-33
 Combination meter.....EL-83
 Combination meter removal and instal-
 lation - See Instrument panel.....BT-22
 Combination switch.....EL-26
 Component Location (auto A/C).....HA-23
 Component Location (manual A/C).....HA-140
 Compressor clutch removal and
 installationHA-111, 196
 Compressor precaution.....HA-7, 128

Compressor special service tool.....HA-10, 131
 Connecting rod.....EM-61
 Connecting rod bearing clearance.....EM-65
 Connecting rod bushing clearanceEM-66
 Connector inspectionGI-21
 Console box - See Instrument panel.....BT-22
 CONSULT for ABSBR-44
 CONSULT for engineEC-88
 Control lever (M/T)MT-15
 Control valve (A/T)AT-312
 Converter housing installation.....AT-369
 COOL/F - Wiring diagramEC-296, 452
 Coolant mixture ratio.....MA-12
 Coolant replacement.....MA-14
 Cooling circuit (engine).....LC-9
 Cooling fan controlEC-449
 Cooling fan motor.....EC-466
 Cooling fan relayEC-465
 Cooling unit (A/C evaporator).....HA-116, 202
 Coupling sleeve (M/T)MT-17
 Crank angle sensor built into distributor
 - See Camshaft position sensorEC-326
 "Crankcase emission control system -
 See positive crankcase ventilation".....EC-48
 Crankcase ventilation system - See
 Positive crankcase ventilationEC-48
 Crankshaft.....EM-63
 Crankshaft position sensor (OBD)EC-320, 467
 Crankshaft position sensor (OBD) cog
 chippingEC-467
 Cruise control - See ASCD.....EL-146
 Cylinder blockEM-58
 Cylinder block boringEM-62
 Cylinder head.....EM-30

D

Data link connector for ConsultEC-50, 88
 Daytime light system.....EL-42
 Daytime running light - See Daytime
 light systemEL-42
 DEF - Wiring diagramEL-123
 Detonation sensor - See Knock sensorEC-316
 Diagnosis sensor unit.....RS-18
 Diagnostic trouble code (DTC) for OBD
 systemEC-8, 68
 Diagnostic trouble code (DTC) inspec-
 tion priority chart.....EC-123
 Differential gear (FF A/T)AT-361
 Differential gear (FF M/T).....MT-17
 DimensionsGI-45
 DistributorEC-31
 Distributor ignition (DI) system.....EC-31
 D/LOCK - Wiring diagram.....EL-178
 Dome light - See Interior lampEL-77
 Door glass.....BT-19
 Door lock.....BT-19
 Door mirror.....BT-54
 Door trimBT-28
 Door, frontBT-19

ALPHABETICAL INDEX

Door, rearBT-21
Drive belt inspectionMA-13
Drive plate runoutEM-67
Drive shaft (front).....AX-10
Dropping resistor (A/T).....AT-180
DTC work supportEC-99
DTRL - Wiring diagram.....EL-46

E

ECM input/output signalEC-134
ECTS - Wiring diagramEC-173, 192
EGR temperature sensorEC-473
EGR/TS - Wiring diagramEC-476
EGRC1 - Wiring diagram.....EC-338, 347, 485
Electric sun roof.....EL-140
Electrical diagnoses.....GI-24
Electrical ignition system.....EC-31
Electrical unitFoldout
Electrical units locationEL-310
Electronic ignition (EI) system.....EC-31
Engine compartment.....BT-57
Engine control circuit diagram.....EC-24
Engine control component parts
locationEC-20
Engine control module (ECM).....EC-443
Engine control system diagram and
chart.....EC-26
Engine coolant temperature sensor
(ECTS).....EC-171, 190
Engine fail-safe systemEC-124
Engine oil filter replacementMA-19
Engine oil precautionsGI-7
Engine oil replacementMA-18
Engine outer component partsEM-10
Engine removalEM-55
Engine room - See Engine
compartment.....BT-57
Engine serial numberGI-44
EVAP canister.....EC-34
EVAP canister purge volume control
solenoid valve.....EC-369, 493
EVAP canister vent control
valveEC-376, 505, 525
EVAP control system (small leak)
diagnosisEC-36, 355, 396, 491
EVAP control system pressure sensor.....EC-383
EVAP control system purge flow moni-
toring diagnosis.....EC-513
EVAP system close modeEC-36
EVAP vapor lines inspection.....MA-21
Evaporative emission (EVAP) system.....EC-33
Exhaust gas recirculation (EGR)
valveEC-334, 482
Exhaust systemFE-8
Exhaust system inspectionMA-22
ExteriorBT-33

F

Fan control amp.HA-67
Fan switchHA-173
F/FOG - Wiring diagramEL-62
Final drive (FF A/T)AT-361
Final drive (FF M/T)MT-39
Finisher, interior - See TrimBT-26
Fluid temperature sensor (A/T)AT-118
FluidsMA-11
Flywheel (clutch).....CL-19
Flywheel runout.....EM-67
Fog lamp, front.....EL-60
Fog lamp, front, removal and
installationBT-13
Fork rod (M/T)MT-18
Forward clutch.....AT-336
F/PUMP - Wiring diagramEC-585
Freeze frame data.....EC-68
FRO2 - Wiring diagram.....EC-199, 220, 228
FRO2/H - Wiring diagramEC-234
Front axle.....AX-2
Front bumperBT-13
Front combination lamp removal and
installationBT-13
Front disc brakeBR-20
Front doorBT-19
Front fog lamp.....EL-60
Front fog lamp removal and installationBT-13
Front heated oxygen sensor
(HO2S).....EC-196, 204, 210, 217, 226
Front heated oxygen sensor (HO2S)
heaterEC-232
Front seat.....BT-39
Front seat beltRS-5
Front suspension.....SU-2
Front washerEL-114
Front wiperEL-114
FUEL - Wiring diagramEC-274, 281
Fuel cut control (at no load & high
engine speed).....EC-33
Fuel filler lid.....BT-16
Fuel filter.....EC-50
Fuel filter replacementMA-17
Fuel gaugeEL-83
Fuel injection systemEC-272, 279
Fuel injectorEC-574
Fuel line inspectionMA-16
Fuel precautionsGI-8
Fuel pressure check.....EC-50
Fuel pressure regulatorEC-51
Fuel pressure releaseEC-50
Fuel pumpEC-583
Fuel pump relayEC-583
Fuel systemFE-5
Fuel tank temperature sensorEC-286
Fuel tank vacuum relief valveEC-34
FuseEL-17
Fuse blockFoldout

ALPHABETICAL INDEX

Fusible linkEL-17

G

Garage jack and safety standGI-47
Gauges.....EL-83
Gear components (M/T).....MT-17
Generator - See Alternator.....SC-30
Generic scan tool (GST)EC-101
GlassBT-19
Grease.....MA-11
Ground distribution.....EL-18

H

Harness connector.....EL-5
Harness connector inspectionGI-21
Harness layoutEL-314
Hazard warning lamp.....EL-65
Headlamp.....EL-30
Headlining - See Roof trimBT-30
Heated oxygen sensor (HO2S)
(front).....EC-196, 204, 210, 217, 226
Heated oxygen sensor (HO2S) heater
(front)EC-232
Heated oxygen sensor (HO2S) heater
(rear)EC-267
Heated oxygen sensor
(rear).....EC-237, 245, 253, 261
Heated seat.....BT-41, EL-145
Heater unit (heater core)HA-114, 200
Height (Dimensions)GI-45
HFC134a (R134a) system precautionHA-3, 124
HFC134a (R134a) system service
procedure.....HA-105, 191
HFC134a (R134a) system service
toolsHA-11, 132
HFC134a system service equipment
precautionHA-7, 128
High clutch.....AT-331
H/LAMP - Wiring diagramEL-34
Hood.....BT-13
Horn.....EL-119
HORN - Wiring diagram.....EL-119
How to erase DTC for OBD system.....EC-79
HSEAT - Wiring diagram.....EL-145
Hydraulic lash adjuster inspectionEM-41

I

IACV-AAC valveEC-423
IATS - Wiring diagramEC-167
Identification plate.....GI-44
Idle air control (IAC) systemEC-423
Idle air control valve (IACV)EC-423
Idle mixture ratio.....EC-53
Idle speed.....EC-53

IGN/SG - Wiring diagramEC-568
Ignition coilEC-573
Ignition control systemEC-566
Ignition timingEC-53
Ignition wire inspection.....EC-315
ILL - Wiring diagramEL-73
IlluminationEL-70
In vehicle sensorHA-95
INFINITI COMMUNICATOR.....EL-272
Infiniti communicator (IVCS)EL-272
INJECT - Wiring diagramEC-575
Injector removal and installationEC-51
Input shaft (FF M/T)MT-26
Instrument panelBT-22
INT/L - Wiring diagram.....EL-82
Intake air temperature sensorEC-165
Intake door control linkage
adjustmentHA-64, 155
Intake door motorHA-58, 152
Integrated homelink transmitterEL-269
InteriorBT-26
Interior lamp.....EL-77, 81
Interior lamp on-off control.....EL-78
IVCS - Wiring diagram.....EL-283
IVIS (Infiniti vehicle immobilizer
system).....EL-249
IVIS (Infiniti vehicle immobilizer sys-
tem) precautionsGI-3

J

Jacking points.....GI-47
Joint connector (J/C)Foldout
Junction box (J/B).....Foldout

K

Keyless entry system - See Multi-re-
mote control system.....EL-190
Knock sensor (KS)EC-316, 317
Knuckle spindleAX-5

L

Length (Dimensions)GI-45
License lampEL-52
Lifting pointsGI-48
Line pressure solenoid valveAT-156
Line pressure test (A/T)AT-66
Liquid gasket applicationEM-3
LOAD - Wiring diagramEC-602
Location of electrical unitsEL-310
Lock, doorBT-19
Low and reverse brakeAT-343
Lubricant (R134a) A/CHA-107, 193
Lubricants.....MA-11
Lubrication circuit (engine)LC-3

ALPHABETICAL INDEX

Lubrication-locks, hinges and hood
latchesMA-26
Luggage room lamp.....EL-81

M

MAFS - Wiring diagram.....EC-158
Magnet clutchHA-73, 111, 196
MAIN - Wiring diagram.....EC-147
Mainshaft (M/T)MT-31
Maintenance (engine)MA-13
MAJOR OVERHALL.....AT-286
Malfunction indicator lamp (MIL).....EC-81
Manual air conditioner - Wiring diagram.....HA-143
Manual transaxle number.....GI-44
Manual transmission oil replacementMA-22
Mass air flow sensor (MAFS).....EC-154
Master cylinder (brake)BR-14
Master cylinder (clutch)CL-8
MeterEL-83
METER - Wiring diagram.....EL-86
MIL & Data link connectors circuitEC-609
MIL/DL - Wiring diagramEC-609
MIRROR - Wiring diagram.....EL-143
Mirror defoggerEL-121
Mirror, door.....BT-54
Mirror, out sideBT-54
MisfireEC-309
Mode door control linkage adjustment...HA-53, 161
Mode door motor.....HA-48, 157
Model variationGI-42
Molding - See ExteriorBT-33
M/T major overhaulMT-15
M/T removal and installationMT-12
MULTI - Wiring diagram.....EL-194
Multi-remote control system.....EL-190
Multiport fuel injection (MFI) systemEC-29
Multiport fuel injection precautions.....GI-6

N

NATS (Nissan anti-theft system)
precautionsGI-3
NATS - Wiring diagram.....EL-251
Neutral position switchEC-559
NVH troubleshooting (AX)AX-3
NVH troubleshooting (BR).....BR-6
NVH troubleshooting (CL)CL-4
NVH troubleshooting (M/T)MT-6
NVH troubleshooting (ST).....ST-5
NVH troubleshooting (SU).....SU-17

O

Oil change (capacity)MA-11
Oil pan (engine)EM-14
Oil pressure (engine)LC-4

Oil pump (A/T).....AT-308
Oil pump (engine)LC-4
Oil pump regulator valve (engine)LC-6
Oil seal replacement (engine).....EM-28
On board diagnostic systemEC-67
Operating cylinder (clutch).....CL-13
ORVR (On-board Refueling Vapor
Recovery).....EC-39
Out side mirrorBT-54
Overdrive control switch.....AT-270
Overrun clutchAT-336
Oversize pistonEM-62

P

P/ANT - Wiring diagram.....EL-136
Park/Neutral position switch.....EC-559
Park/neutral position switch (A/T)AT-107
Park/neutral position switch (M/T).....MT-10
Parking brake controlBR-32
Parking lampEL-52
PCV (positive crankcase ventilation)EC-48
PGC/V - Wiring diagramEC-372, 496
Pilot bushing replacementEM-66
Piston assembly.....EM-67
Piston pin inspection.....EM-59
Piston ring inspection.....EM-60
Piston to bore clearance.....EM-62
PNP/SW - Wiring diagramEC-561
POWER - Wiring diagram.....EL-10
Power antenna.....EL-135
Power door lockEL-176
Power door mirrorEL-143
Power seatEL-144
Power steering fluid level.....MA-25, ST-7
Power steering gear.....ST-15
Power steering hydraulic pressureST-8
Power steering oil pressure switchEC-592
Power steering oil pump.....ST-26
Power steering system bleeding.....ST-7
Power supply routingEL-9
Power transistorEC-573
Power transistor & ignition coil.....EC-566
Power windowEL-166
PRE/SE - Wiring diagramEC-386
Precautions (General)GI-4
Pressure plate - See Clutch coverCL-19
Pressure test (A/T)AT-66
PST/SW - Wiring diagram.....EC-593

R

RadiatorLC-14
Radiator fan - See Cooling fan.....LC-14
Radio - See Audio.....EL-130
Rear air spoilerBT-33
Rear axleAX-20
Rear bumperBT-16

ALPHABETICAL INDEX

Rear combination lamp removal and
installationBT-33
Rear disc brakeBR-24
Rear doorBT-21
Rear heated oxygen sensor
(HO2S)EC-237, 245, 253, 261
Rear heated oxygen sensor (HO2S)
heater.....EC-267
Rear seatBT-42
Rear seat belt.....RS-7
Rear suspensionSU-17
Rear window defogger.....EL-121
Refrigerant pressure sensorHA-79, 181
Refrigerant connection precautionHA-5, 126
Refrigerant discharging evacuating
chargingHA-105
Refrigerant general precautionHA-4, 125
Refrigerant linesHA-117, 203
Refrigerant pressure sensor.....EC-597
Refrigeration cycleHA-14, 135
Release bearing (clutch).....CL-16
Removal and installation (A/T).....AT-283
ResistorEC-573
Reverse clutch.....AT-327
Reverse idler shaft (M/T)MT-16
Reverse lamp switch (M/T) - See
Back-up lamp switch (M/T).....MT-10
Reverse main gear (M/T).....MT-17
Road wheel sizeGI-45
Roof trimBT-30
Room lamp - See Interior lampEL-77
ROOM/L - Wiring diagramEL-79
RRO2 - Wiring diagramEC-239, 247, 255, 263
RRO2/H - Wiring diagramEC-269

S

SAE J1930 terminology listGI-52
Seal - See ExteriorBT-33
SEAT - Wiring diagramEL-144
Seat belt inspectionMA-26, RS-9
Seat belt pre-tensionerRS-3
Seat belt pre-tensioner disposalRS-26
Seat belt, front.....RS-5
Seat belt, rear.....RS-7
Seat, frontBT-39
Seat, rearBT-42
SHIFT - Wiring diagramAT-273
Shift control components (M/T)MT-18
Shift fork (M/T)MT-18
Shift leverMT-15
Shift lock systemAT-272
Shift scheduleAT-389
Shift solenoid valve A (A/T)AT-128, 133, 146
Shift solenoid valve B (A/T)AT-128, 133
Shock absorber (front)SU-10
Shock absorber (rear)SU-22
Side air bagRS-24
Side trimBT-26
Smart entrance control unitEL-243

SMJ (super multiple junction).....Foldout
Spare tire sizeGI-45
Spark plug replacement.....MA-19
Speedometer.....EL-83
Spiral cable.....RS-20
Spot lamp.....EL-81
Spring (Wheelarch) heightSU-5
SROOF - Wiring diagramEL-141
SRS - See Supplemental Restraint
System.....RS-13
SRS - Wiring diagramRS-38
S/SIG - Wiring diagramEC-580
Stabilizer bar (front).....SU-13
Stall test (A/T)AT-62
Standardized relayEL-7
START - Wiring diagram.....SC-11
Start signalEC-579
Starter.....SC-19
Starting system.....SC-10
Steering gear, linkage and transfer
gear inspection.....MA-25
Steering linkageST-15
Steering switch.....EL-28
Steering wheel and columnST-10
Steering wheel playST-6
Steering wheel turning force.....ST-8
Stop lamp.....EL-58
STOP/L - Wiring diagram.....EL-58
Striking rod (M/T)MT-18
Strut (front)SU-9
Strut (rear)SU-21
Sub-gear (M/T)MT-17
Sun roof, electric.....EL-140
Sunload sensorHA-99
Sunroof.....BT-43
Supplemental Restraint System.....RS-13
Supplemental restraint system - Wiring
diagram.....RS-38
Symbols and abbreviationsGI-9
Symptom matrix chartEC-125
Synchronizer (M/T).....MT-17
System readiness test (SRT) codeEC-69

T

TachometerEL-83
Tail lamp.....EL-52
TAIL/L - Wiring diagramEL-54
TCM circuit diagram.....AT-15
TCM inspection tableAT-100
TFTS - Wiring diagram.....EC-288
THEFT - Wiring diagram.....EL-220
Theft warning system.....EL-215
Thermal protectorHA-114, 200
Thermostat.....LC-12
Three way catalystEC-351
Three way catalyst precautions.....GI-6
Throttle position sensor (TPS)EC-177
Throttle position sensor adjustment.....EC-107
Throttle position switch.....AT-201, 270, EC-432

ALPHABETICAL INDEX

Throwout bearing - See Clutch release bearingCL-16
Tie-rod ball joints.....ST-19
Tightening torque of standard bolts.....GI-51
Timing belt.....EM-19
Tire rotationMA-24
Tire sizeGI-45
TLID - Wiring diagramEL-139
Torque converter installationAT-284
Tow truck towingGI-49
TP/SW - Wiring diagramEC-434
TPS - Wiring diagram.....EC-183
Transmission case (M/T).....MT-16
TRANSMT - Wiring diagramEL-269
Tread-FR&RR (Dimensions).....GI-45
TrimBT-26
Trouble diagnosesGI-34
Trunk room trim.....BT-32
TURN - Wiring diagramEL-67
Turn signal lampEL-65
Two trip detection logicEC-67
Two-pole liftGI-48

U

Under bodyBT-59

V

Vacuum cut valve bypass valve.....EC-538, 544
Vacuum hose (brake system).....BR-19
Vacuum hose drawing (Engine control)EC-27
Valve guide.....EM-38
Valve seat.....EM-39
Valve spring.....EM-41
Vehicle identification number.....GI-43
Vehicle recovery (freeing a stuck vehicle).....GI-50
VEHICLE SECURITY (THEFT WARN-ING) SYSTEMEL-215
Vehicle speed sensor (VSS)EC-419

Vent mode switchHA-137
VENT/V - Wiring diagramEC-378, 507, 528
Viscosity number (SAE)MA-11
Viscous coupling (FF A/T).....AT-361
Viscous coupling (FF M/T)MT-11
VSS - Wiring diagramEC-421

W

WARN - Wiring diagramEL-99
Warning chimeEL-105
Warning lampsEL-98
Washer, frontEL-114
Water cock control rod adjustmentHA-166
Water pumpLC-10
Water temperature gaugeEL-83
Weatherstrip - See ExteriorBT-33
Wheel alignment (front)SU-6
Wheel alignment (rear).....SU-19
Wheel balanceMA-24
Wheel bearing (front).....AX-3
Wheel bearing (rear)AX-21
Wheel hub (front).....AX-5
Wheel hub (rear)AX-21
Wheel sensors (ABS).....BR-75
Wheel sizeGI-45
Wheelarch heightSU-5
Wheelbase (Dimensions)GI-45
Wide open & closed throttle position switchEC-177
Width (Dimensions)GI-45
WINDOW - Wiring diagramEL-169
Window, doorBT-19
Windshield.....BT-52
WIPER - Wiring diagram.....EL-116
Wiper, front.....EL-114
Wiring Diagram (Cell code) list.....EL-331
Wiring Diagram - VEHSEC -EL-220
Wiring diagramsGI-11
Withdrawal lever (clutch)CL-16
Wrist pin - See Piston pin inspection.....EM-59