


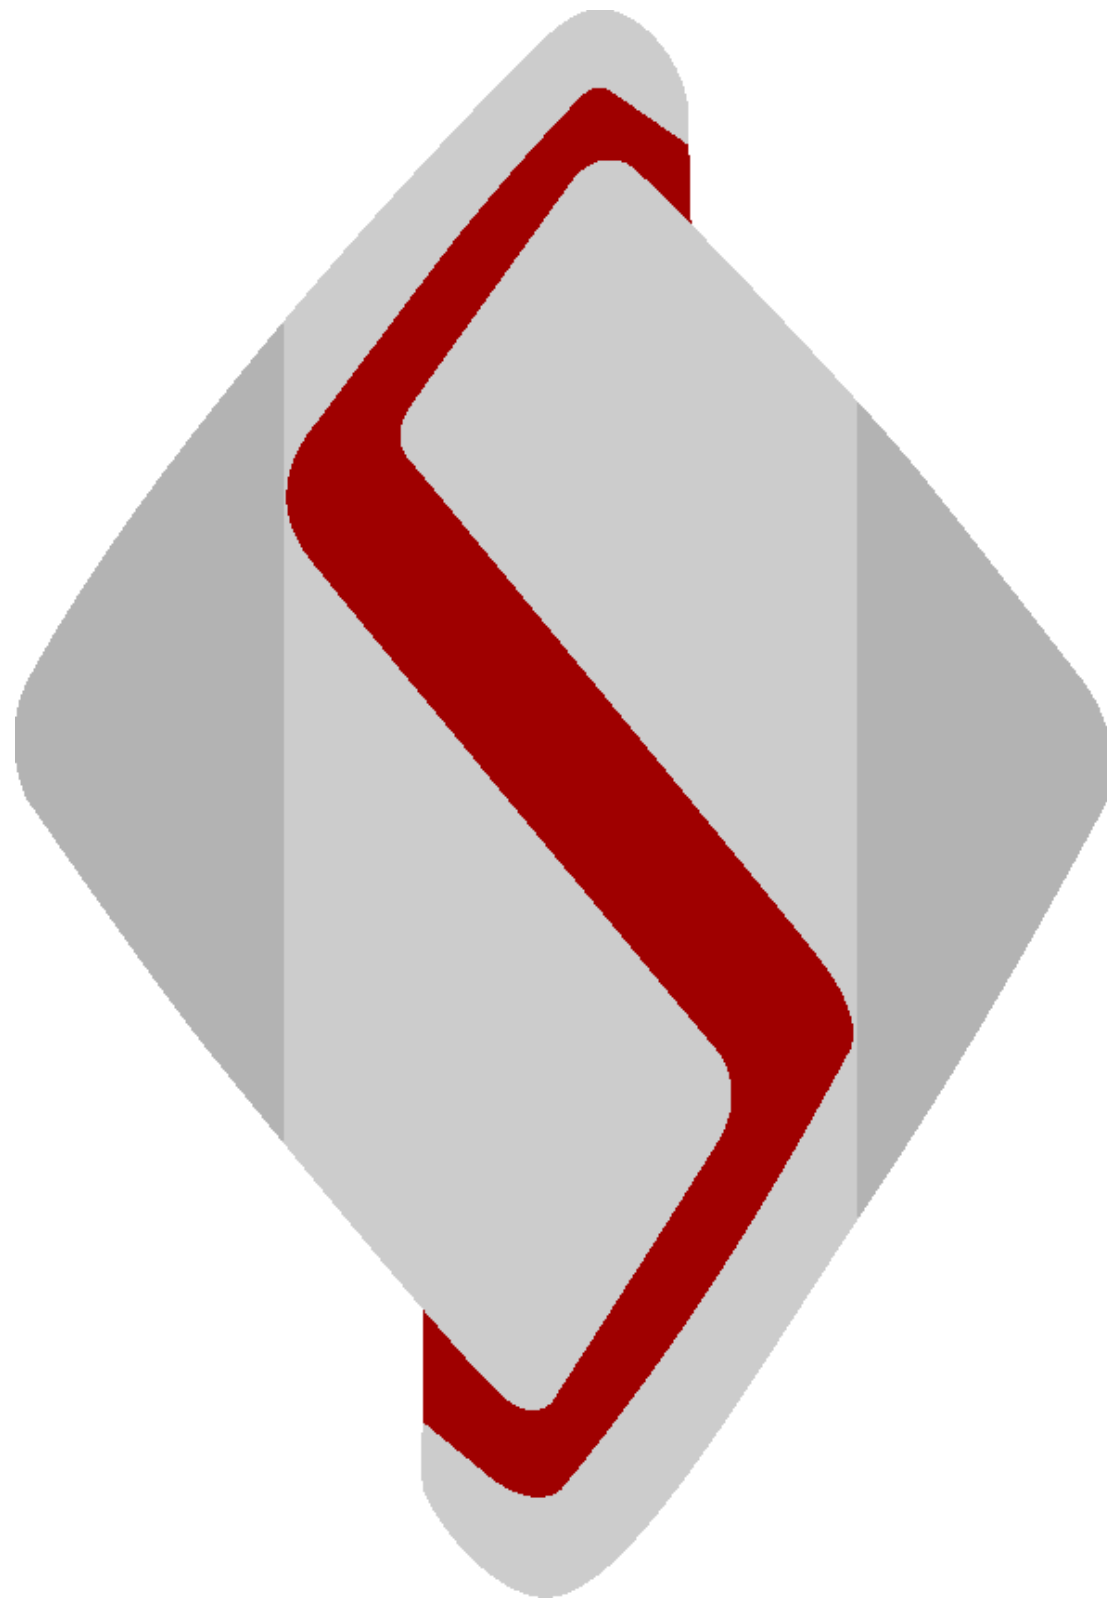

Nissan Skyline Wiring Diagram

Translated by Andy Cowdery

E-EN33

E-ER33

E-ECR33

E-ENR33

E-BCNR33

1996

Description	Item No	Images	Main Diagram Reference	Specific Diagram		Description	Item No	Images	Main Diagram Reference	Specific Diagram
4 Way Switch	B-53	2-B	B2	1~3-G2		Body Earth	T-63	3(1),(2)-B		4,5-C1
A/C Amp	B-74	2-A	D3	S8-A2		Body Sub/H~ECCS/H	B-85	2-A		S2,S3,S4-B2
A/C Relay <1M>	R-9	I(1)~(5)-A	D3	S8-A1		Body Sub/H~Main/H	B-83	2-A		S2,S3,S4-B2
A/T C/U	B-1	2-C	D1	1,2-C2		Body Sub/H~Tail/H	T-43	3(1),(2)-B		S3,S4-C2
A/T Device	F-7	3(1),(2)-A	A2,D1,E1	4-A2		Body/H~Body Sub/H	F-11	3(1),(2)-A		S3,S4-C1
A/T S/V	A-11	I(1)~(4)-A	D1	1,2-B2		Body/H~Body Sub/H	T-17	3(1),(2)-B		S3,S4-C1 S2-B1
AAC Valve	A-39	I(1)~(5)-B	B1,C1,E1	3-A1 6,7-A2		Body/H~Door/H (Rear Left)	F-13	3(2)-A		4,9-B2
ABS Actuator	A-52	I(1)~(5)-C	F2,G1,G2	S2,S3,S4-A2		Body/H~Door/H (Rear Right)	F-2	3(2)-B		4,9-B1
ABS C/U	T-56	3(1)-C 3(2)-B	F2	S2-A2		Body/H~Engine Loom/H	B-9	2-C		1,2-D2 3-C2 4,5-A2
ABS Sensor? (Front Left)	A-57	I(3)~(5)-C	F2,G1	S2,S3,S4-A2		Body/H~Main/H	B-25	2-C		1,2-H1 3-G1 4-F2
ABS Sensor? (Front Right)	A-5	I(3)~(5)-A	F2,G1	S3,S4-A1 S2-A2		Body/H~Tail/H	T-27	3(1),(2)-C		4-C1 5-C1
ABS Sensor? (Rear)	T-8	3(1),(2)-C	F2,G1,G2	S2-B1 S3,S4-C1		Boost Sensor	A-2	I(3)~(5)-A	A3	1~3-C1
ACC Relay 1 <1M>	R-15	2-C	A1	1~3-D2		Boot Lamp	T-23	3(1),(2)-C	C2	4,5-B2
ACC Relay 2 <1M>	R-14	2-C	A1	1~3-D2		Boot Lamp Switch	T-50	3(1),(2)-C	C2	4-C1 5-C1
Acceleration Sensor	A-33	I(1)~(5)-B	A3	1~3-A1		Brake Fluid Level Sensor	A-3	I(1)~(5)-A	A3	1~3-C1
Air Bleed Connector E-TS	B-34	2-C	F2,G1	3-E1		Brake Switch	B-44	2-B	E1	1,2-E1
Air Flow Meter	A-56	I(1)~(4)-C	A1,C1	6,7-B2		Buzzer	B-45	2-B	C2	3-F2
Air Flow Meter (Front)	A-56	I(5)-C	E1	8-B2		CAS	A-51	I(1)~(5)-B	B1,C1,E1	6-A2 7,8-A1
Air Flow Meter (Rear)	A-59	I(5)-C	E1	8-B2		Check Connector 1	A-53	I(3)~(5)-C	C1,F1	7,8-B2
Air Mix Door Actuator	B-48	2-B	D3	S8-B2		Cigarette Lighter	B-68	2-B	A2,B3	1~3-G2
Air Regulator	A-30	2-B	D3	S8-B2		Circuit Breaker	B-46	2-B	D2	1~3-E1
Airbag/H~Main/H	B-70	2-B		1,2,3-D1		Clearence Lamp Left	C-17	I(1)~(5)-C	B2	1~3-A2
A-LSD Actuator	T-31	3(1),(2)-C	G2	S3-C1		Clearence Lamp Right	C-3	I(1)~(5)-A	B2	1,3-A2 2-A1
A-LSD Actuator Relay <1T>	R-22	3(1)-C 3(2)-B	G1,G2	S3-B2 S4-C2		Clock	B-55	2-B	B2	1~3-H2
A-LSD G Sensor	F-15	3(1),(2)-A	F2	S3-C1		Clutch Switch	B-71	2-B	E2	1,2-F1
A-LSD Motor Relay <1M>	R-23	3(1)-C	G2	S3-C1		Combination Lamp (Front Left)	C-16	I(1)~(4)-C	A2	1,2-A2
A-LSD/ABS C/U	T-57	3(1)-C	F2	S3-B2		Combination Lamp (Front Right)	C-5	I(1)~(4)-A	A2	1,2-A1
Alternator	A-25	I(1)~(5)-B	A1	1,3-B1 2-A1		Combination Lamp (Rear Left)	T-38	3(1),(2)-C	B2	4,5-C2
ATTESA E-TS Pro Actuator	T-31	3(1)-C	G1,G2	S4-C1		Combination Lamp (Rear Right)	T-34	3(1),(2)-C	B2	4,5-C1
ATTESA E-TS Pro Motor Relay <1M>	R-23	3(1),(2)-C	G1,G2	S4-C1		Combination Meter	B-41	2-B	A2,A3	1~3-H1
ATTESA E-TS Pro PRT G Sensor	F-15	3(1)-A	G1,G2	S4-C1		Combination Switch	B-17	2-B	A2,B2	1~3-C2
ATTESA E-TS Pro/ABS C/U	T-56	3(1)-C 3(2)-B	G1,G2	S4-B2		Compressor	A-14	I(1)~(5)-C	D3	S8-A1
Audio Terminal	B-57	2-B	F3	1~3-H2		Condensor	T-21	3(1),(2)-C	C3	4-B1 5-B1
Auto Amp?	B-52	2-B	A2,D3	S8-B2		Connecting Connector	T-65	3(1),(2)-C	G1	S4-C2
Aux Electric Fan motor	C-12	I(3)~(5)-B	F1	1~3-A2		Cornering Clearence Lamp Left	C-18	I(2),(4)-C	A2,B2	2-A2
Aux Electric Fan Relay <1M>	R-10	I(3)~(5)-A	F1	1-B1 2,3-C1		Cornering Clearence Lamp Right	H2	I(2),(4)-A	A2,B2	2-A1
AV Tuner	T-28	3(2)-C	G3	S7-A2		Cornering Lamp Relay <1M>	R-5	I(2),(4)-A	A2	2-C1
Battery	A-77	I(1),(4)-A	A1	2-B1		De-Fogger (-)	T-62	3(1),(2)-B		4-C1 5-B1
Battery	T-58	3(1)-B	A1	4,5-A1		De-Fogger (+)	T-60	3(1),(2)-C	C3	4,5-B1
Bi Level Door Actuator ?	B-72	2-B	D3	S8-B1		De-Fogger Relay <1M> <2M>	R-1	2-C	C3	1~3-F1
Blower Fan Motor	B-81	2-A	D3	S-B1		De-Fogger Switch	B-54	2-B	C3	1,2-F1
Body Earth	A-9	I(1)~(5)-A		1~3-C1		Diagnosis Cut Off Connector	B-36	2-C	G3	1~3-E2
Body Earth	A-15	I(1)~(5)-C		1,3-C2 2-B5		Diode	B-7	2-C	A2	2-C1
Body Earth	A-21	I(1)~(5)-A		1~3-B1		Diode	B-8	2-C	A2	2-C1
Body Earth	A-75	I(1)~(5)-A		2-B1		Diode	B-28	2-C	C2	3-F1
Body Earth	B-38	2-C		1,2-E1		Diode	B-29	2-C	E2	1,2-F1
Body Earth	B-79	A-2		1~3-F2		Diode	B-30	2-C	A3	1~3-F1
Body Earth	F-10	3(1),(2)-A		4,5-A2		Diode	B-91	2-A	G1	S4-B2
Body Earth	T-1	3(1),(2)-C		4-A1 5-B1		Diode	B-92	2-A	G1,G2	S3,S4-B2
Body Earth	T-37	3(1),(2)-C		4,5-C2		Display Unit	B-56	2-B	G3	S7-A1
Body Earth	T-55	3(1),(2)-B		S2,S3-B2 S4-C2		Distributor Earth (RB20E)	A-62	I(1),(2)-C		6-A2
Body Earth	T-57	3(1)-B		4,5-A1		Door Lock Actuator (Front Left)	D-16	4-A	C2	9-A2


Description	Item No	Images	Main Diagram Reference	Specific Diagram		Description	Item No	Images	Main Diagram Reference	Specific Diagram
Door Lock Actuator (Front Right)	D-8	4-B	D2	9-A1		E-TS Actuator Relay <1T>	R-30	3(1),(2)-C	G1	S4-B2,C2
Door Lock Actuator (Rear Left)	D-21	4-A	C2,D2	9-B2		Wastegate Control Valve Solenoid	A-58	l(3),(4)-C	C1,E1	3,7-A2
Door Lock Actuator (Rear Right)	D-26	4-B	C2	9-B1		Fan Control Amp	B-75	2-A	D3	S8-B1
Door Lock Knob Switch	D-8	4-B	C2	9-A1		FICD S/V	A-40	l(3),(4)-B	D3	S8-A2
Door Switch (Front Left)	F-12	3(1),(2)-A	C2	4-B2		FICD Relay <1M>	R-6	l(3),(4)-A	D3	S8-A1
Door Switch (Front Right)	F-3	3(1),(2)-B	C2	4-B1		Flasher Unit	B-47	2-B	B2	1~3-F2
Door Switch (Left)	F-12	3(1)-A	C2	5-A2		Fog Lamp Relay <2M>	R-4	l(1)~(4)-A	A2	1,2-C1
Door Switch (Rear Left)	D-20	4-A	C2	9-B2		Fog Lamp Relay Terminal	R-4	l(5)-A		3-C1
Door Switch (Rear Right)	D-25	4-B	C2	9-B1		Fog Lamp Relay Terminal (Left)	C-14	l(5)-C		3-A2
Door Switch (Right)	F-3	3(1)-B	C2	5-B1		Fog Lamp Relay Terminal (Right)	C-6	l(5)-A		3-A1
Door/H(Front Left)~Body/H	B-80	2-A		1~3-E2 9-A2		Fog Lamp Switch	B-16	2-C	A2	1,2-B2
Door/H(Front Right)~Body/H	B-26	2-C		1,2-E1 3-D1		Fog Lamp Switch Terminal	B-16	2-C		3-B2
Door/H(Rear Left)~Body/H	F-13	3(3)-A		4,9-B2		Fuel Gauge Unit	T-4	3(1),(2)-C	A3	4,5-B2
Door/H(Rear Right)~Body/H	F-2	3(2)-B		4,9-B1		Fuel Pump	T-5	3(1),(2)-C	A1,B1,E1	4,5-B2
Dropping Resistor	T-41	3(1),(2)-B	B1	4-C2		Fuel Pump Control Regulator	T-20	3(1),(2)-C	A1,B1	4,5-B2
Dropping Resistor	A-19	l(5)-A	F1	3-A2		Fuel Pump Relay <1M>	R-27	2-C 3(1)-C	A1,B1,E1	4,5-A1
Dropping Resistor (A/T)	A-16	l(2),(4)-A l(1),(3)-C	D1	1,2-B2		Fuse Block	B-11	2-C		12-D2,E2 3-C2,D2 4,5-A2
Dual Mode Muffler Actuator	T-39	3(1)-B	B3	4-H2		Fuse Block (Boot)	T-16	3(1)-B	A1	4,5-A1
Dual Mode Muffler Controller	T-40	3(1)-B	B3	4-H2		Hazzard Switch (4 way Switch)	B-53	2-B	B2	1~3-G2
Dual Pressure Switch (RB20E)	A-13	l(1),(2)-C	D3	S8-A1		Head Lamp (Left)	C-13	l(1)~(5)-C	A2	1~3-A2
ECCS C/U	B-87	2-A	B1,C1,E1	6-B1,B2 7,8-B1		Head Lamp (Right)	C-4	l(1)~(5)-A	A2	1~3-A2
ECCS Relay <1M>	R-20	2-A	A1,C1,E1	6,7,8-A1		Heater Mirror (Door Left)	D-12	4-A	C3	9-A2
ECCS/H No 2~Engine/H No 2	A-24	l(5)-B		1-A1 7-B1		Heater Mirror (Door Right)	D-4	4-B	C3	9-A1
ECCS/H~Body Sub Loom/H	B-85	2-A		S2,S3,S4-B2		HICAS C/U	T-3	3(1)-C 3(2)-B	E2	S1-B2
ECCS/H~ECCS Sub/H	A-37	l(3)~(5)-B		7,8-A2		HICAS Check Connector	B-34	2-C	E2	3-E1 1,2-F1
ECCS/H~ECCS/H No 2	A-43	l(3)~(5)-B		3-A1 7-A1 8-A1		HICAS Monitor	T-13	3(1),(2)-C	E2	S1-B2
ECCS/H~Engine Loom/H	A-17	l(1)~(5)-C		1,2,3-A2 7-B1		HICAS Motor Relay <1M>	R-24	3(1),(2)-C	E2	S1-B2
ECCS/H~Engine Loom/H No 2	A-24	l(3),(4)-B		1-A1,7-B1		HICAS Sensor (Main)	T-12	3(1),(2)-C	E2	S1-B2
ECCS/H~Knock Sensor/H	A-37	l(1),(2)-B		6-B2		HICAS Sensor (Sub)	T-11	3(1),(2)-C	E2	S1-B2
ECCS/H~Main/H	B-82	2-A		12-F2 3-E2 6,7,8-B1		High Mount Stop Lamp (Boot Lid)	T-51	3(2)-C	B2	4-C1
EGT Sensor	F-9	3(1),(2)-A	B1,C1	4-B2		High Mount Stop Lamp (Rear Spoiler)	T-53	3(1)-C	B2	4,5-C1
EGT Sensor Switching Module	F-9	3(1)-A	E1	5-B2		High Mount Stop Lamp/H~Tail/H No 2	T-51	3(1)-C		4,5-C1
EGT Switching Module	F-9	3(1)-A	E1	5-B2		Horn Hi	C-9	l(1)~(5)-B	E3	1~3-A2
Electic Mirror (Door Left)	D-11	4-A	C3	9-A2		Horn Low	C-10	l(1)~(5)-B	E3	1~3-A2
Electic Mirror (Door Right)	D-3	4-B	C3	9-A1		Horn Relay	R-2	l(1)~(5)-A	E3	1-B1 2,3-C1
Electic Mirror Switch	B-33	2-C	C3	1~3-E1		IGN Coil	A-61	l(1),(2)-B	B1	6-A2
Empty Terminal	B-19	2-B		1~3-B2		IGN Coil	A-70	l(3)~(5)-B	C1,F1	7,8-A2
Engine Earth	A-40	l(5)-B		8-A2		IGN Coil Relay <1M>	R-21	2-A	F1	8-A1
Engine Earth	A-47	l(1)~(5)-B		6~8-A2		IGN Relay <1M>	R-16	2-C	A1	1,2,3-D2
Engine Earth	A-48	l(1)~(5)-B		6~8-A2		Inflator?	B-93	2-A	E3	S5-A2
Engine Earth	A-69	l(5)-B		8-A2		Inhibitor Switch	A-10	l(1)~(4)-A	A1,D1	1,2-A2
Engine Earth	A-76	l(1),(2)-B l(3)~(5)-A		2-B1		Injector	A-65	l(1)~(5)-B	B1,C1,F1	6,7,8-A1
Engine Earth	A-82	l(3),(5)-B		7-A2		Inside Air Temperature Sensor	B-51	2-B	D3	S8-B1
Engine Loom/H~ECCS/H	A-17	l(1)~(5)-C		1~3-A2 7-B1		Intake air temperature sensor	A-41	l(5)-B	F1	8-A1
Engine Loom/H~Engine/H No 2	A-6	l(1)~(5)-A		1~3-A1		Intake Door Actuator	B-76	2-A	D3	S8-B2
Engine Loom/H~Main/H	B-6	2-C		2,2,3-D1		Joint Connector	B-86	2-A		6~8-B2
Engine/H No 2~ECCS/H No 2	A-24	l(5)-B		3-A1		Joint Connector A	B-31	2-C		1~3-F1
Engine Loom/H~Body/H	B-9	2-C		12-D2 3-C2 4,5-A2		Joint Connector B	B-40	2-B		1~3-G1 3-F1
Engine/H No 2~ECCS/H	A-24	l(3),(4)-B		1-A1 7-B1		Joint Connector C	B-73	2-A		1~3-G1
EPS C/U	T-2	3(1),(2)-C	E2	4-B1		Joint Connector D	B-27	2-C		1~3-G1
EPS SV	A-22	l(3)~(5)-A	E2	1,2,3-A1		Key illumination sensor	B-14	2-B	C2	1~3-B2

Description	Item No	Images	Main Diagram Reference	Specific Diagram		Description	Item No	Images	Main Diagram Reference	Specific Diagram
Key insert SW	B-15	2-B	C2	1-C2 2,3-B2		Resistor (RB20E)	A-59	I(1),(2)-C	B1	6-A2
Key SW	B-13	2-B	A1	1~3-C2		Reverse Lamp Switch (M/T)	A-31	I(1)~(5)-B	B2	1~3-A1
Kick down SW	B-10	2-C	D1	1,2-C2		Seatbelt (Left)	F-14	3(1),(2)-A	A3	4-B2 5-A2
Knock Sensor	A-28	I(1),(2)-B	B1	6-B2		Seatbelt (Right)	F-1	3(1),(2)-B	B3	4-B1
Knock Sensor 1	A-28	I(3)~(5)-B	C1,E1	1~3-A1		Seatbelt Buckle Switch (Left)	F-8	3(1),(2)-A	A3	4,5-A2
Knock Sensor 2	A-23	I(3)~(5)-B	C1,E1	1~3-A1		Seatbelt Buckle Switch (Right)	F-4	3(1),(2)-B	B3	4-A1,5-B1
Knock Sensor/H~ECCS/H (RB20E)	A-37	I(1),(2)-B		6-B2		Short Connector (RB26DETT,RB25	T-20	3(1),(2)-C		4-B2
Loom Lamp	G-2	3(1),(2)-B	C2	1~3-H2		Speaker (Door Left)	D-10	4-A	F3,G3	9-A2
Loom Lamp/H~Main/H	B-38	2-C		1~3-H2		Speaker (Door Right)	D-1	4-B	F3,G3	9-A1
Main/H~Airbag/H	B-70	2-B		1~3-D1 S5-A2		Speaker (Pillar Left)	B-78	2-A	F3,G3	1~3-F2
Main/H~Body Sub/H	B-83	2-A		S2,S3,S4-B1		Speaker (Pillar Right)	B-37	2-C	F3,G3	1~3-E1
Main/H~Body/H	B-25	2-C		1,2-H1 3-G1 4-A2		Speaker (Rear Left)	T-26	3(1),(2)-B	F3,G3	4,5-B2
Main/H~Door/H (Front Left)	B-80	2-A		1~3-E2		Speaker (Rear Right)	T-22	3(1),(2)-C	F3,G3	4,5-B1
Main/H~Door/H (Front Right)	B-26	2-C		9-A1 1,2-E1 3-D		Speaker Amp	T-6	3(1)-C	F3	5-B2
Main/H~ECCS/H	B-83	2-A		1,2-F2 3-E2 6-8-B1		Spot Lamp	G-3	3(1),(2)	C2	1~3-H2
Main/H~Engine Loom/H	B-6	2-C		1~3-D1		SRS Airbag C/U	F-20	3(1),(2)-B	E3	S5-A2
Main/H~Loom Lamp/H	B-38	2-C		1~3-H2		Starter Motor	A-27	I(1),(2)-B I(3)~(5)-A	A1	1-A1 2,3-B1
Misc Sound Proofing Condensor	A-42	I(1)~(5)-B	B1,D1,F1	6~8-A2		Steering Wheel	B-19	2-B	E2	S1-A2
Mode Door Actuator	B-49	2-B	D3	S8-B2		Steering Wheel	B-97	2-B	E3	1~3-D1
Neutral Switch (M/T)	A-32	I(1)~(5)-B	B1,C1,F1	1~3		Stop Lamp Switch	B-43	2-B	B2	1~3-F2
Number Plate Lamp	T-35	3(1),(2)-C	B2	4,5-C1		Sub Meter	B-42	2-B	A2	3-G1 S4-B1
O2 Sensor	A-55	I(1)~(3)-B	B1,C1	6,7-B2		Sun Light Sensor	B-69	2-A	D3	S8-B1
O2 Sensor (Front)	A-55	I(5)-B	E1	8-B2		Sunroof	G-1	3(1),(2)-A	E3	1,2-H2
O2 Sensor (Rear)	A-60	I(5)-B	E1	8-B2		Tail/H No 2~High Mount Stop Lam	T-51	3(1)-C		5-C1,C2
Oil Level Sensor	T-30	3(1),(2)-C	F2,G1,G3	S3,S4-C1		Tail/H~Body Sub/H	T-43	3(1),(2)-B		S3,S4-C2
Oil Pressure Switch	A-29	I(1)~(5)-B	A3	3-B1 1,2-A1		Tail/H~Body/H	T-27	3(1),(2)-C		4-C1 5-C1,C2
Oil Temperature Sensor	A-81	I(5)-B	A3	3-A1		Tail/H~Tail/H No 2	T-33	3(1),(2)-C		4,5-C1
Output Power Axle Spin Sensor	A-12	I(1)~(4)-A	D1	1,2-A2		TCU	B-77	2-C	C2	1~3-F2
Outside Air Temp Sensor	C-11	I(1)~(5)-B	D3	S8-A1		Throttle Sensor	A-45	I(1),(5)-B	B1,C1,F1	6~8-A2
P/S Switch	A-26	I(1)~(4)-A I(5)-B	B1,C1,F1	1,2-A1 3-B2		Throttle Switch	A-46	I(1)~(5)-B	D1,E1	6~8-A2 7-B2
P/Tr	A-63	I(1),(2)-B	B1	6-A2		Triple Pressure Switch (RB25DE, I	A-13	I(3),(4)-C I(5)-B	F1	1~3-A2
P/Tr Unit (Coil Side)	A-68	I(5)-B	F1	8-A2		Turn Signal Lamp (Front Left)	C-16	I(5)-C	B2	3-A2
P/Tr Unit (Control Side)	A-38	I(5)-B	F1	8-A2		Turn Signal Lamp (Front Right)	C-5	I(5)-A	B2	3-A1
P/W Main Switch	D-2	4-B	D2	9-B1		Turn Signal Lamp (Side Left)	C-19	I(1)~(5)-C	B2	6~8-B2
P/W Motor (Front Left)	D-14	4-A	D2	9-A2		Turn Signal Lamp (Side Right)	C-1	I(1)~(5)-A	B2	1~3-C1
P/W Motor (Front Right)	D-5	4-B	D2	9-A1		VTC Solenoid	A-44	I(3),(4)-B	C1	7-A1
P/W Motor (Rear Left)	D-18	4-A	D2	9-B2		Washer Motor (Front)	A-7	I(1)~(5)-A	B3	1,2,3-A2
P/W Motor (Rear Right)	D-23	4-B	D2	9-B1		Washer Motor (Rear)	A-8	I(1)~(5)-A	C3	1,2,3-A2
P/W Relay <1M> <1M1B>	R-13	2-C	D2	1~3-E1		Water Temperature Sensor (Dash)	A-50	I(1)~(5)-B	A3	6~8-A1
P/W Switch (Front)	D-13	4-A	D2	9-B2		Water Temperature Sensor (ECU)	A-49	I(1)~(5)-B	B1,C1,D1,F1	6~8-A1
P/W Switch (Rear Left)	D-19	4-A	D2	9-B2		Water Temperature Switch	C-8	I(3)~(5)-B	F1	1~3
P/W Switch (Rear Right)	D-24	4-B	D2	9-B1		Wiper Amp (Front)	A-35	I(1)~(5)-C	B3	6~8-A1
Parking Brake Switch	F-5	3(1),(2)-A	A3	4-A1 5-B1		Wiper Amp (Rear)	A-1	I(1)~(4)-A	B3	1-C1 2-B2
Power Antenna Half Switch	B-50	2-B	E3	1~3-G2		Wiper Amp (Rear)	T-24	3(1)-C	B3	5-B1
Power Antenna Timer	T-42	3(1),(2)-B	E3	4,5-C2		Wiper Motor (Front)	A-36	I(1)~(5)-C	B3	6~8-A1
Power Shift Switch	F-6	3(1),(2)-A	D1	4-A2		Wiper Motor (Rear)	T-25	3(1),(2)-C	C3	4,5-B1
Radio	B-56	2-B	A2,F3	1~3-G2		Wiper Relay (Rear) <1T>	R-3	I(5)-A	C3	3-C1
RCL C/U	B-99	2-A	D2	1,2-G2		Wiper Switch (Front)	B-20	2-B	B3	1~3-B2
RCL C/U [Empty Terminal]	B-99	2-A		3-F1		Wiper Switch (Rear)	B-21	2-B	B3	1~3-B2
Relay Box	A-4	I(1)~(5)-A	A1	1~3-B1		Yaw Rate Sensor	T-66	3(1)-C	E2	S1-A2


Cable Colours

B	BR	CH	DG	G	GY	L	LG	OG	P	PU	R	SB	W	Y
Black	Brown	Charcoal	Dark Green	Green	Grey	Blue	Bluish Green	Orange	Pink	Purple	Red	Sky Blue	White	Yellow


Body Harness

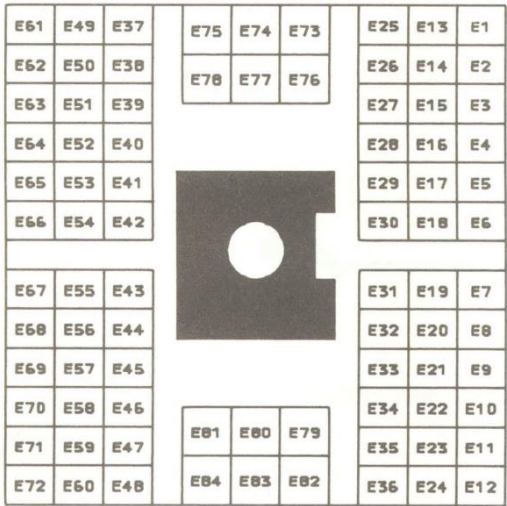


Engine Loom

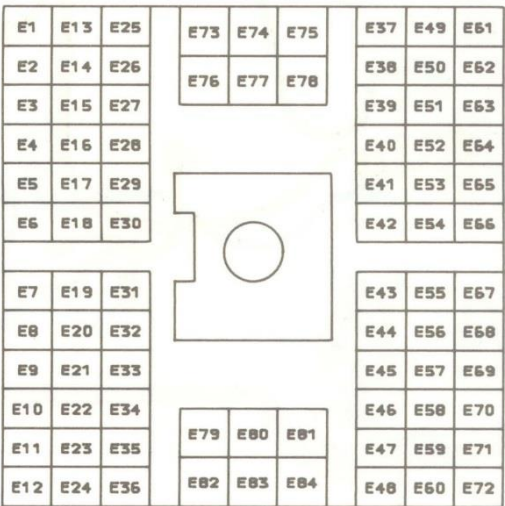


Body Harness

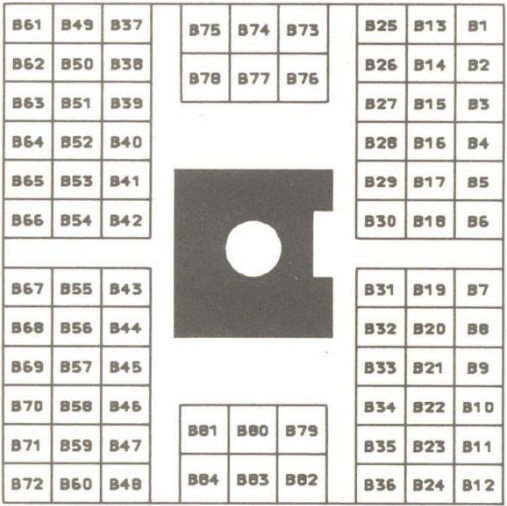


Main Harness

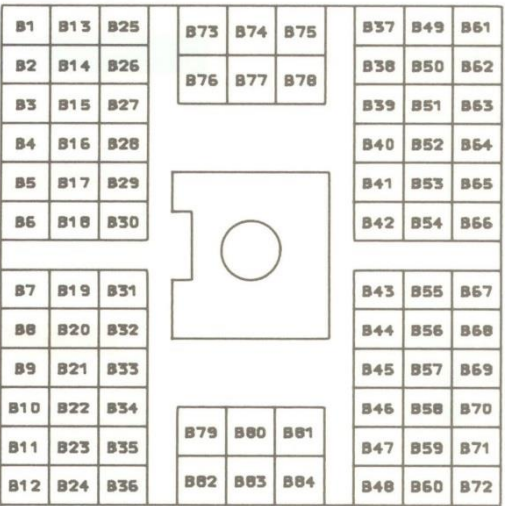


Relay configuratrion

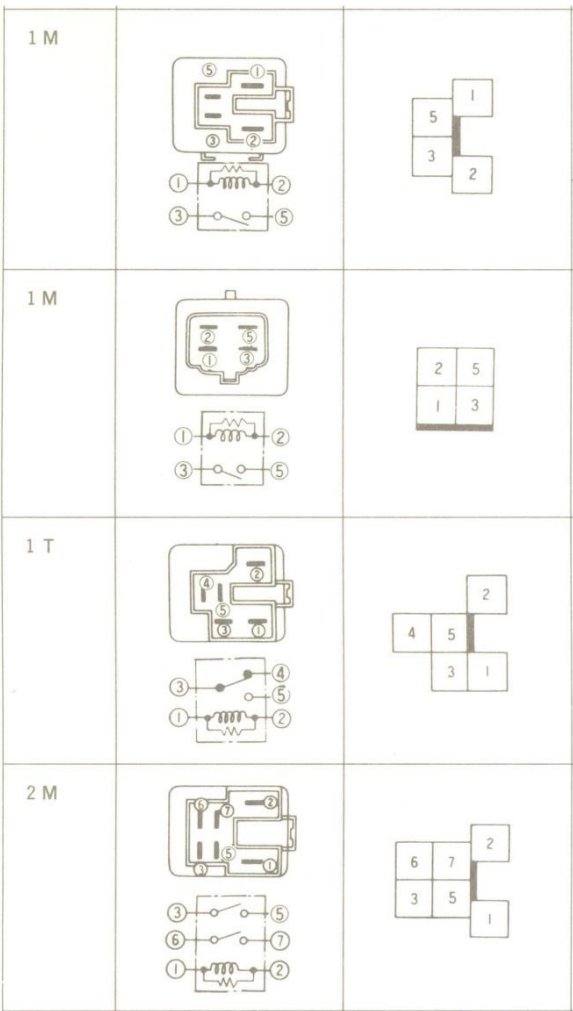

Relay Configuration

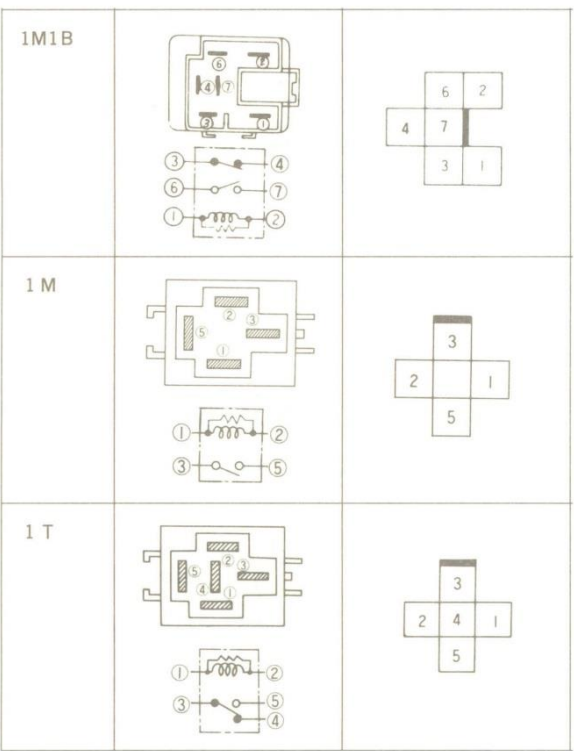

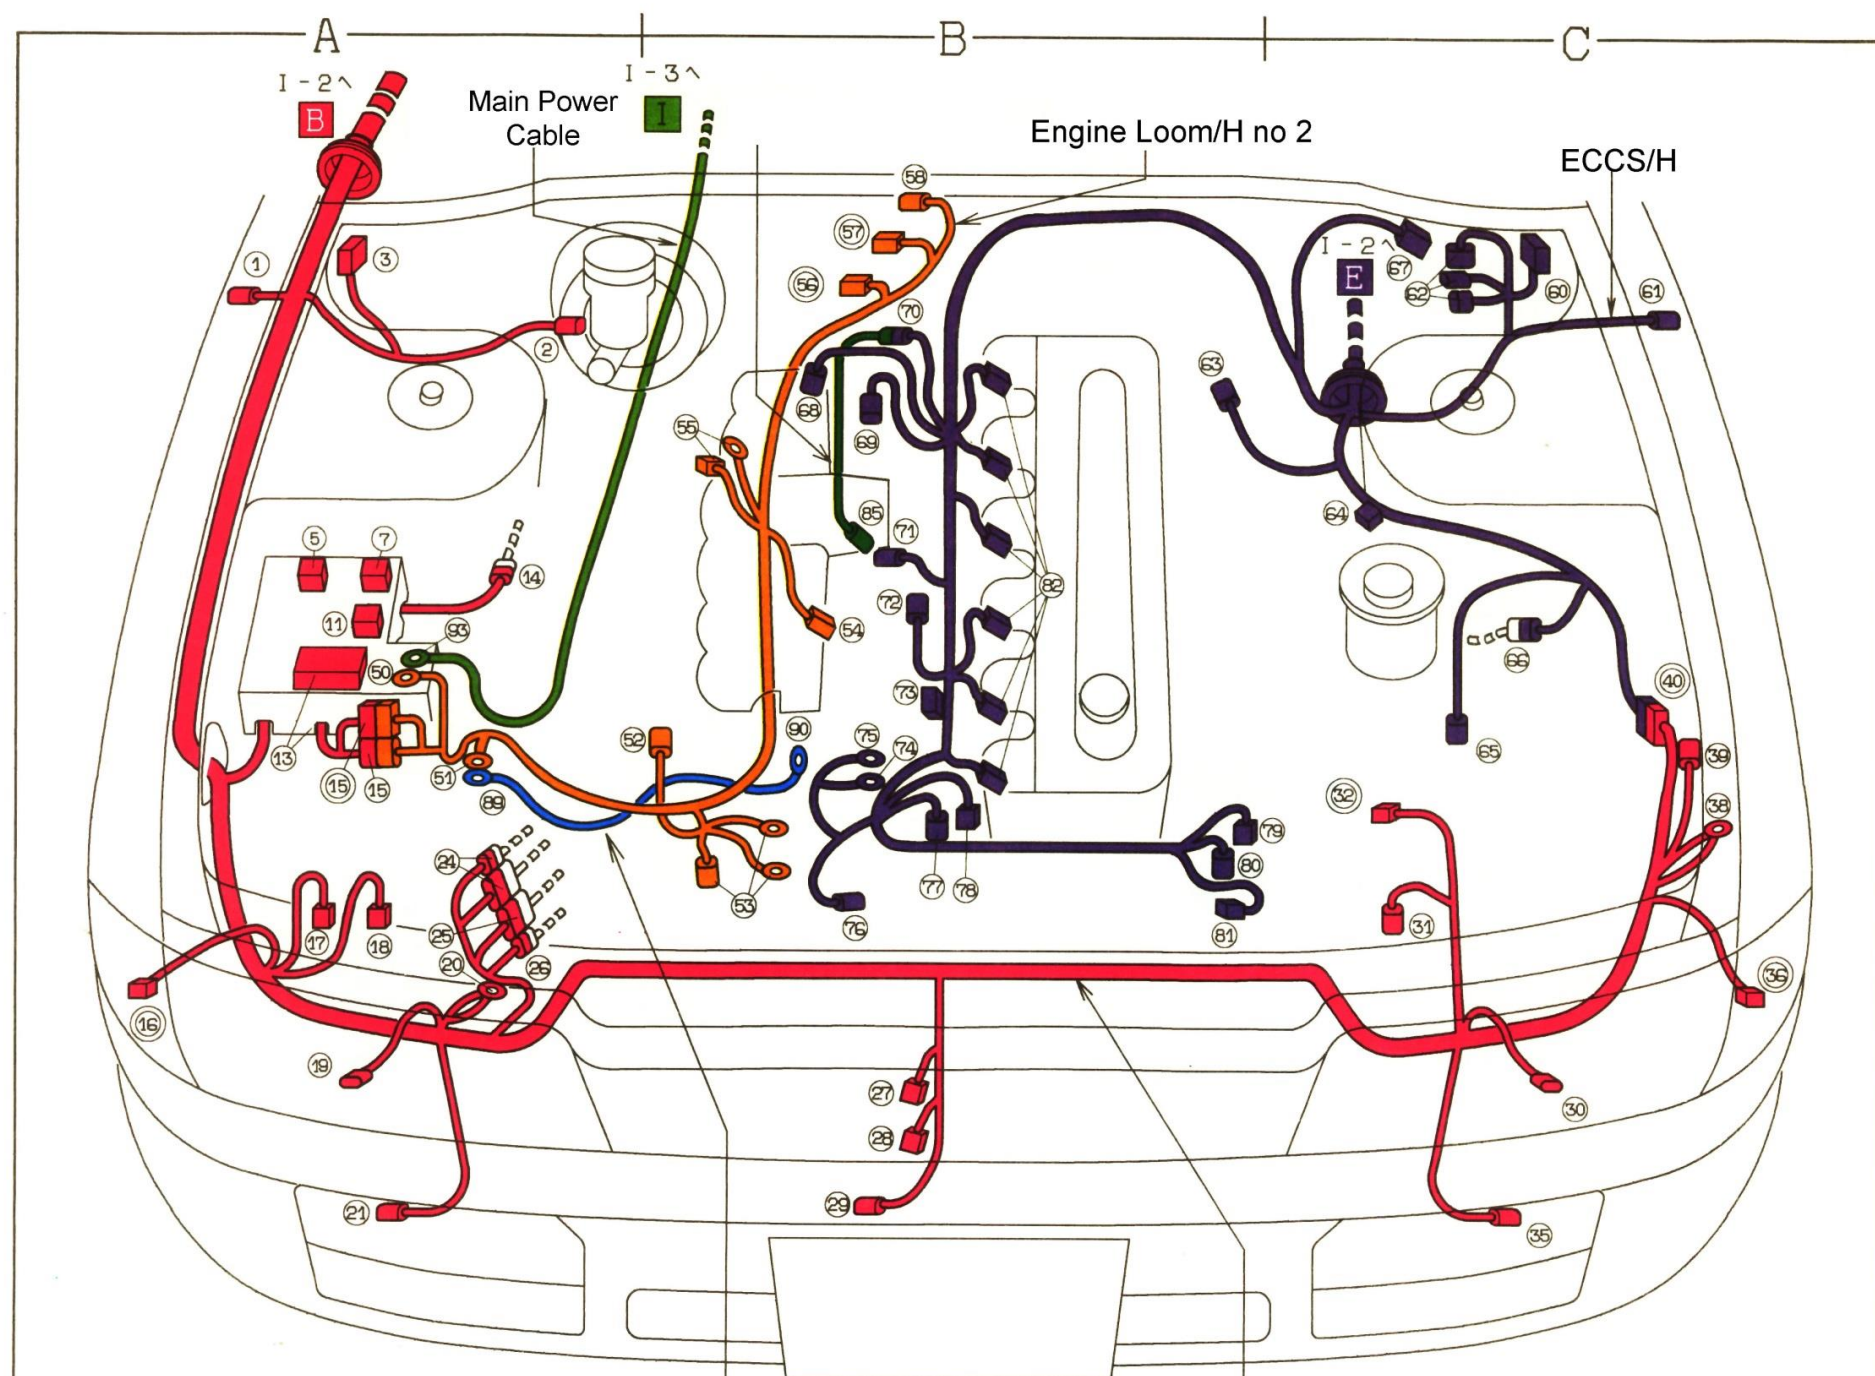

○ Denotes Harness Connector


Engine Body Earth

Engine Loom/H

- A**
- Engine Loom/H**
- ③ A-1 Wiper Amp (Rear)
 - ② A-3 Brake Fluid Level Sensor
 - ⑬ A-4 Relay Box
 - ⑭ A-5 ABS Sensor (Front Right)
 - ⑮ A-6 Engine Loom/H~Engine/H
 - ⑰ A-7 Washer Motor (Front)
 - ⑱ A-8 Washer Motor (Rear)
 - ⑳ A-9 Body Earth
 - ㉔ A-10 Inhibitor Switch
 - ㉕ A-11 A/T S/V
 - ㉖ A-12 Output Power Spin Sensor
 - ① C-1 Indicator
 - ⑯ C-3 Side Light (Right)
 - ⑰ C-4 Head Light (Right)
 - ㉑ C-5 Indicator (Front Right)
 - ⑤ R-2 Horn Relay
 - ⑦ R-4 Fog Light Relay <2M>
 - ⑪ R-9 A/C Relay <1M>
- Engine/H No 2**
- ⑤① A-4 Relay Box
 - ⑤② A-6 Engine/H No 2~Engine Loom
 - ⑤③ A-21 Body Earth
 - ⑤④ A-26 P/S Switch
- Engine Body Earth**
- ⑧⑨ A-75 Body Earth
- Main Power Cable**
- ⑨③ A-4 Relay Box

- B**
- Engine Loom/H**
- ②⑦ C-9 Horn High
 - ②⑧ C-10 Horn Low
 - ②⑨ C-11 Outside Air Temperature Sensor
- Engine/H No 2**
- ⑤③ A-25 Alternator
 - ⑤⑤ A-27 Starter Motor
 - ⑤④ A-29 Oil Pressure Switch
 - ⑤⑥ A-31 Reverse Light Switch (M/T)
 - ⑤⑦ A-32 Neutral Switch (M/T)
 - ⑤⑧ A-33 Vehicle Speed Sensor
- ECCS/H**
- ⑥⑧ A-30 Air Regulator
 - ⑦① A-37 ECCS/H~Knock Sensor/H
 - ⑥⑨ A-39 AAC Valve
 - ⑦③ A-42 Noise Suppressor
 - ⑦② A-45 Throttle Position Sensor
 - ⑦① A-46 Throttle Switch
 - ⑦④ A-47 Engine Earth
 - ⑦⑤ A-48 Engine Earth
 - ⑦⑦ A-49 Water Temperature Sensor
 - ⑦⑧ A-50 Water Temperature Sensor
 - ⑧① A-51 CAS
 - ⑥③ A-55 O2 Sensor
 - ⑦⑥ A-61 IGN Coil
 - ⑧① A-63 P/Tr
 - ⑧② A-65 Injector
- Knock Sensor/H**
- ⑧⑤ A-28 Knock Sensor
 - ⑦① A-37 Knock Sensor/H~ECCS/H
- Engine Body Earth**
- ⑨① A-76 Engine Earth

- C**
- Engine Loom/H**
- ③① A-13 Dual Pressure Switch
 - ③② A-14 Compressor
 - ③⑧ A-15 Body Earth
 - ③⑨ A-16 Dropping Resistor (A/T)
 - ④① A-17 Engine Loom/H~ECCS/H
 - ③① C-13 Head light (Left)
 - ③⑤ C-16 Combination Light (Front Left)
 - ③⑥ C-17 Side Light
- ECCS/H**
- ④① A-17 ECCS/H~Engine Loom/H
 - ⑥① A-35 Wiper Amp (Front)
 - ⑥⑦ A-36 Wiper Motor (Front)
 - ⑥② A-52 ABS Actuator
 - ⑥⑤ A-56 Air Flow Meter
 - ⑥⑥ A-57 ABS Sensor (Front Left)
 - ⑥④ A-59 Resistor
 - ⑦⑨ A-62 Distributor Earth
 - ⑥① C-19 Indicator Light (Left)

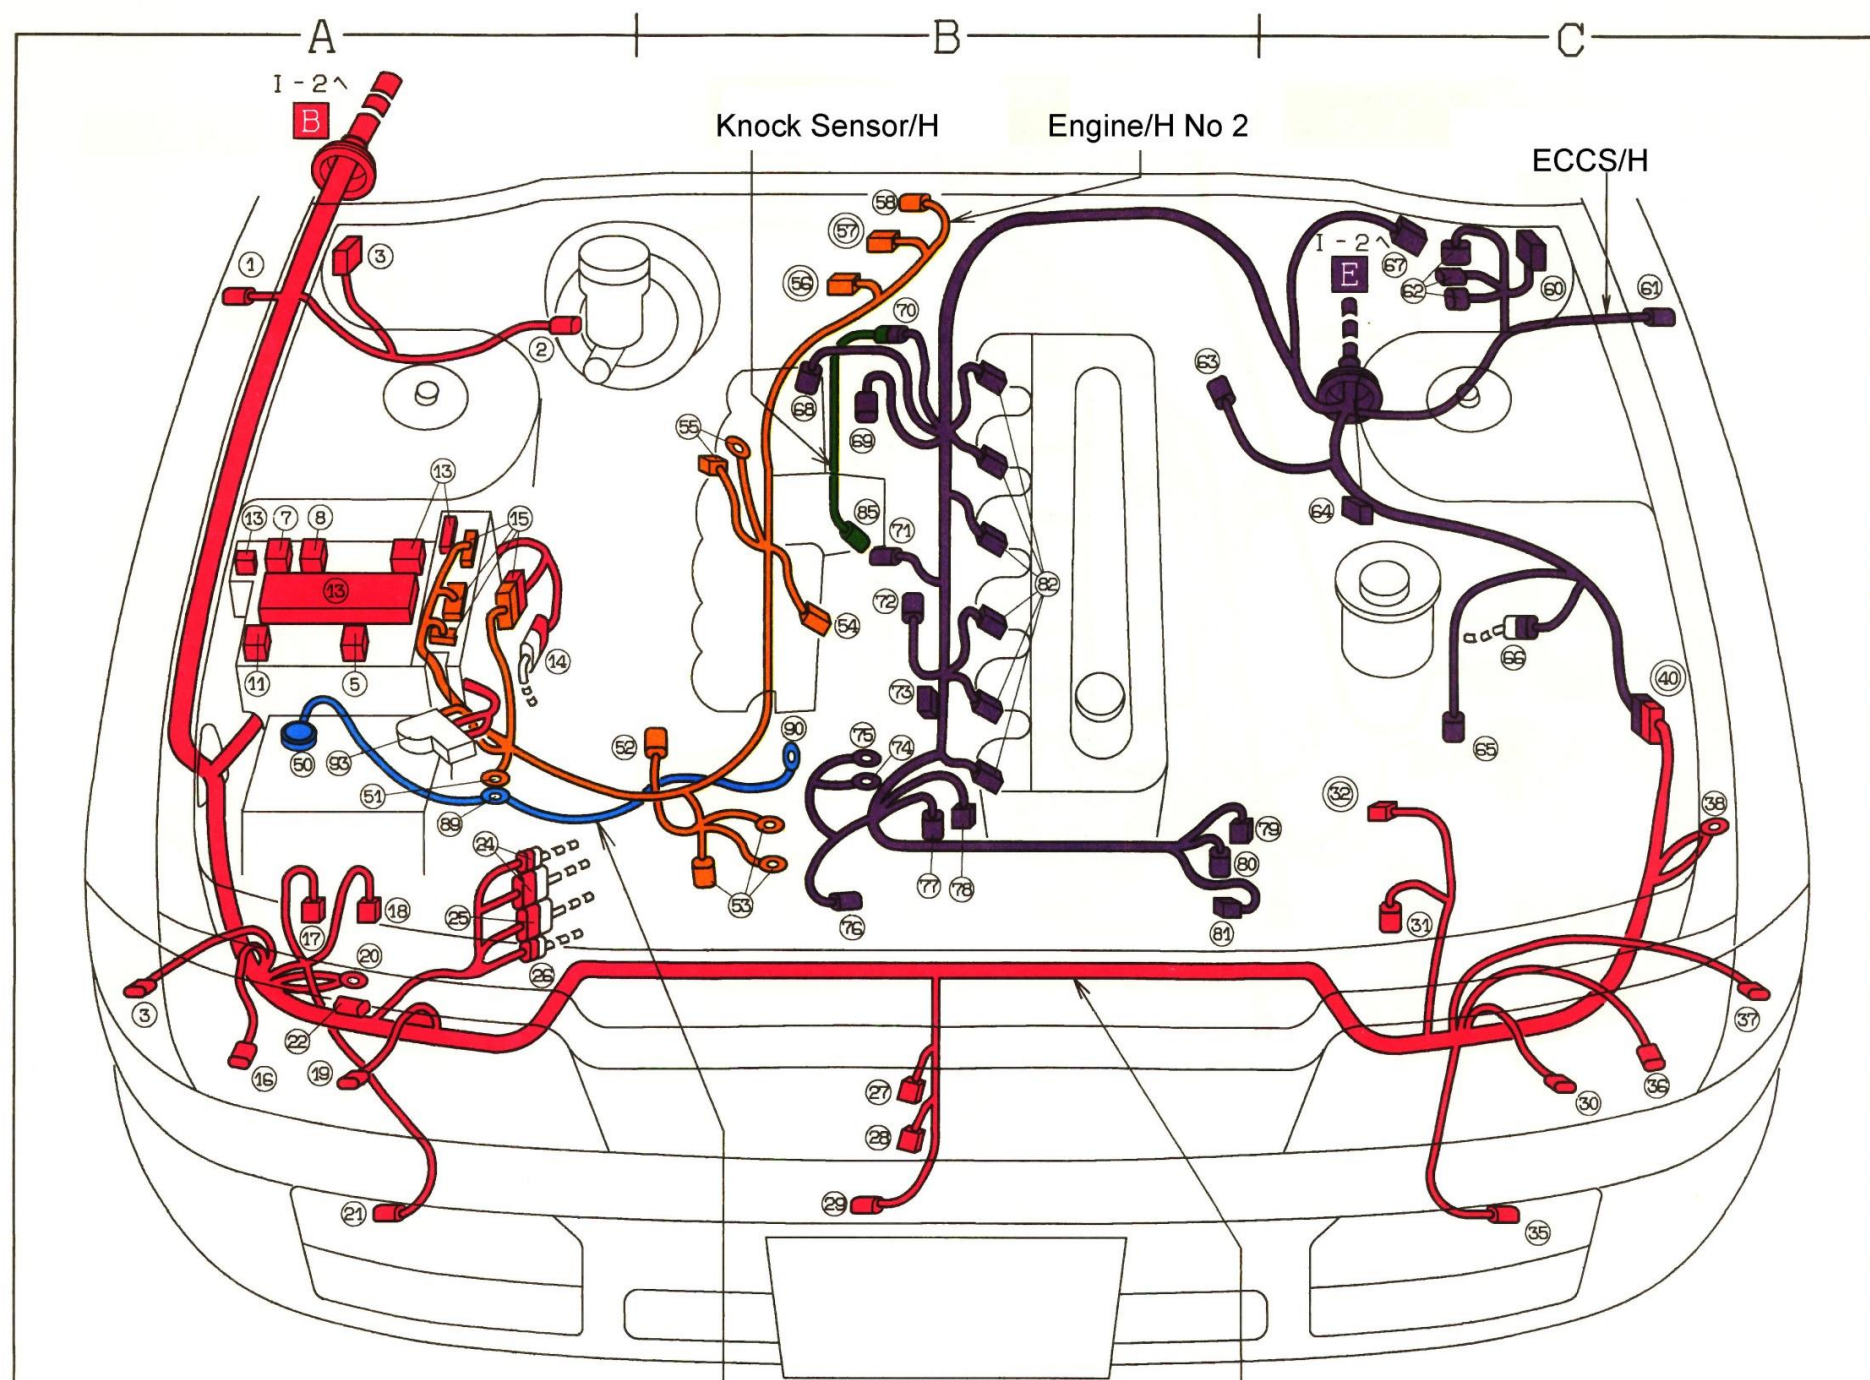

○ Denotes Harness Connector Engine Body Earth

Engine Loom/H

A

Engine Loom /H

- ③ A-1 Wiper Amp (Rear)
- ② A-3 Brake Fluid Level Sensor
- ⑬ A-4 Relay Box
- ⑭ A-5 ABS Sensor (Front Right)
- ⑮ A-6 Engine Loom/H~Engine/H No 2
- ⑰ A-7 Washer Motor (Front)
- ⑱ A-8 Washer Motor (Rear)
- ⑳ A-9 Body Earth
- ㉔ A-10 Inhibitor Switch
- ㉕ A-11 A/T S/V
- ㉖ A-12 Output Power Axle Spin Sensor
- ㉗ A-16 Dropping Resistor (A/T)
- ⑨③ A-77 Battery
- ① C-1 Indicator (Right)
- ③ C-2 Cornering Clearance Light (Right)
- ⑱ C-3 Side Light (Right)
- ⑲ C-4 Head Light (Right)
- ㉑ C-5 Combination Light (Front Right)
- ⑤ R-2 Horn Relay
- ⑦ R-4 Fog Light Relay <2M>
- ⑧ R-5 Indicator Relay <1M>
- ⑪ R-9 A/C Relay <1M>

Engine/H No 2

- ⑮ A-6 Engine/H No2~Engine Loom/H
- ⑮① A-21 Body Earth
- ⑮② A-26 P/S Switch
- ⑨③ A-77 Battery

Engine Body Earth

- ⑨⑨ A-75 Body Earth
- ⑤① A-77 Battery

B

Engine Loom/H

- ⑲⑦ C-9 Horn High
- ⑲⑧ C-10 Horn Low
- ⑲⑨ C-11 Outside Air Temp Relay

Engine/H No 2

- ⑤③ A-25 Alternator
- ⑤⑤ A-27 Starter Motor
- ⑤④ A-29 Oil Pressure Switch
- ⑤⑥ A-31 Reverse Light Switch (M/T)
- ⑤⑦ A-32 Neutral Switch (M/T)
- ⑤⑧ A-33 Vehicle Speed Sensor

ECCS/H

- ⑥⑧ A-30 Air Regulator
- ⑦① A-37 ECCS/H~Knock Sensor Harness
- ⑥⑨ A-39 AAC Valve
- ⑦③ A-42 Noise Suppressor
- ⑦② A-45 Throttle Position Sensor
- ⑦① A-46 Throttle Switch
- ⑦④ A-47 Engine Earth
- ⑦⑤ A-48 Engine Earth
- ⑦⑦ A-49 Water Temperature Sensor (ECU)
- ⑦⑧ A-50 Water Temperature Sensor (Dash)
- ⑧① A-51 CAS
- ⑥③ A-55 O2 Sensor
- ⑦⑥ A-61 IGN Coil
- ⑧① A-63 P/Tr
- ⑧② A-65 Injector

Knock Sensor/H

- ⑥⑤ A-28 Knock Sensor 1
- ⑦① A-37 Knock Sensor/H~ECCS/H

Engine Body Earth

- ⑨① A-76 Engine Earth


C

Engine Loom/H

- ③① A-13 Dual Pressure Switch
- ③② A-14 Compressor
- ③⑧ A-15 Body Earth
- ④① A-17 Engine Lom/H~ECCS/H
- ③① C-13 Head Light (Left)
- ③⑤ C-16 Combination Light (Front Left)
- ③⑥ C-17 Side Light (Left)
- ③⑦ C-18 Side Light

ECCS/H

- ④① A-17 ECCS/H~Engine Loom/H
- ⑥① A-35 Wiper Amp (Front)
- ⑥⑦ A-36 Wiper Motor (Front)
- ⑥② A-52 ABS Actuator
- ⑥⑤ A-56 Air Flow Meter
- ⑥⑥ A-57 ABS Sensor (Front Left)
- ⑥④ A-59 Resistor
- ⑦⑨ A-62 Distributor Earth
- ⑥① C-19 Indicator Light (Left)

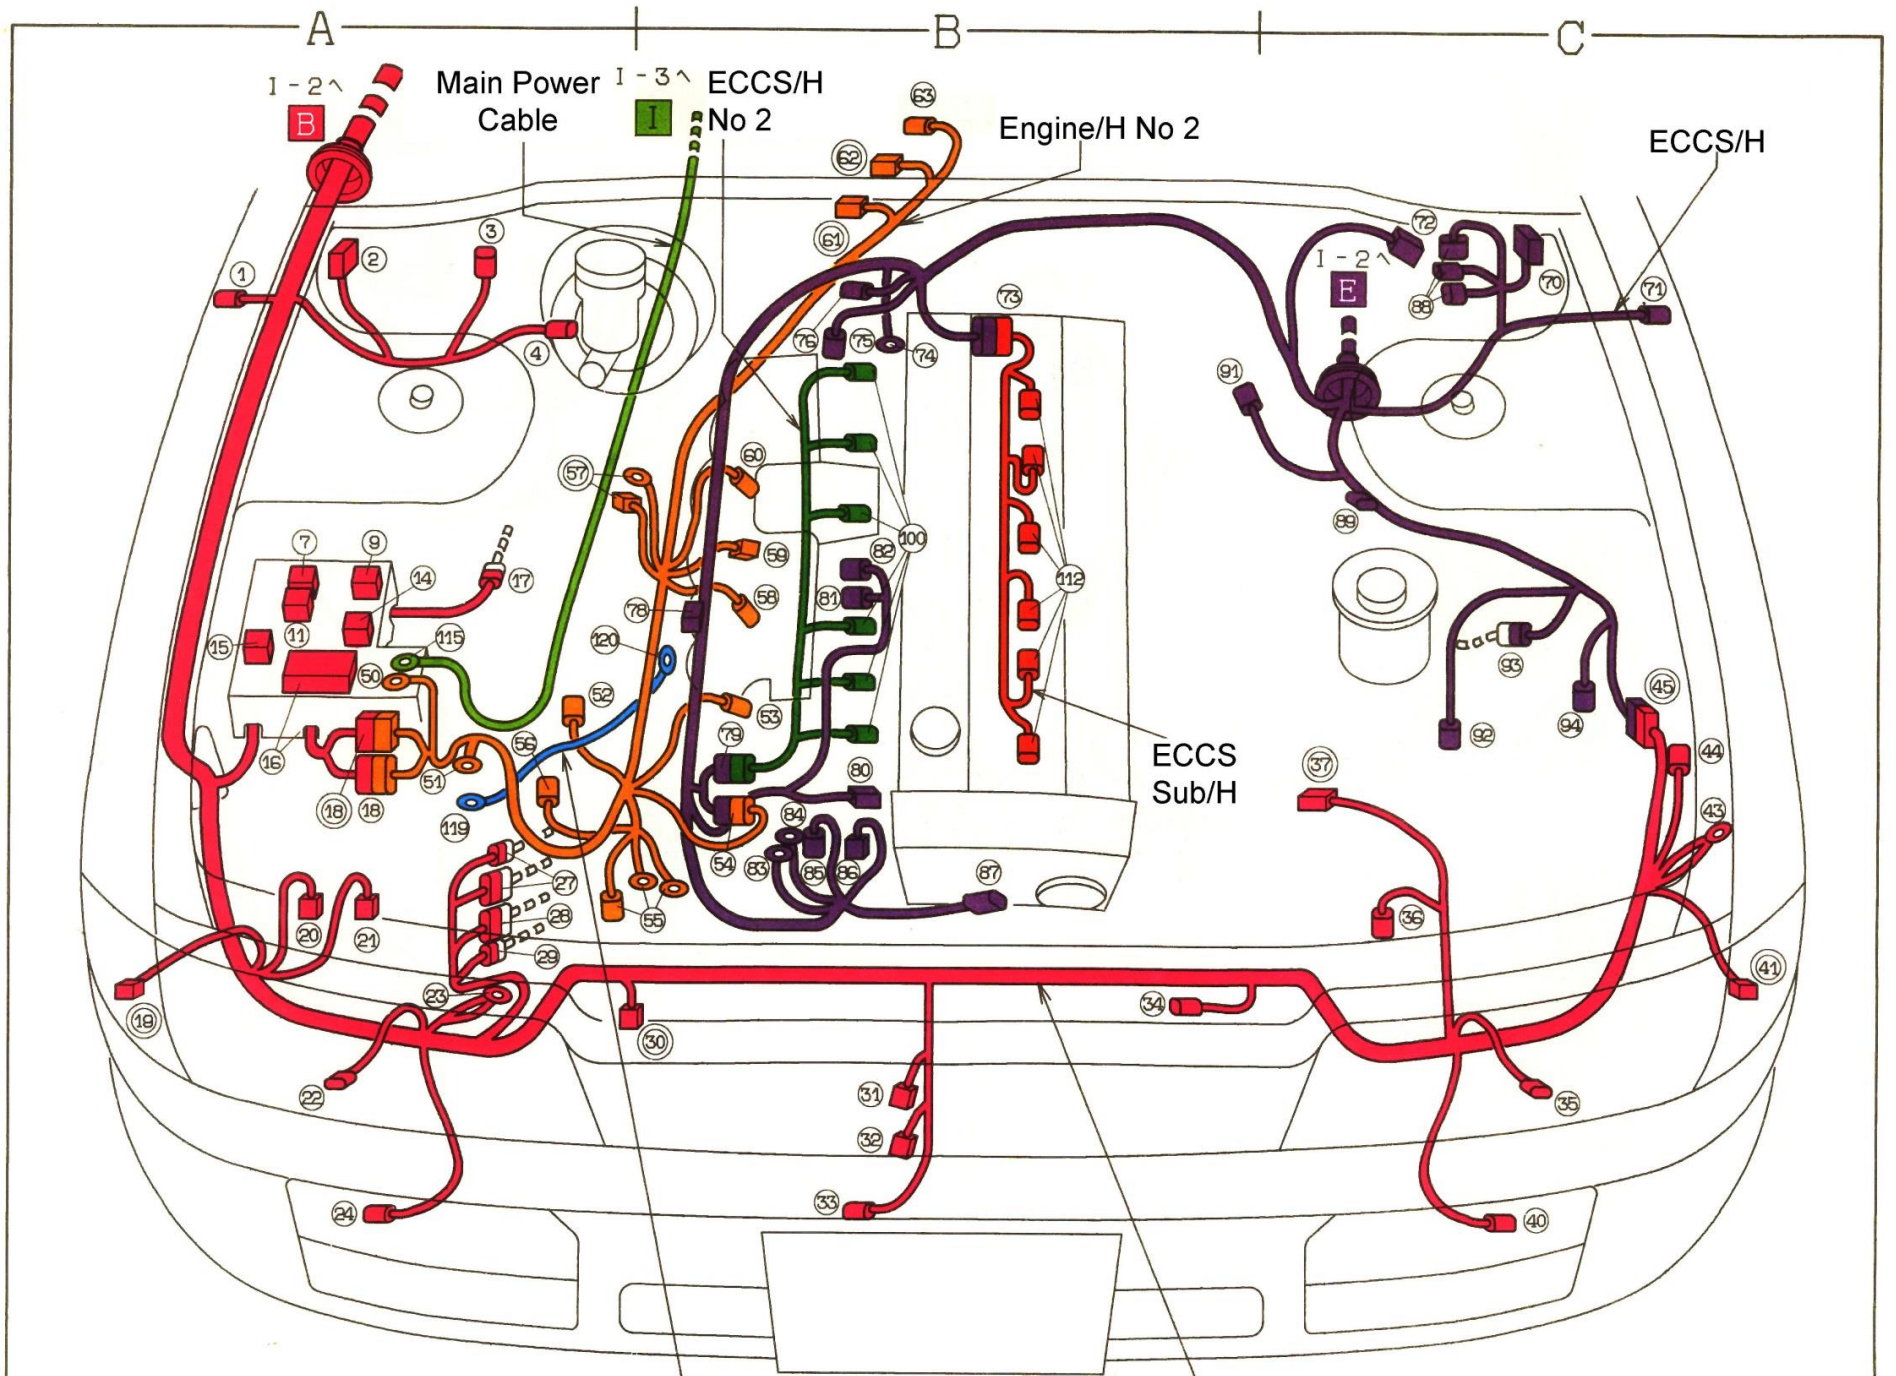

○ Denotes Harness Connector

Engine Body Earth

Engine Loom/H

Engine Loom/H

- ② A-1 Wiper Amp (Rear)
- ③ A-2 Boost Sensor
- ④ A-3 Brake Fluid Level Sensor
- ⑫ A-4 Relay Box
- ⑫ A-5 ABS Sensor (Front Right)
- ⑫ A-6 Engine Loom/H~Engine/H No 2
- ⑫ A-7 Washer Motor (Front)
- ⑫ A-8 Washer Motor (Rear)
- ⑫ A-9 Body Earth
- ⑫ A-10 Inhibitor Switch
- ⑫ A-11 A/T S/V
- ⑫ A-12 Output Power Spin Sensor
- ① C-1 Indicator
- ① C-3 Side Light (Right)
- ② C-4 Head Light (Right)
- ④ C-5 Combination Light (Front Right)
- ⑦ R-2 Horn Relay
- ⑨ R-4 Fog Light Relay <2M>
- ⑪ R-6 FICD Relay <1M>
- ⑭ R-9 A/C Relay <1M>
- ⑮ R-10 Aux Electric Fan Relay <1M>

Engine/H No 2

- ⑤① A-4 Relay Box
- ⑤① A-6 Engine/H No 2~Engine Loom/H
- ⑤① A-21 Body Earth
- ⑤② A-22 EPS SV
- ⑤⑥ A-26 P/S Switch
- ⑤⑦ A-27 Starter Motor

Engine Body Earth

- ⑪⑨ A-75 Body Earth
- ⑪⑩ A-76 Engine Earth

Main Power Cable

- ⑪⑤ A-4 Relay Box

Engine Loom/H

- ③① C-8 Water Temperature Switch
- ③① C-9 Horn Hi
- ③② C-10 Horn Low
- ③③ C-11 Outside Air Temperature Relay
- ③④ C-12 Aux Electric Fan Motor

Engine/H No 2

- ⑤③ A-23 Knock Sensor 2
- ⑤④ A-24 Engine/H No 2~ECCS/H
- ⑤⑤ A-25 Alternator
- ⑤⑧ A-28 Knock Sensor 1
- ⑤⑨ A-29 Oil Pressure Switch
- ⑥① A-30 Air Regulator
- ⑥① A-31 Reverse Lamp Switch (M/T)
- ⑥② A-32 Neutral Switch (M/T)
- ⑥③ A-33 Vehicle Sepped Sensor

ECCS/H

- ⑤④ A-24 ECCS/H~Engine Loom/H
- ⑦③ A-37 ECCS/H~Knock Sensor/H
- ⑦⑤ A-39 AAC Valve
- ⑦⑥ A-40 FICD S/V
- ⑦⑧ A-42 Noise Suppressor
- ⑦⑨ A-43 ECCS/H~ECCS/H No 2
- ⑧① A-44 VCT Solenoid
- ⑧① A-45 Throttle Position Sensor
- ⑧② A-46 Throttle Switch
- ⑧③ A-47 Engine Earth
- ⑧④ A-48 Engine Earth
- ⑧⑤ A-49 Water Temperature Sensor
- ⑧⑥ A-50 Water Temperature Sensor
- ⑧⑦ A-51 CAS
- ⑨① A-55 O2 Sensor
- ⑦④ A-82 Engine Earth

Engine Loom/H

- ③⑥ A-13 Tripple Pressure Switch
- ③⑦ A-14 Compressor
- ④③ A-15 Body Earth
- ④④ A-16 Dropping Resistor (A/T)
- ④⑤ A-17 Engine Loom/H~ECCS/H
- ③⑤ C-13 Head Light (Left)
- ④① C-16 Combination (Front Left)
- ④① C-17 Side Light

ECCS/H

- ④⑤ A-17 ECCS/H~Engine Loom/H
- ⑦① A-35 Wiper Amp (Front)
- ⑦② A-36 Wiper Motor (Front)
- ⑧⑧ A-52 ABS Actuator
- ⑧⑨ A-53 Check Connector
- ⑨② A-56 Air Flow Meter
- ⑨③ A-57 ABS Sensor (Front Left)
- ⑨④ A-58
- ⑦① C-19 Indicator


B

ECCS/H No 2

- ⑦⑨ A-43 ECCS/H No 2 ~ECCS/H
- ⑩① A-65 Injector

ECCS Sub/H

- ⑦③ A-37 ECCS/H Sub~ECCS/H
- ⑩② A-70 IGN Coil

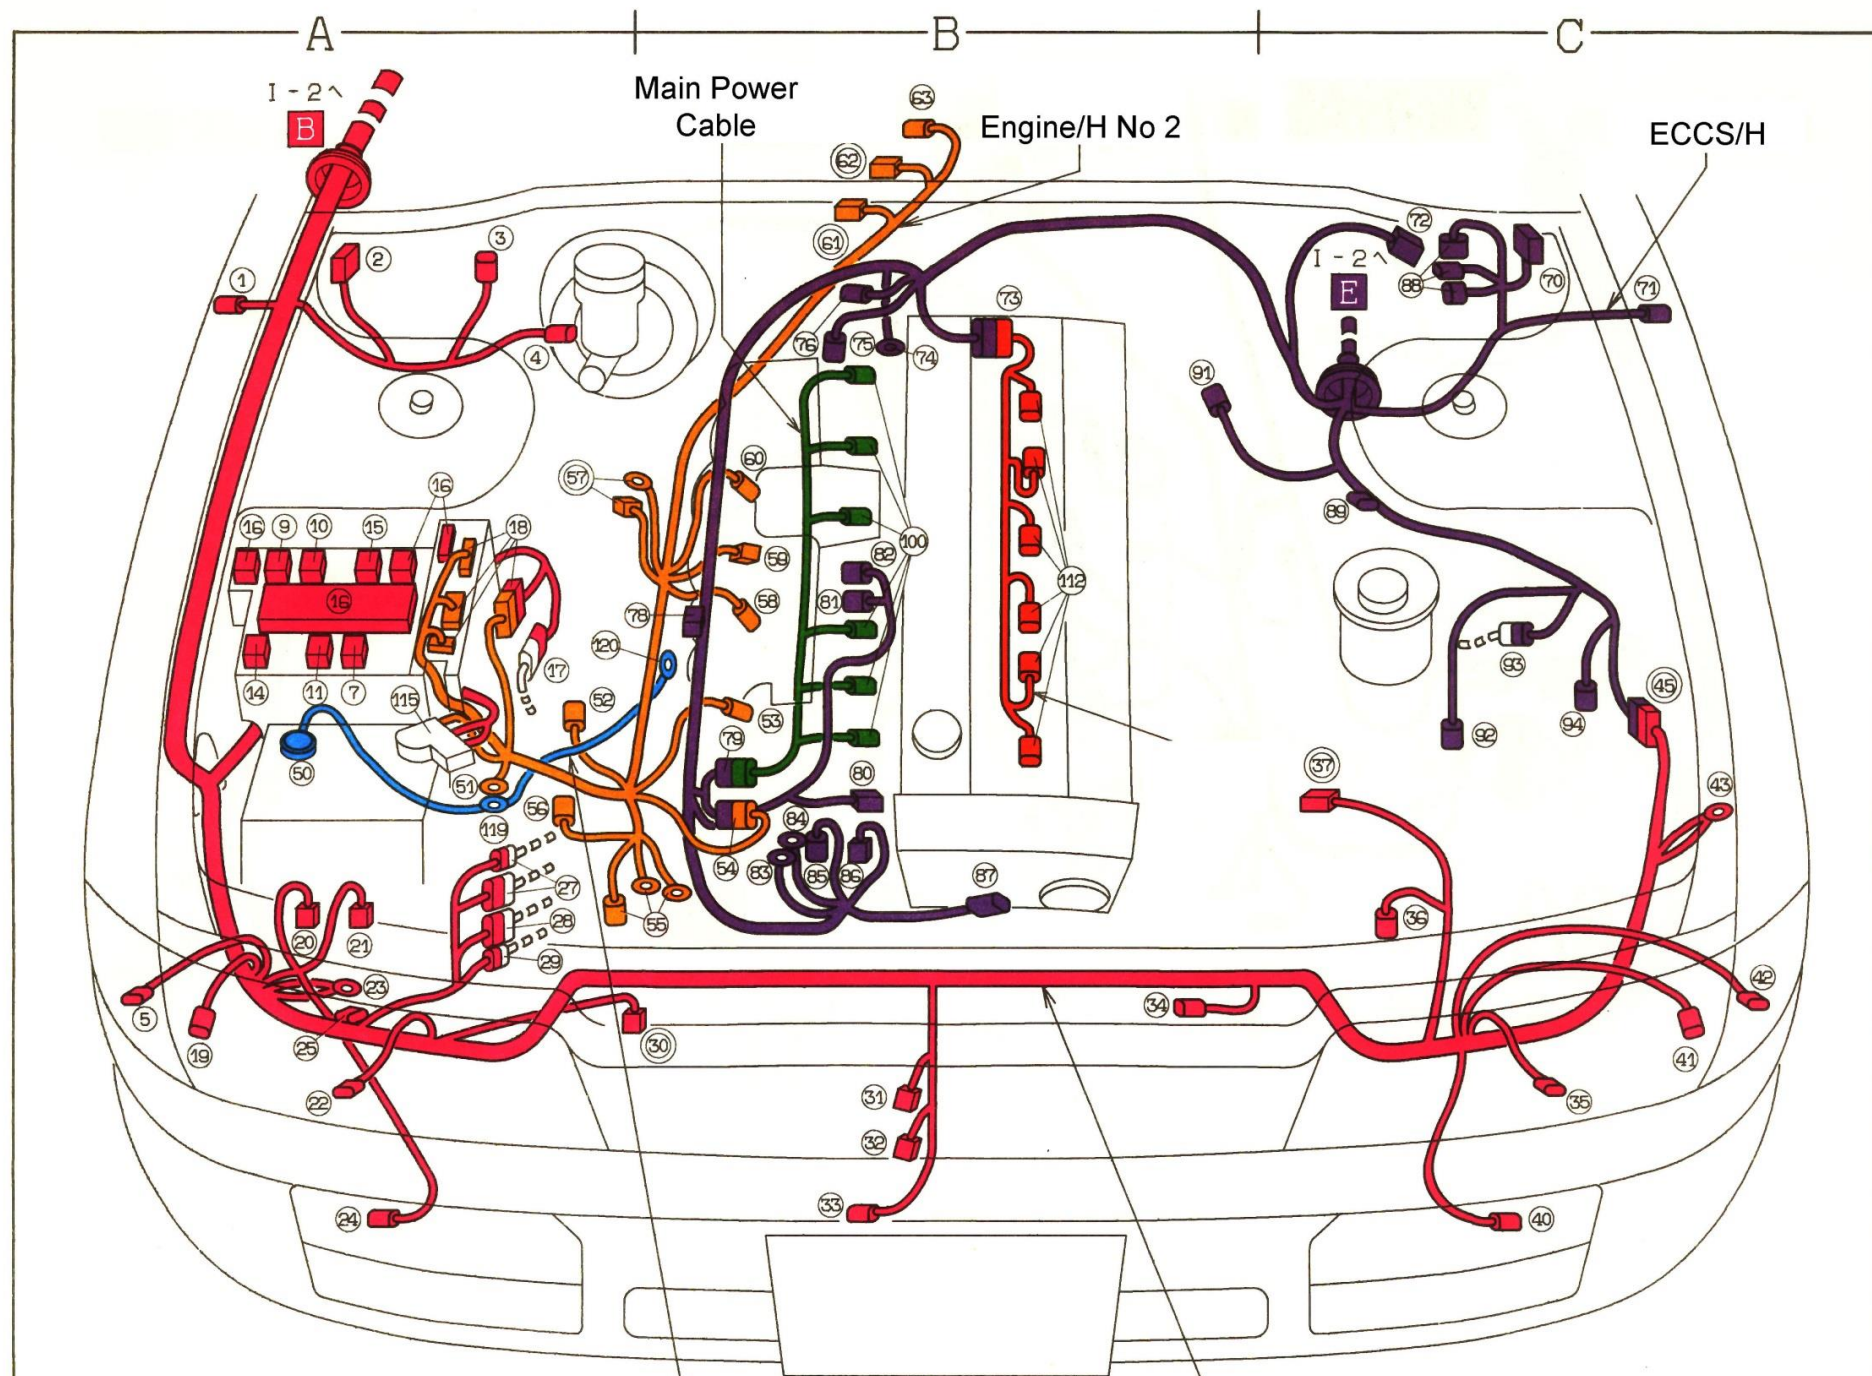

○ Denoted Harness Connector

Engine Body Earth

Engine Loom/H

A

Engine Loom/H

- ② A-1 Wiper Amp (Rear)
- ③ A-2 Boost Sensor
- ④ A-3 Brake Fluid Level Sensor
- ⑫ A-4 Relay Box
- ⑬ A-5 ABS Sensor (Front Right)
- ⑭ A-6 Engine Loom/H~Engine/H No 2
- ⑮ A-7 Washer Motor (Front)
- ⑯ A-8 Washer Motor (Rear)
- ⑰ A-9 Body Earth
- ⑱ A-10 Inhibitor Switch
- ⑲ A-11 A/T S/V
- ⑳ A-12 Output Power Spin Sensor
- ㉑ A-16 Dropping Resistor (A/T)
- ㉒ A-77 Battery
- ① C-1 Indicator
- ⑤ C-2 Cornering Clearance Light (Right)
- ⑨ C-3 Clearance Light (Right)
- ⑬ C-4 Headlight (Right)
- ⑰ C-5 Combination Light (Right)
- ⑲ R-2 Horn Relay
- ⑳ R-4 Fog Light Relay <2M>
- ㉑ R-5 Indicator Light Relay <1M>
- ㉒ R-6 FICD Relay <1M>
- ㉓ R-9 A/C Relay <1M>
- ㉔ R-10 Aux Electric Fan Relay <1M>

Engine/H No 2

- ⑫ A-6 Engine/H No 2~Engine Loom/H
- ⑬ A-21 Body Earth
- ⑭ A-22 EPS SV
- ⑮ A-26 P/S Switch
- ⑯ A-27 Starter Motor
- ㉒ A-77 Battery

Engine Body Earth

- ⑫ A-75 Body Earth
- ⑬ A-76 Engine Earth
- ⑭ A-77 Battery

B

Engine Loom/H

- ③① C-8 Water Temperature Switch
- ③② C-9 Horn Hi
- ③③ C-10 Horn Low
- ③④ C-11 Outside Air Temp Switch
- ③⑤ C-12 Aux Electric Fan Motor

Engine/H No 2

- ③⑥ A-23 Knock Sensor 2
- ③⑦ A-24 ECCS/H No 2~Engine Loom/H
- ③⑧ A-25 Alternator
- ③⑨ A-28 Knock Sensor 1
- ③⑩ A-29 Oil Pressure Switch
- ③⑪ A-30 Air Regulator
- ③⑫ A-31 Reverse Light Switch (M/T)
- ③⑬ A-32 Neutral Switch (M/T)
- ③⑭ A-33 Vehicle Speed Sensor

ECCS/H

- ③⑮ A-24 ECCS/H~Engine Loom/H
- ③⑯ A-37 ECCS/H~Knock Sensor/H
- ③⑰ A-39 AAC Valve
- ③⑱ A-40 FICD S/V
- ③⑲ A-42 Noise Suppressor
- ③⑳ A-43 ECCS/H~ECCS/H No 2
- ③㉑ A-44 VCT Solenoid
- ③㉒ A-45 Throttle Position Sensor
- ③㉓ A-46 Throttle Switch
- ③㉔ A-47 Engine Earth
- ③㉕ A-48 Engine Earth
- ③㉖ A-49 Water Temperature Sensor
- ③㉗ A-50 Water Temperature Sensor
- ③㉘ A-51 CAS
- ③㉙ A-55 O2 Sensor
- ③㉚ A-82 Engine Earth

C

Engine Loom/H

- ③⑥ A-13 Tripple Pressure Switch
- ③⑦ A-14 Compressor
- ③⑧ A-15 Body Earth
- ③⑨ A-17 Engine Loom/H~ECCS/H
- ③⑩ C-13 Head Light (Left)
- ③⑪ C-16 Combination Light (Front Left)
- ③⑫ C-17 Side Light
- ③⑬ C-18 Cornering Clearance Light (Front Left)

ECCS/H

- ③⑮ A-17 ECCS/H~Engine Loom/H
- ③⑯ A-35 Wiper Amp (Front)
- ③⑰ A-36 Wiper Motor (Front)
- ③⑱ A-52 ABS Actuator
- ③⑲ A-53 Check Connector
- ③㉑ A-56 Air Flow Meter
- ③㉒ A-57 ABS Sensor (Front Left)
- ③㉓ A-58 Indicator
- ③㉔ C-19 Indicator


B

ECCS/H No 2

- ③⑲ A-43 ECCS/H No 2~ECCS/H
- ③㉑ A-65 Injector

ECCS Sub/H

- ③⑲ A-37 ECCS Sub/H~ECCS/H
- ③㉑ A-70 IGN Coil

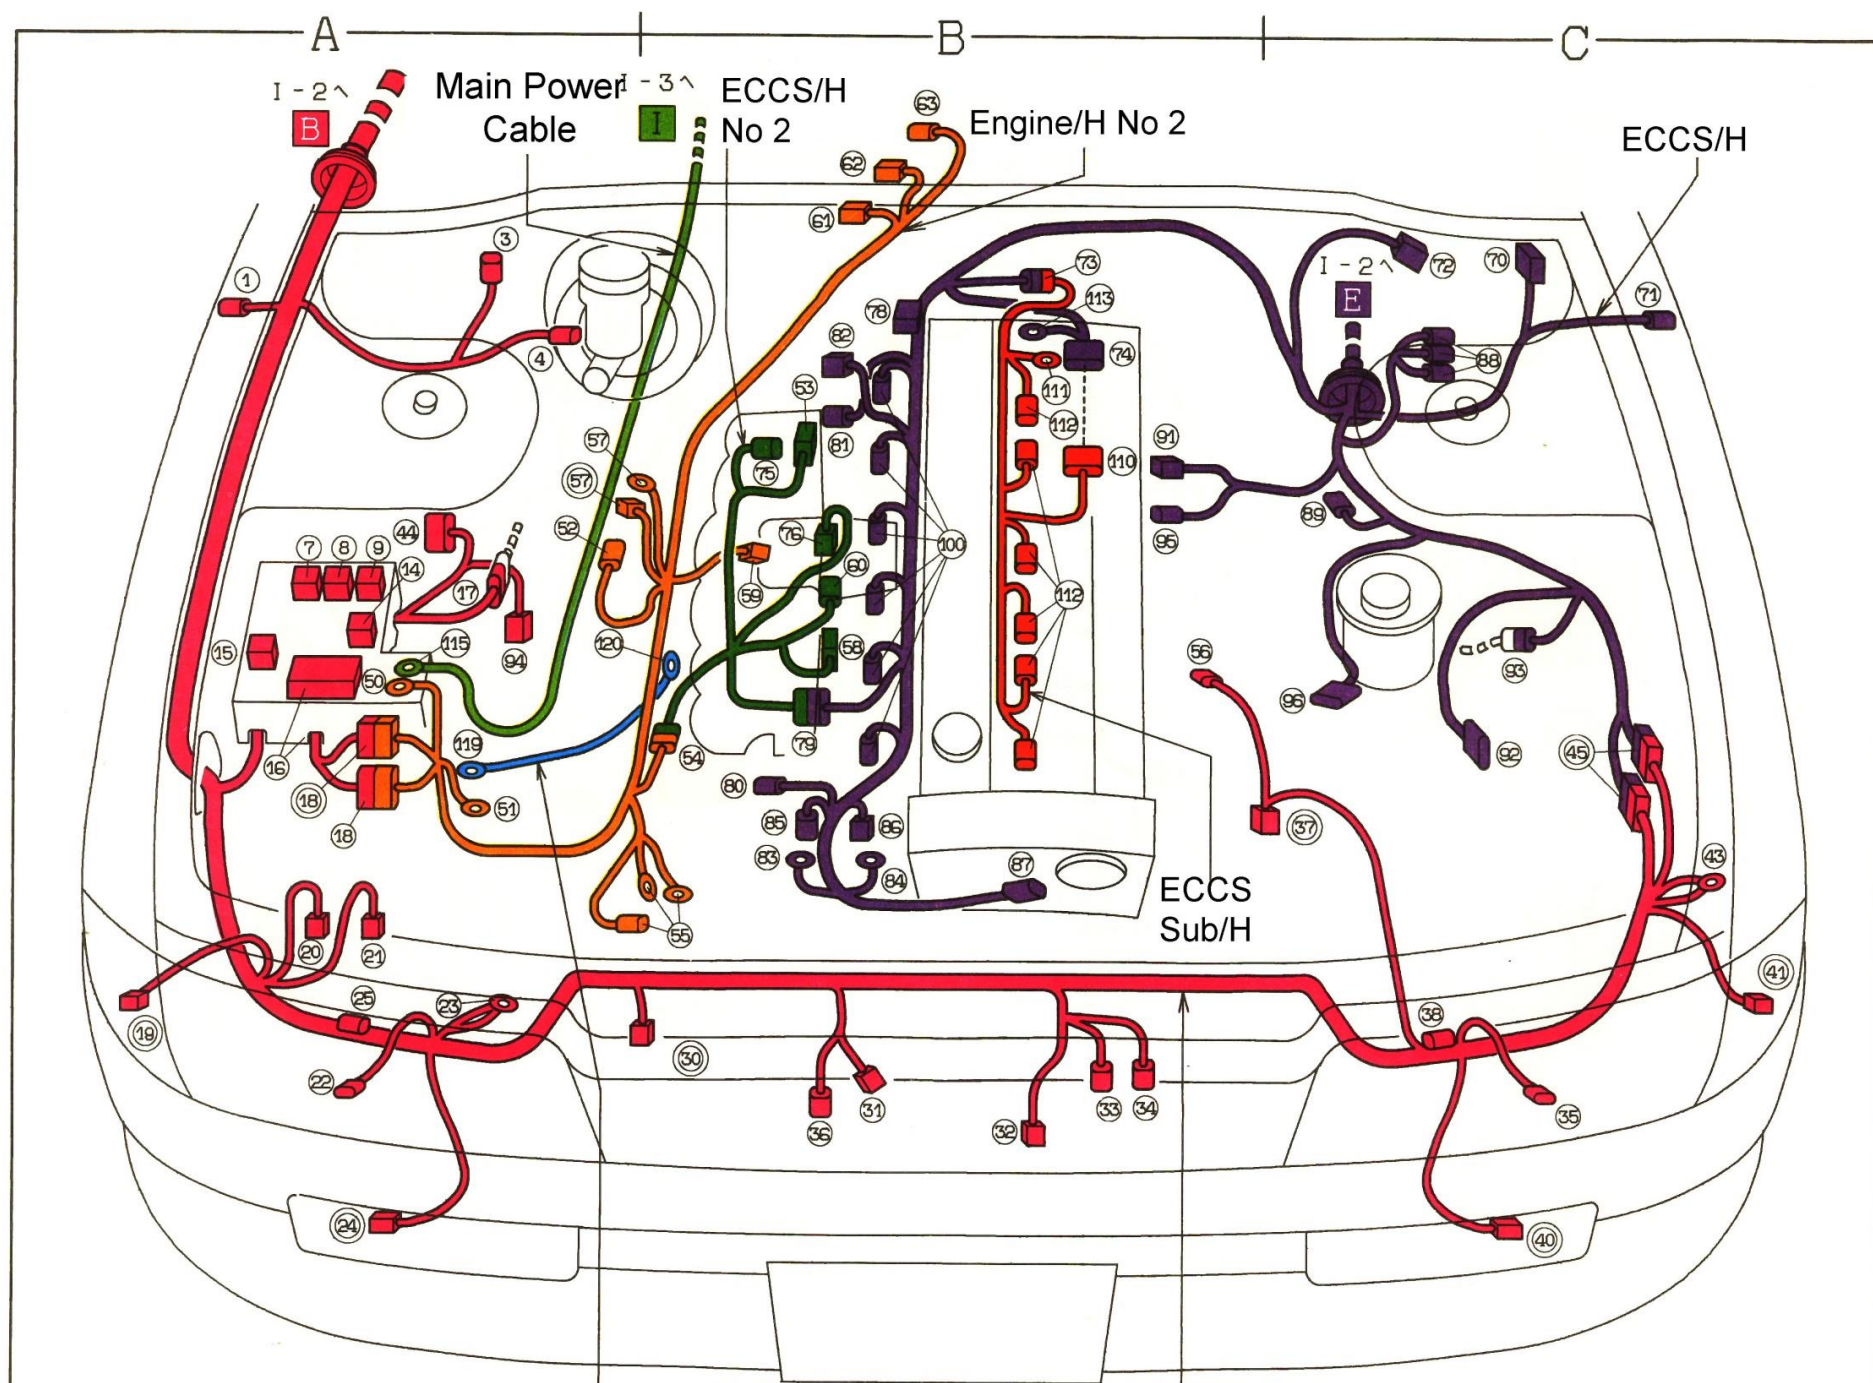

○ Denotes Harness Connector

Engine Earth

Engine Loom

Engine Loom

- ③ A-2 Boost Sensor
- ④ A-3 Brake Fluid Level Sensor
- ⑫ A-4 Relay Box
- ⑫ A-5 ABS Sensor (Front Right)
- ⑫ A-6 Engine Loom/H~Engine/H No 2
- ⑫ A-7 Washer Motor (Front)
- ⑫ A-8 Washer Motor (Rear)
- ⑫ A-9 Body Earth
- ⑫ A-19 Dropping Resistor
- ⑫ A-58
- ① C-1 Indicator (Right Side)
- ① C-3 Side Light (Right)
- ② C-4 Head Light (Right)
- ② C-5 Indicator (Front Right)
- ② C-6 Fog Light Relay Terminal
- ⑦ R-2 Horn Relay
- ⑧ R-3 Wiper Relay (Rear) <1T>
- ⑨ R-4 Fog Light Relay Terminal
- ⑫ R-9 A/C Relay <1M>
- ⑫ R-10

Engine/H No 2

- ⑫ A-4 Relay Box
- ⑫ A-6 Engine Loom/H~Engine/H no 2
- ⑫ A-21 Body Earth
- ⑫ A-22 EPS SV
- ⑫ A-27 Starter Motor

Engine Earth

- ⑫ A-75 Body Earth
- ⑫ A-76 Engine Earth

Main Power Cable

- ⑫ A-4 Relay Box

Engine Loom

- ⑫ A-13 Triple Pressure Switch
- ⑫ A-26 P/S Switch
- ⑫ C-8 Water Temperature Switch
- ⑫ C-9 Horn Hi
- ⑫ C-10 Horn Low
- ⑫ C-11 Outside Air Temperature Sensor
- ⑫ C-12 Aux Electric Fan Motor

Engine/H No2

- ⑫ A-24 ECCS/H no 2~Engine/H no 2
- ⑫ A-25 Alternator
- ⑫ A-29 Oil Pressure Switch
- ⑫ A-31 Reverse Light Switch (M/T)
- ⑫ A-32 Neutral Switch (M/T)
- ⑫ A-33 Acceleration Sensor

ECCS/H

- ⑫ A-37 ECCS/H~ECCS Sub/H
- ⑫ A-38 P/Tr Unit (Control Side)
- ⑫ A-40 Engine Earth
- ⑫ A-41 IAT Sensor
- ⑫ A-42 Noise Suppressor Condensor
- ⑫ A-43 ECCS/H~ECCS/H No 2
- ⑫ A-45 Throttle Sensor
- ⑫ A-46 Throttle Switch
- ⑫ A-47 Engine Earth
- ⑫ A-48 Engine Earth
- ⑫ A-49 Water Temperature Sensor
- ⑫ A-50 Water Temperature Sensor
- ⑫ A-51 CAS
- ⑫ A-55 O2 Sensor (Front)
- ⑫ A-60 O2 Sensor (Rear)
- ⑫ A-65 Injector

Engine Loom

- ⑫ A-14 Compressor
- ⑫ A-15 Body Earth
- ⑫ A-17 Engine Loom/H~ECCS/H
- ⑫ C-13 Head Light (Left)
- ⑫ C-14 Fog Light Relay Terminal (Left)
- ⑫ C-16 Indicator (Front Left)
- ⑫ C-17 Side Light (Left)

ECCS/H


- ⑫ A-17 ECCS/H~Engin Loom/H
- ⑫ A-35 Wiper Amp (Front)
- ⑫ A-36 Wiper Motor (Front)
- ⑫ A-52 ABS Actuator
- ⑫ A-53 Check Connector 1
- ⑫ A-56 Air Flow Meter (Front)
- ⑫ A-57 ABS Sensor (Front Left)
- ⑫ A-59 Air Flow Meter (Rear)
- ⑫ C-19 Indicator (Left Side)

ECCS/H No 2

- ⑫ A-23 Knock Sensor 2
- ⑫ A-24 ECCS/H No 2~Engine/H No 2
- ⑫ A-28 Knock Sensor 1
- ⑫ A-30 Air Regulator
- ⑫ A-39 AAC Valve
- ⑫ A-43 ECCS/H~ECCS/H No 2
- ⑫ A-81 Oil Temperature Sensor

ECCS Sub/H

- ⑫ A-37 ECCS Sub/H~ECCS/H
- ⑫ A-68 P/Tr Unit (Coil Side)
- ⑫ A-69 Engine Earth
- ⑫ A-70 IGN Coil

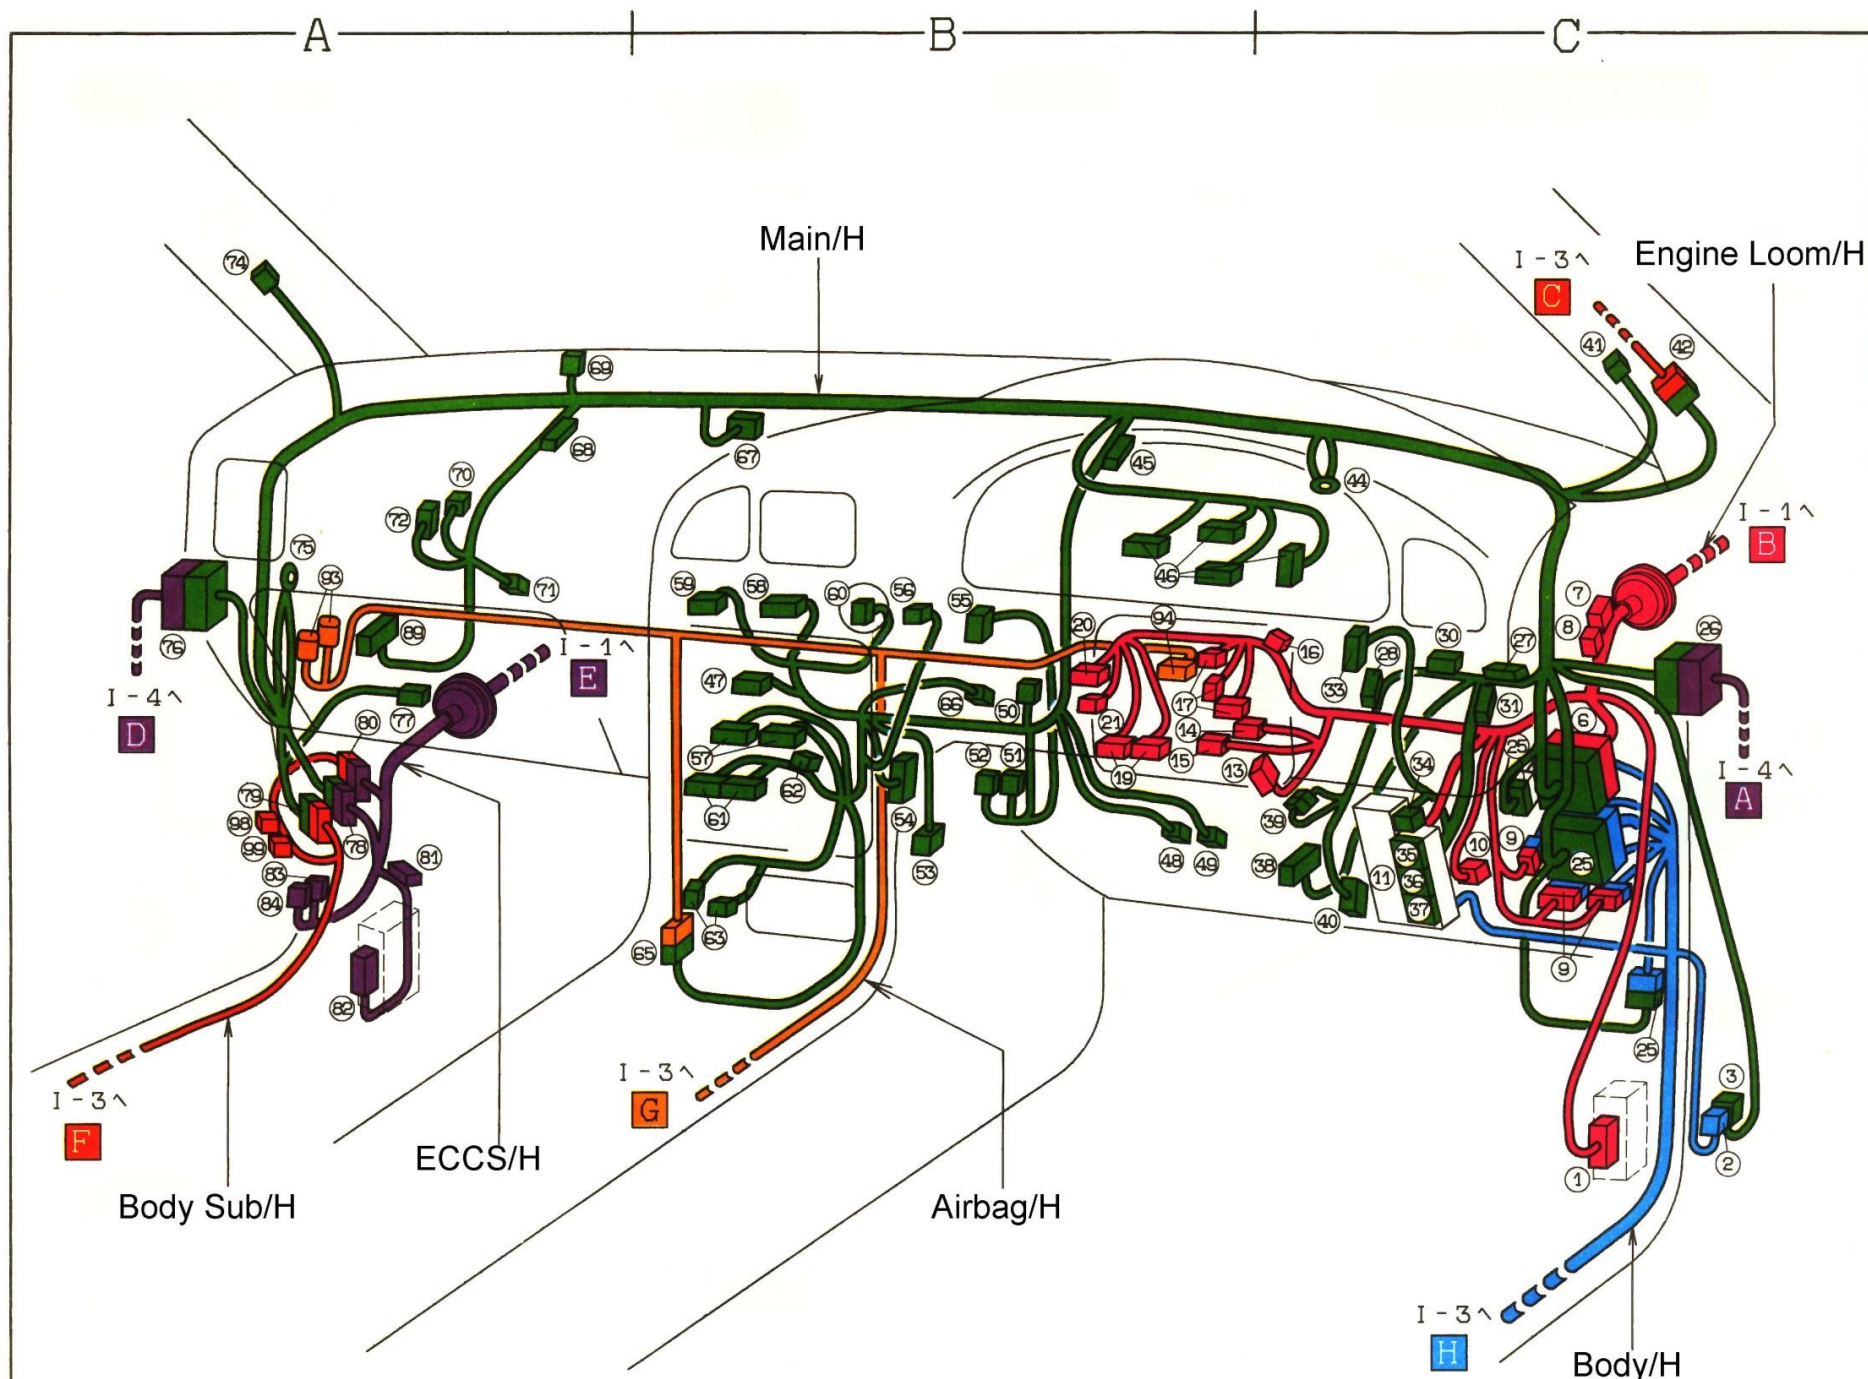

Main/H

- 69 B-69 Sun Light Sensor
- 68 B-73 Joint Connector C
- 70 B-74 A/C Amp
- 71 B-75 Fan Control Amp
- 72 B-76 Intake Door Actuator
- 74 B-78 Speaker (Left Pillar)
- 75 B-79 Body Earth
- 76 B-80 Door/H(Front Left)~Body/H
- 77 B-81 Blower Fan Motor
- 78 B-82 ECCS/H~Main/H
- 79 B-83 Body Sub/H~Main/H
- 89 B-99 RCL C/U

ECCS/H

- 78 B-82 ECCS/H~Main/H
- 80 B-85 Body Sub/H~Main/H
- 81 B-86 Joint Connector
- 82 B-87 ECCS C/U
- 83 R-20 ECCS Relay <1M>
- 84 R-21 IGN Coil Relay <1M>

Body Sub/H

- 79 B-83 Main/H~Body Sub/H
- 80 B-85 Body Sub/H~ECCS/H
- 98 B-91 Diode
- 99 B-92 Diode

Airbag/H

- 93 B-93 Inflators

Engine Loom/H

- 13 B-13 Key Switch
- 14 B-14 Key Light Sensor
- 15 B-15 Key Insert Switch
- 17 B-17 Combination Switch
- 19 B-19 Empty Terminal
- 20 B-20 Wiper Switch (Front)
- 21 B-21 Wiper Switch (Rear)

Main/H

- 45 B-40 Joint Connector - B
- 46 B-41 Combination Meter
- 47 B-42 Sub Meter
- 48 B-43 Stop Light Switch
- 49 B-44 Brake Switch
- 50 B-45 Buzzer
- 51 B-46 Circuit Breaker
- 52 B-47 Flasher Unit
- 53 B-48 Air Mix Door Actuator
- 54 B-49 Mode Door Actuator
- 55 B-50 Power Antenna Half Switch
- 56 B-51 Inside Air Temperature Sensor
- 57 B-52 HVAC Unit
- 58 B-53 Hazzard Switch
- 59 B-54 De-Fogger Switch
- 60 B-55 Clock
- 61 B-56 Display Unit
- 62 B-57 Radio
- 62 B-57 Audio Terminal
- 63 B-68 Cigarette Lighter
- 65 B-70 Airbag/H~Main/H
- 66 B-71 Clutch Switch
- 67 B-72 Re-Circ Door Actuator

Airbag/H

- 65 B-70 Main/H~Airbag/H
- 94 B-97 Steering Wheel

Engine Loom/H


- 1 B-1 A/T C/U
- 6 B-6 Engine Loom/H~Main/H
- 7 B-7 Diode
- 8 B-8 Diode
- 9 B-9 Engine Loom/H~Body/H
- 10 B-10 Kick Down Switch
- 11 B-11 Fuse Block
- 16 B-16 Fog Light Switch

Main/H

- 6 B-6 Main/H~Engine Loom/H
- 11 B-11 Fuse Block
- 25 B-25 Main/H~Body/H
- 26 B-26 Main/H~Door/H (Front Right)
- 27 B-27 Joint Connector - D
- 28 B-28 Diode
- 29 B-29 Diode
- 30 B-30 Diode
- 31 B-31 Joint Connector - A
- 33 B-33 Electric Miror Switch
- 39 B-34 Air Bleed Conector
- 40 B-36 Diagnostic Cut Off Conector
- 41 B-37 Speaker (Right Pillar)
- 42 B-38 Main/H~Loom Lamp/H
- 44 B-39 TCU
- 38 B-77 De-Fogger Relay <1M> <2M>
- 3 R-1 P/W Relay <1M> <1M1B>
- 34 R-13 ACC Relay 2 <1M>
- 35 R-14 ACC Relay 1 <1M>
- 36 R-15 ING Relay <1M>

Body/H

- 9 B-9 Body/H~Engine Loom/H
- 11 B-11 Fuse Block
- 25 B-25 Body/H~Main/H
- 2 R-27 Fuel Pump Relay <1M>

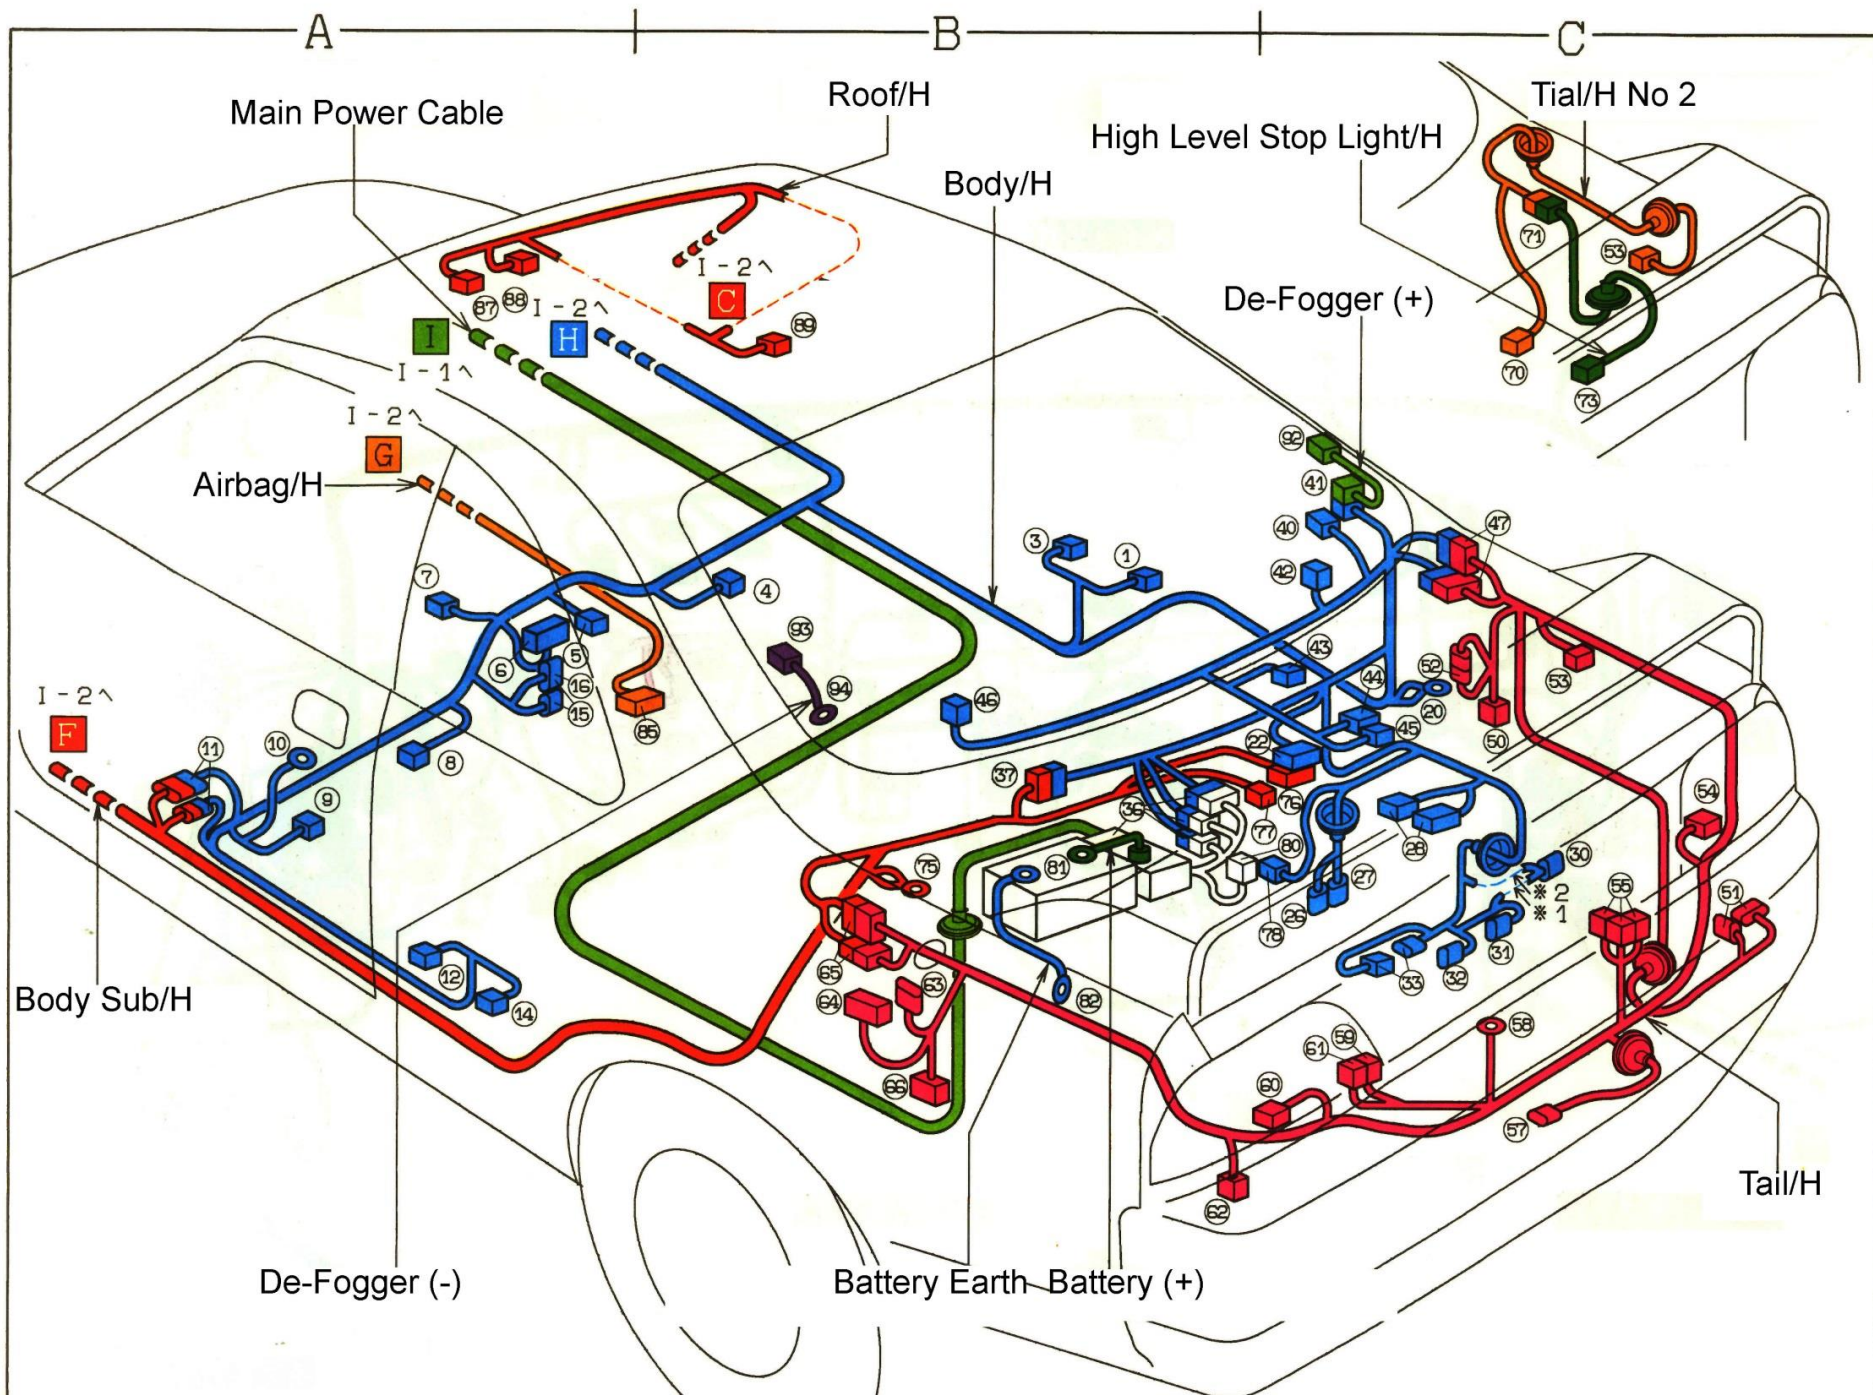

Body/H

- ⑤ F-5 Parking Brake Switch
- ⑥ F-6 Power Shift Switch
- ⑦ F-7 A/T Device
- ⑧ F-8 Seatbelt Buckle Switch
- ⑨ F-9 EGT Sensor
- ⑩ F-10 EGT Sensor Switching Module
- ⑪ F-11 Body Earth
- ⑫ F-12 Body/H~Sub Body/H
- ⑬ F-13 Door Switch (Left)
- ⑭ F-14 Door Switch (Front Left)
- ⑮ F-15 Seatbelt (left)
- ⑯ F-16 A-LSD G-Sensor
- ⑰ F-17 ATTESA Pro G-Sensor

Body Sub/H

- ⑪ F-11 Body/H~Body Sub/H

Roof/H

- ⑧ G-1 Sunroof
- ⑧ G-3 Interior Spot Light

Body/H

- ① F-1 Seatbelt (Right)
- ③ F-3 Door SWItch (Front Right)
- ④ F-4 Door SWItch (Right)
- ④ F-4 Seatbelt Buckle Switch (Right)
- ③ T-16 Fuse Block (Boot)
- ③ T-17 Body/H~Body Sub/H
- ④ T-26 Speaker (Rear Left)

Airbag/H

- ⑧ F-20 SRS Airbag C/U

Roof/H

- ⑧ G-2 Interior Light

Battery (+)

- ③ T-16 Fuse Block Boot
- ⑧ T-58 Battery

Main Power Cable

- ③ T-16 Starter Motor Power cable

Body/H

- ② T-1 Body Earth
- ② T-2 EPS C/U
- ② T-3 HICAS C/U
- ② T-4 Fuel Gauge Unit
- ② T-5 Fuel Pump
- ② T-6 Speaker Amp
- ② T-8 ABS Sensor
- ② T-11 Wheel Speed Sensor
- ② T-11 HICAS Sensor (Sub)
- ② T-12 HICAS Sensor (Main)
- ② T-13 HICAS Monitor
- ② T-20 Short Connector
- ② T-21 Condensor
- ② T-22 Speaker (Rear Right)
- ② T-23 Boot Light
- ② T-24 Wiper Amp (Rear)
- ② T-25 Wiper Motor (Rear)
- ② T-27 Body/H~Tail/H
- ② T-66 Yaw Rate Sensor

Tail/H

- ② T-27 Tail/H~Body/H
- ② T-30 Oil Level Sensor
- ② T-31 A-LSD Actuator
- ② T-31 ATTESA E-TS Pro Actuator
- ② T-33 Tail/H~Tail/H No 2
- ② T-34 Combination Light (Rear Right)
- ② T-35 Number Plate Light
- ② T-37 Body Earth
- ② T-38 Combination Light (Rear Left)
- ② T-65 Connecting Connector
- ② R-23 A-LSD Motor Relay <1M>
- ② R-24 ATTESA E-TS Pro Motor Relay <1M>
- ② R-24 HICAS Motor Relay <1M>
- ② R-22 A-LSD Actuator Relay <1T>

De-Fogger (+)

- ② T-21 Condensor
- ② T-60 De-Fogger (+)

Body Sub/H

- ③ T-17 Body/H~Body Sub/H
- ③ T-43 Body/H~Tail/H
- ③ T-55 Body Earth

Tail/H

- ③ T-39 Dual Mode Muffler Actuator
- ③ T-40 Dual Mode Muffler Controller
- ③ T-41 Dropping Resistor
- ③ T-42 Power Antenna Timer
- ③ T-43 Tail/H~Body/H

Battery Earth

- ③ T-57 Body Earth
- ③ T-58 Battery

De-Fogger (-)

- ③ T-62 De-Fogger (-)
- ③ T-63 Body Earth

Body Sub/H


- ③ T-56 ABS C/U
- ③ T-56 ATTESA E-TS Pro/ABS C/U
- ③ T-57 A-LSD C/U
- ③ R-22 A-LSD Actuator Relay <1T>
- ③ R-30 E-TS Actuator Relay <1T>

Tail/H No 2

- ③ T-33 Tail/H~Tail/H No 2
- ③ T-50 Boot Light Switch
- ③ T-51 Tail/H No 2~
- ③ T-51 High Mount Stop Light

High Mount Stop Light/H

- ③ T-51 High Mount Stop Light/H~
- ③ T-51 Tail/H No 2
- ③ T-53 High Mount Stop Light (Spoiler)
- ③ R-27 Ful Pump Relay <1M>

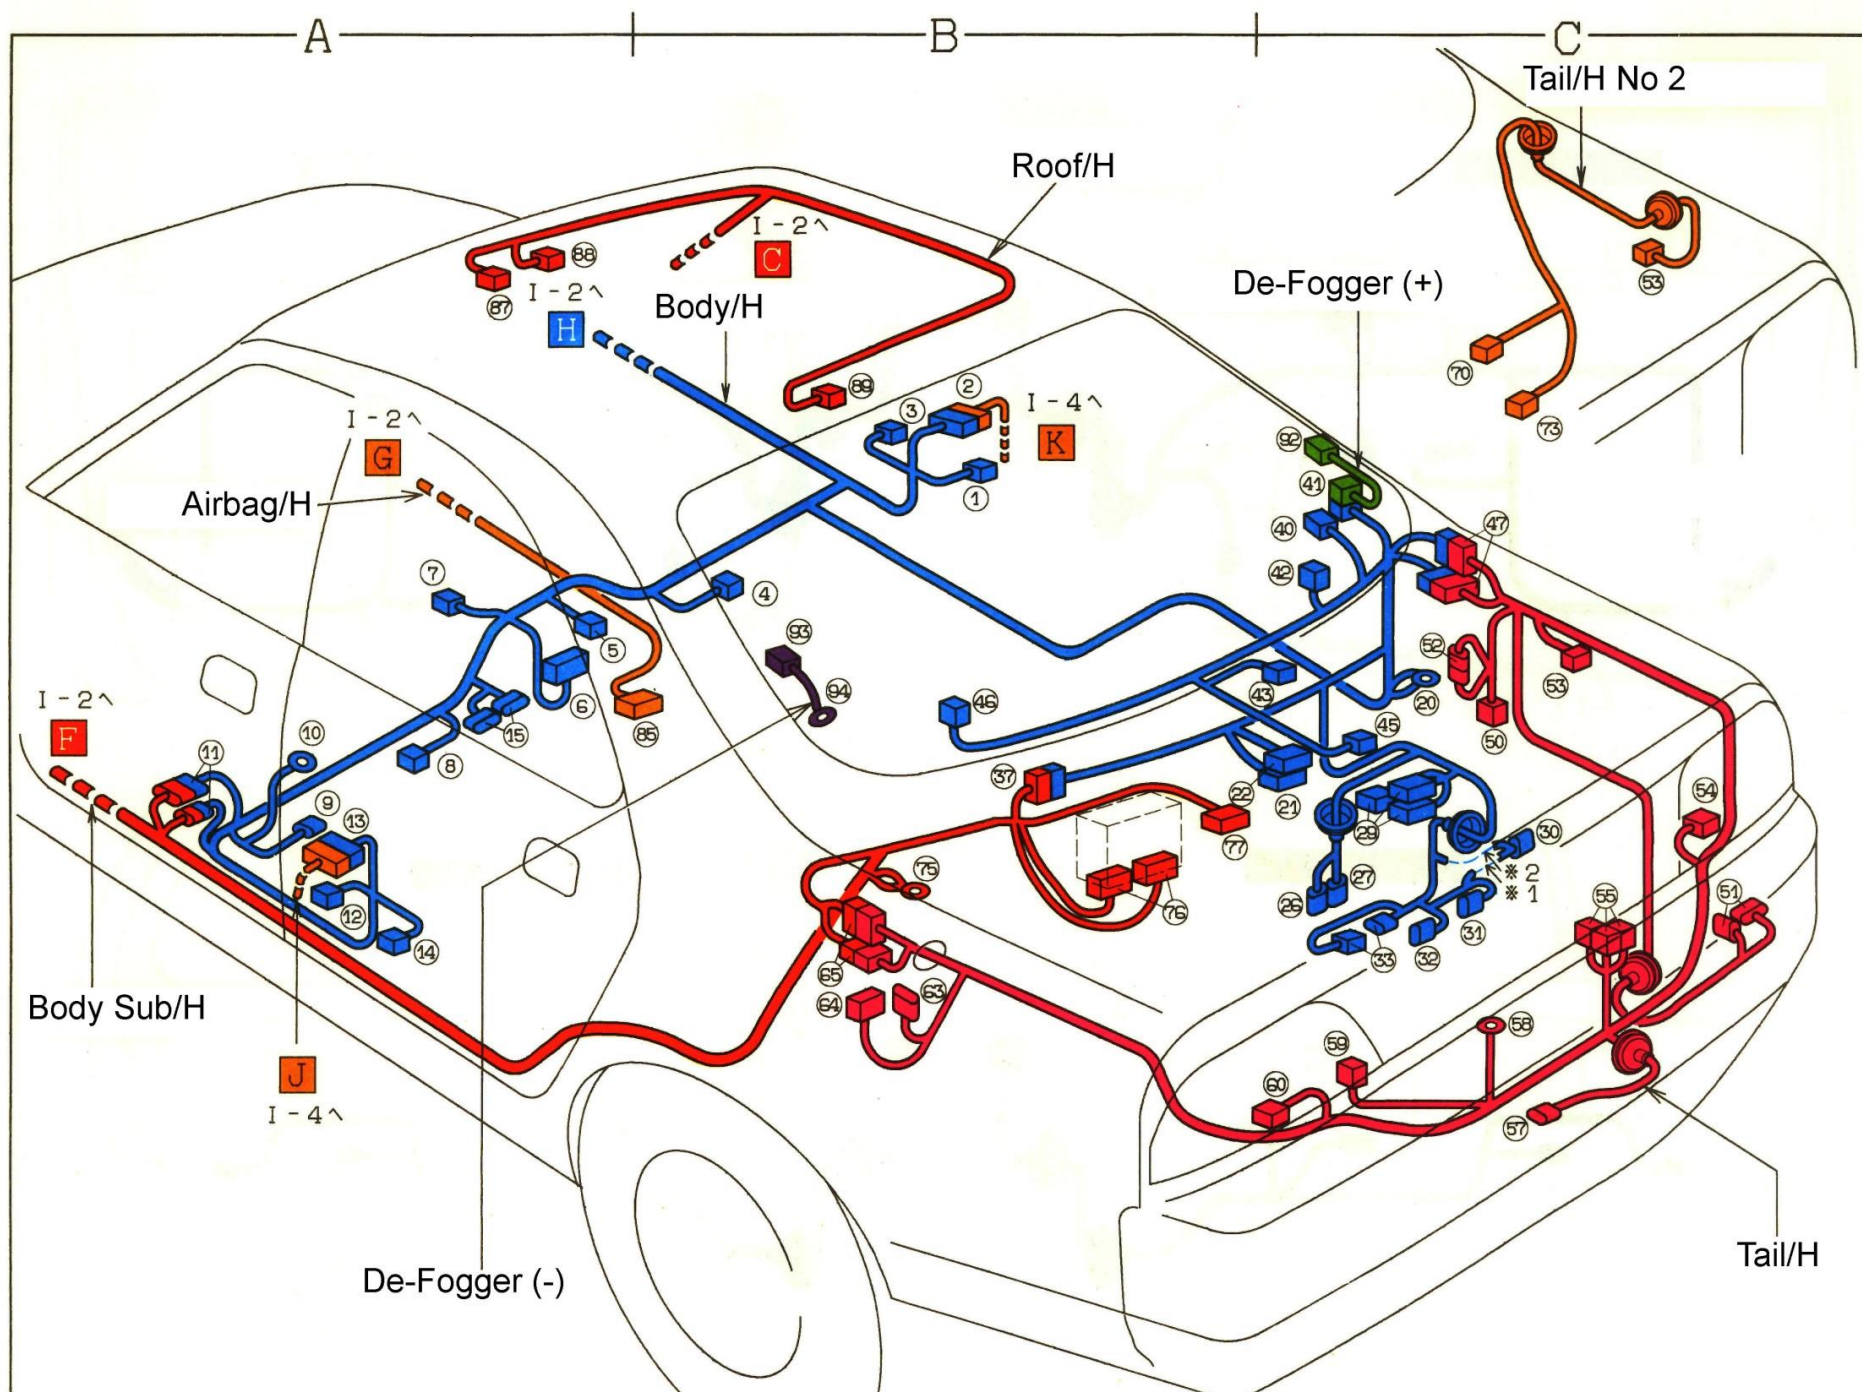

Body/H

- ⑤ F-5 Parking Brake Switch
- ⑥ F-6 Power Shift Switch
- ⑦ F-7 A/T Device
- ⑧ F-8 Seatbelt Buckle Switch (Left)
- ⑨ F-9 ETG Sensor
- ⑩ F-10 Body Earth
- ⑪ F-11 Body/H~Body Sub/H
- ⑫ F-12 Door Switch (Front Left)
- ⑬ F-13 Door/H (Rear Left)~Body/H
- ⑭ F-14 Seatbelt (Left)
- ⑮ F-15 A-LSD G- Sensor

Body Sub/H

- ⑪ F-11 Body/H~Body Sub/H

Roof/H

- ⑧ G-1 Sunroof
- ⑧ G-3 Interior Spot Light

Body/H

- ① F-1 Seatbelt (Right)
- ② F-2 Body/H~Door/H (Rear Right)
- ③ F-3 Door Switch (Front Right)
- ④ F-4 Seatbelt Buckle (Right)
- ⑫ T-3 HICAS C/U
- ⑬ T-17 Body/H~Body Sub/H
- ⑭ T-26 Speaker (Rear Right)

Airbag/H

- ⑧ F-20 SRS Airbag C/U

Roof/H

- ⑧ G-2 Interior Light

Body Sub/H

- ⑬ T-17 Body/H~Body Sub/H
- ⑭ T-43 Body Sub/H~Tail/H
- ⑮ T-55 Body Earth
- ⑯ T-56 ABS C/U
- ⑰ T-56 ATTESA E-TS Pro/ABS C/U

Tail/H

- ⑬ T-41 Dropping Resistor
- ⑭ T-42 Power Antenna Timer
- ⑮ T-43 Tail/H~Body Sub/H

De-Fogger (-)

- ⑨ T-62 De-Fogger (-)
- ⑩ T-63 Body Earth

Body/H

- ⑫ T-1 Body Earth
- ⑬ T-2 EPS C/U
- ⑭ T-4 Fuel Gauge Unit
- ⑮ T-5 Fuel Pump
- ⑯ T-8 ABS Sensor (Rear)
- ⑰ T-11 HICAS Sensor (Sub)
- ⑱ T-12 HICAS Sensor (Main)
- ⑲ T-13 HICAS Monitor
- ⑳ T-20 Short Connector
- ㉑ T-21 Condensor
- ㉒ T-22 Speaker (Rear Right)
- ㉓ T-23 Boot Light
- ㉔ T-25 Wiper Motor (Rear)
- ㉕ T-27 Body/H~Tail/H
- ㉖ T-28 AV Tuner

Tail/H


- ⑬ T-27 Tail/H~Body/H
- ⑭ T-30 Oil Level Sensor
- ⑮ T-31 A-LSD Actuator
- ⑯ T-33 Tail/H~Tail/H No 2
- ⑰ T-34 Combination Light (Rear Right)
- ⑱ T-35 Numbr Plate Light
- ⑲ T-37 Body Earth
- ⑳ T-38 Combination Light (Rear Left)
- ㉑ T-65 Connector
- ㉒ R-23 ATTESA E-TS Motor Relay <1M>
- ㉓ R-24 HICAS Motor Relay <1M>
- ㉔ R-30 E-TS Actuator Relay <1T>

De-Fogger (+)

- ⑬ T-21 Condensor
- ⑭ T-60 De-Fogger (+)

Tail/H No.2

- ⑬ T-33 Tail/H No 2~Tail/H
- ⑭ T-50 Boot Light Switch
- ⑮ T-51 High Mount Stop Light (Boot Lit)

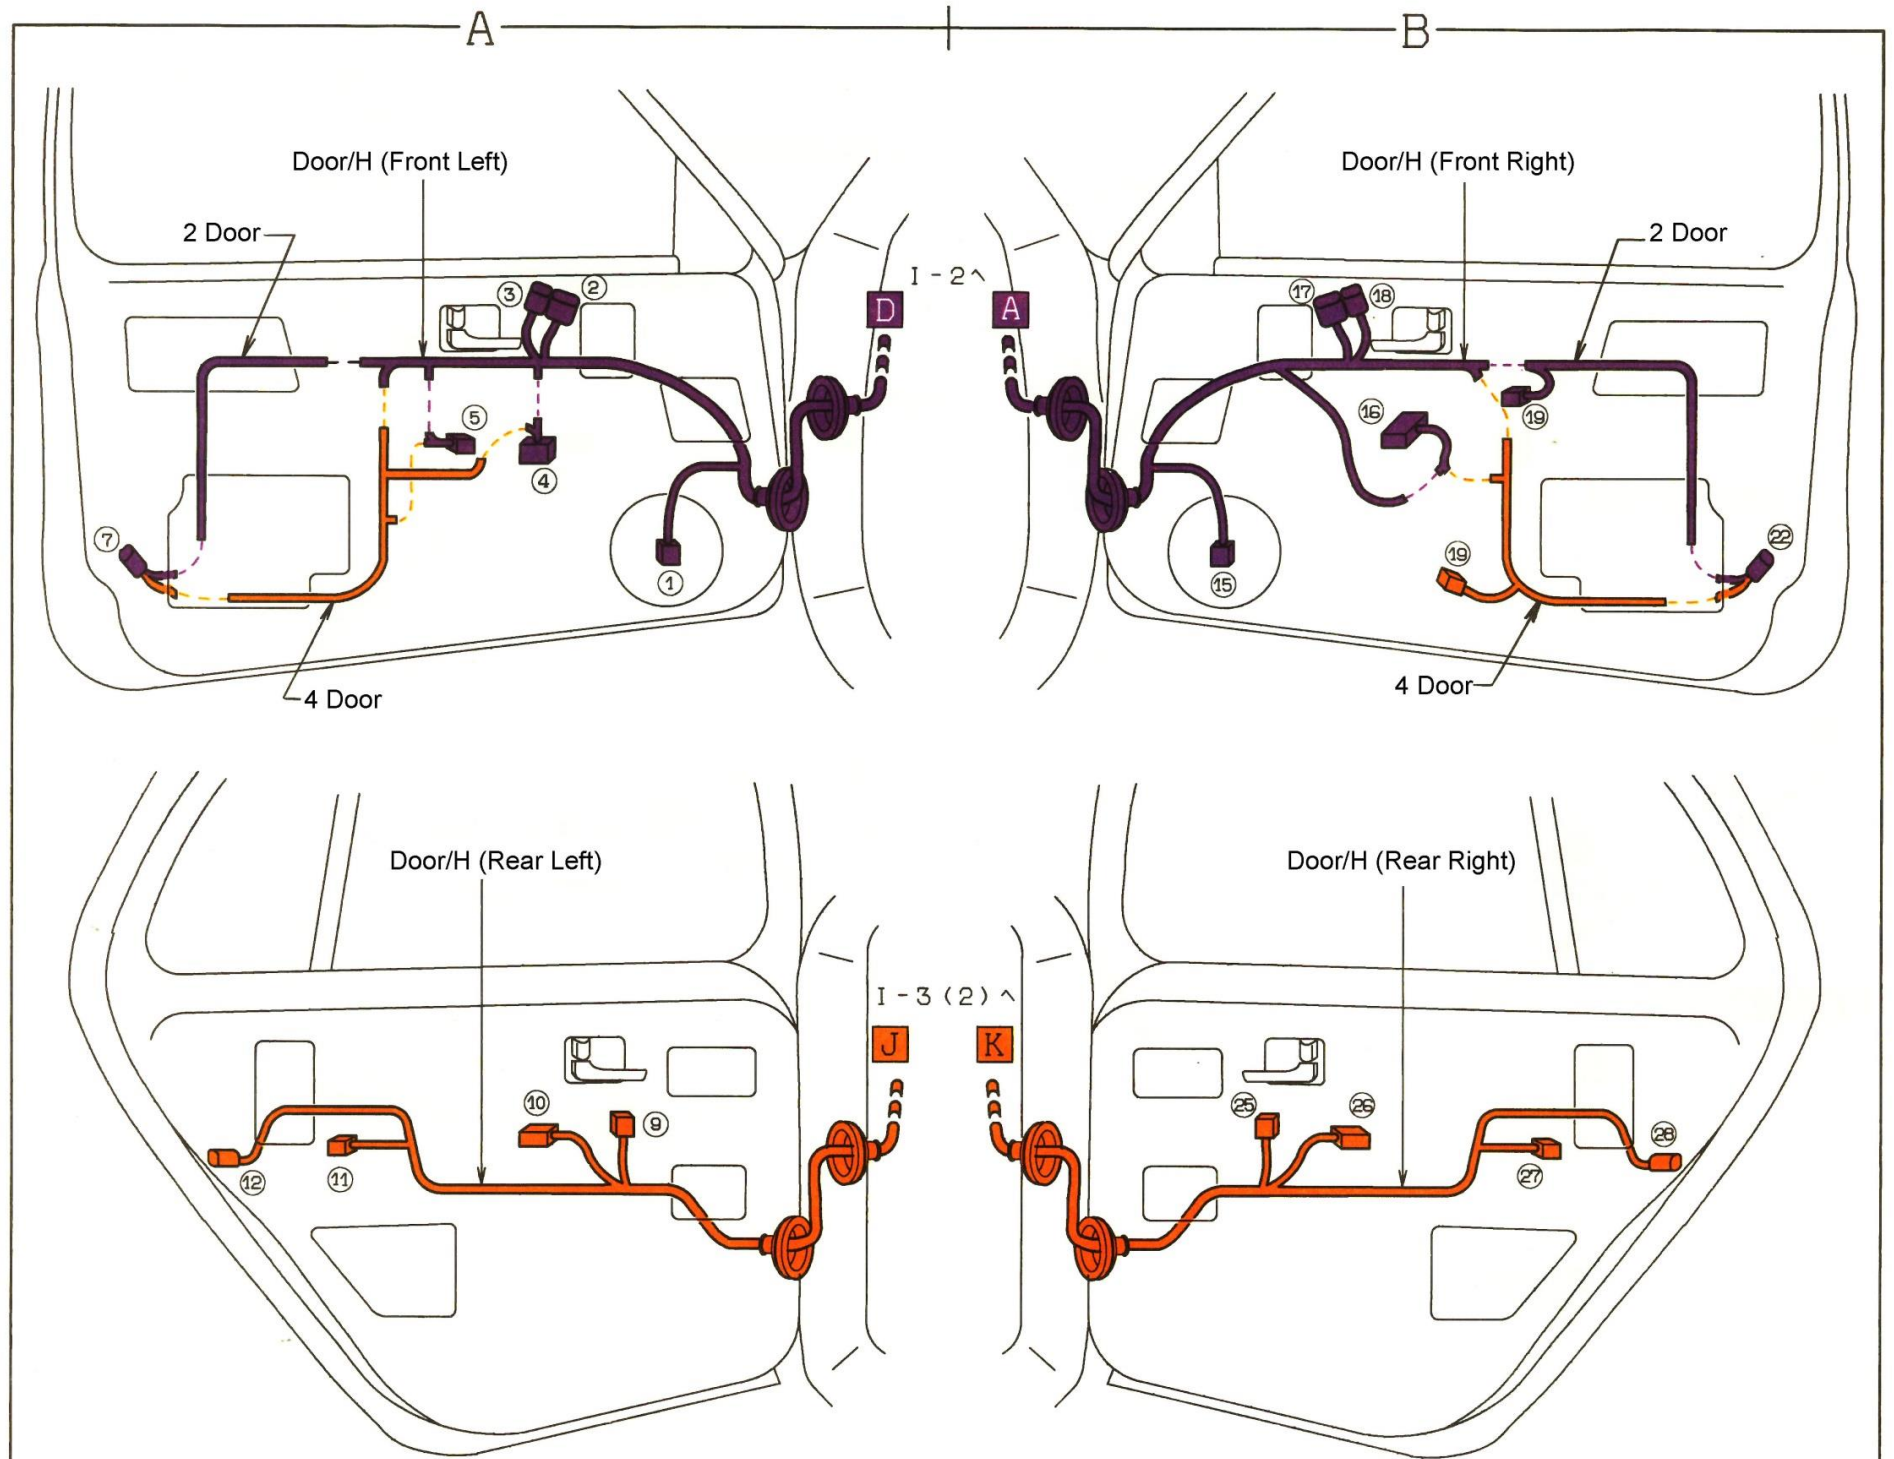

A

Door/H (Front Left)

- ① D-10 Speaker Door (Door Left)
- ② D-11 Electric Mirror (Door Left)
- ③ D-12 Heater Mirror (Door Left)
- ④ D-13 P/W Switch (Front Left)
- ⑤ D-14 P/W Motor (Front Left)
- ⑦ D-16 Door Lock Actuator (Front Left)

Door/H (Rear Left)

- ⑨ D-18 P/W Motor (Rear Left)
- ⑩ D-19 P/W Switch (Rear Left)
- ⑪ D-20 Door Switch (Rear Left)
- ⑫ D-21 Door Lock Actuator (Rear Left)

B


Door/H (Front Right)


- ⑮ D-1 Speaker (Door Right)
- ⑯ D-2 P/W Main Switch
- ⑰ D-3 Electric Mirror (Door Right)
- ⑱ D-4 Heated Mirror (Door Right)
- ⑲ D-5 P/W Motor (Front Right)
- ⑳ D-8 Door Lock Actuator (Front Right)
Door Lock Switch


Door/H (Rear Right)

- ⑳ D-23 P/W Motor (Rear Right)
- ㉑ D-24 P/W Switch (Rear Right)
- ㉒ D-25 Door Switch (Rear Right)
- ㉓ D-26 Door Lock Actuator (Rear Right)


C. Main Wiring Diagram

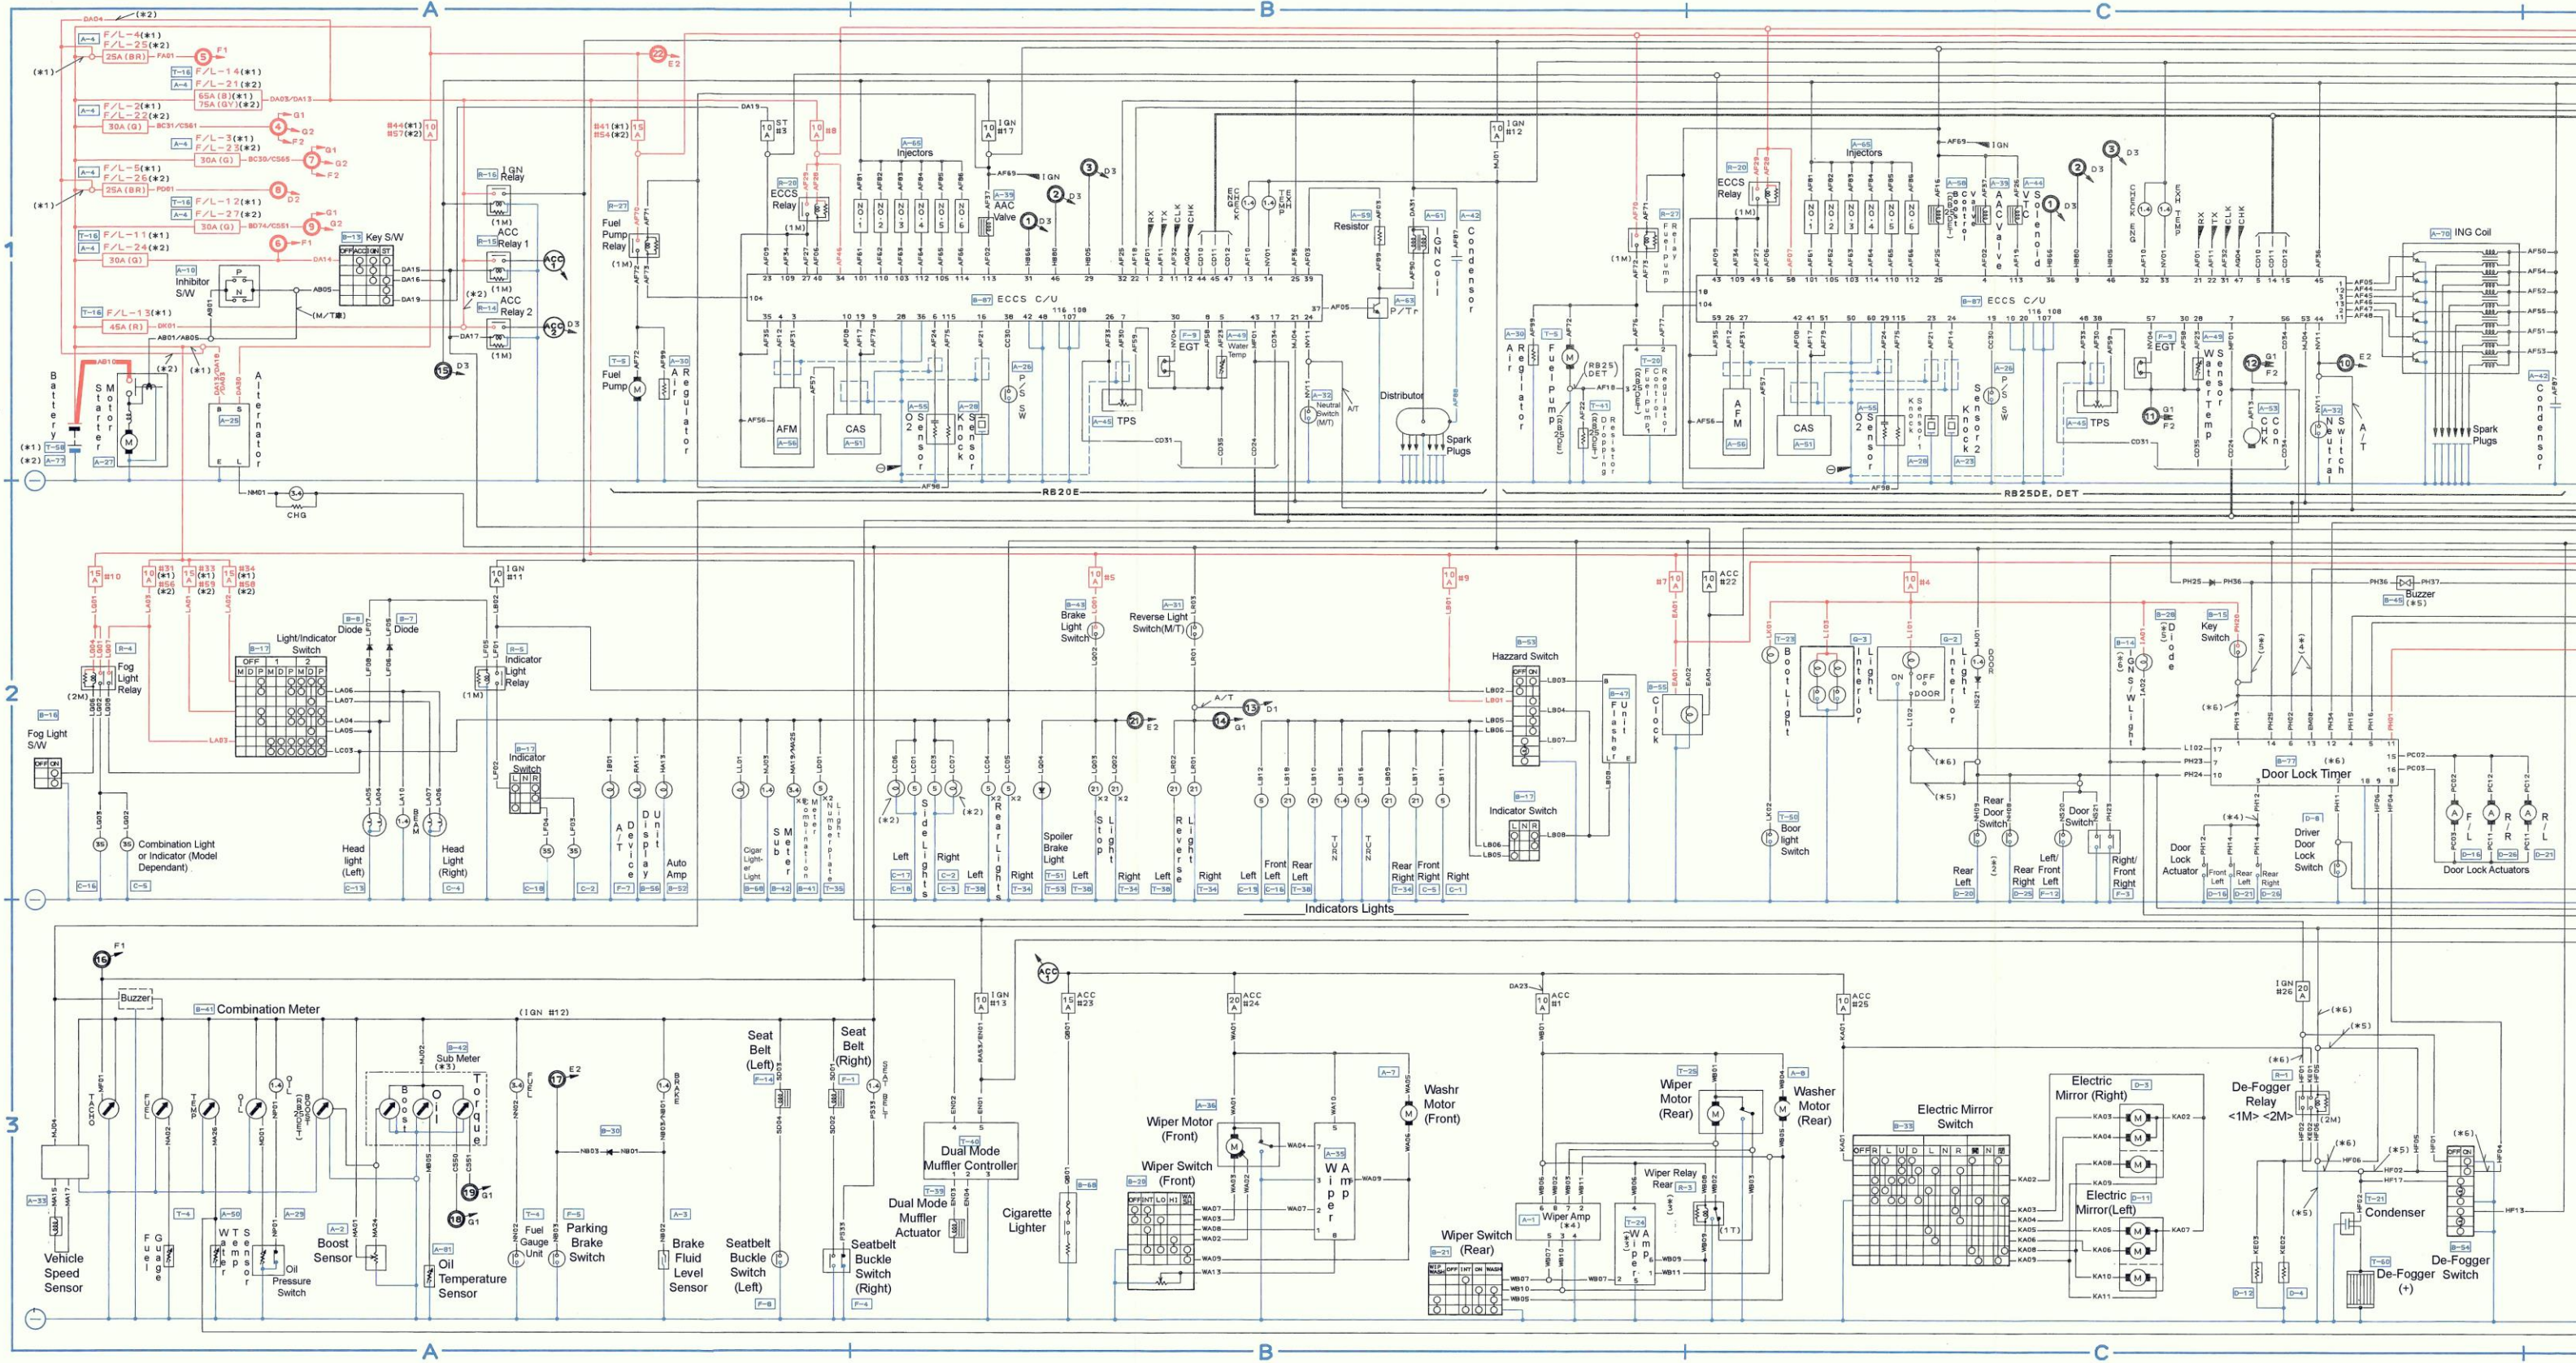


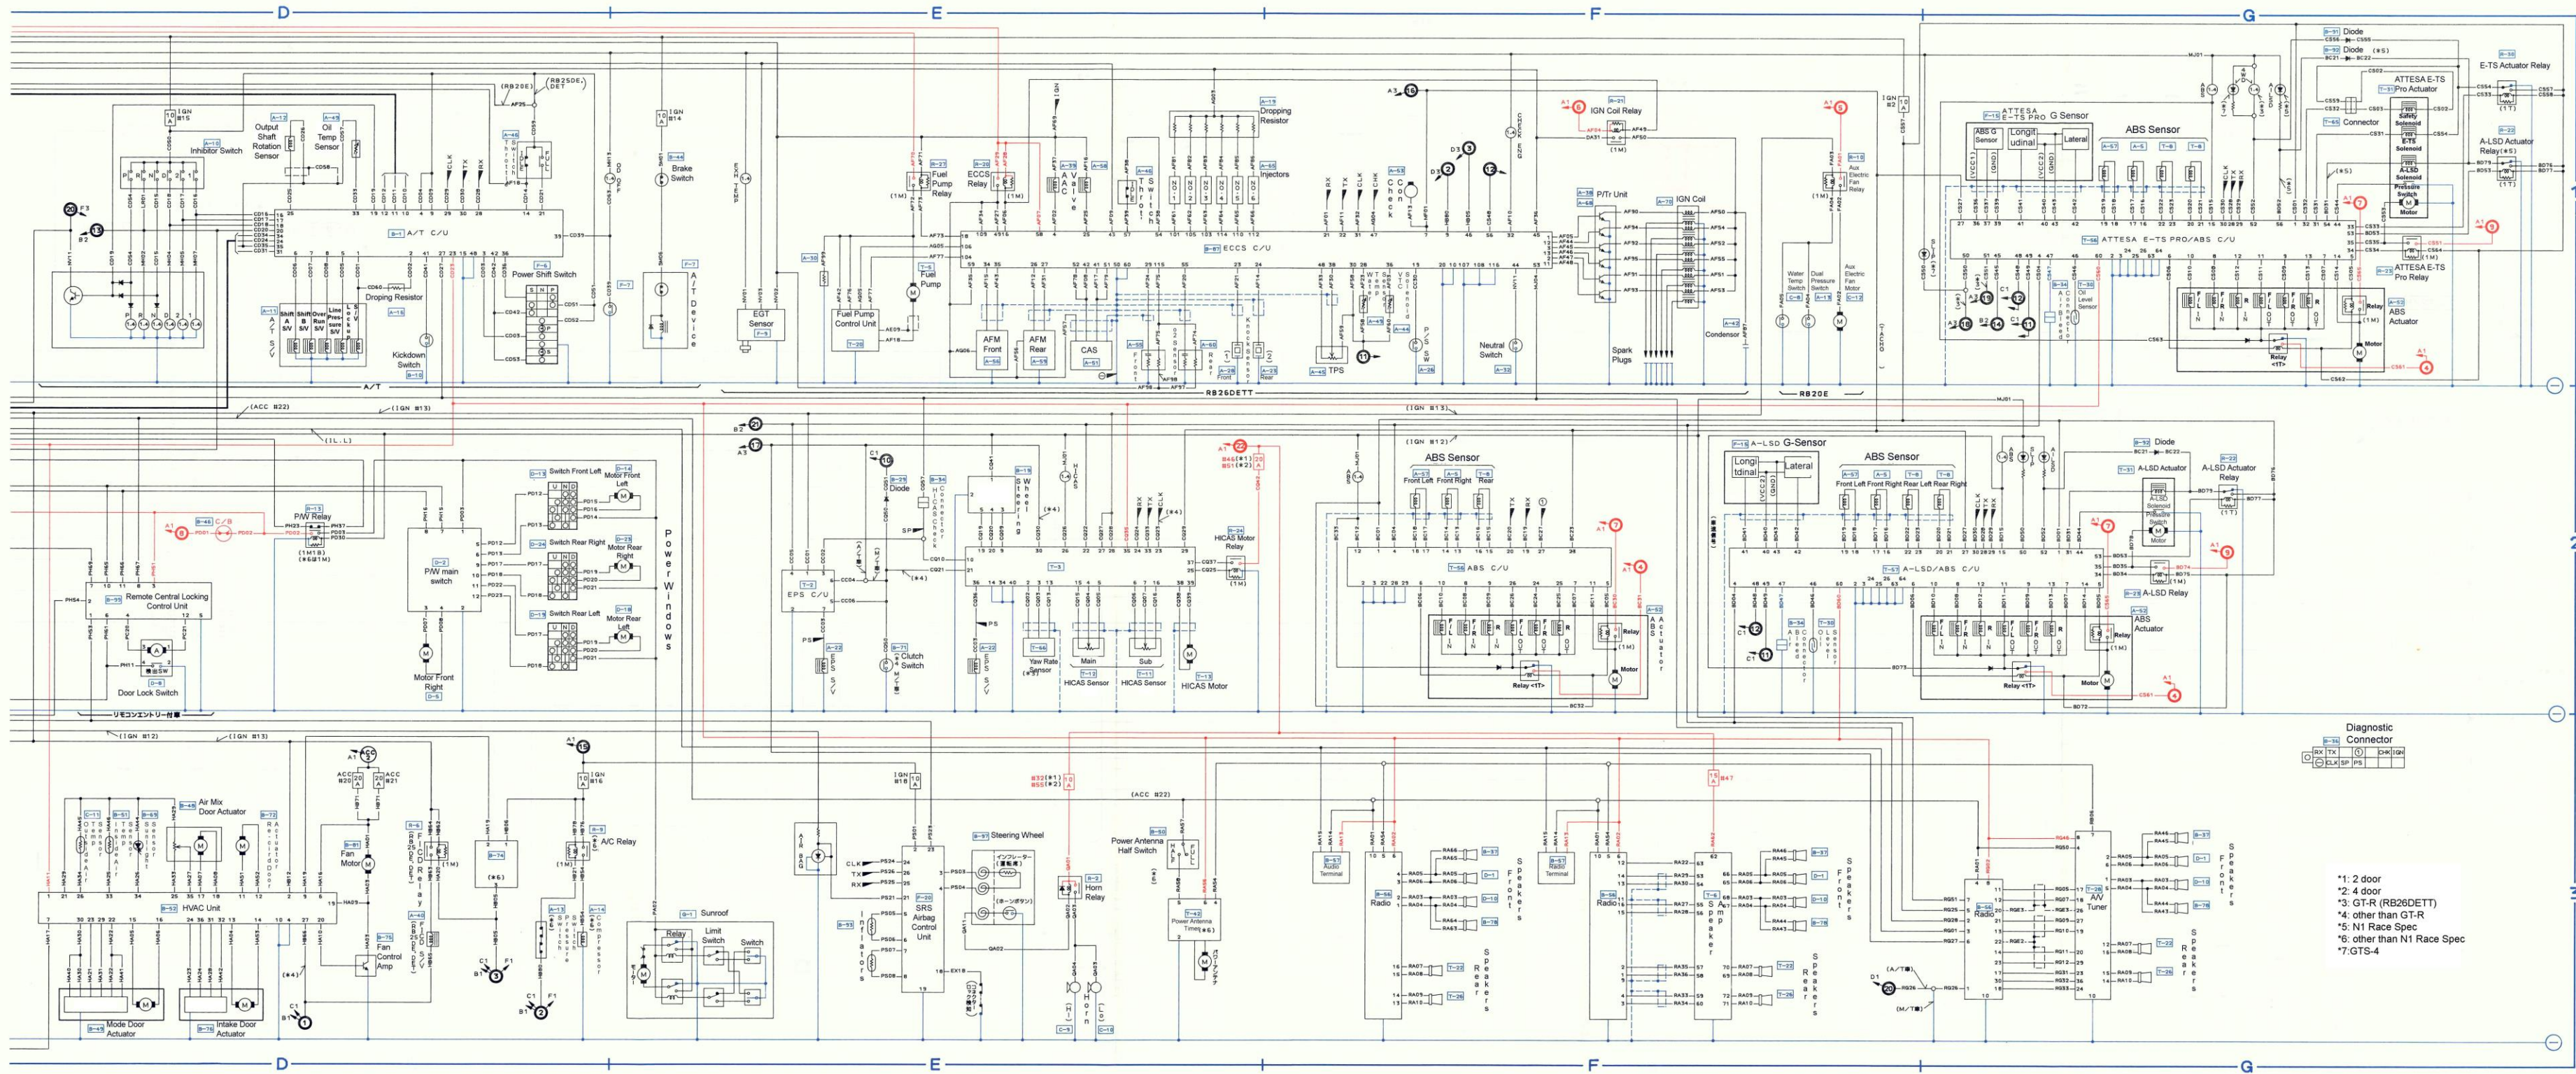

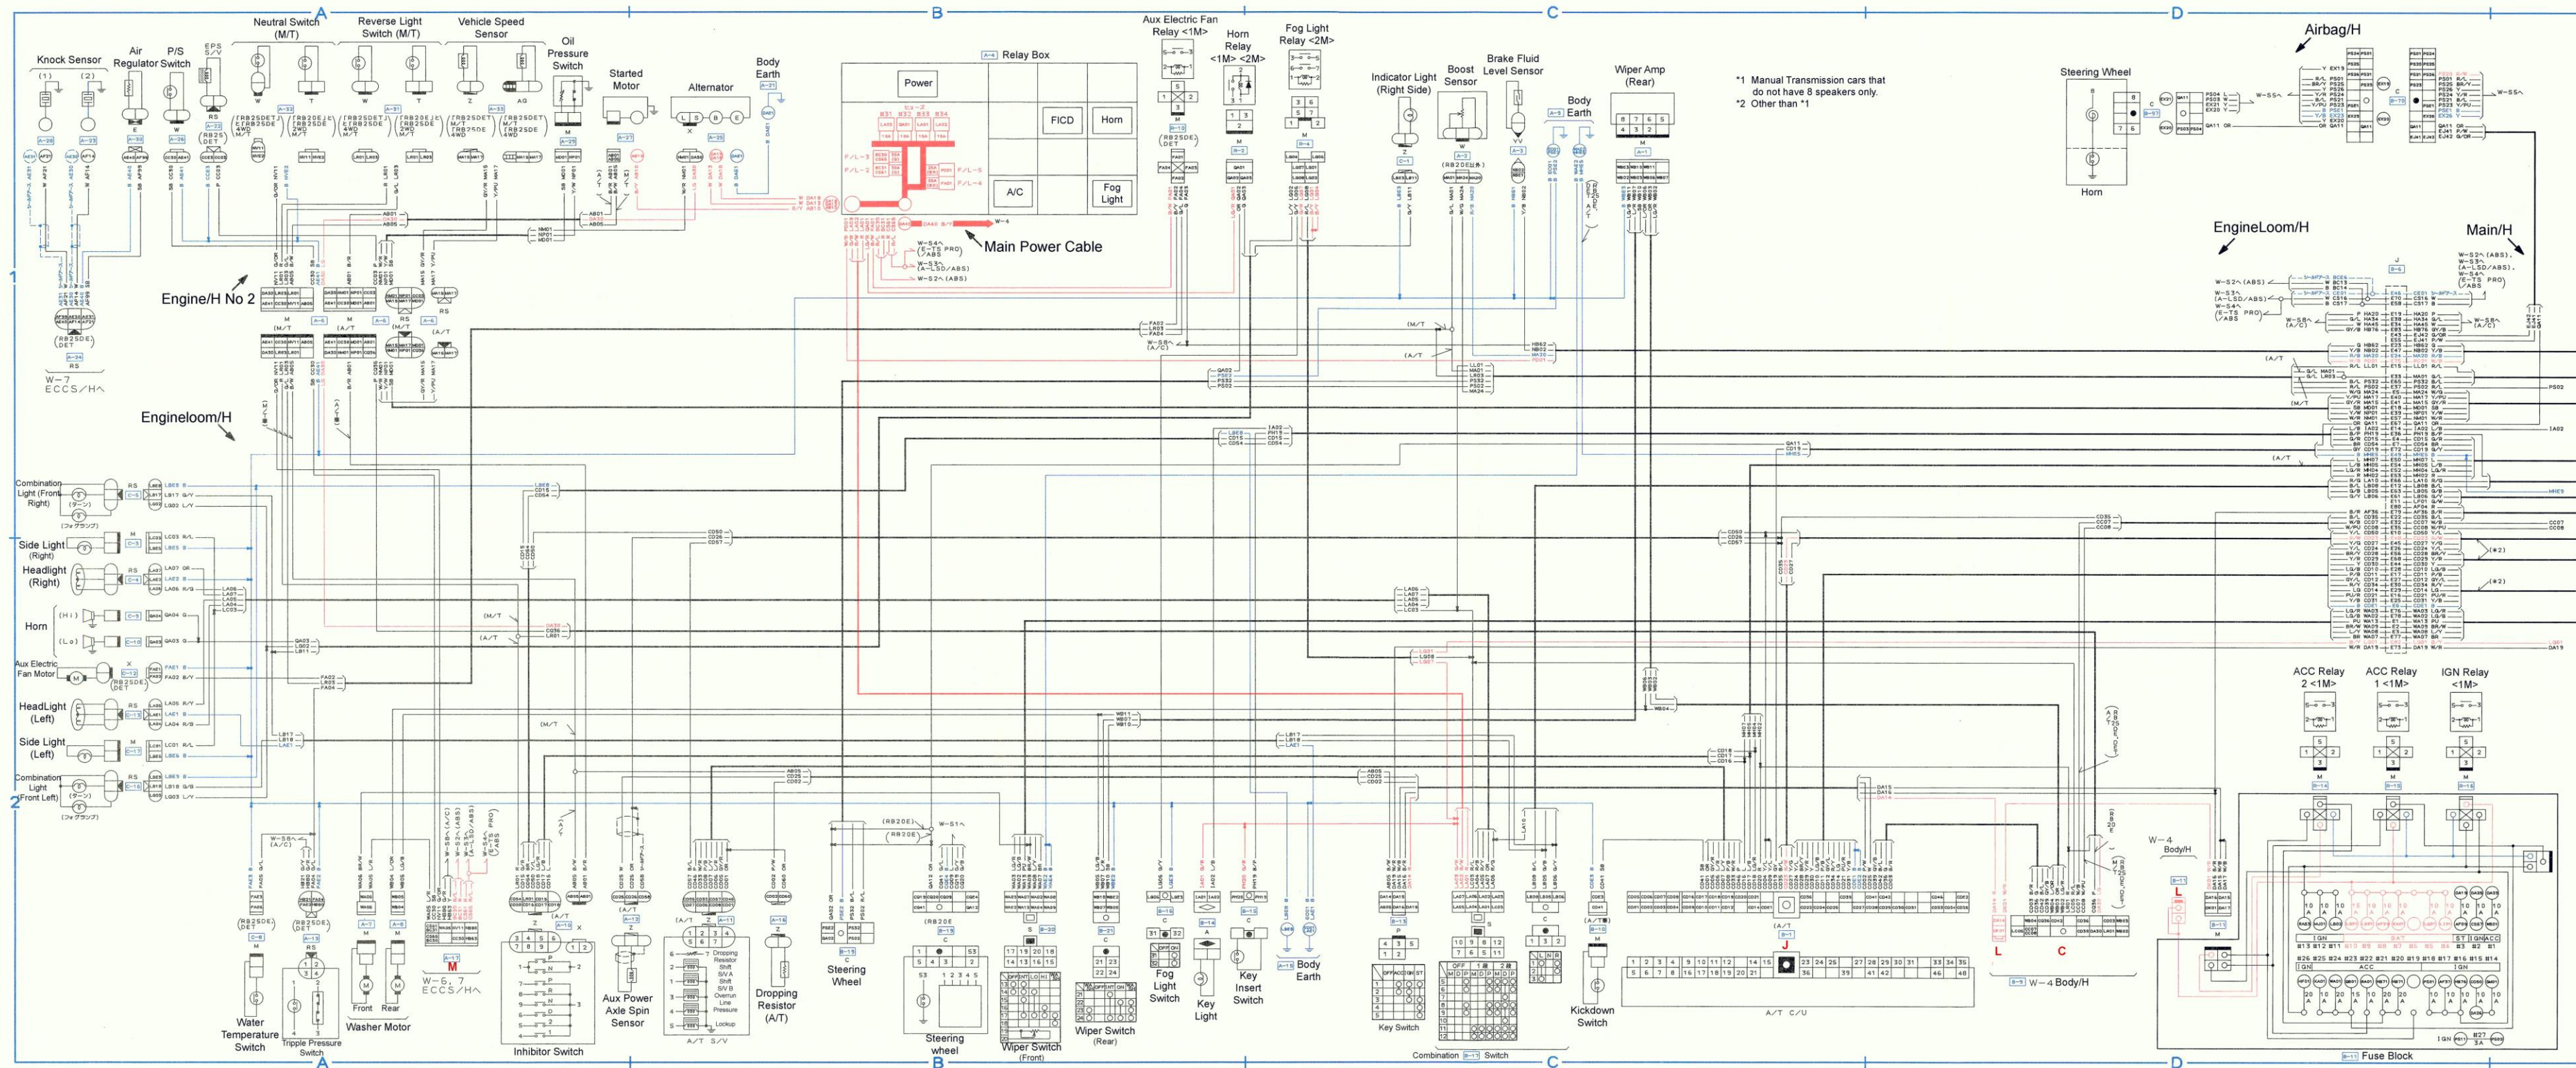



*2 Other than *1

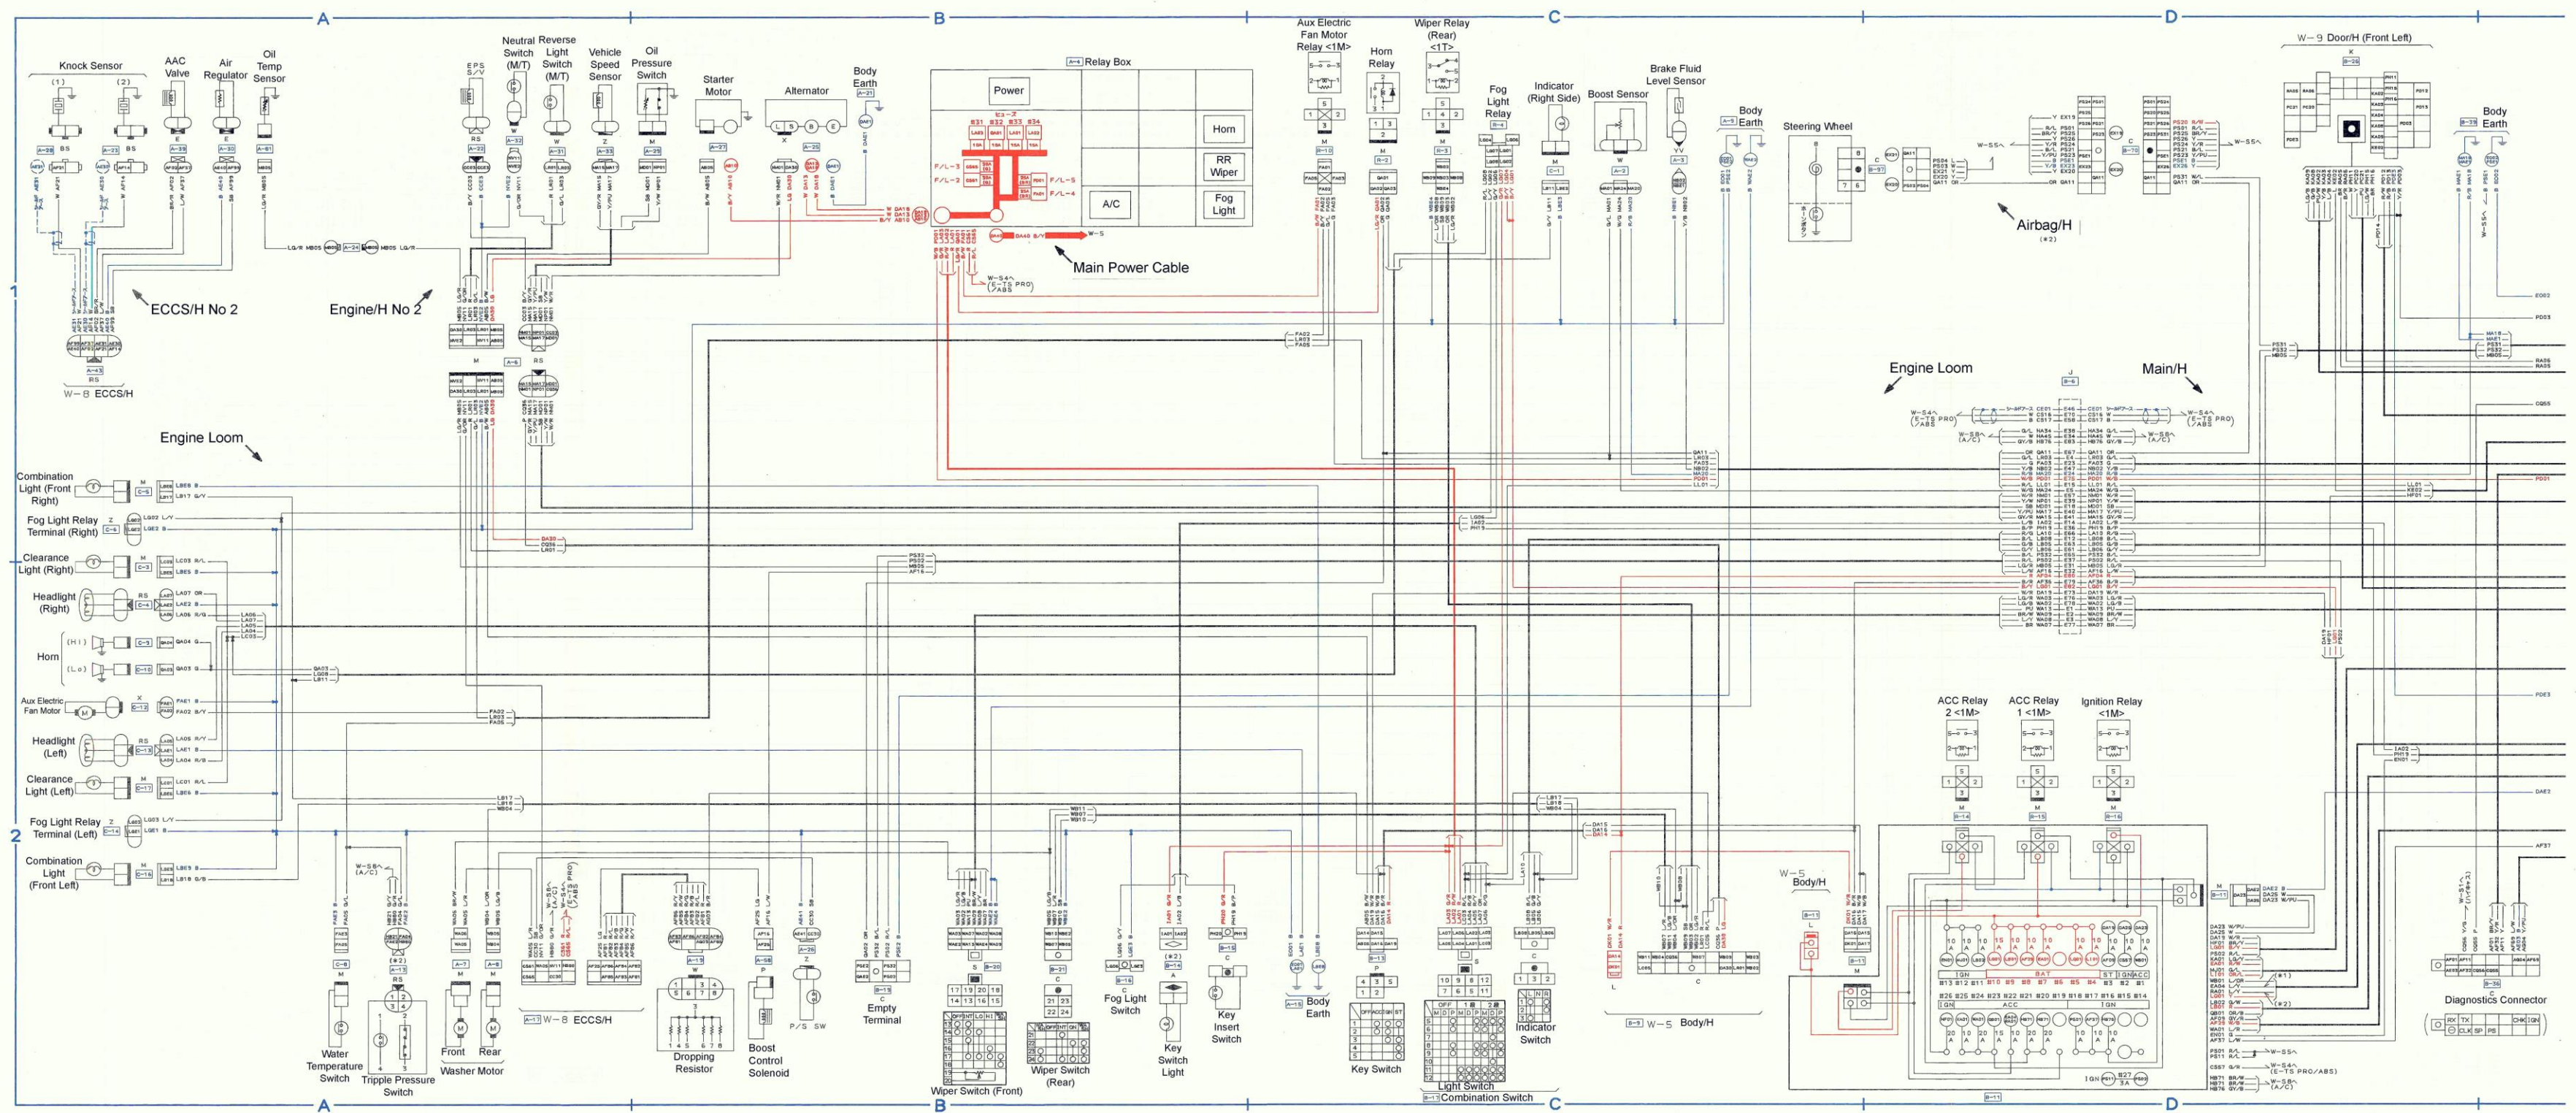

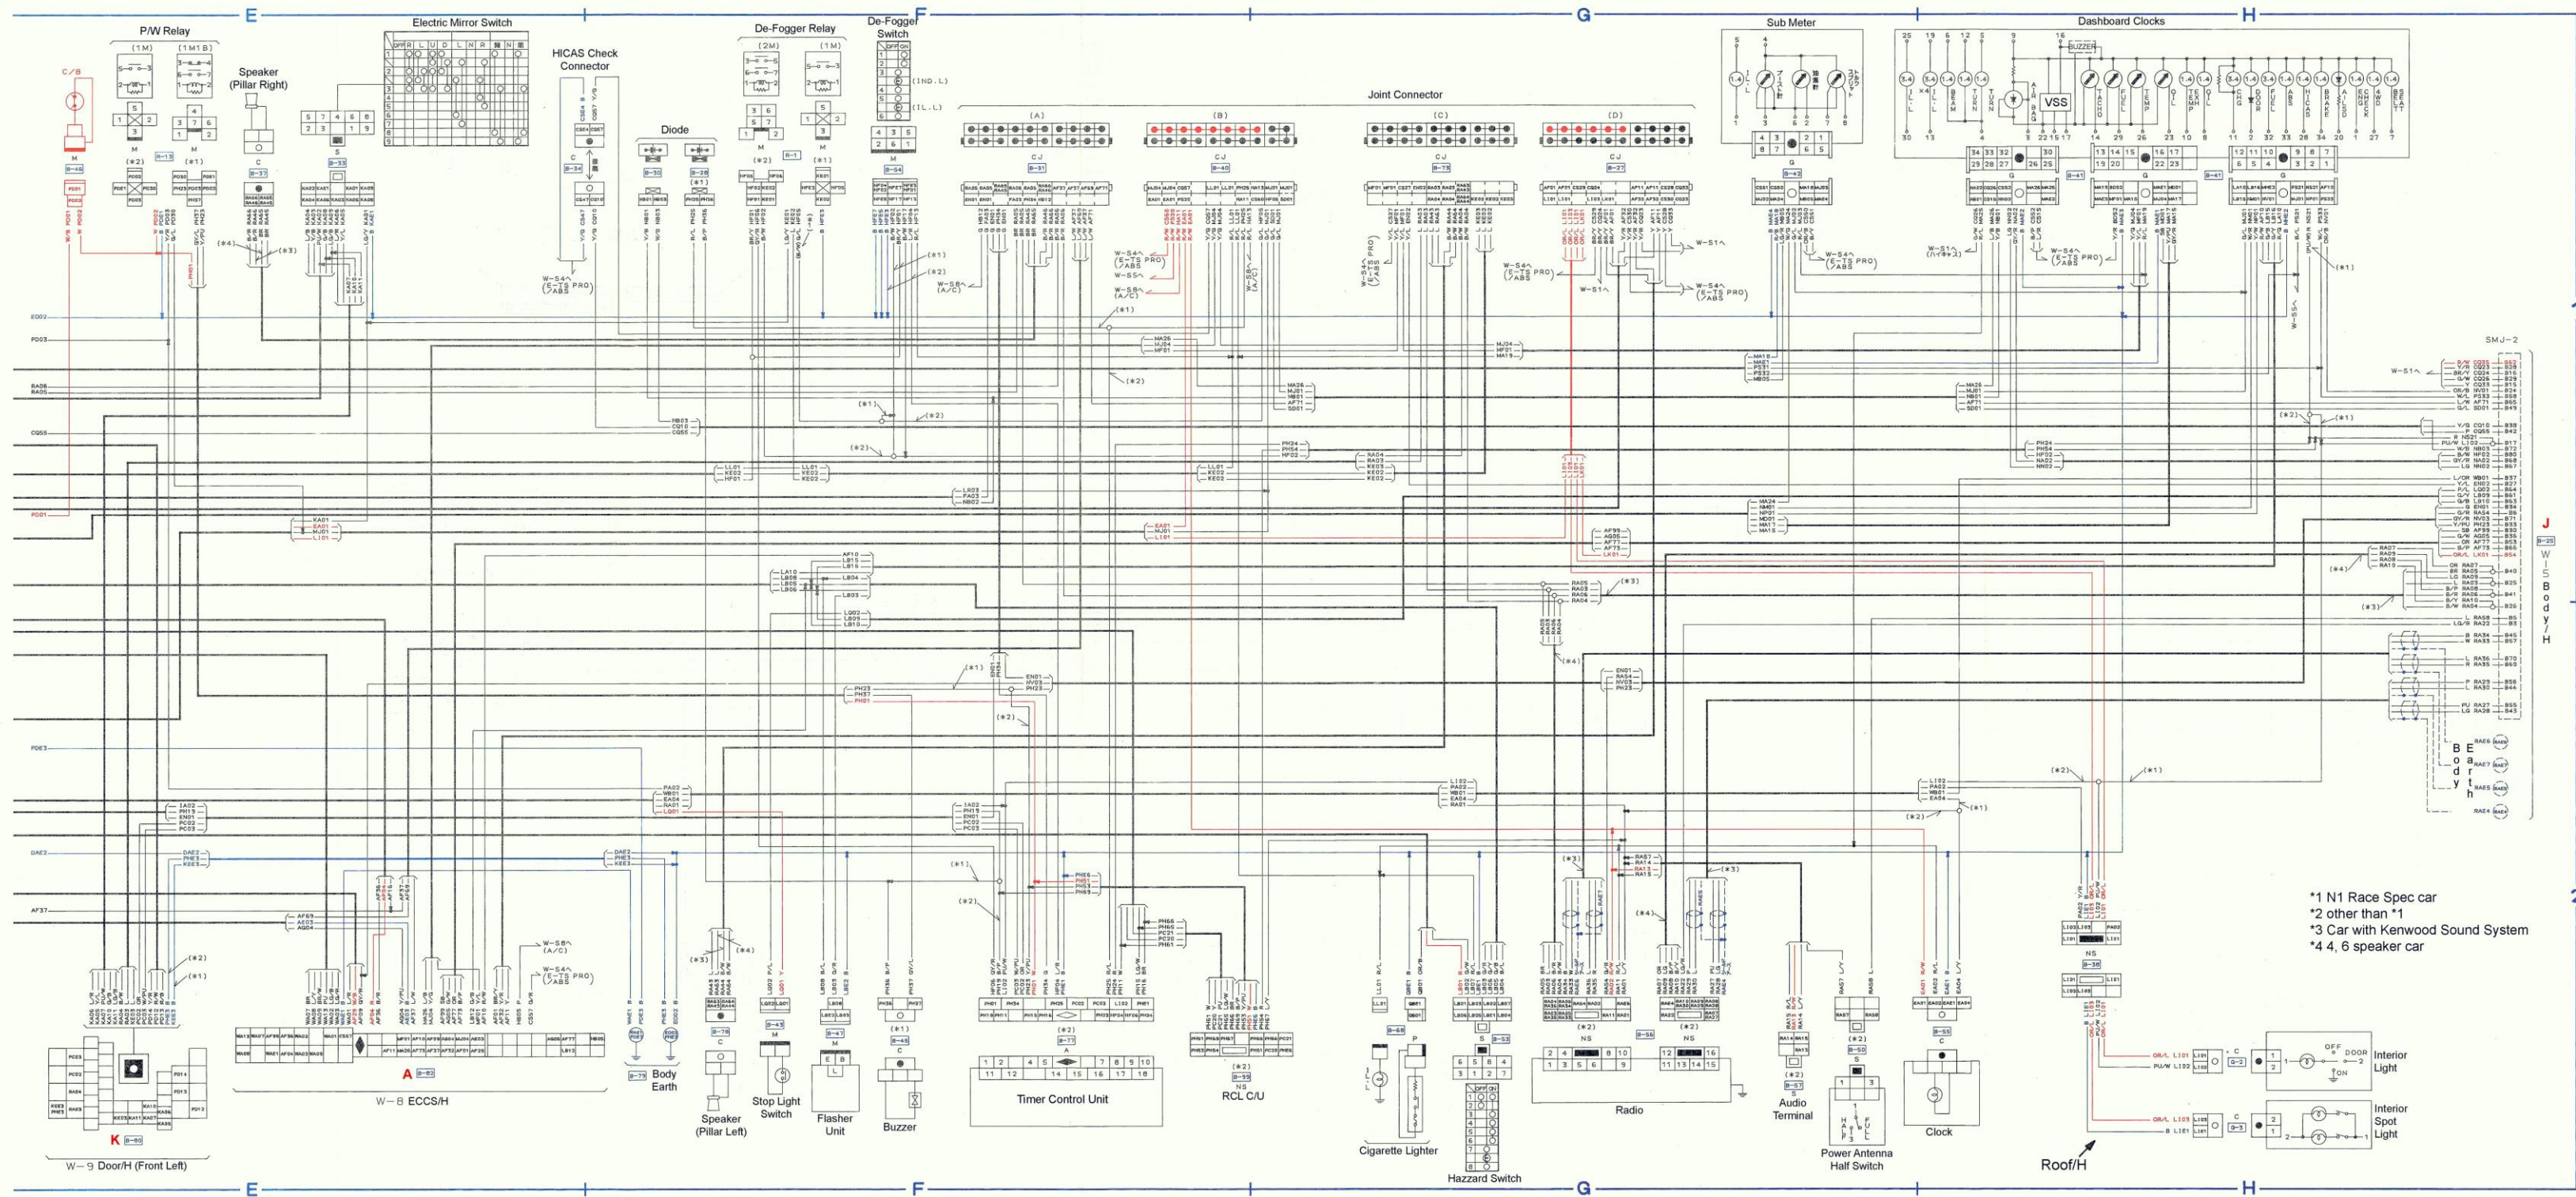

 - *1 N1 Race Spec car
- *2 other than *1
- *3 Car with Kenwood Sound System
- *4 4, 6 speaker car

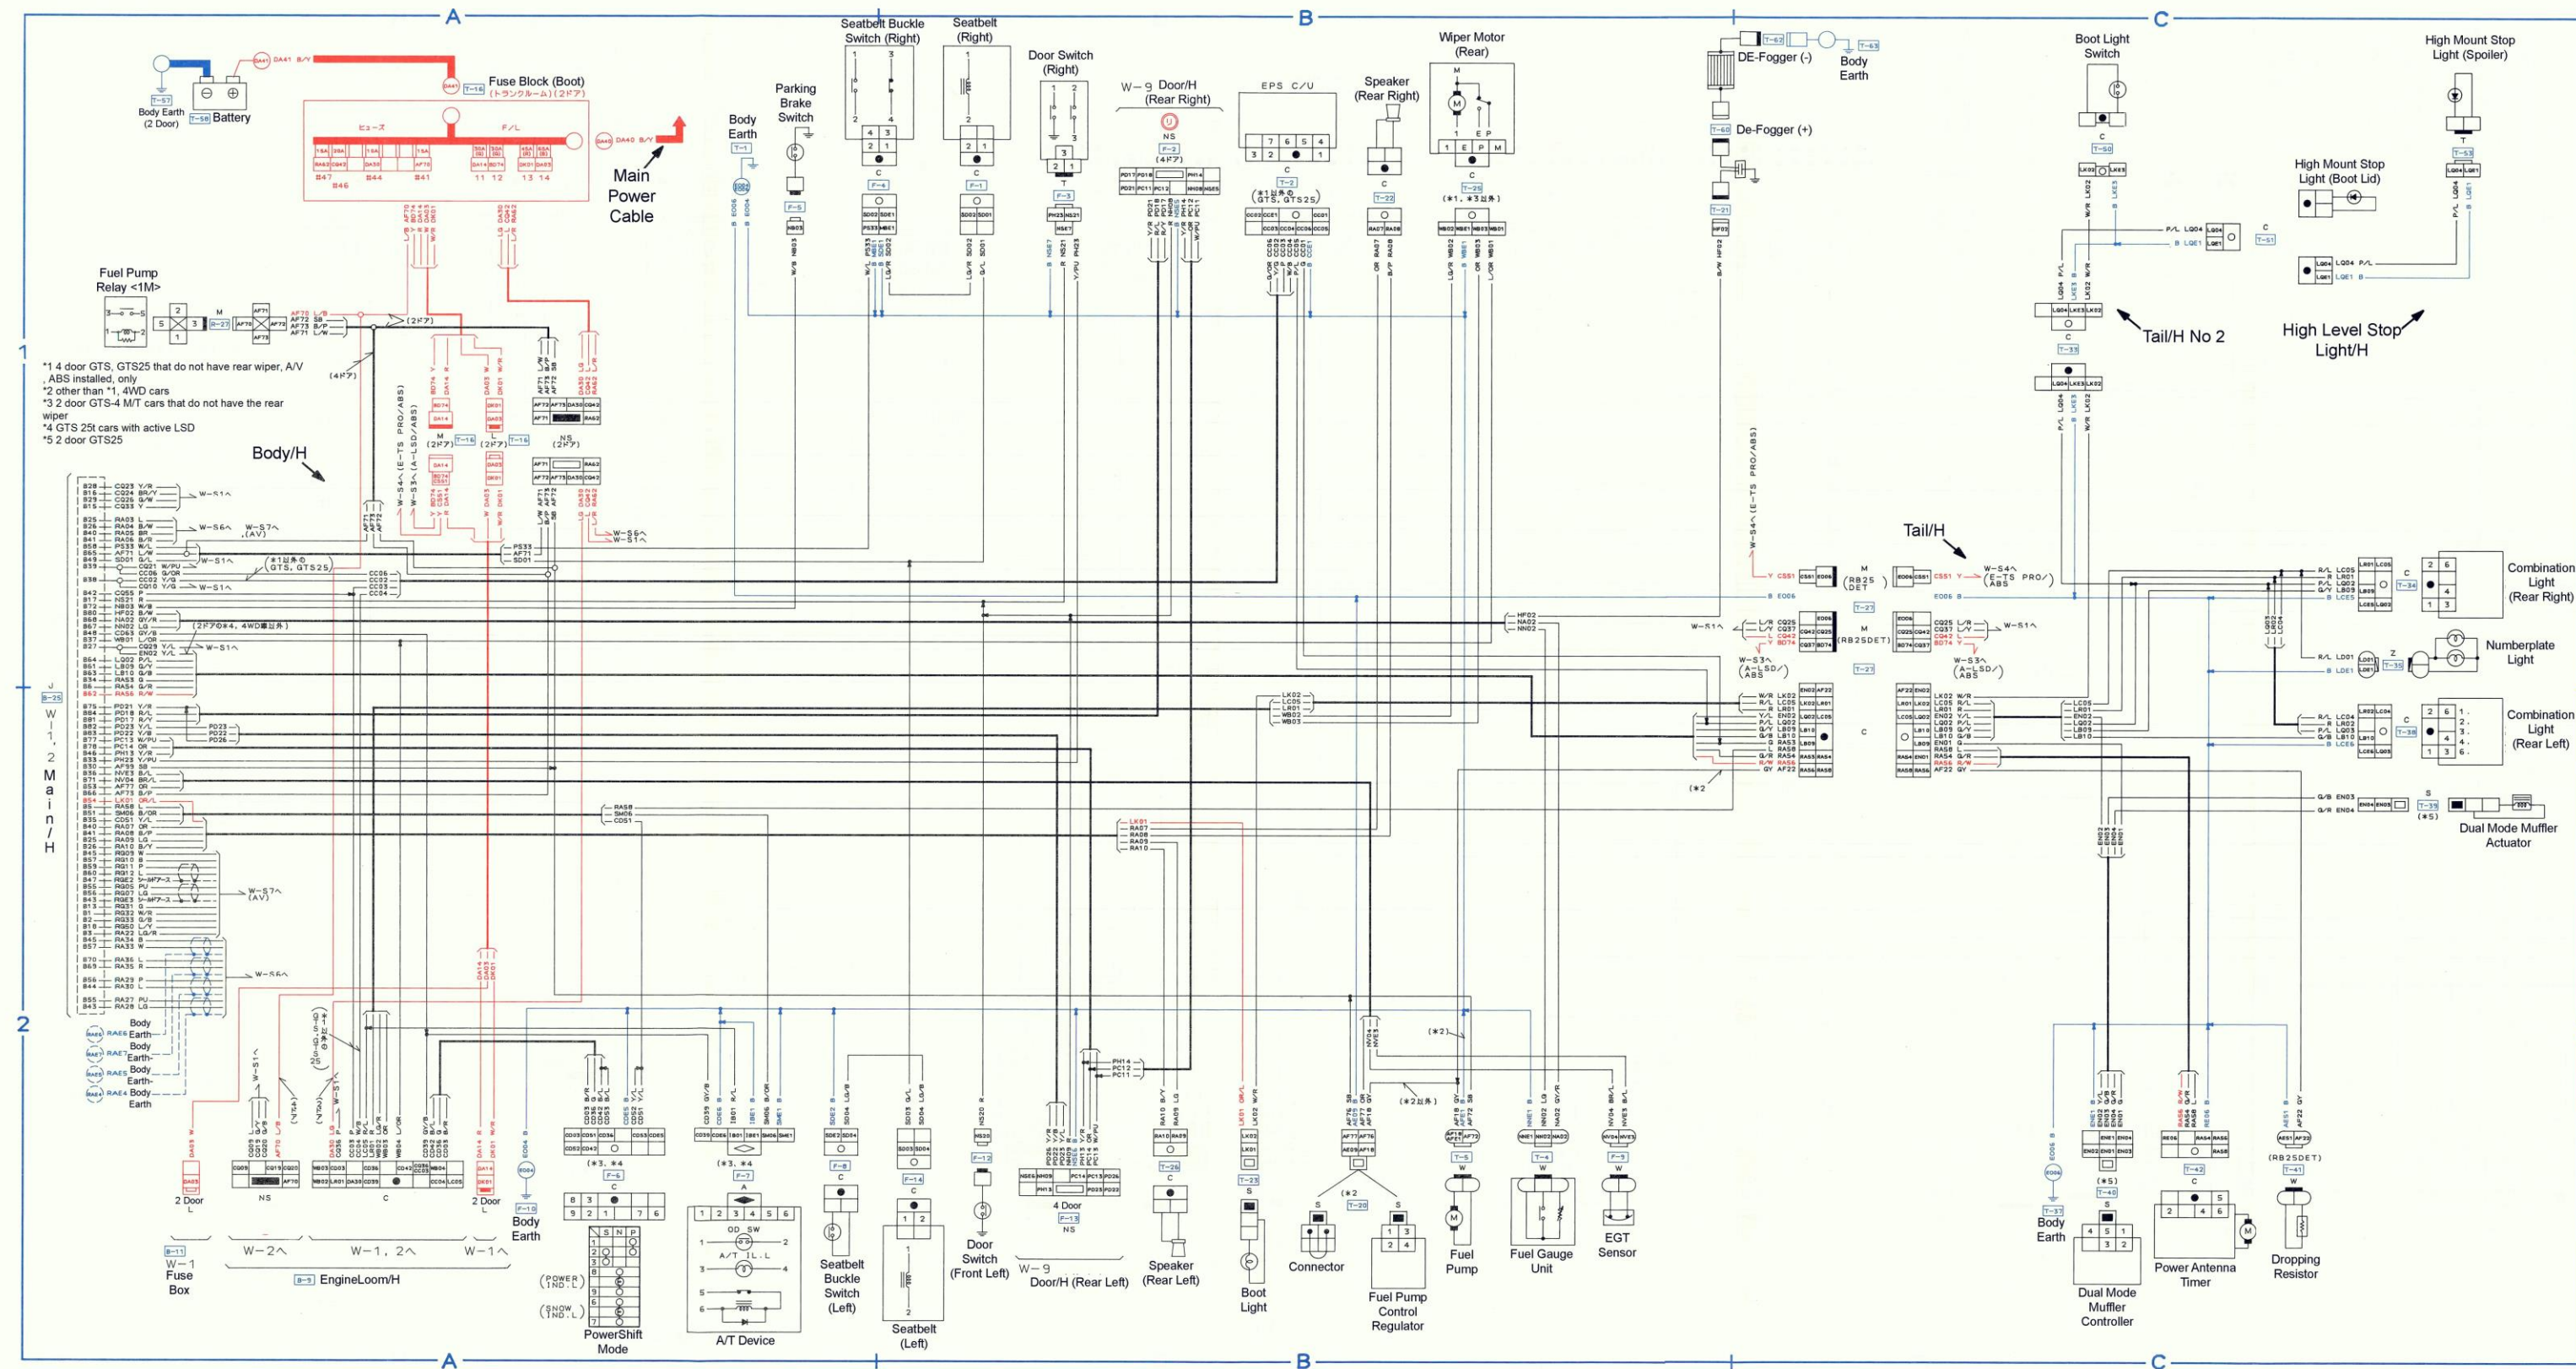


W 6
E C C S R B 2 0 E


Abstract




W-8 ECCS/H(RB26DETT)

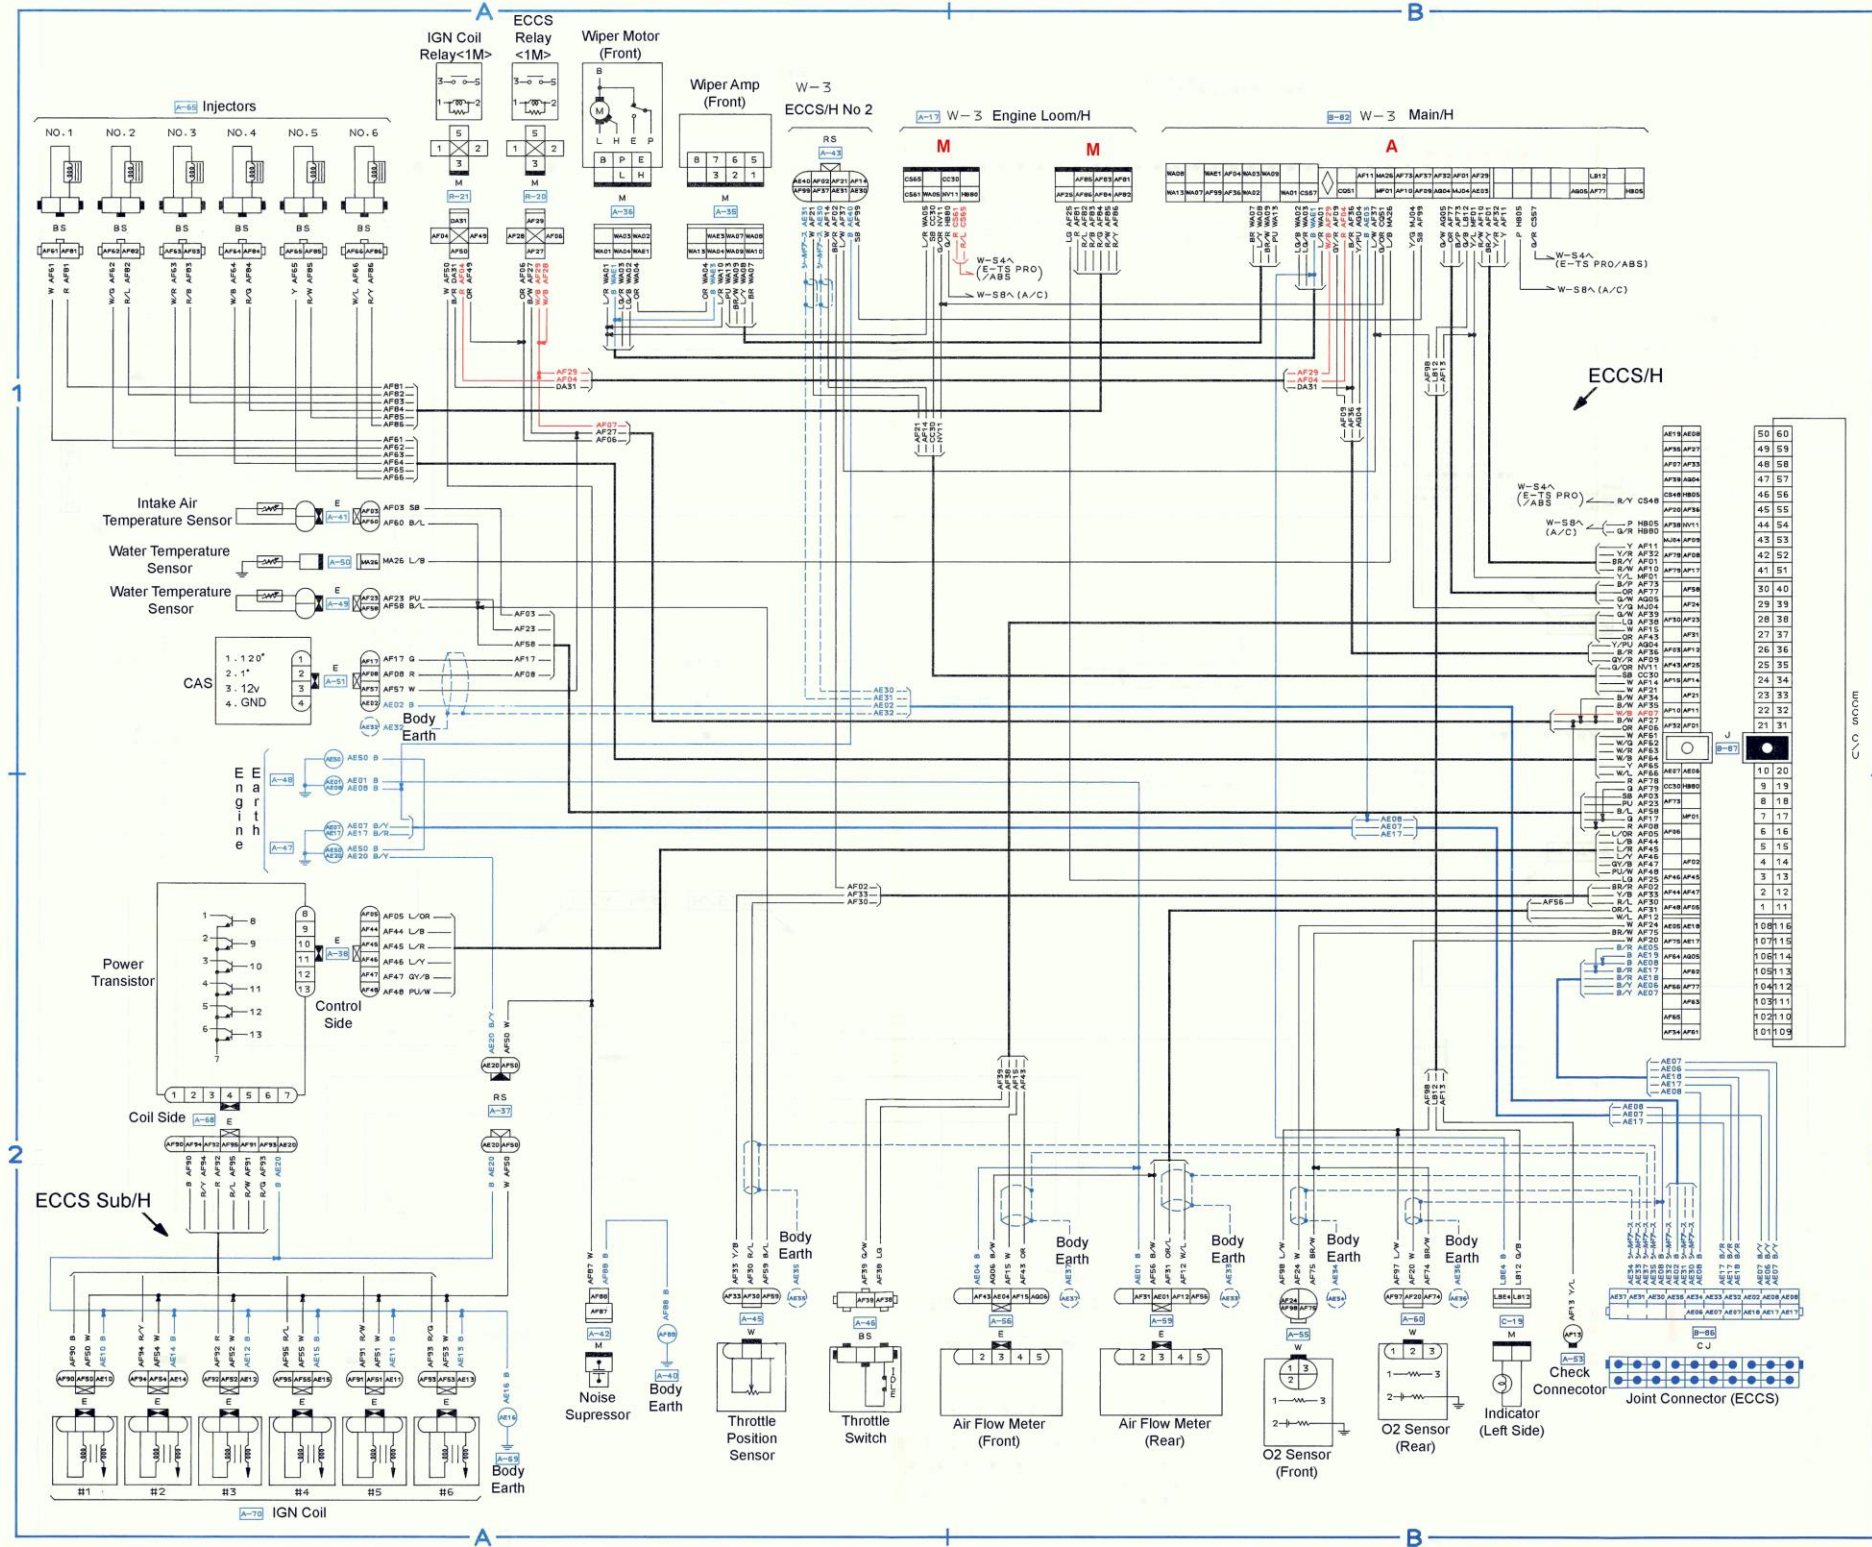


W-9 Door Harness

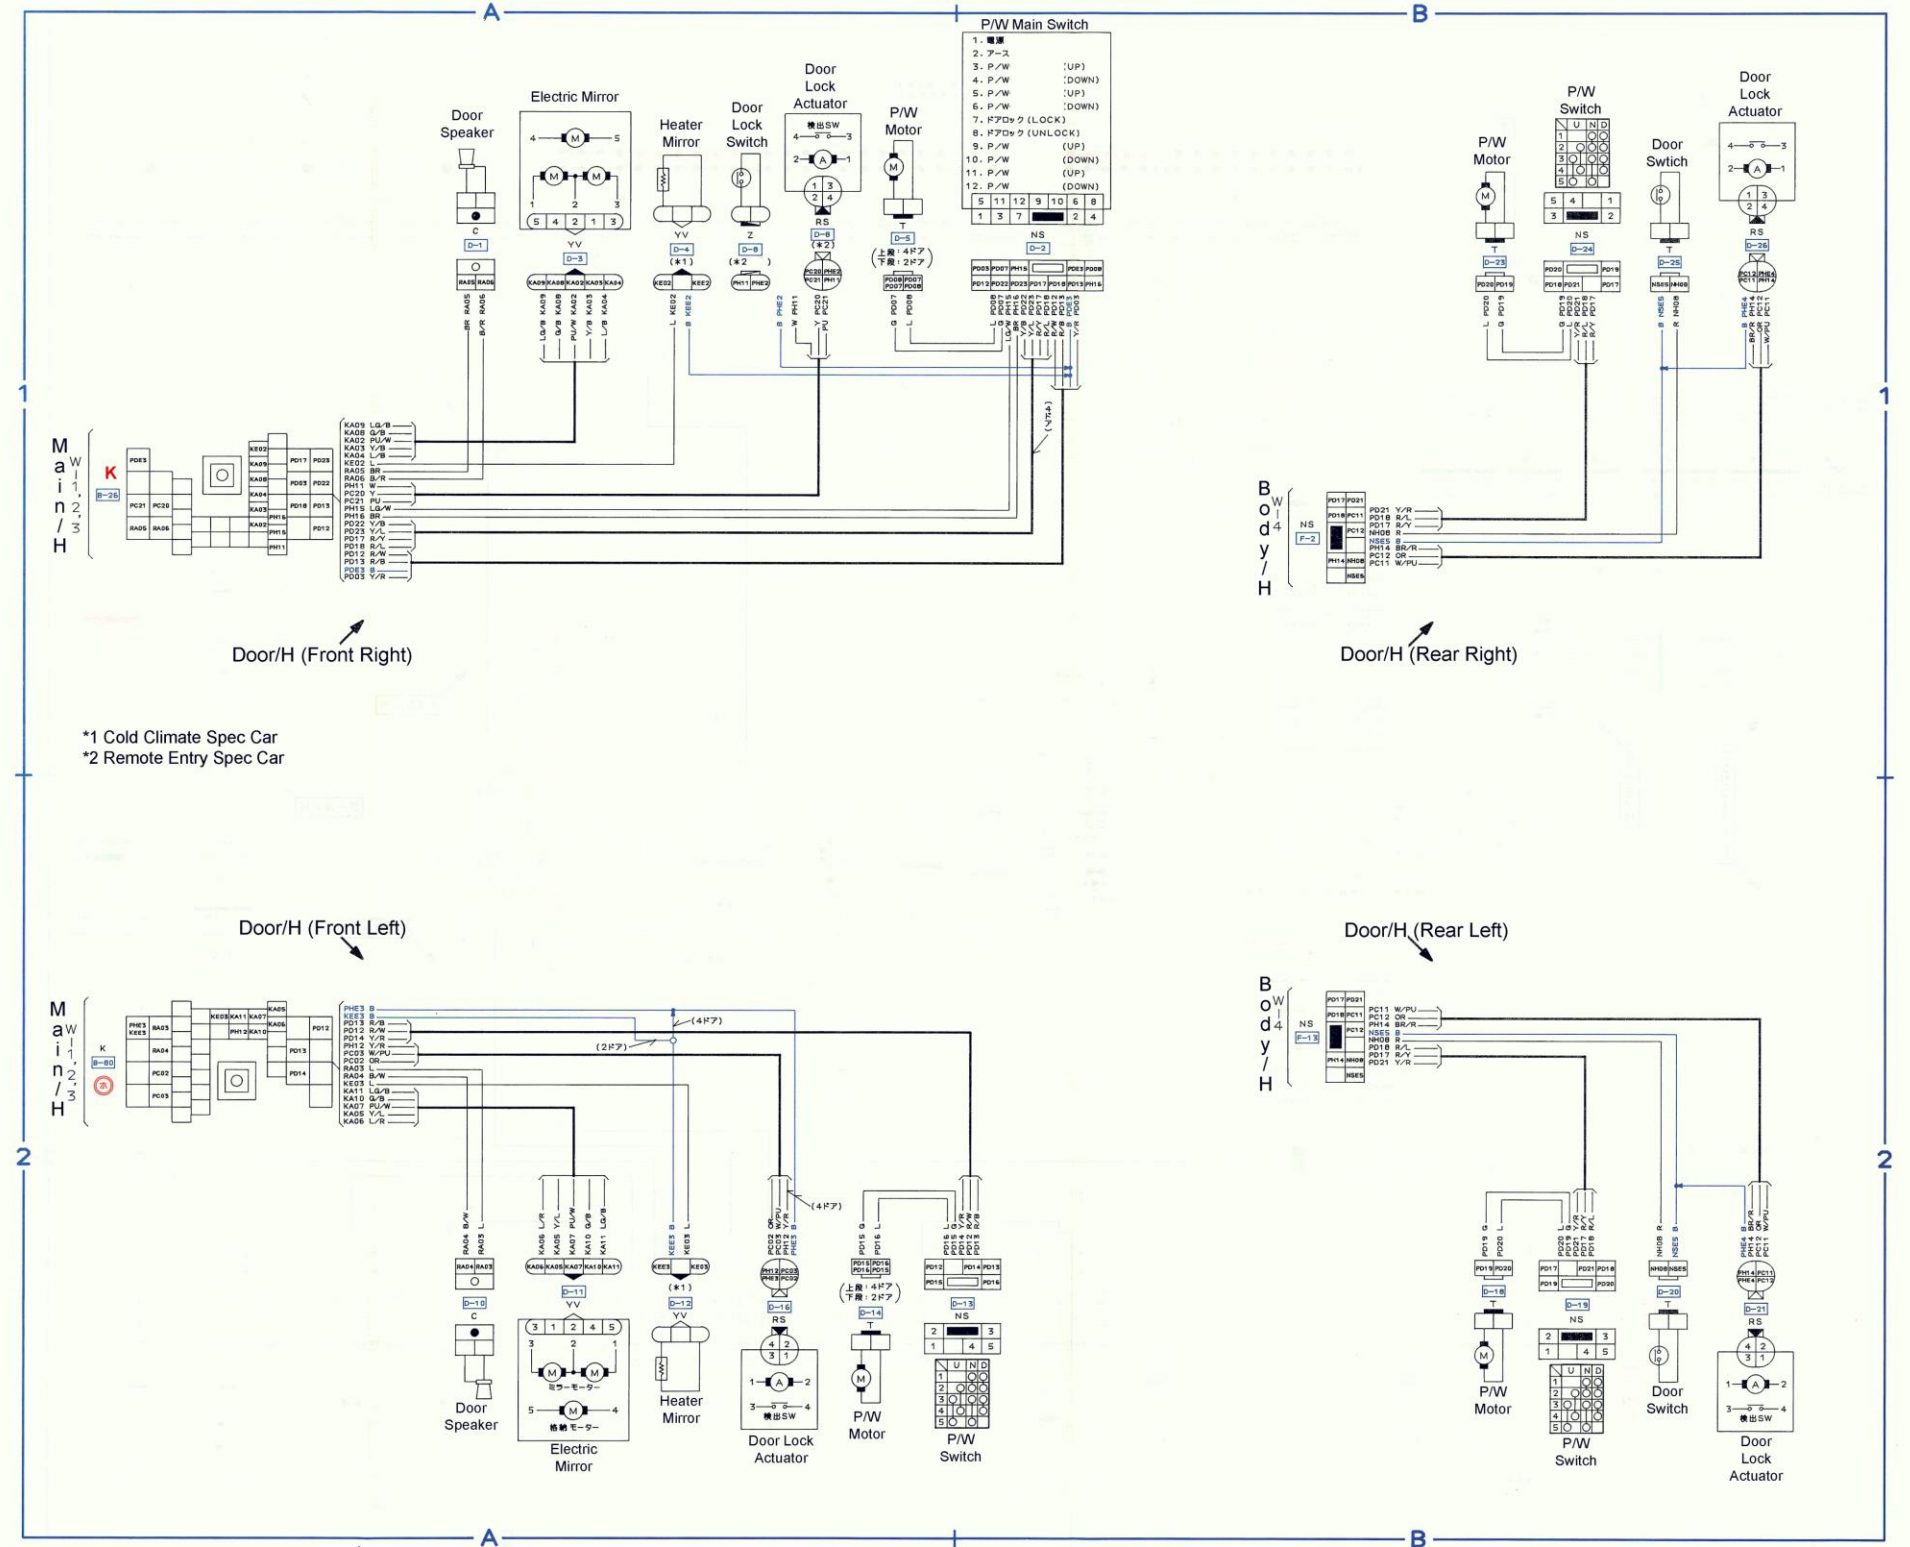



W-S1 HICAS

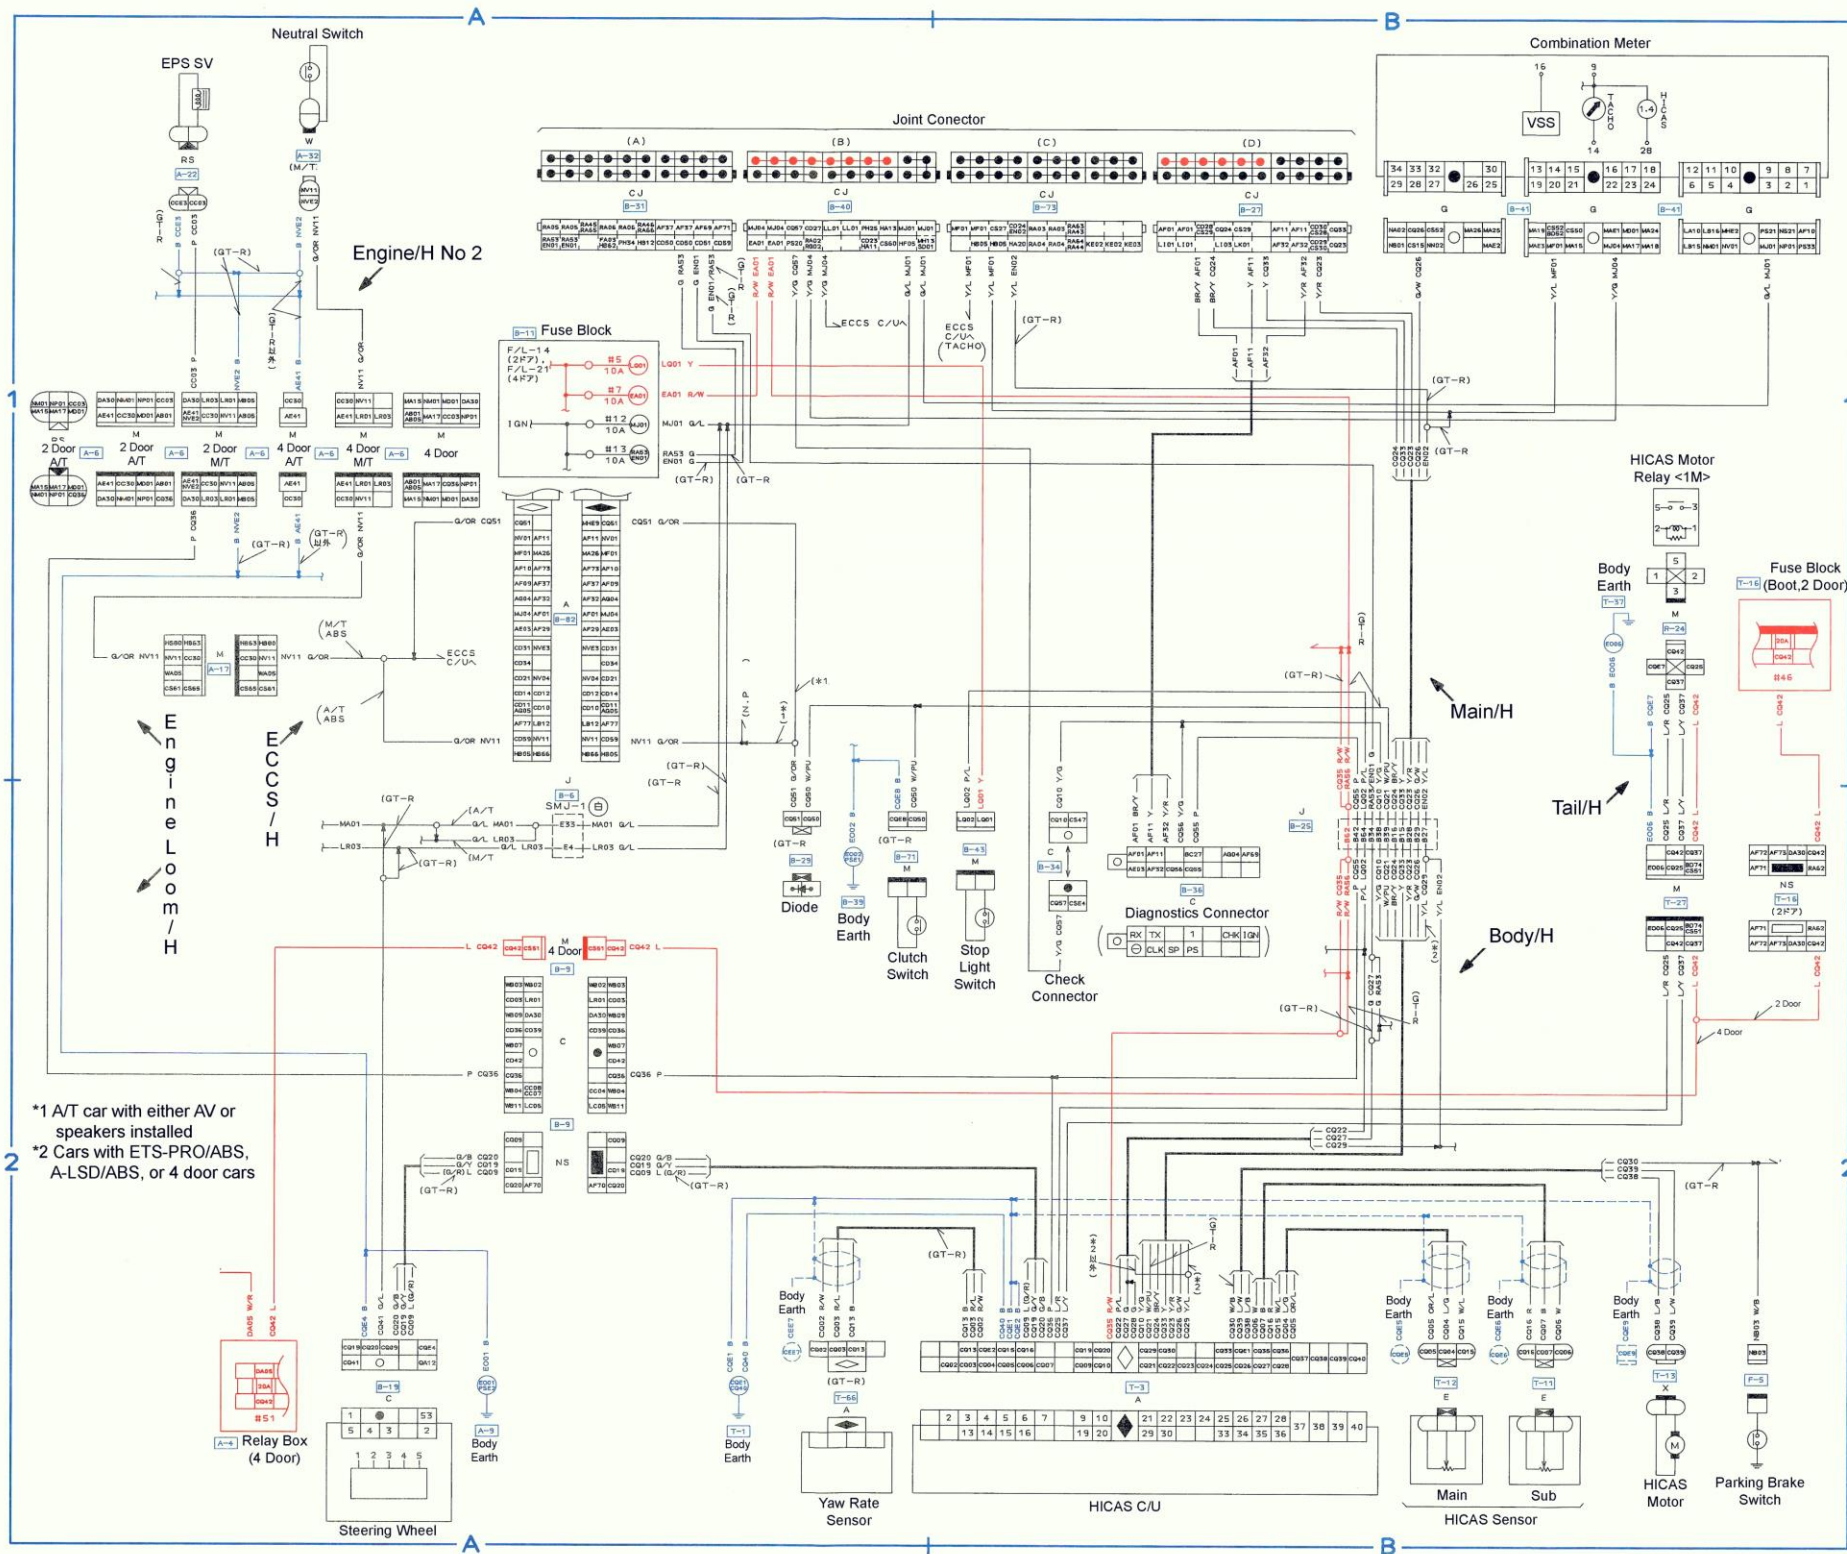


W-S2 ABS

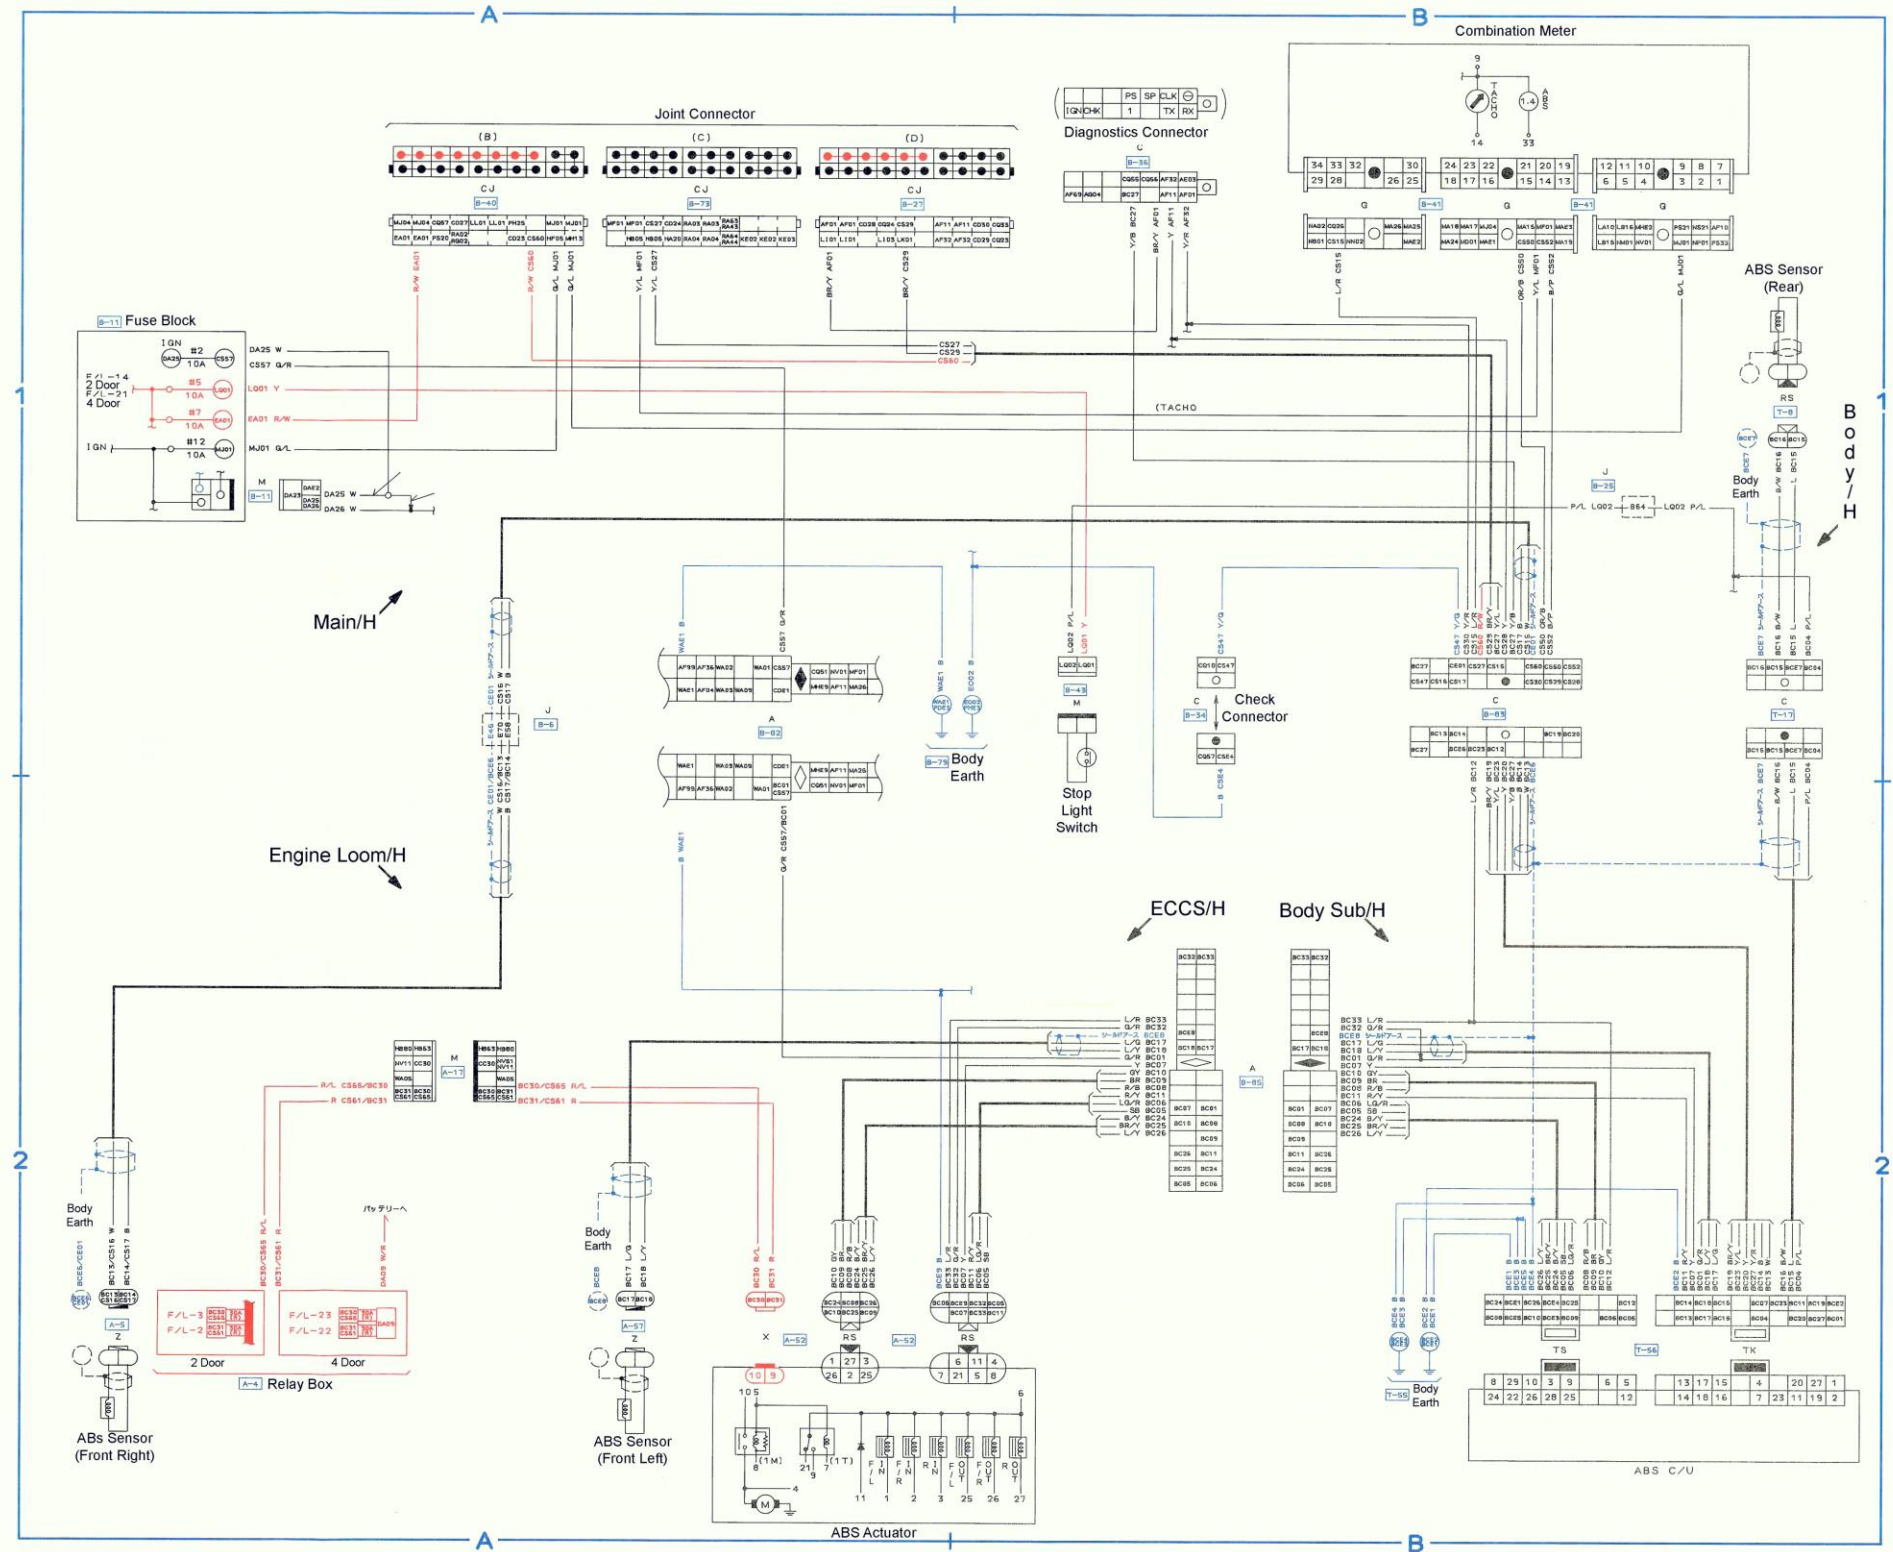

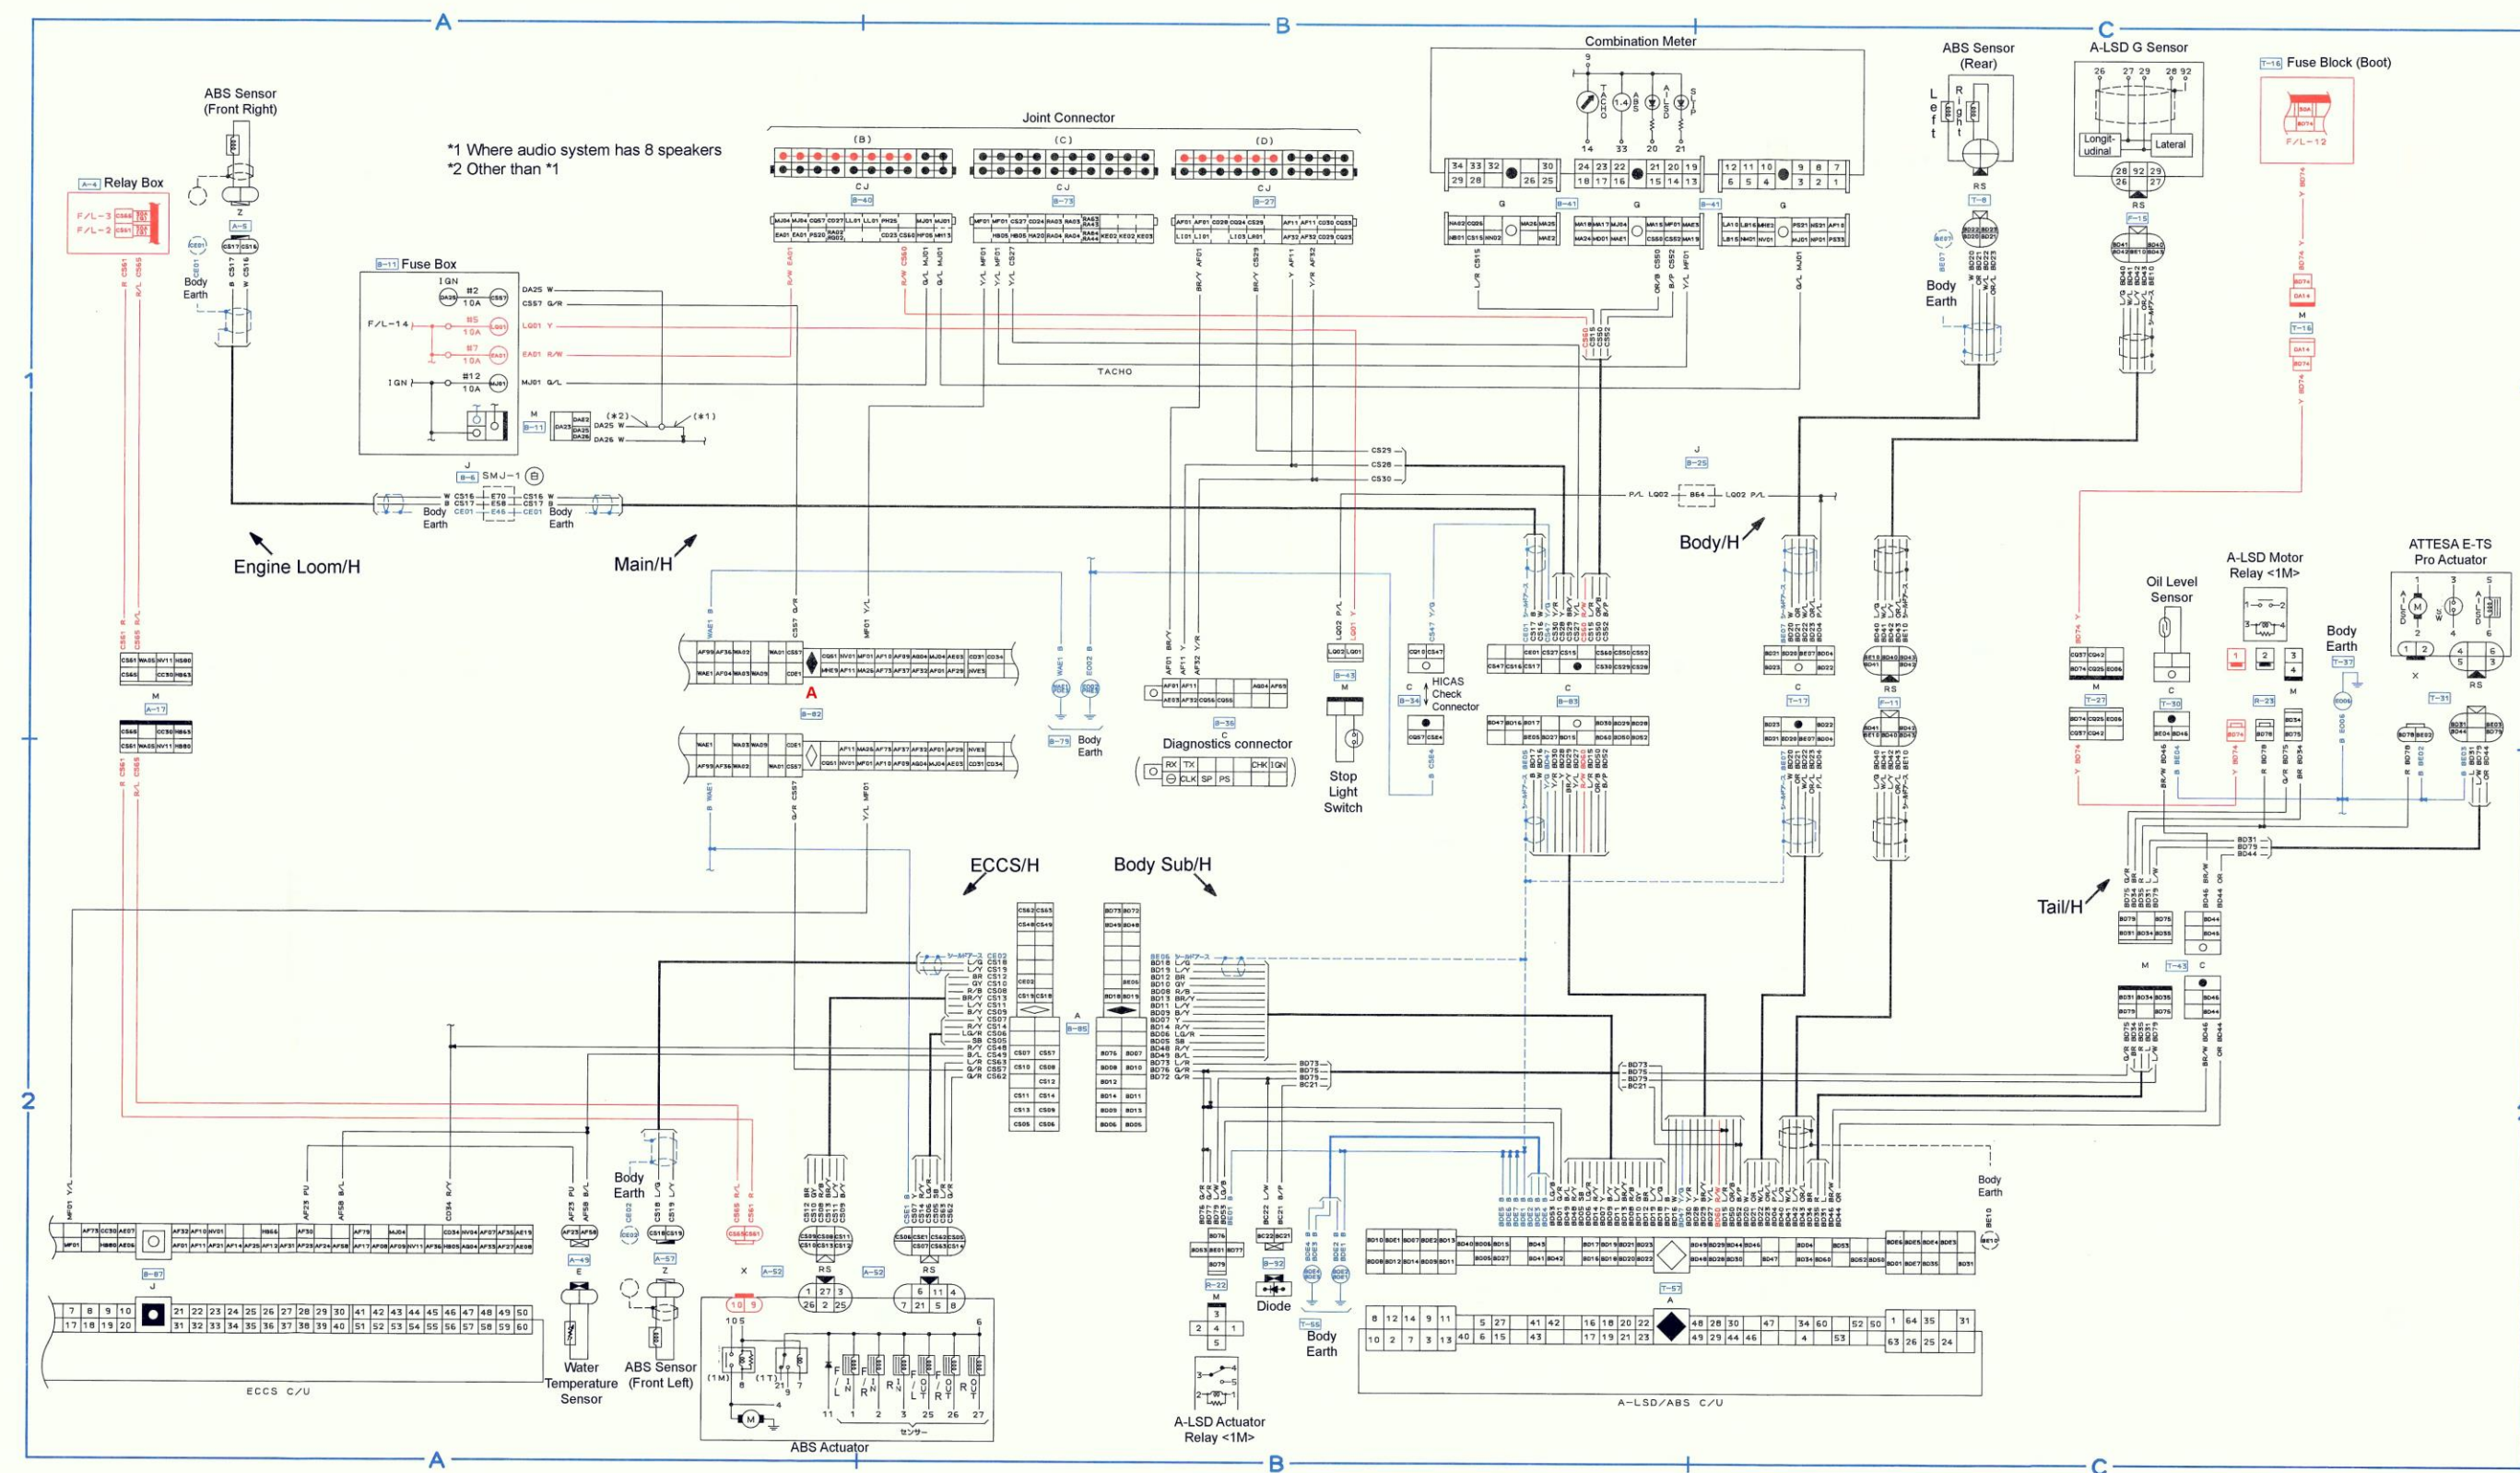


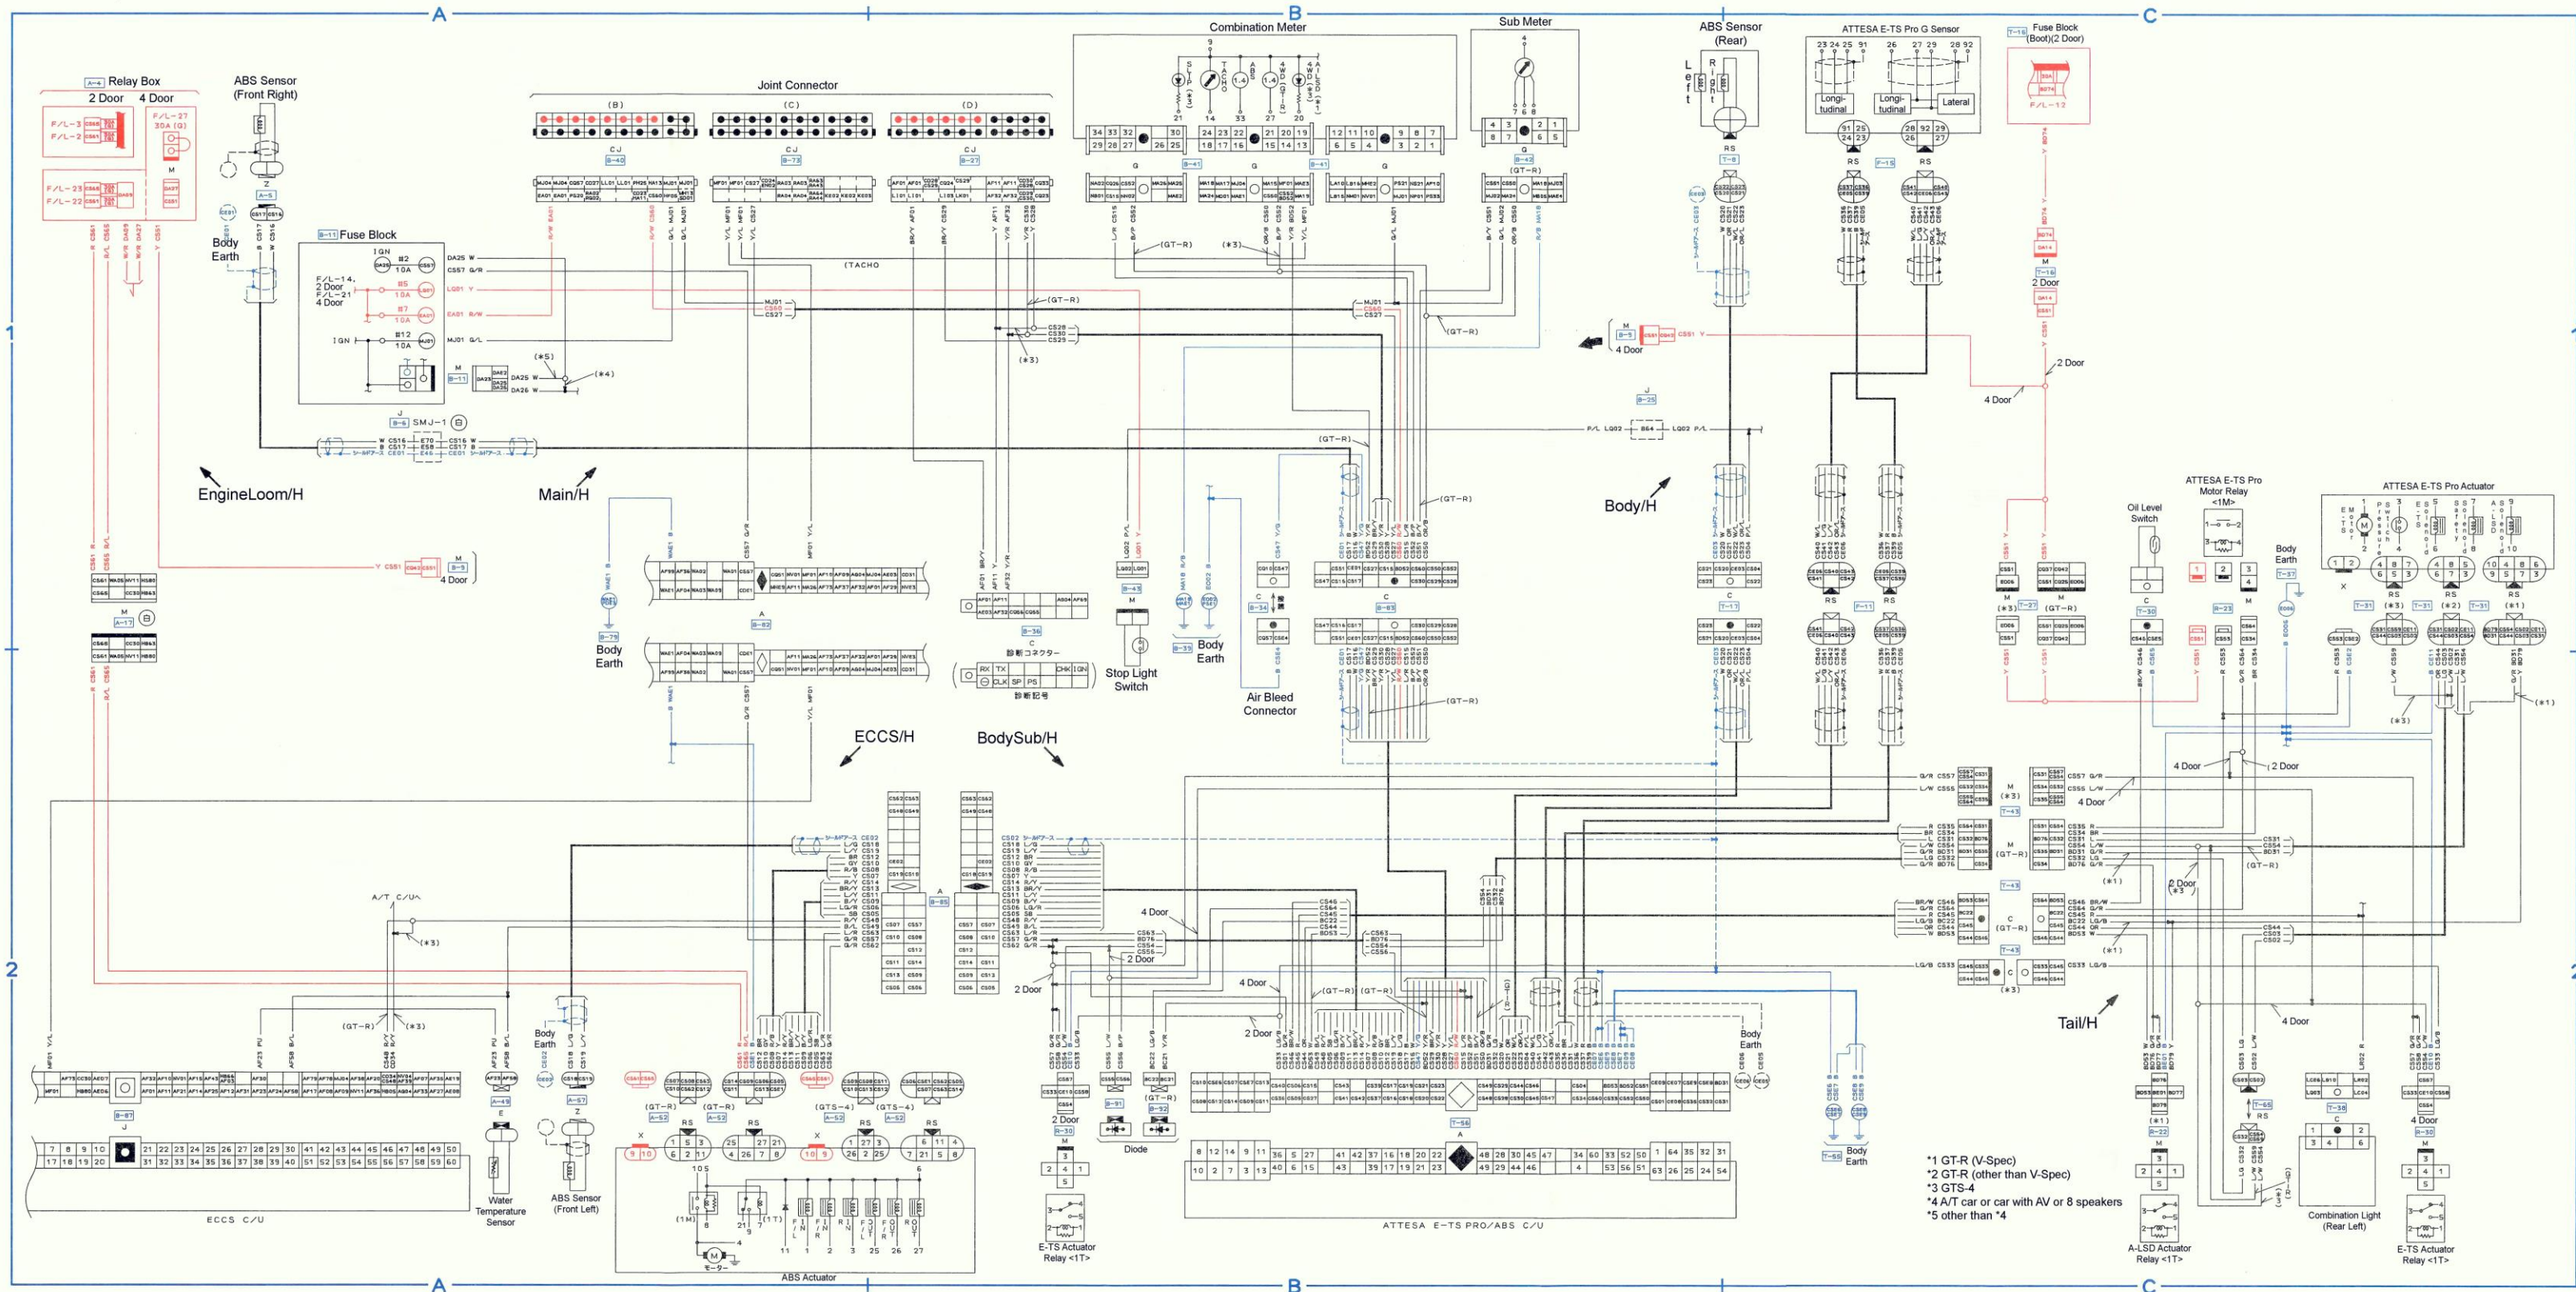


W-55 SRS Dual Airbag System

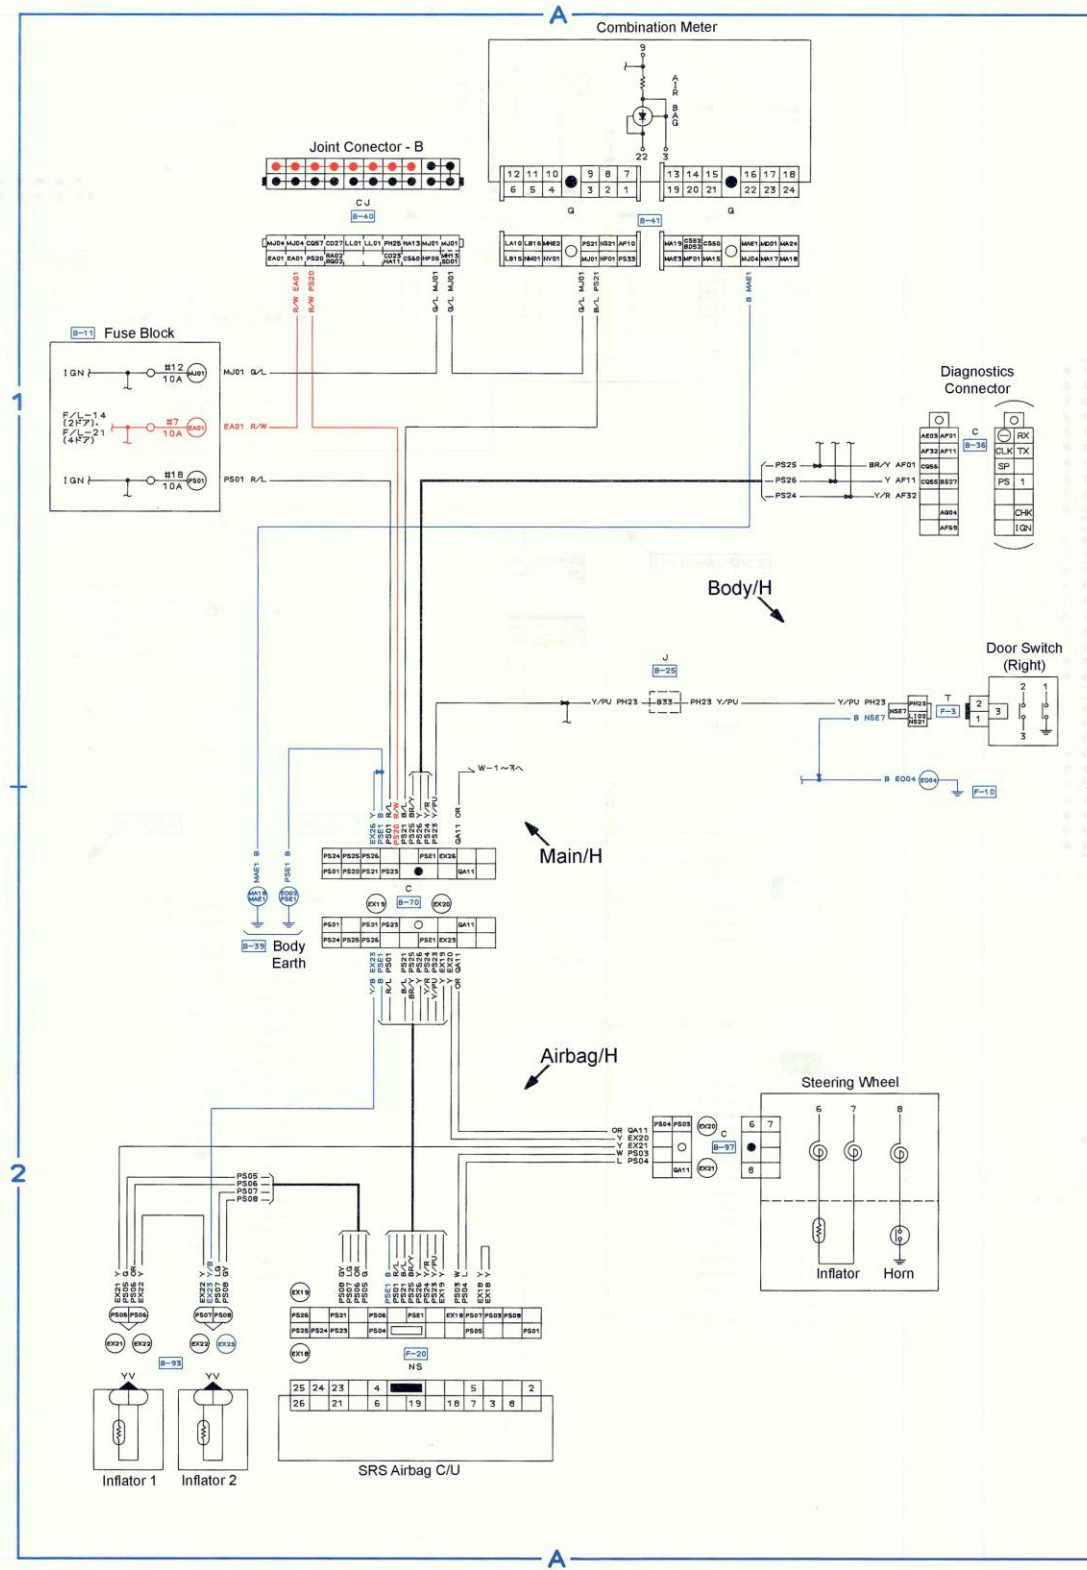

W-56 Kenwood Sound System

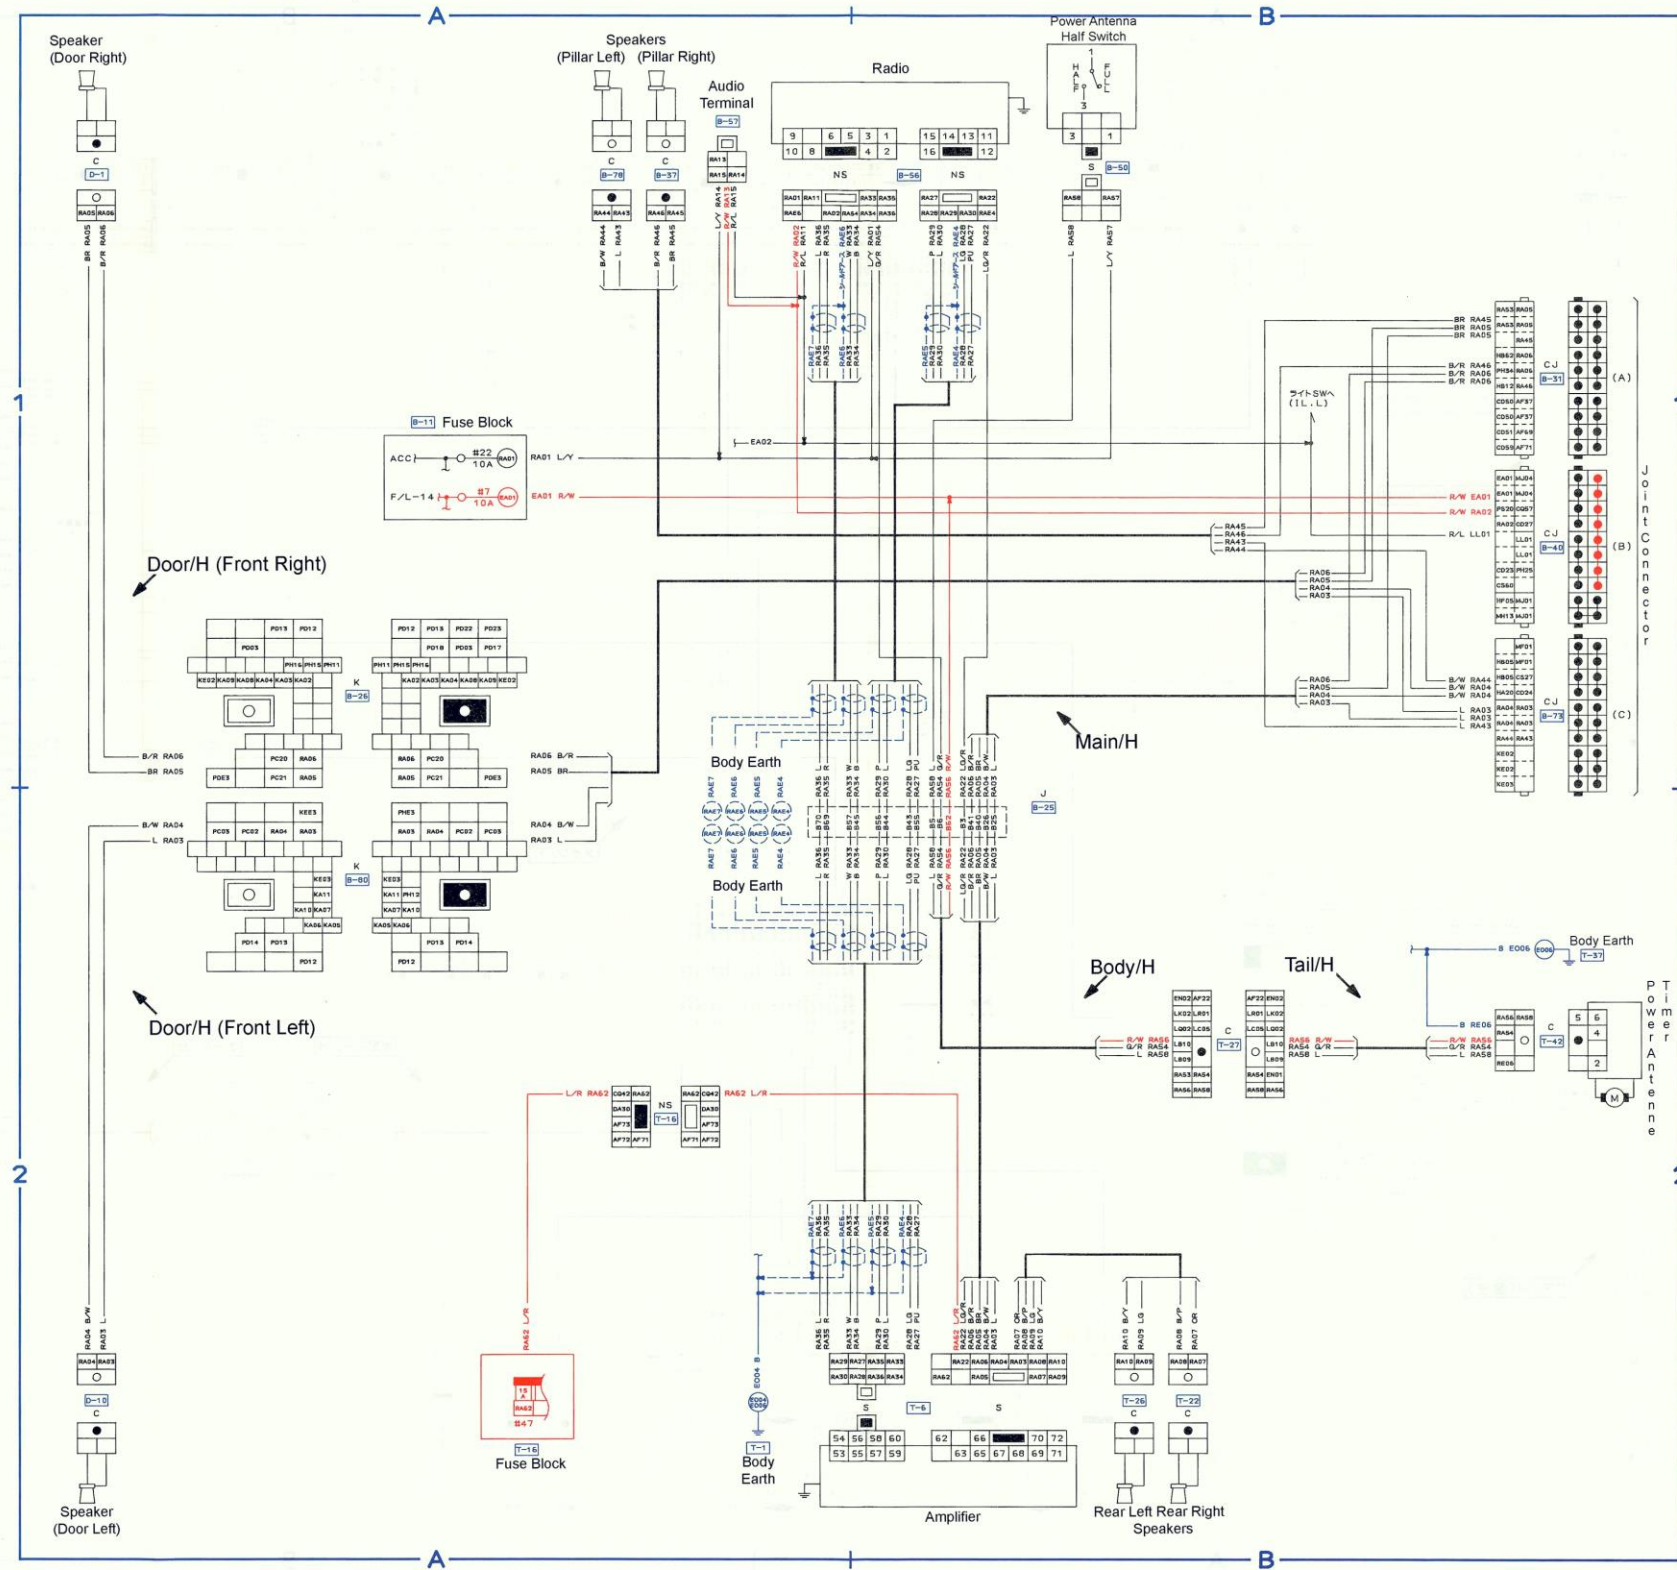

W-S7 AV Sound System

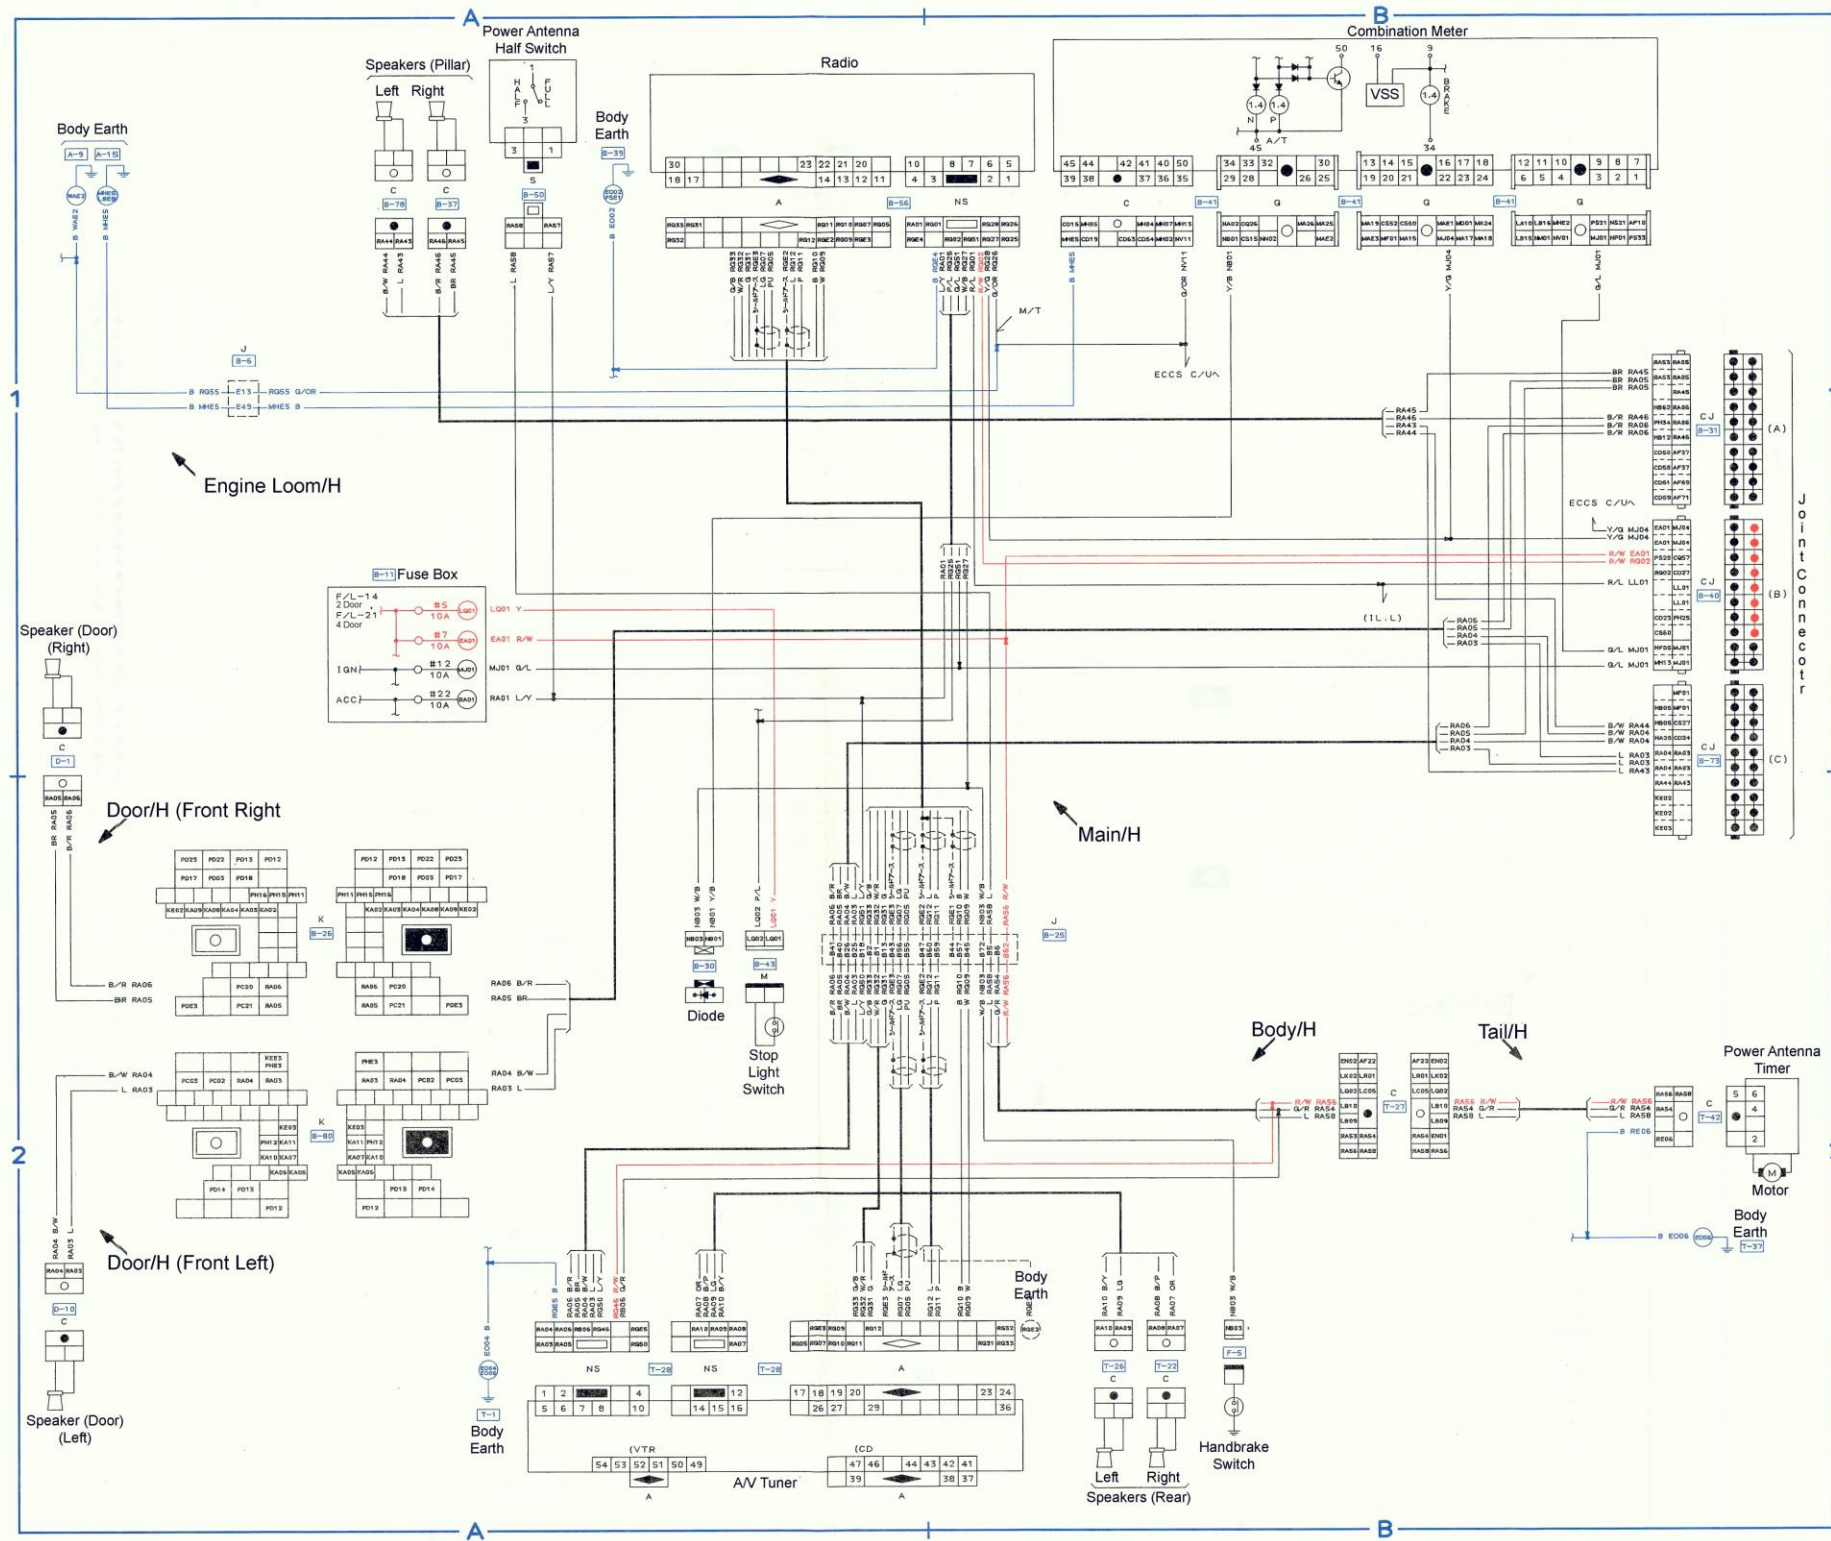

W-S8 Auto AirCon

