

GI

MA

EM

LC

EC

FE

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

SECTION **IDX**

# ALPHABETICAL INDEX

## A

AAC/V - Wiring diagram..... EC-256  
 ABS (anti-lock brake system) ..... BR-28  
 ABS - Wiring diagram ..... BR-40  
 A/C air flow..... HA-23  
 A/C component layout..... HA-18  
 A/C compressor clutch removal and  
 installation..... HA-98  
 A/C compressor description..... HA-12  
 A/C compressor mounting ..... HA-97  
 A/C compressor precaution ..... HA-6  
 A/C compressor special service tool ..... HA-6  
 A/C control linkage adjustment..... HA-88  
 A/C control operation ..... HA-21  
 A/C diagnostic work flow..... HA-25  
 A/C harness layout..... HA-51  
 A/C HFC134a (R134a) system  
 precaution..... HA-2  
 A/C HFC134a (R134a) system service  
 procedure..... HA-90  
 A/C HFC134a (R134a) system service  
 tools ..... HA-7  
 A/C HFC134a system service equip-  
 ment precaution..... HA-9  
 A/C lubricant (R134a) ..... HA-92  
 A/C operational check..... HA-26  
 A/C performance chart..... HA-47  
 A/C performance test diagnoses ..... HA-45  
 A/C relay ..... HA-88  
 A/C self-diagnoses ..... HA-30  
 A/C service data specification..... HA-102  
 A/C symptom chart ..... HA-29  
 A/C system description ..... HA-20  
 A/C trouble diagnoses..... HA-25  
 A/C, A - Wiring diagram ..... HA-54  
 Accelerator control system ..... FE-3  
 Accelerator wire adjustment..... FE-3  
 Air bag..... RS-5  
 Air bag disposal ..... RS-13  
 Air bag precautions ..... GI-2  
 Air bleeding for brake system ..... BR-5  
 Air cleaner filter replacement..... MA-13  
 Air conditioner cut control ..... EC-18  
 Air flow meter - See Mass air flow  
 sensor..... EC-100  
 Air mix door control linkage adjustment..... HA-89  
 Air mix. door motor ..... HA-68, 78  
 Air spoiler, rear ..... BT-22  
 All - mode 4WD system..... TF-7  
 Alternator ..... EL-34  
 Ambient sensor ..... HA-61  
 Angular tightening application ..... EM-2  
 Antenna - See Power antenna ..... EL-138  
 Anti-lock brake system - See ABS..... BR-28  
 Anti-lock brake system - Wiring  
 diagram..... BR-40  
 AP/SEN - Wiring diagram ..... EC-106  
 ASCD (automatic speed control device) ..... EL-149

ASCD - Wiring diagram ..... EL-153  
 A/T - Wiring diagram ..... AT-8  
 A/T control unit inspection table..... AT-55  
 A/T control unit inspection table  
 transfer ..... TF-45  
 A/T diagnosis communication line ..... EC-326  
 A/T fluid temperature sensor..... AT-67  
 A/T removal and installation..... AT-139  
 A/T self-diagnoses..... AT-26  
 A/T shift lock system ..... AT-129  
 A/T shift lock system - Wiring diagram ..... AT-130  
 AT/C - Wiring diagram..... EC-266  
 ATDIAG - Wiring diagram ..... EC-326  
 ATP switch ..... TF-61  
 ATP warning lamp ..... TF-66, 67  
 Audio ..... EL-132  
 AUDIO - Wiring diagram..... EL-134  
 Audio and A/C control removal and  
 installation - See Instrument panel ..... BT-13  
 Auto air conditioner - Wiring diagram ..... HA-54  
 Automatic amplifier ..... HA-58, 60  
 Automatic speed control system - See  
 ASCD ..... EL-149  
 Automatic transmission fluid  
 replacement..... MA-17  
 Automatic transmission number ..... GI-36  
 Auxiliary air control (AAC) valve ..... EC-256  
 Axle housing (rear)..... RA-8

## B

Back door..... BT-8  
 Back door opener - See Back door..... BT-8  
 Back door trim ..... BT-21  
 Back-up lamp..... EL-54  
 BACK/L - Wiring diagram ..... EL-54  
 Ball joint front axle..... FA-22  
 Battery..... EL-22  
 Blower motor ..... HA-81  
 Body alignment ..... BT-44  
 BPT valve..... EC-220  
 Brake booster..... BR-15  
 Brake fluid change ..... BR-4  
 Brake fluid level ..... MA-20  
 Brake fluid level and line check..... BR-4  
 Brake hydraulic line..... BR-6  
 Brake inspection ..... MA-21  
 Brake lines and cables inspection..... MA-20  
 Brake lining wear temporary checking ..... MA-22  
 Brake master cylinder ..... BR-12  
 Brake pedal ..... BR-10  
 Bumper, front ..... BT-5  
 Bumper, rear ..... BT-8  
 BUZZER - Wiring diagram..... EL-100  
 BYPS/V - Wiring diagram ..... EC-304

# ALPHABETICAL INDEX

## C

|                                                                                   |             |
|-----------------------------------------------------------------------------------|-------------|
| Camshaft inspection .....                                                         | EM-24       |
| CANI/V - Wiring diagram .....                                                     | EC-233      |
| Canister-See EVAP canister .....                                                  | EC-20       |
| Center case transfer .....                                                        | TF-78       |
| CHARGE - Wiring diagram .....                                                     | EL-31       |
| Charging system .....                                                             | EL-30       |
| Chassis and body maintenance .....                                                | MA-17       |
| Cigarette lighter .....                                                           | EL-122      |
| Circuit breaker .....                                                             | EL-18       |
| CKPS - Wiring diagram .....                                                       | EC-200, 289 |
| Clutch drum transfer .....                                                        | TF-80       |
| Clutch pressure switch transfer .....                                             | TF-60       |
| CMPS - Wiring diagram .....                                                       | EC-205      |
| Coil spring (front) .....                                                         | FA-20       |
| Coil spring (rear) .....                                                          | RA-12       |
| Collision diagnosis .....                                                         | RS-36       |
| Combination lamp, front, removal and<br>installation .....                        | BT-5        |
| Combination lamp, rear, removal and<br>installation .....                         | BT-22       |
| Combination meter .....                                                           | EL-79       |
| Combination meter removal and instal-<br>lation - See Instrument panel .....      | BT-13       |
| Combination switch .....                                                          | EL-35       |
| Compression pressure .....                                                        | EM-8        |
| Compressor clutch removal and<br>installation .....                               | HA-98       |
| Compressor description .....                                                      | HA-12       |
| Compressor mounting .....                                                         | HA-97       |
| Compressor precaution .....                                                       | HA-6        |
| Compressor special service tool .....                                             | HA-6        |
| Connecting rod .....                                                              | EM-40       |
| Connecting rod bearing clearance .....                                            | EM-44       |
| Connecting rod bushing clearance .....                                            | EM-45       |
| Console box - See Instrument panel .....                                          | BT-13       |
| CONSULT for ABS .....                                                             | BR-47       |
| CONSULT for all-mode 4WD .....                                                    | TF-26       |
| CONSULT for ECCS .....                                                            | EC-56       |
| CONSULT general information .....                                                 | GI-33       |
| Control lever transfer .....                                                      | TF-75       |
| Control valve (A/T) .....                                                         | AT-161      |
| Control valve transfer .....                                                      | TF-83       |
| Converter housing installation .....                                              | AT-140      |
| Coolant mixture ratio .....                                                       | MA-9        |
| Coolant replacement .....                                                         | MA-11       |
| Cooling circuit (engine) .....                                                    | LC-8        |
| Crank angle sensor built into distributor<br>- See Camshaft position sensor ..... | EC-205      |
| Crankcase emission control system -<br>See positive crankcase ventilation .....   | EC-24       |
| Crankshaft .....                                                                  | EM-43       |
| Crankshaft position sensor (OBD) .....                                            | EC-200      |
| Cruise control - See ASCD .....                                                   | EL-149      |
| Cylinder block .....                                                              | EM-38       |
| Cylinder block boring .....                                                       | EM-42       |
| Cylinder head .....                                                               | EM-20       |

|                                     |       |
|-------------------------------------|-------|
| Cylinder head bolt tightening ..... | EM-32 |
|-------------------------------------|-------|

## D

|                                                                    |           |     |
|--------------------------------------------------------------------|-----------|-----|
| Daytime light system .....                                         | EL-41     | GI  |
| Daytime running light - See Daytime<br>light system .....          | EL-41     | MA  |
| DEF - Wiring diagram .....                                         | EL-126    | EM  |
| Detonation sensor - See Knock sensor .....                         | EC-197    | LC  |
| Diagnosis sensor unit .....                                        | RS-8      | EC  |
| Diagnostic trouble code (DTC) inspec-<br>tion priority chart ..... | EC-76     | FE  |
| Differential carrier assembly .....                                | PD-27, 49 | AT  |
| Differential carrier disassembly .....                             | PD-34     | TF  |
| Differential gear oil replacement .....                            | MA-19     | PD  |
| Dimensions .....                                                   | GI-37     | FA  |
| Distributor .....                                                  | EC-17     | RA  |
| Distributor ignition (DI) system .....                             | EC-17     | BR  |
| D/LOCK - Wiring diagram .....                                      | EL-180    | ST  |
| Dome light - See Interior lamp .....                               | EL-72     | RS  |
| Door glass .....                                                   | BT-11     | BT  |
| Door lock .....                                                    | BT-11     | HA  |
| Door mirror .....                                                  | BT-43     | EL  |
| Door trim .....                                                    | BT-19     | IDX |
| Door, front .....                                                  | BT-11     |     |
| Door, rear .....                                                   | BT-12     |     |
| Drive belt inspection .....                                        | MA-10     |     |
| Drive chain transfer .....                                         | TF-80     |     |
| Drive pinion diff. inspection .....                                | PD-19, 38 |     |
| Drive pinion height .....                                          | PD-21, 45 |     |
| Drive plate runout .....                                           | EM-45     |     |
| Drive shaft (front) .....                                          | FA-14     |     |
| Dropping resistor (A/T) .....                                      | AT-94     |     |
| DTRL - Wiring diagram .....                                        | EL-44     |     |
| Dual pressure switch .....                                         | HA-88     |     |

## E

|                                           |             |
|-------------------------------------------|-------------|
| ECCS basic inspection .....               | EC-74       |
| ECCS circuit diagram .....                | EC-11       |
| ECCS component parts location .....       | EC-9        |
| ECCS fail-safe system .....               | EC-77       |
| ECCS on board diagnostic system .....     | EC-36       |
| ECCS symptom matrix chart .....           | EC-78       |
| ECCS system diagram and chart .....       | EC-12       |
| ECM input/output signal .....             | EC-85       |
| ECTS - Wiring diagram .....               | EC-118, 129 |
| EGR control (EGRC) - BPT valve .....      | EC-219      |
| EGR control (EGRC) - solenoid valve ..... | EC-294      |
| EGR control valve .....                   | EC-217      |
| EGR temperature sensor .....              | EC-299      |
| EGR/TS - Wiring diagram .....             | EC-299      |
| EGRC/V - Wiring diagram .....             | EC-294      |
| EGRC1 - Wiring diagram .....              | EC-211      |
| Electric sun roof .....                   | EL-143      |
| Electrical diagnoses .....                | GI-19       |
| Electrical unit .....                     | Foldout     |
| Electrical units location .....           | EL-233      |

# ALPHABETICAL INDEX

Electronic ignition system ..... EC-17  
 Engine compartment..... BT-44  
 Engine control module (ECM)..... EC-269  
 Engine coolant temperature sensor  
 (ECTS) ..... EC-118  
 Engine oil filter replacement ..... MA-14  
 Engine oil precautions..... GI-4  
 Engine oil replacement ..... MA-14  
 Engine outer component parts ..... EM-6  
 Engine removal..... EM-35  
 Engine room - See Engine  
 compartment ..... BT-44  
 Engine serial number ..... GI-36  
 EVAP canister ..... EC-20  
 EVAP canister purge control valve ..... EC-233  
 EVAP canister purge volume control  
 valve ..... EC-20  
 EVAP vapor lines inspection..... MA-16  
 Evaporative emission (EVAP) system..... EC-20  
 Exhaust gas recirculation (EGR) valve ..... EC-211  
 Exhaust system ..... FE-7  
 Exhaust system inspection ..... MA-17  
 Exterior..... BT-22  
 Exterior lamp..... EL-50

## F

4WD shift indicator lamp..... TF-64  
 4WD shift switch ..... TF-60  
 4WD solenoid valve ..... TF-60  
 4WD warning lamp ..... TF-22  
 Fan control amp. .... HA-82  
 Fast idle cam (FIC) inspection and  
 adjustment ..... EC-27  
 F/FOG - Wiring diagram ..... EL-56  
 FICD - Wiring diagram ..... EC-345  
 Final drive disassembly..... PD-34  
 Final drive pre-inspection ..... PD-34  
 Final drive removal and installation ..... PD-12  
 Finisher, interior - See Trim ..... BT-17  
 Flow charts ..... GI-30  
 Fluid temperature sensor (A/T) ..... AT-67  
 Fluids ..... MA-8  
 FO2H-L - Wiring diagram ..... EC-158  
 FO2H-R - Wiring diagram ..... EC-140  
 Fog lamp, front ..... EL-55  
 Fog lamp, front, removal and  
 installation ..... BT-5  
 Forward clutch..... AT-180  
 F/PUMP - Wiring diagram ..... EC-336  
 FRO2LH - Wiring diagram ..... EC-153  
 FRO2RH - Wiring diagram..... EC-135  
 Front axle..... FA-9  
 Front bumper ..... BT-5  
 Front case transfer..... TF-88  
 Front combination lamp removal and  
 installation ..... BT-5  
 Front disc brake ..... BR-18  
 Front door..... BT-11  
 Front drive shaft transfer ..... TF-80

Front final drive disassembly (4WD)..... PD-14  
 Front final drive pre-inspection (4WD)..... PD-14  
 Front final drive removal and installa-  
 tion (4WD) ..... PD-12  
 Front fog lamp ..... EL-55  
 Front fog lamp removal and installation ..... BT-5  
 Front oxygen sensor (O2S) monitor ..... EC-48  
 Front passenger air bag..... RS-10  
 Front revolution sensor transfer..... TF-61  
 Front seat..... BT-29  
 Front seat belt ..... RS-3  
 Front suspension ..... FA-19  
 Front washer ..... EL-106  
 Front wiper ..... EL-106  
 Fuel cut control (at no load & high  
 engine speed)..... EC-19  
 Fuel filler lid ..... BT-8  
 Fuel filter replacement ..... MA-13  
 Fuel gauge ..... EL-79  
 Fuel line inspection..... MA-12  
 Fuel precautions..... GI-5  
 Fuel pressure check..... EC-25  
 Fuel pressure release ..... EC-25  
 Fuel pump ..... EC-336  
 Fuel system ..... FE-4  
 Fuel tank vacuum relief valve ..... EC-21  
 FUELLH - Wiring diagram ..... EC-180, 185  
 FUEL RH - Wiring diagram ..... EC-170, 175  
 Fuse ..... EL-18  
 Fuse block ..... Foldout  
 Fusible link ..... EL-18

## G

Garage jack and safety stand ..... GI-39  
 Gauges ..... EL-77  
 Generator ..... EL-34  
 Generic scan tool (GST) ..... EC-68  
 Glass ..... BT-11  
 Grease ..... MA-8  
 Ground distribution ..... EL-19

## H

Harness connector..... EL-3  
 Harness layout..... EL-236  
 Hazard warning lamp..... EL-58  
 Headlamp..... EL-38  
 Headlining - See Roof trim ..... BT-20  
 Heated seat..... BT-31, EL-148  
 Height (Dimensions) ..... GI-37  
 HFC134a (R134a) system precaution ..... HA-2  
 HFC134a (R134a) system service  
 procedure..... HA-90  
 HFC134a (R134a) system service tools ..... HA-7  
 HFC134a system service equipment  
 precaution..... HA-9  
 High clutch..... AT-178

# ALPHABETICAL INDEX

H/LAMP - Wiring diagram..... EL-39  
Hood ..... BT-5  
Horn ..... EL-122  
HORN - Wiring diagram ..... EL-122  
HSEAT - Wiring diagram ..... EL-148  
Hydraulic lash adjuster inspection..... EM-29

## I

IACV-AAC valve ..... EC-256  
IACV-FICD solenoid valve ..... EC-345  
IATS - Wiring diagram ..... EC-113  
Identification plate ..... GI-36  
Idle air control valve (IACV) ..... EC-256  
IGN/SG - Wiring diagram ..... EC-283  
Ignition wire inspection..... EC-196  
ILL - Wiring diagram ..... EL-68  
Illumination ..... EL-66  
In vehicle sensor ..... HA-63  
Inhibitor switch..... AT-63  
INJECT - Wiring diagram ..... EC-329  
Injector..... EC-332  
Injector removal and installation ..... EC-26  
Instrument panel..... BT-13  
INT/L - Wiring diagram ..... EL-74  
Intake air temperature sensor ..... EC-113  
Intake door control linkage adjustment..... HA-89  
Intake door motor..... HA-75  
Integrated homelink transmitter ..... EL-231  
Interior..... BT-17  
Interior lamp..... EL-66  
Internal gear transfer ..... TF-89

## J

Jacking points ..... GI-38, 39  
Journal bearing assembly (propeller shaft)..... PD-9  
Journal bearing disassembly (propeller shaft)..... PD-8  
Junction box (J/B) ..... Foldout

## K

Keyless entry system - See Multi-remote control system..... EL-186  
Knock sensor (KS) ..... EC-197  
Knuckle spindle..... FA-12  
KS - Wiring diagram..... EC-197

## L

Length (Dimensions) ..... GI-37  
License lamp..... EL-50  
Lifting points ..... GI-40

Limited slip diff. adjustment..... PD-41  
Limited slip diff. assembly..... PD-43  
Limited slip diff. disassembly ..... PD-40  
Limited slip diff. inspection ..... PD-40  
Line pressure solenoid valve..... AT-83, 91, 94  
Line pressure switch transfer..... TF-60  
Line pressure test (A/T) ..... AT-127  
Liquid gasket application ..... EM-2  
Location of electrical units ..... EL-233  
Lock, door ..... BT-11  
Low and reverse brake ..... AT-184  
LSV (Load sensing valve)..... BR-7  
Lubricant (R134a) A/C ..... HA-92  
Lubricants ..... MA-8  
Lubrication circuit (engine) ..... LC-4  
Lubrication-locks, hinges and hood latches..... MA-23  
Luggage room lamp..... EL-72

## M

MAFS - Wiring diagram ..... EC-100  
Magnet clutch..... HA-85, 98  
MAIN - Wiring diagram ..... EC-94  
Main oil pump transfer ..... TF-86  
Mainshaft transfer ..... TF-80  
Maintenance (engine) ..... MA-10  
Malfunction indicator lamp (MIL)..... EC-48  
Mass air flow sensor (MAFS)..... EC-100  
Master cylinder (brake) ..... BR-12  
Meter..... EL-77  
METER - Wiring diagram ..... EL-81  
MIL & Data link connectors circuit ..... EC-349  
MIL/DL - Wiring diagram ..... EC-349  
MIRROR - Wiring diagram ..... EL-144  
Mirror defogger ..... EL-124  
Mirror, door ..... BT-43  
Mirror, out side..... BT-43  
Misfire..... EC-193  
Mode door control linkage adjustment..... HA-88  
Mode door motor..... HA-70  
Model variation ..... GI-34  
Molding - See Exterior..... BT-22  
MULTI - Wiring diagram..... EL-189  
Multi-remote control system ..... EL-186  
Multiport fuel injection (MFI) system..... EC-15  
Multiport fuel injection precautions..... GI-4

## N

Neutral-4LO switch ..... TF-61

## O

Oil change (capacity)..... MA-8  
Oil change (interval) ..... MA-6, 7  
Oil pan (engine)..... EM-9

# ALPHABETICAL INDEX

Oil pressure (engine)..... LC-4  
 Oil pump (A/T)..... AT-157  
 Oil pump (engine)..... LC-5  
 Oil pump regulator valve (engine)..... LC-6  
 Oil seal replacement (engine)..... EM-18  
 Oil seal replacement (front final drive  
 4WD)..... PD-10  
 Oil seal replacement (front of final  
 drive)..... PD-10  
 Out side mirror..... BT-43  
 Overdrive control switch..... AT-63  
 Overrun clutch..... AT-180  
 Overrun clutch solenoid valve..... AT-83, 91, 104  
 Oversize piston..... EM-42

## P

P/ANT - Wiring diagram..... EL-139  
 Park/Neutral position switch..... EC-271  
 Parking brake control..... BR-26  
 Parking lamp..... EL-50  
 PCV (positive crankcase ventilation)..... EC-24  
 PGC/V - Wiring diagram..... EC-309  
 Pilot bushing replacement..... EM-48  
 Pinion bearing preload diff..... PD-21  
 Pinion gear height diff..... PD-21, 45  
 Piston assembly..... EM-46  
 Piston pin inspection..... EM-39  
 Piston ring inspection..... EM-40  
 Piston to bore clearance..... EM-41  
 Planetary carrier transfer..... TF-89  
 PNP/SW - Wiring diagram..... EC-271  
 POWER - Wiring diagram..... EL-7  
 Power antenna..... EL-138  
 Power door lock..... EL-177  
 Power door mirror..... EL-144  
 Power seat..... EL-146  
 Power steering fluid level..... MA-22, ST-7  
 Power steering gear..... ST-23  
 Power steering hydraulic pressure..... ST-9  
 Power steering oil pressure switch..... EC-341  
 Power steering oil pump..... ST-33  
 Power steering system bleeding..... ST-8  
 Power supply routing..... EL-6  
 Power transistor & ignition coil..... EC-283  
 Power window..... EL-169  
 PRE/SE - Wiring diagram..... EC-247  
 Precautions (General)..... GI-2  
 Pressure test (A/T)..... AT-127  
 Propeller shaft..... PD-6  
 Propeller shaft greasing..... MA-19  
 Propeller shaft inspection..... MA-18  
 Propeller shaft on vehicle service..... PD-7  
 Propeller shaft vibration..... PD-7  
 PST/SW - Wiring diagram..... EC-341

## R

Rack retainer adjustment..... ST-7  
 Radiator..... LC-11  
 Radio - See Audio..... EL-132  
 Rear air spoiler..... BT-22  
 Rear axle (drum brake type)..... RA-6  
 Rear bumper..... BT-8  
 Rear case transfer..... TF-78  
 Rear combination lamp removal and  
 installation..... BT-22  
 Rear cover packing replacement diff..... PD-11  
 Rear door..... BT-12  
 Rear drum brake..... BR-22  
 Rear seat..... BT-32  
 Rear seat belt..... RS-4  
 Rear side window..... BT-42  
 Rear suspension..... RA-10  
 Rear washer..... EL-114  
 Rear window defogger..... EL-124  
 Rear wiper..... EL-114  
 Refrigerant connection precaution..... HA-3  
 Refrigerant discharging evacuating  
 charging..... HA-90  
 Refrigerant general precaution..... HA-2  
 Refrigerant lines..... HA-94  
 Refrigeration cycle..... HA-11  
 Reverse clutch..... AT-174  
 Revolution sensor (A/T)..... AT-69  
 Ring gear diff. inspection..... PD-19, 38  
 RO2H-L - Wiring diagram..... EC-166  
 RO2H-R - Wiring diagram..... EC-148  
 Road wheel size..... GI-37  
 Roof trim..... BT-20  
 Room lamp - See Interior lamp..... EL-72  
 Rotor disc (front)..... FA-10  
 RRO2LH - Wiring diagram..... EC-162  
 RRO2RH - Wiring diagram..... EC-144

## S

SAE J1930 terminology list..... GI-43  
 Screw jack..... GI-38  
 Seal - See Exterior..... BT-22  
 SEAT - Wiring diagram..... EL-146  
 Seat belt inspection..... MA-23  
 Seat belt, front..... RS-3  
 Seat belt, rear..... RS-4  
 Seat, front..... BT-29  
 Seat, rear..... BT-32  
 Self-diagnosis transfer..... TF-23  
 Self-diagnostic results..... EC-48  
 SHIFT - Wiring diagram..... AT-130  
 Shift lock system..... AT-129  
 Shift schedule..... AT-49  
 Shift solenoid  
 valve (A/T)..... AT-73, 76, 78, 83, 91, 96, 99  
 Shock absorber (rear)..... RA-12

# ALPHABETICAL INDEX

|                                                          |         |
|----------------------------------------------------------|---------|
| Side bearing preload (front final drive 4WD).....        | PD-20   |
| Side trim.....                                           | BT-17   |
| Side window - See Rear side window.....                  | BT-42   |
| Smart entrance control unit .....                        | EL-227  |
| SMJ (super multiple junction).....                       | Foldout |
| Spare tire size .....                                    | GI-37   |
| Spark plug replacement.....                              | MA-15   |
| Speedometer .....                                        | EL-79   |
| Spiral cable .....                                       | RS-9    |
| Spot lamp.....                                           | EL-72   |
| Spring (Wheelarch) height.....                           | FA-4    |
| SROOF - Wiring diagram .....                             | EL-143  |
| SRS - See Supplemental Restraint System.....             | RS-5    |
| SRS - Wiring diagram .....                               | RS-20   |
| SRS Trouble diagnoses .....                              | RS-17   |
| S/SIG - Wiring diagram .....                             | EC-333  |
| Stabilizer bar (front) .....                             | FA-21   |
| Stabilizer bar (rear) .....                              | RA-13   |
| Stall test (A/T) .....                                   | AT-124  |
| Standardized relay .....                                 | EL-4    |
| START - Wiring diagram.....                              | EL-27   |
| Starter .....                                            | EL-29   |
| Starting system .....                                    | EL-26   |
| Starting torque offset adjustment.....                   | TF-36   |
| Steering gear, linkage and transfer gear inspection..... | MA-22   |
| Steering linkage .....                                   | ST-23   |
| Steering switch .....                                    | EL-37   |
| Steering transfer gear.....                              | ST-14   |
| Steering wheel and column .....                          | ST-10   |
| Steering wheel play .....                                | ST-6    |
| Steering wheel turning force.....                        | ST-8    |
| Stop lamp.....                                           | EL-52   |
| STOP/L - Wiring diagram .....                            | EL-52   |
| Strut (front).....                                       | FA-20   |
| Sub-oil pump transfer .....                              | TF-86   |
| Sun gear transfer .....                                  | TF-89   |
| Sun roof, electric.....                                  | EL-143  |
| Sunload sensor .....                                     | HA-65   |
| Sunroof .....                                            | BT-33   |
| Supplemental Restraint System.....                       | RS-5    |
| Supplemental restraint system - Wiring diagram.....      | RS-20   |
| SW/V - Wiring diagram .....                              | EC-277  |
| Symbols and abbreviations .....                          | GI-7    |

## T

|                                      |        |
|--------------------------------------|--------|
| 2-4WD solenoid valve.....            | TF-60  |
| Tachometer .....                     | EL-79  |
| Tail lamp.....                       | EL-50  |
| TAIL/L - Wiring diagram.....         | EL-50  |
| TFTS - Wiring diagram .....          | EC-190 |
| THEFT - Wiring diagram.....          | EL-208 |
| Theft warning system .....           | EL-202 |
| Thermostat.....                      | LC-10  |
| Three way catalyst precautions ..... | GI-4   |
| Throttle position sensor (TPS).....  | EC-123 |

|                                              |               |
|----------------------------------------------|---------------|
| Throttle position sensor adjustment.....     | EC-74         |
| Throttle position switch.....                | AT-64         |
| Tie-rod.....                                 | ST-27         |
| Tie-rod ball joints .....                    | ST-27         |
| Tightening torque of standard bolts .....    | GI-42         |
| Timing belt .....                            | EM-12         |
| Tire rotation.....                           | MA-20         |
| Tire size .....                              | GI-37         |
| TLID - Wiring diagram .....                  | EL-145        |
| Tooth contact (front final drive 4WD) .....  | PD-26         |
| Tooth contact diff.....                      | PD-48         |
| Torque converter clutch solenoid valve ..... | AT-83, 86, 91 |
| Torque converter installation .....          | AT-140        |
| Tow truck towing.....                        | GI-41         |
| TP/SW - Wiring diagram .....                 | EC-261        |
| TPS - Wiring diagram .....                   | EC-123        |
| TRANSF - Wiring diagram.....                 | TF-9          |
| Transfer dropping resistor.....              | TF-61         |
| Transfer fluid replacement .....             | MA-18         |
| Transfer fluid temperature sensor .....      | TF-60         |
| Transfer indicator relay .....               | TF-67         |
| Transfer motor .....                         | TF-45, 73     |
| Transfer motor relay .....                   | TF-62         |
| Transfer oil filter .....                    | TF-73         |
| Transfer overhaul .....                      | TF-76         |
| Transfer removal and installation .....      | TF-74         |
| Transfer serial number .....                 | GI-36         |
| TRANSMT - Wiring diagram.....                | EL-231        |
| Transverse link (front).....                 | FA-22         |
| Tread-FR&RR (Dimensions) .....               | GI-37         |
| Trim .....                                   | BT-17         |
| TURN - Wiring diagram .....                  | EL-61         |
| Turn signal lamp .....                       | EL-58         |
| Two-pole lift .....                          | GI-40         |

## U

|                  |       |
|------------------|-------|
| Under body ..... | BT-46 |
|------------------|-------|

## V

|                                     |        |
|-------------------------------------|--------|
| Vacuum cut valve.....               | EC-308 |
| Vacuum hose (brake system) .....    | BR-17  |
| Vacuum hose drawing (ECCS) .....    | EC-13  |
| Valve clearance.....                | EM-50  |
| Valve guide .....                   | EM-26  |
| Valve seat .....                    | EM-27  |
| Valve spring .....                  | EM-28  |
| Vehicle identification number ..... | GI-35  |
| Vehicle speed sensor (VSS) .....    | EC-252 |
| VENT/V - Wiring diagram .....       | EC-242 |
| Viscosity number (SAE).....         | MA-9   |
| VSS - Wiring diagram .....          | EC-252 |

## ALPHABETICAL INDEX

### W

|                                   |        |                                             |        |
|-----------------------------------|--------|---------------------------------------------|--------|
| Wait detection switch.....        | TF-61  | Wheelbase (Dimensions) .....                | GI-37  |
| WARN - Wiring diagram .....       | EL-91  | Wide open & closed throttle position        |        |
| Warning buzzer.....               | EL-98  | switch.....                                 | EC-123 |
| Warning lamps.....                | EL-90  | Width (Dimensions) .....                    | GI-37  |
| Washer, front.....                | EL-106 | WINDOW - Wiring diagram .....               | EL-172 |
| Washer, rear.....                 | EL-114 | Window, door .....                          | BT-11  |
| Water pump .....                  | LC-9   | Window, rear side .....                     | BT-42  |
| Water temperature gauge.....      | EL-79  | Window, side - See Rear side window.....    | BT-42  |
| Weatherstrip - See Exterior ..... | BT-22  | Windshield .....                            | BT-41  |
| Wheel alignment (front) .....     | FA-6   | Windshield washer - See Front washer .....  | EL-106 |
| Wheel balance .....               | MA-20  | Windshield wiper - See Front wiper .....    | EL-106 |
| Wheel bearing (front axle) .....  | FA-4   | WIP/R - Wiring diagram.....                 | EL-117 |
| Wheel bearing (rear) .....        | RA-5   | WIPER - Wiring diagram .....                | EL-108 |
| Wheel hub (front).....            | FA-10  | Wiper and washer.....                       | EL-106 |
| Wheel sensors (ABS).....          | BR-32  | Wiper, front .....                          | EL-106 |
| Wheel size.....                   | GI-37  | Wiper, rear.....                            | EL-114 |
| Wheelarch height.....             | FA-4   | Wiring diagrams .....                       | GI-8   |
|                                   |        | Wrist pin - See Piston pin inspection ..... | EM-39  |