

ALPHABETICAL INDEX

SECTION **IDX**

A B C D E F G H I J K L M

N O P Q R S T U V W X Y Z

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-417
ABS - Wiring diagram	BR-36
ABS sensor rotor	AX-6, 19
Absolute pressure sensor	EC-156
A/C air flow	HA-26
A/C component layout.....	HA-20
A/C compressor clutch removal and installation	HA-116
A/C compressor precaution.....	HA-6
A/C compressor special service tool.....	HA-9
A/C control operation (auto A/C)	HA-24
A/C diagnostic work flow (auto A/C)	HA-47
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure	HA-110
A/C HFC134a (R134a) system service tools	HA-10
A/C HFC134a system service equip- ment precaution	HA-6
A/C lubricant (R134a)	HA-112
A/C operational check	HA-48
A/C performance chart	HA-87
A/C performance test diagnoses.....	HA-85
A/C relay.....	HA-83
A/C self-diagnoses (auto A/C).....	HA-37
A/C service data specification.....	HA-125
A/C system description (auto A/C).....	HA-24
A/C trouble diagnoses (auto A/C)	HA-28
A/C, A - Wiring diagram	HA-31
Accelerator control system	FE-3
Accelerator wire adjustment	FE-3
Actuator lever (Transfer)	TF-118
Air bag	RS-11
Air bag disposal.....	RS-24
Air bag precautions	GI-3
Air bleeding for brake system	BR-8
Air cleaner filter replacement.....	MA-17
Air conditioner cut control	EC-29
Air flow meter - See Mass air flow sensor	EC-146
Air mix door control linkage adjustment.....	HA-61
Air mix. door motor	HA-59, 109
Air spoiler, rear.....	BT-31
All - mode 4WD system.....	TF-10
Alternator	SC-12
Ambient sensor	HA-96
Angular tightening application.....	EM-3
Antenna - See Power antenna	EL-157
Anti-lock brake system - Wiring diagram	BR-36
AP/SEN - Wiring diagram	EC-159
ASCD (automatic speed control device)	EL-170
ASCD - Wiring diagram	EL-174
A/T - Wiring diagram - AT - FTS.....	AT-107
A/T - Wiring diagram - AT - MAIN.....	AT-96
A/T - Wiring diagram - AT - PNP/SW.....	AT-101

A/T - Wiring diagram - AT - VSS A/T	AT-112
A/T control	EC-428
A/T diagnosis communication line.....	EC-537
A/T fluid temperature sensor.....	AT-109
A/T self-diagnoses.....	AT-46
A/T shift lock system	AT-252
A/T shift lock system - Wiring diagram	AT-253
A/T trouble diagnoses	AT-53
A/T Wiring diagram - AT - ENG SS.....	AT-116
A/T Wiring diagram AT - 1ST	AT-122
A/T Wiring diagram AT - 2ND	AT-128
A/T Wiring diagram AT - 3RD	AT-134
A/T Wiring diagram AT - 4TH.....	AT-141
A/T Wiring diagram AT - BA/FTS.....	AT-191
A/T Wiring diagram AT - LPSV	AT-163
A/T Wiring diagram AT - NONDTC	AT-203
A/T Wiring diagram AT - OVRCSV	AT-186
A/T Wiring diagram AT - SSV/A.....	AT-168
A/T Wiring diagram AT - SSV/B.....	AT-172
A/T Wiring diagram AT - TCCSIG	AT-155
A/T Wiring diagram AT - TCV	AT-149
A/T Wiring diagram AT - TPS.....	AT-178
A/T Wiring diagram AT - VSSMTR.....	AT-197
AT/C - Wiring diagram.....	EC-430
ATDIAG - Wiring diagram.....	EC-539
ATP switch.....	TF-110
ATP warning lamp.....	TF-101
Audio	EL-149
AUDIO - Wiring diagram.....	EL-151
Audio and A/C control removal and installation - See Instrument panel	BT-20
Auto air conditioner - Wiring diagram	HA-31
Automatic amplifier.....	HA-35, 51
Automatic speed control system - See ASCD	EL-170
Automatic transmission fluid replacement.....	MA-21
Automatic transmission number	GI-42
Auxiliary air control (AAC) valve	EC-413
Axle housing (rear)	AX-19

B

Back door.....	BT-15
Back door opener - See Back door	BT-15
Back door trim.....	BT-30
Back-up lamp	EL-55
BACK/L - Wiring diagram.....	EL-55
Ball joint (front)	SU-12
Basic inspection	EC-99
Battery	SC-3
Block heater	EM-46
Blower motor	HA-70
Body alignment	BT-54
BPT valve.....	EC-355, 359
Brake booster	BR-18
Brake fluid change	BR-7
Brake fluid level	MA-25
Brake fluid level and line check	BR-7
Brake hydraulic line	BR-9

ALPHABETICAL INDEX

Brake inspectionMA-25
 Brake lines and cables inspectionMA-25
 Brake lining wear temporary checkingMA-26
 Brake master cylinderBR-15
 Brake pedalBR-13
 Bulb specificationsEL-360
 Bumper, frontBT-12
 Bumper, rearBT-15
 BYPS/V - Wiring diagramEC-524, 532

C

Camshaft inspectionEM-31
 Camshaft position sensor (CMPS).....EC-336
 Canister-See EVAP canisterEC-30
 Center case (Transfer).....TF-121
 CHARGE - Wiring diagramSC-10
 Charging systemSC-9
 Chassis and body maintenanceMA-21
 CHIME - Wiring diagramEL-110
 CIGAR - Wiring diagramEL-138
 Cigarette lighterEL-138
 Circuit breakerEL-16
 CKPS - Wiring diagramEC-332, 460
 Closed loop control (Left bank)EC-449
 Closed loop control (Right bank)EC-449
 Closed throttle position switchEC-421
 Clutch drum (Transfer).....TF-123
 Clutch force release limit adjustmentTF-39
 Clutch pressure switch (Transfer).....TF-109
 CMPS - Wiring diagramEC-339
 Coil spring (front).....SU-8
 Coil spring (rear)SU-19
 Collision diagnosis.....RS-64
 Combination lamp, front, removal and installationBT-12
 Combination lamp, rear, removal and installationBT-31
 Combination meter.....EL-80
 Combination meter removal and installation - See Instrument panel.....BT-20
 Combination switch.....EL-22
 COMPAS - Wiring diagramEL-97
 CompassEL-96
 Component Location (auto A/C).....HA-28
 Compression pressure.....EM-13
 Compressor clutch removal and installationHA-116
 Compressor precautionHA-6
 Compressor special service toolHA-9
 Connecting rod.....EM-48
 Connecting rod bearing clearance.....EM-53
 Connecting rod bushing clearanceEM-54
 Connector inspection.....GI-20
 Console box - See Instrument panel.....BT-20
 CONSULT for ABSBR-42
 CONSULT for all-mode 4WD.....TF-30
 CONSULT for engineEC-80
 CONSULT-II general information.....GI-37
 Control valve (A/T)AT-284

Control valve (Transfer)TF-126
 Converter housing installation.....AT-263
 Coolant mixture ratio.....MA-12
 Coolant replacement.....MA-14
 Cooling circuit (engine).....LC-8
 Crank angle sensor built into distributor
 - See Camshaft position sensorEC-336
 "Crankcase emission control system -
 See positive crankcase ventilation".....EC-36
 Crankshaft.....EM-51
 Crankshaft position sensor (OBD)EC-330
 Crankshaft position sensor (OBD) cog
 chippingEC-458
 Cruise control - See ASCD.....EL-170
 Cylinder blockEM-45
 Cylinder block boringEM-51
 Cylinder head.....EM-27
 Cylinder head bolt tighteningEM-39

D

Data link connector for Consult.....EC-80
 Daytime light system.....EL-36
 Daytime running light - See Daytime
 light systemEL-36
 DEF - Wiring diagramEL-142
 Detonation sensor - See Knock sensorEC-324
 Diagnostic trouble code (DTC) for OBD
 systemEC-8, 55
 Diagnostic trouble code (DTC) inspec-
 tion priority chartEC-116
 Differential carrier assembly.....PD-27, 54
 Differential carrier disassemblyPD-41
 Differential gear oil replacement.....MA-24
 DimensionsGI-42
 DistributorEC-28
 Distributor ignition (DI) system.....EC-28
 D/LOCK - Wiring diagram.....EL-204
 Dome light - See Interior lampEL-73
 Door glass.....BT-18
 Door lock.....BT-18
 Door mirror.....BT-53
 Door trimBT-26
 Door, frontBT-18
 Door, rearBT-19
 Drive belt inspectionMA-13
 Drive chain (Transfer)TF-123
 Drive pinion diff. inspection.....PD-20, 44
 Drive pinion heightPD-22, 50
 Drive plate runoutEM-54
 Drive shaft (front).....AX-10
 Dropping resistor (A/T).....AT-166
 DTC work supportEC-89
 DTRL - Wiring diagram.....EL-40
 Dual pressure switchHA-83

ALPHABETICAL INDEX

E

ECM input/output signal	EC-127
ECTS - Wiring diagram	EC-177, 196
EGR control (EGRC) - BPT valve	EC-355
EGR control (EGRC) - solenoid valve	EC-464
EGR control valve	EC-344, 354, 475, 482
EGR temperature sensor	EC-469
EGR/TS - Wiring diagram	EC-472
EGRC/V - Wiring diagram	EC-466
EGRC1 - Wiring diagram	EC-348, 478
Electric sun roof	EL-161
Electrical diagnoses	GI-23
Electrical ignition system	EC-28
Electrical unit	Foldout
Electrical units location	EL-341
Engine compartment	BT-55
Engine control circuit diagram	EC-22
Engine control component parts location	EC-20
Engine control module (ECM)	EC-433
Engine control system diagram and chart	EC-23
Engine coolant temperature sensor (ECTS)	EC-175, 194
Engine fail-safe system	EC-117
Engine oil filter replacement	MA-18
Engine oil precautions	GI-7
Engine oil replacement	MA-17
Engine outer component parts	EM-10
Engine removal	EM-42
Engine room - See Engine compartment	BT-55
Engine serial number	GI-42
EVAP canister	EC-31
EVAP canister purge volume control solenoid valve	EC-30, 374, 493
EVAP canister vent control valve	EC-381, 501, 515
EVAP control system (small leak) diagnosis	EC-364, 398, 483
EVAP control system pressure sensor	EC-388
EVAP control system purge flow monitoring diagnosis	EC-507
EVAP vapor lines inspection	MA-20
Evaporative emission (EVAP) system	EC-30
Exhaust gas recirculation (EGR) valve	EC-344, 475
Exhaust system	FE-8
Exhaust system inspection	MA-21
Exterior	BT-31

F

4LO indicator lamp	TF-103
4WD shift indicator lamp	TF-97
4WD shift switch	TF-109
4WD solenoid valve	TF-109

4WD warning lamp	TF-13
Fan control amp.	HA-72
Fast idle cam (FIC) inspection and adjustment	EC-39
F/FOG - Wiring diagram	EL-58
FICD - Wiring diagram	EC-577
Final drive disassembly	PD-40
Final drive pre-inspection	PD-40
Final drive removal and installation	PD-40
Finisher, interior - See Trim	BT-24
F/LID - Wiring diagram	EL-166
Fluid temperature sensor (A/T)	AT-109
Fluids	MA-11
FO2H-L - Wiring diagram	EC-247
FO2H-R - Wiring diagram	EC-246
Fog lamp, front	EL-56
Fog lamp, front, removal and installation	BT-12
Forward clutch	AT-303
F/PUMP - Wiring diagram	EC-565
Freeze frame data	EC-56
FRO2LH - Wiring diagram	EC-204, 228, 239
FRO2RH - Wiring diagram	EC-203, 227, 238
Front axle	AX-2
Front bumper	BT-12
Front case (Transfer)	TF-131
Front combination lamp removal and installation	BT-12
Front disc brake	BR-21
Front door	BT-18
Front drive shaft (Transfer)	TF-123
Front final drive disassembly (4WD)	PD-15
Front final drive pre-inspection (4WD)	PD-15
Front final drive removal and installation (4WD)	PD-15
Front fog lamp	EL-56
Front fog lamp removal and installation	BT-12
Front heated oxygen sensor (HO2S) (Left bank)	EC-200, 209, 216, 224, 235
Front heated oxygen sensor (HO2S) (Right bank)	EC-200, 209, 216, 224, 235
Front heated oxygen sensor heater (Left bank)	EC-244
Front heated oxygen sensor heater (Right bank)	EC-244
Front oxygen sensor (O2S) monitor	EC-71
Front revolution sensor (Transfer)	TF-110
Front seat	BT-38
Front seat belt	RS-5
Front suspension	SU-2
Front washer	EL-119
Front wiper	EL-119
Fuel cut control (at no load & high engine speed)	EC-30
Fuel filler lid	BT-15
Fuel filter replacement	MA-16
Fuel gauge	EL-80
Fuel injection system (Left bank)	EC-294, 303
Fuel injection system (Right bank)	EC-294, 303
Fuel lid opener, electric	EL-166
Fuel line inspection	MA-16

ALPHABETICAL INDEX

Fuel precautionsGI-8
 Fuel pressure checkEC-37
 Fuel pressure regulatorEC-38
 Fuel pressure releaseEC-37
 Fuel pumpEC-563
 Fuel systemFE-4
 Fuel tank temperature sensorEC-311
 Fuel tank vacuum relief valveEC-31
 FUELLH - Wiring diagramEC-297, 306
 FUELRH - Wiring diagramEC-296, 305
 FuseEL-16
 Fuse blockFoldout
 Fusible linkEL-16

G

Garage jack and safety standGI-45
 GaugesEL-80
 Generator - See AlternatorSC-12
 Generic scan tool (GST)EC-93
 GlassBT-18
 Glass hatch opener, electricEL-165
 GreaseMA-11
 Ground distributionEL-17

H

Harness connectorEL-5
 Harness connector inspectionGI-20
 Harness layoutEL-344
 Hazard warning lampEL-61
 HeadlampEL-25
 Headlining - See Roof trimBT-28
 Heated seatBT-40, EL-169
 Height (Dimensions)GI-42
 HFC134a (R134a) system precautionHA-2
 HFC134a (R134a) system service
 procedureHA-110
 HFC134a (R134a) system service toolsHA-10
 HFC134a system service equipment
 precautionHA-6
 High clutchAT-301
 H/LAMP - Wiring diagramEL-29
 HoodBT-12
 HornEL-137
 HORN - Wiring diagramEL-137
 How to erase DTC for OBD systemEC-68
 HSEAT - Wiring diagramEL-169
 Hydraulic lash adjuster inspectionEM-36

I

IACV-AAC valveEC-413
 IACV-FICD solenoid valveEC-576
 IATS - Wiring diagramEC-171
 Identification plateGI-41
 Idle air control valve (IACV)EC-413

Idle mixture ratioEC-41
 Idle speedEC-41
 IGN/SG - Wiring diagramEC-453
 Ignition timingEC-41
 Ignition wire inspectionEC-323
 ILL - Wiring diagramEL-69
 IlluminationEL-66
 In vehicle sensorHA-100
 INFINITI COMMUNICATOREL-304
 Infiniti communicator (IVCS)EL-304
 INJECT - Wiring diagramEC-550
 InjectorEC-556
 Injector removal and installationEC-38
 Instrument panelBT-20
 INT/L - Wiring diagramEL-76
 Intake air temperature sensorEC-168
 Intake door control linkage adjustmentHA-69
 Intake door motorHA-63
 Intake sensorHA-107
 Integrated homelink transmitterEL-281
 InteriorBT-24
 Interior lampEL-73
 Interior lamp on-off controlEL-74
 Internal gear (Transfer)TF-132
 IVCS - Wiring diagramEL-315
 IVIS (Infiniti vehicle immobilizer
 system)EL-284
 IVIS (Infiniti vehicle immobilizer sys-
 tem) precautionsGI-3

J

Jacking pointsGI-44
 Journal bearing assembly (propeller
 shaft)PD-7
 Journal bearing disassembly (propeller
 shaft)PD-7
 Junction box (J/B)Foldout

K

Keyless entry system - See Multi-re-
 mote control systemEL-222
 Knock sensor (KS)EC-324
 Knuckle spindleAX-9
 KS - Wiring diagramEC-326

L

Length (Dimensions)GI-42
 License lampEL-47
 Lifting pointsGI-46
 Limited slip diff. adjustmentPD-47
 Limited slip diff. assemblyPD-48
 Limited slip diff. disassemblyPD-45
 Limited slip diff. inspectionPD-46
 Line pressure solenoid valveAT-146, 160, 165

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Line pressure switch (Transfer)TF-109
 Line pressure test (A/T)AT-62
 Liquid gasket applicationEM-3
 Location of electrical unitsEL-341
 Lock, doorBT-18
 Low and reverse brakeAT-307
 LSV (Load sensing valve)BR-11
 Lubricant (R134a) A/CHA-112
 LubricantsMA-11
 Lubrication circuit (engine)LC-3
 Lubrication-locks, hinges and hood
 latchesMA-27
 Luggage room lampEL-73

M

MAFS - Wiring diagramEC-151
 Magnet clutchHA-78, 116
 MAIN - Wiring diagramEC-137
 Main oil pump (Transfer)TF-129
 Mainshaft (Transfer)TF-123
 Maintenance (engine)MA-13
 MAJOR OVERHALLAT-265
 Major overhaul (Transfer)TF-118
 Malfunction indicator lamp (MIL)EC-70
 MAP/BARO switch solenoid valveEC-435
 Mass air flow sensor (MAFS)EC-146
 Master cylinder (brake)BR-15
 MeterEL-80
 METER - Wiring diagramEL-84
 MIL & Data link connectors circuitEC-582
 MIL/DL - Wiring diagramEC-582
 MIRROR - Wiring diagramEL-164
 Mirror defoggerEL-140
 Mirror, doorBT-53
 Mirror, out sideBT-53
 MisfireEC-317
 Mode door control linkage adjustmentHA-58
 Mode door motorHA-53
 Model variationGI-40
 Molding - See ExteriorBT-31
 MULTI - Wiring diagramEL-226
 Multi-remote control systemEL-222
 Multiport fuel injection (MFI) systemEC-26
 Multiport fuel injection precautionsGI-6

N

NATS (Nissan anti-theft system)
 precautionsGI-3
 NATS - Wiring diagramEL-286
 Neutral-4LO switchTF-110
 NVH troubleshooting (AX)AX-3, 18
 NVH troubleshooting (BR)BR-6
 NVH troubleshooting (PD)PD-3
 NVH troubleshooting (ST)ST-5
 NVH troubleshooting (SU)SU-3, 15

O

Oil change (capacity)MA-11
 Oil filter (Transfer)TF-116
 Oil pan (engine)EM-15
 Oil pressure (engine)LC-3
 Oil pump (A/T)AT-280
 Oil pump (engine)LC-4
 Oil pump regulator valve (engine)LC-5
 Oil seal replacement (engine)EM-25
 Oil seal replacement (front final drive
 4WD)PD-12
 Oil seal replacement (front of final
 drive)PD-37
 On board diagnostic systemEC-54
 Out side mirrorBT-53
 Overdrive control switchAT-250
 Overrun clutchAT-303
 Overrun clutch solenoid valveAT-188
 Oversize pistonEM-50

P

P/ANT - Wiring diagramEL-158
 Park/Neutral position switchEC-542
 Park/neutral position switch (A/T)AT-104, 250
 Parking brake controlBR-29
 Parking lampEL-47
 PCV (positive crankcase ventilation)EC-36
 PGC/V - Wiring diagramEC-377, 496
 Pilot bushing replacement - See Pilot
 converterEM-57
 Pinion bearing preload diff.PD-22
 Pinion gear height diff.PD-22, 50
 Piston assemblyEM-55
 Piston pin inspectionEM-47
 Piston ring inspectionEM-48
 Piston to bore clearanceEM-49
 Planetary carrier (Transfer)TF-132
 PNP/SW - Wiring diagramEC-545
 POWER - Wiring diagramEL-10
 Power antennaEL-157
 Power door lockEL-202
 Power door mirrorEL-164
 Power seatEL-167
 Power steering fluid levelMA-27, ST-7
 Power steering gearST-16
 Power steering hydraulic pressureST-9
 Power steering oil pressure switchEC-570
 Power steering oil pumpST-26
 Power steering system bleedingST-8
 Power supply routingEL-9
 Power transistor & ignition coilEC-451
 Power windowEL-194
 PRE/SE - Wiring diagramEC-391
 Precautions (General)GI-4
 Pressure test (A/T)AT-62
 Propeller shaftPD-3

ALPHABETICAL INDEX

Propeller shaft greasing.....MA-23
 Propeller shaft inspectionMA-23
 Propeller shaft on vehicle servicePD-5
 Propeller shaft vibrationPD-5
 PST/SW - Wiring diagram.....EC-571

R

Rack retainer adjustment.....ST-7
 RadiatorLC-12
 Radio - See Audio.....EL-149
 Rear air spoilerBT-31
 Rear axleAX-17
 Rear bumperBT-15
 Rear case (Transfer).....TF-121
 Rear combination lamp removal and
 installationBT-31
 Rear cover packing replacement diff.PD-13
 Rear doorBT-19
 Rear drum brakeBR-25
 Rear heated oxygen sensor
 (HO2S)EC-251, 260, 269, 278
 Rear heated oxygen sensor (HO2S)
 heater.....EC-287
 Rear seatBT-41
 Rear seat belt.....RS-6
 Rear side windowBT-52
 Rear suspensionSU-15
 Rear washer.....EL-129
 Rear window defogger.....EL-140
 Rear wiper.....EL-129
 Refrigerant connection precautionHA-3
 Refrigerant discharging evacuating
 chargingHA-110
 Refrigerant general precaution.....HA-3
 Refrigerant linesHA-120
 Refrigeration cycle.....HA-13
 Removal and installation (A/T).....AT-262
 Removal and installation (Transfer)TF-117
 Reverse clutch.....AT-297
 Revolution sensor (A/T).....AT-114
 Ring gear diff. inspectionPD-20, 44
 RO2H-L - Wiring diagram.....EC-290
 RO2H-R - Wiring diagram.....EC-289
 Road wheel sizeGI-43
 Roof trimBT-28
 Room lamp - See Interior lampEL-73
 RRO2LH - Wiring diagram...EC-255, 264, 273, 282
 RRO2RH - Wiring diagram..EC-254, 263, 272, 281

S

SAE J1930 terminology listGI-49
 Screw jackGI-44
 Seal - See ExteriorBT-31
 SEAT - Wiring diagramEL-167
 Seat belt inspectionMA-28, RS-8
 Seat belt pre-tensionerRS-3

Seat belt pre-tensioner disposalRS-24
 Seat belt, front.....RS-5
 Seat belt, rear.....RS-6
 Seat, frontBT-38
 Seat, rearBT-41
 Self-diagnosis (Transfer).....TF-27
 Self-diagnostic resultsEC-71
 SHIFT - Wiring diagramAT-253
 Shift lock systemAT-252
 Shift schedule.....AT-339
 Shift solenoid valve A (A/T) ..AT-124, 136, 146, 170
 Shift solenoid valve B (A/T) ..AT-124, 130, 146, 174
 Shock absorber (rear)SU-19
 Side air bagRS-22
 Side bearing preload (front final drive
 4WD).....PD-21
 Side trim.....BT-24
 Side window - See Rear side windowBT-52
 Smart entrance control unitEL-276
 SMJ (super multiple junction).....Foldout
 Spare tire sizeGI-43
 Spark plug replacement.....MA-19
 Speedometer.....EL-80
 Spiral cable.....RS-18
 Spot lamp.....EL-73
 Spring (Wheelarch) heightSU-5
 SROOF - Wiring diagramEL-162
 SRS - See Supplemental Restraint
 SystemRS-11
 SRS - Wiring diagramRS-36
 S/SIG - Wiring diagramEC-558
 Stabilizer bar (front).....SU-10
 Stabilizer bar (rear)SU-21
 Stall test (A/T)AT-59
 Standardized relayEL-7
 START - Wiring diagramSC-7
 StarterSC-8
 Starting system.....SC-6
 Starting torque offset adjustment.....TF-40
 Steering gear, linkage and transfer
 gear inspection.....MA-26
 Steering linkageST-16
 Steering switch.....EL-24
 Steering transfer gearST-14
 Steering wheel and columnST-10
 Steering wheel playST-6
 Steering wheel turning force.....ST-8
 Stop lamp.....EL-53
 STOP/L - Wiring diagram.....EL-53
 Strut (front)SU-8
 Sub-oil pump (Transfer)TF-129
 Sun gear (Transfer).....TF-132
 Sun roof, electricEL-161
 Sunload sensorHA-103
 Sunroof.....BT-42
 Supplemental Restraint SystemRS-11
 Supplemental restraint system - Wiring
 diagramRS-36
 SW/V - Wiring diagramEC-439
 Symbols and abbreviationsGI-10
 Symptom matrix chart.....EC-118

ALPHABETICAL INDEX

System readiness test (SRT) codeEC-56

T

2-4WD shift solenoid valveTF-109
TachometerEL-80
Tail lampEL-47
TAIL/L - Wiring diagramEL-49
TCM circuit diagramAT-13
TCM inspection tableAT-92
TFTS - Wiring diagramEC-314
THEFT - Wiring diagramEL-252
Theft warning systemEL-245
ThermometerEL-96
ThermostatLC-10
Three way catalyst function (Left bank)EC-360
Three way catalyst function (Right bank)EC-360
Three way catalyst precautionsGI-6
Throttle position sensor (TPS)EC-181
Throttle position sensor adjustmentEC-99
Throttle position switchEC-421, AT-183, 251
Tie-rodST-20
Tie-rod ball jointsST-20
Tightening torque of standard boltsGI-48
Timing beltEM-18
Tire rotationMA-24
Tire sizeGI-43
TLID - Wiring diagramEL-165
Tooth contact (front final drive 4WD)PD-26
Tooth contact diff.PD-53
Torque converter installationAT-263
Torque convertor clutch solenoid valveAT-151, 160
Tow truck towingGI-46
Towing pointGI-47
TP/SW - Wiring diagramEC-423
TPS - Wiring diagramEC-187
Transfer control unit inspection tableTF-55
Transfer dropping resistorTF-110
Transfer fluid replacement (Part time 4WD model)MA-22
Transfer fluid temperature sensorTF-109
Transfer motorTF-115
Transfer motor relayTF-111
Transfer serial numberGI-42
TRANSMT - Wiring diagramEL-281
Tread-FR&RR (Dimensions)GI-42
TrimBT-24
Trouble diagnosesGI-33
Trunk lid opener, electricEL-165
TURN - Wiring diagramEL-63
Turn signal lampEL-61
Two trip detection logicEC-54
Two-pole liftGI-46

U

Under bodyBT-57

V

Vacuum cut valveEC-30, 536
Vacuum cut valve bypass valveEC-30, 522, 529
Vacuum hose (brake system)BR-20
Vacuum hose drawing (Engine control)EC-24
Valve clearanceEM-59
Valve guideEM-33
Valve seatEM-34
Valve springEM-35
Vehicle identification numberGI-41
Vehicle recovery (freeing a stuck vehicle)GI-47
Vehicle speed sensor (VSS)EC-408
VENT/V - Wiring diagramEC-383, 503, 518
Ventilation air filterHA-124
Viscosity number (SAE)MA-12
VSS - Wiring diagramEC-411

W

Wait detection switchTF-110
WARN - Wiring diagramEL-101
Warning chimeEL-108
Warning lampsEL-100
Washer, frontEL-119
Washer, rearEL-129
Water pumpLC-9
Water temperature gaugeEL-80
Weatherstrip - See ExteriorBT-31
Wheel balanceMA-24
Wheel bearing (front)AX-4
Wheel bearing (rear)AX-18
Wheel hub (front)AX-6
Wheel sensors (ABS)BR-55, 79
Wheel sizeGI-43
Wheelarch heightSU-5
Wheelbase (Dimensions)GI-42
Wide open & closed throttle position switchEC-181
Width (Dimensions)GI-42
WINDOW - Wiring diagramEL-197
Window, doorBT-18
Window, rear sideBT-52
Window, side - See Rear side windowBT-52
WindshieldBT-50
WIP/R - Wiring diagramEL-132
WIPER - Wiring diagramEL-121
Wiper, frontEL-119
Wiper, rearEL-129
Wiring Diagram (Cell code) listEL-361
Wiring diagram (Transfer)TF-18
Wiring diagramsGI-11

Wrist pin - See Piston pin inspection.....EM-47

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

NOTES