

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-417
 ABS - Wiring diagramBR-42, 47
 ABS sensor rotor.....AX-6, 18
 Absolute pressure sensorEC-155
 A/C air flow.....HA-25
 A/C component layout.....HA-19
 A/C compressor clutch removal and
 installation.....HA-150
 A/C compressor precaution.....HA-6
 A/C compressor special service tool.....HA-10
 A/C control operation (auto A/C).....HA-23
 A/C diagnostic work flow (auto A/C)HA-65
 A/C HFC134a (R134a) system
 precaution.....HA-2
 A/C HFC134a (R134a) system service
 procedure.....HA-144
 A/C HFC134a (R134a) system service
 tools.....HA-11
 A/C HFC134a system service equip-
 ment precaution.....HA-7
 A/C lubricant (R134a).....HA-146
 A/C operational check.....HA-66
 A/C performance chart.....HA-116
 A/C performance test diagnoses.....HA-114
 A/C relay.....HA-110
 A/C self-diagnoses (auto A/C).....HA-44
 A/C service data specification.....HA-160
 A/C system description (auto A/C).....HA-23
 A/C trouble diagnoses (auto A/C).....HA-27
 A/C, A - Wiring diagram.....HA-31, 36
 Accelerator control system.....FE-3
 Accelerator wire adjustment.....FE-3
 Actuator lever (Transfer).....TF-120
 Air bag.....RS-10
 Air bag disposal.....RS-23
 Air bag precautions.....GI-3
 Air bleeding for brake system.....BR-9
 Air cleaner filter replacement.....MA-17
 Air conditioner cut control.....EC-32
 Air flow meter - See Mass air flow
 sensor.....EC-147
 Air mix door control linkage adjustment.....HA-85
 Air mix. door motor.....HA-82, 141
 Air spoiler, rear.....BT-36
 All - mode 4WD system.....TF-10
 Alternator.....SC-28
 Ambient sensor.....HA-129
 Angular tightening application.....EM-3
 Antenna - See Power antenna.....EL-172, 647
 Anti-lock brake system - Wiring
 diagram.....BR-42, 47
 ASCD (automatic speed control
 device).....EL-224, 700
 ASCD - Wiring diagram.....EL-228, 704
 A/T - Wiring diagram - AT - FTS.....AT-107
 A/T - Wiring diagram - AT - MAIN.....AT-96
 A/T - Wiring diagram - AT - PNP/SW.....AT-101

A/T - Wiring diagram - AT - VSS A/T.....AT-113
 A/T control.....EC-431
 A/T diagnosis communication line.....EC-592
 A/T fluid temperature sensor.....AT-110
 A/T IND - Wiring diagram.....EL-127, 596
 AT indicator lamp.....EL-127, 596
 A/T self-diagnoses.....AT-46
 A/T shift lock system.....AT-265
 A/T shift lock system - Wiring diagram.....AT-266
 A/T trouble diagnoses.....AT-53
 A/T Wiring diagram - AT - ENG SS.....AT-117
 A/T Wiring diagram AT - 1ST.....AT-123
 A/T Wiring diagram AT - 2ND.....AT-129
 A/T Wiring diagram AT - 3RD.....AT-135
 A/T Wiring diagram AT - 4TH.....AT-142
 A/T Wiring diagram AT - BA/FTS.....AT-192
 A/T Wiring diagram AT - LPSV.....AT-164
 A/T Wiring diagram AT - NONDTC.....AT-215
 A/T Wiring diagram AT - OVRCSV.....AT-187
 A/T Wiring diagram AT - SSV/A.....AT-169
 A/T Wiring diagram AT - SSV/B.....AT-173
 A/T Wiring diagram AT - TCCSIG.....AT-156
 A/T Wiring diagram AT - TCV.....AT-150
 A/T Wiring diagram AT - TPS.....AT-179
 A/T Wiring diagram AT - VSSMTR.....AT-199
 AT/C - Wiring diagram.....EC-433
 ATP switch.....TF-112
 ATP warning lamp.....TF-102
 Audio.....EL-163, 638
 AUDIO - Wiring diagram.....EL-165, 640
 Audio and A/C control removal and
 installation - See Instrument panel.....BT-22
 AUT/DP - Wiring diagram.....EL-194, 670
 Auto air conditioner - Wiring diagram.....HA-31, 36
 Automatic amplifier.....HA-40, 72
 Automatic drive positioner.....EL-189, 665
 Automatic speed control system - See
 ASCD.....EL-224, 700
 Automatic transmission fluid
 replacement.....MA-21
 Automatic transmission number.....GI-44
 Auxiliary air control (AAC) valve.....EC-414
 Axle housing (rear).....AX-18

B

Back door.....BT-16
 Back door opener - See Back door.....BT-16
 Back door trim.....BT-35
 Back-up lamp.....EL-74, 525
 BACK/L - Wiring diagram.....EL-74, 525
 Ball joint (front).....SU-12
 Base idle air volume initialiging.....EC-57
 Basic inspection.....EC-101
 Battery.....SC-4
 Battery/Starting/Charging System
 Tester.....SC-7, 12, 21
 Blower motor.....HA-95
 Body alignment.....BT-58
 Brake booster.....BR-23

ALPHABETICAL INDEX

Brake control valve (Proportioning valve)BR-12
 Brake fluid changeBR-8
 Brake fluid levelMA-25
 Brake fluid level and line checkBR-8
 Brake hydraulic lineBR-10
 Brake inspectionMA-25
 Brake lines and cables inspectionMA-25
 Brake lining wear temporary checkingMA-26
 Brake master cylinderBR-17
 Brake pedalBR-15
 Bulb specificationsEL-460, 926
 Bumper, frontBT-13
 Bumper, rearBT-16
 BYPS/V - Wiring diagramEC-576, 583

C

Camshaft inspectionEM-42
 Camshaft position sensor (PHASE)EC-334
 Canister-See EVAP canisterEC-33
 Center bearing assembly (propeller shaft)PD-9
 Center bearing disassembly (propeller shaft)PD-7
 Center case (Transfer)TF-123
 CHARGE - Wiring diagramSC-20
 Charging systemSC-19
 Chassis and body maintenanceMA-21
 CHIME - Wiring diagramEL-131, 600
 CIGAR - Wiring diagramEL-152, 624
 Cigarette lighterEL-152, 624
 Circuit breakerEL-19, 470
 CKPS - Wiring diagramEC-326
 ClockEL-153, 625
 CLOCK - Wiring diagramEL-153, 625
 Closed loop control (Left bank)EC-481
 Closed loop control (Right bank)EC-481
 Closed throttle position switchEC-423
 Clutch drum (Transfer)TF-125
 Clutch force release limit adjustmentTF-39
 Clutch pressure switch (Transfer)TF-111
 Coil spring (front)SU-8
 Coil spring (rear)SU-18
 Collision diagnosisRS-60
 Combination lamp, front, removal and installationBT-13
 Combination lamp, rear, removal and installationBT-36
 Combination meterEL-99, 568
 Combination meter removal and installation - See Instrument panelBT-22
 Combination switchEL-31, 482
 COMPAS - Wiring diagramEL-115, 584
 CompassEL-114, 583
 Component Location (auto A/C)HA-27
 Compression pressureEM-14
 Compressor clutch removal and installationHA-150
 Compressor precautionHA-6

Compressor special service toolHA-10
 Connecting rodEM-65
 Connecting rod bearing clearanceEM-69 GI
 Connecting rod bushing clearanceEM-70
 Connector inspectionGI-21
 Console box - See Instrument panelBT-22 MA
 CONSULT for ABSBR-53
 CONSULT for all-mode 4WDTF-30
 CONSULT for engineEC-81 EM
 CONSULT-II general informationGI-39
 Control valve (A/T)AT-301
 Control valve (Transfer)TF-128 LG
 Converter housing installationAT-278
 Coolant mixture ratioMA-12
 Coolant replacementMA-14 EC
 Cooling circuit (engine)LC-10
 "Crankcase emission control system - See positive crankcase ventilation"EC-39 FE
 CrankshaftEM-67
 Crankshaft position sensor (POS)EC-326 AT
 Crankshaft position sensor (POS) chippingEC-507
 Crankshaft position sensor (REF)EC-500 TF
 Cruise control - See ASCDEL-224, 700
 Cylinder blockEM-61
 Cylinder headEM-38 PD
 Cylinder head bolt tighteningEM-49

D

Data link connector for ConsultEC-81 SU
 Daytime light systemEL-49, 499
 Daytime running light - See Daytime light systemEL-49, 499 BR
 DEF - Wiring diagramEL-156, 628
 Detonation sensor - See Knock sensorEC-320
 Diagnostic trouble code (DTC) for OBD systemEC-8, 60 ST
 Diagnostic trouble code (DTC) inspection priority chartEC-113 RS
 Differential carrier assemblyPD-30, 57
 Differential carrier disassemblyPD-44
 Differential gear oil replacementMA-24 BT
 DimensionsGI-44
 D/LOCK - Wiring diagramEL-263, 741 HA
 Dome light - See Interior lampEL-93, 543
 Door glassBT-19
 Door lockBT-19 SC
 Door mirrorBT-57
 Door trimBT-31
 Door, frontBT-19 EL
 Door, rearBT-21
 Drive belt inspectionMA-13
 Drive chain (Transfer)TF-125
 Drive pinion diff. inspectionPD-23, 47
 Drive pinion heightPD-25, 53
 Drive plate runoutEM-70
 Drive shaft (front)AX-10
 Dropping resistor (A/T)AT-167
 DTC work supportEC-93

ALPHABETICAL INDEX

DTRL - Wiring diagram.....EL-54, 503

E

ECM input/output signal.....EC-124
ECTS - Wiring diagram.....EC-164, 181
Electric sun roof.....EL-176, 651
Electrical diagnoses.....GI-24
Electrical ignition system.....EC-31
Electrical unit.....Foldout
Electrical units location.....EL-441, 906
Engine compartment.....BT-59
Engine control circuit diagram.....EC-24
Engine control component parts
location.....EC-20
Engine control module (ECM).....EC-435
Engine control system diagram and
chart.....EC-26
Engine coolant temperature sensor
(ECTS).....EC-162, 179
Engine fail-safe system.....EC-114
Engine oil filter replacement.....MA-18
Engine oil precautions.....GI-8
Engine oil replacement.....MA-18
Engine outer component parts.....EM-10
Engine removal.....EM-57
Engine room - See Engine
compartment.....BT-59
Engine serial number.....GI-44
EVAP canister.....EC-34
EVAP canister purge volume control
solenoid valve.....EC-33, 359, 531
EVAP canister vent control
valve.....EC-366, 543, 562
EVAP control system (small leak)
diagnosis.....EC-344, 386, 516
EVAP control system pressure sensor.....EC-373
EVAP control system purge flow moni-
toring diagnosis.....EC-551
EVAP vapor lines inspection.....MA-20
Evaporative emission (EVAP) system.....EC-33
Exhaust system.....FE-8
Exhaust system inspection.....MA-21
Exterior.....BT-36

F

4LO indicator lamp.....TF-104
4WD shift indicator lamp.....TF-98
4WD shift switch.....TF-111
4WD solenoid valve.....TF-111
4WD warning lamp.....TF-13
Fan control amp.....HA-98
F/FOG - Wiring diagram.....EL-77, 527
Final drive disassembly.....PD-43
Final drive pre-inspection.....PD-43
Final drive removal and installation.....PD-43
Finisher, interior - See Trim.....BT-29

F/LID - Wiring diagram.....EL-183, 659
Fluid temperature sensor (A/T).....AT-110
Fluids.....MA-11
Flywheel runout.....EM-70
FO2H-L - Wiring diagram.....EC-235
FO2H-R - Wiring diagram.....EC-234
Fog lamp, front.....EL-75, 526
Fog lamp, front, removal and
installation.....BT-13
Forward clutch.....AT-320
F/PUMP - Wiring diagram.....EC-616
Freeze frame data.....EC-60
FRO2LH - Wiring diagram.....EC-189, 215, 227
FRO2RH - Wiring diagram.....EC-188, 214, 226
Front axle.....AX-2
Front bumper.....BT-13
Front case (Transfer).....TF-133
Front combination lamp removal and
installation.....BT-13
Front disc brake.....BR-26
Front door.....BT-19
Front drive shaft (Transfer).....TF-125
Front final drive disassembly (4WD).....PD-18
Front final drive pre-inspection (4WD).....PD-18
Front final drive removal and installa-
tion (4WD).....PD-18
Front fog lamp.....EL-75, 526
Front fog lamp removal and installation.....BT-13
Front heated oxygen sensor (HO2S)
(Left bank).....EC-184, 194, 202, 210, 223
Front heated oxygen sensor (HO2S)
(Right bank).....EC-184, 194, 202, 210, 223
Front heated oxygen sensor heater
(Left bank).....EC-232
Front heated oxygen sensor heater
(Right bank).....EC-232
Front revolution sensor (Transfer).....TF-112
Front seat.....BT-42
Front seat belt.....RS-4
Front suspension.....SU-2
Front washer.....EL-140, 612
Front wiper.....EL-140, 612
Fuel cut control (at no load & high
engine speed).....EC-33
Fuel filler lid.....BT-16
Fuel filter replacement.....MA-16
Fuel gauge.....EL-99, 568
Fuel injection system (Left bank).....EC-286, 294
Fuel injection system (Right bank).....EC-286, 294
Fuel lid opener, electric.....EL-183, 659
Fuel line inspection.....MA-16
Fuel precautions.....GI-8
Fuel pressure check.....EC-40
Fuel pressure regulator.....EC-41
Fuel pressure release.....EC-40
Fuel pump.....EC-614
Fuel system.....FE-4
Fuel tank temperature sensor.....EC-301
Fuel tank vacuum relief valve.....EC-34
FUELLH - Wiring diagram.....EC-289, 297
FUELRH - Wiring diagram.....EC-288, 296

ALPHABETICAL INDEX

FuseEL-19, 470
Fuse and fusible link boxFoldout
Fuse blockFoldout
Fusible linkEL-19, 470

G

Garage jack and safety standGI-47
GaugesEL-99, 568
Generator - See AlternatorSC-28
Generic scan tool (GST)EC-95
GlassBT-19
Glass hatch opener, electricEL-181, 657
GreaseMA-11
Ground distributionEL-20, 471

H

H/AIM - Wiring diagramEL-513
Harness connectorEL-8
Harness connector inspectionGI-21
Harness layoutEL-444, 910
Hazard warning lampEL-80, 530
HeadlampEL-34, 485
Headlamp aiming controlEL-64, 512
Headlining - See Roof trimBT-33
Heated seatBT-44, EL-186, 662
Height (Dimensions)GI-44
HFC134a (R134a) system precautionHA-2
HFC134a (R134a) system service
 procedureHA-144
HFC134a (R134a) system service toolsHA-11
HFC134a system service equipment
 precautionHA-7
High clutchAT-317
H/LAMP - Wiring diagramEL-39, 490
HoodBT-13
HornEL-151, 623
HORN - Wiring diagramEL-151, 623
How to erase DTC for OBD systemEC-72
HSEAT - Wiring diagramEL-186, 662

I

IACV-AAC valveEC-414
IATS - Wiring diagramEC-159
IdentificationHA-4
Identification plateGI-43
Idle air control valve (IACV)EC-414
Idle mixture ratioEC-44
Idle speedEC-44
IGN/SG - Wiring diagramEC-491
Ignition control systemEC-489
Ignition timingEC-44
ILL - Wiring diagramEL-88, 538
IlluminationEL-85, 535
In vehicle sensorHA-132

INFINITI COMMUNICATOREL-356
Infiniti communicator (IVCS)EL-356
INJECT - Wiring diagramEC-606
InjectorEC-605
Injector removal and installationEC-42
Instrument panelBT-22
INT/L - Wiring diagramEL-96, 546
Intake air temperature sensorEC-157
Intake door control linkage adjustmentHA-94
Intake door motorHA-87
Intake manifoldEM-12
Intake sensorHA-139
Integrated homelink transmitterEL-333, 831
InteriorBT-29
Interior lampEL-93, 543
Interior lamp on-off controlEL-94, 544
Internal gear (Transfer)TF-134
IVC-L - Wiring diagramEC-444
IVC-R - Wiring diagramEC-444
IVCS - Wiring diagramEL-366
IVCS-L - Wiring diagramEC-475
IVCS-R - Wiring diagramEC-475
IVIS (Infiniti vehicle immobilizer
 system)EL-336, 835
IVIS (Infiniti vehicle immobilizer sys-
 tem) precautionsGI-3

J

Jacking pointsGI-46
Journal bearing assembly (propeller
 shaft)PD-9
Journal bearing disassembly (propeller
 shaft)PD-8
Junction box (J/B)Foldout

K

Keyless entry system - See Multi-re-
 mote control systemEL-277, 761
Knock sensor (KS)EC-320
Knuckle spindleAX-9
KS - Wiring diagramEC-322

L

Length (Dimensions)GI-44
License lampEL-66, 515
Lifting pointsGI-48
Limited slip diff. adjustmentPD-50
Limited slip diff. assemblyPD-51
Limited slip diff. disassemblyPD-48
Limited slip diff. inspectionPD-49
Line pressure solenoid valveAT-147, 161, 167
Line pressure switch (Transfer)TF-111
Line pressure test (A/T)AT-62
Liquid gasket applicationEM-3

ALPHABETICAL INDEX

LOAD - Wiring diagram.....EC-632
Location of electrical units.....EL-441, 906
Lock, door.....BT-19
Low and reverse brake.....AT-324
LSV (Load sensing valve).....BR-13
Lubricant (R134a) A/C.....HA-146
Lubricants.....MA-11
Lubrication circuit (engine).....LC-3
Lubrication-locks, hinges and hood
latches.....MA-27
Luggage room lamp.....EL-93, 543

M

MAFS - Wiring diagram.....EC-151
Magnet clutch.....HA-104, 150
MAIN - Wiring diagram.....EC-139
Main oil pump (Transfer).....TF-131
Mainshaft (Transfer).....TF-125
Maintenance (engine).....MA-13
MAJOR OVERHALL.....AT-281
Major overhaul (Transfer).....TF-120
Malfunction indicator lamp (MIL).....EC-74
Mass air flow sensor (MAFS).....EC-147
Master cylinder (brake).....BR-17
Meter.....EL-99, 568
METER - Wiring diagram.....EL-104, 573
MIL & Data link connectors circuit.....EC-638
MIL/DL - Wiring diagram.....EC-638
MIRROR - Wiring diagram.....EL-180, 656
Mirror defogger.....EL-154, 626
Mirror, door.....BT-57
Mirror, out side.....BT-57
Misfire.....EC-312
Mode door control linkage adjustment.....HA-81
Mode door motor.....HA-75
Model variation.....GI-42
Molding - See Exterior.....BT-36
MULTI - Wiring diagram.....EL-281, 765
Multi-remote control system.....EL-277, 761
Multiplex communication.....HA-142
Multiport fuel injection (MFI) system.....EC-29
Multiport fuel injection precautions.....GI-6

N

NATS (Nissan anti-theft system).....EL-336, 835
NATS (Nissan anti-theft system)
precautions.....GI-3
NATS - Wiring diagram.....EL-338, 837
NAVI - wiring diagram.....EL-399, 864
Navigation System.....EL-390, 855
Neutral-4LO switch.....TF-112
NVH troubleshooting (AX).....AX-3, 17
NVH troubleshooting (BR).....BR-7
NVH troubleshooting (PD).....PD-3
NVH troubleshooting (ST).....ST-6

NVH troubleshooting (SU).....SU-3, 15

O

Oil change (capacity).....MA-11
Oil filter (Transfer).....TF-118
Oil pan (engine).....EM-15
Oil pressure (engine).....LC-4
Oil pump (A/T).....AT-297
Oil pump (engine).....LC-5
Oil pump regulator valve (engine).....LC-6
Oil seal replacement (engine).....EM-35
Oil seal replacement (front final drive
4WD).....PD-15
Oil seal replacement (front of final
drive).....PD-40
On board diagnostic system.....EC-59
Out side mirror.....BT-57
Overdrive control switch.....AT-263
Overrun clutch.....AT-320
Overrun clutch solenoid valve.....AT-189

P

P/ANT - Wiring diagram.....EL-173, 648
Park/Neutral position switch.....EC-593
Park/neutral position switch (A/T).....AT-103, 263
Parking brake control.....BR-34
Parking lamp.....EL-66, 515
PCV (positive crankcase ventilation).....EC-39
PGC/V - Wiring diagram.....EC-362, 534
PHASE - Wiring diagram.....EC-334
Pinion bearing preload diff.PD-25
Pinion gear height diff.PD-25, 53
Piston assembly.....EM-71
Piston pin inspection.....EM-63
Piston ring inspection.....EM-64
Piston to bore clearance.....EM-66
Planetary carrier (Transfer).....TF-134
PNP/SW - Wiring diagram.....EC-596
POS - Wiring diagram.....EC-507
POWER - Wiring diagram.....EL-13, 464
Power antenna.....EL-172, 647
Power door lock.....EL-261, 739
Power door mirror.....EL-180, 656
Power seat.....EL-184, 660
Power steering fluid level.....MA-27, ST-8
Power steering gear.....ST-17
Power steering hydraulic pressure.....ST-10
Power steering oil pressure switch.....EC-623
Power steering oil pump.....ST-27
Power steering system bleeding.....ST-9
Power supply routing.....EL-12, 463
Power transistor & ignition coil.....EC-489
Power window.....EL-244, 720
PRE/SE - Wiring diagram.....EC-376
Precations for Leak detection dye.....HA-3
Precautions (General).....GI-5

ALPHABETICAL INDEX

Pressure test (A/T)	AT-62
Propeller shaft	PD-3
Propeller shaft greasing	MA-23
Propeller shaft inspection	MA-23
Propeller shaft on vehicle service	PD-6
Propeller shaft vibration	PD-6
PST/SW - Wiring diagram	EC-624

R

Rack retainer adjustment.....	ST-8
Radiator	LC-19, 21
Radio - See Audio	EL-163, 638
Rear air spoiler	BT-36
Rear axle	AX-16
Rear bumper	BT-16
Rear case (Transfer).....	TF-123
Rear combination lamp removal and installation	BT-36
Rear cover packing replacement diff.	PD-16
Rear door	BT-21
Rear drum brake	BR-30
Rear heated oxygen sensor (HO2S)	EC-239, 249, 259, 269
Rear heated oxygen sensor (HO2S) heater	EC-278
Rear seat	BT-45
Rear seat belt.....	RS-5
Rear side window	BT-56
Rear suspension	SU-15
Rear washer	EL-145, 617
Rear window defogger.....	EL-154, 626
Rear wiper	EL-145, 617
REF - Wiring diagram	EC-500
Refrigerant pressure sensor	HA-111
Refrigerant connection precaution	HA-4
Refrigerant discharging evacuating charging	HA-144
Refrigerant general precaution.....	HA-3
Refrigerant lines	HA-154
Refrigerant pressure sensor.....	EC-628
Refrigeration cycle.....	HA-14
REMOTE - Wiring diagram.....	EL-171, 646
Removal and installation (A/T).....	AT-277
Removal and installation (Transfer)	TF-119
Reverse clutch.....	AT-314
Revolution sensor (A/T).....	AT-115
Ring gear diff. inspection	PD-23, 47
RO2H-L - Wiring diagram.....	EC-282
RO2H-R - Wiring diagram.....	EC-281
Road wheel size	GI-45
Roof trim	BT-33
Room lamp - See Interior lamp	EL-93, 543
RRO2LH - Wiring diagram...EC-243, 253, 263, 273	
RRO2RH - Wiring diagram..EC-242, 252, 262, 272	

S

SAE J1930 terminology list	GI-52	
Screw jack	GI-46	MA
Seal - See Exterior	BT-36	
SEAT - Wiring diagram	EL-184, 660	
Seat belt inspection	MA-28, RS-7	EM
Seat belt pre-tensioner	RS-3	
Seat belt pre-tensioner disposal	RS-23	
Seat belt, front	RS-4	LC
Seat belt, rear	RS-5	
Seat, front	BT-42	
Seat, rear	BT-45	EC
Self-diagnosis (Transfer)	TF-27	
SHIFT - Wiring diagram	AT-266	
Shift lock system	AT-265	FE
Shift schedule	AT-356	
Shift solenoid valve A (A/T) ..	AT-125, 137, 147, 171	AT
Shift solenoid valve B (A/T) ..	AT-125, 131, 147, 175	
Shock absorber (rear)	SU-18	
Side air bag	RS-21	TF
Side bearing preload (front final drive 4WD)	PD-24	
Side trim	BT-29	PD
Side window - See Rear side window	BT-56	
Smart entrance control unit	EL-327, 821	
SMJ (super multiple junction)	Foldout	AX
Spare tire size	GI-45	
Spark plug replacement	MA-19	
Speedometer	EL-99, 568	SU
Spiral cable	RS-17	
Spot lamp	EL-93, 543	
Spring (Wheelarch) height	SU-5	BR
SROOF - Wiring diagram	EL-177, 652	
SRS - See Supplemental Restraint System	RS-10	ST
SRS - Wiring diagram	RS-36	
S/SIG - Wiring diagram	EC-611	
Stabilizer bar (front)	SU-10	RS
Stabilizer bar (rear)	SU-20	
Stall test (A/T)	AT-59	
Standardized relay	EL-10	BT
START - Wiring diagram	SC-11	
Start signal	EC-610	
Starter	SC-18	HA
Starting system	SC-10	
Steering gear, linkage and transfer gear inspection	MA-26	SC
Steering linkage	ST-17	
Steering switch	EL-33, 484	
Steering transfer gear	ST-15	EL
Steering wheel and column	ST-11	
Steering wheel play	ST-7	
Steering wheel turning force	ST-9	ID
Stop lamp	EL-72, 523	
STOP/L - Wiring diagram	EL-72, 523	
Strut (front)	SU-8	
Sub-oil pump (Transfer)	TF-131	
Sun gear (Transfer)	TF-134	

ALPHABETICAL INDEX

Sun roof, electric.....EL-176, 651
Sunload sensorHA-135
Sunroof.....BT-46
Supplemental Restraint System.....RS-10
Supplemental restraint system - Wiring
diagramRS-36
S/VCSW - Wiring diagramEC-483
Swirl control valve control solenoid
valveEC-449
Swirl control valve control vacuum
check switchEC-483
SWL/V - Wiring diagramEC-449
Symbols and abbreviationsGI-10
Symptom matrix chart.....EC-115
System readiness test (SRT) codeEC-61

T

2-4WD shift solenoid valve.....TF-111
TachometerEL-99, 568
Tail lamp.....EL-66, 515
TAIL/L - Wiring diagram.....EL-68, 517
TCM circuit diagramAT-13
TCM inspection tableAT-92
TFTS - Wiring diagram.....EC-303
THEFT - Wiring diagram.....EL-308, 796
Theft warning systemEL-301, 789
Thermometer.....EL-114, 583
Thermostat.....LC-16
Three way catalyst function (Left bank).....EC-339
Three way catalyst function (Right
bank).....EC-339
Three way catalyst precautions.....GI-6
Throttle bodiesEM-12
Throttle position sensor (TPS)EC-167
Throttle position sensor adjustment.....EC-101
Throttle position switchEC-423, AT-184, 264
Tie-rodST-21
Tie-rod ball joints.....ST-21
Tightening torque of standard bolts.....GI-51
Timing chain.....EM-20
Tire rotationMA-24
Tire sizeGI-45
TLID - Wiring diagramEL-182, 658
Tooth contact (front final drive 4WD)PD-29
Tooth contact diff.PD-56
Torque converter installationAT-278
Torque convertor clutch solenoid
valveAT-152, 161
Tow truck towing.....GI-48
Towing point.....GI-50
TP/SW - Wiring diagramEC-426
TPS - Wiring diagram.....EC-173
Transfer control unit inspection table.....TF-55
Transfer dropping resistorTF-112
Transfer fluid replacement (Part time
4WD model)MA-22
Transfer fluid temperature sensorTF-111
Transfer motor.....TF-117
Transfer motor relay.....TF-113

Transfer serial numberGI-44
TRANSMT - Wiring diagram.....EL-333, 831
Tread-FR&RR (Dimensions).....GI-44
TrimBT-29
Trouble diagnosesGI-34
Trunk lid opener, electricEL-181, 657
Turbine revolution sensor.....AT-202
TURN - Wiring diagramEL-82, 532
Turn signal lampEL-80, 530
Two trip detection logicEC-59
Two-pole liftGI-48

U

Under bodyBT-61

V

Vacuum cut valveEC-33
Vacuum cut valve bypass valve.....EC-33, 574, 580
Vacuum hose (brake system).....BR-25
Vacuum hose drawing (Engine control)EC-27
Valve clearance.....EM-52
Valve guide.....EM-43
Valve seat.....EM-45
Valve spring.....EM-46
Vanity mirror lamp.....EL-93, 543
Vehicle identification number.....GI-43
Vehicle recovery (freeing a stuck
vehicle).....GI-50
VEHICLE SECURITY (THEFT WARN-
ING) SYSTEM.....EL-301, 789
Vehicle speed sensor (VSS)EC-409
VENT/V - Wiring diagramEC-368, 545, 565
Ventilation air filterHA-159
VIASEC-599
VIAS - Wiring diagramEC-599
Viscosity number (SAE)MA-12
VSS - Wiring diagramEC-412

W

Wait detection switchTF-112
WARN - Wiring diagramEL-119, 588
Warning chimeEL-129, 598
Warning lampsEL-118, 587
Washer, front.....EL-140, 612
Washer, rearEL-145, 617
Water pumpLC-12
Water temperature gauge.....EL-99, 568
Weatherstrip - See ExteriorBT-36
Wheel balanceMA-24
Wheel bearing (front).....AX-4
Wheel bearing (rear)AX-17
Wheel hub (front).....AX-6
Wheel sensors (ABS).....BR-72, 98
Wheel sizeGI-45

ALPHABETICAL INDEX

Wheelarch heightSU-5
Wheelbase (Dimensions)GI-44
Wide open & closed throttle position
switch.....EC-167
Width (Dimensions)GI-44
WINDOW - Wiring diagramEL-248, 724
Window, doorBT-19
Window, rear sideBT-56
Window, side - See Rear side window.....BT-56
Windshield.....BT-54

WIP/R - Wiring diagram.....EL-147, 619
WIPER - Wiring diagramEL-142, 614
Wiper, frontEL-140, 612
Wiper, rearEL-145, 617
Wiring Diagram (Cell code) list.....EL-461, 927
Wiring diagram (Transfer).....TF-18
Wiring Diagram - VEHSEC -EL-308, 796
Wiring diagrams.....GI-11
Wrist pin - See Piston pin inspection.....EM-63

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX