

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagramEC-443, 450, 459
ABS - Wiring diagramBR-38
ABS sensor rotorAX-6, 18
Absolute pressure sensorEC-195
A/C air flowHA-25
A/C component layoutHA-19
A/C compressor clutch removal and
installationHA-149
A/C compressor precautionHA-7
A/C compressor special service toolHA-10
A/C control operation (auto A/C)HA-23
A/C diagnostic work flow (auto A/C)HA-64
A/C HFC134a (R134a) system
precautionHA-2
A/C HFC134a (R134a) system service
procedureHA-143
A/C HFC134a (R134a) system service
toolsHA-11
A/C HFC134a system service equip-
ment precautionHA-7
A/C lubricant (R134a)HA-145
A/C operational checkHA-65
A/C performance chartHA-115
A/C performance test diagnosesHA-113
A/C relayHA-109
A/C self-diagnoses (auto A/C)HA-43
A/C service data specificationHA-159
A/C system description (auto A/C)HA-23
A/C trouble diagnoses (auto A/C)HA-27
A/C, A - Wiring diagramHA-31, 36
Accelerator control systemFE-3
Accelerator wire adjustmentFE-3
Actuator lever (Transfer)TF-119
Air bagRS-10
Air bag disposalRS-22
Air bag precautionsGI-3
Air bleeding for brake systemBR-8
Air cleaner filter replacementMA-18
Air conditioner cut controlEC-33
Air flow meter - See Mass air flow
sensorEC-182, 189, 478
Air mix door control linkage adjustmentHA-84
Air mix. door motorHA-81, 140
Air spoiler, rearBT-36
All - mode 4WD systemTF-10
AlternatorSC-28
Ambient sensorHA-128
Angular tightening applicationEM-3
Antenna - See Power antennaEL-207
Anti-lock brake system - Wiring
diagramBR-38
ASCD (automatic speed control device)EL-260
ASCD - Wiring diagramEL-264
A/T - Wiring diagram - AT - FTSAT-108
A/T - Wiring diagram - AT - MAINAT-97
A/T - Wiring diagram - AT - PNP/SWAT-102
A/T - Wiring diagram - AT - VSS A/TAT-114

A/T controlEC-473
A/T diagnosis communication lineEC-657
A/T fluid temperature sensorAT-111
A/T IND - Wiring diagramEL-155
AT indicator lampEL-155
A/T self-diagnosesAT-46
A/T shift lock systemAT-264
A/T shift lock system - Wiring diagramAT-265
A/T trouble diagnosesAT-53
A/T Wiring diagram - AT - ENG SSAT-118
A/T Wiring diagram AT - 1STAT-124
A/T Wiring diagram AT - 2NDAT-130
A/T Wiring diagram AT - 3RDAT-136
A/T Wiring diagram AT - 4THAT-143
A/T Wiring diagram AT - BA/FTSAT-192
A/T Wiring diagram AT - LPSVAT-164
A/T Wiring diagram AT - NONDTCAT-215
A/T Wiring diagram AT - OVRCSVAT-187
A/T Wiring diagram AT - SSV/AAT-169
A/T Wiring diagram AT - SSV/BAT-173
A/T Wiring diagram AT - TCCSIGAT-156
A/T Wiring diagram AT - TCVAT-151
A/T Wiring diagram AT - TPSAT-179
A/T Wiring diagram AT - VSSMTRAT-199
AT/C - Wiring diagramEC-474
ATP switchTF-111
ATP warning lampTF-101
AudioEL-198
AUDIO - Wiring diagramEL-200
Audio and A/C control removal and
installation - See Instrument panelBT-22
AUT/DP - Wiring diagramEL-230
Auto air conditioner - Wiring diagramHA-31, 36
Automatic amplifierHA-40, 71
Automatic drive positionerEL-225
Automatic speed control system - See
ASCDEL-260
Automatic transmission fluid
replacementMA-22
Automatic transmission numberGI-44
Auxiliary air control (AAC) valveEC-440, 447, 456
AxleMA-28
Axle housing (rear)AX-18

B

Back doorBT-16
Back door opener - See Back doorBT-16
Back door trimBT-35
Back-up lampEL-82
BACK/L - Wiring diagramEL-82
Ball joint (front)SU-12
Basic inspectionEC-116
BatterySC-4
Battery/Starting/Charging System
TesterSC-7, 12, 21
Blower motorHA-93
Body alignmentBT-60
Brake boosterBR-20

ALPHABETICAL INDEX

Brake control valve (Proportioning valve).....BR-11
 Brake fluid changeBR-7
 Brake fluid levelMA-26
 Brake fluid level and line checkBR-7
 Brake hydraulic lineBR-9
 Brake inspectionMA-26
 Brake lines and cables inspectionMA-26
 Brake master cylinderBR-14, 17
 Brake pedalBR-12
 Bulb specificationsEL-584
 Bumper, frontBT-13
 Bumper, rearBT-16
 BYPS/V - Wiring diagramEC-641, 648

C

Camshaft inspectionEM-44
 Camshaft position sensor (PHASE).....EC-331
 Canister-See EVAP canisterEC-34
 Center bearing assembly (propeller shaft).....PD-9
 Center bearing disassembly (propeller shaft).....PD-7
 Center case (Transfer).....TF-122
 CHARGE - Wiring diagramSC-20
 Charging systemSC-19
 Chassis and body maintenanceMA-22
 CHIME - Wiring diagram.....EL-159
 CIGAR - Wiring diagram.....EL-183
 Cigarette lighter.....EL-183
 Circuit breaker.....EL-17
 ClockEL-184
 CLOCK - Wiring diagram.....EL-184
 Closed loop control (Bank 1)EC-564
 Closed loop control (Bank 2)EC-564
 Closed throttle position switchEC-465
 Clutch drum (Transfer).....TF-124
 Clutch force release limit adjustmentTF-39
 Clutch pressure switch (Transfer)TF-110
 Coil spring (front).....SU-8
 Coil spring (rear)SU-18
 Collision diagnosis.....RS-59
 Combination lamp, front, removal and installationBT-13
 Combination lamp, rear, removal and installationBT-36
 Combination meter.....EL-127
 Combination meter removal and installation - See Instrument panel.....BT-22
 Combination switch.....EL-29
 COMPAS - Wiring diagramEL-143
 CompassEL-142
 Component Location (auto A/C).....HA-27
 Compression pressure.....EM-14
 Compressor clutch removal and installationHA-149
 Compressor precautionHA-7
 Compressor special service toolHA-10
 Connecting rod.....EM-69

Connecting rod bearing clearance.....EM-73
 Connecting rod bushing clearanceEM-74
 Connector inspection.....GI-21
 Console box - See Instrument panelBT-22
 CONSULT for ABSBR-44
 CONSULT for all-mode 4WDTF-30
 CONSULT-II for engineEC-96
 CONSULT-II general information.....GI-39
 Control valve (A/T)AT-300
 Control valve (Transfer)TF-127
 Converter housing installation.....AT-277
 Coolant mixture ratio.....MA-13
 Coolant overtemperature enrichment protectionEC-304
 Coolant replacement.....MA-15
 Cooling circuit (engine)LC-11
 Crankcase emission control system - See positive crankcase ventilationEC-49
 Crankshaft.....EM-71
 Crankshaft position sensor (POS)EC-323
 Crankshaft position sensor (POS) chippingEC-583
 Crankshaft position sensor (REF).....EC-577
 Cruise control - See ASCD.....EL-260
 Cylinder blockEM-65
 Cylinder head.....EM-40
 Cylinder head bolt tighteningEM-52

D

Data link connector for Consult.....EC-96
 Daytime light system.....EL-50
 Daytime running light - See Daytime light systemEL-50
 DEF - Wiring diagramEL-187
 Detonation sensor - See Knock sensor.....EC-289, 318
 Diagnostic trouble code (DTC) for OBD systemEC-8, 72
 Diagnostic trouble code (DTC) inspection priority chart.....EC-128
 Differential carrier assembly.....PD-30, 57
 Differential carrier disassemblyPD-44
 Differential gear oil replacement.....MA-25
 DimensionsGI-44
 D/LOCK - Wiring diagram.....EL-396
 Dome light - See Interior lampEL-101
 Door glass.....BT-19
 Door lock.....BT-19
 Door mirror.....BT-59
 Door trimBT-31
 Door, frontBT-19
 Door, rearBT-21
 Drive belt inspectionMA-14
 Drive chain (Transfer)TF-124
 Drive pinion diff. inspectionPD-23, 47
 Drive pinion heightPD-25, 53
 Drive plate runoutEM-74
 Drive shaft.....MA-29
 Drive shaft (front).....AX-10

ALPHABETICAL INDEX

Dropping resistor (A/T).....AT-167
DTC work supportEC-107
DTRL - Wiring diagramEL-55

E

ECM input/output signalEC-139
ECTS - Wiring diagramEC-203
Electric sun roofEL-211
Electrical diagnoses.....GI-24
Electrical ignition system.....EC-32
Electrical unitFoldout
Electrical units locationEL-565
Engine compartment.....BT-61
Engine control circuit diagram.....EC-26
Engine control component parts
locationEC-22
Engine control module (ECM).....EC-476
Engine control system diagram and
chart.....EC-27
Engine coolant temperature sensor
(ECTS).....EC-201, 225
Engine fail-safe systemEC-129
Engine oil filter replacementMA-19
Engine oil precautionsGI-7
Engine oil replacementMA-18
Engine outer component partsEM-10
Engine removalEM-61
Engine room - See Engine
compartment.....BT-61
Engine serial numberGI-44
EVAP canister.....EC-35
EVAP canister purge volume control
solenoid valve.....EC-34, 368, 591
EVAP canister vent control
valveEC-375, 603, 611
EVAP control system (small leak)
diagnosisEC-352, 397, 410, 620
EVAP control system pressure
sensorEC-382, 388
EVAP control system purge flow moni-
toring diagnosis.....EC-341
EVAP vapor lines inspection.....MA-21
Evaporative emission (EVAP) system.....EC-34
Exhaust systemFE-9
Exhaust system inspectionMA-22
ExteriorBT-36

F

4LO indicator lamp.....TF-103
4WD shift indicator lamp.....TF-97
4WD shift switch.....TF-110
4WD solenoid valveTF-110
4WD warning lampTF-13
Fan control amp.HA-96
F/FOG - Wiring diagramEL-84
Final drive disassemblyPD-43

Final drive pre-inspectionPD-43
Final drive removal and installationPD-43
Finisher, interior - See TrimBT-29
F/LID - Wiring diagramEL-219
FLS1 - Wiring diagramEC-427
FLS2 - Wiring diagramEC-433
FLS3 - Wiring diagramEC-637
Fluid temperature sensor (A/T)AT-111
Fluids.....MA-12
Fog lamp, front.....EL-83
Fog lamp, front, removal and
installationBT-13
Forward clutch.....AT-319
F/PUMP - Wiring diagramEC-692
Freeze frame data.....EC-73
Front axle.....AX-2
Front bumperBT-13
Front case (Transfer)TF-132
Front combination lamp removal and
installationBT-13
Front disc brakeBR-23
Front doorBT-19
Front drive shaft (Transfer).....TF-124
Front final drive disassembly (4WD).....PD-18
Front final drive pre-inspection (4WD)PD-18
Front final drive removal and installa-
tion (4WD).....PD-18
Front fog lamp.....EL-83
Front fog lamp removal and installationBT-13
Front passenger air bag.....RS-19
Front revolution sensor (Transfer).....TF-111
Front seat.....BT-42
Front seat beltRS-4
Front suspension.....SU-2
Front washerEL-171
Front wiperEL-171
FTTS - Wiring diagram.....EC-301
Fuel cut control (at no load & high
engine speed).....EC-34
Fuel filler lid.....BT-16
Fuel filter replacementMA-17
Fuel gaugeEL-127
Fuel injection system.....EC-281
Fuel injection system (Bank 1)EC-281, 289
Fuel injection system (Bank 2)EC-281, 289
Fuel level sensorEC-426, 430, 432, 636
Fuel lid opener, electric.....EL-219
Fuel line inspectionMA-17
Fuel precautionsGI-8
Fuel pressure check.....EC-51
Fuel pressure regulatorEC-52
Fuel pressure releaseEC-51
Fuel pumpEC-690
Fuel systemFE-4
Fuel tank temperature sensor.....EC-296, 299
Fuel tank vacuum relief valveEC-35
FuseEL-17
Fuse and fusible link boxFoldout
Fuse blockFoldout
Fusible linkEL-17

ALPHABETICAL INDEX

G

Garage jack and safety standGI-47
 Gauges.....EL-127
 Generator - See Alternator.....SC-28
 Generic scan tool (GST).....EC-110
 Glass.....BT-19
 Glass hatch opener, electricEL-218
 GreaseMA-12
 Ground distribution.....EL-18

H

H/AIM - Wiring diagramEL-68
 Harness connector.....EL-6
 Harness connector inspectionGI-21
 Harness layoutEL-568
 Hazard warning lamp.....EL-87
 Headlamp.....EL-33
 Headlamp aiming control.....EL-67
 Headlining - See Roof trimBT-33
 Heated oxygen sensor 1
 (bank 1).....EC-230, 239, 252, 528, 536
 Heated oxygen sensor 1
 (bank 2).....EC-230, 239, 252, 528, 536
 Heated oxygen sensor 2
 (bank 1).....EC-262, 271, 544, 554
 Heated oxygen sensor 2
 (bank 2).....EC-262, 271, 544, 554
 Heated oxygen sensor 2 heater
 (bank 1)EC-167, 174
 Heated oxygen sensor 2 heater
 (bank 2)EC-167, 174
 Heated oxygen sensor heater.....EC-167, 174
 Heated seat.....BT-44, EL-222
 Height (Dimensions)GI-44
 HFC134a (R134a) system precautionHA-2
 HFC134a (R134a) system service
 procedure.....HA-143
 HFC134a (R134a) system service toolsHA-11
 HFC134a system service equipment
 precautionHA-7
 High clutch.....AT-316
 H/LAMP - Wiring diagram.....EL-38
 Homelink universal transceiver.....EL-489
 Hood.....BT-13
 HornEL-182
 HORN - Wiring diagram.....EL-182
 How to erase DTC for OBD system.....EC-85
 HSEAT - Wiring diagram.....EL-222

I

IACV-AAC valve.....EC-440, 447, 456
 IATS - Wiring diagram.....EC-198
 ICC - Wiring diagramEL-293
 IdentificationHA-4

Identification plate.....GI-43
 Idle air control valve (IACV).....EC-440, 447, 456
 Idle air volume learningEC-69
 Idle mixture ratio.....EC-55
 Idle speed.....EC-55
 IGN/SG - Wiring diagramEC-672
 Ignition control systemEC-671
 Ignition timingEC-55
 ILL - Wiring diagramEL-95
 IlluminationEL-92
 In vehicle sensorHA-131
 INJECT - Wiring diagramEC-682
 Injector.....EC-681
 Injector removal and installationEC-53
 Instrument panelBT-22
 INT/L - Wiring diagram.....EL-104
 Intake air temperature sensor.....EC-197, 228
 Intake door control linkage adjustment.....HA-92
 Intake door motorHA-85
 Intake manifold.....EM-12
 Intake sensorHA-138
 Intake valve timing controlEC-162
 Intake valve timing control (Bank 1)EC-162
 Intake valve timing control (Bank 2)EC-162
 Intake valve timing control position
 sensor (Bank 1)EC-519
 Intake valve timing control position
 sensor (Bank 2)EC-519
 Intake valve timing control solenoid
 valve (Bank 1).....EC-484
 Intake valve timing control solenoid
 valve (Bank 2).....EC-484
 Integrated homelink transmitterEL-489
 Intelligent Cruise Control (ICC) systemEL-281
 InteriorBT-29
 Interior lamp.....EL-101
 Interior lamp on-off control.....EL-102
 Internal gear (Transfer)TF-133
 IVIS (Infiniti vehicle immobilizer
 system).....EL-493
 IVIS (Infiniti vehicle immobilizer sys-
 tem) precautionsGI-3

J

Jacking points.....GI-46
 Journal bearing assembly (propeller
 shaft)PD-9
 Journal bearing disassembly (propeller
 shaft)PD-8
 Junction box (J/B).....Foldout

K

KEYLES - Wiring diagramEL-422
 Keyless entry system - See Multi-re-
 mote control system.....EL-417
 Knock sensor (KS)EC-318

IDX

ALPHABETICAL INDEX

Knuckle spindleAX-9
KS - Wiring diagram.....EC-319

L

Laser beam aiming adjustmentEL-285
Length (Dimensions)GI-44
License lampEL-70
Lifting pointsGI-48
Limited slip diff. adjustment.....PD-50
Limited slip diff. assembly.....PD-51
Limited slip diff. disassembly.....PD-48
Limited slip diff. inspectionPD-49
Line pressure solenoid valveAT-148, 161, 167
Line pressure switch (Transfer)TF-110
Line pressure test (A/T)AT-62
Liquid gasket applicationEM-3
LOAD - Wiring diagram.....EC-710
Location of electrical unitsEL-565
Lock, doorBT-19
Low and reverse brakeAT-323
Lubricant (R134a) A/C.....HA-145
Lubricants.....MA-12
Lubrication circuit (engine)LC-3
Lubrication-locks, hinges and hood
latchesMA-29
Luggage room lamp.....EL-101

M

MAFS - Wiring diagramEC-185, 191, 480
Magnet clutch.....HA-103, 149
MAIN - Wiring diagram.....EC-154
Main oil pump (Transfer).....TF-130
Mainshaft (Transfer).....TF-124
Maintenance (engine)MA-14
MAJOR OVERHALL.....AT-280
Major overhaul (Transfer).....TF-119
Malfunction indicator lamp (MIL)EC-87
Mass air flow sensor (MAFS)EC-182, 189, 478
Master cylinder (brake)BR-14, 17
MeterEL-127
METER - Wiring diagram.....EL-132
MIL & Data link connectors circuitEC-714
MIL/DL - Wiring diagramEC-714
MIRROR - Wiring diagram.....EL-217
Mirror defoggerEL-185
Mirror, door.....BT-59
Mirror, out sideBT-59
MisfireEC-310
Mode door control linkage adjustment.....HA-80
Mode door motorHA-74
Model variationGI-42
Molding - See ExteriorBT-36
MULTI - Wiring diagram.....EL-422
Multi-remote control system.....EL-417
Multiplex communicationHA-141
Multiport fuel injection (MFI) systemEC-30

Multiport fuel injection precautions.....GI-6

N

NATS (Nissan anti-theft system).....EL-493
NATS (Nissan anti-theft system)
precautionsGI-3
NATS - Wiring diagram.....EL-495
NAVI - wiring diagram.....EL-522
Navigation SystemEL-513
Neutral-4LO switchTF-111
NVH troubleshooting (AX)AX-3, 17
NVH troubleshooting (BR).....BR-6
NVH troubleshooting (PD).....PD-3
NVH troubleshooting (ST).....ST-6
NVH troubleshooting (SU)SU-3, 15

O

O2H1B1 - Wiring diagram.....EC-169
O2H1B2 - Wiring diagram.....EC-170
O2H2B1 - Wiring diagram.....EC-177
O2H2B2 - Wiring diagram.....EC-178
O2S1B1 - Wiring diagram.....EC-233, 243, 256
O2S1B2 - Wiring diagram.....EC-234, 244, 257
O2S2B1 - Wiring diagram ..EC-265, 274, 547, 557
O2S2B2 - Wiring diagram ..EC-266, 275, 548, 558
Oil change (capacity)MA-12
Oil filter (Transfer)TF-117
Oil pan (engine)EM-15
Oil pressure (engine)LC-5
Oil pump (A/T).....AT-296
Oil pump (engine)LC-6
Oil pump regulator valve (engine)LC-7
Oil seal replacement (engine).....EM-38
Oil seal replacement (front final drive
4WD).....PD-15
Oil seal replacement (front of final
drive).....PD-40
On board diagnostic systemEC-71
ORVR (On-board Refueling Vapor
Recovery).....EC-40
Out side mirrorBT-59
Overdrive control switch.....AT-262
Overheat.....EC-572
Overrun clutchAT-319
Overrun clutch solenoid valve.....AT-189

P

P/ANT - Wiring diagram.....EL-208
Park/Neutral position switch.....EC-658
Park/neutral position switch (A/T)AT-104, 262
Parking brake controlBR-31
Parking lampEL-70
PCV (positive crankcase ventilation)EC-49
Periodic maintenanceMA-7

ALPHABETICAL INDEX

PGC/V - Wiring diagram	EC-371, 594
PHASE - Wiring diagram	EC-333
Pinion bearing preload diff.	PD-25
Pinion gear height diff.	PD-25, 53
Piston assembly	EM-75
Piston pin inspection	EM-67
Piston ring inspection	EM-68
Piston to bore clearance	EM-70
Planetary carrier (Transfer)	TF-133
PNP/SW - Wiring diagram	EC-660
POS - Wiring diagram	EC-326, 585
POWER - Wiring diagram	EL-11
Power antenna	EL-207
Power door lock	EL-393
Power door mirror	EL-217
Power seat	EL-220
Power steering fluid level	MA-27, ST-8
Power steering gear	ST-17
Power steering hydraulic pressure	ST-10
Power steering oil pressure switch	EC-699
Power steering oil pump	ST-27
Power steering system bleeding	ST-9
Power supply routing	EL-10
Power transistor & ignition coil	EC-671
Power window	EL-374
PRE/SE - Wiring diagram	EC-384, 390
Precautions for Leak detection dye	HA-3
Precautions (General)	GI-4
Pressure test (A/T)	AT-62
Propeller shaft	PD-3
Propeller shaft greasing	MA-24
Propeller shaft inspection	MA-24
Propeller shaft on vehicle service	PD-6
Propeller shaft vibration	PD-6
PST/SW - Wiring diagram	EC-700

R

Rack retainer adjustment	ST-8
Radiator	LC-21, 23
Radio - See Audio	EL-198
Rear air spoiler	BT-36
Rear axle	AX-16
Rear bumper	BT-16
Rear case (Transfer)	TF-122
Rear combination lamp removal and installation	BT-36
Rear cover packing replacement diff.	PD-16
Rear door	BT-21
Rear drum brake	BR-27
Rear heated oxygen sensor (HO2S)	EC-544
Rear seat	BT-45
Rear seat belt	RS-5
Rear side window	BT-58
Rear suspension	SU-15
Rear washer	EL-176
Rear window defogger	EL-185
Rear wiper	EL-176
REF - Wiring diagram	EC-579
Refrigerant pressure sensor	HA-110

Refrigerant connection precaution	HA-4
Refrigerant discharging evacuating charging	HA-143
Refrigerant general precaution	HA-3
Refrigerant lines	HA-153
Refrigerant pressure sensor	EC-704
Refrigeration cycle	HA-14
REMOTE - Wiring diagram	EL-206
Removal and installation (A/T)	AT-276
Removal and installation (Transfer)	TF-118
Reverse clutch	AT-313
Revolution sensor (A/T)	AT-116
Ring gear diff. inspection	PD-23, 47
Road wheel size	GI-45
Roof trim	BT-33
Room lamp - See Interior lamp	EL-101
RP/SEN - Wiring diagram	EC-705

S

SAE J1930 terminology list	GI-53
Screw jack	GI-46
Seal - See Exterior	BT-36
SEAT - Wiring diagram	EL-220
Seat belt inspection	MA-30, RS-7
Seat belt pre-tensioner	RS-3
Seat belt pre-tensioner disposal	RS-22
Seat belt, front	RS-4
Seat belt, rear	RS-5
Seat, front	BT-42
Seat, rear	BT-45
Self-diagnosis (Transfer)	TF-27
SHIFT - Wiring diagram	AT-265
Shift lock system	AT-264
Shift schedule	AT-355
Shift solenoid valve A (A/T) ..	AT-126, 138, 148, 171
Shift solenoid valve B (A/T) ..	AT-126, 132, 148, 175
Shock absorber (rear)	SU-18
Side air bag	RS-21
Side bearing preload (front final drive 4WD)	PD-24
Side trim	BT-29
Side window - See Rear side window	BT-58
Smart entrance control unit	EL-479
SMJ (super multiple junction)	Foldout
Spare tire size	GI-45
Spark plug replacement	MA-20
Specification value	EC-148
Speedometer	EL-127
Spiral cable	RS-16
Spot lamp	EL-101
Spring (Wheelarch) height	SU-5
SROOF - Wiring diagram	EL-212
SRS - See Supplemental Restraint System	RS-10
SRS - Wiring diagram	RS-35
S/SIG - Wiring diagram	EC-687
Stabilizer bar (front)	SU-10
Stabilizer bar (rear)	SU-20
Stall test (A/T)	AT-59

ALPHABETICAL INDEX

Standardized relay	EL-8
START - Wiring diagram.....	SC-11
Start signal	EC-686
Starter	SC-18
Starting system.....	SC-10
Steering gear, linkage and transfer	
gear inspection.....	MA-27
Steering linkage	ST-17
Steering switch.....	EL-31
Steering transfer gear	ST-15
Steering wheel and column.....	ST-11
Steering wheel play	ST-7
Steering wheel turning force	ST-9
Stop lamp	EL-80
STOP/L - Wiring diagram.....	EL-80
Strut (front)	SU-8
Sub-oil pump (Transfer)	TF-130
Sun gear (Transfer).....	TF-133
Sun roof, electric	EL-211
Sunload sensor	HA-134
Sunroof.....	BT-46
Supplemental Restraint System.....	RS-10
Supplemental restraint system - Wiring	
diagram	RS-35
Suspension	MA-28
S/VCSW - Wiring diagram	EC-568
Swirl control valve control solenoid	
valve	EC-490, 513
Swirl control valve control vacuum	
check switch	EC-566
SWL/V - Wiring diagram	EC-494, 515
Symbols and abbreviations	GI-10
Symptom matrix chart	EC-130
System readiness test (SRT) code	EC-73

T

2-4WD shift solenoid valve	TF-110
Tachometer	EL-127
Tail lamp.....	EL-70
TAIL/L - Wiring diagram	EL-73
TCM circuit diagram	AT-13
TCM inspection table	AT-93
THEFT - Wiring diagram.....	EL-454
Theft warning system.....	EL-446
Thermometer.....	EL-142
Thermostat.....	LC-18
Three way catalyst function (Bank 1)	EC-336
Three way catalyst function (Bank 2)	EC-336
Three way catalyst precautions.....	GI-6
Throttle body	EM-12
Throttle position sensor (TPS)	EC-206, 217
Throttle position sensor adjustment	EC-116
Throttle position switch	EC-465, AT-184, 263
Tie-rod	ST-21
Tie-rod ball joints.....	ST-21
Tightening torque of standard bolts.....	GI-51
Timing chain.....	EM-20
Tire rotation	MA-25
Tire size	GI-45

TLID - Wiring diagram	EL-218
Tooth contact (front final drive 4WD)	PD-29
Tooth contact diff.	PD-56
Torque converter installation	AT-277
Torque convertor clutch solenoid	
valve	AT-153, 161
Tow truck towing.....	GI-48
Towing point.....	GI-50
TP/SW - Wiring diagram	EC-468
TPS - Wiring diagram.....	EC-211, 220
Transfer control unit inspection table.....	TF-55
Transfer dropping resistor	TF-111
Transfer fluid replacement (All-mode	
4WD model)	MA-23
Transfer fluid temperature sensor.....	TF-110
Transfer motor	TF-117
Transfer motor relay.....	TF-112
Transfer serial number	GI-44
TRANSMT - Wiring diagram	EL-489
Tread-FR&RR (Dimensions).....	GI-44
Trim	BT-29
TRNSCV - Wiring diagram	EL-489
Trouble diagnoses	GI-34
Turbine revolution sensor.....	AT-202
TURN - Wiring diagram	EL-89
Turn signal lamp	EL-87
Two trip detection logic	EC-71
Two-pole lift	GI-48

U

Under body	BT-63
------------------	-------

V

Vacuum cut valve	EC-34
Vacuum cut valve bypass valve.....	EC-34, 639, 645
Vacuum hose (brake system).....	BR-22
Vacuum hose drawing (Engine control)	EC-28
Valve clearance.....	EM-55
Valve guide.....	EM-46
Valve seat.....	EM-47
Valve spring.....	EM-48
Vanity mirror lamp	EL-101
Vehicle identification number.....	GI-43
Vehicle recovery (freeing a stuck	
vehicle).....	GI-50
VEHICLE SECURITY (THEFT WARN-	
ING) SYSTEM	EL-446
Vehicle speed sensor (VSS)	EC-436
VENT/V - Wiring diagram	EC-377, 605, 614
Ventilation air filter	HA-158
VIAS	EC-663
VIAS/V - Wiring diagram	EC-665
Viscosity number (SAE)	MA-13
VSS - Wiring diagram	EC-438

ALPHABETICAL INDEX

W

Wait detection switch.....	TF-111	Wheelbase (Dimensions)	GI-44
WARN - Wiring diagram	EL-147	Wide open & closed throttle position switch.....	EC-206, 217
Warning chime	EL-157	Width (Dimensions)	GI-44
Warning lamps	EL-146	WINDOW - Wiring diagram	EL-378
Washer, front.....	EL-171	Window, door	BT-19
Washer, rear.....	EL-176	Window, rear side	BT-58
Water pump	LC-13	Window, side - See Rear side window.....	BT-58
Water temperature gauge	EL-127	Windshield.....	BT-56
Weatherstrip - See Exterior	BT-36	WIP/R - Wiring diagram	EL-178
Wheel balance	MA-25	WIPER - Wiring diagram	EL-173
Wheel bearing (front).....	AX-4	Wiper, front.....	EL-171
Wheel bearing (rear)	AX-17	Wiper, rear	EL-176
Wheel hub (front).....	AX-6	Wiring Diagram (Cell code) list.....	EL-585
Wheel sensors (ABS).....	BR-58, 82	Wiring diagram (Transfer).....	TF-18
Wheel size	GI-45	Wiring Diagram - VEHSEC -	EL-454
Wheelarch height	SU-5	Wiring diagrams	GI-11
		Wrist pin - See Piston pin inspection.....	EM-67

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

NOTES