

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagramEC-445, 452, 461
 ABS - Wiring diagramBR-35
 ABS sensor rotorAX-6, 20
 Absolute pressure sensorEC-195
 A/C air flowHA-26
 A/C component layoutHA-20
 A/C compressor clutch removal and
 installationHA-150
 A/C compressor precautionHA-6
 A/C compressor special service toolHA-10
 A/C control operation (auto A/C)HA-24
 A/C diagnostic work flow (auto A/C)HA-65
 A/C HFC134a (R134a) system
 precautionHA-2
 A/C HFC134a (R134a) system service
 procedureHA-144
 A/C HFC134a (R134a) system service
 toolsHA-11
 A/C HFC134a system service equip-
 ment precautionHA-7
 A/C lubricant (R134a)HA-146
 A/C operational checkHA-66
 A/C performance chartHA-116
 A/C performance test diagnosesHA-114
 A/C relayHA-110
 A/C self-diagnoses (auto A/C)HA-44
 A/C service data specificationHA-160
 A/C system description (auto A/C)HA-24
 A/C trouble diagnoses (auto A/C)HA-28
 A/C, A - Wiring diagramHA-32, 37
 Accelerator control systemFE-3
 Accelerator wire adjustmentFE-3
 Actuator lever (Transfer)TF-119
 Air bagRS-10
 Air bag disposalRS-22
 Air bag precautionsGI-3
 Air bleeding for brake systemBR-8
 Air cleaner filter replacementMA-18
 Air conditioner cut controlEC-33
 Air flow meter - See Mass air flow
 sensorEC-182, 189, 480
 Air mix door control linkage adjustmentHA-85
 Air mix. door motorHA-82, 141
 Air spoiler, rearBT-36
 All-mode 4WD systemTF-10
 AlternatorSC-29
 Ambient sensorHA-129
 Angular tightening applicationEM-3
 Antenna - See Power antennaEL-209
 Anti-lock brake system - Wiring
 diagramBR-35
 ASCD (automatic speed control device)EL-261
 ASCD - Wiring diagramEL-265
 A/T - Wiring diagram - AT - FTSAT-108
 A/T - Wiring diagram - AT - MAINAT-97
 A/T - Wiring diagram - AT - PNP/SWAT-102
 A/T - Wiring diagram - AT - VSS A/TAT-114

A/T controlEC-475
 A/T diagnosis communication lineEC-662
 A/T fluid temperature sensorAT-111
 A/T IND - Wiring diagramEL-157
 AT indicator lampEL-157
 A/T self-diagnosesAT-46
 A/T shift lock systemAT-263
 A/T shift lock system - Wiring diagramAT-264
 A/T trouble diagnosesAT-53
 A/T Wiring diagram - AT - ENG SSAT-118
 A/T Wiring diagram AT - 1STAT-124
 A/T Wiring diagram AT - 2NDAT-130
 A/T Wiring diagram AT - 3RDAT-136
 A/T Wiring diagram AT - 4THAT-143
 A/T Wiring diagram AT - BA/FTSAT-192
 A/T Wiring diagram AT - LPSVAT-164
 A/T Wiring diagram AT - NONDTCAT-215
 A/T Wiring diagram AT - OVRCSVAT-187
 A/T Wiring diagram AT - SSV/AAT-169
 A/T Wiring diagram AT - SSV/BAT-173
 A/T Wiring diagram AT - TCCSIGAT-156
 A/T Wiring diagram AT - TCVAT-151
 A/T Wiring diagram AT - TPSAT-179
 A/T Wiring diagram AT - VSSMTRAT-199
 AT/C - Wiring diagramEC-476
 ATP switchTF-111
 ATP warning lampTF-101
 AudioEL-200
 AUDIO - Wiring diagramEL-202
 Audio and A/C control removal and
 installation - See Instrument panelBT-22
 AUT/DP - Wiring diagramEL-232
 Auto air conditioner - Wiring diagramHA-32, 37
 Automatic amplifierHA-41, 72
 Automatic drive positionerEL-227
 Automatic speed control system - See
 ASCDEL-261
 Automatic transmission fluid
 replacementMA-22
 Automatic transmission numberGI-45
 Auxiliary air control (AAC) valveEC-442, 449, 458
 AxleMA-28
 Axle housing (rear)AX-20

B

Back doorBT-16
 Back door opener - See Back doorBT-16
 Back door trimBT-35
 Back-up lampEL-84
 BACK/L - Wiring diagramEL-84
 Ball joint (front)SU-14
 Basic inspectionEC-116
 BatterySC-4
 Battery/Starting/Charging System
 TesterSC-7, 12, 22
 Blower motorHA-94
 Body alignmentBT-60
 Brake boosterBR-17

ALPHABETICAL INDEX

Brake control valve (Proportioning valve).....	BR-11
Brake fluid change	BR-7
Brake fluid level	MA-26
Brake fluid level and line check	BR-7
Brake hydraulic line	BR-9
Brake inspection	MA-26
Brake lines and cables inspection	MA-26
Brake master cylinder	BR-14
Brake pedal	BR-12
Bulb specifications	EL-590
Bumper, front	BT-13
Bumper, rear	BT-16
BYPSS/V - Wiring diagram	EC-646, 653

C

Camshaft inspection	EM-45
Camshaft position sensor (PHASE).....	EC-333
Canister - See EVAP canister	EC-34
Center bearing assembly (propeller shaft).....	PD-10
Center bearing disassembly (propeller shaft).....	PD-8
Center case (Transfer).....	TF-122
CHARGE - Wiring diagram	SC-21
Charging system	SC-20
Chassis and body maintenance	MA-22
CHIME - Wiring diagram.....	EL-161
CIGAR - Wiring diagram	EL-185
Cigarette lighter.....	EL-185
Circuit breaker.....	EL-17
Clock	EL-186
CLOCK - Wiring diagram.....	EL-186
Closed loop control (Bank 1)	EC-568
Closed loop control (Bank 2)	EC-568
Closed throttle position switch	EC-467
Clutch drum (Transfer).....	TF-124
Clutch force release limit adjustment	TF-39
Clutch pressure switch (Transfer)	TF-110
Coil spring (front).....	SU-9
Coil spring (rear)	SU-20
Collision diagnosis.....	RS-59
Combination lamp, front, removal and installation	BT-13
Combination lamp, rear, removal and installation	BT-36
Combination meter.....	EL-129
Combination meter removal and installation - See Instrument panel.....	BT-22
Combination switch.....	EL-31
COMPAS - Wiring diagram	EL-145
Compass	EL-144
Component Location (auto A/C).....	HA-28
Compression pressure.....	EM-14
Compressor clutch removal and installation	HA-150
Compressor precaution	HA-6
Compressor special service tool	HA-10
Connecting rod.....	EM-67

Connecting rod bearing clearance.....	EM-71
Connecting rod bushing clearance	EM-72
Connector inspection.....	GI-22
Console box - See Instrument panel	BT-22
CONSULT for ABS	BR-41
CONSULT for all-mode 4WD	TF-30
CONSULT-II for engine	EC-96
CONSULT-II general information.....	GI-40
Control valve (A/T)	AT-299
Control valve (Transfer)	TF-127
Converter housing installation.....	AT-276
Coolant mixture ratio.....	MA-13
Coolant overtemperature enrichment protection	EC-305
Coolant replacement.....	MA-15
Cooling circuit (engine)	LC-11
Crankcase emission control system - See positive crankcase ventilation	EC-49
Crankshaft.....	EM-69
Crankshaft position sensor (POS)	EC-325
Crankshaft position sensor (POS) chipping	EC-587
Crankshaft position sensor (REF).....	EC-581
Cruise control - See ASCD.....	EL-261
Cylinder block	EM-63
Cylinder head.....	EM-41
Cylinder head bolt tightening	EM-52

D

Daytime light system.....	EL-52
Daytime running light - See Daytime light system	EL-52
DEF - Wiring diagram	EL-189
Detonation sensor - See Knock sensor.....	EC-290, 320
Diagnostic trouble code (DTC) for OBD system	EC-8, 72
Diagnostic trouble code (DTC) inspection priority chart.....	EC-128
Differential carrier assembly.....	PD-31, 58
Differential carrier disassembly	PD-45
Differential gear oil replacement.....	MA-25
Dimensions	GI-45
D/LOCK - Wiring diagram	EL-402
Dome light - See Interior lamp	EL-103
Door glass.....	BT-19
Door lock.....	BT-19
Door mirror.....	BT-59
Door trim	BT-31
Door, front	BT-19
Door, rear	BT-21
Drive belt inspection	MA-14
Drive chain (Transfer)	TF-124
Drive pinion diff. inspection	PD-24, 48
Drive pinion height	PD-26, 54
Drive plate runout	EM-73
Drive shaft.....	MA-29
Drive shaft (front).....	AX-12
Dropping resistor (A/T).....	AT-167

ALPHABETICAL INDEX

DTC work supportEC-107
DTRL - Wiring diagramEL-57

E

ECM input/output signalEC-139
ECTS - Wiring diagramEC-203
Electric sun roofEL-213
Electrical diagnosesGI-25
Electrical ignition systemEC-32
Electrical unitFoldout
Electrical units locationEL-571
Engine compartmentBT-61
Engine control circuit diagramEC-26
Engine control component parts
locationEC-22
Engine control module (ECM)EC-478
Engine control system diagram and
chartEC-27
Engine coolant temperature sensor
(ECTS)EC-201, 225
Engine fail-safe systemEC-129
Engine oil filter replacementMA-19
Engine oil precautionsGI-8
Engine oil replacementMA-18
Engine outer component partsEM-10
Engine removalEM-59
Engine room - See Engine
compartmentBT-61
Engine serial numberGI-45
EVAP canisterEC-35
EVAP canister purge volume control
solenoid valveEC-34, 370, 596
EVAP canister vent control
valveEC-377, 608, 616
EVAP control system (small leak)
diagnosisEC-354, 399, 412, 625
EVAP control system pressure
sensorEC-384, 390
EVAP control system purge flow moni-
toring diagnosisEC-343
EVAP vapor lines inspectionMA-21
Evaporative emission (EVAP) systemEC-34
Exhaust systemFE-9
Exhaust system inspectionMA-22
ExteriorBT-36

F

4LO indicator lampTF-103
4WD shift indicator lampTF-97
4WD shift switchTF-110
4WD solenoid valveTF-110
4WD warning lampTF-13
Fan control amp.HA-97
F/FOG - Wiring diagramEL-86
Final drive disassemblyPD-44
Final drive pre-inspectionPD-44

Final drive removal and installationPD-44
Finisher, interior - See TrimBT-29
F/LID - Wiring diagramEL-221
FLS1 - Wiring diagramEC-429
FLS2 - Wiring diagramEC-435
FLS3 - Wiring diagramEC-642
Fluid temperature sensor (A/T)AT-111
FluidsMA-12
Fog lamp, frontEL-85
Fog lamp, front, removal and
installationBT-13
Forward clutchAT-318
F/PUMP - Wiring diagramEC-698
Freeze frame dataEC-73
Front axleAX-2
Front bumperBT-13
Front case (Transfer)TF-132
Front combination lamp removal and
installationBT-13
Front disc brakeBR-20
Front doorBT-19
Front drive shaft (Transfer)TF-124
Front final drive disassembly (4WD)PD-19
Front final drive pre-inspection (4WD)PD-19
Front final drive removal and installa-
tion (4WD)PD-19
Front fog lampEL-85
Front fog lamp removal and installationBT-13
Front passenger air bagRS-19
Front revolution sensor (Transfer)TF-111
Front seatBT-42
Front seat beltRS-4
Front suspensionSU-2
Front washerEL-173
Front wiperEL-173
FTTS - Wiring diagramEC-302
Fuel cut control (at no load & high
engine speed)EC-34
Fuel filler lidBT-16
Fuel filter replacementMA-17
Fuel gaugeEL-129
Fuel injection systemEC-282
Fuel injection system (Bank 1)EC-282, 290
Fuel injection system (Bank 2)EC-282, 290
Fuel level sensorEC-428, 432, 434, 641
Fuel lid opener, electricEL-221
Fuel line inspectionMA-17
Fuel precautionsGI-8
Fuel pressure checkEC-51
Fuel pressure regulatorEC-52
Fuel pressure releaseEC-51
Fuel pumpEC-696
Fuel systemFE-4
Fuel tank temperature sensorEC-297, 300
Fuel tank vacuum relief valveEC-35
FUELB1 - Wiring diagramEC-284, 292
FUELB2 - Wiring diagramEC-285, 293
FuseEL-17
Fuse and fusible link boxFoldout
Fuse blockFoldout

ALPHABETICAL INDEX

Fusible linkEL-17

G

Garage jack and safety standGI-48
 GaugesEL-129
 Generator - See AlternatorSC-29
 Generic scan tool (GST)EC-110
 GlassBT-19
 Glass hatch opener, electricEL-220
 GreaseMA-12
 Ground distributionEL-18

H

H/AIM - Wiring diagramEL-70
 Harness connectorEL-6
 Harness connector inspectionGI-22
 Harness layoutEL-574
 Hazard warning lampEL-89
 HeadlampEL-35
 Headlamp aiming controlEL-69
 Headlining - See Roof trimBT-33
 Heated oxygen sensor 1
 (bank 1)EC-230, 239, 252, 530, 538
 Heated oxygen sensor 1
 (bank 2)EC-230, 239, 252, 530, 538
 Heated oxygen sensor 2
 (bank 1)EC-262, 271, 546, 557
 Heated oxygen sensor 2
 (bank 2)EC-262, 271, 546, 557
 Heated oxygen sensor 2 heater
 (bank 1)EC-166, 174
 Heated oxygen sensor 2 heater
 (bank 2)EC-166, 174
 Heated oxygen sensor heaterEC-166, 174
 Heated seatBT-44, EL-224
 Height (Dimensions)GI-45
 HFC134a (R134a) system precautionHA-2
 HFC134a (R134a) system service
 procedureHA-144
 HFC134a (R134a) system service toolsHA-11
 HFC134a system service equipment
 precautionHA-7
 High clutchAT-315
 H/LAMP - Wiring diagramEL-40
 Homelink universal transceiverEL-495
 HoodBT-13
 HornEL-184
 HORN - Wiring diagramEL-184
 How to erase DTC for OBD systemEC-85
 HSEAT - Wiring diagramEL-224

I

IACV-AAC valveEC-442, 449, 458
 IATS - Wiring diagramEC-198

ICC - Wiring diagramEL-295
 IdentificationHA-4
 Identification plateGI-44
 Idle air control valve (IACV)EC-442, 449, 458
 Idle air volume learningEC-69
 Idle mixture ratioEC-55
 Idle speedEC-55
 IGN/SG - Wiring diagramEC-678
 Ignition control systemEC-677
 Ignition timingEC-55
 ILL - Wiring diagramEL-97
 IlluminationEL-94
 In vehicle sensorHA-132
 In-cabin MicrofilterHA-159
 INJECT - Wiring diagramEC-688
 InjectorEC-687
 Injector removal and installationEC-53
 Instrument panelBT-22
 INT/L - Wiring diagramEL-106
 Intake air temperature sensorEC-197, 228
 Intake door control linkage adjustmentHA-93
 Intake door motorHA-86
 Intake manifoldEM-12
 Intake sensorHA-139
 Intake valve timing controlEC-162
 Intake valve timing control (Bank 1)EC-162
 Intake valve timing control (Bank 2)EC-162
 Intake valve timing control position
 sensor (Bank 1)EC-521
 Intake valve timing control position
 sensor (Bank 2)EC-521
 Intake valve timing control solenoid
 valve (Bank 1)EC-486
 Intake valve timing control solenoid
 valve (Bank 2)EC-486
 Integrated homelink transmitter - See
 Homelink universal transceiverEL-495
 Intelligent cruise control (ICC) systemEL-281
 InteriorBT-29
 Interior lampEL-103
 Interior lamp on-off controlEL-104
 Internal gear (Transfer)TF-133
 IVCB1 - Wiring diagramEC-488, 524
 IVCB2 - Wiring diagramEC-489, 525
 IVIS (Infiniti vehicle immobilizer
 system)EL-499
 IVIS (Infiniti vehicle immobilizer sys-
 tem) precautionsGI-3

J

Jacking pointsGI-47
 Joint connector (J/C)Foldout
 Journal bearing assembly (propeller
 shaft)PD-10
 Journal bearing disassembly (propeller
 shaft)PD-9
 Junction box (J/B)Foldout

ALPHABETICAL INDEX

K

KEYLES - Wiring diagramEL-428
Knock sensor (KS)EC-320
Knuckle spindleAX-10
KS - Wiring diagramEC-321

L

Laser beam aiming adjustmentEL-286
Length (Dimensions)GI-45
License lampEL-72
Lifting pointsGI-49
Limited slip diff. adjustment.....PD-51
Limited slip diff. assemblyPD-52
Limited slip diff. disassembly.....PD-49
Limited slip diff. inspectionPD-50
Line pressure solenoid valveAT-148, 161, 167
Line pressure switch (Transfer)TF-110
Line pressure test (A/T)AT-62
Liquid gasket applicationEM-3
LOAD - Wiring diagramEC-716
Location of electrical unitsEL-571
Lock, doorBT-19
Low and reverse brakeAT-322
Lubricant (R134a) A/CHA-146
LubricantsMA-12
Lubrication circuit (engine)LC-3
Lubrication-locks, hinges and hood
latchesMA-29
Luggage room lampEL-103

M

MAFS - Wiring diagramEC-185, 191, 482
Magnet clutchHA-104, 150
MAIN - Wiring diagramEC-154
Main oil pump (Transfer)TF-130
Mainshaft (Transfer)TF-124
Maintenance (engine)MA-14
MAJOR OVERHALLAT-279
Major overhaul (Transfer)TF-119
Malfunction indicator lamp (MIL)EC-87
Mass air flow sensor (MAFS)EC-182, 189, 480
Master cylinder (brake)BR-14
MeterEL-129
METER - Wiring diagramEL-134
MIL & Data link connectors circuitEC-720
MIL/DL - Wiring diagramEC-720
MIRROR - Wiring diagramEL-219
Mirror defoggerEL-187
Mirror, doorBT-59
Mirror, out sideBT-59
MisfireEC-311
Mode door control linkage adjustmentHA-81
Mode door motorHA-75
Model variationGI-43

Molding - See ExteriorBT-36
Multi-remote control system - See
Remote keyless entry systemEL-423
Multiplex communicationHA-142
Multiport fuel injection (MFI) systemEC-30
Multiport fuel injection precautionsGI-6

N

NATS (Nissan anti-theft system) - See
IVMSEL-499
NATS (Nissan anti-theft system)
precautionsGI-3
NATS - Wiring diagramEL-501
NAVI - wiring diagramEL-528
Navigation SystemEL-519
Neutral-4LO switchTF-111
NVH troubleshooting (AX)AX-3, 19
NVH troubleshooting (BR)BR-6
NVH troubleshooting (PD)PD-4
NVH troubleshooting (ST)ST-6
NVH troubleshooting (SU)SU-3, 17

O

O2H1B1 - Wiring diagramEC-169
O2H1B2 - Wiring diagramEC-170
O2H2B1 - Wiring diagramEC-177
O2H2B2 - Wiring diagramEC-178
O2S1B1 - Wiring diagramEC-233, 243, 256
O2S1B2 - Wiring diagramEC-234, 244, 257
O2S2B1 - Wiring diagramEC-264, 274, 549, 560
O2S2B2 - Wiring diagramEC-265, 275, 550, 561
Oil change (capacity)MA-12
Oil filter (Transfer)TF-117
Oil pan (engine)EM-16
Oil pressure (engine)LC-5
Oil pump (A/T)AT-295
Oil pump (engine)LC-6
Oil pump regulator valve (engine)LC-7
Oil seal replacement (engine)EM-39
Oil seal replacement (front final drive
4WD)PD-16
Oil seal replacement (front of final
drive)PD-41
On board diagnostic systemEC-71
ORVR (On-board Refueling Vapor
Recovery)EC-40
Out side mirrorBT-59
Overdrive control switchAT-261
OverheatEC-576
Overrun clutchAT-318
Overrun clutch solenoid valveAT-189

P

P/ANT - Wiring diagramEL-210

ALPHABETICAL INDEX

Park/Neutral position switch.....EC-663
 Park/neutral position switch (A/T).....AT-104, 261
 Parking brake controlBR-28
 Parking lampEL-72
 PCV (positive crankcase ventilation)EC-49
 Periodic maintenanceMA-7
 PGC/V - Wiring diagramEC-373, 599
 PHASE - Wiring diagramEC-335
 Pinion bearing preload diff.PD-26
 Pinion gear height diff.PD-26, 54
 Piston assembly.....EM-73
 Piston pin inspection.....EM-65
 Piston ring inspection.....EM-66
 Piston to bore clearance.....EM-68
 Planetary carrier (Transfer).....TF-133
 PNP/SW - Wiring diagramEC-666
 POS - Wiring diagram.....EC-328, 590
 POWER - Wiring diagram.....EL-11
 Power antenna.....EL-209
 Power door lock.....EL-399
 Power door mirror.....EL-219
 Power seat.....EL-222
 Power steering fluid level.....MA-27, ST-8
 Power steering gear.....ST-17
 Power steering hydraulic pressureST-10
 Power steering oil pressure switchEC-705
 Power steering oil pump.....ST-27
 Power steering system bleeding.....ST-9
 Power supply routingEL-10
 Power transistor & ignition coil.....EC-677
 Power window.....EL-377
 PRE/SE - Wiring diagramEC-386, 392
 Precations for Leak detection dyeHA-3
 Precautions (General)GI-5
 Pressure test (A/T).....AT-62
 Propeller shaft.....PD-3
 Propeller shaft greasing.....MA-24
 Propeller shaft inspectionMA-24
 Propeller shaft on vehicle servicePD-7
 Propeller shaft vibrationPD-7
 PST/SW - Wiring diagram.....EC-706

R

Rack retainer adjustment.....ST-8
 RadiatorLC-21, 23
 Radio - See Audio.....EL-200
 Rear air spoilerBT-36
 Rear axleAX-18
 Rear bumperBT-16
 Rear case (Transfer).....TF-122
 Rear combination lamp removal and
 installationBT-36
 Rear cover packing replacement diff.PD-17
 Rear doorBT-21
 Rear drum brakeBR-24
 Rear seatBT-45
 Rear seat belt.....RS-5
 Rear side windowBT-58
 Rear suspensionSU-17

Rear washer.....EL-178
 Rear window defogger.....EL-187
 Rear wiper.....EL-178
 REF - Wiring diagramEC-583
 Refregerant pressure sensorHA-111
 Refrigerant connection precautionHA-4
 Refrigerant discharging evacuating
 chargingHA-144
 Refrigerant general precaution.....HA-3
 Refrigerant linesHA-154
 Refrigerant pressure sensor.....EC-710
 Refrigeration cycle.....HA-15
 REMOTE - Wiring diagram.....EL-208
 Remote keyless entry system.....EL-423
 Removal and installation (A/T).....AT-275
 Removal and installation (Transfer)TF-118
 Reverse clutch.....AT-312
 Revolution sensor (A/T).....AT-116
 Ring gear diff. inspectionPD-24, 48
 Road wheel sizeGI-46
 Roof trimBT-33
 Room lamp - See Interior lampEL-103
 RP/SEN - Wiring diagram.....EC-711

S

SAE J1930 terminology listGI-54
 Screw jackGI-47
 Seal - See ExteriorBT-36
 SEAT - Wiring diagramEL-222
 Seat belt inspectionMA-30, RS-7
 Seat belt pre-tensioner.....RS-3
 Seat belt pre-tensioner disposalRS-22
 Seat belt, front.....RS-4
 Seat belt, rear.....RS-5
 Seat, frontBT-42
 Seat, rearBT-45
 Self-diagnosis (Transfer).....TF-27
 SHIFT - Wiring diagramAT-264
 Shift lock systemAT-263
 Shift schedule.....AT-354
 Shift solenoid valve A (A/T) ..AT-126, 138, 148, 171
 Shift solenoid valve B (A/T) ..AT-126, 132, 148, 175
 Shock absorber (rear)SU-20
 Side air bagRS-21
 Side bearing preload (front final drive
 4WD).....PD-25
 Side trim.....BT-29
 Side window - See Rear side windowBT-58
 Smart entrance control unitEL-485
 SMJ (super multiple junction)Foldout
 Spare tire sizeGI-46
 Spark plug replacement.....MA-20
 Specification valueEC-148
 Speedometer.....EL-129
 Spiral cable.....RS-16
 Spot lamp.....EL-103
 Spring (Wheelarch) heightSU-6
 SROOF - Wiring diagramEL-214

ALPHABETICAL INDEX

SRS - See Supplemental Restraint SystemRS-10
 SRS - Wiring diagramRS-35
 S/SIG - Wiring diagramEC-693
 Stabilizer bar (front).....SU-12
 Stabilizer bar (rear)SU-22
 Stall test (A/T)AT-59
 Standardized relayEL-8
 START - Wiring diagram.....SC-11
 Start signalEC-692
 StarterSC-18
 Starting system.....SC-10
 Steering gear, linkage and transfer gear inspectionMA-27
 Steering linkageST-17
 Steering switch.....EL-33
 Steering transfer gearST-15
 Steering wheel and column.....ST-11
 Steering wheel playST-7
 Steering wheel turning forceST-9
 Stop lampEL-82
 STOP/L - Wiring diagram.....EL-82
 Strut (front)SU-9
 Sub-oil pump (Transfer)TF-130
 Sun gear (Transfer).....TF-133
 Sunload sensorHA-136
 Sunroof.....BT-46
 Sunroof, electricEL-213
 Supplemental Restraint System.....RS-10
 Supplemental restraint system - Wiring diagramRS-35
 SuspensionMA-28
 S/VCSW - Wiring diagramEC-572
 Swirl control valve control solenoid valveEC-492, 515
 Swirl control valve control vacuum check switchEC-570
 SWL/V - Wiring diagramEC-496, 517
 Symbols and abbreviations.....GI-11
 Symptom matrix chartEC-130
 System readiness test (SRT) codeEC-73

T

2-4WD shift solenoid valveTF-110
 TachometerEL-129
 Tail lampEL-72
 TAIL/L - Wiring diagramEL-75
 TCM circuit diagramAT-13
 TCM inspection tableAT-93
 Theft warning system - See Vehicle security (Theft warning) systemEL-452
 ThermometerEL-144
 Thermostat.....LC-18
 Three way catalyst function (Bank 1)EC-338
 Three way catalyst function (Bank 2)EC-338
 Three way catalyst precautions.....GI-6
 Throttle bodyEM-12
 Throttle position sensor (TPS)EC-206, 217
 Throttle position sensor adjustmentEC-116

Throttle position switchEC-467, AT-184, 262
 Tie-rodST-21
 Tie-rod ball joints.....ST-21
 Tightening torque of standard bolts.....GI-52
 Timing chain.....EM-21
 Tire rotationMA-25
 Tire sizeGI-46
 TLID - Wiring diagramEL-220
 Tooth contact (front final drive 4WD)PD-30
 Tooth contact diff.PD-57
 Torque converter clutch solenoid valveAT-153, 161
 Torque converter installationAT-276
 Tow truck towingGI-49
 Towing point.....GI-51
 TP/SW - Wiring diagramEC-470
 TPS - Wiring diagram.....EC-211, 220
 Transfer control unit inspection table.....TF-55
 Transfer dropping resistorTF-111
 Transfer fluid replacement (All-mode 4WD model)MA-23
 Transfer fluid temperature sensorTF-110
 Transfer motorTF-117
 Transfer motor relay.....TF-112
 Transfer serial numberGI-45
 Tread-FR&RR (Dimensions).....GI-45
 TrimBT-29
 TRNSCV - Wiring diagramEL-495
 Trouble diagnosesGI-35
 Turbine revolution sensor.....AT-202
 TURN - Wiring diagramEL-91
 Turn signal lampEL-89
 Two trip detection logicEC-71
 Two-pole liftGI-49

U

Under bodyBT-63

V

Vacuum cut valveEC-34
 Vacuum cut valve bypass valve.....EC-34, 644, 650
 Vacuum hose (brake system).....BR-19
 Vacuum hose drawing (Engine control)EC-28
 Valve clearanceEM-54
 Valve guide.....EM-46
 Valve seat.....EM-47
 Valve spring.....EM-49
 Vanity mirror lampEL-103
 Vehicle identification number.....GI-44
 Vehicle recovery (freeing a stuck vehicle).....GI-51
 Vehicle security (theft warning) systemEL-452
 Vehicle speed sensor (VSS)EC-438
 VEHSEC - Wiring Diagram.....EL-460
 VENT/V - Wiring diagramEC-379, 610, 619
 VIASEC-669

ALPHABETICAL INDEX

VIAS/V - Wiring diagramEC-671
Viscosity number (SAE)MA-13
VSS - Wiring diagramEC-440

W

Wait detection switch.....TF-111
WARN - Wiring diagramEL-149
Warning chimeEL-159
Warning lampsEL-148
Washer, front.....EL-173
Washer, rear.....EL-178
Water pumpLC-13
Water temperature gaugeEL-129
Weatherstrip - See ExteriorBT-36
Wheel balanceMA-25
Wheel bearing (front).....AX-4
Wheel bearing (rear)AX-19
Wheel hub (front).....AX-6
Wheel sensors (ABS).....BR-54, 78

Wheel sizeGI-46
Wheelarch heightSU-6
Wheelbase (Dimensions)GI-45 GI
Wide open & closed throttle position
switch.....EC-206, 217
Width (Dimensions)GI-45 MA
WINDOW - Wiring diagramEL-381
Window, doorBT-19
Window, rear sideBT-58 EM
Window, side - See Rear side window.....BT-58
Windshield.....BT-56 LC
WIP/R - Wiring diagramEL-180
WIPER - Wiring diagramEL-175
Wiper, front.....EL-173 EC
Wiper, rearEL-178
Wiring Diagram (Cell code) list.....EL-591
Wiring diagram (Transfer)TF-18 FE
Wiring diagrams.....GI-12
Wrist pin - See Piston pin inspection.....EM-65 AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

NOTES