



Flywheel and Ring Gear

REMOVAL & INSTALLATION

NOTE: The clutch cover and pressure plate are balanced as an assembly; if replacement of either part becomes necessary, replace both parts as an assembly.

1. Remove the transmission as described in Section 7 of this manual.
2. Remove the clutch assembly, if equipped.
3. Remove the flywheel or flexplate.

To install:

4. Position the flywheel or flexplate and secure using new retaining bolts.
5. Torque the bolts in a crisscross pattern to specification.
6. If applicable, install the clutch assembly.
7. Install the transmission.

