



DRIVELINE


Front Driveshaft And U-Joints

REMOVAL & INSTALLATION

4wd Models

1. Raise and support the vehicle on jackstands.
2. Matchmark the flanges and unbolt the front driveshaft at the front differential.
3. Matchmark the flanges and unbolt the front driveshaft at the transfer case.

Fig. 1: Exploded view of the front driveshaft

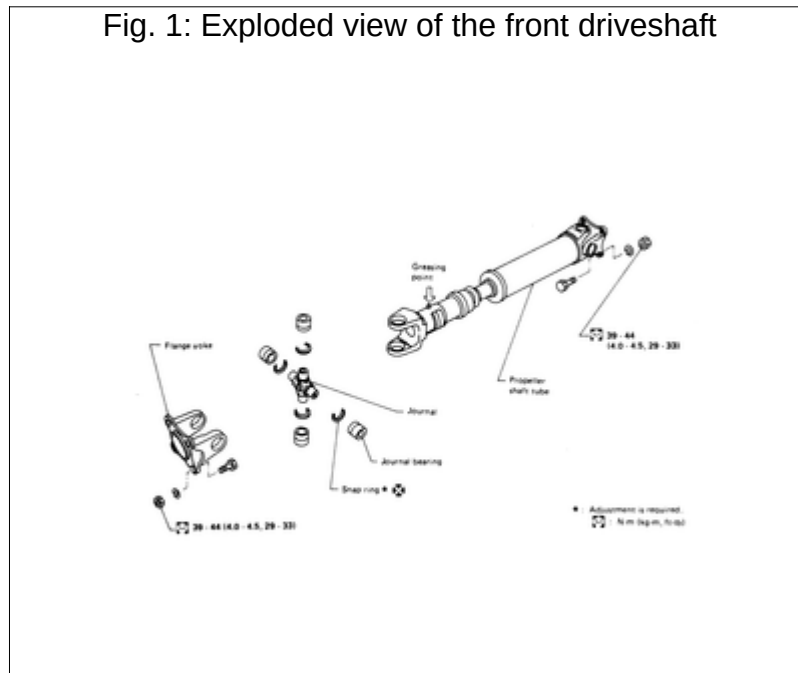

4. Carefully remove the driveshaft for inspection or replacement.
5. Align the matchmarks at the transfer case and install the driveshaft. Tighten the flange bolts to 29–33 ft. lbs. (39–44 Nm).
6. Align the matchmarks at the front differential and install the driveshaft. Tighten the flange bolts to 29–33 ft. lbs. (39–44 Nm).
7. Lower the vehicle and test for proper operation

