



Shift Lever

REMOVAL & INSTALLATION

All models utilize a floor-mounted shift lever.

1. Unscrew the shifter knob by turning it counterclockwise and then unclip the shifter dust boot where it connects to the console.
2. Slide the boot over the lever. Remove the lower boot retainer clip and slide the lower boot up the lever.
3. Using circlip pliers, remove the retaining circlip and remove the shift lever.
4. When installing the shift lever, use a new circlip and lower dust boot.

Fig. 1: Remove the shifter boot retaining ring screws



Fig. 2: After removing the screws, lift the retainer ring up



Fig. 3: The boot must be lifted for access to the shifter circlip



Fig. 4: Remove the circlip to remove the shift lever with a pair of snapping pliers



Fig. 5: Remove the shift lever from the transmission assembly

