



REMOVAL & INSTALLATION

1. Disconnect the negative battery cable.
2. Remove the throttle sensor mounting screws, then remove the sensor from the engine.
3. If the throttle sensor is replaced or removed, it will be necessary to install it in the correct position and adjust it, for proper operation. Refer to the adjustment procedure later in this section.

