

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram..... EC-252
 ABS (anti-lock brake system) BR-30
 ABS - Wiring diagram BR-42
 A/C air flow..... HA-19
 A/C component layout..... HA-18
 A/C compressor clutch removal and
 installation..... HA-108
 A/C compressor description..... HA-12
 A/C compressor mounting HA-107
 A/C compressor precaution HA-6
 A/C compressor special service tool HA-6
 A/C control linkage adjustment (auto
 A/C)..... HA-89
 A/C control linkage adjustment (manual
 A/C)..... HA-52
 A/C control operation (auto A/C)..... HA-56
 A/C control operation (manual A/C) HA-20
 A/C diagnostic work flow (auto A/C) HA-57
 A/C diagnostic work flow (manual A/C) HA-21
 A/C harness layout (auto A/C) HA-65
 A/C harness layout (manual A/C) HA-36
 A/C HFC134a (R134a) system
 precaution HA-2
 A/C HFC134a (R134a) system service
 procedure..... HA-100
 A/C HFC134a (R134a) system service
 tools HA-7
 A/C HFC134a system service
 equipment precaution..... HA-9
 A/C lubricant (R134a) HA-102
 A/C operational check (auto A/C) HA-58
 A/C operational check (manual A/C) HA-22
 A/C performance chart..... HA-32
 A/C performance test diagnoses HA-30
 A/C relay (auto A/C)..... HA-88
 A/C relay (manual A/C)..... HA-51
 A/C service data specification..... HA-112
 A/C switch (auto A/C)..... HA-87
 A/C switch (manual A/C)..... HA-50
 A/C symptom chart (auto A/C) HA-60
 A/C symptom chart (manual A/C) HA-24
 A/C system description (auto A/C)..... HA-90
 A/C trouble diagnoses (auto A/C) HA-57
 A/C trouble diagnoses (manual A/C) HA-21
 A/C, A - Wiring diagram (auto A/C)..... HA-68
 A/C, M - Wiring diagram HA-40
 Accelerator control system FE-3
 Accelerator wire adjustment..... FE-3
 Air bag RS-5
 Air bag disposal RS-13
 Air bag precautions GI-2
 Air bleeding (hydraulic clutch) CL-5
 Air bleeding for brake system BR-5
 Air cleaner filter replacement..... MA-13
 Air conditioner cut control EC-18
 Air flow meter - See Mass air flow
 sensor EC-99

Air mix door control linkage adjustment
 (auto A/C) HA-89
 Air mix. door motor HA-96
 Air spoiler, rear BT-20
 Alternator EL-37
 Ambient sensor HA-92
 Angular tightening application EM-2
 Antenna - See Power antenna EL-151
 Anti-lock brake system - See ABS..... BR-30
 Anti-lock brake system - Wiring
 diagram..... BR-42
 AP/SEN - Wiring diagram EC-105
 ASCD (automatic speed control device) EL-162
 ASCD - Wiring diagram EL-166
 AT control unit AT-51
 A/T diagnosis communication line EC-318
 AT fluid temperature sensor AT-63
 AT removal and installation..... AT-135
 AT self-diagnoses..... AT-22
 AT shift lock system AT-125
 A/T shift lock system - Wiring diagram AT-126
 A/T - Wiring diagram AT-8
 AT/C - Wiring diagram..... EC-261
 ATDIAG - Wiring diagram EC-318
 AUDIO - Wiring diagram..... EL-140
 Audio EL-138
 Audio and A/C control removal and
 installation - See Instrument panel BT-11
 Auto air conditioner - Wiring diagram
 (auto A/C) HA-68
 Automatic amplifier..... HA-94
 Automatic speed control system - See
 ASCD EL-162
 Automatic transmission fluid
 replacement..... MA-18
 Automatic transmission number GI-36
 Auxiliary air control (AAC) valve EC-252
 Axle housing (rear)..... RA-8

B

Back door..... BT-7
 Back door opener - See Back door..... BT-7
 Back door trim BT-19
 Back-up lamp..... EL-59
 Back-up lamp switch (MT) MT-4
 BACK/L - Wiring diagram EL-59
 Ball joint front axle FA-26
 Battery..... EL-22
 Baulk ring (MT) MT-12
 Blower motor (auto A/C) HA-87
 Blower motor (manual A/C)..... HA-50
 Blower resistor (manual A/C) HA-50
 Body alignment BT-37
 Boost pressure control..... EC-203
 BPT valve EC-218
 Brake booster..... BR-17
 Brake control valve (Proportioning
 valve) BR-8
 Brake fluid change BR-4

ALPHABETICAL INDEX

Brake fluid level MA-21
 Brake fluid level and line check BR-4
 Brake hydraulic line..... BR-6
 Brake inspection MA-21
 Brake lines and cables inspection..... MA-21
 Brake lining temporary checking MA-22
 Brake master cylinder BR-14
 Brake pedal BR-12
 Bumper, front BT-5
 Bumper, rear BT-7
 BUZZER - Wiring diagram..... EL-105
 BYPS/V - Wiring diagram EC-299

C

Camshaft inspection EM-24
 CANI/V - Wiring diagram EC-230
 Canister-See EVAP canister EC-20
 Center bearing assembly (propeller shaft) PD-10
 Center bearing disassembly (propeller shaft)..... PD-9
 CHARGE - Wiring diagram..... EL-34
 Charging system..... EL-33
 Chassis and body maintenance MA-17
 Cigarette lighter EL-127
 Circuit breaker EL-18
 CKPS - Wiring diagram EC-198, 285
 Clutch cover..... CL-12
 Clutch damper CL-8
 Clutch disc CL-11
 Clutch fluid level MA-17
 Clutch master cylinder..... CL-6
 Clutch operating cylinder..... CL-7
 Clutch pedal..... CL-3
 Clutch release bearing CL-9
 Clutch withdrawal lever CL-9
 CMPS - Wiring diagram EC-203
 Coil spring (front) FA-24
 Coil spring (rear) RA-12
 Collision diagnosis RS-36
 Combination lamp, front, removal and installation BT-5
 Combination meter EL-84
 Combination meter removal and installation - See Instrument panel BT-11
 Combination switch..... EL-38
 Compression pressure..... EM-8
 Compressor clutch removal and installation..... HA-108
 Compressor description HA-12
 Compressor mounting..... HA-107
 Compressor precaution..... HA-6
 Compressor special service tool..... HA-6
 Connecting rod EM-39
 Connecting rod bearing clearance EM-43
 Connecting rod bushing clearance..... EM-44
 Console box - See Instrument panel..... BT-11
 CONSULT for ABS BR-49
 CONSULT for ECCS EC-56

CONSULT general information..... GI-33
 Control lever (MT) MT-14
 Control lever transfer TF-9
 Control valve (AT) AT-157
 Converter housing installation..... AT-136
 Coolant mixture ratio MA-9
 Coolant replacement..... MA-11
 Cooling circuit (engine)..... LC-8
 Counter gear (MT) MT-12
 Counter gear transfer..... TF-11
 Coupling sleeve (MT) MT-12
 Crank angle sensor built into distributor - See Camshaft position sensor..... EC-203
 Crankcase emission control system - See positive crankcase ventilation EC-24
 Crankshaft..... EM-42
 Crankshaft position sensor (OBD) EC-198
 Cruise control - See ASCD..... EL-162
 Cylinder block EM-37
 Cylinder block boring EM-41
 Cylinder head..... EM-20
 Cylinder head bolt tightening..... EM-31

D

Daytime light system EL-44
 Daytime running light - See Daytime light system EL-44
 DEF - Wiring diagram..... EL-132
 Detonation sensor - See Knock sensor..... EC-195
 Diagnosis sensor unit..... RS-8
 Diagnostic trouble code (DTC) inspection priority chart EC-76
 Differential carrier assembly (H233B)..... PD-51
 Differential carrier assembly (R200A)..... PD-29
 Differential carrier disassembly (H233B) PD-36
 Differential gear oil replacement..... MA-20
 Dimensions..... GI-37
 Distributor EC-17
 Distributor ignition (DI) system..... EC-17
 D/LOCK - Wiring diagram..... EL-193
 Dome light - See Interior lamp EL-78
 Door mirror..... BT-36
 Door trim BT-17
 Door, front BT-9
 Door, rear BT-10
 Drive belt inspection MA-10
 Drive pinion diff. inspection (H233B) PD-40
 Drive pinion diff. inspection (R200A) PD-21
 Drive pinion height (H233B)..... PD-47
 Drive pinion height (R200A)..... PD-23
 Drive plate runout EM-44
 Drive shaft (front)..... FA-17
 Dropping resistor (AT) AT-90
 DTRL - Wiring diagram..... EL-47
 Dual pressure switch (auto A/C) HA-88
 Dual pressure switch (manual A/C) HA-51

ALPHABETICAL INDEX

E

ECCS basic inspection	EC-74
ECCS circuit diagram	EC-11
ECCS component parts location.....	EC-9
ECCS fail-safe system	EC-77
ECCS on board diagnostic system	EC-36
ECCS symptom matrix chart	EC-78
ECCS system diagram and chart	EC-12
ECM input/output signal.....	EC-85
ECTS - Wiring diagram.....	EC-116, 127
EGR control (EGRC) - BPT valve.....	EC-217
EGR control (EGRC) - solenoid valve	EC-290
EGR control valve	EC-215
EGR temperature sensor.....	EC-295
EGR/TS - Wiring diagram	EC-295
EGRC/V - Wiring diagram.....	EC-290
EGRC1 - Wiring diagram	EC-209
Electric sun roof.....	EL-157
Electrical diagnoses	GI-19
Electrical unit	Foldout
Electrical units location	EL-245
Electronic ignition system	EC-17
Engine compartment.....	BT-37
Engine control module (ECM).....	EC-264
Engine coolant temperature sensor (ECTS)	EC-116
Engine oil filter replacement	MA-14
Engine oil precautions.....	GI-4
Engine oil replacement	MA-14
Engine outer component parts	EM-6
Engine removal.....	EM-34
Engine room - See Engine compartment	BT-37
Engine serial number	GI-36
EVAP canister	EC-20
EVAP canister purge control valve	EC-230
EVAP canister purge volume control valve	EC-20
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-20
Exhaust gas recirculation (EGR) valve.....	EC-209
Exhaust system	FE-7
Exhaust system inspection	MA-17
Exterior.....	BT-20
Exterior lamp.....	EL-53

F

Fan control amp.	HA-98
Fan switch (auto A/C)	HA-87
Fan switch (manual A/C).....	HA-50
Fast idle cam (FIC) inspection and adjustment	EC-27
F/FOG - Wiring diagram	EL-62
FICD - Wiring diagram	EC-337
Final drive disassembly (H233B)	PD-36
Final drive pre-inspection (H233B)	PD-36

Final drive removal and installation	PD-14
Floor trim.....	BT-15
Flow charts.....	GI-30
Fluid temperature sensor (AT)	AT-63
Fluids	MA-8
Flywheel (clutch).....	CL-12
Flywheel runout	EM-44
FO2H-L - Wiring diagram.....	EC-156
FO2H-R - Wiring diagram	EC-138
Fog lamp, front	EL-61
Fog lamp, front, removal and installation	BT-5
Fork rod (MT)	MT-14
Forward clutch.....	AT-176
F/PUMP - Wiring diagram	EC-328
FRO2LH - Wiring diagram	EC-151
FRO2RH - Wiring diagram.....	EC-133
Front axle	FA-11
Front bumper	BT-5
Front combination lamp removal and installation	BT-5
Front disc brake	BR-20
Front door	BT-9
Front drive shaft transfer.....	TF-11
Front final drive disassembly (4WD) (R200A).....	PD-16
Front final drive pre-inspection (4WD) (R200A).....	PD-16
Front final drive removal and installation (4WD)	PD-14
Front fog lamp	EL-61
Front fog lamp removal and installation	BT-5
Front oxygen sensor (O2S) monitor	EC-48
Front passenger air bag.....	RS-5
Front seat.....	BT-26
Front seat belt	RS-3
Front suspension	FA-22
Front washer	EL-111
Front wiper	EL-111
Fuel cut control (at no load & high engine speed).....	EC-19
Fuel filler lid	BT-7
Fuel filter replacement	MA-13
Fuel gauge	EL-84
Fuel line inspection.....	MA-12
Fuel precautions.....	GI-5
Fuel pressure check.....	EC-25
Fuel pressure release	EC-25
Fuel pump	EC-328
Fuel system	FE-4
Fuel tank vacuum relief valve	EC-21
FUELLH - Wiring diagram	EC-178, 183
FUELRH - Wiring diagram.....	EC-168, 173
Fuse	EL-18
Fuse block	Foldout
Fusible link.....	EL-18

G

Garage jack and safety stand	GI-39
------------------------------------	-------

ALPHABETICAL INDEX

Gauges	EL-83
Gears (MT)	MT-12
Generator	EL-37
Generic scan tool (GST)	EC-68
Grease	MA-8
Ground distribution	EL-19

H

H/LAMP - Wiring diagram	EL-42
Harness connector	EL-3
Harness layout	EL-248
Hazard warning lamp	EL-64
Headlamp	EL-41
Heated seat	BT-28, EL-161
Height (Dimensions)	GI-37
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure	HA-100
HFC134a (R134a) system service tools	HA-7
HFC134a system service equipment precaution	HA-9
High clutch	AT-174
Hood	BT-5
HORN - Wiring diagram	EL-128
Horn	EL-127
HSEAT - Wiring diagram	EL-161
Hydraulic lash adjuster inspection	EM-29

I

IACV-AAC valve	EC-252
IACV-FICD solenoid valve	EC-337
IATS - Wiring diagram	EC-111
Identification plate	GI-36
Idle air control valve (IACV)	EC-252
IGN/SG - Wiring diagram	EC-279
Ignition wire inspection	EC-194
ILL - Wiring diagram	EL-74
Illumination	EL-72
In vehicle sensor	HA-91
Inhibitor switch	AT-59
INJECT - Wiring diagram	EC-321
Injector	EC-324
Injector removal and installation	EC-26
Instrument panel	BT-11
INT/L - Wiring diagram	EL-80
Intake air temperature sensor	EC-111
Intake door control linkage adjustment (auto A/C)	HA-89
Intake door control linkage adjustment (manual A/C)	HA-52
Intake door motor (manual A/C)	HA-53
Intake door motor	HA-97
Integrated homelink transmitter	EL-243
Interior	BT-15
Interior lamp	EL-72

J

Jacking points	GI-38, 39
Journal bearing assembly (propeller shaft)	PD-11
Journal bearing disassembly (propeller shaft)	PD-9
Junction box (J/B)	Foldout

K

Keyless entry system - See Multi-remote control system	EL-199
Knock sensor (KS)	EC-195
Knuckle spindle	FA-15
KS - Wiring diagram	EC-195

L

Length (Dimensions)	GI-37
License lamp	EL-53
Lifting points	GI-40
Limited slip diff. adjustment (H233B)	PD-43
Limited slip diff. assembly (H233B)	PD-45
Limited slip diff. disassembly (H233B)	PD-42
Limited slip diff. inspection (H233B)	PD-42
Line pressure solenoid valve	AT-79, 87, 90
Line pressure test (AT)	AT-123
Liquid gasket application	EM-2
Location of electrical units	EL-245
Low and reverse brake	AT-180
LSV (Load sensing valve)	BR-9
Lubricant (R134a) A/C	HA-102
Lubricants	MA-8
Lubrication circuit (engine)	LC-4
Lubrication-locks, hinges and hood latches	MA-24
Luggage room lamp	EL-78

M

MAFS - Wiring diagram	EC-99
Magnet clutch	HA-108
MAIN - Wiring diagram	EC-94
Main drive gear (MT)	MT-12
Main gear transfer	TF-11
Mainshaft (MT)	MT-12
Mainshaft transfer	TF-11
Maintenance (engine)	MA-10
Maintenance	MA-1
Malfunction indicator lamp (MIL)	EC-48
Manual air conditioner - Wiring diagram	HA-40
Manual transmission number	GI-36
Manual transmission oil replacement	MA-17
Mass air flow sensor (MAFS)	EC-99

ALPHABETICAL INDEX

Master cylinder (brake) BR-14
 Master cylinder (clutch) CL-6
 METER - Wiring diagram EL-86
 Meter EL-83
 MIL & Data link connectors circuit EC-341
 MIL/DL - Wiring diagram EC-341
 MIRROR - Wiring diagram EL-158
 Mirror defogger EL-131
 Mirror, door BT-36
 Mirror, out side BT-36
 Misfire EC-191
 Mode door control linkage
 adjustment (auto A/C) HA-89
 Mode door control linkage
 adjustment (manual A/C) HA-52
 Model variation GI-34
 Molding - See Exterior BT-20
 MT overhaul MT-11
 MT removal and installation MT-7
 MULTI - Wiring diagram EL-202
 Multi-remote control system EL-199
 Multiport fuel injection (MFI) system EC-15
 Multiport fuel injection precautions GI-4

N

Neutral position switch (MT) MT-4

O

Oil change (capacity) MA-8
 Oil pan (engine) EM-9
 Oil pressure (engine) LC-4
 Oil pump (AT) AT-153
 Oil pump (engine) LC-5
 Oil pump regulator valve (engine) LC-6
 Oil seal replacement (engine) EM-18
 Oil seal replacement (front final drive
 4WD) PD-12
 Oil seal replacement (front of final
 drive) PD-12
 Operating cylinder (clutch) CL-7
 Out side mirror BT-36
 Overdrive control switch AT-59
 Overrun clutch AT-176
 Overrun clutch solenoid valve AT-79, 87, 100
 Oversize piston EM-41

P

P/ANT - Wiring diagram EL-152
 Park/Neutral position switch EC-266
 Parking brake control BR-28
 Parking lamp EL-53
 PCV (positive crankcase ventilation) EC-24
 PGC/V - Wiring diagram EC-304
 Pilot bushing replacement EM-47

Pinion bearing preload diff. (R200A) PD-23
 Pinion gear height diff. (H233B) PD-47
 Pinion gear height diff. (R200A) PD-23
 Piston assembly EM-45
 Piston pin inspection EM-38
 Piston ring inspection EM-39
 Piston to bore clearance EM-40
 PNP/SW - Wiring diagram EC-266
 POWER - Wiring diagram EL-7
 Power antenna EL-151
 Power door lock EL-190
 Power door mirror EL-158
 Power seat EL-159
 Power steering fluid level MA-23, ST-7
 Power steering gear ST-23
 Power steering hydraulic pressure ST-9
 Power steering oil pressure switch EC-333
 Power steering oil pump ST-33
 Power steering system bleeding ST-8
 Power supply routing EL-6
 Power transistor & ignition coil EC-279
 Power window EL-182
 PRE/SE - Wiring diagram EC-243
 Precautions (General) GI-2
 Pressure plate - See Clutch cover CL-12
 Pressure test (AT) AT-123
 Propeller shaft PD-6
 Propeller shaft greasing MA-19
 Propeller shaft inspection MA-19
 Propeller shaft on vehicle service PD-7
 Propeller shaft vibration PD-7
 PST/SW - Wiring diagram EC-333

R

R02H-L - Wiring diagram EC-164
 R02H-R - Wiring diagram EC-146
 Rack retainer adjustment ST-7
 Radiator LC-11
 Radio - See Audio EL-138
 Rear air spoiler BT-20
 Rear axle (drum brake type) RA-6
 Rear bumper BT-7
 Rear combination lamp removal and
 installation BT-20
 Rear cover packing replacement diff. PD-13
 Rear door BT-10
 Rear drum brake BR-24
 Rear seat BT-29
 Rear seat belt RS-4
 Rear side window BT-35
 Rear suspension RA-10
 Rear washer EL-119
 Rear window defogger EL-131
 Rear wiper EL-119
 Refrigerant connection precaution HA-3
 Refrigerant general precaution HA-2
 Refrigerant lines HA-104
 Refrigeration cycle HA-11
 Release bearing (clutch) CL-9

ALPHABETICAL INDEX

Reverse clutch..... AT-170
 Reverse gear (MT)..... MT-12
 Reverse idler shaft (MT)..... MT-12
 Reverse lamp switch (MT) - See
 Back-up lamp switch (MT)..... MT-4
 Revolution sensor (AT)..... AT-65
 Ring gear diff. inspection (H233B)..... PD-40
 Ring gear diff. inspection (R200A)..... PD-21
 Road wheel size..... GI-37
 Roof trim..... BT-18
 Room lamp - See Interior lamp..... EL-78
 Rotor disc (front)..... FA-12
 RR02LH - Wiring diagram..... EC-160
 RR02RH - Wiring diagram..... EC-142

S

SAE J1930 terminology list..... GI-44
 Screw jack..... GI-38
 Seal - See Exterior..... BT-20
 SEAT - Wiring diagram..... EL-159
 Seat belt inspection..... MA-24
 Seat belt, front..... RS-3
 Seat belt, rear..... RS-4
 Seat, front..... BT-26
 Seat, rear..... BT-29
 Self-diagnostic results..... EC-48
 SHIFT - Wiring diagram..... AT-126
 Shift control (MT)..... MT-14
 Shift control (TF)..... TF-12, 23
 Shift fork (MT)..... MT-14
 Shift lock system..... AT-125
 Shift schedule..... AT-45
 Shift solenoid
 valve (AT)..... AT-69, 72, 74, 79, 87, 92, 95
 Shock absorber (rear)..... RA-12
 Side bearing preload (R200A)..... PD-22
 Side trim..... BT-15
 Smart entrance control unit..... EL-239
 SMJ (super multiple junction)..... Foldout
 Spare tire size..... GI-37
 Spark plug replacement..... MA-15
 Speedometer..... EL-84
 Spiral cable..... RS-9
 Spot lamp..... EL-78
 Spring (Wheelarch) height..... FA-6
 SROOF - Wiring diagram..... EL-157
 SRS - See Supplemental Restraint
 System..... RS-5
 SRS - Wiring diagram..... RS-20
 SRS Trouble diagnoses..... RS-17
 S/SIG - Wiring diagram..... EC-325
 Stabilizer bar (front)..... FA-25
 Stabilizer bar (rear)..... RA-13
 Stall test (AT)..... AT-120
 Standardized relay..... EL-4
 START - Wiring diagram..... EL-28
 Starter..... EL-32
 Starting system..... EL-26

Steering gear, linkage and transfer
 gear inspection..... MA-23
 Steering linkage..... ST-23 GI
 Steering switch..... EL-40
 Steering transfer gear..... ST-14
 Steering wheel and column..... ST-10 MA
 Steering wheel play..... ST-6
 Steering wheel turning force..... ST-8
 Stop lamp..... EL-57 EM
 STOP/L - Wiring diagram..... EL-57
 Striking rod (MT)..... MT-14
 Strut (front)..... FA-24 LC
 Sun roof, electric..... EL-157
 Sunload sensor..... HA-93
 Sunroof..... BT-30 EC
 Supplemental restraint system - Wiring
 diagram..... RS-20
 Supplemental Restraint System..... RS-5 EE
 SW/V - Wiring diagram..... EC-273
 Symbols and abbreviations..... GI-7 CL
 Synchronizer (MT)..... MT-12

T

2-pole lift..... GI-40 AT
 Tachometer..... EL-84
 Tail lamp..... EL-53
 TAIL/L - Wiring diagram..... EL-54 TF
 Temperature control cable and linkage
 adjustment (manual A/C)..... HA-52
 TFTS - Wiring diagram..... EC-188 PD
 THEFT - Wiring diagram..... EL-220
 Theft warning system..... EL-214
 Thermostat..... LC-10 FA
 Three way catalyst precautions..... GI-4
 Throttle position sensor (TPS)..... EC-121
 Throttle position sensor adjustment..... EC-74 RA
 Throttle position switch..... AT-60
 Throwout bearing - See Clutch release
 bearing..... CL-9 BR
 Tie-rod..... ST-27
 Tie-rod ball joints..... ST-27
 Tightening torque of standard bolts..... GI-43 ST
 Timing belt..... EM-12
 Tire rotation..... MA-21
 Tire size..... GI-37 RS
 Tooth contact (R200A)..... PD-28
 Tooth contact diff. (H233B)..... PD-50 BT
 Torque converter clutch solenoid
 valve..... AT-79, 82, 87
 Torque converter installation..... AT-136
 Tow truck towing..... GI-41 HA
 Towing point..... GI-42
 TP/SW - Wiring diagram..... EC-257
 TPS - Wiring diagram..... EC-121 EL
 Transfer case..... TF-10
 Transfer gear oil..... MA-8
 Transfer oil replacement..... MA-19
 Transfer overhaul..... TF-10
 Transfer removal and installation..... TF-8

ALPHABETICAL INDEX

Transfer serial number GI-36
Transmission case (MT) MT-11
TRANSMT - Wiring diagram EL-243
Transverse link (front) FA-26
Tread-FR&RR (Dimensions) GI-37
Trim BT-15
TURN - Wiring diagram EL-67
Turn signal lamp EL-64

U

Under body BT-39

V

Vacuum cut valve EC-303
Vacuum hose (brake system) BR-19
Vacuum hose drawing (ECCS) EC-13
Valve clearance EM-49
Valve guide EM-26
Valve seat EM-27
Valve spring EM-28
Vehicle identification number GI-35
Vehicle speed sensor (VSS) EC-248
VENT/V - Wiring diagram EC-238
Viscosity number (SAE) MA-9
VSS - Wiring diagram EC-248

W

WARN - Wiring diagram EL-96
Warning buzzer EL-104

Warning lamps EL-95
Washer, front EL-111
Washer, rear EL-119
Water cock control rod
 adjustment (auto A/C) HA-89
Water cock control rod
 adjustment (manual A/C) HA-52
Water pump LC-9
Water temperature gauge EL-84
Weatherstrip - See Exterior BT-20
Wheel alignment (front) FA-8
Wheel balance MA-21
Wheel bearing (front axle) FA-6
Wheel bearing (rear) RA-5
Wheel hub (front) FA-12
Wheel sensors (ABS) BR-34
Wheel size GI-37
Wheelarch height FA-6
Wheelbase (Dimensions) GI-37
Wide open & closed throttle position
 switch EC-121
Width (Dimensions) GI-37
WINDOW - Wiring diagram EL-185
Window, rear side BT-35
Windshield BT-34
Windshield washer - See Front washer EL-111
Windshield wiper - See Front wiper EL-111
WIP/R - Wiring diagram EL-122
WIPER - Wiring diagram EL-113
Wiper and washer EL-111
Wiper, front EL-111
Wiper, rear EL-119
Wiring diagrams GI-8
Withdrawal lever (clutch) CL-9
Wrist pin - See Piston pin inspection EM-38