

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram..... EC-326
 ABS - Wiring diagram BR-37
 ABS sensor rotor..... AX-6, 19
 Absolute pressure sensor EC-123
 A/C air flow..... HA-22, 116
 A/C component layout..... HA-18, 114
 A/C compressor clutch removal and
 installation..... HA-89, 160
 A/C compressor description..... HA-11, 107
 A/C compressor precaution HA-5, 101
 A/C compressor special service tool HA-8, 104
 A/C control linkage adjustment (auto
 A/C) HA-41, 75
 A/C control linkage adjustment (manual
 A/C) HA-132, 147, 149
 A/C control operation (auto A/C)..... HA-20
 A/C control operation (manual A/C) HA-115
 A/C diagnostic work flow (auto A/C) HA-31
 A/C diagnostic work flow (manual A/C) HA-125
 A/C harness layout (auto A/C) HA-23
 A/C harness layout (manual A/C)..... HA-118
 A/C HFC134a (R134a) system
 precaution..... HA-2, 98
 A/C HFC134a (R134a) system service
 procedure HA-85, 156
 A/C HFC134a (R134a) system service
 tools..... HA-9, 105
 A/C HFC134a system service equip-
 ment precaution..... HA-5, 101
 A/C lubricant (R134a) HA-87, 158
 A/C operational check..... HA-32, 126
 A/C performance chart..... HA-60, 141
 A/C performance test diagnoses HA-58, 139
 A/C relay HA-56, 154
 A/C service data specification..... HA-169
 A/C switch HA-56, 154
 A/C trouble diagnoses (auto A/C) HA-23
 A/C trouble diagnoses (manual A/C)..... HA-118
 A/C, A - Wiring diagram HA-26
 A/C, M - Wiring diagram HA-122
 Accelerator control system FE-3
 Accelerator wire adjustment FE-3
 Air bag RS-8
 Air bag disposal RS-16
 Air bag precautions GI-2
 Air bleeding (hydraulic clutch) CL-7
 Air bleeding for brake system BR-6
 Air cleaner filter replacement..... MA-17
 Air conditioner cut control EC-23
 Air flow meter - See Mass air flow
 sensor EC-115
 Air mix door control linkage adjustment..... HA-75
 Air mix. door motor HA-73
 Air spoiler, rear BT-20
 Alternator..... SC-14
 Ambient sensor HA-77
 Angular tightening application EM-2

Antenna - See Power antenna EL-131
 Anti-lock brake system - Wiring
 diagram..... BR-37
 AP/SEN - Wiring diagram EC-126
 ASCD (automatic speed control device) EL-140
 ASCD - Wiring diagram EL-145
 A/T - Wiring diagram - AT - FTS AT-93
 A/T - Wiring diagram - AT - INH/SW AT-88
 A/T - Wiring diagram - AT - MAIN..... AT-84
 A/T - Wiring diagram - AT - VSS A/T AT-98
 A/T control EC-334
 A/T diagnosis communication line EC-422
 A/T fluid temperature sensor..... AT-95
 A/T shift lock system AT-218
 A/T shift lock system - Wiring diagram AT-219
 A/T Wiring diagram - AT - ENG SS AT-103
 A/T Wiring diagram AT - 1ST AT-108
 A/T Wiring diagram AT - 2ND..... AT-114
 A/T Wiring diagram AT - 3RD AT-120
 A/T Wiring diagram AT - 4TH..... AT-127
 A/T Wiring diagram AT - BA/FTS AT-175
 A/T Wiring diagram AT - LPSV AT-147
 A/T Wiring diagram AT - NONDTC AT-182
 A/T Wiring diagram AT - OVRCSV AT-170
 A/T Wiring diagram AT - SSV/A AT-153
 A/T Wiring diagram AT - SSV/B AT-158
 A/T Wiring diagram AT - TCCSIG AT-140
 A/T Wiring diagram AT - TCV AT-134
 A/T Wiring diagram AT - TPS..... AT-164
 A/T Wiring diagram AT - VSSMTR..... AT-180
 AT/C - Wiring diagram..... EC-335
 ATDIAG - Wiring diagram EC-423
 Audio EL-121
 AUDIO - Wiring diagram..... EL-122
 Audio and A/C control removal and
 installation - See Instrument panel BT-11
 Auto air conditioner - Wiring diagram HA-26
 Automatic amplifier..... HA-35
 Automatic speed control system - See
 ASCD EL-140
 Automatic transmission fluid
 replacement..... MA-22
 Automatic transmission number GI-38
 Auxiliary air control (AAC) valve EC-323
 Axle housing (rear) AX-19

B

Back door..... BT-7
 Back door opener - See Back door..... BT-7
 Back door trim BT-19
 Back-up lamp EL-38
 Back-up lamp switch (M/T) MT-6
 BACK/L - Wiring diagram EL-38
 Ball joint (front)..... SU-14
 Battery SC-3
 Baulk ring (M/T) MT-13
 Block heater..... EM-43
 Blower motor..... HA-49, 134
 Blower resistor HA-134

ALPHABETICAL INDEX

Body alignment BT-42
 BPT valve EC-287
 Brake booster BR-18
 Brake control valve (Proportioning valve) BR-9
 Brake fluid change BR-5
 Brake fluid level MA-26
 Brake fluid level and line check BR-5
 Brake hydraulic line BR-7
 Brake inspection MA-26
 Brake lines and cables inspection MA-26
 Brake lining wear temporary checking MA-27
 Brake master cylinder BR-15
 Brake pedal BR-13
 Bulb specifications EL-246
 Bumper, front BT-5
 Bumper, rear BT-7
 BYPS/V - Wiring diagram EC-412, 418

C

Camshaft inspection EM-28
 Camshaft position sensor (CMPS) EC-269
 Canister-See EVAP canister EC-24
 Center bearing assembly (propeller shaft) PD-9
 Center bearing disassembly (propeller shaft) PD-7
 Center case (Transfer) TF-10
 CHARGE - Wiring diagram SC-12
 Charging system SC-11
 Chassis and body maintenance MA-21
 CHIME - Wiring diagram EL-87
 CIGAR - Wiring diagram EL-111
 Cigarette lighter EL-111
 Circuit breaker EL-13
 CKPS - Wiring diagram EC-266, 359
 Closed loop control (Left bank) EC-348
 Closed loop control (Right bank) EC-348
 Closed throttle position switch EC-329
 Clutch cover CL-13
 Clutch damper CL-10
 Clutch disc CL-13
 Clutch fluid level MA-21
 Clutch master cylinder CL-8
 Clutch operating cylinder CL-9
 Clutch pedal CL-5
 Clutch release bearing CL-11
 Clutch withdrawal lever CL-11
 CMPS - Wiring diagram EC-272
 Coil spring (front) SU-9
 Coil spring (rear) SU-19
 Collision diagnosis RS-43
 Combination lamp, front, removal and installation BT-5
 Combination lamp, rear, removal and installation BT-20
 Combination meter EL-59
 Combination meter removal and installation - See Instrument panel BT-11

Combination switch EL-18
 COMPAS - Wiring diagram EL-73
 Compass EL-72
 Compression pressure EM-12
 Compressor clutch removal and installation HA-89, 160
 Compressor description HA-11, 107
 Compressor precaution HA-5, 101
 Compressor special service tool HA-8, 104
 Connecting rod EM-45
 Connecting rod bearing clearance EM-50
 Connecting rod bushing clearance EM-50
 Connector inspection GI-17
 Console box - See Instrument panel BT-11
 CONSULT for ABS BR-43
 CONSULT for ECCS EC-66
 CONSULT general information GI-34
 Control lever (Transfer) TF-9
 Control valve (A/T) AT-250
 Converter housing installation AT-229
 Coolant mixture ratio MA-12
 Coolant replacement MA-14
 Cooling circuit (engine) LC-8
 Counter gear (M/T) MT-13
 Counter gear (Transfer) TF-11
 Coupling sleeve (M/T) MT-13
 Crank angle sensor built into distributor - See Camshaft position sensor EC-269
 Crankcase emission control system - See positive crankcase ventilation EC-30
 Crankshaft EM-48
 Crankshaft position sensor (OBD) EC-264
 Crankshaft position sensor (OBD) cog chipping EC-357
 Cruise control - See ASCD EL-140
 Cylinder block EM-42
 Cylinder block boring EM-47
 Cylinder head EM-24
 Cylinder head bolt tightening EM-36

D

Data link connector for Consult EC-66
 Daytime light system EL-26
 Daytime running light - See Daytime light system EL-26
 DEF - Wiring diagram EL-114
 Detonation sensor - See Knock sensor EC-260
 Diagnostic trouble code (DTC) for ECCS OBD system EC-2, 45
 Diagnostic trouble code (DTC) inspection priority chart EC-87
 Differential carrier assembly PD-28, 54
 Differential carrier disassembly PD-41
 Differential gear oil replacement MA-25
 Dimensions GI-39
 Distributor EC-22
 Distributor ignition (DI) system EC-22
 D/LOCK - Wiring diagram EL-173
 Dome light - See Interior lamp EL-53

ALPHABETICAL INDEX

Door glass..... BT-9
 Door lock..... BT-9
 Door mirror..... BT-41
 Door trim..... BT-17
 Door, front..... BT-9
 Door, rear..... BT-10
 Drive belt inspection..... MA-13
 Drive chain (Transfer)..... TF-11
 Drive pinion diff. inspection..... PD-21, 44
 Drive pinion height..... PD-23, 50
 Drive plate runout..... EM-51
 Drive shaft (front)..... AX-12
 Dropping resistor (A/T)..... AT-150
 DTC WORK SUPPORT..... EC-75
 DTRL - Wiring diagram..... EL-29
 Dual pressure switch..... HA-56, 154

E

ECCS basic inspection..... EC-85
 ECCS circuit diagram..... EC-16
 ECCS component parts location..... EC-14
 ECCS fail-safe system..... EC-88
 ECCS on board diagnostic system..... EC-44
 ECCS symptom matrix chart..... EC-89
 ECCS system diagram and chart..... EC-17
 ECM input/output signal..... EC-98
 ECTS - Wiring diagram..... EC-140, 155
 EGR control (EGRC) - BPT valve..... EC-284
 EGR control (EGRC) - solenoid valve..... EC-362
 EGR control valve..... EC-283, 378
 EGR temperature sensor..... EC-367
 EGR/TS - Wiring diagram..... EC-370
 EGRC/V - Wiring diagram..... EC-364
 EGRC1 - Wiring diagram..... EC-280, 376
 Electric sun roof..... EL-135
 Electrical diagnoses..... GI-20
 Electrical ignition system..... EC-22
 Electrical unit..... Foldout
 Electrical units location..... EL-227
 Engine compartment..... BT-43
 Engine control module (ECM)..... EC-337
 Engine coolant temperature sensor (ECTS)..... EC-138, 153
 Engine oil filter replacement..... MA-18
 Engine oil precautions..... GI-4
 Engine oil replacement..... MA-17
 Engine outer component parts..... EM-9
 Engine removal..... EM-39
 Engine room - See Engine compartment..... BT-43
 Engine serial number..... GI-38
 EVAP canister..... EC-25
 EVAP canister purge volume control solenoid valve..... EC-24, 299, 387
 EVAP canister vent control valve..... EC-305, 394, 404
 EVAP control system (small leak) diagnosis..... EC-292, 380
 EVAP control system pressure sensor..... EC-311

EVAP control system purge flow monitoring diagnosis..... EC-399
 EVAP vapor lines inspection..... MA-20
 Evaporative emission (EVAP) system..... EC-24
 Exhaust gas recirculation (EGR) valve..... EC-276, 373
 Exhaust system..... FE-8
 Exhaust system inspection..... MA-21
 Exterior..... BT-20

F

Fan control amp..... HA-45
 Fan switch..... HA-49, 134
 Fast idle cam (FIC) inspection and adjustment..... EC-34
 F/FOG - Wiring diagram..... EL-40
 FICD - Wiring diagram..... EC-450
 Final drive disassembly..... PD-40
 Final drive pre-inspection..... PD-40
 Final drive removal and installation..... PD-40
 Finisher, interior - See Trim..... BT-15
 Fluid temperature sensor (A/T)..... AT-95
 Fluids..... MA-11
 Flywheel (clutch)..... CL-14
 Flywheel runout..... EM-51
 FO2H-L - Wiring diagram..... EC-197
 FO2H-R - Wiring diagram..... EC-196
 Fog lamp, front..... EL-39
 Fog lamp, front, removal and installation..... BT-5
 Fork rod (M/T)..... MT-15
 Forward clutch..... AT-269
 F/PUMP - Wiring diagram..... EC-442
 Freeze frame data..... EC-46
 FRO2LH - Wiring diagram..... EC-162, 182, 190
 FRO2RH - Wiring diagram..... EC-161, 181, 189
 Front axle..... AX-2
 Front bumper..... BT-5
 Front case (Transfer)..... TF-10
 Front combination lamp removal and installation..... BT-5
 Front disc brake..... BR-21
 Front door..... BT-9
 Front drive shaft (Transfer)..... TF-11
 Front final drive disassembly (4WD)..... PD-16
 Front final drive pre-inspection (4WD)..... PD-16
 Front final drive removal and installation (4WD)..... PD-16
 Front fog lamp..... EL-39
 Front fog lamp removal and installation..... BT-5
 Front heated oxygen sensor (HO2S) (Left bank)..... EC-158, 166, 172, 178, 187
 Front heated oxygen sensor (HO2S) (Right bank)..... EC-158, 166, 172, 178, 187
 Front heated oxygen sensor heater (Left bank)..... EC-194
 Front heated oxygen sensor heater (Right bank)..... EC-194
 Front oxygen sensor (O2S) monitor..... EC-58

ALPHABETICAL INDEX

Front seat.....	BT-26
Front seat belt.....	RS-3
Front suspension.....	SU-2
Front washer.....	EL-93
Front wiper.....	EL-93
Fuel cut control (at no load & high engine speed).....	EC-24
Fuel filler lid.....	BT-7
Fuel filter replacement.....	MA-16
Fuel gauge.....	EL-59
Fuel injection system (Left bank).....	EC-237, 244
Fuel injection system (Right bank).....	EC-237, 244
Fuel line inspection.....	MA-16
Fuel precautions.....	GI-5
Fuel pressure check.....	EC-31
Fuel pressure regulator.....	EC-32
Fuel pressure release.....	EC-31
Fuel pump.....	EC-440
Fuel system.....	FE-4
Fuel tank vacuum relief valve.....	EC-25
FUELLH - Wiring diagram.....	EC-240, 247
FUELRH - Wiring diagram.....	EC-239, 246
Fuse.....	EL-13
Fuse block.....	Foldout
Fusible link.....	EL-13

G

Garage jack and safety stand.....	GI-41
Gauges.....	EL-59
Gear components (M/T).....	MT-13
Generator - See Alternator.....	SC-14
Generic scan tool (GST).....	EC-79
Glass.....	BT-9
Grease.....	MA-11
Ground distribution.....	EL-14

H

Harness connector.....	EL-3
Harness connector inspection.....	GI-17
Harness layout.....	EL-230
Hazard warning lamp.....	EL-42
Headlamp.....	EL-21
Headlining - See Roof trim.....	BT-18
Heated seat.....	BT-28, EL-139
Height (Dimensions).....	GI-39
HFC134a (R134a) system precaution.....	HA-2, 98
HFC134a (R134a) system service procedure.....	HA-85, 156
HFC134a (R134a) system service tools.....	HA-9, 105
HFC134a system service equipment precaution.....	HA-5, 101
High clutch.....	AT-267
H/LAMP - Wiring diagram.....	EL-22
Hood.....	BT-5
Horn.....	EL-110

HORN - Wiring diagram.....	EL-110	GI
How to erase DTC for ECCS OBD system.....	EC-55	MA
HSEAT - Wiring diagram.....	EL-139	EM
Hydraulic lash adjuster inspection.....	EM-33	LC

I

IACV-AAC valve.....	EC-323	EC
IACV-FICD solenoid valve.....	EC-450	FE
IATS - Wiring diagram.....	EC-135	CL
Identification plate.....	GI-38	MT
Idle air control valve (IACV).....	EC-323	AT
Idle mixture ratio.....	EC-35	TF
Idle speed.....	EC-35	PD
IGN/SG - Wiring diagram.....	EC-353	AX
Ignition timing.....	EC-35	SU
Ignition wire inspection.....	EC-259	BR
ILL - Wiring diagram.....	EL-49	ST
Illumination.....	EL-47	RS
In vehicle sensor.....	HA-79	BT
Inhibitor switch.....	AT-90, 216	HA
INJECT - Wiring diagram.....	EC-430	SC
Injector.....	EC-435	EL
Injector removal and installation.....	EC-33	IX
Instrument panel.....	BT-11	
INT/L - Wiring diagram.....	EL-55	
Intake air temperature sensor.....	EC-132	
Intake door control linkage adjustment.....	HA-42, 132	
Intake door motor.....	HA-38, 129	
Integrated homelink transmitter.....	EL-225	
Interior.....	BT-15	
Interior lamp.....	EL-53	

J

Jacking points.....	GI-40, 41	
Journal bearing assembly (propeller shaft).....	PD-9	
Journal bearing disassembly (propeller shaft).....	PD-8	
Junction box (J/B).....	Foldout	

K

Keyless entry system - See Multi-re-mote control system.....	EL-179	
Knock sensor (KS).....	EC-260	
Knuckle spindle.....	AX-10	
KS - Wiring diagram.....	EC-261	

L

Length (Dimensions).....	GI-39	
--------------------------	-------	--

ALPHABETICAL INDEX

License lamp..... EL-34
 Lifting points GI-42
 Limited slip diff. adjustment..... PD-47
 Limited slip diff. assembly PD-48
 Limited slip diff. disassembly PD-45
 Limited slip diff. inspection PD-46
 Line pressure solenoid valve..... AT-131, 144, 149
 Line pressure test (A/T) AT-57
 Liquid gasket application EM-2
 Location of electrical units EL-227
 Lock, door BT-9
 Low and reverse brake AT-273
 LSV (Load sensing valve) BR-10
 Lubricant (R134a) A/C HA-87, 158
 Lubricants..... MA-11
 Lubrication circuit (engine) LC-3
 Lubrication-locks, hinges and hood
 latches MA-28
 Luggage room lamp..... EL-53

M

MAFS - Wiring diagram..... EC-119
 Magnet clutch..... HA-89, 160
 MAIN - Wiring diagram EC-108
 Main drive gear (M/T) MT-13
 Main gear (Transfer) TF-11
 Mainshaft (M/T) MT-13
 Mainshaft (Transfer) TF-11
 Maintenance (engine) MA-13
 MAJOR OVERHALL..... AT-231
 Major overhaul (Transfer) TF-9
 Malfunction indicator lamp (MIL)..... EC-57
 Manual air conditioner - Wiring diagram..... HA-122
 Manual transmission number GI-38
 Manual transmission oil replacement MA-21
 MAP/BARO switch solenoid valve EC-339
 Mass air flow sensor (MAFS)..... EC-115
 Master cylinder (brake) BR-15
 Master cylinder (clutch) CL-8
 Meter EL-59
 METER - Wiring diagram EL-62
 MIL & Data link connectors circuit EC-455
 MIL/DL - Wiring diagram EC-455
 MIRROR - Wiring diagram EL-136
 Mirror defogger..... EL-112
 Mirror, door BT-41
 Mirror, out side..... BT-41
 Misfire EC-255
 Mode door control linkage
 adjustment..... HA-41, 149
 Model variation GI-36
 Molding - See Exterior..... BT-20
 M/T major overhaul MT-12
 M/T removal and installation MT-9
 MULTI - Wiring diagram..... EL-182
 Multi-remote control system EL-179
 Multiport fuel injection (MFI) system..... EC-20
 Multiport fuel injection precautions..... GI-4

N

Neutral position switch (M/T) MT-6
 NVH troubleshooting (AX) AX-3, 18
 NVH troubleshooting (BR) BR-4
 NVH troubleshooting (CL) CL-4
 NVH troubleshooting (M/T) MT-5
 NVH troubleshooting (PD) PD-3
 NVH troubleshooting (ST) ST-6
 NVH troubleshooting (SU) SU-3, 15

O

Oil change (capacity) MA-11
 Oil pan (engine) EM-13
 Oil pressure (engine) LC-3
 Oil pump (A/T) AT-246
 Oil pump (engine) LC-4
 Oil pump regulator valve (engine) LC-5
 Oil seal replacement (engine) EM-22
 Oil seal replacement (front final drive
 4WD)..... PD-13
 Oil seal replacement (front of final
 drive)..... PD-37
 Operating cylinder (clutch) CL-9
 Out side mirror BT-41
 Overdrive control switch..... AT-216
 Overrun clutch AT-269
 Overrun clutch solenoid valve AT-131, 144, 172
 Oversize piston EM-47

P

P/ANT - Wiring diagram..... EL-132
 Park/Neutral position switch..... EC-425
 Parking brake control BR-29
 Parking lamp..... EL-34
 PCV (positive crankcase ventilation) EC-30
 PGC/V - Wiring diagram EC-302, 390
 Pilot bushing replacement EM-53
 Pinion bearing preload diff. PD-23
 Pinion gear height diff. PD-23, 50
 Piston assembly..... EM-51
 Piston pin inspection..... EM-44
 Piston ring inspection EM-45
 Piston to bore clearance..... EM-46
 PNP/SW - Wiring diagram EC-427
 POWER - Wiring diagram EL-7
 Power antenna..... EL-131
 Power door lock..... EL-170
 Power door mirror..... EL-136
 Power seat..... EL-137
 Power steering fluid level..... MA-28, ST-8
 Power steering gear ST-24
 Power steering hydraulic pressure ST-10
 Power steering oil pressure switch EC-446
 Power steering oil pump..... ST-34

ALPHABETICAL INDEX

Power steering system bleeding ST-9
 Power supply routing EL-6
 Power transistor & ignition coil EC-350
 Power window EL-162
 PRE/SE - Wiring diagram EC-314
 Precautions (General) GI-2
 Pressure plate - See Clutch cover CL-13
 Pressure test (A/T) AT-57
 Propeller shaft PD-2
 Propeller shaft greasing MA-24
 Propeller shaft inspection MA-24
 Propeller shaft on vehicle service PD-6
 Propeller shaft vibration PD-6
 PST/SW - Wiring diagram EC-446

R

Rack retainer adjustment ST-8
 Radiator LC-12
 Radio - See Audio EL-121
 Rear air spoiler BT-20
 Rear axle AX-17
 Rear bumper BT-7
 Rear case (Transfer) TF-10
 Rear combination lamp removal and
 installation BT-20
 Rear cover packing replacement diff. PD-14
 Rear door BT-10
 Rear drum brake BR-25
 Rear heated oxygen sensor
 (HO2S) EC-200, 208, 216, 224
 Rear heated oxygen sensor (HO2S)
 heater EC-231
 Rear seat BT-29
 Rear seat belt RS-4
 Rear side window BT-40
 Rear suspension SU-15
 Rear washer EL-102
 Rear window defogger EL-112
 Rear wiper EL-102
 Refrigerant connection precaution HA-3, 99
 Refrigerant general precaution HA-2, 98
 Refrigerant lines HA-93, 164
 Refrigeration cycle HA-11, 107
 Release bearing (clutch) CL-11
 Removal and installation (A/T) AT-228
 Removal and installation (Transfer) TF-8
 Reverse clutch AT-263
 Reverse idler shaft (M/T) MT-13
 Reverse lamp switch (M/T) - See
 Back-up lamp switch (M/T) MT-6
 Reverse main gear (M/T) MT-13
 Revolution sensor (A/T) AT-100
 Ring gear diff. inspection PD-21, 44
 RO2H-L - Wiring diagram EC-234
 RO2H-R - Wiring diagram EC-233
 Road wheel size GI-39
 Roof trim BT-18
 Room lamp - See Interior lamp EL-53

RRO2LH - Wiring
 diagram EC-204, 212, 220, 227
 RRO2RH - Wiring
 diagram EC-203, 211, 219, 226

S

SAE J1930 terminology list GI-46
 Screw jack GI-40
 Seal - See Exterior BT-20
 SEAT - Wiring diagram EL-137
 Seat belt inspection MA-29, RS-5
 Seat belt, front RS-3
 Seat belt, rear RS-4
 Seat, front BT-26
 Seat, rear BT-29
 Self-diagnostic results EC-58
 SHIFT - Wiring diagram AT-219
 Shift control (Transfer) TF-12, 23
 Shift control components (M/T) MT-15
 Shift fork (M/T) MT-15
 Shift lever MT-15
 Shift lock system AT-218
 Shift schedule AT-307
 Shift solenoid
 valve A (A/T) AT-110, 121, 131, 144, 155
 Shift solenoid
 valve B (A/T) AT-110, 115, 131, 144, 160
 Shock absorber (rear) SU-19
 Side bearing preload (front final drive
 4WD) PD-22
 Side trim BT-15
 Side window - See Rear side window BT-40
 Smart entrance control unit EL-221
 SMJ (super multiple junction) Foldout
 Spare tire size GI-39
 Spark plug replacement MA-18
 Speedometer EL-59
 Spot lamp EL-53
 Spring (Wheelarch) height SU-6
 SROOF - Wiring diagram EL-135
 SRS - See Supplemental Restraint
 System RS-8
 SRS - Wiring diagram RS-25
 S/SIG - Wiring diagram EC-436
 Stabilizer bar (front) SU-12
 Stabilizer bar (rear) SU-21
 Stall test (A/T) AT-54
 Standardized relay EL-4
 START - Wiring diagram SC-8
 Starter SC-10
 Starting system SC-6
 Steering gear, linkage and transfer
 gear inspection MA-27
 Steering linkage ST-24
 Steering switch EL-20
 Steering transfer gear ST-15
 Steering wheel and column ST-11
 Steering wheel play ST-7
 Steering wheel turning force ST-9

ALPHABETICAL INDEX

Stop lamp.....	EL-36
STOP/L - Wiring diagram	EL-36
Striking rod (M/T)	MT-15
Strut (front)	SU-9
Sub-gear (M/T)	MT-13
Sun roof, electric.....	EL-135
Sunload sensor	HA-82
Sunroof	BT-30
Supplemental Restraint System.....	RS-8
Supplemental restraint system - Wiring diagram.....	RS-25
SW/V - Wiring diagram	EC-342
Symbols and abbreviations	GI-7
Synchronizer (M/T).....	MT-13
System readiness test (SRT) code.....	EC-46

T

Tachometer	EL-59
Tail lamp.....	EL-34
TAIL/L - Wiring diagram.....	EL-34
Tank fuel temperature sensor	EC-251
TCM circuit diagram	AT-11
TCM inspection table	AT-80
Temperature control cable and linkage adjustment	HA-147
TFTS - Wiring diagram	EC-253
THEFT - Wiring diagram.....	EL-202
Theft warning system	EL-196
Thermometer	EL-72
Thermostat.....	LC-10
Three way catalyst function (Left bank).....	EC-288
Three way catalyst function (Right bank).....	EC-288
Three way catalyst precautions	GI-4
Throttle position sensor (TPS)	EC-143
Throttle position sensor adjustment.....	EC-85
Throttle position switch.....	EC-329, AT-167, 217
Throwout bearing - See Clutch release bearing	CL-11
Tie-rod	ST-28
Tie-rod ball joints	ST-28
Tightening torque of standard bolts	GI-45
Timing belt	EM-16
Tire rotation.....	MA-25
Tire size	GI-39
Tooth contact (front final drive 4WD)	PD-27
Tooth contact diff.	PD-53
Torque converter installation	AT-229
Torque convertor clutch solenoid valve.....	AT-131, 136, 144
Tow truck towing.....	GI-42
Towing point	GI-44
TP/SW - Wiring diagram	EC-331
TPS - Wiring diagram	EC-149
Transfer case	TF-10
Transfer oil replacement.....	MA-23
Transfer serial number	GI-39
Transmission case (M/T).....	MT-12
TRANSMT - Wiring diagram.....	EL-225

Tread-FR&RR (Dimensions)	GI-39
Trim	BT-15
Trouble diagnoses	GI-30
TURN - Wiring diagram	EL-44
Turn signal lamp	EL-42
Two trip detection logic	EC-44
Two-pole lift	GI-42

U

Under body	BT-45
------------------	-------

V

Vacuum cut valve.....	EC-24, 421
Vacuum cut valve bypass valve ...	EC-24, 410, 415
Vacuum hose (brake system)	BR-20
Vacuum hose drawing (ECCS)	EC-18
Valve clearance.....	EM-55
Valve guide	EM-30
Valve seat	EM-31
Valve spring	EM-32
Vehicle identification number	GI-37
Vehicle recovery (freeing a stuck vehicle).....	GI-44
Vehicle speed sensor (VSS)	EC-319
VENT/V - Wiring diagram	EC-307, 396, 407
Viscosity number (SAE).....	MA-12
VSS - Wiring diagram	EC-321

W

WARN - Wiring diagram	EL-77
Warning chime	EL-85
Warning lamps	EL-76
Washer, front.....	EL-93
Washer, rear	EL-102
Water cock control rod adjustment	HA-75, 147
Water pump	LC-9
Water temperature gauge.....	EL-59
Weatherstrip - See Exterior	BT-20
Wheel balance	MA-25
Wheel bearing (front).....	AX-4
Wheel bearing (rear)	AX-18
Wheel hub (front).....	AX-6
Wheel sensors (ABS).....	BR-79
Wheel size	GI-39
Wheelarch height	SU-6
Wheelbase (Dimensions)	GI-39
Wide open & closed throttle position switch.....	EC-143
Width (Dimensions)	GI-39
WINDOW - Wiring diagram	EL-165
Window, door	BT-9
Window, rear side	BT-40
Window, side - See Rear side window.....	BT-40
Windshield	BT-38

ALPHABETICAL INDEX

WIP/R - Wiring diagram..... EL-105
WIPER - Wiring diagram EL-95
Wiper, front EL-93
Wiper, rear EL-102
Wiring Diagram (Cell code) list..... EL-247
Wiring diagrams GI-8
Withdrawal lever (clutch) CL-11
Wrist pin - See Piston pin inspection EM-44

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX